





User manual
for
a-PcLink software
v. 1.0

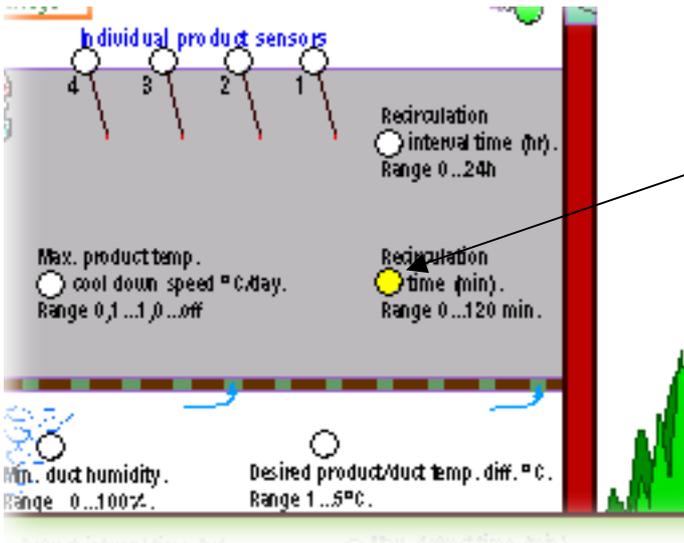

When activated (clicked by mouse) a setting will become yellow and its content will be shown on display

Double click will open a settings window to allow value changes

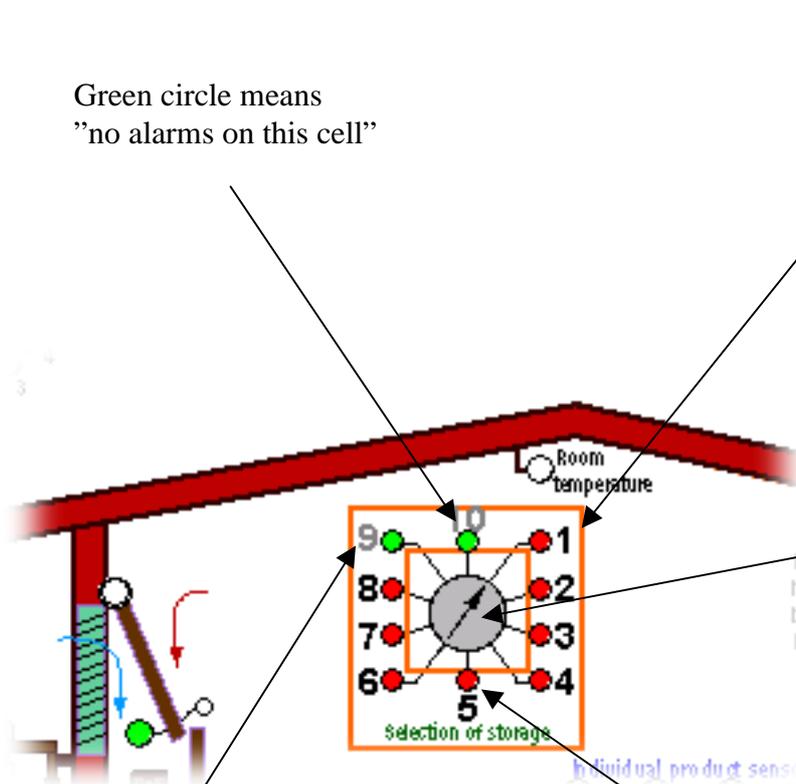


Cell numbers in **bold** have been set on.

Green circle means "no alarms on this cell"

The arrow points the storage cell which information is currently shown on panel

Red circle means "one or more alarms on this cell"

The cells shown in grey numbers are not in use.

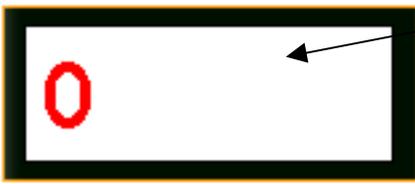

Value on display is the one shown by yellow circle

- Prod .temp .below ALARM
- Prod .temp .above WARNING
- Prod .temp .below WARNING
- System ALARM 1
- System ALARM 2
- System WARNING 1

Red circle means that this alarm is currently active

- Operation :
- Outside cooling
 - Mechanical cooling
 - Defrosting
 - Heating
 - Drying
 - Heat blanket removal
 - Operation prevented
 - Password active

If alarm or operation is not active, it is shown by white small circle

If operation is active its "circle" is green.

 **e-Codes**

 **a-Trend**

 **Tabular-form**



If e-Codes circle is red, there is active alarms and if e-Codes circle is green there is not active alarms. To see all active alarms in detail click e-Codes circle.

To see recorded measurements double click "download" and wait until timeglass symbol disappears and then click yellow square to see graphical presentation of the values.

To see recorded measurements formatted in tabular form click blue square.