



# USER MANUAL



## Preparation of the redisc easy machine

Put the machine on a stable surface.  
Make sure there's a good air circulation around the machine.  
Do not obstruct the ventilation fan at the bottom of the machine.  
Plug the power cord.  
Turn the lid clockwise to open.  
Put the lid in its place as in the photo.  
Vigorously shake the polish bottle.



## How to use the redisc easy machine

Unscrew the small knob.  
Put the disc on the turntable with the label facing down.  
Screw the knob tight.



Pour 500 ml of polish directly into the well.  
Close the lid by turning it anti-clockwise.  
Turn on the machine by pressing the power button on the left side. The red light on top is lit.



Set the timer on 5 minutes. The repair process starts.

After 5 minutes, the machine stops.  
Open the lid, take the disc out and wipe it with the microfiber cloth.  
The disc is ready for use. If scratches are still visible, repeat the process, maybe reducing the duration.

The minimum amount of polish compound is 350-400 ml. If exceeding, some polish will spill out of the machine. If insufficient, it won't cover the disc during the repair process.

After you have cleaned the disc with the Large Microfiber Cloth, use the Cleaning Kit: spray twice with the Cleaning Spray and then wipe the disc with the small blue cloth.



## WARNING!

If the machine is new or has not been used for a long time, the strong friction of the dry pads may block the engine. If it doesn't start when turning the timer, please wet the pads and the disc with some polish compound and press the pad heads on their shafts.

### **(Optional) use of the Shining Kit**

Using the Shining Kit (composed of the Shining Polish and the orange rubber cloth) is optional.

The disc is ready for use and has a perfect finish. In case you want it to have a "mirror" finish (maybe because the polish compound has already been used for many repairs), please follow this procedure: pour a drop of Shining Polish on the disc. With circular movements and a good pressure, wipe the disc with the orange rubber cloth for 10-20 seconds. Repeat if necessary.



### **How to use the Deep Scratches Lid (optional accessory)**

The optional lid for deep scratches lets you repair severely damaged discs fast by using more abrasive pads.

Put the Deep Scratches Lid on the machine. Set the timer to 5 minutes.

When the machine stops, check if the scratches have disappeared. If not, please repeat this phase.

When the scratches are no longer visible, put the normal lid and polish the disc with a 2-minute process.

Take out the disc and wipe it with the microfiber cloth.



## **Maintenance of the abrasive pads**

The abrasive pads have a very long life-span if used and cleaned correctly.

If you see dry remains of polish compound on the pads, just take them off the lid and wash them with hot water.

When they are too worn out, please change them with a new pair.

## **Maintenance of the optional lid pads**

The pads installed on the optional Deep Scratches Lid must be washed only with hot water and a small brush.



## **Maintenance of the machine**

Please follow this procedure:  
take out the big white ring from the well  
and remove the rubber cap at the bottom.

Drain the polish compound from the well  
using the external tube on the right-hand  
side.





Drain the polish compound from the well using the external tube on the right-hand side.

Wash the plastic ring with water and a small brush.


### **When to clean the machine**

If the machine is used at least once every two days, the cleaning can be done weekly. If you think you will not use it for three or more days, we suggest you follow the cleaning procedure.



---

The small plastic disc you find in the box is (such as Game Cube discs).

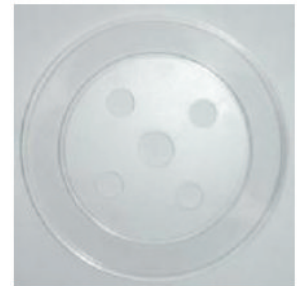

### **Warning:**

Always plug this appliance into an earthed socket using the power cord supplied by the manufacturer.

Do not handle the plug with wet hands.

If possible, do not plug the machine with other appliances.

Keep the power cord clean, do not pull it or bend it excessively.

Make sure there's enough air circulation around the machine.

Do not cover the air grids on the side and bottom of the machine.

Tampering with the machine by unauthorised personnel will void the warranty.

Keep out of reach of children.

Do not expose to direct sunlight, heat sources or excessive moist.

Disconnect the power plug if the machine gets hot for any reason.