

User Manual



AIR Pro BT

Firmware 142 IT

Rev. 53 a

CONGRATULATIONS

Thank you for choosing Digifly!

You have purchased a high technology instrument designed expressly for free flight. The multiple functions and flight data it provides, effectively make it an on board computer. Learning to use this instrument will make your flying easier in terms of performance and safety. It will enable you to improve your flying technique and make piloting decisions more quickly thanks to the comprehensive flight information that is provided. Another benefit is the ability to download and analyze your flight data afterwards.

Our designing effort foresees also to the future software developments, so the software at the heart of this instrument can be updated at any time via the Internet using the Digifly PC cable.

DIGIFLY INTERNATIONAL GUARANTEE

Dear Customer,

Thank you for purchasing this Digifly product which has been designed and manufactured to the highest quality standards. Digifly warrants this product to be free from defects in materials and workmanship for 3 years from the date of purchase.

The Digifly guarantee applies provided the product is handled properly for its intended use, in accordance with its operating instructions and upon presentation of the original invoice or cash receipt, indicating the date of purchase, the dealer's name, the model and the serial number of the instrument.

The customer is however, responsible for any transportation costs. The unit must be securely packaged for return.

The Digifly guarantee may not apply if:

- The documents have been altered in any way or made illegible.
- Repairs or product modifications and alterations have been executed by unauthorized person or service.
- Damage is caused by accidents including but not limited to lightning, water or fire, misuse or neglect, or every malfunction not related to manufacturing defects of your instruments.

If your Digifly product is not working correctly or is defective, please contact your Digifly dealer. In order to avoid unnecessary inconvenience.

Digifly Europe s.r.l.

Bologna

Italy

www.digifly.com

info@digifly.com



1 INDEX


1	INDEX.....	2
2	GETTING STARTED	3
2.1	GUIDE TO SOCKETS.....	6
2.2	BATTERY	6
2.2.1	RECHARGING THE INTERNAL LITHIUM BATTERY.....	6
2.2.2	INPUT FOR EXTERNAL POWER SUPPLY	6
2.3	KEYBOARD - NORMAL OR LONG KEY PRESS	6
2.4	TURNING ON & OFF	7
2.5	DISPLAY CONTRAST ADJUSTMENT.....	7
2.6	MENU	7
2.6.1	DISPLAY'S FIELDS EDITING	7
2.6.2	DISPLAY'S ALPHANUMERICAL FIELDS EDITING	8
2.7	MULTI LANGUAGE HELP	8
2.8	RESTORE FACTORY SETTINGS.....	8
2.9	RESET	8
3	QUICK REFERENCE GUIDE.....	9
3.1	SYMBOLS MENU	9
3.2	PLOTTER SCREEN	8
3.3	COMPASS SCREEN.....	11
4	DISPLAY	12
4.1	MAIN SCREENS	12
4.2	PLOTTER AND COMPASS SCREENS – INSTRUMENTS FIELDS	13
4.2.1	VARIOMETER.....	13
4.2.2	ANEMOMETER.....	13
4.2.3	GRAPHIC ALTIMETER.....	13
4.2.4	COMPASS SCREEN ESSENTIAL INSTRUMENTS	13
4.2.5	PLOTTER SCREEN ESSENTIAL INSTRUMENTS	13
4.2.6	NAVIGATION PLOTTER SCREEN	14
4.2.7	HSI NAVIGATION PLOTTER SCREEN	14
4.2.8	BEARING COMPASS.....	14
	COMPASS SCREEN MAIN FIELDS	14
4.2.9	COMPASS SCREEN NAVIGATION TO START LINE	14
5	BASIC FUNCTIONS.....	15
5.1	ALTIMETERS	15
5.1.1	ALTIMETERS SETTINGS	15
5.2	VARIOMETERS.....	15
5.2.1	SUPERFAST INTELLIVARIO	15
5.2.2	VARIO SENSIBILITY	15
5.2.3	VARIO REACTIVITY	16
5.2.4	ANALOGUE VARIO	16
5.2.5	INTEGRATED (AVERAGE) VARIO.....	16
5.2.6	ACOUSTIC VARIO	16
5.2.7	ACOUSTIC VARIO PRE-THERMAL ADVISE.....	17
5.2.8	VARIO SIMULATOR.....	17
5.3	AIR SPEED (ANEMOMENTER WITH OPTIONAL PITOT TUBE).....	17
5.4	ANEMOMETER SETTING (WITH OPTIONAL PITOT TUBE).....	17
5.5	TIME / CHRONOGRAPH.....	17
5.6	DISTANCES	18

5.7	AIR EFFICIENCY (GLIDE RATIO)	18
5.8	TRACKING & BEARING	18
5.9	BAROMETER	18
5.10	TIME / CHRONOGRAPH SETUP	18
5.11	PILOT'S NAME & GLIDER'S DATA	19
6	ADVANCED FUNCTIONS	15
6.1	TOTAL ENERGY COMPENSATION.....	19
6.2	POLAR (WITH OPTIONAL PITOT TUBE)	19
6.3	SPEED TO FLY (WITH OPTIONAL PITOT TUBE)	20
6.4	McCREADY (WITH OPTIONAL PITOT TUBE)	21
6.5	EQUIVALENT cCREADY (WITH OPTIONAL PITOT TUBE)	21
6.6	NETTO VARIO (WITH OPTIONAL PITOT TUBE).....	21
7	GPS FUNCTIONS.....	22
7.1	INTEGRATED 99 CHANNELS GPS RECEIVER	22
7.2	GPS STATUS INFORMATION.....	22
7.3	GPS INFORMATION DISPLAY	22
7.4	LATITUDE & LONGITUDE COORDINATES OPTIONS	22
7.5	GPS ALTITUDE	22
7.6	GPS GROUND SPEED.....	22
7.7	GPS DIRECTION (TRK).....	23
7.8	GROUND EFFICIENCY (GLIDE RATIO)	23
7.9	WIND SPEED AND DIRECTION INDICATION USING GPS	ERRORE. IL SEGNALIBRO NON È DEFINITO.
7.10	LAST THERMAL DIRECTION, DISTANCE, HEIGHT INFORMATION	23
8	WAYPOINT MANAGEMENT	23
8.1	COMPETITION WAYPOINT & USER WAYPOINT DATA BASE.....	23
8.1.1	<i>CREATING A NEW WAYPOINT MANUALLY</i>	<i>24</i>
8.1.2	<i>CREATING A NEW WAYPOINT USING THE CURRENT POSITION (MARK).....</i>	<i>24</i>
8.1.3	<i>EDIT WAYPOINT</i>	<i>24</i>
8.1.4	<i>DELETE WAYPOINT.....</i>	<i>24</i>
9	NAVIGATE TO A WAYPOINT (GOTO)	19
9.1	ACTIVATING NAVIGATION TO A WAYPOINT (GOTO).....	25
9.1.1	<i>NAVIGATION TO WAYPOINT HOME (GOTO HOME).....</i>	<i>25</i>
9.1.2	<i>NAVIGATION TO THE NEAREST LANDING ZONE (GOTO LANDING).....</i>	<i>25</i>
9.1.3	<i>NAVIGATION TO THE NEAREST WAYPOINT (GOTO NEAREST).....</i>	<i>25</i>
9.1.4	<i>NAVIGATION TO A GENERIC WAYPOINT (GOTO).....</i>	<i>25</i>
9.1.5	<i>DEACTIVATING NAVIGATION TO A WAYPOINT (GOTO)</i>	<i>26</i>
9.2	NAVIGATION'S FUNCTIONS TO A WAYPOINT (GOTO).....	26
9.2.1	<i>DIRECTION, DISTANCE, HEIGHT TO CURRENT WAYPOINT (GOTO).....</i>	<i>26</i>
9.2.2	<i>NEEDED GLIDE RATIO TO THE CURRENT WAYPOINT (GOTO).....</i>	<i>26</i>
9.2.3	<i>ARRIVAL HOUR, ARRIVAL TIME TO THE CURRENT WAYPOINT (GOTO).....</i>	<i>26</i>
9.2.4	<i>HSI GRAPHIC INDICATION TO THE CURRENT WAYPOINT (GOTO).....</i>	<i>26</i>
10	ROUTE MANAGEMENT	26
10.1	PREFIXED GENERAL ROUTES	26
10.1.1	<i>VISUALIZING WAYPOINT DATA OF A ROUTE.....</i>	<i>27</i>
10.1.2	<i>INSERT A WAYPOINT IN A ROUTE</i>	<i>27</i>
10.1.3	<i>SUBSTITUTE A WAYPOINT IN A ROUTE</i>	<i>27</i>
10.1.4	<i>MODIFY A WAYPOINT IN A ROUTE (PARAMETER CHANGE)</i>	<i>27</i>
10.1.5	<i>DELETE A WAYPOINT IN A ROUTE.....</i>	<i>29</i>
10.2	ACTIVATING A ROUTE	29
10.3	DE-ACTIVATING A ROUTE.....	29
10.4	DELETING A ROUTE	29
11	OPERATION CHECKLIST BEFORE A TASK.....	25

12	NAVIGATION ROUTE.....	ERRORE. IL SEGNALIBRO NON È DEFINITO.
12.1	DIRECTION, DISTANCE AND HEIGHT ON THE WAYPOINTS	30
12.2	NEEDED GLIDE RATIO TO CURRENT WAYPOINT / NEXT WAYPOINT / GOAL.....	30
12.3	OPTIMIZED NAVIGATION	31
12.4	NAVIGATION TO START PYLON WAYPOINT	ERRORE. IL SEGNALIBRO NON È DEFINITO.
12.5	NAVIGATION TO STANDARD WAYPOINT	ERRORE. IL SEGNALIBRO NON È DEFINITO.
12.6	NAVIGATION TO CONCENTRIC WAYPOINT	ERRORE. IL SEGNALIBRO NON È DEFINITO.
13	FLIGHT RECORDER.....	34
13.1	ACTIVATING / DE-ACTIVATING FLIGHT RECORDER	34
13.1.1	AUTOMATIC START RECORD MODE "AUT"	34
13.1.2	ALWAYS ACTIVE RECORD MODE "ALW"	34
13.1.3	RECORD MODE OFF "OFF"	34
13.2	RECORD RATE	34
13.3	LOG BOOK MANAGEMENT (LOG BOOK)	35
14	CONNECTIONS, INTERFACES & MEMORY CARD.....	35
14.1	USB CABLE CONNECTION	35
14.2	BLUETOOTH CONNECTION.....	36
14.2.1	DEVICES CONNECTION "PAIRING"	36
14.2.2	BLUETOOTH DATA TRANSFER ACTIVATION.....	37
14.3	ADDITIONAL MEMORY	37
15	SOFTWARE.....	38
15.1	SOFTWARE COMPATIBILITY	38
15.2	SOFTWARE DIGIFLY AIRTOOLS	38
15.3	SOFTWARE GPSDUMP PC & GPSDUMP MAC	38
15.4	FIRMWARE UPDATE (INSTRUMENT'S SOFTWARE)	39
15.5	FIRMWARE UPDATING PRODEDURE	39
15.6	TELEMETRY DATA OUTPUT	40
15.6.1	TELEMETRY DATA SELECTION	40
15.7	LK8000.....	42
15.8	XCSOAR.....	42
16	APPENDIX	43
16.1	STANDARD ACCESSORIES DIGIFLY AIR.....	43
16.2	OPTIONAL ACCESSORIES.....	43
16.3	TECHNICAL FEATURES	43
16.3.1	STANDARD FUNCTIONS.....	43
16.3.2	ADVANCED FUNCTIONS.....	43
16.3.3	GPS FUNCTIONS.....	43
16.3.4	GENERAL SPECIFICATIONS.....	44
16.4	MAIN SET UP MENU PARAMETERS	45
16.5	VARIOMETER SETUP PARAMETERS	45
16.6	ADV-SETUP PARAMETERS MENU (ADVANCED SETUP).....	46
16.7	RESTORE FACTORY SETTINGS (DEFAULT PARAMETERS)	46
16.8	RESET	46

2 GETTING STARTED

2.1 CONNECTIONS

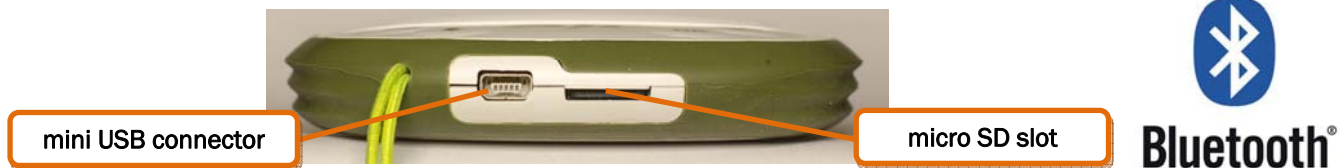

- The mini USB socket provides the battery charge and the link to a Personal Computer.
- Micro SD card slot.
- Bluetooth connection.

2.2 BATTERY

- The main power is supplied by an internal rechargeable high capacity lithium battery. This battery has no memory effect, so it can be partially recharged, without affecting the battery's time life. It also has a very low self-discharge rate (more than one year) and works very well at low temperatures. A fully charged battery life ranges over 30 hours.
- When the battery's icon starts to blink there are roughly 4 hours use remaining.

2.2.1 BATTERY RECHARGE

- To recharge the instrument insert the charger plug or other mini USB accessory and wait till the battery level indicator is totally filled.
- The required time for a full charge is about 8 hours.
- There are no problem if you leave the vario charging for more than 8 hours, as the vario automatically switches to a "maintain mode" to prevent the battery's overcharge.
- The Digifly AIR's lithium battery has no "memory effect", so it can be also partially charged.



2.2.2 EXTERNAL POWER SUPPLY

- The mini USB socket can be used to power the instrument and simultaneously charge the internal battery for unlimited time.
- With the instrument turned on, it is necessary an external stabilized 5VDC power supply (e.g. a solar panel) and a minimum of 150mA to properly power the instrument. The exceeding electric current will be used charge the internal lithium battery. Proper solar panels are suitable to power the instrument.




 



2.3 KEYBOARD - NORMAL OR LONG KEY PRESS

- The time length you press the keys on your Digifly instrument selects the available functions.
- **Normal press key** means to press the button for less than a second
- For a **long key press**, you must keep the button pressed down for at least 2 seconds
- When not specified, the key press has to be considered as a normal key press (less than a second).






2.4 TURNING ON & OFF

 - To **turn on** your Digifly instrument, press the  key at least for 4 seconds.
- To **turn off** your Digifly instrument, press the  key at least for 4 seconds.
- After switching off your Digifly instrument, you must wait at least 5 seconds before to be able to turn it on again. This prevents unwanted operation e.g. during the transit in your glider bag.
- After turning on your Digifly instrument, the first screen briefly shows the vario model, pilot name (if set), logger status, vario serial number, software version, date, time and battery voltage.

   2.5 DISPLAY CONTRAST ADJUSTMENT









- The LCD display contrast can be adjusted to suit ambient light conditions using the keys: 'arrow UP'  or 'arrow DOWN' , operating from the pages 'plotter' or 'compass'.
- To change the contrast of the display, press the key  to enter in the "MAIN SETUP" menu, select the menu (MAIN SETUP \ n. 1 CTRS), go to the edit mode pressing the key , set the preferred contrast using the keys: 'arrow UP'  or 'arrow DOWN' , then save the changes pressing the key .

 2.6 MENU








- To navigate the menus of your instrument press the  key ("MENU" function).
- To select the sub-menus navigate the list UP or DOWN using the   arrow keys then confirm your choice pressing the  key ("ENT" function).
- To exit and come back to the main screen press the  key ("ESC" function).

 MENU
Wpt Airfields
Wpt Nearest
Wpt Competitions
Wpt Users
Routes
Altimeters
Logbook
AirTools
Main Setup
Advanced Setup
Variometer Setup
Bluetooth pairing

2.6.1 DISPLAY'S FIELDS EDITING

     - To change parameters and settings, select the parameter you want to change navigating UP or DOWN using the   keys, press the  key ("EDIT" function) to enter in the edit mode.
- To change the value of the selected parameter use the   keys, every parameter's change is automatically saved ("AUTOSAVE" function), a longer press of the   keys activate the quick parameter's change ("AUTOREPEAT" function).
- To exit from the edit function press the  key ("ESC" function).


 
 

2.6.2 ALPHANUMERICAL FIELDS EDITING

- The alphanumeric fields editing is different from the standard one described in the above paragraph, because it is possible to modify every single character of the field.
- To modify the field press the  key (“EDIT” function) to activate the edit mode.
- Use the arrow keys   to change the character shown in reverse mode on the display, every parameter’s change is automatically saved (“AUTOSAVE” function), a longer press of the arrow keys activate the quick parameter’s change (“AUTOREPEAT” function),
- Pressing the  key, it is possible to shift to the character on the right to edit it, repeatedly pressing  key it is possible to scroll toward right all the field’s characters to come back to the first of the field. A longer press of the  key comes back toward left. To exit press the  key.



2.7 MULTI LANGUAGE HELP

- In the menus are visible some help messages, e.g.: help to set the parameters. For these messages it is possible to set the preferred language entering in the MAIN SETUP menu (**MAIN SETUP \ n. 2 LANG**) then select the language you prefer and confirm.
- **IMPORTANT:** after every firmware update, it is necessary to update also the help file containing the messages. The help file update can be done from your PC using the Digify AirTools, function: “upload HELP”.

2.8 RESTORE FACTORY SETTINGS












- To restore the factory settings (default values for all parameters), turn on the instrument pressing at the same time and holding down the keys  &  until the message “FACTORY SET?” appears. To confirm press the  key and the display will show the “SETUP RESET” message, to avoid the restore press the  key.

2.9 RESET


- If a system crash would occur with a consequent instrument’s block, to reset its functions press at the same time the keys:  and  holding them pressed for more than 4 seconds.

3 QUICK REFERENCE GUIDE


3.1 SYMBOLS MENU

	Battery level
	Bluetooth activated
	GPS connected
	Flight recorder on
	Volume level
	Direction toward the center of the current Waypoint
	Direction toward the current WP accordingly to the optimized route
	Direction to the current WP for optimized route, HIS representation
	Closest START line direction
	Last thermal direction
	Wind direction

3.2 PLOTTER SCREEN

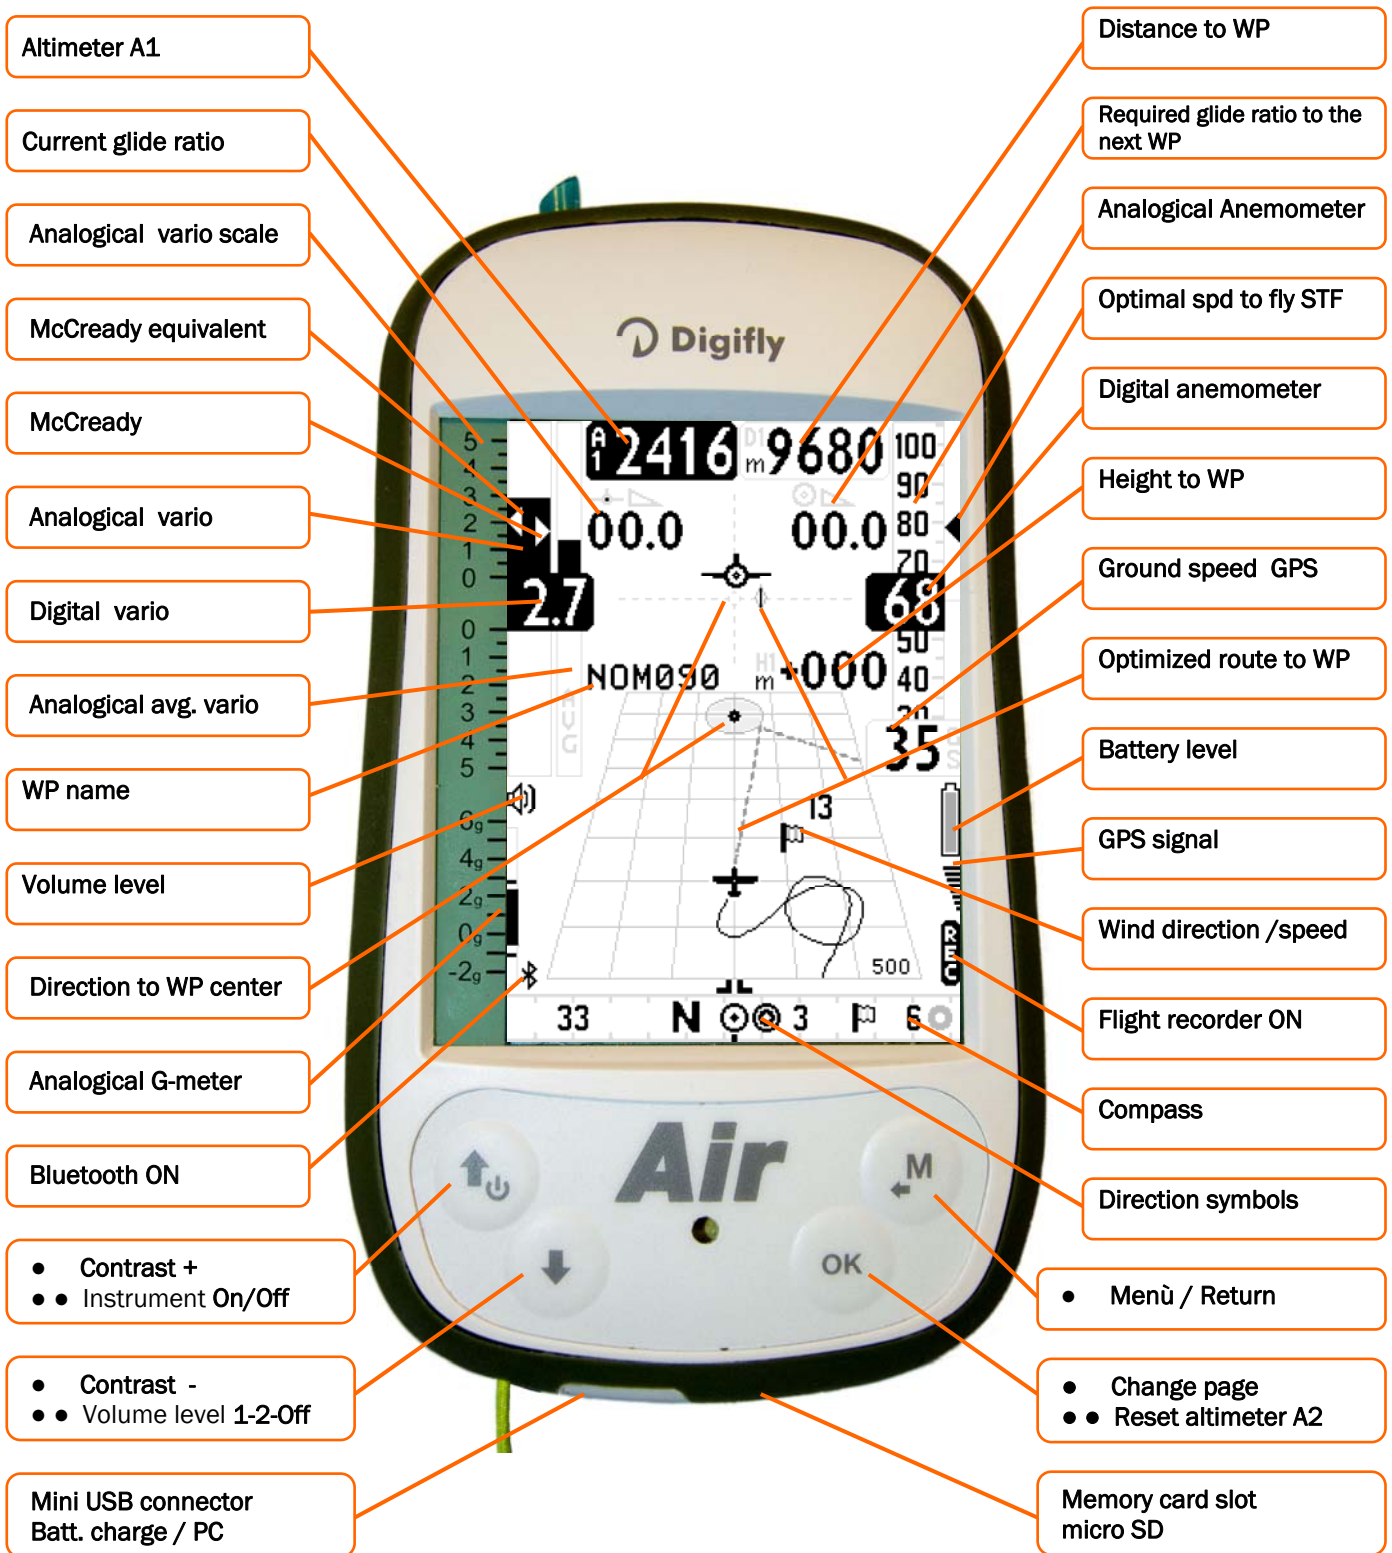


3.3 COMPASS SCREEN

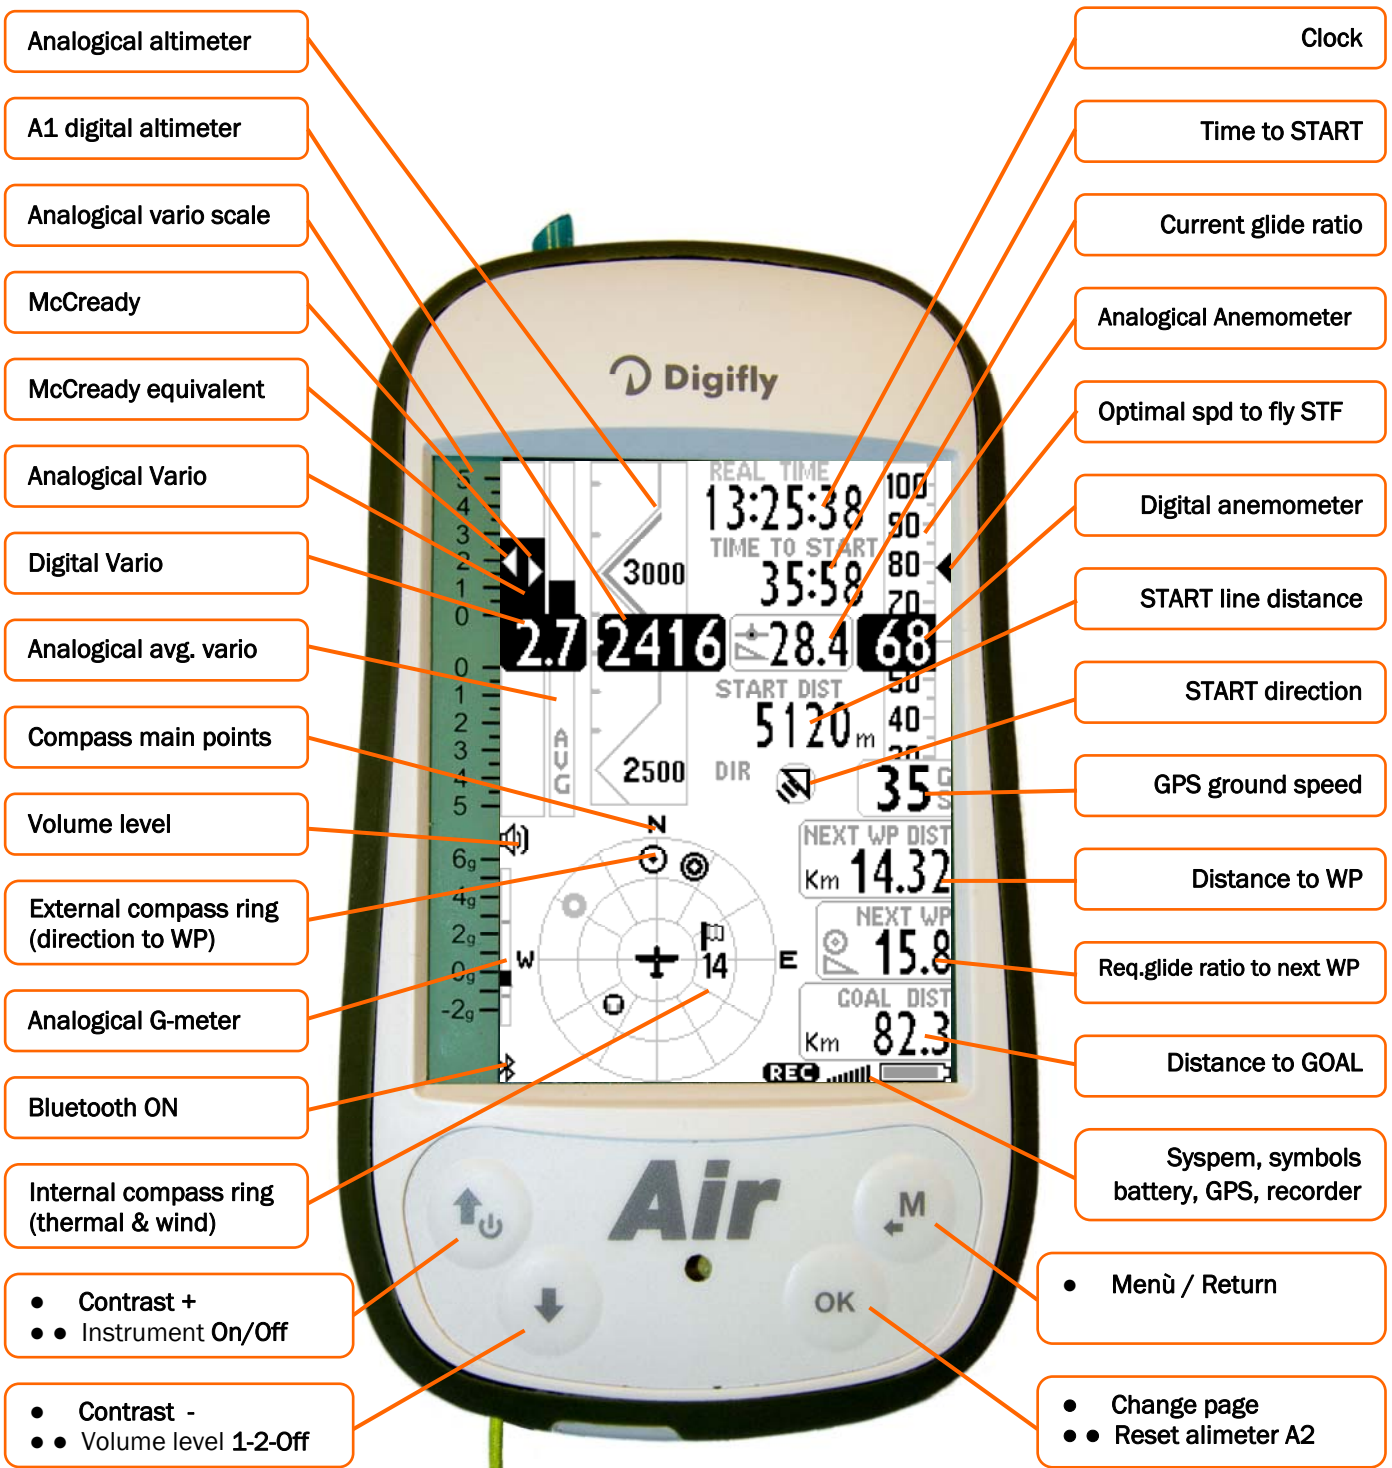


● = Normal key pressure ●● = Long key Pressure (2 seconds)

4 DISPLAY

 
4.1 MAIN SCREENS

- The Digifly Air features a lot of different main screens (page), to manually change the pages press the  key.

PLOTTER PAGE

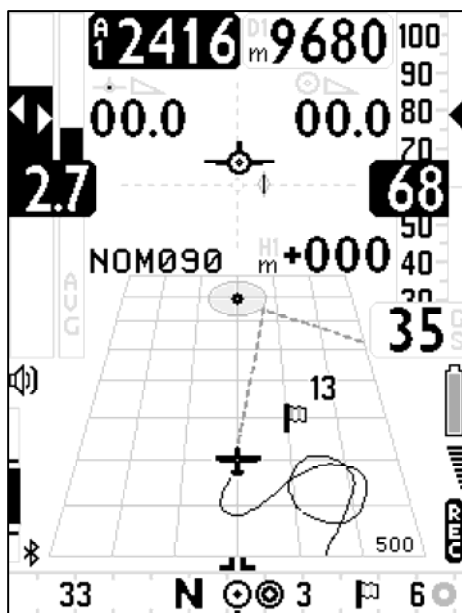

COMPASS PAGE

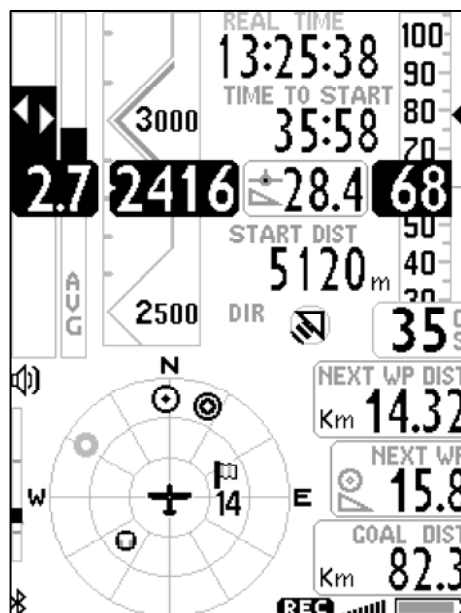

INFO GPS PAGE

```
LatLon ddmms.ss
05 43'46.5N
005 43'46.5E


141      Tracking
00       Ground Speed
245     Altitude GPS

03/11/13 16:12:03
```

4.2 PLOTTER AND COMPASS SCREENS – INSTRUMENTS FIELDS

4.2.1 VARIOMETER


- In the variometer's informations area can be seen:
 - Digital variometer;
 - Average vario / Netto vario;
 - Mc Ready value;
 - Mc Ready equivalent value

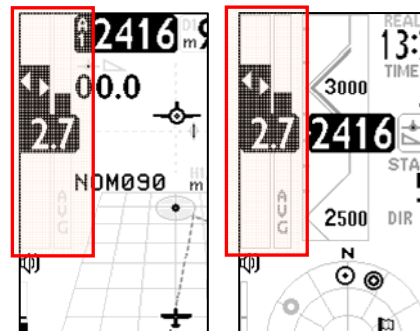

4.2.2 ANEMOMETER


- In the shown anemometer's informations area can be seen:
 - Analogical gauge - roll type- of Indicated Air Speed (IAS);
 - Indicated Air Speed (IAS) digital value;
 - Ground speed GS;
 - Optimal glide speed STF;

If the optional Pitot tube is not installed, it will be shown analogically and digitally the ground speed (GS) only.

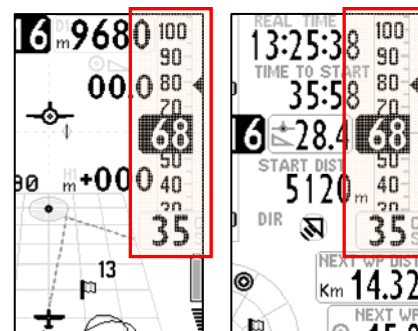


4.2.3 GRAPHIC ALTIMETER

- In the COMPASS page, the altimeter's digital information is integrated with a graphic sliding scale. This scale is intuitive to be understood and feature a numeric indication of the 500 and 1000 m altitude's gap in a graphic design that enables, at a glance, a visual distinction of the height. It features also a simple graduated scale for the hundreds meters.

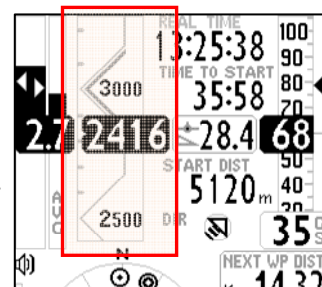


4.2.4 COMPASS SCREEN ESSENTIAL INSTRUMENTS

- In the COMPASS page the essential flight info are simply shown aligned in a row.
- Aligned with the digital variometer you can find the altimeter A1 value, the current glide ratio and the Indicated Air Speed (if the optional pitot tube is installed) or the GPS ground speed

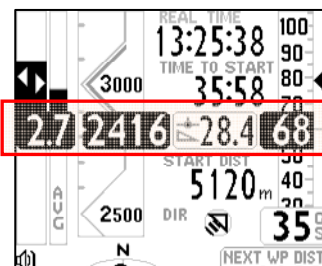


4.2.5 PLOTTER PAGE ESSENTIAL INSTRUMENTS

- In the PLOTTER page, the essential info are slightly different from the compass page, to allow the availability of a larger amount of info for the navigation.
- Aligned to the digital variometer, on the display's opposite side is located the IAS/GS indicator, while the altimeter A1 and the glide ratio are positioned on the left-upper side of the display.

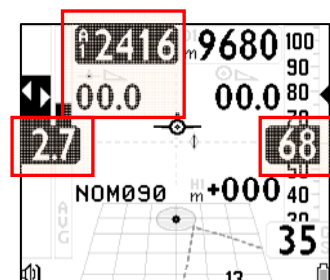


4.2.6 NAVIGATION PLOTTER SCREEN

- In the PLOTTER page the navigation is based on a graphic perspective plotter that features:
 - Graphic representation of the flight track toward the current WP;
 - Graphic representation of the current WP cylinder;
 - Optimized course line to the current WP cylinder;
 - Optimized course line to the next WP;
 - Wind's direction and intensity;
- The following info are listed in digital format:
 - Required glide ratio to the current WP and its distance;
 - Expected height of arrival above the Current WP and current glide ratio;
 - Current WP name.

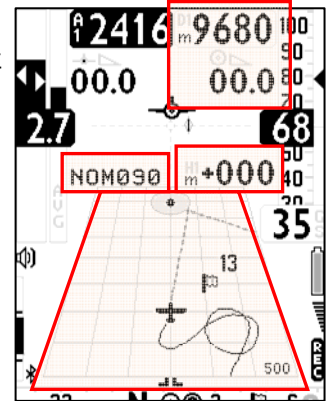


4.2.7 HSI NAVIGATION PLOTTER PAGE

- In the center of the PLOTTER page are represented two dotted lines crossed, where the crossing point indicates the current WP with its real altitude. During the glide to WP the “plane” symbol, moves toward the right or the left of the vertical dotted line to indicate a wrong route to the cylinder’s center and moves above or below the horizontal dotted line to indicate if with the current glide will arrive above or below the WP.
- Along the horizontal line, the symbol Φ represents the optimized direction to the current WP.

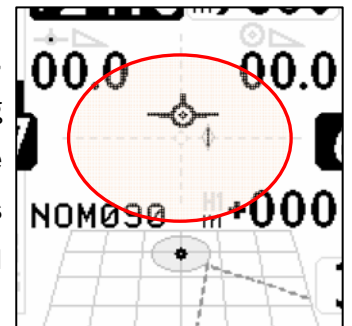


4.2.8 BEARING COMPASS

- On the bottom of the PLOTTER page there is a bearing compass showing also all the navigation’s info with graphics symbols (WP direction, wind etc....).
- If the GPS signal is valid, the direction is the TRK of the GPS track, otherwise it is represented the AIR’s internal magnetic compass.

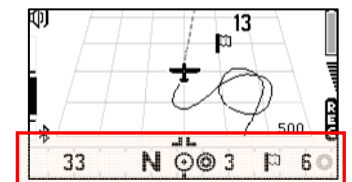


COMPASS SCREEN MAIN FIELDS

- In the COMPASS page, the navigation info are represented with a series of concentric circles with some rotating symbols:
 - Outside the circle there are the N-E-S-W points;
 - In the outer ring are rotating the direction to WP symbols;
 - In the inner ring are rotating the direction to the last thermal, the wind direction and wind speed symbols.

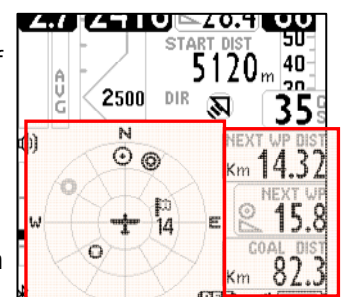

4.2.9 COMPASS SCREEN, NAVIGATION TO THE START LINE

- In the COMPASS page, during the task’s phase preceding the Start, the pilot finds some specific info to navigate to the Start line.
- On the top section there is a clock and below a field with the countdown timer to start.

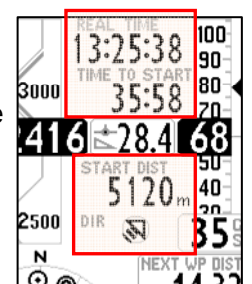


- Below the glide ratio indicator is shown the distance of the Start Line closest to the pilot and its direction.
- After the Start and once correctly passed the Start line, these fields can be optionally used for other info on pilot's choice.

5 BASIC FUNCTIONS

5.1 ALTIMETERS

- The Digifly AIR features 7 different altimeters: A1, A2, AG, A3, H1, HA.
 - **A1:** Barometric altimeter.
 - **A2:** Altimeter A2.
 - **AG:** Altimeter GPS.
 - **A3:** Last thermal height gain
 - **H1:** Estimated height over current WP
 - **HA:** Estimated height over goal.

 5.1.1 ALTIMETERS SETTINGS

- Enter in the **"ALTIMETERS"** menu and select which altimeter to set (A1 or A2).
- The A2 altimeter is suitable for general purpose. To reset the A2 altimeter hold pressed the  key from the PLOTTER or COMPASS pages;
- The A3 altimeter is automatically reset while entering in a thermal.
- The altimeters can be displayed in meters (mt) or feet (ft). To change the altitude's unit of measure enter the setup from (**MAIN SETUP \ n. 15 U-AL**).

5.2 VARIOMETERS

5.2.1 SUPERFAST INTELLIVARIO

- The Intellivario is a revolutionary digital system designed by Digifly, based on sophisticated integrated circuits combining info coming from the atmospheric pressure sensor joined with the inertial platform data (accelerometer, magnetometer and gyroscopes). This allows to obtain a highly precise and sensible vario, exempt from radio interferences. All the vario data are subject to this filter.
- The Digifly AIR utilizes an extremely sensible pressure sensor and an excellent data acquisition sys providing a very quick and extremely precise vario (updated 24 times each second).

5.2.2 VARIO SENSIBILITY

- Three different electronic filters are available to change the vario's sensibility. These settings allow the pilot to get a strong instrument's customization, to better adapt it to his flight habits and needs.
- Filter 1, adjustable in the menu (**VARIOMETER SETUP \ n. 10 FLT1**), default value 80% , suggested use range from 70% to 95%, reducing this value makes the vario very sensible to variations.
- Filter 2, adjustable in the menu (**VARIOMETER SETUP \ n. 11 FLT2**), default value 72, suggested use range from

48 to 96, reducing this value makes the vario very sensible to variations.

- Filter 3, adjustable in the menu (**VARIOMETER SETUP \ n. 12 FLT3**), default value 0%, suggested use range from 0% to 10%, reducing this value makes the vario very sensible to variations.

5.2.3 VARIO REACTIVITY

- To adjust the vario's reactivity, enter in the menu: (**VARIOMETER SETUP \ n. 13 RVAR**). The default value is 0. To slow the reactivity increase this parameter.


5.2.4 ANALOGICAL VARIO

- Indicates the instant vario values. It is displayed by the analogical bar indicator on the left of the screen, it shows the sink or climb rate within a +/- 5 m/s range.

5.2.5 INTEGRATED AVERAGE VARIO

- Shows the integrated vario values. This means an average data reading (slowed down in the time) of the instant vario.
- Can be set slowed down or immediate. Setting to the minimum the integrated vario value, the shown value will be the same of the instant vario (factory setting).
- It can be used to monitor the proceeding of the climb to see if it is getting better or worse. For example: if the integrated vario value is higher of the instant vario one, means that previously the climb was stronger. It can be used therefore to better core the thermal.
- To change the integration time, set the parameter: (**VARIOMETER SETUP \ n. 14 INTE**) from 0 to 60 seconds.
- It is analogically displayed on the right of the instant variometer, with a bar showing the climb or sink rate with a range +/- 5 m/s. During the glide the gauge alternates with the "NETTOVARIO".

5.2.6 ACOUSTIC VARIO


- The acoustic vario represents the instantaneous values of the vario with a modulated acoustic tone.
- Pressing the key  (long pressure) the sound's volume changes into three levels: "HIGH", "OFF" & "LOW". The chosen volume is shown by the 'loudspeaker' icon on the center left of the display.
- To set the sound's threshold level to indicate lift, go to parameter (**VARIOMETER SETUP \ n. 1 V.UP**), for the sink, go to (**VARIOMETER SETUP \ n. 3 V.DN**).
- It is possible to set the preferred acoustic profile with the parameter (**VARIOMETER SETUP \ n. 4 PROF**). Three pre-set profile are available: FAS, STD, SFT, Two fully customizable profile: USR1, USR2 are available via PC using the AirTools software; moreover, there is a new manual 'MAN' mode, that allows to directly customize the instrument using the following parameters.
- **Style**, (**VARIOMETER SETUP \ n. 5 STYL**) relation among sound/pause, values from 1 to 3.
- **Modulation**, (**VARIOMETER SETUP \ n. 6 MODH**) increases the tone frequency from 1 to 30 Hz.
- **Pitch**, increases ascending the **tones rhythm** (**VARIOMETER SETUP \ n. 7 PITC**) values from 1 to 4.
- **Climb** start tone's frequency (**VARIOMETER SETUP \ n. 8 UPHZ**)
- **Sink** start tone's frequency (**VARIOMETER SETUP \ n. 9 DWHZ**)
- **Autosilence**, (**VARIOMETER SETUP \ n. 19 AUTV**) activates the acoustic vario only after the takeoff and stops it

60 seconds after the landing.

5.2.7 ACOUSTIC VARIO PRE-THERMAL ADVIDSE

- If activated, an acoustic signal with a tone and modulation significantly different of the acoustic vario, indicates that the instantaneous sink rate is better of the glider's minimum sink rate, therefore indicating an area of slightly climbing air. To set the pre-thermal sound's start threshold go to: (**VARIOMETER SETUP \ n. 2 V.PT**) value from 0,00 to 1,00 m/s. Suggested value 0,4 m/s.

5.2.8 VARIO SIMULATOR

- For a perfect tuning of the acoustic vario without flying, it is possible to set the 'vario simulator' mode, setting "ON" the parameter (**VARIOMETER SETUP \ n. 18 SIMV**). Then exit from menu and use the arrow keys  to set the preferred vario sound.
- To deactivate the simulator set to "OFF" the parameter "SIMV". **Anyway**, for safety reasons the simulator is automatically deactivated when the instrument power on.

5.3 AIR SPEED (ANEMOMETER WITH OPTIONAL PITOT TUBE)

- This sensor measures the glider's air speed (Indicated Air Speed) that can be visualized in km/h or mph. To change this parameter use the menu (**MAIN SETUP \ n. 16 U-SP**).
- This function is available only installing the Pitot tube sensor module (optional). The tube will have to be inserted in the specific housing hole located on the instrument's top, and the parameter (**ADVANCED SETUP \ n. 1 PITO**) have to be set to "ON".
- The minimum speed indication is 18 km/h.

5.4 ANEMOMETER SETTING (WITH OPTIONAL PITOT TUBE)

- It is possible to perform a fine tuning of the anemometer using the parameter (**ADVANCED SETUP \ n. 3 KIAS**) it indicates the anemometer's correction value (100%=no correction, 110%=increase, 90%=decrease).
- Warning: a wrong use of this parameter makes less reliable the anemometer's indications, the calibration of the anemometer with the Pitot tube should have done at the sea level in standard atmosphere conditions.

5.5 TIME & CHRONOGRAPH

- The Digifly AIR can visualize the expected hour and time referred to a route's waypoint, or a goal arrival.
- Relative time (hour/min or min/sec with blinking points)
 - **ero**: relative time - expected arrival time to the start pylon cylinder shown in seconds. Negative value if it's too early (wrong), positive value if it's late (right).
 - **es**: countdown to the start time gate
 - **e1**: expected arrival time to the current Waypoint
 - **eA**: expected arrival time to the goal (accordingly to the route)
 - **ch**: chronograph

- Absolute time (hour/min)
- **ts:** absolute time to start pylon gate
- **t1:** Expected absolute time to the current Waypoint.
- **tA:** Expected absolute time to goal.
- **rt:** Absolute time UTC (hours/min).

5.6 DISTANCES

- It is possible to set the distance's unit of measure using the parameter (**MAIN SETUP \ n. 16 U-SP**) the same used also for the speed value.
- **dstT:** Distance to last thermal.
- **dst1:** Distance to last Waypoint.
- **dstA:** Distance to goal (along the route).
- **dst0:** Distance to the cylinder

5.7 AIR EFFICIENCY (GLIDE RATIO)

- **efrT:** Needed glide ratio to the last thermal.
- **efr1:** Needed glide ratio to current Waypoint.
- **efrA:** Needed glide ratio to goal (along the route).
- **effA:** Glide ratio referred to air.

 
5.8 TRACKING & BEARING

- **BRT:** Direction (bearing) to last thermal.
- **BR0:** Direction (bearing) to the center of the current Waypoint.
- **BR1:** Direction (bearing) to the optimized point of current Waypoint.
- **TRK:** Tracking (current direction referred to North)

5.9 BAROMETER

- The barometric pressure can be visualized on every one of the customize fields.
- It is possible to rectify the shown pressure value modifying the calibration with the parameter (**ADVANCED SETUP \ n. 4 KBAR**).
- Warning: a wrong use of this parameter makes the barometric altimeter data less reliable.

5.10 TIME/CHRONOGRAPH SETUP

- **rt:** UTC time (clock).
- **ch:** Chrono (chronometer).
- To zero the chronograph, press the  (long press).

- The vario time and date are automatically synchronized with the GPS data at the instrument's power on.
- To set the time zone for your country go to (MAIN SETUP \ n. 7 UTCO).
- To manually adjust the time and date, go to (MAIN SETUP \ n. 8 HOUR), (MAIN SETUP \ n. 9 MIN), (MAIN SETUP \ n. 10 DAY), (MAIN SETUP \ n. 11 MONT), (MAIN SETUP \ n. 12 YEAR).


5.11 PILOT'S NAME & GLIDER'S DATA

- To set the pilot name, the glider type and the glider id, go to (MAIN SETUP \ n. 17 PILO), (MAIN SETUP \ n. 18 GTYP), (MAIN SETUP \ n. 19 GID).

6 ADVANCED FUNCTIONS


6.1 TOTAL ENERGY COMPENSATION

- To use this function it is necessary to install the optional Pitot tube.
- Generally a variometer works as follows: it feels the atmospheric pressure change rate considering it as an altitude change, but, if during the flight the pilot slows the glider (and even more if he does it quickly) there is a real change of pressure, so a vario 'without compensation' records it as a climb, but this variation is caused by a change of speed (cinetic energy) not a true thermal.
- With the total energy compensation, the part of the climb due to the change in velocity is ignored, allowing you to identify "real" thermals.
- To properly set the TOTAL ENERGY compensation value go to (VARIOMETER SETUP \ n. 17 TEC), to do it you should fly in calm air conditions and slow down as if you are entering a thermal. If the vario shows a change in lift, you have to increase the total energy compensation value, until the change in velocity isn't recorded as lift.
- A typical value for hang gliders is 65. The default setting of "0" deactivates the total energy compensation function

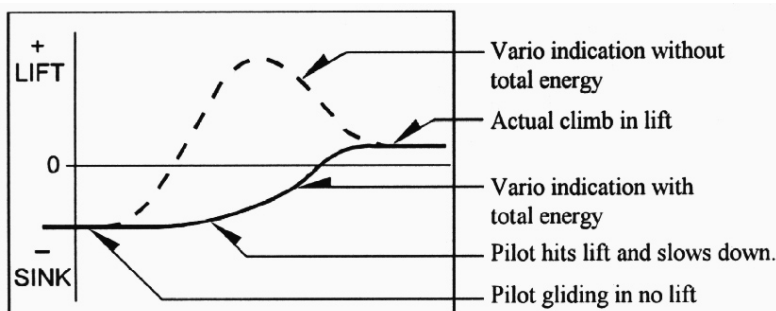

6.2 POLAR (WITH OPTIONAL PITOT TUBE)



- A polar curve (shown in bold on the figure) is the graph of your glider's sink rate over its speed range.
- The black bold curved line represents the polar. The glider's stall speed is shown at point S on the left and the glider's max speed at point T on the right of the graph.
- On the graph, you can also see three pairs of relative speed readings and sink rates. The graph shows at point A, the lowest sink rate achieved at the top of the curve. Therefore SinkA is the minimum sink rate and VA is the speed at which this is achieved.

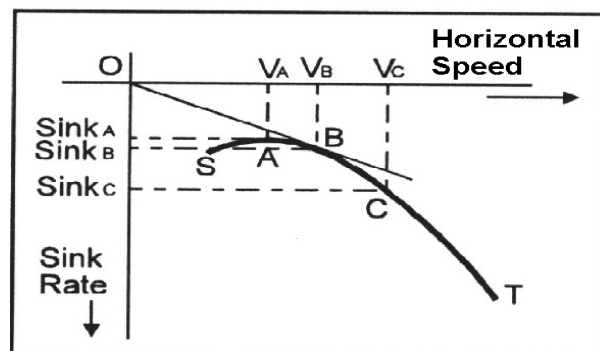

- The glide ratio is the ratio between the glider's horizontal speed and the sink rate. To find the best glide rate on the graph, it is necessary to draw a straight line from the origin of the graph (point **O**) tangent of the curve.
- The intersection of the tangent with the curve (point **B**) shows the speed to fly at to achieve the best glide (air related) is therefore **VB** and the glide ratio is **VB/SinkB**.
- On your Digifly AIR you can insert three different polars using the function (**ADVANCED SETUP \ n. 10 - 18 Px-A/B/C**). To choose which polar to use, go to (**ADVANCED SETUP \ n. 9 POLA**).
- If this parameter (**ADVANCED SETUP \ n. 6 POLA**) is set to "OFF", all information relating to **McCready**, **McCready Equivalent**, and **Netto Vario** are not displayed on the instrument.
- On the instrument there are three preloaded polars, (2 for hang gliders and 1 for a paraglider). Using the Digifly AirTool software, available on the Digifly web site (www.digifly.com), it is possible to see the values of the three default polars and to set your own polar.
- We suggest that you insert your own polar curve data which best reflects the actual performance of your glider.

6.3 SPEED TO FLY (WITH OPTIONAL PITOT TUBE)


- If this parameter (**ADVANCED SETUP \ n. 9 POLA**) is set to "OFF", all information related to **McCready**, **McCready Equivalent**, and **Netto Vario** are not displayed on the instrument.
- Speed to Fly (STF) is the best anemometric speed to obtain the best glide ratio. This value depends on performance of your glider as well as vertical and horizontal airflow. In calm air, the optimum flying speed is the same as the best glide speed (point **B**).
- The diagram shows different values of speed to fly value related to different flight conditions

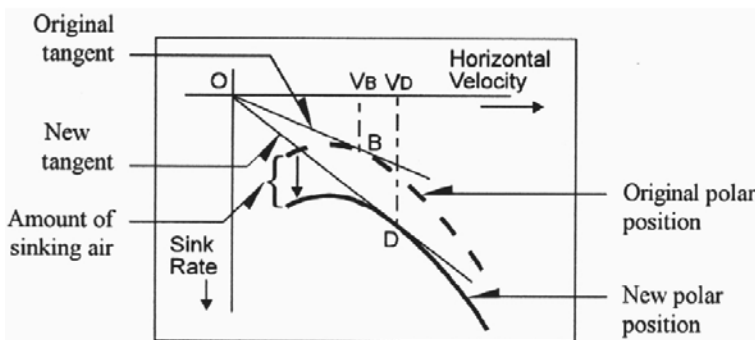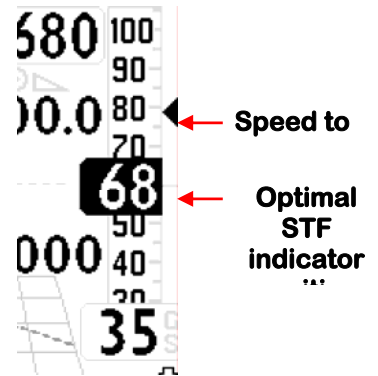

- The X-axis shows horizontal speed, the Y-axis shows sink rate. With head wind or sink conditions, the best glide speed increases. In order to find the optimum speed to fly value in sink conditions, add the sink rate of the air to the polar of your glider, drawing a new polar and a new tangent line from the initial point of axes. The new tangent (point **D**) meets the polar at the point giving a higher optimum flying speed **VD**.
- To fly at the correct "Speed to fly" you have to adjust your anemometric speed "IAS" to overlap the triangle symbol with the numeric value of the optimal anemometric speed.

6.4 McCREADY (WITH OPTIONAL PITOT TUBE)

- If this parameter (**ADVANCED SETUP \ n. 9 POLA**) is set to “OFF”, all information related to **McCready**, **McCready Equivalent**, and **Netto Vario** are not displayed on the instrument.
- The McCready value is the average lift value of the last “nn” minutes
- To adjust the average lift time go to (**ADVANCED SETUP \ n. 19 MCRA**).

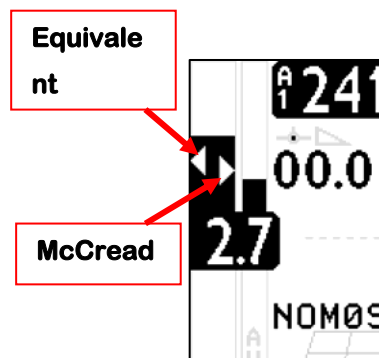

6.5 EQUIVALENT cCREADY (WITH OPTIONAL PITOT TUBE)

- If this parameter (**ADVANCED SETUP \ n. 9 POLA**) is set to “OFF”, all information related to **McCready**, **McCready Equivalent**, and **Netto Vario** are not displayed on the instrument.
- This value indicates the Equivalent McCready value: this means the McCready value considering the current air speed as the optimal speed.
- The equivalent McCready, based on the glider’s polar, the sink rate and the current anemometric airspeed (IAS), indicates in real time at with which true McCready value we are flying compared to the optimal speed. When this value coincides with the one estimated in the thermal, this means that the current airspeed (IAS) coincides with the optimal speed (see “speed to fly” paragraph).
- To set the reaction time of the Equivalent McCready indicator go to (**ADVANCED SETUP \ n. 20 MCRE**).

6.6 NETTO VARIO (WITH OPTIONAL PITOT TUBE)


- If this parameter (**ADVANCED SETUP \ n. 9 POLA**) is set to “OFF”, all information related to **McCready**, **McCready Equivalent**, and **Netto Vario** are not displayed on the instrument
- It is shown thru an analogic scale on the right of the instant variometer that shows the climb or sink rate within a range +/- 5 m/s. This indicator, during the glide, alternates with the “NETTOVARIO”.
- To use this function it is necessary to set the proper polar of your glider.

7 GPS FUNCTIONS


 
7.1 INTEGRATED 99 CHANNELS GPS RECEIVER


- Digifly AIR features an extremely sensible, and state-of-the-art, 99 channels integrated GPS receiver.

7.2 GPS STATUS INFORMATION

- The GPS status icon is located in the status bar, on the right lower part of the display (plotter screen) or on the lower edge of the display (compass screen) and has different meanings:
 - 1) Fixed GPS icon = GPS FIX valid (GPS position available) 
 - 2) Blinking GPS icon = insufficient signal (GPS position NOT AVAILABLE)

7.3 GPS INFORMATION DISPLAY

 - This page shows in real time: Waypoint and symbol, Latitude, Longitude, GPS direction (“TRK”), Ground speed (“GS” in km/h or mph), GPS Altitude (“GPS-ALT” in mt or feet), Satellite’s number (“SAT”), GPS Signal power (“hdp”).
- In the status bar is visible also the flight recorder status and the battery level
- Pressing the key  (long pressure) it is possible to memorize a Waypoint (“MARK” function), holding pressed the key  activates the navigation function “HOME”.

LatLon ddmss.ss	
05 43'46.5N	
005 43'46.5E	
141	Tracking
01	Ground Speed
245	Altitude GPS
03/11/13 16:12:03	
	

7.4 LATITUDE & LONGITUDE COORDINATES OPTIONS

- Three different kinds of coordinates are available:
 - DMS** = grade, minute & second (dd° mm' ss.s) (default)
 - DMM** = grade & minute (dd° mm.mmm')
 - UTM** Universal Transverse Mercator (utm x, y, zone).
- To set the coordinates DMM , DMS or UTM use the parameter (**ADVANCED SETUP \ n. 23 CORD**).
- The coordinates latitude and longitude are referred to map datum WGS84.

7.5 GPS ALTITUDE

- The GPS altitude is the height above the sea level accordingly to the satellite system (“AG”), it is visible in the page GPS INFO.

7.6 GPS GROUND SPEED

- The GPS ground speeds is the glider speed related to the ground (“Gs”).
- When a navigation is activated, the ground speed is visualized in reverse mode if the glider is moving away from the waypoint.

7.7 GPS DIRECTION (TRK)

- The GPS direction (“TRK”) is the glider’s direction related to the ground.

7.8 GROUND EFFICIENCY (GLIDE RATIO)

- It shows the efficiency (glide ratio) related to the ground.
- To set the time over which the average efficiency (glide ratio) is calculated, go to (**ADVANCED SETUP \ n. 7 EFF**).
- If the “ground speed” slows below the 2km/h or the GPS signal is not valid, the indicator shows: “ 0.00 ”.
- If you are in lift, the efficiency indicator is in reverse mode and shows the average efficiency calculated during the last glide, go to (**ADVANCED SETUP \ n. 8 EFFA**) to set the time to be used to calculate the medium efficiency (glide ratio) to be used for the glide calculation to WP
- The average efficiency value is very important because it is the value used by the glide computer.

7.9 WIND SPEED AND DIRECTION INDICATION USING GPS

- The wind speed and its direction are automatically computed and displayed using the direction info coming from the GPS (“TRK”) and the “ground speed (“Gs”) .
- To determine the wind speed and its direction, you should make a “normal” turn, which has to be neither too tight, nor too wide.
- It is also important to maintain constant airspeed during the turn.
- For an accurate calculation, a 360° turn must be completed.
- The wind direction related to the glider and its speed are visualized in the both main screens COMPASS and PLOTTER.
- This function uses the parameter (**ADVANCED SETUP \ n. 22 WSEN**) for the wind calculator sensibility (default WSEN = 5)

7.10 LAST THERMAL DIRECTION, DISTANCE, HEIGHT INFORMATION

 
- The data: direction “brt”, distance “dst T” and altitude gain “A3” are shown on the display when it is detected a thermal.

To define a thermal, this function uses two parameters: the variometer value (**VARIOMETER SETUP \ n. 15 THEV**) to define the vertical speed (vario), and the lift’s minimum duration in seconds (**VARIOMETER SETUP \ n. 16 THET**) to define how many consecutive seconds this vertical speed has to be detected.

8 WAYPOINT MANAGEMENT


8.1 DATABASE WAYPOINT COMPETITION AND WAYPOINT USER

Two waypoint databases are available :



- Competition Waypoints (“WPT COMP”) and User Waypoints (“WPT USER”). For every one of the two databases there is memory room up to 186 Waypoints
- To visualize the Waypoint list press the key  (“MEN” function) and select the desired WP list.
- The Waypoints can be manually created or can be downloaded from PC using the AirTools or GpsDump software

 or also from MAC using GpsDump 'MAC' version . It is also possible to transfer the Waypoints from one instrument to the other via BT.




8.1.1 CREATING A NEW WAYPOINT MANUALLY

 - To create a new Waypoint, in the menu, put the cursor on the first database's dotted line, and then press the key  ("EDIT" function).
- The "EDIT" function is described in the chapters 2.6.1 and 2.6.2.
- **Name:** 6 characters, format aaaNNN (aaa = 3 alphanumeric characters, NNN = waypoint altitude above sea level, in tens of meters). Note: if the field NNN doesn't contain three numbers, then the navigation uses the field Altitude.
- **Sym :** numbers from **0** to **9** or the letter **A** to identify an official landing zone (Airfield)
- **Note :** alphanumeric, 16 characters available
- **Lat / Lon:** Latitude and longitude.
- **Altitude:** altitude in meters. Note: this field is used only if the field NNN of the waypoint's name doesn't contains three numbers.
- **Near:** distance in meters that activates the fast frequency flight recorder (one second scan).
- **Radius :** radius in meters of the waypoint's cylinder

 

 
 

 

8.1.2 CREATING A NEW WAYPOINT USING THE CURRENT POSITION (MARK)

- When the GPS acquires a valid position (UTC sync) it is possible to save it in the instrument's memory using the function "MARK".
- Press the key  (long press) to enter in the "MARK" page. To save the current position press again the key  ("SAV" function). The current position will be saved as a new Waypoint in the User Waypoint list ("WPT USER") with the format nnMaaa (aaa= altitude A1 in tens of meters).

8.1.3 EDIT WAYPOINT

- To modify (edit) an existing Waypoint, scroll though the list using the arrow keys  or  until the cursor is on the desired one, then press the key  ("EDIT" function).
- The "EDIT" function is described in the chapters 2.6.1 and 2.6.2.
- For the field's layout see the chapter 8.3.

8.1.4 DELETE WAYPOINT

 
- To delete a Waypoint from the list, enter in the desired Waypoint as like to edit it ( key), then press the key  (long press) and confirm the delete request pressing the key , or cancel the procedure using the key 
- To delete all the Waypoints of a list: while you are inside a WP list press the key  (long press), and confirm the delete request of ALL THE WP with the key , or cancel the procedure using the key 

9 NAVIGATE TO A WAYPOINT (GOTO)




 
 
 
9.1 ACTIVATING NAVIGATION TO A WAYPOINT (GOTO)

9.1.1 NAVIGATION TO WAYPOINT HOME (GOTO HOME)




 
 
 
- This function allows to create a waypoint having position “HOMxxx” (xxx = altitude in tens of meters) and at the same time activating the navigation (GOTO) to it.

To activate this function, enter into the page GPS INFO and wait till the GPs position is valid, then press and hold the key  till the message “HOME ACTIVE” appears.




 
 

9.1.2 NAVIGATION TO THE NEAREST LANDING ZONE (GOTO LANDING)

- To activate this function wait till the GPS position is valid, enter in the menu with the key , select the sub-menu “Wpt Near Airfield”.
- In it there is a list of all the landing fields get from both the WP database (USER+COMP) having the symbol “A” .
- This list is sorted from the nearest to the farther one; nearby every landing it is shown at what distance it is from the current GPS position,
- The cursor is automatically set on the nearest landing if necessary scroll the list using the arrow keys   to select the wished one, press the key  (long press) then confirm the choice to activate the navigation to the WP pressing again the key , or cancel the procedure using the key .

 
 

9.1.3 NAVIGATION TO THE NEAREST WAYPOINT (GOTO NEAREST)

- To activate this function wait till the GPS position is valid, enter in the menu with the key , select the sub-menu “Wpt Nearest”.
- In it there is a list of all the nearest waypoints get from both the WP database (USER+COMP).
- The cursor is automatically set on the nearest Waypoint, if necessary scroll the list using the arrow keys   to select the wished one, press the key  (long press) then confirm the choice to activate the navigation to the WP pressing again the key , or cancel the procedure using the key .

9.1.4 NAVIGATION TO A GENERIC WAYPOINT (GOTO)

- To activate this function wait till the GPS position is valid, enter in the menu with the key , select the database Waypoint, “Competition“ or Waypoint User”, accordingly where is recorded the chosen WP.
- Scroll the list using the arrow keys   and set the cursor on the wished Waypoint, to select it press the key  (long press) then confirm the choice to activate the navigation to the WP pressing again the key , or cancel the procedure using the key .

9.1.5 DEACTIVATING NAVIGATION TO A WAYPOINT (GOTO)

- To deactivate the current navigation, from the page **GPS INFO**, press the key  (long press) then confirm the choice to deactivate the navigation pressing again the key , or cancel the procedure using the key .

9.2 NAVIGATION'S FUNCTIONS TO A WAYPOINT (GOTO)

The following navigation's functions are available only if a navigation toward a single waypoint (GOTO) is active:

9.2.1 DIRECTION, DISTANCE, HEIGHT TO CURRENT WAYPOINT (GOTO)

- It is a very useful function that indicated the direction "br1", distance "dst1" and estimated height (H1) of arrival on the current waypoint;
- The arrival altitude on the current (H1) is computed integrating the following info: Altimeter A1, distance to the Waypoint "dst1", Waypoint altitude and medium glide ratio.
- The Waypoint's altitude have to be included in the Waypoint's name:
 - aaaNNN visible on the bottom of the waypoint's page.
 - aaa = 3 alphanumeric characters for the Waypoint's name.
 - NNN = waypoint altitude above sea level, in tens of meters. Note: if the field NNN doesn't contain three numbers, then the navigation uses the Altitude field.
- The medium glide ratio is continuously update during the glide and stored in the memory during the thermal flight.

9.2.2 NEEDED GLIDE RATIO TO THE CURRENT WAYPOINT (GOTO)

- It is the estimated requested glide ratio to reach the current Waypoint "efr1".

9.2.3 ARRIVAL HOUR, ARRIVAL TIME TO THE CURRENT WAYPOINT (GOTO)



- It is the expected arrival hour "t1" and the expected arrival time "e1" to the current waypoint.

9.2.4 HSI GRAPHIC INDICATION TO THE CURRENT WAYPOINT (GOTO)

- This info is available in the PLOTTER page and provides to the pilot a quick and intuitive navigation's graphic instruction to the WP, see paragraph 4.2.7.
- This indication is deactivated if the current turn point is a "start pylon".

10 ROUTE MANAGEMENT

10.1 PREFIXED GENERAL ROUTES






- From the main menu enter in the sub menu "ROUTES".
- The first visualized route is the "Rt 1", to select other routes use the arrow keys  .

Rt 01		1.04
04M011	S	001400
01M031	A	000400
03M009		000400
01M031	A	000400






OUT	Start	15 : 02
	Next Gate	15 min
	Tot. Gates	1
	Altitude	0110 mt
	Tot dst m	035763

   - It is possible to memorize up to 12 routes from "Rt 1" to "Rt 12" containing each one up to 20 Waypoints
- A route allows to automatically navigate toward the last WP going through all the inserted WP. On the bottom of the route screen is visualized the route's total distance in km.
- For every route it is possible to insert both Waypoint Competition and Waypoint User in any combination.
- The routes can be created manually or can be downloaded from PC using the software Digifly AirTools. It is possible also to transfer the routes from one instrument to another.
- In the page route is also listed the optimized total distance of the route in km "Tot dst km".






10.1.1 VISUALIZING WAYPONT DATA OF A ROUTE

   - Using the arrow keys   set the cursor on the desired waypoint's line.
- Press the key  to open the drop down menu containing the possible action, then select "EDIT - VIEW" and confirm with the key .
- Press the key  to go back the route's page.

10.1.2 INSERT A WAYPOINT IN A ROUTE



  
 
- Using the arrows keys ,  set the cursor on the desired waypoint's line where you want to insert another Waypoint
- Press the key  to open the drop down menu containing the possible action, then select "INSERT WPT xxxxxx" and confirm with the key .
- From the Waypoints list select the desired one and confirm with the key .





10.1.3 SUBSTITUTE A WAYPOINT IN A ROUTE

- Using the arrows keys ,  set the cursor on the desired waypoint's line where you want to substitute an existing Waypoint.
- Press the key  to open the drop down menu containing the possible action, then select "CHANGE WPT xxxxxx" and confirm with the key .
- From the Waypoints list select the desired one and confirm with the key .

  10.1.4 MODIFY A WAYPOINT IN A ROUTE (PARAMETER CHANGE)


To modify a Waypoint included into a route is necessary to assign to it the start function and to modify the cylinder's validation radius.

  - Press the key ,  set the cursor on the desired waypoint's line that you want to modify.
- Press the key  to open the drop down menu containing the possible action, then select "EDIT - VIEW" and confirm with the key .


- It appears a page with all the Waypoint data, use the arrow keys   to navigate the field you want to modify and confirm with the key .
- The function "EDIT" is described in the chapters 2.6.1 and 2.6.2.
- The waypoint fields that have generally to be EDITED in a route are:
 - Sym** : number from **0** to **9** or the letter **A** to identify a landing field (Airfield).
 - Note** : alphanumeric, 16 characters
 - Near** : distance in meters from the cylinder where it is activated the one second oversample of the flight recorder.
 - Radius** : radius in meters of the turn point cylinder
 - Start Pylon Type** : IN = entering, OUT = leaving, REV
 - Start Gate Time** : time of the first start (hours:min)
 - Next Gate** : time to the next start (minutes)
 - N. Gates** : total number of Start gate
- Press the key  to go back to the route's page

Name	Sym
0 4 M 0 1 1	
START	
Lat Lon ddmms.ss	
44 29' 08.1N	
011 16' 59.9E	
Altitude	0110 m
Near	0100
Radius	01400
OUT Start	15 : 02
NextGate	15 min
N.Gates	1
Aux	0

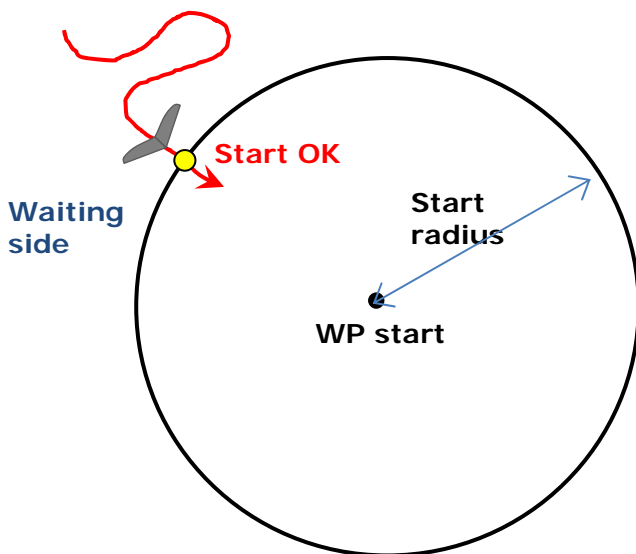

 
 

 

ENTERING START PYLON (IN)

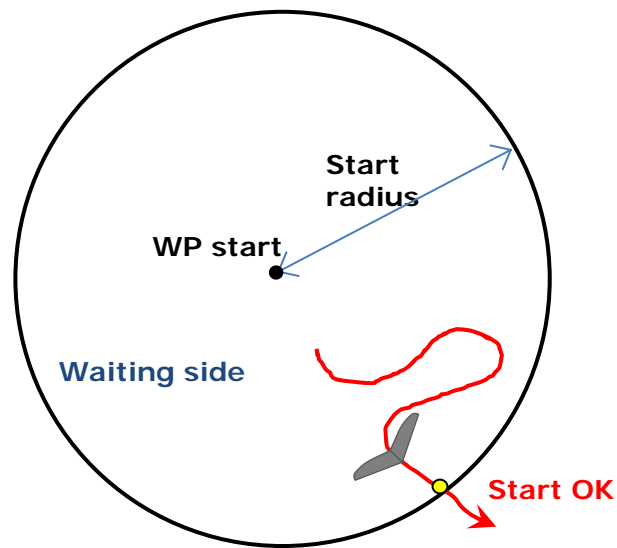




LEAVING START PYLON (OUT)






10.1.5 DELETE A WAYPOINT IN A ROUTE

- Using the arrows keys   set the cursor on the waypoint to be deleted.
- Press the key  to open the drop down menu containing the possible action, then select “DELETE”, confirm with the key , or cancel the procedure using the key .
- Confirm to accept the cancellation of the WP pressing the key , or cancel the procedure using the key .

 
 

10.2 ACTIVATING A ROUTE

- To activate a route, from the **Menu Routes** enter into the route to be activated and press the key  (long press) and confirm with the key , or cancel the procedure using the key .

   10.3 DE-ACTIVATING A ROUTE

- To de-activate a route, from the page **GPS INFO**, press the key  (long press) accept the request to de-activate the navigation, pressing again the key , or cancel the procedure using the key .

  10.4 DELETING A ROUTE

- To delete a route from the **Menu Routes** enter into the route to be activated and press the key  (long press) and confirm with the key , or cancel the procedure using the key .

11 OPERATION CHECKLIST BEFORE A TASK

- Be certain that the batteries are fully charged
- Download the waypoints from the competition organization web site
- Upload them on the Digifly Air with the software AirTools (PC) or GpsDump (PC e MAC), or copy them transferring the file from one instrument to the other using the direct connection cable.
- Edit a route accordingly to the task's director instruction
- Insert correctly the turn points cylinders radius
- Insert correctly the start info (entering or leaving)
- Insert correctly the start hour
- If existing, insert also the ulterior gate time (how may and when)
- In the route page verify that the total distance is corresponding ("Tot dst km")
- Activate the route
- Set the barometric altimeter, it is top important because it used also by the glide's computer.
- Before the takeoff, provide to turn on the instrument with the proper advance to acquire the proper GPS position
- After the GPS point acquisition, verify that the time is correct, in case correct the time zone (pay attention to the summer time shift) otherwise the start time will be totally wrong.

12 NAVIGATION ROUTE

To have these info available it has to be activated a route's navigation.

12.1 DIRECTION, DISTANCE & HEIGHT ON THE WAYPOINTS


- This function indicates the direction, distance and the estimated arrival height above the current waypoint (H1); the next Waypoint (H2) and the goal's Waypoint (HA).
- The arrival height above the current Waypoint (H1) is computed accordingly of the following info: Altimeter A1, distance to Waypoint, Waypoint's altitude and medium glide ratio.
- The medium Glide Ratio is constantly updated during the glide and memorized during the thermal flight, to change the GR media calculation time (in seconds) go to (ADVANCED SETUP \ n. 5 EFFA).

12.2 NEEDED GLIDE RATIO TO CURRENT WAYPOINT / NEXT WAYPOINT / GOAL

- It is the estimated needed glide ratio to reach the current waypoint.
This info is available in all the three screens (Thermal, Glide Compass, and Glide Plotter) using the tools "efr1", "efr2", "efrA".

12.3 OPTIMIZED NAVIGATION

- The optimized navigation shows to the pilot the shortest way of the task's route:

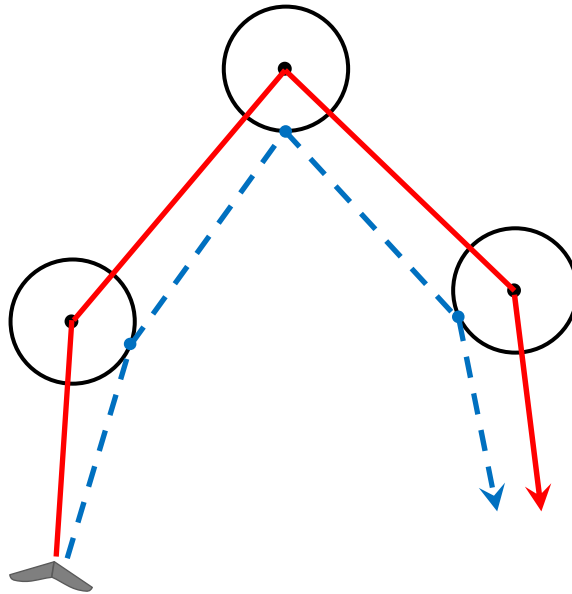


12.4 NAVIGATION TO START PYLON WAYPOINT

- If the current waypoint is a Start Pylon, on the info bar appears the message "START PYLON" and 3 minutes before the start time it appears the message " 3 min to go! " emphasized by a beep.
- 3 minutes before of the start time some fields of the screen are automatically changed by the instrument itself.
- More: in the screen Glide Plotter, 3 minutes before the start time are changed also the first field from the top showing the distance from the start "dst1" and the second one from the top where it is shown the tool "er0", that indicates in seconds the estimated arrival time to the start, based on the current medium speed referred to the countdown. E.G: if this field shows "10" means that the pilot twill arrive at the start with a 10 second late, if it shows "-15", this means that he will arrive 15 second early (penalty).


Still in this condition, it is disabled the graphic indicator of the HSI.

- When expires the time to the start (e.g. =00:00), it appears the message "Gate Opened" followed by a long beep, advising the pilot that the start gate is opened and it is possible to cross the start line.
- When the start time gate is open "Gate Opened" it is allowed to cross the start's cylinder line (entering or leaving accordingly of the selected IN / OUT option).
- If the start's pylon cylinder is crossed before the open start gate time, the start pylon distance's indicator blinks to show that the pilot is in the wrong side of the start pylon cylinder.
- This instrument constantly drives the pilot toward the start line of the "start pylon" till t is properly crossed from the right side, IF the start time gate is opened; if everything is correct it appears the message: "Start is OK" and the navigator switches to the next waypoint.
- IN = Validation of the start pylon entering in the turn point cylinder.
- OUT = Validation of the start pylon leaving the turn point cylinder.

ENTERING START PYLON (IN)

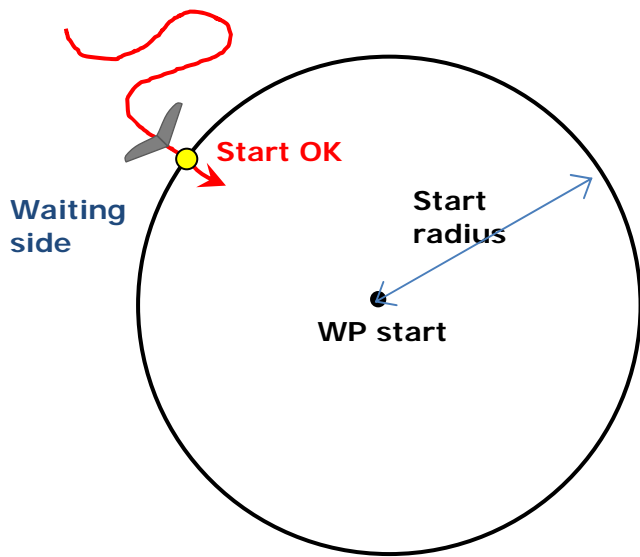


LEAVING START PYLON (OUT)

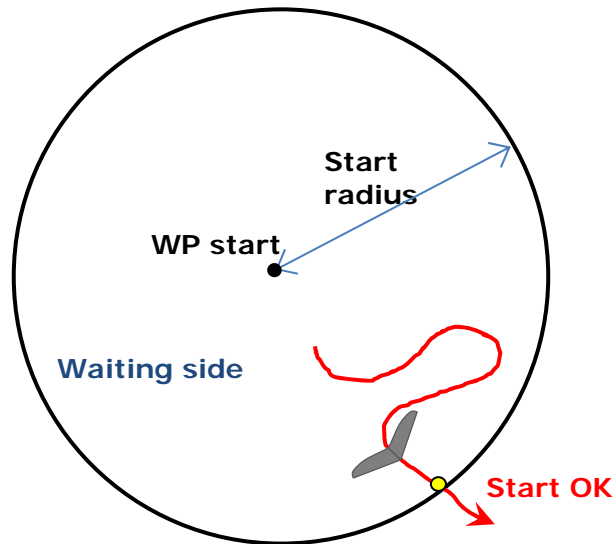

- The start-pylon function (with countdown) is activated only if it is set one of the two parameters: IN or OUT.


12.5 NAVIGATION TO STANDARD WAYPOINT

- If the current Waypoint is not set as a start pylon, the navigation is managed in 'standard cylinder mode' and the Digifly Air will drive you providing constant info about your position, distance, direction, required glide ratio and expected arrival height above the waypoint.
- When you arrive near the cylinder (see the Waypoint's parameter NEAR) the flight recorder rate is automatically set to one data point per second. The parameter "NEAR" can be modified from the page Waypoint's edit.
- Cylinder validation: entering in a cylinder the Digifly air will alert you with a sound and will appear the messageo "WPOK", then flight recorder rate returns to the setup value (MAIN SETUP \ n. 5 RECR). .

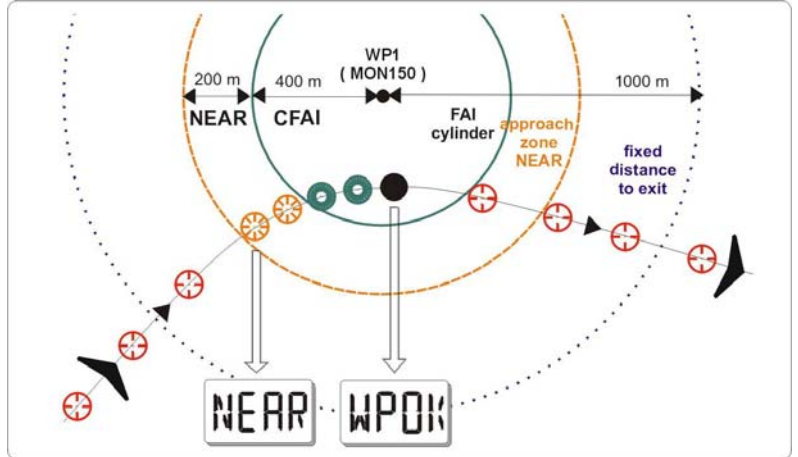


12.6 NAVIGATION TO CONCENTRIC WAYPOINT

- To properly manage a task's route with concentric waypoints it is necessary to insert in the desired route the same waypoint two-three or more times, accordingly to the task route, but with different cylinders radius.

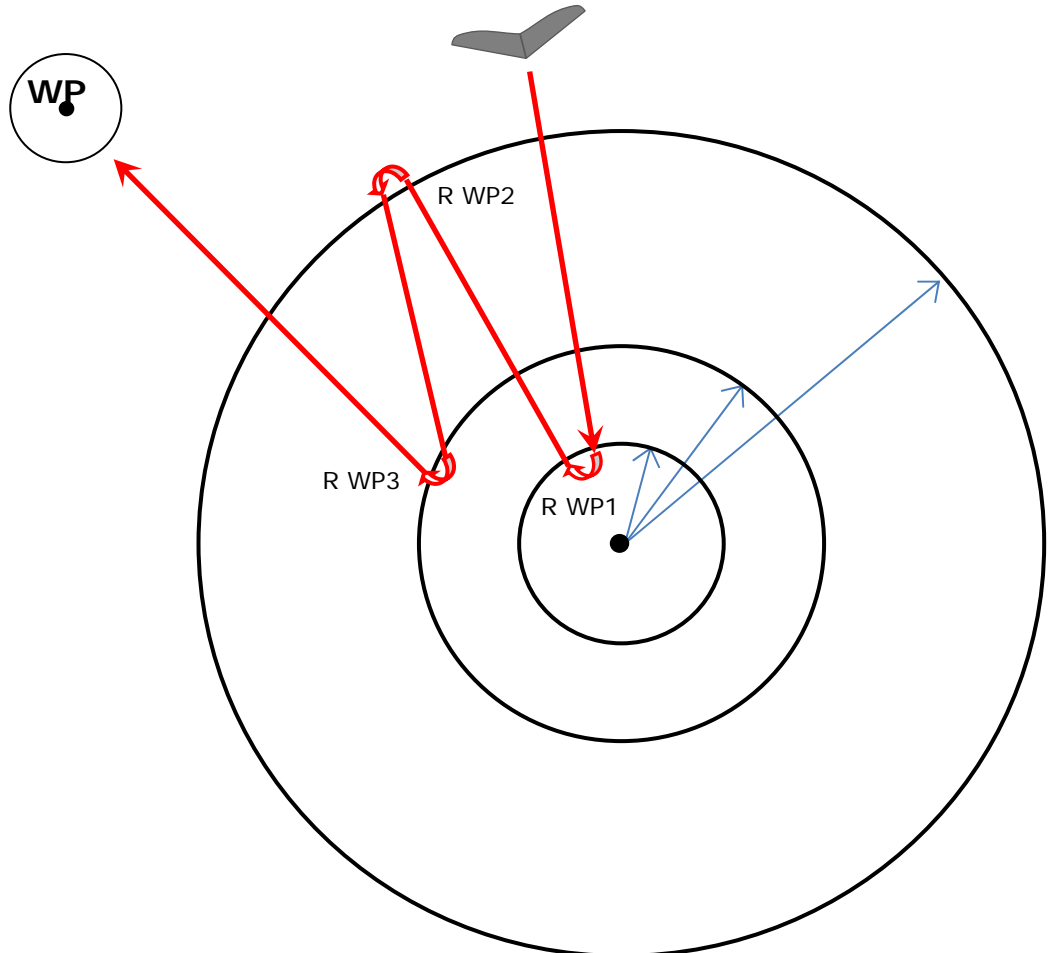

13 FLIGHT RECORDER

- When the Digifly Air starts the flight recorder, it compares the message “REC ON” and the icon “rec”  on the bottom of the display starts blinking. The following parameters are continuously recorded: Date and time, Latitude, longitude, number of satellite, tracking GPS, ground speed GPS, altimeter GPS, barometric altimeter A1, variometer and anemometer.
- **IMPORTANT:** the flight recorder is automatically deactivated if the setup is modified or the flights are deleted.

13.1 ACTIVATING / DE-ACTIVATING FLIGHT RECORDER

- The flight recorder can operate in three different ways:
 - “AUT” Automatic flight recorder.
 - “ALW” Flight recorder always active
 - “OFF” Flight recorder de-activated.

13.1.1 AUTOMATIC START RECORD MODE “AUT”

- By default setting, the flight recorder starts automatically, **MAIN SETUP \ n. 3 RECM = AUT**
- The flight recorder activates automatically only if it is available the GPS position and it is detected a takeoff with an altitude variation of at least 0,5m for 3 consecutive seconds. To change the altitude variation parameter go to: (**MAIN SETUP \ n. 4 R.DS = 0,5**) the change the detection time parameter go to (**MAIN SETUP \ n. 4 R.TI = 3**).
- The flight recorder is automatically de-activated 60 second after the landing or if the instrument is turned off.

13.1.2 ALWAYS ACTIVE RECORD MODE “ALW”

 
 

- To set the always active record mode parameter go to (**MAIN SETUP \ n. 3 RECM = ALW**). The flight recorder is activated once the instrument is turned on and is de-activated when it is turned off.

13.1.3 RECORD MODE OFF “OFF”





- To de-activate the flight recorder set the parameter (**MAIN SETUP \ n. 3 RECM = OFF**), no data are recorded.

13.2 RECORD RATE

- The recorder rate can be adjusted from 1 to 60 seconds, go to (**MAIN SETUP \ n. 5 RECR**).
- setting 1 data point per second you can record over 10 hours of flight data.
- Setting 1 data point per minute, you can record up to 600 hours of flight data.
- The recorder memory has room for up to 45,000 GPS data point and up to 250 flights.
- When you are near a ‘GO TO’ Waypoint, the recorder rate is automatically increased to 1 data point per second.
- When the recorder’s memory is full, the oldest flight is automatically deleted by the new one.
- The remaining free memory time and percentage are shown for 2 seconds as the instrument is turned on
- If a single flight fills the whole memory, it is no more possible to use the recorder and the message “MEM FULL” appears every time that you try to use it. To activate again the flight recorder it is necessary to clear the whole

recorder memory. To do it: from the menu “LOGBOOK press the key  (long press) and confirm the cancellation of ALL THE FLIGHTS pressing the key , or cancel the procedure using the key .

   13.3 LOG BOOK MANAGEMENT (LOG BOOK)

- To see the recorded flights select the menu “LOGBOOK”. It appears the list of all the recorded flights with the date and take off time.
- To see the flight detailed info, after the selection of the flight press the key .
 - For every flight are shown the following info:
 - Take off date and time, flight duration, and total altitude gain.
 - Max and min value for : Altimeter (A1) , Vario and Ground speed GPS
- To delete all the flights of a list: from the menu “LOGBOOK press the key  (long press) and confirm the cancellation of ALL THE FLIGHTS pressing the key , or cancel the procedure using the key .
- It is not possible to delete a single flight.

14 CONNECTIONS, INTERFACES & MEMORY CARD

- It is possible to connect your Digifly Air to a PC, MAC, Smartphone, Tablet , PDA, via Bluetooth or using the provided USB cable.

14.1 USB CABLE CONNECTION

- To use the USB connection it is necessary to install the driver. If the computer is connected to internet, generally the Window’s automatic research finds and installs it; otherwise it is possible to download the updated drivers from the web site: www.digifly.com-> download -> PC USB Driver (DIGIFLYxxxxxx Driver.zip) .



- To verify the correct driver’s installation:

1) In Windows 7 from Start menu go to *Control Panel -> System and Security -> System -> Device Management*.


2) Click on the sign (+) nearby "*Doors (COM e LPT)*".

3) If the driver is correctly installed it is shown the message "*USB Serial Port (COMxx)*" without any yellow indication of error. Note: that 'x' is the number of the COM port assigned to the PC USB.

4) The kind of driver is visible with a mouse’s right key click on "USB Serial Port" then click on "*Properties*", the driver is correct if it is "*FTDI*".

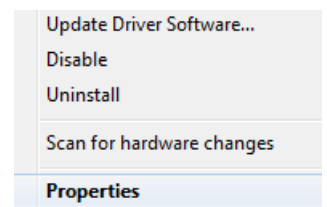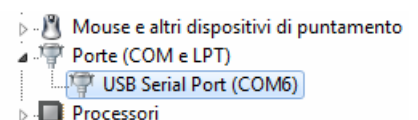


- If the driver is manually installed, be sure that the USB cable is disconnected from the PC, download the updated driver from the web site www.digifly.com-> download -> PC USB Driver (DIGIFLYxxxxxx Driver.zip), Unzip the folder and run the proper installation program accordingly to the used operation sys (e.g.: DIGIFLY_XXXXXXXXXXXXXX.exe).

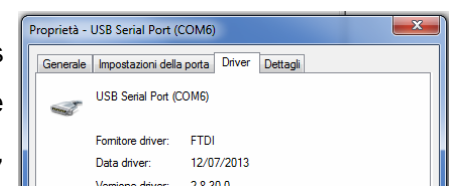

- Restart the PC


- Connect the USB cable to the PC and verify the correct installation.
- Some software require that the COM door number would be in the range from 1 to 9, if the PC assigns to the door and higher number, it is necessary to reassign it manually as follows:

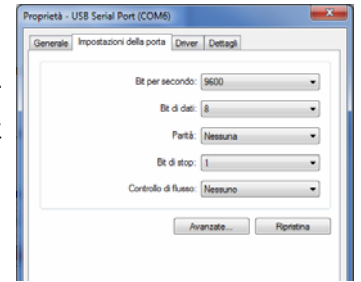

- 1) Right click on "USB Serial Port" and click on "Properties".
- 2) Click on "Door settings", then click on "Advanced".

3) In the window "Advanced Settings" set the "COM Door Number" on the lower number (from 1 to 9) among the doors that aren't already in use, then click "OK".

- Note: the visualized value in the window "Device Management" is still the one previously shown, the right number will be visualized closing and opening again this window.
- Remember the COM number, it will have to be used to set the right COM number in the applications.

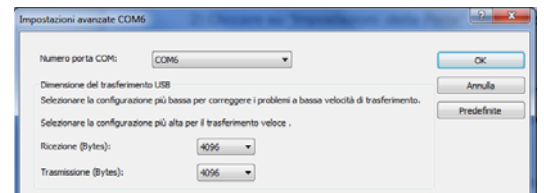

(Take care: the software Digifly AirTools and the software Digifly for the firmware upgrade are automatically detected from the COM port, so, they do not need this setting).

14.2 BLUETOOTH CONNECTION


14.2.1 DEVICES CONNECTION "PAIRING"

To connect the Digifly AIR Pro Bt and your device (PC , MAC , smartphone , Tablet or PDA) proceed as follows:


- Set on the AIR Pro Bt the parameter (ADVANCED SETUP \ n. 25 BLUT = "ON").
- For the **AIR Pro Bt**, enter in the menu "**Bluetooth Pairing**" and wait.
- In your **device**, (PC, MAC etc...) start a research for new Bluetooth devices, the AIR Pro Bt will be recognized as "**Digifly AIR BT**".
- In your **device**, when requested, enter the code for the pairing of the AIR Pro BT, it is "**0000**".
- At this point, **AIR Pro Bt** emits a sound to request a confirmation pressing the key "OK", then exit from the menu, the connection is now active.
- *If necessary* create on your **device** a connection type Serial Port (SPP) to dialogue with the AIR Pro Bt, be sure to select also the correct COM door number.
- To guarantee the use easiness, if the **device** allows it, create an association among your device and the AIR Pro Bt, of "authorized" type, so, the Bluetooth connection will be automatically activated every time the two devices will be turned on.
- During the next connections among the **AIR Pro Bt** and your **device**, normally, the acknowledgement procedure above described will be no more necessary.
- When the Bluetooth connection is OK, the Bluetooth icon in the AIR Pro Bt status bar, is fixed turned on, not blinking.

14.2.2 BLUETOOTH DATA TRANSFER ACTIVATION

- Set on AIR Pro Bt the parameter (ADVANCED SETUP \ n. 24 TELE) to choose the desired telemetry, see paragraph 15.6.1.
- To be able to exchange data with the software installed on your device (PC , MAC , SmartPhone , Tablet , or PDA) to read the data from the door COM bluetooth, will be necessary to modify the properties of your application.
- For the app “XCSoar” proceed as follows:
- Enter in the devices configuration.
- Enable a device with the driver “**Digifly Leonardo**” from the door “**Bluetooth Digifly AIR BT**”.

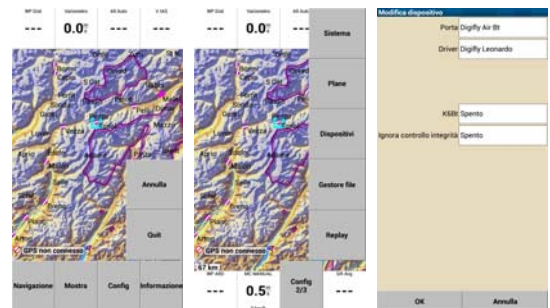

- If in correspondance of the device “**Digifly Leonardo su Bluetooth Digifly AIR BT**” compares the message “Not connected” enter in the XCSoar’s “Monitor” and execute the following procedure.
- On the instrument **AIR Pro Bt**, enter in the menù “**Bluetooth Pairing**” and wait for about 15 seconds, till the instrument emits a sound to request a confirmation, press the key “OK”, then exit from the menu.

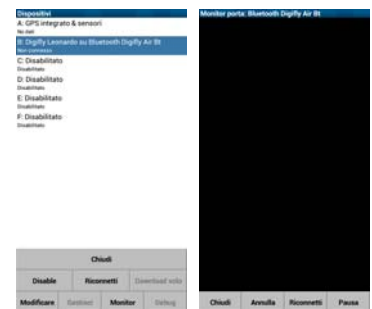

- After this procedure, in the XCSoar’s monitor screen appear the telemetry data transmitted from the Digifly AIR.
- the connection is now active, and this is visible also in the text: Connected; Barometer; Airspeed; Variometer nearby the device “**Digifly Leonardo su Bluetooth Digifly AIR BT**”.



14.3 ADDITIONAL MEMORY

- In the housing nearby the connector micro USB it is possible to connect a memory card type Micro SD, having 2 GB of maximum capacity.
- To insert the memory cars, place the card with the label toward the instrument’s keyboard side and insert the connector card’s side inside the instrument, to lock the memory card it is necessary to gently press it with the nail till it will be locked in the housing.
- To extract the memory card press it and release.



- Warning: if the card is wrongly inserted, it is possible that the instrument would be damaged.

15 SOFTWARE

15.1 SOFTWARE COMPATIBILITY

- Your Digifly Air uses a protocol Digifly v66, this protocol allows to communicate at high speed with the applications having it embedded in their interface (e.g. Digifly AirTools , GpsDump for PC and GpsDump for MAC). Thanks to this protocol it is possible have from remote the complete instrument's control.


15.2 SOFTWARE: DIGIFLY AIRTOOLS

- It is an official Digifly software, it integrates the protocol Digifly v66
- The Digifly "AirTools" is an application available for free, to be used on PC Windows; it allows the full management of: flights, routes, waypoint, the help language of the "SETUP parameters" and the complete personalization of the vario's acoustic profile
- Connect the PC to the Digifly AIR and turn on both.
- On the instrument press the key "menu" and enter with the key "ent" in the menu "AitTools", till it appears the blinking message "LINK".
- On your PC execute the Digifly program AitTools and click the key "CONNECT".
- Verify the confirmation of the connection showing the model; the serial number, and instrument's firmware version; meanwhile the AitTools application enables the usable window's function keys.



15.3 SOFTWARE: GPSDUMP PC & GPSDUMP MAC




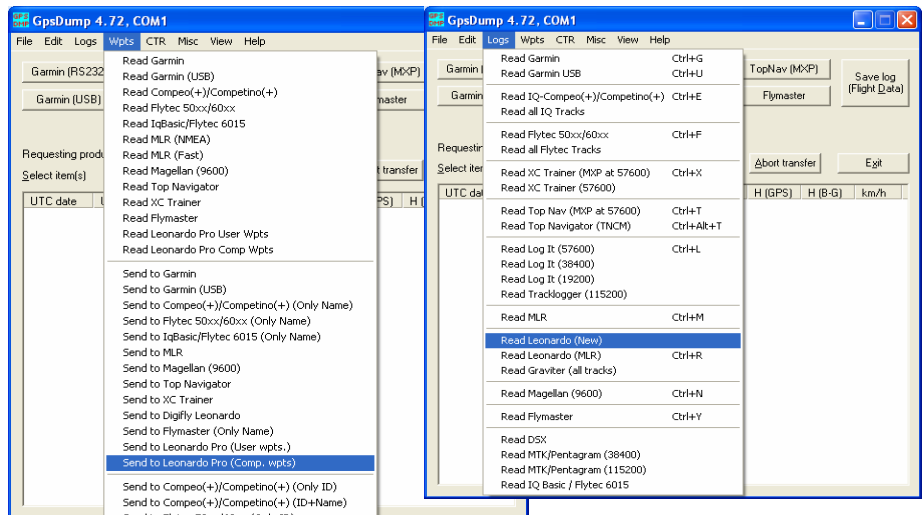

- It is the most diffused software among the free flight organizations to manage competitions, it integrates the "Digifly v66"
- Turn on the Digifly AIR and enter in the menu "AirTools", the blinking message "LINK" indicates that the instrument is waiting for commands from the PC (or MAC).
- These images are some examples of the program's functions.




 15.4 FIRMWARE UPDATE (INSTRUMENT'S software)

- The software (firmware) of your Digifyly instrument can be updated in new versions released on the web site www.digifyly.com. This allows for free to acquire new functions and improvements of your instruments.
- The updates can be installed with the provided USB cable (it is not possible to update the firmware through the Bluetooth connection)

15.5 FIRMWARE UPDATING PROCEDURE

- Verify the full charge of the instrument's battery
- Exit from all the PC programs in execution included the antivirus &/o firewall
- Ensure that the instrument is turned off and connect the USB cable.
- Press and hold the key , then press also the key , wait with the two key presses till the instrument emits a long acoustic "beep". Now the instrument is turned on and is in boot loader mode, waiting for the firmware upload.
- *Note:* the screen will be totally empty.
- Release first the key  and then the key .
- Run on your PC the Digifyly firmware's updating program (e.g. "Upgrade_661a_All.exe")
- Press the button Start.
- Be sure to run only one session of the update program "Upgrade_661a_All.exe" at a time.
- When the program "Upgrade_661a_All.exe" is running, the update progress phases are visible.
- The update requires roughly 5 minutes, once finished your computer will provide an acoustic and visible message.
- When the new firmware upload is finished, press the key  to turn off the instrument and disconnect the USB cable.
- Important! If the update would fail, the instrument's memory could be deleted, so, not working. If this occurs the instrument would quickly discharge the battery BUT IT IS NOT BROKEN.
- To restore the normal functions it is enough to do the update once again (in a case, try to do it from a different PC).
- Using the Digifyly AitTools software it is also possible to upload the help info. This is suggested if the new firmware uploaded on the instruments offers also new parameters in the menu "MAIN-SETUP" e/o "ADV-SETUP".

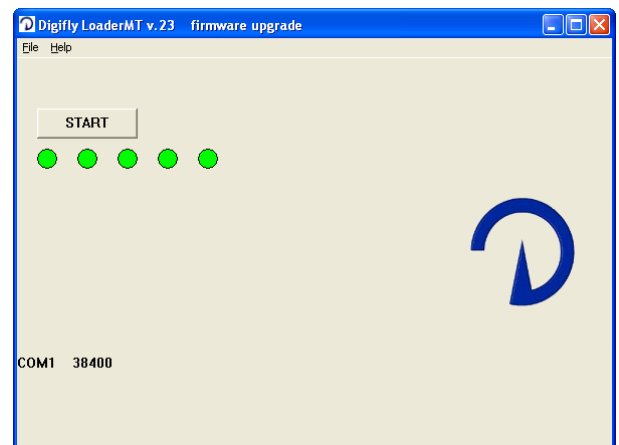

15.6 TELEMETRY DATA OUTPUT

- The models AIR Plus, AIR Pro and AIR Pro BT have the possibility to send data at high speed rate to external devices (up to 8 updates per second). This function is very important, as the instrument can send in “real time” all the flight’s info about altitude, anemometer, variometer and GPS data to various devices such as Smartphone, Tablet, PDA , Car Navigators, Palm, and Pocket PC, to provide the pilot’s remote monitoring or, through alert SMS for “search and rescue”.
- The data can be sent via serial cable, USB or through Bluetooth, find further details on connections and interfaces at chapter 14 "CONNECTIONS, INTERFACES & MEMORY CARD” .
- To activate the real time telemetry output go to ADVANCED SETUP \ n. 24 TELE and select the data format CAR, FL1 or FL2 .

15.6.1 TELEMETRY DATA SELECTION

- Select the telemetry data type with the parameter (ADVANCED SETUP \ n. 24 TELE) :
- TELE=CAR : \$GPGGA , \$GPRMC sent one time per second
- TELE=FL1 : \$GPGGA , \$GPRMC , \$PDGFTL1 sent one time per second
- TELE=FL2 : \$GPGGA , \$GPRMC sent one time per second, \$PDGFTL1 sent 8 times per second
- SETTINGS DATA COMMUNICATION : 38400 baud , no parity , 8 data bit , 1 stop bit
- SENTENCES DESCRIPTION :
- The field Nmea checksum is composed by "*" and 2 hex digits representing the "exclusive OR " \$GPGGA, 161229.487, 3723.2475, N, 12158.3416, W, 1, 07, 1.0, 9.0, M, , , ,0000*18<CR><LF>

Name	Example	Unit	Description
Message ID	\$GPGGA		GGA protocol header
UTC Position	161229.487		hhmmss.sss
Latitude	3723.2475		dmm.mmmm
N/S Indicator	N		N=north or S=south
Longitude	12158.3416		Ddmm.mmmm
E/W Indicator	W		E=east or W=west
Position Fix Indicator	1		See Note 3
Satellites Used	07		Range 0 to 12
HDOP	1.0		Horizontal Dilution of Precision
MSL Altitude	9.0	meters	
Units	M	meters	
Geoid Separation		meters	
Units	M	meters	

Age of Diff. Corr.		second	Null fields when DGPS is not used
Diff. Ref. Station ID	0000		
Checksum	*18		Nmea checksum
<CR><LF>			End of message termination

Note 3 :

- 0 Fix not available or invalid
- 1 GPS SPS Mode, fix valid
- 2 Differential GPS, SPS Mode, fix valid
- 3-5 Not Supported GPS PPS Mode, fix valid
- 6 Dead Reckoning Mode, fix valid

\$GPRMC,161229.487,A,3723.2475,N,12158.3416,W,0.13,309.62,120598,A*10<CR><LF>

Name	Example	Unit	Description
Message ID	\$GPRMC		RMC protocol header
UTC Position	161229.48		hhmmss.sss
Status	A		A=data valid or V=data not valid
Latitude	3723.2475		ddmm.mmmmm
N/S Indicator	N		N=north or S=south
Longitude	12158.341		dddmm.mmmmm
E/W Indicator	W		E=east or W=west
Speed Over Ground	0.13	knots	
Course Over Ground	309.62	degrees	True
Date	120598		ddmmyy
Magnetic Variation		degrees	E=east or W=west
Mode	A		A=Autonomous, D=DGPS, E=DR
Checksum	*10		Nmea checksum
<CR><LF>			End of message termination


\$PDGFTL1,2025,2000,250,-14,45,134,28,65,382,153*3D<CR><LF>

Name	Example	Unit	Description
Baro Altitude QNE(1013.25)	2025	meter	2025 mt
Baro Altitude QNH	2000	meter	2000 mt
Vario	250	cm/sec	+2,50 m/s
Netto Vario	-14	dm/sec	-1,40 m/s
Indicated Air Speed	45	km/h	45 km/h
Ground Efficiency	134	ratio	13,4 : 1

Wind Speed	28	km/h	28 km/h
Wind Direction	65	degree	65 degree
Main Lithium Battery Voltage	382	0.01 volts	3,82 volts
Backup AA Battery Voltage	153	0.01 volts	1,53 volts
Checksum	*3D		Nmea checksum
<CR><LF>			End of message termination


15.7 LK8000

- The AIR models can interface directly the free software LK8000 For every info visit: www.lk8000.it

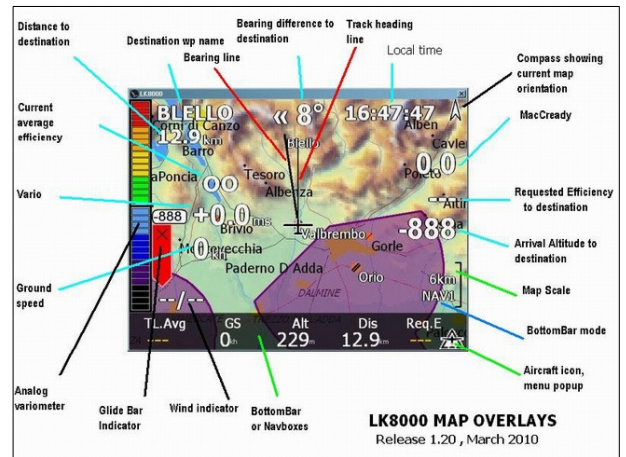

15.8 XCSOAR

- The AIR models can interface directly the free software XCSOAR. For every info visit: www.xcsoar.org

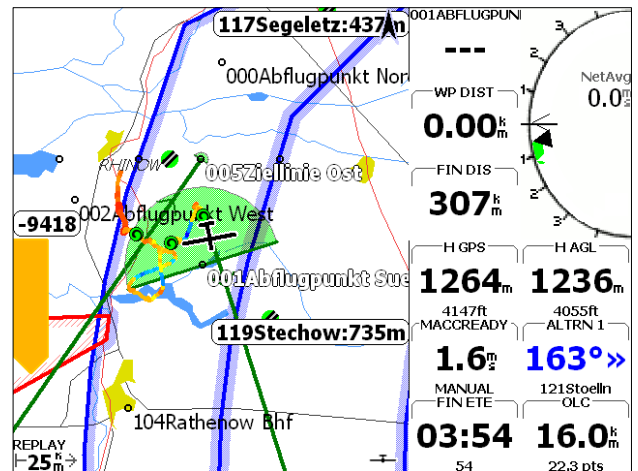

16 APPENDIX

16.1 DIGIFLY AIR STANDARD ACCESSORIES

- The model Digifly Air is shipped with the following standard accessories:
- Protective case.
- Internal rechargeable lithium battery.
- Battery charger (110-220Vca 50-60Hz).
- USB PC cable to download flights, manage other functions and update the firmware directly from Internet

16.2 OPTIONAL ACCESSORIES

- The following optional accessories are available from Digifly:
- Anemometric Sensor Pitot tube
- Hang gliding vario mount
- Paragliding protective case
- 12V plug car recharger cable

16.3 TECHNICAL FEATURES

16.3.1 STANDARD FUNCTIONS

- Graphic altimeter
- Altimeters 9,000 m (29527 ft)
- Super-fast vario with dynamic filter 'IntelliVario'
- Acoustic vario with adjustable levels, volume and tone
- Acoustic vario with "pre-thermal" function
- Analogue vario +/- 24 m/s (4800 ft/min).
- Digital vario +/- 25 m/s (5000 ft/min).
- Vario integrator adjustable from 0 to 60 sec.
- Total energy compensation (with optional Pitot tube)
- Ready for installation of the optional Pitot tube and sensor kit
- Barometer (range 300 to 1200 mB) with user calibration
- Constant battery monitoring.
- Date and time with GPS synchro, chronometer, flight timer.
- Adjustable units of measure.
- 14 Language for help setup

16.3.2 ADVANCED FUNCTIONS

- 3 adjustable polar curves.
- McCready and Equivalent McReady function (with optional Pitot tube).
- Speed To Fly (with optional Pitot tube).
- Netto Vario (with optional Pitot tube).
- Auto zero thermal altimeter

16.3.3 GPS FUNCTIONS

- Integrated high sensitivity GPS receiver 99 channels and 10hz

- Latitude, Longitude, Altitude GPS, Direction GPS (TRK), Ground Speed GPS.
- Wind speed and direction indicator (with GPS).
- Efficiency (Glide Ratio) related to the ground (with GPS ground speed).
- Direction and distance to the last thermal.
- Glide calculator.
- Direction, distance and height to the current Waypoint.
- Direction, distance and height to the GOAL
- Required efficiency (GR) to the current Waypoint.
- Multiflight logger 3D recorder (flight data and GPS) with Autostart, Autostop and Playback
- 100.000 data points flight recorder
- Over 1000 flight recorder hours with 1 data point per minute to 20 hours with 1 data point per second
- Up to 250 recordable flights.
- Compatible with mostly of the competition software programs.
- Automatic FAI cylinder turn point and Start Pylon validation (visual and acoustic).
- 186 Competition Waypoints + 186 User Waypoints
- 12 Routes with 20 Waypoints on each Route.
- Optimized navigation management with shortest task's way indications
- Controlled air spaces (CTR) management prearrangement
- Optional GSM module for telephone sim
- Inertial platform with 3 axis gyroscopes, accelerometers and magnetometers
- Three axis Gmeter
- Three axis magnetic compass

16.3.4 GENERAL SPECIFICATIONS

- High resolution, gray scale, graphic LCD display 320x240 pixel
- Upgradeable Software via internet
- PC Connection
- Ready for installation of the optional Pitot tube and sensor kit
- Integrated Bluetooth module vx.0+EDR - SPP profile
- High speed telemetry output
- Input for external power supply
- Integrated battery charger
- Integrated rechargeable lithium battery
- Battery life 30 hours
- Dimensions (H x L x D) 156mm x 93mm x 19mm
- Weight (with battery) 180g
- The Digifly instruments are supplied with protective case, rechargeable internal lithium battery, wall adapter charger (110-220Vca 50-60Hz) and USB cable
- **Three years warranty.**

16.4 MAIN SET UP MENU PARAMETERS

n	Name	Description	Range	Default	Units
1	CTRS	display contrast	1 - 99	28	%
2	LANG	language selection	USR/ UK /ITA/ESP/DEU/FRA/CZE/HUN/PLN/GRK/TRK		
3	RECM	recorder mode selection	OFF/ALW/AUT	AUT	---
4	R.DS	meters variation start autorecorder	0.1 - 5	0.5	m/s
5	R.TI	seconds variation start autorecorder	1 - 30	3	sec
6	RECR	recorder rate	1 - 60	3	sec
7	UTCO	time zone difference	-15/+15	2	ore
8	HOUR	settaggio orologio ore	0 - 23	---	ore
9	MIN	time setting: hours	0 - 59	---	min
10	DAY	time setting: day	1 - 31	---	days
11	MONT	time setting: month	1 - 12	---	months
12	YEAR	time setting: year	0 - 99	---	years
13	BARX	graphic altimeter scale limit x axis	0.4 - 4	1.0	min
14	BARY	graphic altimeter scale limit y axis	3 - 3000	30	mt
15	U-AL	altimeter units	MT/FT	MT	---
16	U-SP	speed units	KMH/MPH	KMH	---
17	PILO	pilot's name	6 letter	ABCDEF	---
18	GTYP	glider type	6 letter	ABCDEF	---
19	GID	glider id	6 letter	ABCDEF	---

16.5 VARIOMETER SETUP PARAMETERS


 
n	Name	Description	Range	Default	Units
1	V.UP	acoustic vario lift setting	0 - 2.00	0.10	m/s
2	V.PT	acoustic vario pre-thermal setting	0 - 1.50	0.50	m/s
3	V.DN	acoustic vario sink setting	0 - 25.00	3.00	m/s
4	PROF	acoustic vario profiles	FAS/STD/SFT/US1/US2/MAN	MAN	---
5	STYL	rythm style tone in lift	0 - 2	1	---
6	MODH	frequency modulation in lift	1 - 30	4	---
7	PITC	tone rhythm in lift	1 - 8	4	---
8	UPHZ	base frequency in lift	500 - 1400	700	Hz
9	DWHZ	base frequency in sink	350 - 1000	600	Hz
10	FLT1	filter 1	0 - 100	80	%
11	FLT2	filter 2	24 - 96	72	
12	FLT3	filter 3	0 - 100	0	%
13	RVAR	acoustic vario sensitivity	0 - 48	0	---
14	INTE	integrator vario delay	0 - 60	10	sec
15	THEV	thermal detect vario thres.	0 - 5	0.5	m/s
16	THET	thermal detect time thres	1 - 30	10	sec
17	TEC	total energy compensation	0 - 100	0	%
18	SIMV	vario simulator	ON/OFF/FULL	OFF	---
19	AUTV	automatic acoustic vario	OFF/ON	OFF	---



16.6 ADV-SETUP PARAMETERS MENU (ADVANCED SETUP)

The following is a list of parameters that can be adjusted. For each parameter you can see the range of values, the factory setting (default) and the unit of measure.



n	Name	Description	Range	Default	Unit
1	PITO	Pitot tube habilitation	ON/OFF	OFF	---
2	KMAG	Magnetic compass calibration	0 - 100 %	100	km/h
3	KIAS	anemometer calibration	0 - 100 %	100	%
4	KBAR	barometer calibration	+/- 20.0	0.0	mB
5	GCAL	AHRS calibration	MAN/AUT	AUT	
6	GPOS	AHRS spacial position	LEFT/CENT/RIGHT	CENT	
7	EFF	real time medium glide ratio	1 - 30	3	sec
8	EFFA	medium glide r.for HW calc.	1 - 100	15	sec
9	POLA	active polar	OFF/P1/P2/P3	OFF	---
10-11-12		P1-A P1-B P1-C	polar 1 coefficient	xxx	---
13-14-15		P2-A P2-B P2-C	polar 2 coefficient	xxx	---
16-17-18		P3-A P3-B P3-C	polar 3 coefficient	xxx	---
19	MCRA	McCready average time	0.2 - 30	10.0	min
20	MCRE	McCready equiv average time	0.1 - 3	0.4	sec
21	IFLY	intelliflight mode	ON/OFF	OFF	---
22	WSEN	wind calculator sensibility	3 - 15	5	---
23	CORD	GPS coordinates' type lat lon	DMM/DMS/UTM	DMS	---
24	TELE	telemetry output habilitation	OFF/CAR/FL1/FL2	OFF	---
25	BLUT	bluetooth enable	OFF/ON	OFF	---

  16.7 RESTORE FACTORY SETTINGS (DEFAULT PARAMETERS)

- To restore the factory settings (default parameters) and default screen setups, turn on the instrument pressing at the same time the keys  and  until the message "FACTORY SET?" appears.

If you want to confirm press the key  it will appear the message "SETUP RESET". Otherwise, press the key  to quit the restore.

16.8 RESET

- In case of system crash, to reset the instrument, press at the same time the arrow key  and the power on key  for over 4 seconds .

