



DigiMedia Player

User Guide



1. Features

Plug-n-Play

- Display digital photos, watch movies, and playback music files, all without needing a PC or software
- Auto-detection of different media formats

Photo Slideshow

- Display digital photos on a TV or LCD projector or monitor without the use of a digital camera
- Supports JPEG files up to 19 megapixels.
- Digital zoom.
- Up to 25 picture preview mode.
- Automatic slideshow.
- 6 kinds of transition effects, and random transitions mode for slideshows.
- Photo slideshows with background music playback from file.

Playback Video

- MPEG-1, MPEG-2 and MPEG-4 video playback.
- Motion JPEG file playback.

Playback Music

- Music file playback.

File List

- Browse files by Photo, Music, Movie, and File modes.
- Browse all the files using thumbnail previews.

Remote Control

- Volume up/down and mute.
- Previous/next file.
- Play, Pause, and Stop.
- Special key to play music during slideshow

2. Package Contents

- DigiMedia Player
- Remote control




- S-Video cable
- Composite video and audio cable
- Power Adapter
- User Guide

3. Overview of Panels



4. Connect the DigiMedia Player

Connect the composite, S-Video, or VGA output of the DigiMedia Player to the inputs of your TV set, projector, and/or monitor. Connect the power adapter to a power outlet, and then to the power input of DigiMedia Player.

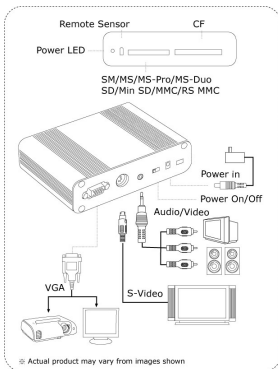

5. Insert Memory Card



Please insert memory cards into the DigiMedia Player.

6. Power DigiMedia Player On/Off

Insert your media card(s), then turn on the DigiMedia Player. To power the DigiMedia Player on and off, you can press the Power button on the back of the DigiMedia Player, or simply press the **Power** button on the remote control.



7. Using Setup Menu

You can enter the Setup Menu by pressing the **Setup** button on the remote control. You can do this at any time when the DigiMedia Player is powered on.



You can set the following options:

PHOTO SETUP

- ▶ Thumbnail Digest (ON/OFF) – When turned on, this will use

available thumbnail information of the JPEG pictures to display preview thumbnails more quickly

- ▶ Transition Mode (Fast/Slow) – Sets how fast you want transition effects to be when changing pictures in a slideshow.

MUSIC SETUP

- ▶ Repeat Mode (One/All/Off) – Sets music files to repeat the current song after it finishes, repeat playing all music files, or not to repeat any songs at all.

VIDEO SETUP

- ▶ Repeat Mode (Off/One/All) - Sets music files to repeat the current movie after it finishes, repeat playing all files, or not to repeat any movies at all (Off).

SLIDESHOW SETUP

- ▶ Slideshow Mode (Manual/Auto) – sets whether you want the slideshow to run automatically, or if you want to control the slideshow manually.
- ▶ Folder Repeat (On/Off) sets whether to repeat showing all files in the current or to only show each image once.
- ▶ Interval Time (1/3/5/10 seconds) – sets how long you want a picture to be onscreen before changing to the next file
- ▶ Transition - Here you can choose what effect to use when changing slides, or to use a random transition every time
- ▶ Auto Start (On/Off) – Sets whether you want slideshows to start and run automatically

PREFERENCES


- ▶ TV Type (NTSC/PAL) – set your analogue TV standard to display to
- ▶ OSD Lang – set the language you want for the OSD on screen display
- ▶ OSD Message (ON/OFF) – set whether you want some OSD messages to appear onscreen(such as PAUSE for example)
- ▶ Defaults – reset Preference settings to defaults

In the main page, use the ▲, ▼, ◀, ▶ buttons on the remote control to move the selection bar, and press **Enter** to set/select the option



8. Photo Slide Show Function

DigiMedia Player can run automatic slideshows of your pictures. To start one, press the **Photo** button to enter Photo mode. The DigiMedia Player will show your photos in a up-to-25 frame preview screen. Press **Enter** on your remote control to start a slide show, and press **Stop** to stop a slide show. To pause, press the **Pause** button. To move to the next slide manually, press **▶**. To go back to the previous slide, press **◀**.

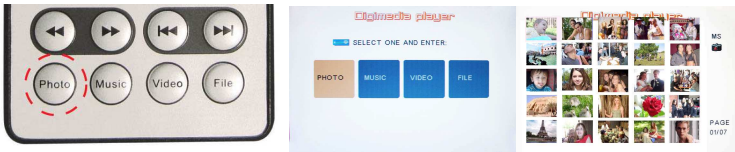

9. Photo Slide Show + Background Music Function

When viewing a photo slide show, you can press **Slide Show MP3** on the remote control to listen music during the slideshow. The DigiMedia Player will start playing any music files on your card starting with the first available one, and will play the music while your slideshow runs.



10. Zoom Function

When viewing a photo, DigiMedia Player provides a function to zoom the photo the photo in or out. Press **Zoom** on the remote control to cycle between 1.0X, 2.0X, 3.0X, 4.0X and no zoom.



11. Playback Music Files Function

DigiMedia Player provides music file playback. To listen to music files, press **MUSIC** on the remote control to see a listing of your music files. Select the file you want to play using the **▲** and **▼** arrow keys, and the **Enter** button to select it. To pause, press the **Pause** button.



12. Playback Video Function

The DigiMedia Player provides movie playback (MPEG 1/2/4). Press **Video** on the remote control to see a thumbnail album of your MPEG 1, 2 and 4 files. Select the file you want to play using the **▲**, **▼**, **◀**, **▶** arrow keys, and the **Enter** button to select it. To pause, press the **Pause** button.



13. File Mode Function

You can view all files on your card by pressing **File** on your remote control. A listing of all your files will appear. Use the **▲** and **▼** arrow keys to select a file or folder, and the **Enter** button to select/play/view it. Selecting a folder will open that folder, and selecting the **..** folder will go back to the previous folder.

