

DVD VCD CD JPG



DVD

Operating
Instructions

7" TWINS PORTABLE TABLET DVD PLAYER



Content

1	PRECAUTIONS.....	01
2	CAUTIONS ON USING THIS PLAYER	04
3	PORTABLE DVD ACCESSORIES.....	06
4	SPECIFICATION.....	07
	TYPES OF DISCS PLAYABLE ON THIS PLAYER.....	07
	PORTABLE DVD SPECIFICATIONS.....	07
	MONITOR ACCESSORIES AND SPECIFICATIONS.....	08
5	PARTS NAME AND FUNCTION.....	09
	FRONT OF THE PLAYER.....	09
	KEYPAD IN THE PLAYER.....	09
	FRONT OF THE MONITOR.....	10
	KEYPAD IN THE MONITOR.....	10
	BACK OF THE PLAYER.....	11
	RIGHT SIDE OF THE PLAYER.....	12
	LEFT SIDE OF THE PLAYER.....	12
	TOP OF THE PLAYER.....	13
	BACK OF THE MONITOR.....	13
	LEFT SIDE OF THE MONITOR.....	14
	REMOTE CONTROL UNIT.....	
6	USING REMOTE CONTROL UNIT.....	16
	PRECAUTIONS BEFORE USING REMOTE CONTROL UNIT.....	16
	RANGE.....	16
	INSTALL BATTERY FOR REMOTE CONTROL UNIT.....	17
7	USING THE BATTERY.....	18
	PRECAUTIONS BEFORE USING THE BATTERY.....	18
	BATTERY STORAGE.....	18
	BATTERY LIFE.....	18
	USING THE BATTERY.....	18
	INSTALLING AND REMOVING THE BATTERY.....	18
	RECHARGING THE BATTERY BY USING AC-DC ADAPTER.....	19
	CAUTIONS WHEN CHARGING THE BATTERY.....	20
8	CONNECTING THE PLAYER TO OTHER COMPONENTS.....	21
	CONNECTING TO AC-DC ADAPTER.....	21
	CONNECTING EARPHONE.....	21
	CONNECTING TO USB STORAGE.....	22
	CONNECTING TO MEMORY CARD.....	22
	CONNECTING TO A TV SET.....	23
	CONNECTING TO AN AMPLIFIER.....	24
	CONNECTING TO AN ACTIVE SPEAKER SYSTEM.....	24
	CONNECTING TO AN AUDIO/VIDEO PLAYER SYSTEM IF YOU WANT THE UNIT AS A MONITOR.....	25
	CONNECT TO A MONITOR.....	27 26

Content

9	BASIC OPERATIONS.....	28
	TURNING ON/OFF THE MAIN UNIT.....	28
	PLACING DISC.....	29
	PLAYING DISCS.....	29
	REMOVING DISCS.....	29
	MODE SETTINGS (BRIGHTNESS/CONTRAST/ COLOR/TFT DISPLAY MODE/TFT REVERSE MODE/AV OUT/IN MODE).....	
	STOPPING THE PLAYING.....	30
	PAUSING THE DISC.....	31
	SCANNING FORWARD AND BACKWARD.....	31
	REPEAT PLAYING THE DISC.....	31
	ZOOM PLAYING.....	32
	PROGRAM PLAYING.....	32
	USING OSD.....	32
	SELECTING A SUB-TITLE.....	33
	SELECTING AN AUDIO.....	34
	SELECTING AN ANGLE.....	34
	PLAYING AUDIO FILES AND JPEG DISC.....	35
	PLAYING THE FILE STORING IN A USB STORAGE.....	36
	PLAYING THE FILE STORING IN A MEMORYCARD.....	36

10	MAIN UNIT SETTINGS.....	37
	SELECTING A TV SYSTEM.....	37
	SETTING SCREEN SAVER.....	37
	SELECTING A TV SCALE.....	38
	SETTING PARENT LOCK.....	38
	SETTING PARENT LOCK LEVEL.....	38
	DEFAULT SETTING.....	39
	SELECTING A OSD LANGUAGE.....	39
	SELECTING AN AUDIO LANGUAGE.....	40
	SELECTING A SUBTITLE LANGUAGE.....	40
	SELECT A MENU LANGUAGE.....	40
11	TROUBLE SHOOTING.....	41

Thank you for purchasing Portable DVD player. Please read this manual carefully before operating and reserve it for future reference. It will be helpful to you if you encounter any operational problem.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE, DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS. DANGEROUS HIGH VOLTAGES ARE PRESENT INSIDE THE ENCLOSURE. DO NOT OPEN THE CABINET. REFER SERVICING TO QUALIFIED PERSONNEL ONLY.

ATTENTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

LASER: This Digital Video Disc player employs a Laser System. To ensure proper use of this product, please read this owner s manual carefully and retain for future reference. Should the unit require maintenance, contact an authorized service location - see service procedure.



Use of controls, adjustments or the performance of procedures other than those specified may result in hazardous radiation exposure.
To prevent direct exposure to laser beam, do not try to open the enclosure. Visible and invisible laser radiation when open and interlocks defeated.
DO NOT STARE INTO BEAM

LASER	
Type	Semiconductor laser GaAlAs
Wave length	650 nm/780nm
Output Power	5mW
Beam divergence	60degree



WARNING:

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION:

Use of controls or adjustments or performance of procedures those specified may result in hazardous radiation exposure.

CAUTION**RISK OF ELECTRIC SHOCK. DO NOT OPEN**

To reduce the risk of electric shock, do not remove cover (or back).
No user serviceable parts inside. Refer servicing to qualified service personnel.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert user to the presence of uninsulated "dangerous voltage" within the product enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**CAUTION:**

INVISIBLE LASER RADIATION WHEN OPEN AND
INTERLOCK FAILED OR DEFEATED.
AVOID DIRECT EXPOSURE TO LASER BEAM.

MACROVISION: This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

FCC NOTICE: This device complies with part 15 of the FCC Rules. Operation is subject of the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

DOLBY: Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

Cautions on Using this Player

2

Do not move the player during playback

During playback, the disc spins at high speed, so do not lift or move the player. Doing so may damage the disc.

Transporting the player

When transporting the player be sure to remove the disc and turn off the power, then unplug the power cord .

Place of installation

Select a stable place near the TV or stereo system to which you are going to connect the player. Do not place the player on top of a TV or color monitor. Install the player away from cassette decks or other devices which are easily affected by magnetic forces.

Do not place objects on top of the player

Do not place any objects on top of the player.

Turn off the power when not using the player

If the player is connected to your TV but not in use then switch the power off this will prevent interference with your normal TV picture. Noise problems may also be experienced if used near a radio.

Special note regarding use of player in vehicles

- Unit must not be used when the vehicle is moving at all.
- Most countries and states have laws which prohibit or severely restrict the use of the player in vehicles while driving.
- Do not leave the player or the battery pack in places where the temperature is extremely low (about -10°C or lower) or extremely high (about 60°C or higher), such as inside the passenger cabin or trunk in midsummer. Doing so may warp the outer case or reduce the performance or quality of the battery pack.

When carrying on planes

Heed the airline company's rules.

When carrying in hospitals

Heed the hospital's rules

Cautions on Using this Player

2

When using with car power cable in cars

Please turn on the engine and then connect with the car power cable for using.

Cleaning the player

Normally clean the player using a soft, dry cloth. For tough dirt, apply some neutral detergent diluted in 5 to 6 parts water to a soft cloth, wring out thoroughly, wipe off the dirt, then wipe the player with a dry cloth. Note that alcohol, thinner, benzene, insecticides, etc., may cause the print or coating to peel off. Also avoid leaving rubber or plastic products in contact with the player for long periods of time, as this may damage the cabinet. When using chemically treated cloths, read the cloth's instructions carefully. Always unplug the power cord from the power outlet before cleaning the player.

To clean dirt off the liquid crystal display, wipe the display gently with a soft, dry cloth (such as an eyeglass cleaning cloth). Note that leaving water droplets on the display for long periods of time may result in discoloration or stains. For tough dirt, use a commercially available liquid crystal display cleaner.

Copyrights

Unauthorized duplication, broadcast, public performance or rental of discs is prohibited by law.


Portable DVD Accessories

After unpacking, check that all the accessories listed below are included.

AC/DC adapter




AV Cable

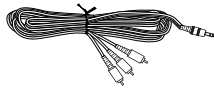

Ear phone



 
Car power cable



Operating instructions



Card-type remote control unit

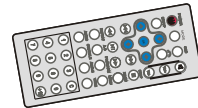

AC&DC Cable



3

Portable DVD Specifications

The discs listed on the below can be played on this player without any adapter



DVDs 8cm/12cm;



Vedio CDs 8cm/12cm;



Audio CDs 8cm/12cm;



JPG CDs 8cm/12cm.

Noted:



- Don't using the disc that is scratched seriously

Specifications

Disc type	DVD Video Video CD CD-DA JPEG
Audio output	LINE OUT (20Hz-20kHz) Earphone output
Video output	Video output Video output: 1.0Vpp/75ohm
LCD panel	7" color TFT
Power	AC-DC adapter 12V/1.2A Rechargeable AA 1.2V battery
Unit size	220mmX150mmX34.5mm
Weight	665g
Working temperature	5 °C~45 °C

Monitor accessories and specifications

After unpacking, check that all the accessories listed below are included.

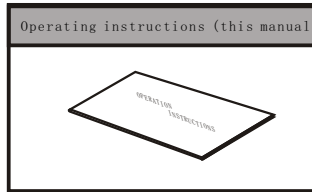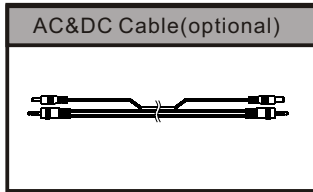

4


Specifications

Audio input	1Vrms-2Vrms
Video input	1.0Vpp/75ohm
Power	DC 12V/0.6A
Earphone output	20Hz-20kHz


LCD panel	7" color TFT
Unit size	220mmX150mmX34.5mm
Weight	470g
Working temperature	5 °C~45 °C

Portable DVD parts name and function

Front of the player

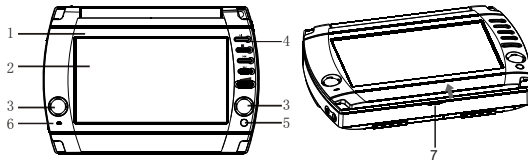

Keypad of the main unit

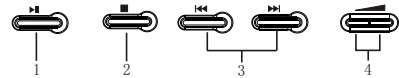


1. TFT cover
2. LCD display
3. Speakers
4. Control keypad
5. IR receiver window
6. Power LED indicator
 - LED light: Power switch is on
 - LED off: Power switch is off
7. Open TFT cover
 - Pull the part according to the direction then open the TFT cover.

1. Button
 - Press this to play disc. When press this in the play mode, pause mode is set. Press again to resume playback.
2. Button
 - Press this to stop play mode
3. Buttons
 - Using these buttons to scan backward or forward through the tracks or chapters.
4. Button
 - Press these buttons to increase/decrease the volume when the main unit is in play mode.

5

Monitor parts name and function


Front of the monitor

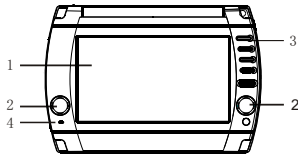

1. LCD display
2. Speakers
3. Control keypad
4. Power LED indicator

- LED light: Power switch is on
- LED off: Power switch is off


Keypad of the monitor

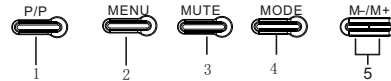

1. P/P Button
 - Press the button to set BRIGHT or PASTEL or VIVID or STANDARD or NORMAL.
2. MENU Button
 - Press the button to select Brightness, Contrast,color,then use M-/M+ buttons to adjust.
3. MUTE Button
 - Press the button to mute the audio output.
4. MODE Button
 - Press the button to select screen NORMAL L TO R or NORMAL R TO L or REVERSE L TO R or REVERSE R TO L,then use M-/M+ buttons to adjust .
5. M-/M+ Buttons
 - Press these buttons to increase/decrease the volume when the monitor is in play mode.
 - Press these buttons to adjust Brightness, Contrast,Color.
 - Press these buttons to adjust screen mode.

Portable DVD parts name and function

Back of the player

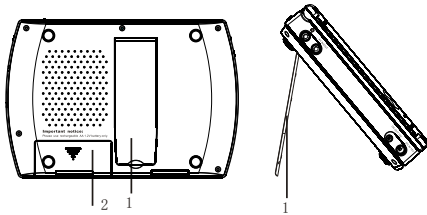


1. Support

Pull out the support to the proper position in order to let the unit stand.

2. Battery cover

Open the battery cover and place six rechargeable AA 1.2V batteries into it.

right side of the player

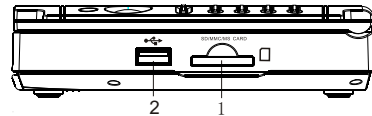


1. Memory card socket (optional)
Suit for SD/MMC/MS card reader

2. USB (1.1) socket (optional)
connecting USB storage

Portable DVD parts name and function

Left side of the player

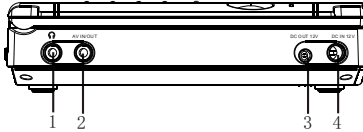

1. Earphone jack,
connecting to earphone
2. Audio/Video input or output,
input/output audio/video signal
3. 12V DC output
Connecting to the monitor.
4. 12V DC input
Connecting to the AC-DC adapter or car
adapter.

Top of the player




1. Power switch
Turn ON/OFF the unit

5

Monitor parts name and function


Back of the monitor

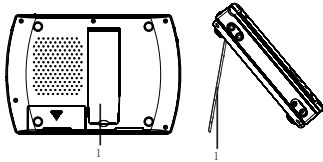

1. Support

Pull out the support to the proper position in order to let the unit stand.

Top of the monitor

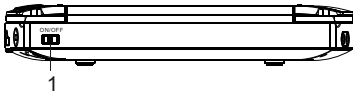


1. Power switch

Turn ON/OFF the unit

- Push power switch to ON to turn on the monitor when the unit is power,
 - power indicator led light.
- Push power switch to OFF to turn off the monitor, power indicator led off.

Left side of the monitor

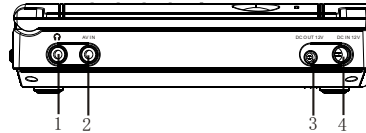






1. Earphone jack
connecting to earphone
2. Audio/Video input
Input audio/video signal
3. 12V DC output
4. 12V DC input
Connecting to the DVD Player.

5

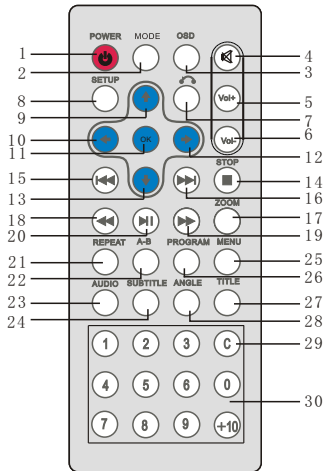Portable DVD parts name and function

Remote control unit



- 1  Power on/off the unit
- 2 MODE
Press **this** to switch LCD mode
- 3 OSD
Press this buttons to display the disc and playing information in the LCD
- 4  Switch off the speakers or earphone
- 5 VOL+
Increasing the volume
- 6 VOL-
Decreasing the volume
- 7  Return to menu.
- 8 SETUP
Set up menu when the unit in play mode
- 9  Moving cursor Up

5

Portable DVD parts name and function

Remote control unit

- | | | | | | | | | |
|----|------|---|----|----------|---|----|-------------|---------------------------------------|
| 10 | ← | Moving cursor left | 20 | ⏪ | Press this to play or pause | 27 | Title | Displaying DVD title |
| 11 | OK | Confirm settings | 21 | REPEAT | DVD: repeat play the title, chapter
VCD, CD: repeat the track or whole disc | 28 | Angle | Press this to select the DVD angle |
| 12 | ⇒ | Moving cursor Right | 22 | A-B | Press this to set A point, press again to set B point, then the unit starts playing from A to B repeated. Press for the 3'rd time to cancel the A-B play. | 29 | C | Clearing the digit that is just input |
| 13 | ↓ | Moving cursor down | 23 | Audio | DVD: selecting audio language
VCD or CD: Selecting the audio channel | 30 | DIGIT INPUT | |
| 14 | ■ | Stop playing disc | 24 | SUBTITLE | Selecting sub-title | | | |
| 15 | ⏮ | Skip previous track/chapter | 25 | MENU | Menu play | | | |
| 16 | ⏭ | Skip next track/chapter | 26 | PROGRAM | Programming the play sequence | | | |
| 17 | ZOOM | Zooming the picture | | | | | | |
| 18 | ⏮ | Press this for fast backward play when the unit is in play mode | | | | | | |
| 19 | ⏭ | Press this for fast forward play when the unit is in play mode | | | | | | |

USING REMOTE CONTROL UNIT

Precautions before using remote control unit



- Please pull out the PVC when the remote control unit is used for the first time.
- Don't drop or step on the remote control unit or subject it to shocks
- Note that it may not be possible to operate the main unit if there are obstacles between it and the remote sensor
- Don't expose the remote sensor to strong light.
- Using the remote control unit within the specified operating range.

Remote control unit operating range

<1> Horizontal: $\pm 30^\circ$

<2> Vertical: $\pm 30^\circ$

<3> Distance: 5m

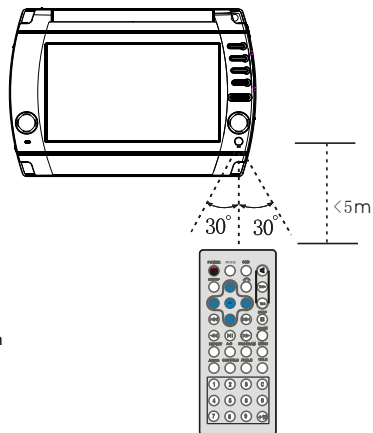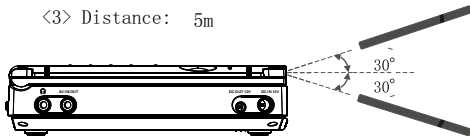

Note:


- Most of the player's functions can be performed from the remote control unit. Some operations, however, can only be performed from the main unit.

6

USING REMOTE CONTROL UNIT

Replacing the battery

- 1 Place your finger nails onto A on the diagram below, push A according to the direction, then open the battery cover .

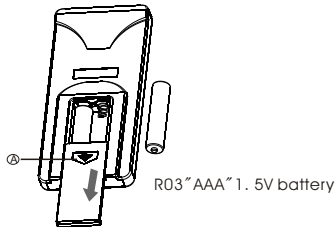

- 2 Remove the old battery, then insert the new battery into the battery holder with the + side correctly.
- 3 Fit the battery holder back to its place.

Note:

- To prevent leakage of fluid from the battery, remove the battery when not using the remote control unit for long periods of time (one month or more). If the battery leaks fluid, carefully wipe it out of the battery case, then change to a new battery.

USING THE BATTERY

Precautions before using the battery

- Please fully charge the battery unit before using it for the first time. The rechargeable time is about 12-15 hours.
- When the battery unit is recharged in a hot environment, it may not recharge fully
- The battery unit becomes hot after recharging, but this is not malfunction.
- To prevent leakage of fluid from the battery, remove the battery when not using the unit for long periods of time (one month or more). If the battery leaks fluid, carefully wipe it out of the battery case, then change to new batteries.

Battery storage

- Please place the battery in a proper environment (15°C-25°C). To avoid place the battery in a hot or lower temperature environment.
- Please recharge one time every year if the battery is not used in a long time.

Battery life

- The battery unit can be used for about 300 cycles of recharging and operations, though this is variable depending on the operating conditions.

Using the battery

- The main unit can be playing over 1.5 hours if the battery is fully recharged.
- The picture may be unstable if the battery power is not enough.

7

USING THE BATTERY

Installing and removing the battery

1. Please install the battery as following:



- <1> Push A of the battery cover (back of the player) according to the direction;
- <2> Place the battery into the battery slot, make sure that + side of the battery is connected to the battery slot correctly ;
- <3> Tighten the battery cover.

Note:

- Please use rechargeable AA 1.2V/1800mAh(up) battery only.

2. Please remove the battery as follows:

- <1> Turn off the player;
- <2> Push A according to the direction;
- <3> Take out the battery.

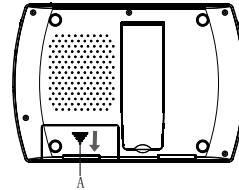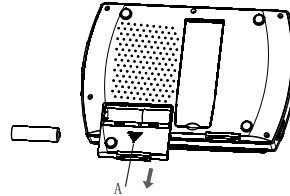


USING THE BATTERY

Recharging the battery by using AC-DC adapter

Please recharge the battery as follows:

- 1 Install the battery
- 2 Connect the AC-DC adapter to the player

- The charging time is around 16 hours

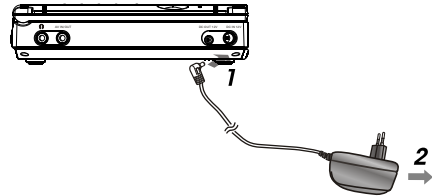

Cautions when charging the battery

- The temperature during recharging affects the recharging efficiency.
- Recharging is most efficient between temperatures of 10°C - 30°C.
- To protect the battery unit, do not recharge a fully charged battery unit repeatedly.
- Repeated overcharging the battery may deteriorate the battery performance. When the battery unit is hot, it may take longer than usual time for recharging or may sometimes be unable to be recharged. Wait for the battery unit to cool down before retrying recharging.

7


CONNECTING THE PLAYER TO OTHER COMPONENTS

Connecting to AC-DC adapter


1. Please plug the AC-DC adapter to AC power socket;
2. Connecting the DC output of adapter to DC in of the main unit.

Note:

- AC-DC adapter specification: 12V/1.0A
Please use the adapter that comes as standard accessory of the main unit.

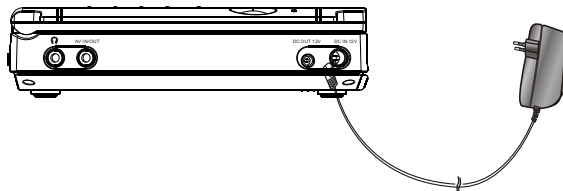


Connecting earphone

- Connect the earphone plug securely to the earphone jack of the main unit.
- To listen to the audio, using  to adjust the volume to a comfortable level.

Note:

- Please do not use DTS disc. Strong noise is produced when DTS discs are played.

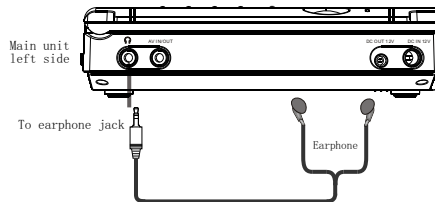

Note:

- Insert the earphones plug securely. No sound will be heard unless the earphones are securely connected.


CONNECTING THE PLAYER TO OTHER COMPONENTS

Connecting to USB storage (optional)

- 1 Please connect the USB storage to the USB terminal of the main unit
- 2 The main unit can read the contents of the USB storage automatically

Note:

- The USB terminal of the main unit supports USB 1.1 only.
- The main unit can read the contents of USB storage when there is no disc in the main unit.

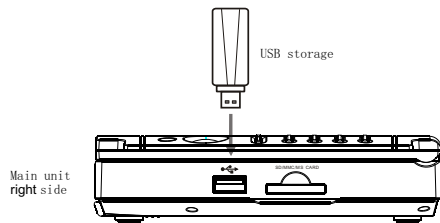


Connecting to memory card (SD/MMC/MS) (optional)

- 1 Please insert the memory card to the memory socket of the main unit
- 2 The main unit can read the contents of the memory card automatically

Note:

- Please insert the memory card in the right direction.
- The main unit can read the contents of the memory card when there is no disc in the main unit.

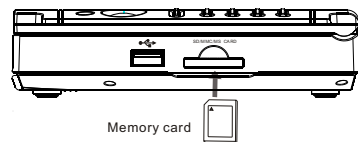


CONNECTING THE PLAYER TO OTHER COMPONENTS

Before connecting

Turn off the power of the player and the devices to be connected.

Connecting to a TV set

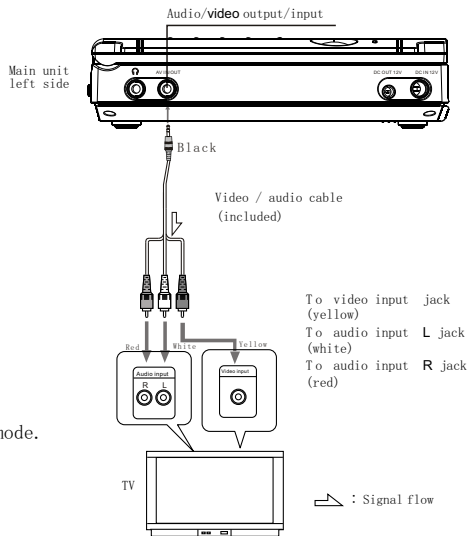

Note:


- Please set the main unit to AV output mode.

CONNECTING THE PLAYER TO OTHER COMPONENTS

Connecting to a digital amplifier


Notes:

- Do not play DVDs when the audio settings are not correct. This may cause strong noise and damage your speakers.

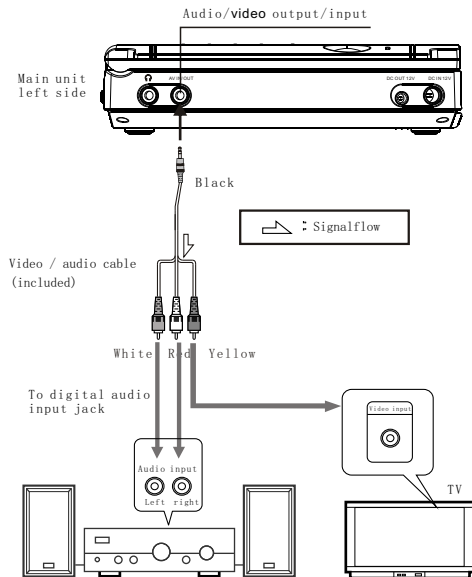

CONNECTING THE PLAYER TO OTHER COMPONENTS

Connecting to active speaker systems

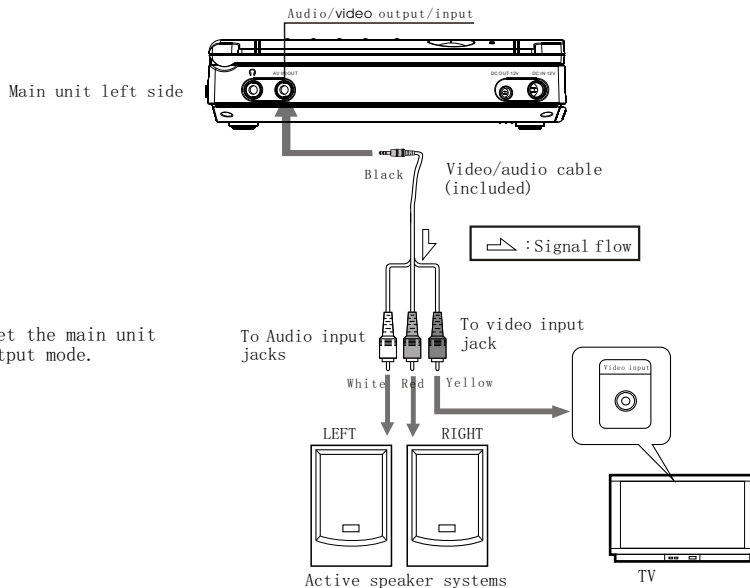


Note:

- Please set the main unit to AV output mode.

CONNECTING THE PLAYER TO OTHER COMPONENTS

Connecting to a Audio/Video player system if you want the unit as a monitor

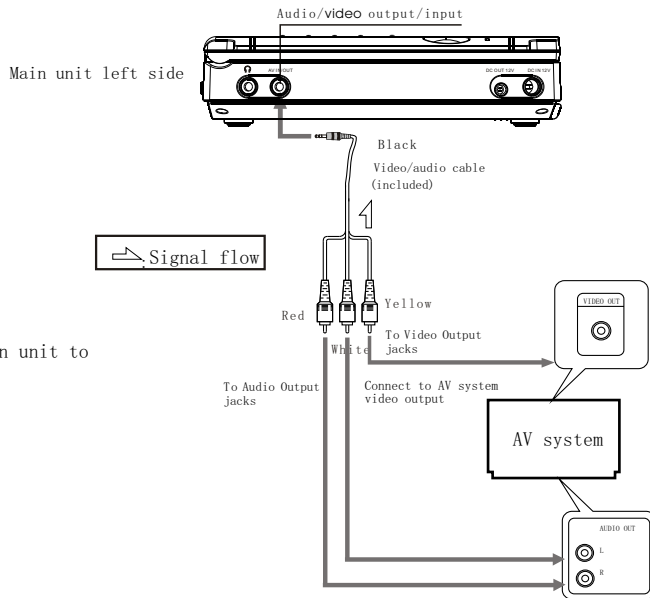


Note:

- Please set the main unit to AV input mode.

CONNECTING THE PLAYER TO OTHER COMPONENTS

Connecting to a monitor

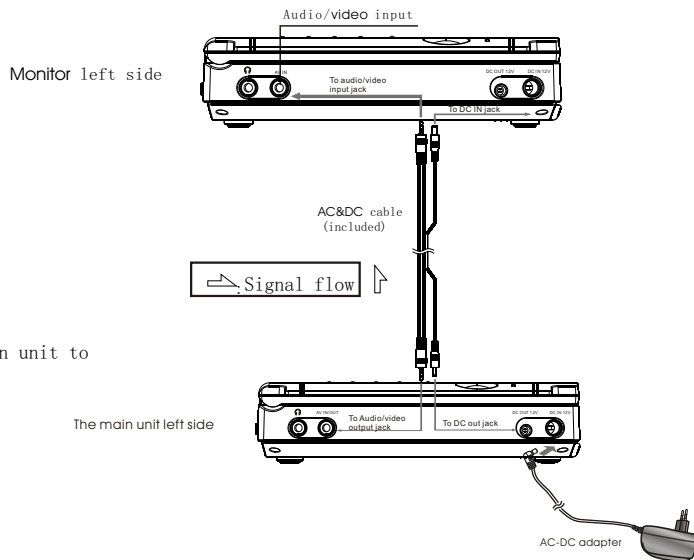

Note:

- Please set the main unit to AV input mode.

BASIC OPERATIONS


Turning on/off the main unit

1 Turn power on


- Push **power switch to ON** (main unit) to turn on the unit when the unit is powered, power indicator led **light**.

2 Turn power off

- Press **POWER** (remote control unit) or **push power switch to OFF** (main unit) to turn off the unit, power indicator led **off**.

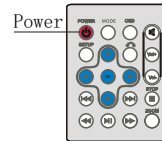

Placing discs

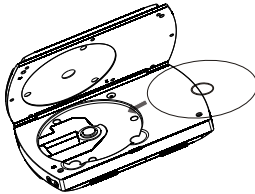

1. Power on the player
2. Open the TFT cover
3. Placing the disc
4. Close the TFT cover

Note:

- Please place the disc carefully
- Please don't use a bad disc

Playing discs

1. Reading disc,
2. The disc will be played automatically
3. Press PLAY to start to play

Removing disc

- 1 Press STOP to stop play
- 2 Open the TFT cover
- 3 Take out the disc
- 4 Close the TFT cover

BASIC OPERATIONS


Mode settings (Brightness/Contrast/Color/TFT display mode/TFT Reverse mode/AV out/in mode(optional))

Please press MODE (remote control unit) to select a suitable mode when the main unit is in play mode.

- 1 Press MODE, setting brightness;
- 2 Press MODE, setting contrast;
- 3 Press MODE, setting color;
- 4 Press MODE, setting LCD display mode;
- 5 Press MODE, setting reverse mode;
- 6 Press MODE, setting AV output/input mode(optional)
 - The unit will stop play the disc when it is in AV input mode
 - Please do not connect signal input when the unit is in AV output mode
 - AV output mode is default mode.

Note:

Please press  (In the remote control unit) to adjust.

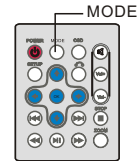

BASIC OPERATIONS

Stopping the playing

- 1 Press STOP to pause the playing, the unit can memorize the **stop** point
- 2 Press PLAY to continues play from the pausing point
- 3 Press STOP to stop the disc




Note:

- This function is not available for all disc.


Pausing the disc

- 1 Press PLAY/PAUSE to pause the playing when playing
- 2 Press PLAY/PAUSE to continues playing

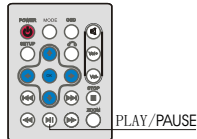

Scanning forward and backward

1. Press ◀/▶ (remote control unit)
1.5 seconds for fast playing in forward/backward direction:
2. Change the playing speed to X2, X4, X8, X20 and normal **with every push** of REV/FWD on the remote control unit.

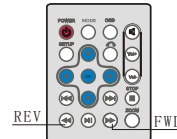


BASIC OPERATIONS

Repeat playing the disc

1 A-B play mode

- Press A-B, the LCD will show Repeat A-
- Press A-B again, the main unit will repeat the play from A to B.
- Press A-B again, the unit will resume normal playing.

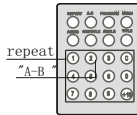


2 Repeat playing the title, chapter or track

- Press REPEAT to select the title, chapter or track when the unit is in play mode
- DVD: title, chapter; VCD or CD: track.

Zoom playing

- Press ZOOM every times, the picture will change to 2X, 3X, 4X, 1/2X, 1/3X, 1/4X and normal.

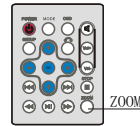

BASIC OPERATIONS

Program playing

The main unit may play the list according to the following program list:

1. Press PROGRAM, the menu will show:

Hint:

- T is for Title, C is for Chapter for DVD disc.
- T for track for CD, VCD.

PROG			
T	C	T	C
1	---	5	---
2	---	6	---
3	---	7	---
4	---	8	---


Play Clear Exit

PROG			
T	C	T	C
1	01	5	---
2	02	6	---
3	---	7	---
4	---	8	---

Play Clear Exit

Note:

There is no title, chapter or track for some disc.

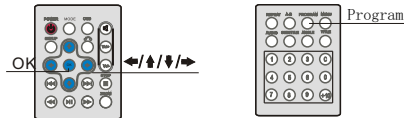

2. Using $\leftarrow/\uparrow/\downarrow/\rightarrow$ and cursor to select the desired list. See the picture.

3. Using the cursor key to move the cursor to the PLAY icon, and press **OK** to start playing the list
4. Using the cursor key to move the cursor to the CLEAR icon, and press **OK** to clear the play list.
5. Press PLAY/PAUSE or select the EXIT icon and press **OK** to exit program menu.

Note:

- The program list will be canceled when the main unit is powered off or the disc is ejected.
- There is no program function for some disc.
- The unit can not play the list if you select the item that does not exist in the disc.

BASIC OPERATIONS


Using OSD

1. Press OSD to show the playback and disc information on the LCD when the main unit is in play mode
2. Press OSD again to disable the function.




Selecting an audio language

1. Press AUDIO to select the audio language when the main unit is in play mode for DVD disc
2. Press AUDIO to select the audio channel when the main unit is in play mode for VCD, CD disc.

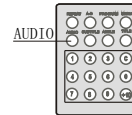


Selecting a sub-title

Press SUBTITLE to select the sub-title languages when the main unit is in play mode

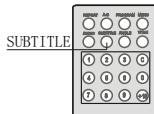


Selecting an angle

Press ANGLE to select the play angle when the main unit is in play mode for DVD disc, there is no function for other discs.

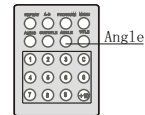
 


BASIC OPERATIONS

Playing audio files and JPEG disc

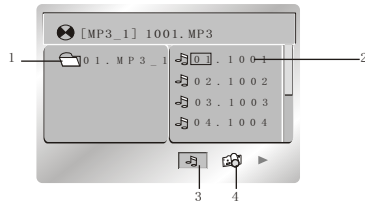

1.  Directory
2.  File
3.  Audio icon
4.  JPEG icon

- Using the cursor key $\uparrow/\downarrow/\leftarrow/\rightarrow$ to move the cursor to the directory, file,  or JPEG icon
- Selecting  icon and press **OK** if you want to play **audio files**, selecting JPEG icon and press **OK** if you want to play JPEG
- Selecting a file and press **OK** if you want to play the file.
- Press **PLAY/PAUSE** to play sequence
- Press **A-B** to repeat A-B playing.

Note:


- The LCD will Turn off when there is no **activity** on the unit for over 3 minutes when playing CD.
- LCD will be on for any operation on the unit .

BASIC OPERATIONS

Playing the file storing in a USB storage(optional)

Connect **on** the USB storage to the USB socket of the main unit, the file stored in the storage will be read automatically.

1. Power on the unit, connecting the USB storage to USB socket. (in no disc mode)
2. “READ USB” will be shown in LCD and the files will be displayed in the LCD when the unit finished the reading.

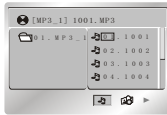

3. Operation is like playing audio files or JPEG files
4. Please remove the USB storage directly when not using the USB storage

Audio, video and JPEG file can be played on this unit


Note:

- USB in this unit is USB 1.1
- The unit must be in no disc mode when the file stored on the USB is played.

Playing the file storing in a memory card(optional)

Please insert the card (SD, MMC and MS) in to the socket. The file will be played automatically.

1. Power on the unit, inserting the card in to the socket. (in no disc mode)
2. “READ CARD” will be shown on the LCD and the files will be displayed on the LCD when the unit finished the reading.

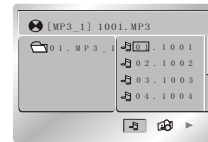

The SD , MMC and MS can be read in this unit

Note:

- The unit must be in no disc mode when the file stored on the card is played


MAIN UNIT SETTINGS

Press SETUP when the main unit is in play mode. The set up menu will be displayed in LCD.

Selecting a TV system

Please select the proper video signal system if you want to watch with a TV set.


- NTSC: please select this item when TV set is NTSC system TV set
- PAL: please select this item when TV set is PAL system TV set
- Default:NTSC

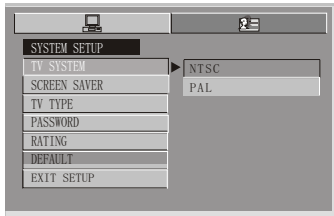

Setting screen saver

This function can protect the TFT life if the unit stays in stop for more than 1 minutes.

- ON: screen saver enable
- OFF: screen saver disable
- Default: ON

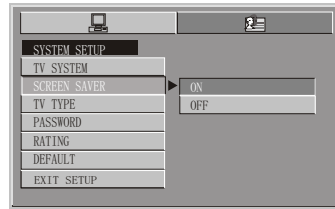


Note:

- The picture may be a grey picture if the system is not correctly set.

MAIN UNIT SETTINGS


Selecting a TV scale

- 16:9 : Please select this item when connecting this unit to a 16:9 TV set.
- 4:3LB : Please select this item when connecting this unit to a normal TV set.
- 4:3PS : Please select this item when connecting this unit to a normal TV set.

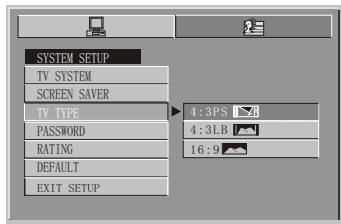

Setting parent lock

1. Default setting: 0000
2. When unlock, new parent lock can be input and select the parent lock level

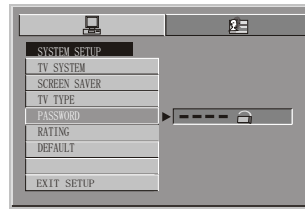

Note:

- Picture scale is depending on the disc.

MAIN UNIT SETTINGS

Setting parent lock level

This setting can control the unit play parent lock DVD disc.

- Level is divided into 8 level
- Selecting ADULT, the lock is cancel
- Default: ADULT




Note:

- The parent lock level can not be set if the parent lock is locked.

Default setting

To restore the factory setting, please select this item and press OK

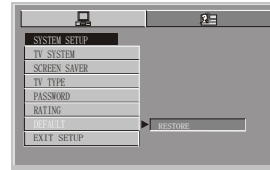

MAIN UNIT SETTINGS

Selecting a OSD language

Please enter the OSD language select menu, use cursor key \uparrow/\downarrow to move the cursor to the **desired** language and press **OK**



Selecting an audio language

Please enter the audio language select menu, use cursor key \uparrow/\downarrow to move the cursor to the **desired** language and press **OK**



Selecting a sub-title language

Please enter the sub-title language select menu, use cursor key \uparrow/\downarrow to move the cursor to the **desired** language and press **OK**



Select a menu language

Please enter the menu language select menu, use cursor key \uparrow/\downarrow to move the cursor to the **desired** language and press **OK**



Note:

- The language will be the disc default language if the language you want is not visible
- Default language: English

Trouble shooting

Please refer the following instruction when there are some problem with this unit. If the problem still exit, please consult your nearest service center.

PROBLEM	POSSIBLE REASON	SOLUTION
Disc can not play	Disc error	Place disc in right direction
	Disc dirty or scratch	Using good disc
	Area code error	Using right area code disc
No picture in TV	Cable loosen	Insert the cable again
	Setting error	Set TV or this unit correctly
Speaker no sound	Earphone in use	Removing earphone
No sound in TV or amplifier	Cable loosen	Insert the cable again
	Connecting cable error	Connecting cable correctly
Different volume for DVD/CD disc	Disc recording in different way	Adjust volume level

