

DENVER[®]
ELECTRONICS

DVD VCD CD MP3 JPG



DVD

**Operating
Instructions**

PORTABLE TABLET DVD PLAYER

MT-768



Content:

1	PRECAUTIONS.....	03	7	USING THE BATTERY.....	17
2	CAUTIONS ON USING THIS PLAYER	05		PRECAUTIONS BEFORE USING	
3	CHECKING ACCESSORIES.....	07		THE BATTERY	17
4	SPECIFICATION.....	08		BATTERY STORAGE.....	17
	TYPES OF DISCS PLAYABLE ON THIS			BATTERY LIFE.....	17
	PLAYER.....	08		USING THE BATTERY.....	17
	SPECIFICATIONS.....	08		INSTALLING THE BATTERY.....	18
5	PART NAMES AND FUNCTIONS.....	09		REMOVING THE BATTERY.....	18
	PART IN THE FRONT OF THE MAIN UNIT.....	09		RECHARGING THE BATTERY BY USING	
	PART IN THE LEFT SIDE OF THE MAIN UNIT.....	09		AC-DC ADAPTER.....	19
	PART IN THE TOP OF THE MAIN UNIT.....	09		CAUTIONS WHEN CHARGING THE BATTERY.....	19
	MAIN UNIT CONTROL SECTION.....	10	8	CONNECTING THE PLAYER TO OTHER	
	PART IN THE BACK OF THE MAIN UNIT.....	11		COMPONENTS.....	20
	PART IN THE BOTTOM OF THE MAIN UNIT.....	11		CONNECTING TO AC-DC ADAPTER.....	20
	PART IN THE BATTERY.....	12		CONNECTING EARPHONE.....	20
	REMOTE CONTROL UNIT.....	13		CONNECTING TO USB STORAGE.....	21
6	USING REMOTE CONTROL UNIT.....	15		CONNECTING TO MEMORY CARD (SD/MMC/MS).....	21
	PRECAUTIONS BEFORE USING REMOTE			CONNECTING TO A TV SET.....	22
	CONTROL UNIT.....	15		CONNECTING TO A N AMPLIFIER THAT HAS NOT	
	REMOTE CONTROL UNIT OPERATING			THE DIGITAL AUDIO DECODER	
	RANGE.....	15		(DOLBY/DTS/MPEG).....	23
	INSTALL BATTERY FOR REMOTE			CONNECTING TO AN AMPLIFIER THAT HAS DIGITAL	
	CONTROL UNIT.....	16		AUDIO DECODER (DOLBY/DTS/MPEG).....	24
				CONNECTING TO A ACTIVE SPEAKER SYSTEM..	25
				CONNECTING TO A AUDIO/VIDEO PLAYER	
				SYSTEM.....	26

Content:

9	BASIC OPERATIONS.....	27	10	MAIN UNIT SETTINGS.....	37
	TURNING ON/OFF THE MAIN UNIT.....	27		SELECTING A TV SYSTEM.....	37
	PLAYING DISCS.....	28		SETTING SCREEN SAVER.....	37
	REMOVING DISCS.....	28		SELECTING A TV SCALE.....	38
	MODE SETTINGS (BRIGHTNESS/CONTRAST/ COLOR/TFT DISPLAY MODE/TFT REVERSE MODE/AV OUT/IN MODE/VOLUME).....	29		SETTING DIGITAL AUDIO OUTPUT.....	38
	STOPPING THE PLAYING.....	30		SETTING PARENT LOCK.....	39
	PAUSING THE DISC.....	30		SETTING PARENT LOCK LEVEL.....	39
	SCANNING FORWARD AND BACKWARD... ..	30		SETTING FM TRANSMITTER (OPTION).....	39
	SLOW PLAYING THE DISC.....	30		DEFAULT SETTING.....	39
	REPEAT PLAYING THE DISC.....	31		SELECTING A OSD LANGUAGE.....	40
	SEARCHING THE DISC.....	31		SELECTING AN AUDIO LANGUAGE.....	40
	ZOOM PLAYING.....	31		SELECTING A SUBTITLE LANGUAGE.....	40
	PROGRAM PLAYING.....	32		SELECT A MENU LANGUAGE.....	40
	USING OSD.....	33	11	TROUBLE SHOOTING.....	41
	SELECTING A SUB-TITLE.....	33			
	SELECTING AN AUDIO.....	33			
	SELECTING AN ANGLE.....	33			
	PLAYING MP3 AND JPEG DISC.....	34			
	PLAYING THE FILE STORING IN A USB STORAGE.....	35			
	PLAYING THE FILE STORING IN A MEMORY CARD.....	35			
	USING FM TRANSMITTER (OPTION).....	36			

Precautions

1

Thank you for purchasing Portable DVD player. Please read this manual carefully before operating and reserve it for future reference. It will be helpful to you if you encounter any operational problem.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE, DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS. DANGEROUS HIGH VOLTAGES ARE PRESENT INSIDE THE ENCLOSURE. DO NOT OPEN THE CABINET. REFER SERVICING TO QUALIFIED PERSONNEL ONLY.

ATTENTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

LASER:

This Digital Video Disc player employs a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain for future reference. Should the unit require maintenance, contact an authorized service location - see service procedure.



Use of controls, adjustments or the performance of procedures other than those specified may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure. Visible and invisible laser radiation when open and interlocks defeated.

DO NOT STARE INTO BEAM

LASER

Type	Semiconductor laser GaAlAs
Wave length	650 nm/780nm
Output Power	5mW
Beam divergence	60degree

**CLASS 1
LASER PRODUCT**

Precautions

1

WARNING:

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION:

Use of controls or adjustments or performance of procedures those specified may result in hazardous radiation exposure.

CAUTION

RISK OF ELECTRIC SHOCK. DO NOT OPEN

To reduce the risk of electric shock, do not remove cover (or back).
No user serviceable parts inside. Refer servicing to qualified service personnel.



The lightning flash with arrowhead symbol, with in an equilateral triangle, is intended to alert user to the presence of uninsulated dangerous voltage within the product enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.



CAUTION:

INVISIBLE LASER RADIATION WHEN OPEN AND
INTERLOCK FAILED OR DEFEATED.
AVOID DIRECT EXPOSURE TO LASER BEAM.

Cautions on Using this Player

2

Do not move the player during playback

During playback, the disc spins at high speed, so do not lift or move the player. Doing so may damage the disc.

Transporting the player

When transporting the player be sure to remove the disc and turn off the power, then unplug the power cord .

Place of installation

Select a stable place near the TV or stereo system to which you are going to connect the player.
Do not place the player on top of a TV or color monitor. Install the player away from cassette decks or other devices which are easily affected by magnetic forces.

Do not place objects on top of the player

Do not place any objects on top of the player.

Turn off the power when not using the player

If the player is connected to your TV but not in use then switch the power off this will prevent interference with your normal TV picture.
Noise problems may also be experienced if used near a radio.

Special note regarding use of player in vehicles

- We strongly advise against using the player while driving.
- Most countries and states have laws which prohibit or severely restrict the use of the player in vehicles while driving.
- Do not leave the player or the battery pack in places where the temperature is extremely low (about -10 °C or lower) or extremely high (about 60 °C or higher), such as inside the passenger cabin or trunk in midsummer. Doing so may warp the outer case or reduce the performance or quality of the battery pack.

When carrying on planes

Heed the airline company's rules.

When carrying in hospitals

Heed the hospital's rules.

Cautions on Using this Player

2

When using with car power cable in cars

Please turn on the engine and then connect with the car power cable for using.

Cleaning the player

Normally clean the player using a soft, dry cloth. For tough dirt, apply some neutral detergent diluted in 5 to 6 parts water to a soft cloth, wring out thoroughly, wipe off the dirt, then wipe the player with a dry cloth. Note that alcohol, thinner, benzene, insecticides, etc., may cause the print or coating to peel off. Also avoid leaving rubber or plastic products in contact with the player for long periods of time, as this may damage the cabinet. When using chemically treated cloths, read the cloth's instructions carefully. Always unplug the power cord from the power outlet before cleaning the player.

To clean dirt off the liquid crystal display, wipe the display gently with a soft, dry cloth (such as an eyeglass cleaning cloth). Note that leaving water droplets on the display for long periods of time may result in discoloration or stains. For tough dirt, use a commercially available liquid crystal display cleaner.

Copyrights

Unauthorized duplication, broadcast, public performance or rental of discs is prohibited by law.

Checking the Accessories

After unpacking, check that all the accessories listed below are included.

 
AC/DC adapter




AV cable




Ear phone




Car power cable

 


Battery pack

 

Short car bag

 

Card-type remote control unit

 

Operating instructions (this manual)



3

Specifications

The discs listed on the below can be played on this player without any adapter



DVDs 12cm



Vedio CDs 12cm



Audio CDS 12cm



MP3 CDs 12cm



JPG CDs 12cm

Noted:

- Don't using the disc that is scratched seriously
- 8cm disc can not be played on this player


Specifications

Disc type	DVD Vedio VedioCD CD-DA MP3 JPEG
Audio output	LINE OUT (20Hz-20kHz) Earphone output Optical digital audio output
Video output	Vedio output Video output: 1.0Vpp/75ohm
LCD panel	7" color TFT Pixels: 1440 X 234
Power	AC-DC adapter 12V/1.5A Battery 7.4V/3100mAh
Unit size	192mmX148mmX26mm
Weight (include battery)	850g
Working temperature	5 °C - 45 °C

4

Part names and functions

 Part in the front of the main unit

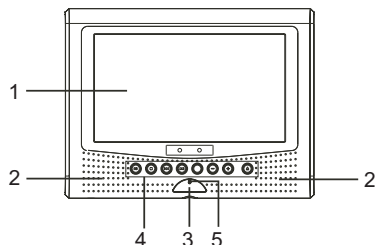

1. LCD display
2. Speakers
3. IR receiver window
4. Control keypad
5. Power LED indicator

- LED light: (1) when connecting AC-DC adapter or battery
(2) main unit in standby mode
- LED flash: when playing CD/MP3 audio disc and LCD off
- LED off: main unit is turning on

Part in the left of the main unit



1. Earphone jack
Connecting earphone
2. USB(1.1) socket
Connecting USB storage
3. Video output/input
Output or input video signal
4. Audio output/input, optical digital audio output
Output or input audio signal, optical digital audio output
5. 12V DC input
Connecting to AC-DC adapter

 
Part in the top of the main unit



1. Memory card socket

Part names and functions

Keypad in the main unit



1. Play/Pause/On button

- Press this to play disc. When press this in the play mode, pause mode is set. Press again to resume playback.
- Press this for 1.5 seconds to power on the unit.

2. Stop/Off button

- Press this to stop play mode
- Press this for 1.5 second to power off the unit. (Standby mode)

3. Previous/Next buttons

- Using these buttons to scan forward or backward through the tracks or chapters.
- Press these buttons for 1.5 seconds in fast forward or backward play mode. (X2, X4, X8, X20)

4. Mode, + and - buttons

Press Mode to switch LCD mode: Brightness, Color, Contrast, LCD display mode, Reverse, AV output/Input mode, Volume and then using +/- buttons to adjust.

- Brightness: level 0 level 12
- Color: level 0 level 12
- Contrast: level 0 level 12
- LCD display mode: switch screen size 16:9 4:3
- Reverse: switch screen normal or reverse



Normal



Reverse

- AV output/input mode: press +/- in AV output mode or AV in mode.
- Volume: level 0 level 15

5. +/- buttons

- Press these buttons to increase/decrease the volume when the main unit is in play mode.
- Press these buttons to adjust LCD mode when in LCD mode

6. Eject button

- Press this button to eject the disc when a disc is in the main unit

Part names and functions

Part in the back of the main unit

1 Support

Pull out the support to the proper position in order to let the unit stand.

2 Battery connector

 
Lock the battery, power on the unit

Note:

- To avoid the short the connector

3 Battery socket


4 Battery locker

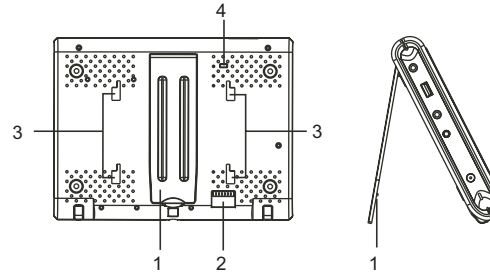

5

Part in the bottom of the unit

 1 Fixed hole



Part names and functions

Part in the battery

1. Battery support

Pull out the support to the proper position in order to let the unit stand when battery is installed in the unit

2. Unlock button for remove battery

Press this and pull down to remove the battery

3. Battery LED indicator

<1> Install the battery to the main unit and plug in AC-DC adapter

<2> LED indicator is red when battery is being charged; LED indicator is off when battery is fully charged.

<3> LED indicator is off when battery power the unit or battery is removed.

4. Battery connector

 
 
Lock the battery, power on the unit

Note:

- To avoid the short the connector

 
5. Battery socket

6. Battery locker

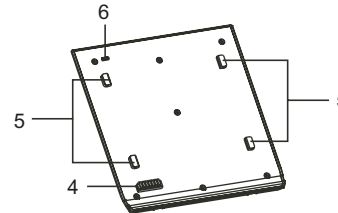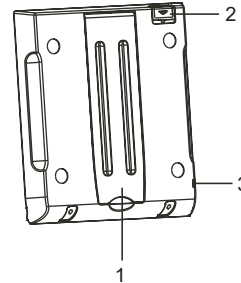



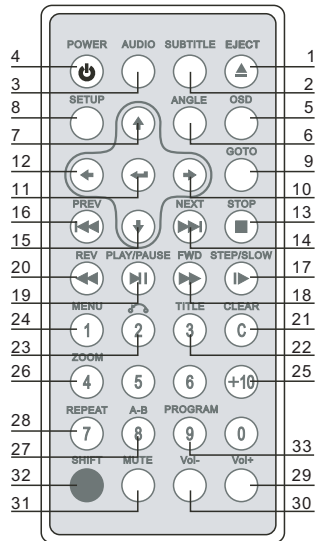

Part names and functions

Remote control unit



Part names and functions

Remote control unit

- | | | |
|--|--|---|
| 11.  | 20. REV
Press this to fast backward play when the unit in play mode | 28. REPEAT
DVD: repeat play the title, chapter VCD,CD: repeat the track or whole disc |
| 12.  | 21. CLEAR
Clearing the digit that is just input | 29. VOL+
Increasing the volume |
| 13. STOP
Stop playing disc | 22. TITLE
Displaying DVD title | 30. VOL-
Decreasing the volume |
| 14. NEXT
Skip next track/chapter | 23.  | 31. MUTE
Switch off the speakers or earphone |
| 15.  | 24. MENU
Menu play | 32. SHIFT
Switching the Digit or Function for the multi-function key |
| 16. PREV
Skip previous track/chapter | 25. DIGIT INPUT | 33. PROGRAM
Programming the play sequence |
| 17. STEP/SLOW
Press this to enter slowing play when the unit in play mode | 26. ZOOM
Zooming the picture | |
| 18. Forward
Press this to step one frame when the unit in pause mode
Press this to fast forward play when the unit in play mode | 27. A-B
Press this to set A point, press again to set B point, then the unit playing from A to B repeated.
Press 3'rd to cancel the A-B play. | |
| 19. PLAY/PAUSE
Press this to play or pause | | |

USING REMOTE CONTROL UNIT

Precautions before using remote control unit

 
- Please pull out the PVC when the remote control unit is first using
- Don't drop or step on the remote control unit or subject it to shocks
- Note that it may not be possible to operate the main unit if there are obstacles between it and the remote sensor
- Don't expose the remote sensor to strong light.
- Using the remote control unit within the specified operating range.

Remote control unit operating range

<1> Horizontal: $\pm 30^\circ$


<2> Vertical: $\pm 30^\circ$

<3> Distance: 5m

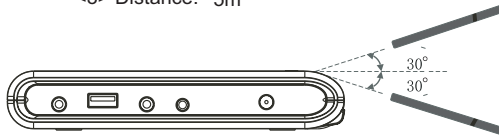

Note:

 
Most of the player's functions can be performed from the remote control unit. Some operations, however, only be performed from the main unit.

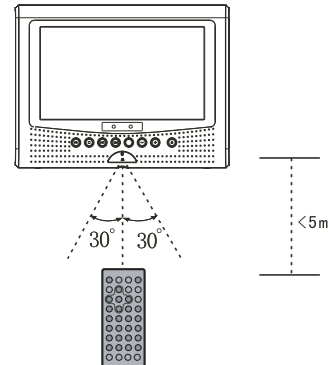


USING REMOTE CONTROL UNIT

Replacing the battery

 1. Insert your finger nails into A and B on the diagram below, press A according to the direction, then pull out the battery holder.

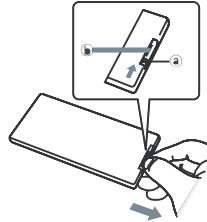


 2. Remove the old battery, then insert the new battery into the battery holder with the + side facing upwards.



Lithium battery (Cr2025)

 3. Fit the battery holder back to its place.

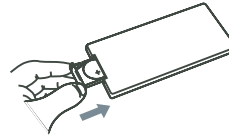

Note:

To prevent leakage of fluid from the lithium battery, remove the battery when not using the remote control unit for long periods of time (one month or more). If the battery leaks fluid, carefully wipe it out of the battery case, then change to a new lithium battery.

USING THE BATTERY

Precautions before using the battery

- Please fully charge the battery unit before using it for the first time.
- When the battery unit is recharged in a hot environment, it may not recharge fully
- The battery unit becomes hot after recharging, but this is not malfunction.



Battery storage

- Please place the battery in a proper environment (15°C - 25°C). To avoid place the battery in a hot or lower temperature environment.
- Please recharge one time every year if the battery is not used in a long time.

Battery life

- The battery unit can be used for about 300 cycles of recharging and operations, though this is variable depending on the operating conditions.

Using the battery


- The main unit can be playing over 3 hours if the battery is fully recharged.
- The picture may be unstable if the battery power is not enough.
- Please recharge the battery when the main unit is power off. Otherwise the battery recharge will takes about 8 to 9 hours.
- Press OSD when the unit is in play mode, the battery power can be shown in the OSD.  Shows battery capacity,  shows the battery power is worn out.
- Please remove the battery unit from the main unit when it is not used in a long period of time.

USING THE BATTERY

Installing the battery

Please install the battery unit as following:

 
1. Attach the battery unit to the main unit
2. Pull up the battery until the battery unit is locked to the main unit
3. Then the power LED indicator is light on.

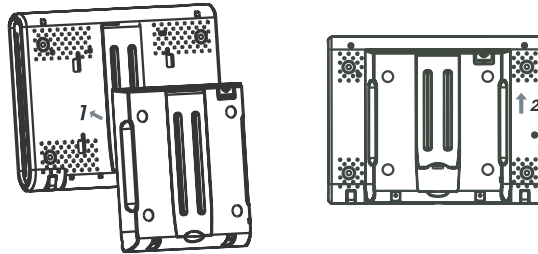

Removing the battery

Please remove the battery unit as following:

 1. Power off the main unit
2. Press the battery lock key and pull down the battery unit, then the battery is removed.

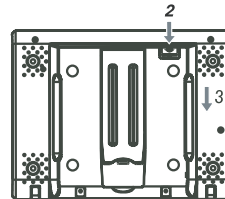

7

USING THE BATTERY

Recharging the battery by using AC-DC adapter

Please recharge the battery unit as following:

 
Install the battery to the main unit

Please plug the AC-DC adapter and connect the DC output to DC in of the main unit.

- LED indicator red, means the battery is recharging;
- LED indicator is off, means the battery is fully recharged.

Note:

- Please place the battery on a level, flat surface for recharging.
- Do not short the battery connector.

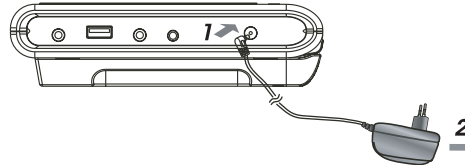

Cautions when charging the battery

- The temperature during recharging affects the recharging efficiency.
- Recharging is most efficient between temperatures of 10°C - 30 °C.
- To protect the battery unit, do not recharge a fully charged battery unit repeatedly. Repeated overcharging the battery may deteriorate the battery performance.
- When the battery unit is hot, it may take longer than usual time for recharging or may sometimes be unable to be recharged. Wait for the battery unit to cool down before retrying recharging.

7

 
CONNECTING THE PLAYER TO OTHER COMPONENTS

Connecting to AC-DC adapter

1. Please plug the AC-DC adapter to AC power socket;
2. Connecting the DC output of adapter to DC in of the main unit.

Note:

AC-DC adapter specification: 12V/1.5A
Please using the adapter that is the standard accessory of the main unit.

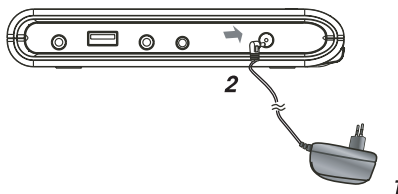


Connecting earphone

- Connect the earphone plug securely to the earphone jack on the main unit.
- To listen to the audio, using +/- to adjust the volume to a comfortable level.

Note:

 Please do not use DTS disc. Strong noise is produced when DTS discs is played.

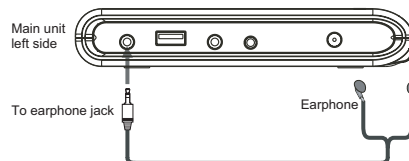

Note:

Insert the earphones plug securely.
No sound will be heard unless the earphones are securely connected.

 
CONNECTING THE PLAYER TO OTHER COMPONENTS

Connecting to USB storage

1. Please connect the USB storage to the USB terminal of the main unit
2. The main unit can be read the contents in the USB storage automatically

Note:

- The USB terminal of the main unit support USB 1.1 only.
- The main unit can read the contents of USB storage when there is no disc in the main unit.

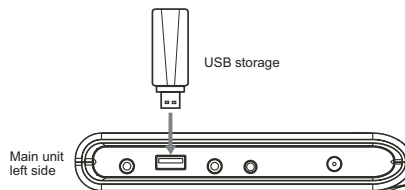


Connecting to memory card (SD/MMC/MS)

1. Please insert the memory card to the memory socket of the main unit
2. The main unit can be read the contents in the memory card automatically

Note:

 - Please insert the memory card in right direction.
- The main unit can read the contents of memory card when there is no disc in the main unit.

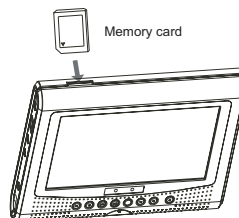

CONNECTING THE PLAYER TO OTHER COMPONENTS

 
Before connecting

Turn off the power of the player and the devices to be connected.

Connecting to a TV set

Note:

- Please set the main unit to AV output mode.

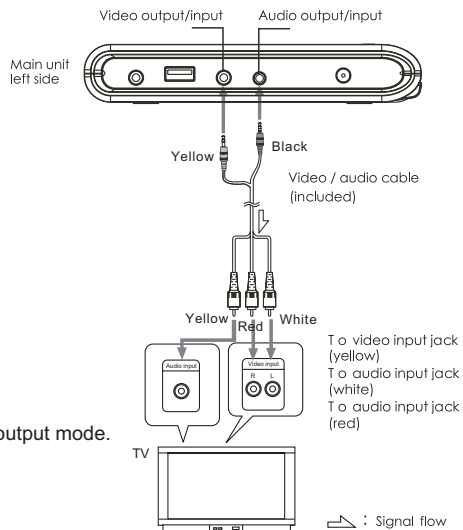

CONNECTING THE PLAYER TO OTHER COMPONENTS

 
Connecting to a digital amplifier that is not Dolby Digital / DTS / MPEG compatible

Output the digital signals from the player's digital output to a digital amplifier that is not Dolby/DTS/MPEG compatible.

Notes:

- Carefully check the player's digital output settings before connecting the player to an amplifier which is not Dolby Digital / DTS / MPEG compatible.

Do not play DVDs when the audio settings are not correct. Or may cause strong noise and damage your speakers.

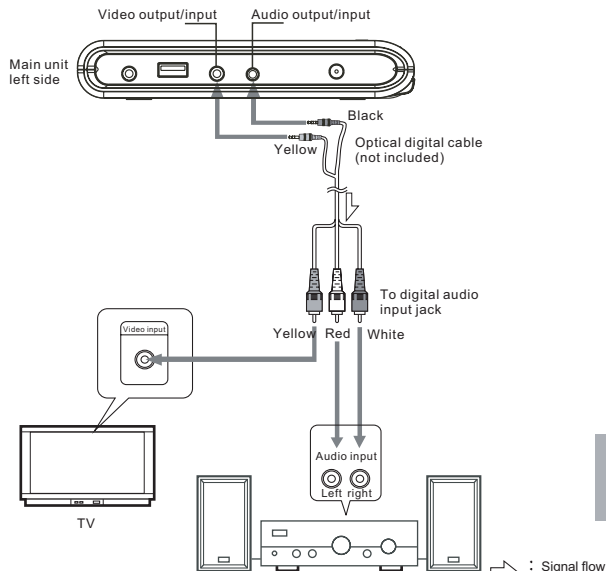


CONNECTING THE PLAYER TO OTHER COMPONENTS

Connecting to a Dolby Digital/ DTS / MPEG decoder or an amplifier with built-in decoder

With this player, you can enjoy powerful Dolby Digital, DTS or MPEG sound. Output the digital signals from the player's digital output to a decoder or amplifier with built-in decoder.


Hint:

 For a compatible decoder or amplifier, 5 speakers (front left/right, center and surround left/right) and a subwoofer are required to enjoy Dolby Digital/DTS 5.1-channel sound.

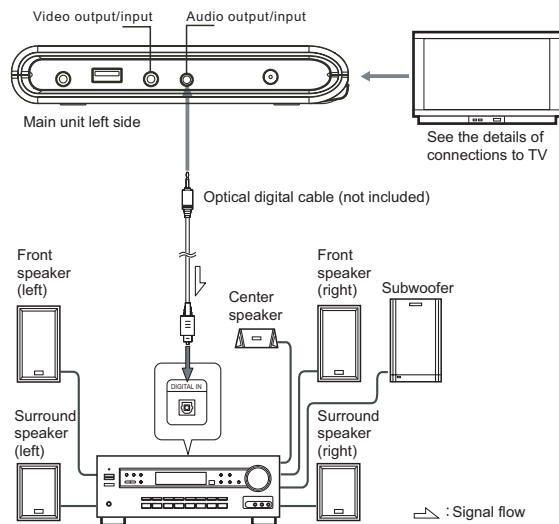

CONNECTING THE PLAYER TO OTHER COMPONENTS

 Connecting to active speaker systems

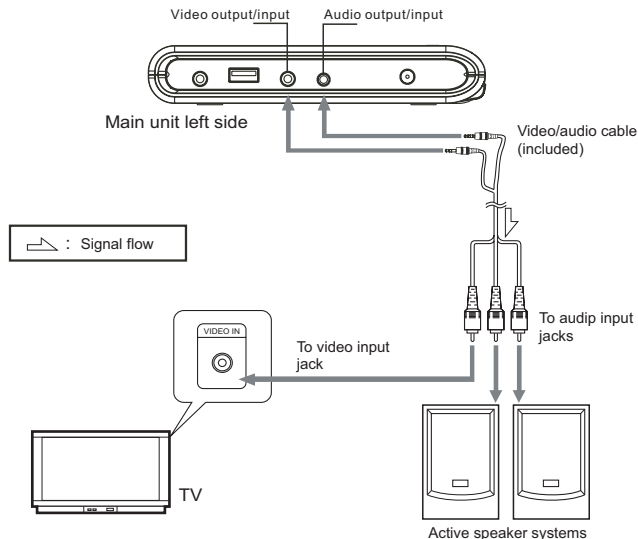


Note:

- Please set the main unit to AV output mode.

CONNECTING THE PLAYER TO OTHER COMPONENTS

 Connecting to a Audio/Video player system

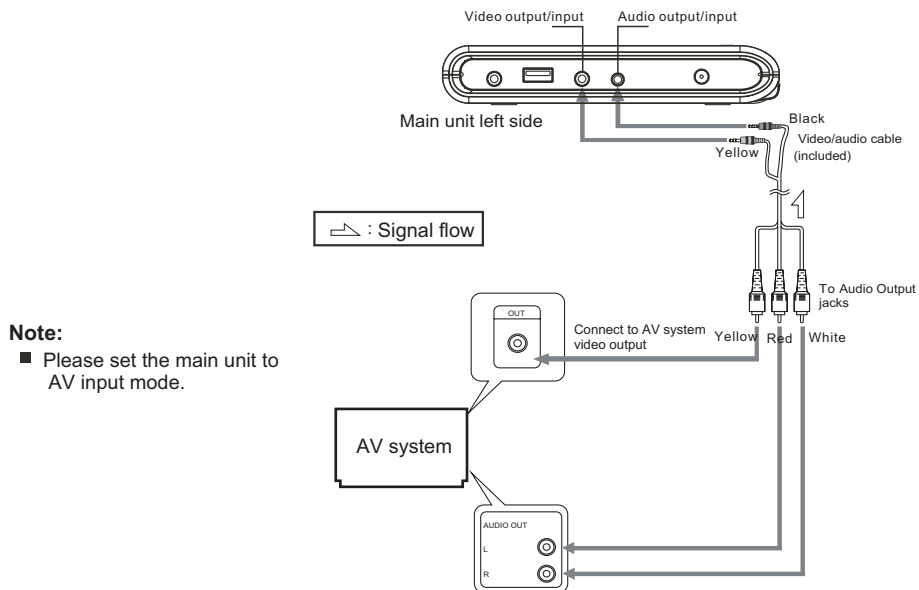

BASIC OPERATIONS

Turning on/off the main unit

1. Turn power on

 
- The main unit is in standby mode when the unit is powered
- Press POWER (remote control unit) or ON (main unit) 1.5 seconds to turn on the unit, power indicator led off

2. Turn power off

- Press POWER (remote control unit) or OFF (main unit) 1.5 second to turn off the unit, power indicator led light

3. Auto power off

- The unit will be auto power off and in standby mode when the unit is stay over 5 minutes which is no disc in the unit or stop status.





BASIC OPERATIONS

Playing discs

1. Eject disc when there is a disc in the unit
2. Insert disc
3. Reading disc
 - Display DVD or VCD or CD in LCD
 - The unit will be played for some disc
 - Press PLAY to play disc

Note:

  - Please insert disc correctly
- Do not use the disc that is scratched serious

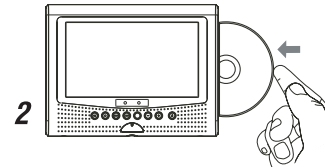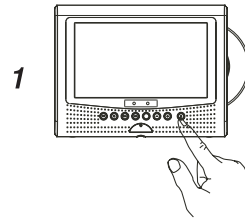

Removing discs

1. Press STOP to stop play
2. Press EJECT to eject disc
3. Take out the disc

BASIC OPERATIONS

Mode settings (Brightness/Contrast/Color/TFT display mode/TFT Reverse mode/AV out/in mode/Volume)

 
Please press MODE (in the main unit) to select a suitable mode for your favourite when the main unit is in play mode.

1. Press MODE, setting brightness;
2. Press MODE, setting color;
3. Press MODE, setting contrast;
4. Press MODE, setting LCD display mode;
5. Press MODE, setting reverse mode;
6. Press MODE, setting AV output/input mode

- The unit will stop play the disc when it is in AV input mode
- Please do not connect signal input when the unit is in AV output mode
- AV output mode is default mode.

Note:

- Please press MODE 1.5 seconds, then the unit will come back to AV output mode

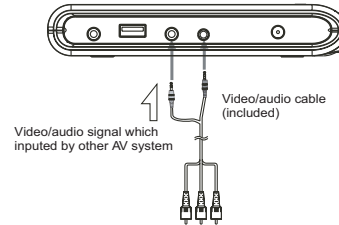

7. Press MODE, setting volume;

 
Hint:

The volume setting is the default mode. Press +/- to adjust the volume directly.

BASIC OPERATIONS

Stopping the playing

- 1 Press STOP to pause the playing, the unit can memorize the play point
- 2 Press PLAY to continues play from the pausing point
- 3 Press STOP to stop the disc

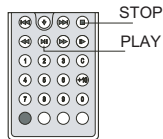


Note:

- The unit can not play to continues playing for some disc


Pausing the disc

 - 1 Press PLAY/PAUSE to pause the playing when playing
- 2 Press PLAY/PAUSE to continues playing

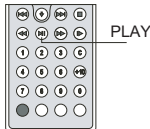

Scanning forward and backward

 - 1 Press PREV/NEXT(in the main unit) 1.5 seconds to fast the playing when playing in forward/backward direction
- 2 Change the playing speed to X2, X4, X8, X20 and normal for every pressing PREV/NEXT in the main unit 1.5 seconds.

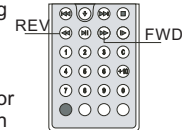


Hint:

The REV/FWD in the remote control unit may do fast playing.

Slow playing the disc

 - 1 Press STEP/SLOW in the remote control unit to slow playing. Change the playing speed to 1/2, 1/3, 1/4, 1/5, 6/1 and 1/7 for every pressing STEP/SLOW.
- 2 Press STEP/SLOW to skip frame when the unit is in pause mode.

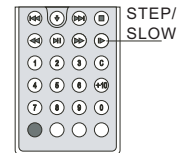

Note:

 
The sound is mute when the main unit is in fast or slow playing except CD and MP3 disc. Please press PLAY to resume normal playing.

BASIC OPERATIONS

Repeat playing the disc

1 A-B play mode

- Press A-B, the LCD will show Repeat A-
- Press A-B again, the main unit will repeat the play from A to B.
- Press A-B again, the unit will resume normal playing.

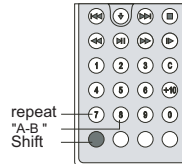

2 Repeat playing the title, chapter or track

 
- Press REPEAT to select the title, chapter or track when the unit is in play mode
- DVD: title, chapter; VCD or CD: track.

Note:

- Please press SHIFT to select the FUNCTION mode of the remote control unit first.


Searching the disc

- Press SEARCH
- Using cursor key and ENTER to select the proper playing item
- Input digit to select playing time, title, chapter or track
- Press ENTER to confirm the playing item
- Press SEARCH to resume the play mode

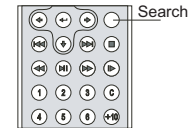

Zoom playing

 - Press ZOOM every times, the picture will change to 2X, 3X, 4X, 1/2X, 1/3X, 1/4X and normal.

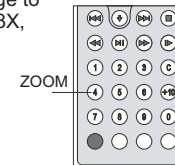

BASIC OPERATIONS

Program playing

The main unit may play the list according to the following program list:

1. Press PROGRAM, the menu will be shown in the LCD

Hint:


- T is for Title, C is for Chapter for DVD disc.
- T for track for CD,VCD.

PROG								
T	C		T	C		T	C	
1 --	---		5 --	---		9 --	---	
2 --	---		6 --	---		10 --	---	
3 --	---		7 --	---		11 --	---	
4 --	---		8 --	---		12 --	---	
Play			Clear			Exit		

PROG								
T	C		T	C		T	C	
1 01	: 001		5 --	---		9 --	---	
2 02	: 002		6 --	---		10 --	---	
3 --	---		7 --	---		11 --	---	
4 --	---		8 --	---		12 --	---	
Play			Clear			Exit		

Note:

 There is no title, chapter or track for some disc.

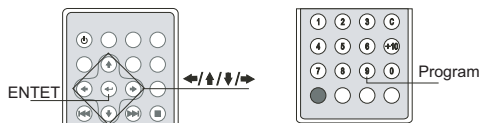

2. Using digit $\leftarrow/\uparrow/\downarrow/\rightarrow$ and cursor to select the list what you want. See the picture.

3. Using the cursor key to move the cursor to the PLAY icon, and press ENTER to start to play the list
4. Using the cursor key to move the cursor to the CLEAR icon, and press ENTER to clear the play list.
5. Press PLAY/PAUSE or select the EXIT icon and press ENTER to exit program menu.

 
Note:

- The program list will be cancel when the main unit is power off or eject the disc.
- There is no program function for some disc.
- The unit can not play the list if you select the item that does not exit in the disc.

BASIC OPERATIONS


Using OSD

1. Press OSD to show the play and disc information in the LCD when the main unit is in play mode
2. Press OSD again to disable the information display




Selecting a sub-title

 Press SUBTITLE to select the sub-title when the main unit is in play mode




Selecting an audio

 1. Press AUDIO to select the audio language when the main unit is in play mode for DVD disc
2. Press AUDIO to select the audio channel when the main unit is in play mode for VCD, CD disc.




Selecting an angle

 Press ANGLE to select the play angle when the main unit is in play mode for DVD disc, there is no function for other disc.



BASIC OPERATIONS

 Playing MP3 and JPEG disc

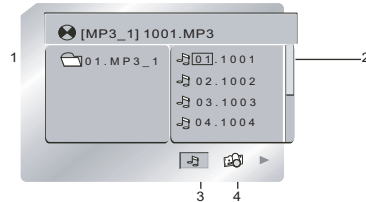

1. Directory
2. File
3. Mp3 icon
4. JPEG icon

- Using the cursor key to move the cursor to the directory, file, MP3 icon or JPEG icon
- Selecting MP3 icon and press ENTER if you want to play MP3, selecting JPEG icon and press ENTER if you want to play JPEG
- Selecting a file and press ENTER if you want to play the file.
- Press PLAY/PAUSE to play sequence
- Press A-B to repeat A-B playing.

Note:

 
- The LCD will be off if there is no operation on the unit over 3 minutes when playing CD, MP3. And the Power LED will be flash in the status.
- LCD will be on for any operation on the unit .

BASIC OPERATIONS

Playing the file storing in a USB storage

Connecting the USB storage to the USB socket of the main unit, the file stored in the storage will be read automatically.

1. Power on the unit, connecting the USB storage to USB socket. (in no disc mode)
2. "READ USB" will be shown in LCD and the files will be display in the LCD when the unit finished the reading.



3. Operation is like play MP3 or JPEG
4. Please remove the USB storage directly when do not play the USB storage

The MP3, JPEG, MPEG4 file can be play in this unit

 
Note:

- USB in this unit is USB 1.1
- The unit must be in no disc mode when play the file stored in the USB storage

Playing the file storing in a memory card

Please insert the card (SD,MMC, MS) in to the socket. The file will be played automatically.

1. Power on the unit, inserting the card in to the socket. (in no disc mode)
2. "READ CARD" will be shown in LCD and the files will be display in the LCD when the unit finished the reading.

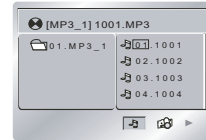

The SD, MMC and MS can be read in this unit.

Note:

 
- The unit must be in no disc mode when play the file stored in the card

BASIC OPERATIONS

Using FM transmitter (option)

The FM transmitter is built in this unit. There are 4 frequency point which can be selected. You could use one FM radio system to receive the sound from this unit.

1. Set a proper volume of this unit
2. Press SETUP, the set up menu will be displayed. The FM output option may be selected. There are 5 choice to select. (88.1MHz/88.3MHz/88.5MHz/88.7MHz/off)

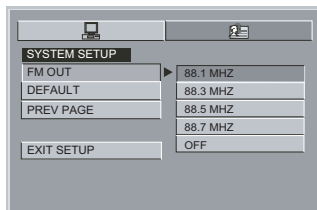

3. Tuning the FM radio system to the frequency, the sound will be heard.
4. Adjust a proper volume level.

**The FM transmitter valid
distance : 5M**

Note:

- If there is noise in the FM radio system, please select another frequency
- If no sound, please check the volume level

 
MAIN UNIT SETTINGS

Press **SETUP** when the main unit is in play mode. The set up menu will be displayed in LCD.

Selecting a TV system

Please select the proper video signal system if you want to see on a TV set.

- NTSC: please select this item when TV set is NTSC system TV set
 - PAL: please select this item when TV set is PAL system TV set
- Default: PAL

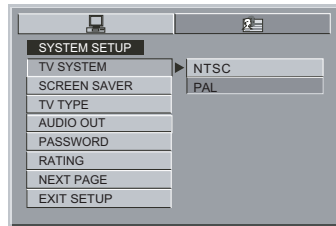


Note:

- The picture may be a grey picture if the system is not correctly set.

Setting screen saver

This function can save the TFT life if the unit stay in stop, no disc over 1 minutes.

 - ON: screen saver enable
- OFF: screen saver disable
- Default: ON

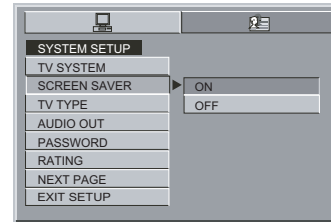


MAIN UNIT SETTINGS

Selecting a TV scale

16:9 : Please select this item when connecting this unit to a 16:9 TV set.

4:3LB : Please select this item when connecting this unit to a normal TV set.

 4:3PS : Please select this item when connecting this unit to a normal TV set.

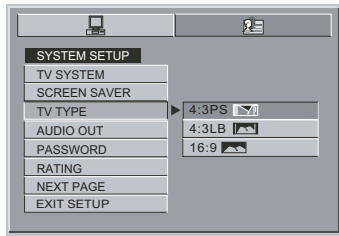


Note:

- Picture scale is depending the disc.

Setting digital audio output

Please set digital audio output ON when using digital audio optical output.

 
- ON: switching on digital audio through optical
- OFF: switching off digital audio output
- Default: OFF

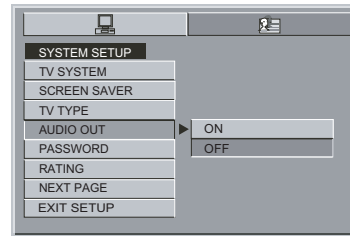

MAIN UNIT SETTINGS

Setting parent lock

 
1. Default setting: 0000
2. When unlock, new parent lock can be input and select the parent lock level

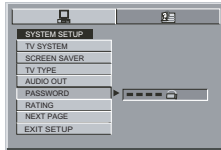

Setting parent lock level

This setting can control the unit play parent lock DVD disc.

 - Level is divided into 8 level: KID SAFE, G, PG, PG-13, PG-R, R, NC-17, ADULT
- Selecting ADULT, the lock is cancel
- Default: ADULT

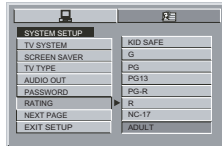


Note:

- The parent lock level can not be set if the parent lock is locked.

Setting FM transmitter (option)

There are 4 FM frequency point in this unit.

 - ON: FM transmitter switching on
- OFF: FM transmitter switching off
- Default: OFF

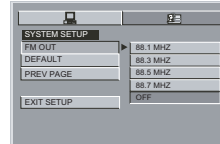


Note:

- To enter last page set, please select prev page item and press ENTER

Default setting

 To restore the factory setting, please select this item and press ENTER

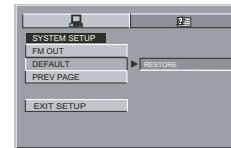

Note:

- To enter last page set, please select last page item and press ENTER

MAIN UNIT SETTINGS

Selecting a OSD language

Please enter the OSD language select menu, use cursor key \uparrow/\downarrow to move the cursor to the language what you want and press ENTER



Selecting a audio language

Please enter the audio language select menu, use cursor key \uparrow/\downarrow to move the cursor to the language what you want and press ENTER



Selecting a sub-title language

Please enter the sub-title language select menu, use cursor key \uparrow/\downarrow to move the cursor to the language what you want and press ENTER



Select a menu language

Please enter the menu language select menu, use cursor key \uparrow/\downarrow to move the cursor to the language what you want and press ENTER



Note:

- The language will be the disc default language if the language you want is not visible
- Default language: English

TROUBLE SHOOTING

Trouble shooting

Please refer the following instruction when there are some problem with this unit. If the problem still exit, please consult your nearest service center.

PROBLEM	POSSIBLE REASON	SOLUTION
Disc can not play	Disc error	Insert disc in right direction
	Disc dirty or scratch	Using good disc
	Area code error	Using right area code disc
No picture in TV	Cable loosen	Insert the cable again
	Setting error	Set TV or this unit correctly
Speaker no sound	Earphone in use	Removing earphone
No sound in TV or amplifier	Cable loosen	Insert the cable again
	Connecting cable error	Connecting cable correctly
Different volume for DVD/CD disc	Disc recording in different way	Adjust volume level
Can not play 8cm disc	8cm disc is not play in this unit	removing disc from the unit.

TROUBLE SHOOTING

11

Instructions on environment protection



DENVER ELECTRONICS

Do not dispose of this product in the usual household garbage at the end of its lifecycle; hand it over at a collection point for the recycling of electrical and electronic appliances. The symbol on the product, the instructions for use or the packing will inform about the methods for disposal.

The materials are recyclable as mentioned in this marking. By recycling, material recycling or other forms of re-utilization of old appliances, you are making an important contribution to protect our environment.

Please inquire at the community administration for the authorized disposal location.