 


DENVER[®]
ELECTRONICS

DVD-7742 User Manual

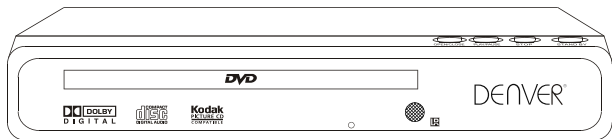

IMPORTANT

Please read this manual carefully before operating the DVD PLAYER.
Keep this manual handy for further reference.

Content

Introduction

■ Features	2
■ Front panel and rear panel illustration	3
■ Remote control	4

Connections

■ DVD+TV	5
----------------	---

Basic operation

■ Basic operation	6
-------------------------	---

Advanced features

■ Language setup	7
■ Video setup	9
■ Rating setup	10
■ Misc setup	10
■ Remote control operation	11
■ Kodak picture CD playback	15

Other

■ Troubleshooting	17
■ Technology specifications	19

Features

Features

- Full compatibility with DVD, VCD, CD and Kodak picture CD, CD-R, CD-RW
- multi-language, multi-angle, multi-subtitle, multi-mode of image zoom
- multi-playback mode, parental control
- Scart output

Disc formats supported by this player:



Dolby digital



Kodak picture CD



Audio CD



Video CD



DVD video



Multi-angle



Closed caption



Subtitle choices



Audio choices



TV aspect ratio modes

DVD safety symbol



Caution: to prevent fire or electric shock, do not open the cover or rear panel.



Laser product symbol: located on the rear panel of the unit, indicate this player is product, only use weak laser and no hazardous radiation outside of the unit.



CE Certification symbol:
We have tested and documented to ensure conformity to all applicable European directives and requirement



The lightning flash with arrowhead symbol inside an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the unit's cabinet that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point inside an equilateral triangle is intended to alert the user to the presence of important operating and maintenance and servicing instructions in the manual accompanying the unit.

 


Do not dispose of this product in the usual household garbage at the end of its lifecycle; hand it over at a collection point for the recycling of electrical and electronic appliances. The symbol on the product, the instructions for use or the packing will inform about the methods for disposal. The materials are recyclable as mentioned in this marking. By recycling, material recycling or other forms of re-utilization of old appliances, you are making an important contribution to protect our environment.

Please inquire at the community administration for the authorized disposal location.


Front and rear panel illustration

Front panel

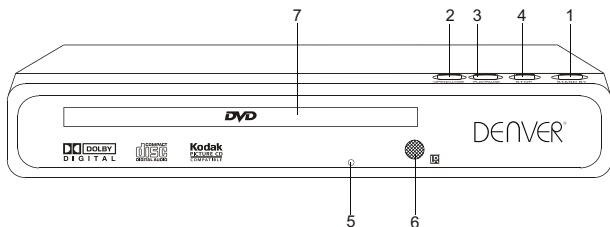


- | | | |
|--------------|-------------------|-------------|
| ① STAND BY | ④ STOP | ⑦ TRAY DOOR |
| ② OPEN/CLOSE | ⑤ POWER INDICATOR | |
| ③ PLAY/PAUSE | ⑥ REMOTE SENSOR | |

 Rear panel

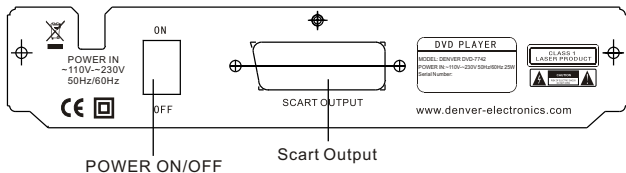

Remote control

 - When use, direct the remote control to the infra-red sensor (within 45 degrees)
- Do not put remote control near to the place with high temperature or moisture
- Do not put water or any other object on remote control
- Do not use new and old batteries or different type batteries together
- Please replace batteries when find remote control is out of work or weak sensitivity.

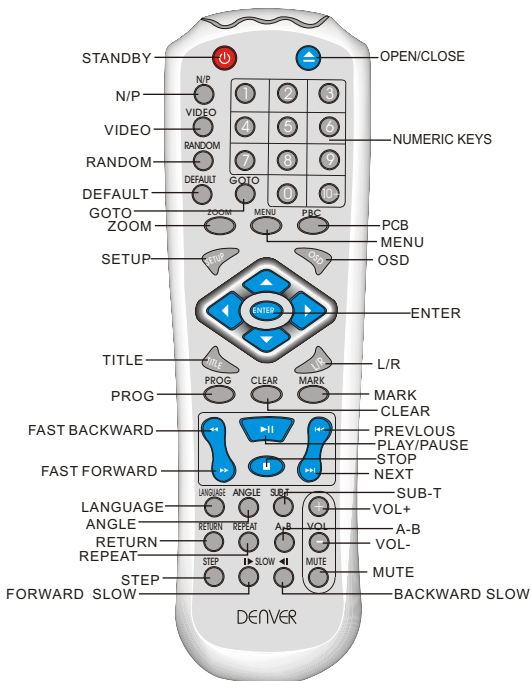


DVD+ TV

Notes :


There are five ways of connecting the player , s AV output to the TV set:

 - Scart cable (set the video type to RGB)

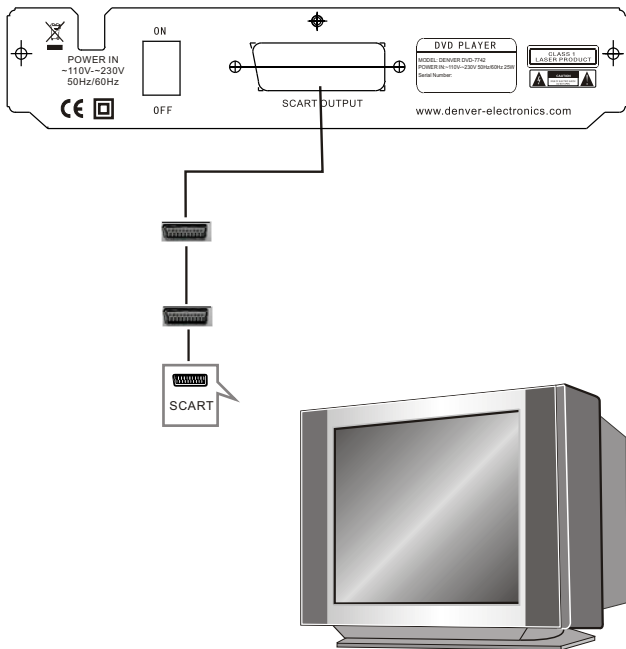

Basic operation

 1. Connect the DVD player to your TV and amplifier.
2. Turn on the TV.
3. Set the TV to the AV input connected to the DVD player.
4. Turn down the volume on your amplifier, and then power it on.
5. Set the amplifier to the AV input connected to the DVD player.

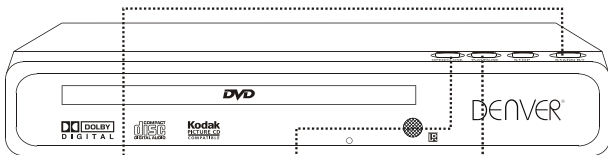

Step 1: Press the STAND BY, and the player will start, "LOAD" is illuminated on the display and the logo is displayed on TV screen.

Step 2: Press OPEN/CLOSE either on the front panel or remote control. The player displays "OPEN" on the display. When the tray is open, please put the disc on the tray with the label side up. Press OPEN/CLOSE again to close the disc tray.

 
Step 3: Press the PLAY button on the front panel or remote control. The player will automatically read and identify the disc, display the type and total time and begin playback.

Features setup

SETUP



In stop mode, press **SETUP**, and the TV screen will display the setup menu as follows:




- A. Press to Change items
- B. Press **ENTER** to display the submenu
- C. Press **SETUP** to exit the setup menu

Setup Menu

LANGUAGE SETUP

Select <Language> in the setup menu, and press **ENTER** to display the <Language> submenu:

 Press to select the menu item



- A. Press **ENTER** to setup
- B. Press to return to the setup menu

1. Select < OSD language>, and press **ENTER** to display the <OSD language> submenu:



- A. Press to change your selection
- B. Press **ENTER** to confirm
- C. Press to return to the setup menu
- D. Press **SETUP** to exit the setup menu

2. Select < Subtitle>, and press **ENTER** to display the <Subtitle> submenu:



- A. Press to change your selection
- B. Press **ENTER** to confirm
- C. Press to return to the setup menu
- D. Press **SETUP** to exit the setup menu

Features setup

3. Select <Audio>, and press **ENTER** to display the <Audio>submenu:



- A. Press to change your selection
- B. Press **ENTER** to confirm
- C. Press to return to the setup menu
- D. Press **SETUP** to exit the setup menu

Note: Menu language vary by disc

4. Select <DVD menu>, and press **ENTER** to display the <DVD menu> submenu:



- A. Press to change your selection
- B. Press **ENTER** to confirm
- C. Press to return to the setup menu
- D. Press **SETUP** to exit the setup menu

Features setup

Video setup

Select <Video> in the setup menu, and press

ENTER to display the <Video> submenu:

Press   to select the menu item



A. Press **ENTER** to setup

B. Press  to return to the setup menu

1. Select <Aspect Ratio>, and press **ENTER** to display the <Aspect Ratio> submenu:



A. Press   to change your selection

B. Press **ENTER** to confirm

C. Press  to return to the setup menu

D. Press **SETUP** to exit the setup menu

2. Select <TV System>, and press **ENTER** to display the <TV System> submenu



A. Press   to change your selection

B. Press **ENTER** to confirm

C. Press  to return to the setup menu

D. Press **SETUP** to exit the setup menu

3. Select <Video out>, and press **ENTER** to display the <Video out> submenu



A. Press   to change your selection

B. Press **ENTER** to confirm

C. Press  to return to the setup menu

D. Press **SETUP** to exit the setup menu

<RGB>---RGB video output

Features setup

Rating setup

Select <Rating> in the setup menu, and press **ENTER** to display the <Rating> submenu:

A. Press **↑** to return to the setup menu

Note: Not all DVDs support ratings.

 


Use the 0-9 keys to input four digits (set password), then press **ENTER** to confirm. The <Rating> submenu displays as follows:



Note: If you forget your password, please use the universal password “8888” to unlock.

Select <Rating>, and press **ENTER** to change <Rating> mode.

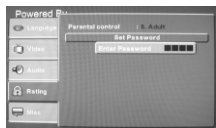

A. Press **ENTER** repeatedly to select:

 
1. Kid safe, 2. G, 3. PG, 4. PG-13, 5. PG-R, 6. R, 7. NC-17, 8. Adult

B. Press **↑** to return to the setup menu

Note: Unlock the password before setting <Rating>

Misc setup

Select <Load Factory>, and press **ENTER** to change <Load Factory> mode.

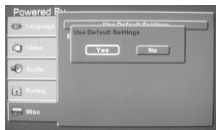

A. Press **↑↓** to change your selection

B. Press **ENTER** to confirm

C. Press **↑** to return to the setup menu

D. Press **SETUP** to exit the setup menu

Remote control operation

OPEN/CLOSE



- To open the disc tray, press **OPEN/CLOSE**
To close the disc tray, press **OPEN/CLOSE** again.

TITLE



- During DVD playback, press **TITLE** to display the DVD title menu or play the first title.

Note: this function is subject to the disc.

MENU



- During DVD playback, press **MENU** to display the disc menu of the current title.

Note: This function is subject to the disc

VIDEO



- Under the open mode, Press the button to switch the video of RGB

PBC



- During VCD playback, Press PBC to select the mode of "PBC On" or "PBC Off"

PBC is: playback control used to navigate VCD

- 0-10 keys** ■ These keys are used to input the time, as well as title, chapter and track numbers.

 


- When a CD or VCD is playing (with PBC off), press the 0-9 keys to select a track directly, then press **ENTER** to confirm.
- When a numeric item is displayed on the screen, press the 0-9 keys to Select the desired entry, and press **ENTER** to confirm.

SLOW



- During DVD, VCD playback, press **SLOW** for slow motion playback.
- Once you press SLOW, the disc will play at 1/2, 1/4, 1/6 and 1/8 normal Speed as follows:



- Press **PLAY** to resume normal playback.

PREV



- During DVD, CD or VCD playback, press **PREV** to play the previous chapter, title or track.

NEXT



- During DVD, CD or VCD playback, press **NEXT** to play the next chapter, title or track.

Remote control operation

REPEAT



- Each press of the **REPEAT** button will change the repeat mode.
- During VCD,CD playback,there are three modes: repeat Single, repeat All and Off.
- During DVD,playback,there are three modes: Repeat Chapter, Repeat Title and Off.

Note:During VCD playback,the PCB mode must be set to Off

A-B



- During playback, press **A-B** to select point A
- Press it again to select point B. The player will repeat the section from A to B automatically .
- Press **A-B** a third time to cancel A-B repeat and clear points A and B.

Note: During CD/VCD playback, points A and B must be within the same track.

During DVD playback, points A and B can be selected from different chapters.

REV



- During DVD, CD or VCD playback, press **REV** to scan in reverse. The player will review the disc at 2, 4, 8 and 16 times speed as follows:



- Press **PLAY** to resume normal playback.

FWD



- During DVD, CD or VCD playback, press **FWD** to scan forward. The player will cue the disc at 2, 4, 8 and 16 times speed as follows:



- Press **PLAY** to resume normal playback.

Bookmark



- During DVD,VCD, playback press the Button the menu will display as follow
- Use to select the different bookmark
- Press ENTER to input the current time. If it has been input yet, the player will play from this time.

Bookmark	1	:	:	:	:
Bookmark	2	:	:	:	:
Bookmark	3	:	:	:	:

Remote control operation

MUTE



- Press **MUTE** to turn off the audio.
Press **MUTE** again to resume normal sound.

L/R



- During VCD/SVCD playback, press **L/R** repeatedly to select the channel of audio-output: Stereo/Left/Right.

CLEAR



- Press **CLEAR** to delete numbers you have entered.
- Press once to delete one digit, press and hold to delete all digits.

PAUSE/STEP



- Press **PAUSE/STEP** during playback to pause playback.
Press again to step forward one frame
Press **PLAY** to resume normal playback.

NOTE: the step function is not available during CD playback

PLAY



- Press **PLAY** from stop mode to start playback.

STOP



- Press **STOP** once during playback to stop and hold playback.
- Press **PLAY** to resume playback from the point you have pressed **STOP**.
- Press **STOP** twice to stop playback completely.

RETURN

 


- Under PCB being turned on, press **STOP** then **RETURN** to return to the program menu during playing VCD/SVCD disc.
- Under menu displaying, press **RETURN** to clear the present display.

ZOOM



- During VCD/SVCD/DVD playback, press **ZOOM** to magnify the image as follows:



Remote control operation

VOL



- Press **VOL** to adjust the volume.
- Press **VOL +** to enlarge the volume.
- Press **VOL -** to reduce the volume.

ANGLE



- During DVD playback,
Press **ANGLE** to view scenes from different camera angles.
Press **ANGLE** to repeatedly to change from one camera angle to another.
- Note:** This function is disc specific.

SUBTITLE



- During DVD playback,
Press **SUBT** repeatedly to select from up to 32 subtitle languages.
- Note:** This function is disc specific (language will vary).

LANGUAGE



- Press **LANGUAGE** repeatedly to select from up to 8 audio languages/formats during DVD playback.
- Press **LANGUAGE** repeatedly to select from up to 4 audio languages/formats during SVCD playback.
- Note:** This function is disc specific

PROG



- During VCD playback, press stop then **PROG** and the program menu will display as follow:

Program input			
1	---	4	7---10 ---
2	---	5	8---11 ---
3	---	6	9---12 ---
Play Program Clear All			

Input the track numbers in the desired order.
When finished, select <play program> and then press ENTER to play the tracks in the new programmed order.

Select <clear all> and press ENTER to clear all the numbers you have input.

During DVD playback, press stop then **PROG** and the <program> menu will display as follow:

Program input		Title/ Chapter	
1	---	4	7---10 ---
2	---	5	8---11 ---
3	---	6	9---12 ---
Play Program Clear All			

Input the title numbers and the chapter numbers in the desired order, then select <play program> and Press ENTER to play the chapters in the order you have set. Select <clear all> and press ENTER to clear all the numbers you have input.

Kodak Picture CD Playback


A Kodak picture CD has the size and shape of a regular CD.

- The max. size of JPEG picture can be supported: 3840x3840ples.
- JPEG stands for Joint Picture Experts Group. It is a compressing standard. It is the first international standard on Still Picture Compressing:ISO10918-1 constituted by the Committee on Still Picture Compressing Standard of ISO. The pictures on Kodak Picture CD are stored in this format (JPEG). This player can decode the JPEG picture in Kodak Picture CD and playback the picture in different modes.

Operation instructions:

- You can use number keys to select a special picture.
- Press PREV or NEXT key to select.
- Press PAUSE key to stop playing.

 Press **STOP** key to stop playing, and the screen will display as follow:

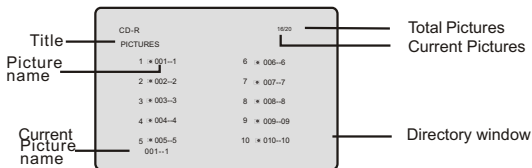

Kodak Picture CD Playback


In this window, you can use arrows key to select a special picture, then use **PLAY** or **ENTER** to confirm and display this picture.

Image rotation

There are three modes to rotate a picture: 90° cw, 180° cw, 90° ccw. Those operations are allowed only when a picture is being displayed normally and will be cancelled automatically when a new picture is displayed. Press **ANGLE** repeatedly, you can select the different rotation modes: original, 90° cw, 180° cw, 90° ccw.

Zoom function

 The player provides both Zoom in/out and pan function. The picture will zoom in/out as follow:



Note: During the ZOOM function, slideshow transitions and image rotation are disabled.

Q off: close zoom, press **PLAY** key to resume slideshow transitions.

Note: the quality of the pictures displayed on your screen will depend on the quality of your display equipment.

Troubleshooting

Please read the user ' s manual carefully before using the DVD player. If you have any Troubles in using this player, try to solve the problems by the suggestions mentioned below. If you can not remove the trouble after using all the suggestions, please contact the company or the technical service center authorized by us. For the sake of your safety please Do not open the cover and repair the player by yourself, if that, it may cause electric shock.

NO PICTURE, SOUND AND INDICATION

- Ensure that the power switch is on.
- Ensure that the wall inlet is ok.
- Ensure that the power cord is not damaged.
- Ensure that the power plug is connected to the inlet tightly.

BLACK AND WHITE PICTURE OR SCREEN ROLLING

- Ensure that you have set the right TV SYSTEM (e.g. PAL, NTSC) setting.

FLAWS OF PICTURE OR SOUND

- Check whether the setting of AUDIO is right.
- Check whether the disc is scratched or stained.
- Check whether the AV connector and the output terminal is stained.

DISPLAY NO DISC

- Ensure that you have put the disc on the tray.
- Check whether the disc is put in the reverse side.
- Check whether the disc is distorted.
- Check whether the disc is stained or scratched badly .
Turn down the echo level.

Troubleshooting

REMOTE CONTROL IS INSENSITIVE OR DOES NOT WORK

- Check the batteries of remote control and make sure that they are to be powerful and good conductivity.
- Direct the remote control to the IR sensor of the player.
- Check whether there are some obstacles between the remote control and IR sensor.

ABNORMAL FUNCTION OPERATION

- Turn off the power, and then turn on again.

DISC IS LOCKED IN THE TRAY

- The disc can not be taken out of the tray when the player is reading, so you have to turn off the power and turn on again, and press OPEN/CLOSE key immediately to open the tray.

Specifications

Technical specifications

Power requirements: -110—230V, 50/60Hz

Power consumption: 25W

Video standard: PAL/NTSC

Net weight: 4.3Lbs (1.9Kg)

Unit Dimensions: 225mm x 250mm x 38mm

Video out

Video out: 1.0Vp-p (75 Ω load).

Audio out

Scart connector

Output: analog out —2Vrms (1KHz); digital —1.15Vp-p

Frequency response: 48KHz sampling—4Hz ~22KHz,

96KHz sampling—4Hz~44KHz S/N ratio: >90dB

Total harmonic distortion: <0.05%

Accessories

Remote control 1

User ' s manual 1

Appearance and function is subject to change without notice.

Warning

To prevent children from watching programs which have a rating above their age, please be sure to set the rating in the setup menu appropriately. Before you set this rating, the password must be unlocked. If you forget your unique password, then please use the universal password as set by the manufacturer. The universal password is 8888 , please detach this sheet and keep it in a safe place , away from children.

ALL RIGHTS RESERVED
COPY RIGHT DENVER ELECTRONICS A/S



www.denver-electronics.com