

Swiss Made Diamond Timepieces


Description of the display and control buttons

Display elements


Second hand
Minute hand
Hour hand
Centre stop-second
Minute counter
Hour counter
Date

Control buttons

Push button A
Crown
Push button B

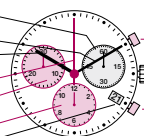

Minute counter Push-button A

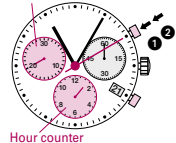

Chronograph: Basic function



(Start / Stop / Reset)

Example:

1 **Start:** Press push-button A.

2 **Stop:** to stop the timing, press push-button A once more and read the three chronograph hands: **1h / 20min / 10 sec.**

3 **Zero positioning:**
Press push-button B.
(The three chronograph hands will be reset to their zero positions).

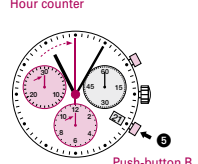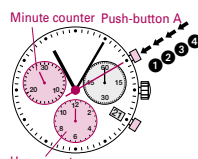

Chronograph: Accumulated timing

Example:

1 **Start:** (start timing)

2 **Stop:** (e.g. 15 min 5 sec following 1)



3 **Restart:** (timing is resumed)

4 **Stop:** (e.g. 13 min 5 sec following 3)

= **28 min 10 sec**
(The accumulated measured time is shown)

5 **Reset:**
The three chronograph hands are returned to their zero positions.

Please note:
* Following 4, the accumulation of the timing can be continued by pressing **push-button A** (Restart / Stop, Restart / Stop, ...)

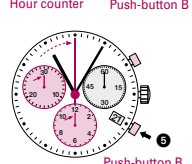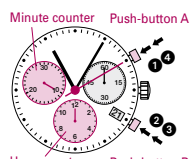

Chronograph: Intermediate or interval timing

Example:

1 **Start:** (start timing)

2 **Display interval:**
e.g. 10 minutes 10 seconds (timing continues in the background)

3 **Making up the measured time:**
(the 3 chronograph hands are quickly advanced to the ongoing measured time).

4 **Stop:** (Final time is displayed)

5 **Reset:**
The 3 chronograph hands are returned to their zero position

Please note:
* Following 3, further intervals or intermediates can be displayed by pressing **push-button B** (display interval / make up measured time, ...)





RONDA AG
CH-4415 Lausen/Switzerland

www.ronda-startech.com

Battery type: 395 (diameter 9.5mm x 2.6mm / SR 927 SW)
Accuracy: +20 / -10 seconds per month

In case your watch needs to be repaired or to raise claims under a guarantee, please contact the point of sales

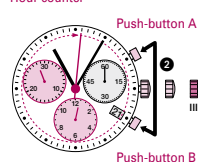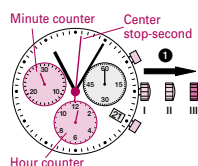


Adjusting the chronograph hands to zero position

Example:
One or several chronograph hands are not in their correct zero positions and have to be adjusted (e.g. following a battery change).

1 Pull out the crown to position III (all 3 chronograph hands are in their correct or incorrect zero position).

2 Keep push-buttons A and B depressed **simultaneously** for at least 2 seconds (the centre stop-second rotates by 360° → corrective mode is activated).

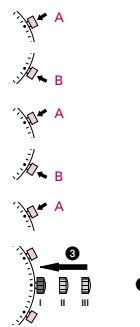

Adjusting the centre stop second

Single step ☒ A 1 x short

Continuous ☐ A long

Adjusting the next hand B

Single step ☒ A 1 x short

Continuous ☐ A long

Adjusting the next hand B

Single step ☒ A 1 x short

Continuous ☐ A long



Adjusting the minute counter hand (position 9h)

Single step ☒ A 1 x short

Continuous ☐ A long

Returning the crown to position I

Termination of the chronograph hands adjustment (can be carried out at any time).

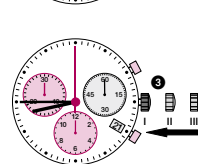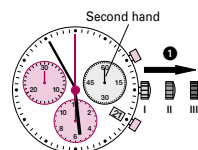



Setting the time

1* Pull out the crown to position III (the watch stops).

2 Turn the crown until you reach the correct time 8:45.

3* Push the crown back into position I.

Please note:
* In order to set the time to the exact second, 1* must be pulled out when the second hand is in position «60» (I).
Once the hour and minute hands have been set, 3* must be pushed back into position I at the exact second.

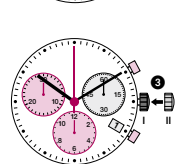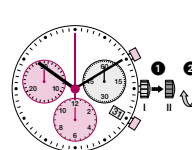



Setting the date (quick mode)

1 Pull out the crown to position II (the watch continues to run).

2 Turn the crown until the correct date 11 appears.

3 Push the crown back into position I.

Please note:
During the date changing phase between 9 PM and 12 PM; the date must be set to the date of the following day.

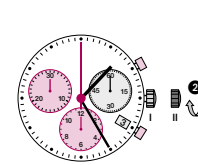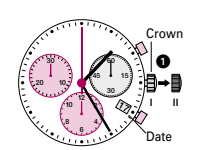

Setting the date/time following a battery change



Example:

- Date / time on the watch: 17 / 1:25 AM

- Present date / time: 4 / 8:30 PM

1 Pull out the crown to position II (the watch continues to run).

2 Turn the crown until yesterday's date appears 3.

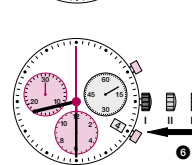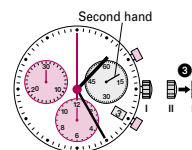

Setting the date/time following a battery change

3* Pull out the crown to position III (the watch stops).

4 Turn the crown until the correct date 4 appears.

5** Continue to turn the crown until the correct time 8:30 PM appears.

6 Push the crown back into position I.

Please note:
* To set your watch to the exact second, please refer to the chapter entitled «setting the time».
**Please observe the AM/PM clock rhythm.