

U2M

CLEO
MARK 2



USER MANUAL

USER MANUAL

CLEO MARK 2

The information contained within this manual does not include all of the details of design, production or variations of the equipment. Nor does it cover every possible situation that may arise during installation, operation or maintenance. If you need particular assistance beyond the scope of this manual please contact our technical staff.

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

WARNING! RISK OF HAZARDOUS ENERGY!

TO REDUCE RISK OF ELECTRIC SHOCK OR FIRE DO NOT EXPOSE TO RAIN OR MOISTURE.

NO USER SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

UNIT MUST BE EARTHED AND CORRECTLY FUSED.



The lightning bolt triangle is used to alert the user to the presence of un-insulated "dangerous voltage" within the unit that may constitute a risk of electric shock.



The exclamation mark triangle is used to alert the user to important operating or maintenance instructions in the literature accompanying the product.

Magnetic Field - Caution

If an equipment rack is to be used, we would recommend mounting the amplifiers in the bottom of the rack and mounting pre-amplifier and other sensitive equipment such as the Cleo Mk2 at the top of the rack.

Do not locate sensitive high-gain equipment such as pre-amplifier or tape decks directly above or below the amplifiers.

Because amplifiers have a high power density there is a strong magnetic field which can induce hum into unshielded devices that are located nearby. The field is strongest just above and below the unit.



CE Conformity

This equipment has been tested and found to conform to the requirements of the EMC Directive 89/336/EEC, the requirements of the Low Voltage Directive 73/23/EEC, amended by 93/68/EEC and to the following standards:

EMC Emission	EN55103-1 (1996)
EMC Immunity	EN55103-2 (1996)
Electrical Safety	EN60065 (1998)

Features

- 2 Input 6 Output configuration
- Input on Male XLR, Output on Female XLR
- Parametric, Bell or Shelving on any Filter
- Dynamic Range of 112dB un-weighted
- Digital gain adjustments from -15dB to 15dB
- MIDI system Exclusive (sysex) dump capabilities
- Pre-loaded with system parameters for Ohm speakers
- Attractive styling



OHM(UK)LTD

Wellington Close • Parkgate • Knutsford
Cheshire • WA16 8XL • England
Tel: +44 (0)1565 654641 • Fax: +44 (0)1565 755641
Email: info@ohm.co.uk • Website: www.ohm.co.uk

INTRODUCTION

Congratulations on having purchased an **OHM CLEO Mark 2**

Please read this manual and familiarize yourself with the operation of your **OHM CLEO Mark 2** before you attempt to power up the unit. For your own safety we recommend you take the time to read all the warnings and precautions on the page opposite and study the connection details to ensure correct usage and avoid any misuse which may invalidate your warranty.

Record the serial number, found on the back of the unit, in the spaces designated on the warranty card, and in the space provided below. Refer to the model and serial numbers whenever you call your dealer for information or service on this product.

Model	Serial Number
--------------	----------------------

Unpacking

Carefully open the shipping carton and check for any noticeable damage.

Every **OHM CLEO Mark 2** has been rigorously tested and inspected before being carefully packaged, prior to shipping. If any damage has occurred to the packaging or the unit during transit, please notify the delivery company as soon as possible. Only the consignee can file a claim against the carrier for shipping damage. Be sure to save the carton and all packing materials for the carriers inspection.


We recommend that you retain the original carton and packing materials for use should you transport or ship the unit in future.

Precautions

- Retain this manual for future reference.
- Do not stand the unit vertically on its rear.
- Always check that the correctly rated power is supplied to your unit.
- Avoid direct contact of your **CLEO** with water or other liquids.
- Do not operate this unit while standing in liquid
- When cleaning the unit wipe with a soft, dry cloth. If more heavy duty cleaning is required, disconnect from the mains and use a damp cloth, ensuring that the unit is completely dry before reconnecting to the mains.
- Do not use solvents or chemicals on the exterior of the unit as they may cause the surface to discolour or peel.

This unit is only intended for qualified personnel to operate and install. Do not attempt to repair or service yourself. Please refer to qualified technical service department. The user must have sufficient electrical contact to earth. Electrostatic charges may affect the operation of the **CLEO**.

FEATURES

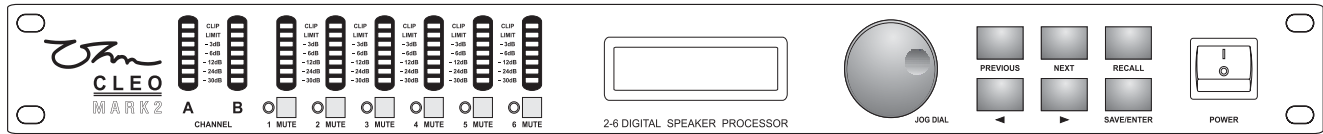

Active crossover filters with up to 48dB/Octave slopes to divide the audio spectrum into separate passbands for each transducer. Up to six outputs can be derived from either of the two inputs or a sum of both.

Up to thirty eight bands of parametric or shelving equalization for smoothing system frequency response over the entire bandwidth.

60 storage locations for user programs.

Up to 630 ms signal path (in 21 μ s steps) on inputs for delay towers and clusters and outputs for transducer alignment.

Output Limiters, with adjustable thresholds and automatic attack and release settings based on crossover frequency, protects speakers from overloads damage whilst retaining full musical dynamics.

Front panel controls for channel muting, programming and level information.

Security Lock Out modes for protecting and hiding program settings.

Delay units representable in milliseconds, metres, feet and frames per second.


Polarity reversal on each output.

Digital gain adjustment from -15dB to 15dB.

MIDI system exclusive (sysex) Dump capabilities to save and transfer programs between units and to archive settings.

Wide mains range : 90~250V 50/60Hz.

FRONT PANEL

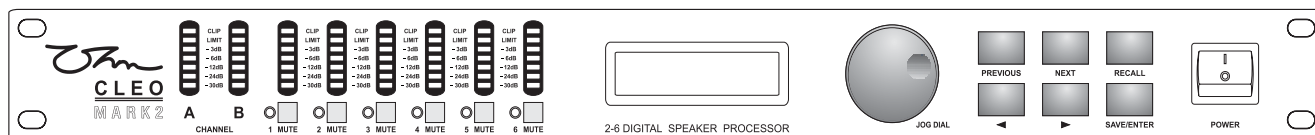

LED Input Barographs




The Input Barographs respond to -30dB input and also indicate digital clipping. These show the input level: -30dB, -24dB, -12dB, -6dB, -3dB, LIMIT, CLIP. In addition, the CLIP lights function both as analog input clip indicators and to show if there is clipping in the digital signal path. If both A&B CLIP LEDs flash but the LED directly below the CLIP does not, this would indicate that the DSP is clipping and not the analog input circuitry. This situation would most likely be caused by excessive digital gain or EQ in one or more outputs.

LED Output Barographs




The Output Barographs represent signal level relative to the limiter threshold

The Jog Dial

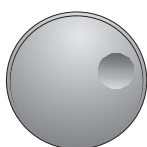

To the right of the display screen there is a continuous **JOG DIAL** that, when turned, changes the values in the value area of the screen. If this control is pushed in it will step through the input and output modes. If held down and turned it will enable fast switching through the available modes.

PREV, NEXT, ◀ and ▶

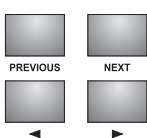

These buttons enable the user to scroll through the various screens and to both select a parameter to adjust (**PREV/NEXT**) and to fine adjust the value of the currently selected parameter (◀ and ▶ =). Where the parameter is non-numeric these keys scroll through a list of options.

FRONT PANEL

SAVE/RECALL

Used to save edited programs to a new memory location and to **RECALL** save setups from the internal memories.



To select a reconfigured program press the **RECALL** button on the front panel. From new the unit does not contain any preset programs but if the unit has been used before it may contain user preprogrammed setups. Use the **PREV / NEXT** buttons located on the left side of the LCD screen to choose the correct program. Press the **RECALL** again to enable the program.



The save key is also used as an **ENTER** button to confirm certain operations. Pressing the **SAVE** key when in recall mode will exit the operation and pressing **RECALL** in a save operation will achieve the same results.

MUTE



Press any of the front panel **MUTE** keys to toggle the channel in and out of mute. The button will light red when the output is muted.


LCD Display



This display can generally be addressed in four working areas:

1. The top left area shows the current operational mode (Input or Output).
2. The bottom left area displays the currently selected parameter associated with the above mode.
3. The bottom right area indicates the value associated with this parameter.
4. The top right area only displays information relating to the current state of the **CLEO**.

**Mode
Parameter**

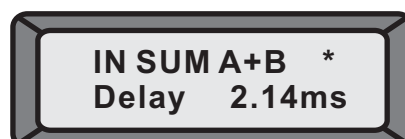

**Information
Value**

OPERATION

1. PROGRAMS

1.1 Program Saving

A program can be stored in any one of the 60 available memory locations. Pressing **SAVE/ENTER** displays the **Save screen** with the last used program on the screen. Pressing either **PREV/ENTER** or turning the **JOG DIAL** enables the selection of the required memory for saving your new program.




1.2 Program Naming

The program can be given a name using alphanumerical characters of up to 8 digits in length. To input a new name, press the ► to move the cursor into the name area of the screen. The screen will display the current name of the program that is being edited (after a short time), and the cursor will locate under the first character to be modified. Characters can be changed using the **PREV/NEXT** buttons or the **JOG DIAL** and the next character along can be selected using the ► Button. Use the ◀ button to go back to change or correct previously set characters.


Pressing **SAVE / ENTER** a second time will save the new name if the program location is not locked.

1.3 Program Lock

User programs can be locked to prevent accidentally overwriting the memory. The store will fail if the lock button character is displayed when **SAVE / ENTER** is pressed. The '**Program Locked**' message will appear on the screen for a few seconds, when the message disappears the lock can be turned off with either the next button or by turning the **JOG DIAL** anticlockwise. This will now successfully save the new name.

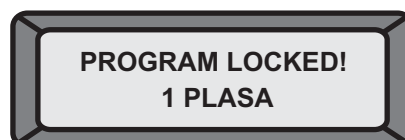

After pressing the **SAVE / ENTER** button the CLEO asks whether the program should be saved '**Locked**' or '**Unlocked**'. Turning the **JOG DIAL** will select between the two options, select your preference and press **SAVE / ENTER**.

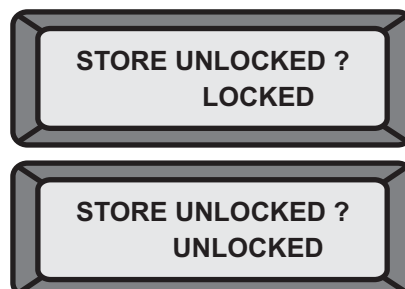

1.4 Program Recall

Pressing **RECALL** will enter the recall mode with the last used program on the screen. Use the **PREV / ENTER** buttons or the **JOG DIAL** to select a program to recall. Only programs that have already been stored will be available to choose from. There will always be at least one default program in existence in the unit's memory.

OPERATION



Pressing **RECALL** a second time will recall the program.

1.5 Delete Program

Under **Utilities** mode, press either ◀ or turn the **JOG DIAL** clockwise, enter into the **Delete Program** Mode:



Choose the program to be deleted using the ◀ and ▶ buttons.
Press enter to delete the program.


Pressing the **PREV/NEXT** buttons at any time will exit the **Delete Program** mode.

Note: locked programs have to be unlocked to be deleted, this applies to Program Lock and OEM/Owner locks.

2. CONFIGURATION

2.1 Configuration

Configuration is the basis of the unit and saved as part of the program information, along with the Stereo Link setting associated with the mode chosen here. Changing this mode reconfigures the overall routing and linking of the unit. The operation has to be confirmed, as routing, linking, delay linking and crossover band name will all be changed. The unit will also mute outputs to ensure that appropriate bandwidth settings can be checked before continuing. The output parameters can now be changed including the routing, delay linking and band names as required.

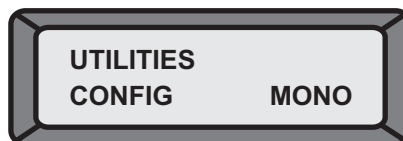

A number of particular system configurations are possible using that CLEO. Select the configuration that is closest to your needs and change the parameters as necessary. The configuration setting is saved as part of the program data when a setup is stored to a user memory.

To select the desired configuration use the ◀ and ▶ buttons or the **JOG DIAL**. This will display a screen similar to the one shown below that asks to change the setup to the displayed configuration.



OPERATION

Press **SAVE/ENTER** to reconfigure the CLEO to the desired set up.
Pressing any other keys will cancel the operation and return you to the previous configuration.

2.2 Mono Mode

Switching to Mono configuration forces all Outputs to be routed from input A.
Crossover frequencies are set to OUT, i.e. Full range operation.
Delay linking defaults to off.
Stereo linking is unavailable.
Band names will be changed to 'Band 1' through 'Band 6'




2.3 2 Channel * 3 Way Mode



- ◆ Output 1,3 & 5 are routed from Input A.
- ◆ Output 2,4 & 6 are routed from Input B.
- ◆ All delay linking defaults to off.
- ◆ Stereo Link will be switched on.
- ◆ Band names will be set to 1&4 'low', 2&5 'mid', 3&6 'high' for Outputs 1~6 respectively.

NOTE: LOW AND HIGH FREQUENCIES ARE SET TO DEFAULT VALUES.

If the CLEO is used for a stereo 2 way only system, Outputs 3-6 would be used with Low (3&4) and High (5&6). This allows Subwoofers to be added later on Output 1&2 without the need to rewire existing systems.

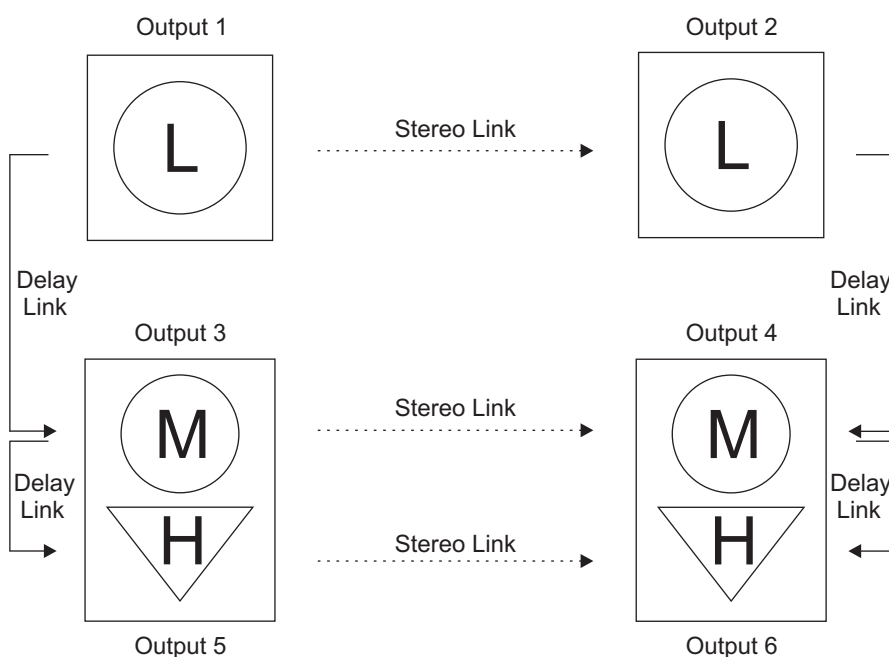


OPERATION

2.4 LCR 2 Way Mode

When using a derived centre cluster feed such as in LCR (Left, Centre, Right) installation, the configuration can be changed to a 3 channel 2 way configuration, where the centre is a sum of A &

- ◆ Outputs 1 & 4 are routed from Input A.
- ◆ Outputs 3 & 6 are routed from Input B.
- ◆ Outputs 2 & 5 will be routed from Input sum A+B.
- ◆ All delay linking defaults will be switched off.
- ◆ Stereo Link will be switched on.
- ◆ Band Names will be set to 'Low' & 'High'.

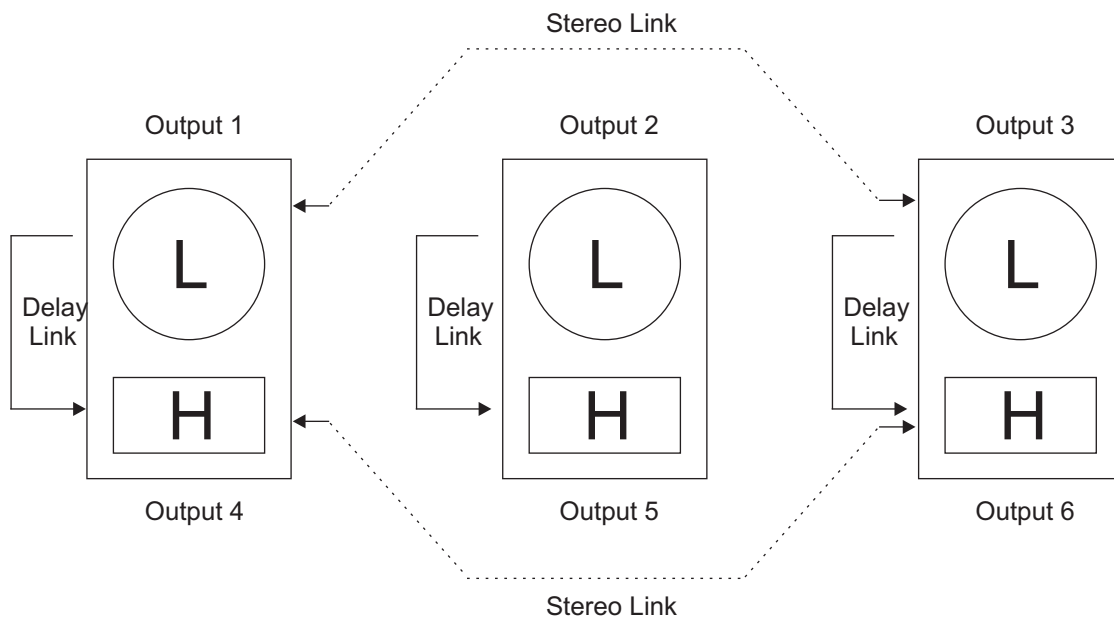

3. STEREO LINK

3.1 Stereo Link

This parameter adjusts the stereo linking of various input and output parameters and works in conjunction with the configuration setting. This parameter is also stored as part of the program data.



In 2 channel 3 way mode, Output pairs 1&2, 3&4, 5&6 are linked.

In LCR 2 way mode outputs 1, 2 & 3 are typically low and 4, 5 & 6 are high.

3.2 Step and Offset

There are two different relationships between linked parameters: Step and Offset.

A step parameter has discrete selections such as Filter type, High pass slope, Polarity, etc. When channels are linked and a step parameter is changed, e.g High pass slope type, both channels values will be forced to be the same.

OPERATION


Offset parameters don't have discrete selections, instead they have a range of numerical values such as gain, frequency or delay. These parameters can have offsets between them when the channels are linked. If any linked parameter reaches the value limit, none of the linked parameters will be able to move further in that direction.

Table 1 Linked parameter relationships


Parameter	Linking Type	2 Channel 3 Way	LCR 2 Way
Input Delay	Offset	A-B	A-B
Input EQ Type	Step	A-B	A-B
Input EQ Frequency	Offset	A-B	A-B
Input EQ +/-	Offset	A-B	A-B
Output Name	Offset	1-2, 3-4, 5-6	1-3, 4-6
Output Source	Offset	A(1, 3&5) / B(2, 4&6)	A(1&4) / B(2&6) / A+B(3&5)
Output Gain	Offset	1-2, 3-4, 5-6	1-3, 4-6
Output Limit	Offset	1-2, 3-4, 5-6	1-3, 4-6
Output Delay	Offset	1-3, 3-5, 2-4, 4-6	1-4, 2-5, 3-6
Output Delay Link	Offset	1-3, 3-5, 2-4, 4-6	1-4, 2-5, 3-6
Output Polarity	Step	1-2, 3-4, 5-6	1-3, 4-6
Output Lo Shape	Step	1-2, 3-4, 5-6	1-3, 4-6
Output Lo Frequency	Offset	1-2, 3-4, 5-6	1-3, 4-6
Output Hi Shape	Step	1-2, 3-4, 5-6	1-3, 4-6
Output Hi Frequency	Offset	1-2, 3-4, 5-6	1-3, 4-6
Output EQ Type	Step	1-2, 3-4, 5-6	1-3, 4-6
Output EQ Frequency	Offset	1-2, 3-4, 5-6	1-3, 4-6
Output EQ +/-	Offset	1-2, 3-4, 5-6	1-3, 4-6
Output EQ Width	Offset	1-2, 3-4, 5-6	1-3, 4-6

OPERATION


4. CROSSOVER MODE

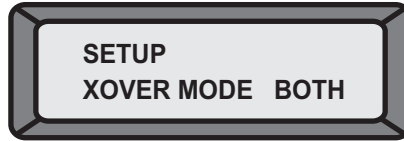

This Utility allows the crossover slopes of the associated bands to be linked together for ease of setting. For example, when in '**Both**' mode changing the frequency of the Hi slope of an output channel set up as say 'low' band will also change the frequency of the Lo slope in the adjacent 'Mid' band output channel. The bands do not necessarily need to actually crossover at the same frequency as an offset can be maintained between them.

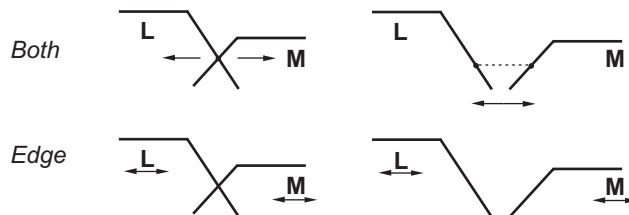


Edge mode keeps all the crossover slopes separately adjustable. This mode is useful in initial system set up to tune a driver/cabinet's individual response.

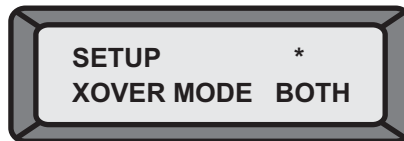

5 DELAY UNITS

Pressing the **PREV/NEXT** button, you will be able to scroll to the **Delay Units screen**.

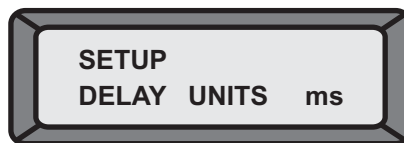

Delay Units can be changed for the specific application to display in:

Milliseconds (ms)

Frames per second (24, 25 & 40 fps)

Feet/inches (ft`ins')

Metres (m)

Use the ◀ and ▶ button or **JOG DIAL** to select the preferred measurement units.

Returning to the delay parameter will then allow the delay value to be viewed and adjusted in the selected units.

OPERATION

6. SECURITY LOCK OUTS

6.1 Security Settings

There are three levels of security for the unit, **Lock Out**, **OEM Lock** and **Owner Lock**. These are used to protect the parameters or programs from being inadvertently changed or tampered with by unqualified or unauthorized users.


6.2 Lock Out

This is the most basic security. With **Lock Out** on, no parameters can be adjusted (except Lock Out and Display Contrast), mutes and trims are inactive and no programs can be stored or recalled. Unless you know how to unlock the unit in the Utilities page, the unit will stay safe from accidental change.




6.3 OEM Lock

OEM Lock allows the user to lock any or all of the parameters in a single program from being seen or adjusted. These locks are stored within the program.

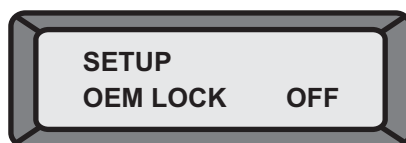

Pressing ► from the **Utilities screen**, shown above, displays the password screen. The default password is 'ABCD'. Enter a new alphabetic password by using the ◀ and ► buttons to move the cursor and the down buttons or **JOG DIAL** to change the letters.

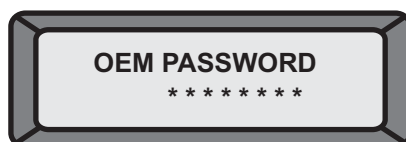

Pressing **SAVE/ENTER** briefly displays the following message and then enters the **Lock All mode**.



6.4 Lock All

This screen allows all the parameters to be locked immediately, they can be selectively unlocked at a later date. To lock all parameters use ► or turn the **JOG DIAL** clockwise to display 'YES'. If some locks have already been set and you want to unlock them all, set this option to 'YES' then back to 'NO'.

To skip this option, press **SAVE/ENTER**.




OPERATION

6.5 Lock Set Up Mode

A further press of either the **PREV/NEXT** buttons enters the **Lock Set up mode**. Once in the **Lock Setup Mode** it is possible to navigate around the input and output screens as normal but with these important differences:

- ◆ Parameter values can no longer be changed.
- ◆ The **SAVE** and **RECALL** screen are not accessible.
- ◆ Only the **Config** and **Stereo Link Utilities** are lockable.
- ◆ The unit is always unlinked.

If a parameter is unlocked the parameter name and value is displayed as usual. Pressing ► or turning the **JOG DIAL** clockwise changes the value display to a check mark, as shown below, to indicate that this parameter is now locked. Select the particular parameters that are to be locked from view and change their values to check marks. Conversely, if **Lock All** was selected then select and change the parameters state to unlocked, e.g. No check mark as required.

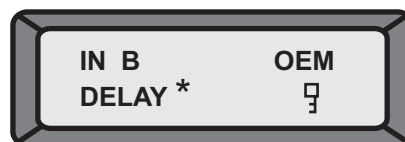

EQs. will not display in **lock setup mode** if they are unassigned, i.e. not given any cut/boost value. Attempting to save into a new **EQ** will display the following screen:




This allows the programmer to prevent a user from assigning further **EQs**. Alternatively the ability to add further **EQs**. Can be left on.

If the **CLEO** is powered down while in **Lock setup mode**, the unit will be returned to the locked state when it is turned back on, with the current password still valid.

IMPORTANT: write down your password and keep it in a safe place. There is no way around this security mechanism without the password.

6.6 Confirming the Lock Selection

When all the desired parameters are locked, confirm the lock setup process with the **SAVE/ENTER** button, (as indicated when first entering the mode). The unit now returns to the password screen with the current password displayed. This password can be changed if required by using the ◀ and ▶ button to move the cursor and the **PREV/NEXT** or the **JOG DIAL** to change the letters.

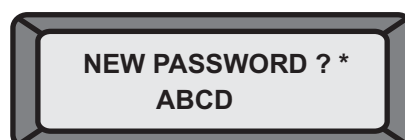


OPERATION

Pressing **SAVE/ENTER** saves the password and returns the display to the **Utilities menu**.

The unit will now not display locked parameters. If all parameters for a particular input or output channel have been locked the selection button for that channel will no longer display any associated screens as there are no parameters available to adjust.

Unlocked parameters display as normal and can still be edited although the associated program cannot be stored back into it's original locked location and must be saved to a new user memory. In order to free up the memory location for further use, the locked program would have to be deleted, using the **Delete Prog** facility in the **Utilities**.


The screen below shows a program that has both been **OEM locked**, (indicated by the diamond symbol) and that unlocked parameters have been edited, (indicated by the asterisk). The program edited symbol '*' is not displayed in the **Lock setup mode**.

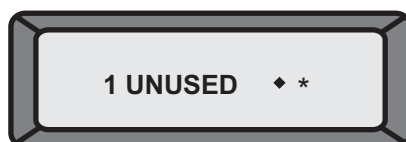

To return to the **Lock setup mode** to revise the selection of locked parameters or to turn the locks off altogether, select the Utilities mode and locate the lock screen. Press the ► button or turn the **JOG DIAL** anti-clockwise to display the **password screen**. Enter the password and press **SAVE/ENTER**, lock will now be switched off.

6.7 Owner Lock

This second level of security operates in exactly the same way as **OEM lock** except that where 'OEM' was displayed there is now the word 'OWN' and the diamond icon is replaced by a padlock, see below left. It is possible to use both these modes in conjunction to give particular access to some parameters and not others. In this case both the padlock and the diamond symbols are displayed in a single icon, see below right. The default password for the Owner lock is 'MINI'.

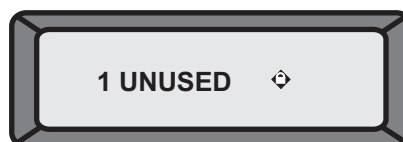

7. CONTRAST

The◀ and▶ parameter button or rotary encoder increase/decrease the display contrast and viewing angle of the **LCD**. A graphical indication of the parameter changing is displayed by a rotating line symbol.



OPERATION


8 DELETE PROGRAM

To delete a program, press either ► or turn the **JOG DIAL** clockwise.



Choose the program to be deleted using the ◀ and ▶ button, or the **JOG DIAL**. Press **ENTER** to delete the program.

Pressing the **PREV/NEXT** button at any time will leave the **Delete Program mode**.

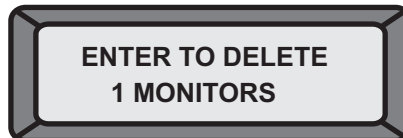

Notes:

Locked programs have to be unlocked before they can be deleted, this applies to **Program Lock** and **OEM/Owner Locks**.

9 . MIDI OPERATION

9.1 MIDI Channel Number(1-16)

MIDI is used to transmit and receive program changes and to transmit system exclusive dump data between units. Use the ◀ and ▶ buttons or rotary encoder to adjust the channel number from 1 to 16. Both sending and receiving equipment needs to be set to the same **MIDI** channel to communicate correctly.




9.2 MIDI Mode (OFF, PROGRAM, MASTER, THRU, PC PORT)

This mode sets the type of information the **CLEO** transmits on its **MIDI** out socket, and is dependent on the use of the **CLEO** in the system. The possible selections are:


OFF

No **MIDI** messages, except systems exclusive dumps, are transmitted.

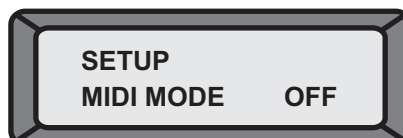

PROGRAM (Prog)


Enables the unit to transmit **MIDI** program changes.

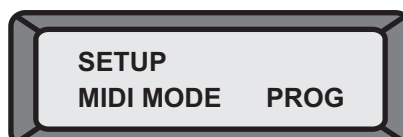

OPERATION


MASTER

Enables transmission of all control changes to other devices on the same **MIDI** channel, e.g. To run two **CLEO** in parallel for stereo applications.

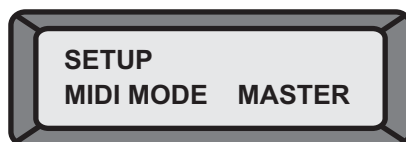


THRU

Allows the throughput of data received at the **MIDI** in socket to the **MIDI** out.

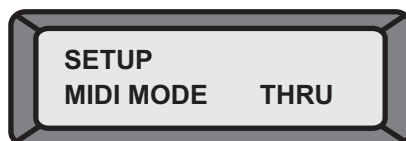


PC PORT

This mode allows the RS-232 port on the rear of the **CLEO** to be used to perform **MIDI** systems exclusive dumps and to control other **CLEO**.

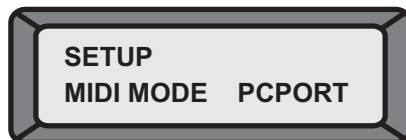

9.3 MIDI Systems Exclusive Dump

This Utility is used to transfer Program information between **CLEO** units of the same model as well as to any **MIDI** Sysex (System Exclusive) capable sequencer or computer. Attach a **MIDI** cable

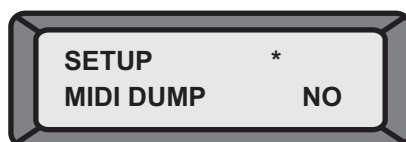

Pressing the ► button on the sending unit will display the prompt screen as seen below.



A **MIDI** sysex message is now sent out that prompts the receiving unit that an incoming **MIDI dump** will occur. A receiving **CLEO** should display a message to allow an incoming dump.


If you do not want the receiving unit to have it's memories overwritten then press the ◀ button on the receiving unit to change the '**Allow Dump?**' Message to '**NO**'. The receiving unit will return to normal operation and ignore any incoming program information.

Pressing **PREV/NEXT** at any time will return the sending unit to the **Utilities mode**.

Pressing **SAVE/ENTER** on the sending unit performs the dump.

OPERATION

The sending unit should now display the following message.

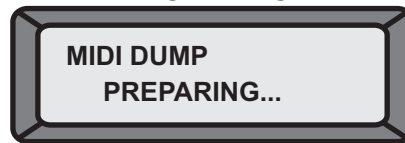


If communication is successful then a progress percentage will be shown on the sending unit. When this reaches 100% the sending unit will return to the **MIDI dump** default screen and the **MIDI dump** is complete.

NOTE: A system dump received by a different model can wipe all the memory information from that unit. If you have several different models linked together and you wish to perform sysex dumps between them make sure that all that should not receive the information are either switched off or set to another **MIDI** channel.

10. INPUT

10.1 Input Mode

There are three input sections: input A, input B and input Sum (A+B). Delay and EQ can be added to inputs A, B and stereo linked A&B but only delay is available directly to the sum A+B.

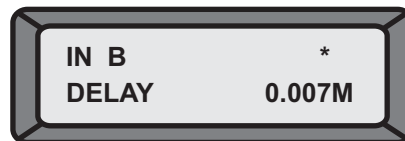


10.2 Input Delay

Delay is available from 0-635ms in 21 μ s increments for input A, input B and input sum A+B. There cannot be more than 635.417ms delay on any input or output path.

Delay units to represent this value, as milliseconds, feet, or frames per second are set in the **Utilities section**.

10.3 input EQ

inputs A, B (and A&B) can have EQ assigned to them. High and Low shelving with 12dB or 6dB/Octave slopes as well as full parametric bell curves are available. To add EQ to input sum A+B, adjust EQ parameters on the individual unmixed inputs (A,B) which are then summed into A+B.

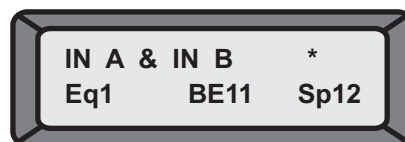

11 OUTPUTS

There are six output sections: output1~output6.

The output parameter screens are accessed by pushing the the **JOG DIAL**

11.1 Stereo Linked Outputs

When the unit is Stereo Linked, combinations of outputs are linked so that when changing parameters such as EQ or crossover settings, both channels change together.


In 2 channel 3 way configuration, output 1 and 2 parameters, output 3 and 4 parameters and output 5 and 6 parameters are ganged in pairs.

OPERATION

In LCD 2 way configuration outputs 1,3 and 5 are linked as are 2,4 and 6.

When outputs are linked, the band name is derived from the channel assigned to the lower numbered output. Similarly, if the linked outputs are offset, the parameter value for the lower numbered output is displayed. To see the values set for the higher numbered output turn stereo link off.

11.2 Output Name

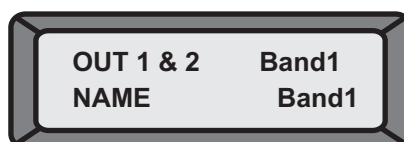


The output band name is selected from a pre-programmed list. Use the ◀ and ▶ button or the **JOG DIAL** to scroll through the list. Choose a name that most appropriately describes the usage for each channel.

Available names:

- L Low, L Mid, L High
- R Low, R Mid, R High
- C Low, C Mid, C High
- Subs, Low, Low Mid, Hi Mid, High
- Mid+High
- 1"Horn, 1.5"horn, 2"horn
- Bullet
- Flat
- Unused
- Bar, Bstage
- Delay
- Centre
- Mono
- Aux
- Delay 1-6
- 10", 12", 15", 18", 21", 24"
- L Subs, C Subs, R Subs


Source

Choose which input or combination of inputs supplies the output channel. The options are input A, input B or the sum of inputs A and B - denoted as A+B. When stereo linked in 2 channel 3 way mode, the selection is normally inputs A&B.

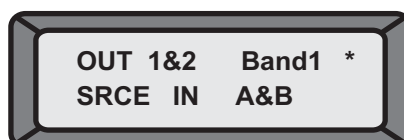

11.3 Gain


Output channel gain is adjustable from -15dB to +15dB in 0.2dB steps. The nominal setting for outputs is 0dB.

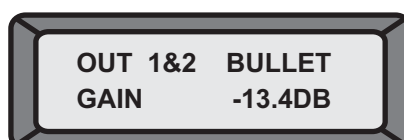

OPERATION

11.4 limiter

Each output channel has a dedicated limiter that can be set to a threshold anywhere between -10dBu to +20dBu.

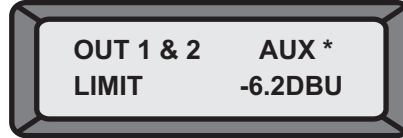

There are two primary uses for limiters: One is for prevention of amplifier clipping and the second is to limit the amount of power transmitted to the transducers. In applications where systems are likely to run at high volume levels for long periods of time, setting the correct limiter threshold is essential for the protection of speaker drivers.

The value set in this screen is also the output channel meter reference value. If the limiter is adjusted to say 2.0dBu, then the output meter for the selected channel will represent +2dBu at LIMIT with the -3, -6, -12 and -20dBu reading relative to that level. I.e. -1dBu, -4dBu, -8dBu and -18dBu.

Note that limiters are usually set slightly below the maximum settings.


Limiter Level Calculations

The method for setting the limiting threshold is given by the following equation:

$$\text{Limiting Threshold (dBu)} = \text{Transducer voltage limit (dBu)} - \text{Amplifier Gain (dB)}.$$

11.5 Delay


Output Channel Delay is adjustable from 0-365 ms in 21 μ s. At no time can there be more than 635 ms of delay on any output path. The ◀ and ▶ buttons select delay time values in 21 μ s steps whilst the **JOG DIAL** can be used to select larger delays quickly.

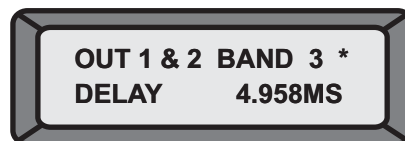

Use the ◀ and ▶ buttons or the **JOG DIAL** to select the preferred measurements units.

Returning to the delay parameter, by pressing the associated output button, recalculates the delay values for all displays and remembers this setting until it is either changed or stored with a program.

11.6 Delay Linking

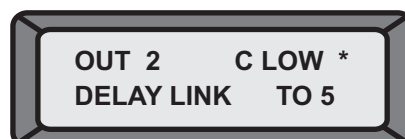

This is used to maintain offsets between various channels. Typical uses include setting individual transducer delay offsets for optimum performance and then linking them, i.e. Driver alignment. If either linked channel is changed, the other linked channel(s) will follow and maintain the offset.

OPERATION

Normally, the transducer delays are set first, then the overall delay for cluster alignment or delay tower set-up second. The following table shows the linkable channels in each mode.

OUTPUT	Mono	2 Channel 3 Way	3 Channel 2 Way
1	2	3	4
2	3	4	5
3	4	5	6
4	5	6	None
5	6	None	None
6	None	None	None

When using **Delay Linking**, it is recommended that the adjustment order is:

- ◆ Driver alignment within cabinets
- ◆ Cluster alignment within clusters
- ◆ Delay alignment between clusters. In two channel 3 way and LCR 2 way, the default settings include Delay Linking as well as Stereo Linking.

11.7 Polarity


Using the ◀ and ▶ buttons or the **JOG DIAL** the polarity of the output signal can be inverted. If the polarity is changed on a linked output, both outputs will change in the same selection.



11.8 Crossover Shapes and Frequencies

Low edge filter type

The low edge filter can be selected from the Bessel 12, 24dB/Octave or Butterworth 6, 12, 18, 24 or 48dB/Octave or Linkwitz-Riley 12, 24 and 48dB/Octave.

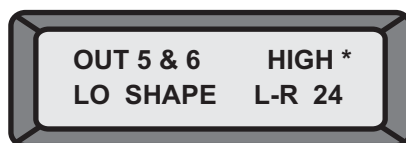

The options are displayed as:

BUT 6,
 BUT12,BES12,L-R12,
 BUT18
 BUT24,BES24,L-R24,
 BUT48,L-R48.

Low edge filter frequency

This control adjusts the cut off frequency of the selected Low Frequency (high pass) Crossover. The range is from 15Hz to 16KHz in approximately 1/6 Octave steps with 'Out' at the bottom end and 'Off' when adjusted beyond 16KHz.

OPERATION



Note: If the Low edge filter frequency is raised beyond 16KHz, the channel output will be switched off. This is different to muting the output channel in that any signal assigned to this output will not indicate on the output meters.

High edge filter type

The high edge filter frequency can be selected from Bessel 12, 24dB/Octave or Butterworth 6, 12,18,24 or 48dB/Octave or Linkwitz-Riley 12, 24 or 48dB/Octave.

The options are displayed as:

BUT6
BUT12, BES12, L-R12
BUT18
BUT24, BES 24, L-R24
BUT48, L-R48.



High edge filter frequency

This control adjusts the cut off frequency of the selected High Frequency Crossover. The range is from 15Hz to 16KHz in approximately 1/6 Octave steps with 'Out' beyond 16KHz.



12 Assignable EQ


Multiple EQ's can be assigned to individual input and output channels.

If there is no EQ on the currently selected channel (and there are filters available), the **PREV** button will step into an unused Bell EQ with 1KHz frequency, 0dB Cut/Boost and width of 0.3. Further EQ's can only be assigned to a channel after this EQ is used first by applying some degree of Cut or Boost, pressing the **PREV** button then steps into a new EQ.

The EQ Parameters are in the order: EQ type, EQ frequency, EQ Cut/Boost amplitude and then EQ Width (for Bell type frequencies only).

EQ type


The screen below shows that the first EQ is on outputs 1&3 (labeled as 'Low') and that it is assigned in stereo, denoted by the S, which also indicates that two EQ's are in use (across the two channels). A 12dB/Octave low shelving type has been chosen and there are currently still 26 spare DSP filters.

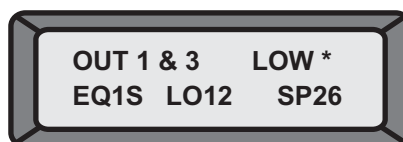

OPERATION


EQ Frequency

The frequency of the EQ is adjustable from 15Hz to 16Khz in approximately 1/6 Octave steps. The screen below shows that this is the first EQ on Output2 (labeled as 'High'). It has a frequency of 1Khz. If using a Low Shelving filter this would be the 3dB point.

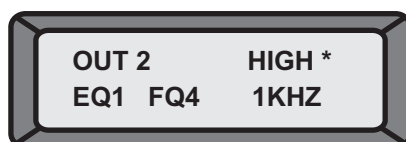


EQ Cut/Boost

Selectable gain from -15dB to +15dB in 0.5dB steps. Setting an EQ Cut/Boost to 0dB effectively de-assigns the filter and allows it to be assigned to another channel.

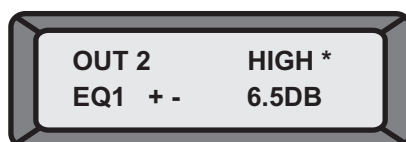


EQ Bandwidth

Width is only available for Bell type EQs 0.05 to 3.00 Octaves in 0.05 Octave steps.

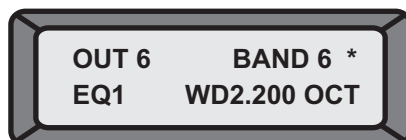

REAR PANEL

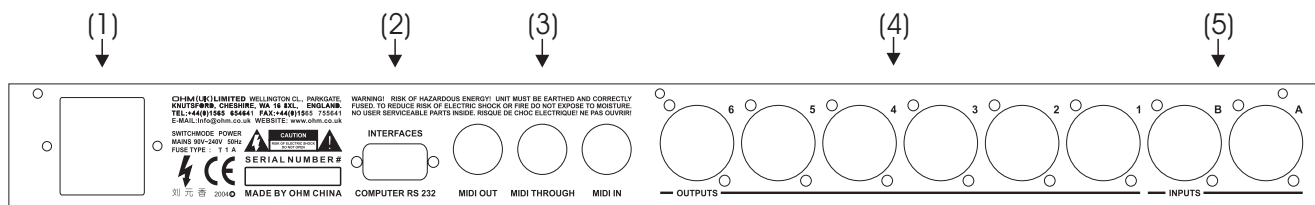

- (1) POWER SUPPLY IEC MAINS PLUG: 90~250VOLTS, 50/60HZ
- (2) RS232 CONNECTOR
- (3) MIDI OUT/MIDI IN/MIDI THRU
- (4) OUTPUTS: OUTPUT 1~6
- (5) INPUTS: INPUT 1~2



SPECIFICATIONS

Input Section

Input Impedance	10kOhm, electronically balanced
Maximum Input Level	+20dBu
Input Gain	+/-15dB variable in 0.1dB steps
CMRR	Better than 50dB (30Hz-20kHz)
Input Connector	XLR-3F or equivalent

Output Section

Output Impedance	<50 Ohms, electronically balanced
Maximum Output Level	+20dBu into 600 Ohms or greater
Output Gain	+/-21dB, variable in 0.1dB steps
Output Connector	XLR-3M or equivalent Transformer Balancing optional

Crossover Filters

Slopes	6, 12, 18, 24, or 48dB per octave (Filter type dependant)
Type	Bessel, Butterworth, or Linkwitz-Riley

Delays

Delay Step	21µs
Max Delay time	630ms

EQ

Maximum number of EQ filters	60 (depending on crossover slopes)
EQ Type	Parametric, Bell or shelving on any filter. Nine filters assigned to Dynamic EQ.
EQ Gain	+/-15dB, variable in 0.2dB steps
Q (bandwidth)	0.05 to 3 octaves, variable in 0.05 steps
EQ freq	15Hz to 20kHz
Dynamic Slope	2:1 to 20:1 (dynamic EQ's only)


General Performance

Frequency Response	with filters out 15Hz - 20kHz, +/-0.25dB 15Hz - 40kHz, +/-3dB
Dynamic range	>112dB unweighted 22Hz to 22kHz , >117dB on AES/EBU input
Channel Separation	>80dB, 30Hz to 20kHz
Distortion (THD)	<0.005%, 20Hz - 20kHz @+10dBu output
Input Metering	-20dB, -12dB, -6dB, -3dB, CLIP relative to Clip point (+20dBu)
Output Meter Indication	SIG (-40dB), -20dB, -12dB, -6dB, -3dB, 0dB, OVER (+6dB) relative to limiter threshold setting

General

Dimensions	(481mm x 44mm x 223mm)
Weight	3.6kgs, unpacked
AC Power	90V-250V 50/60Hz
Fuse	T 1A

NOTES.

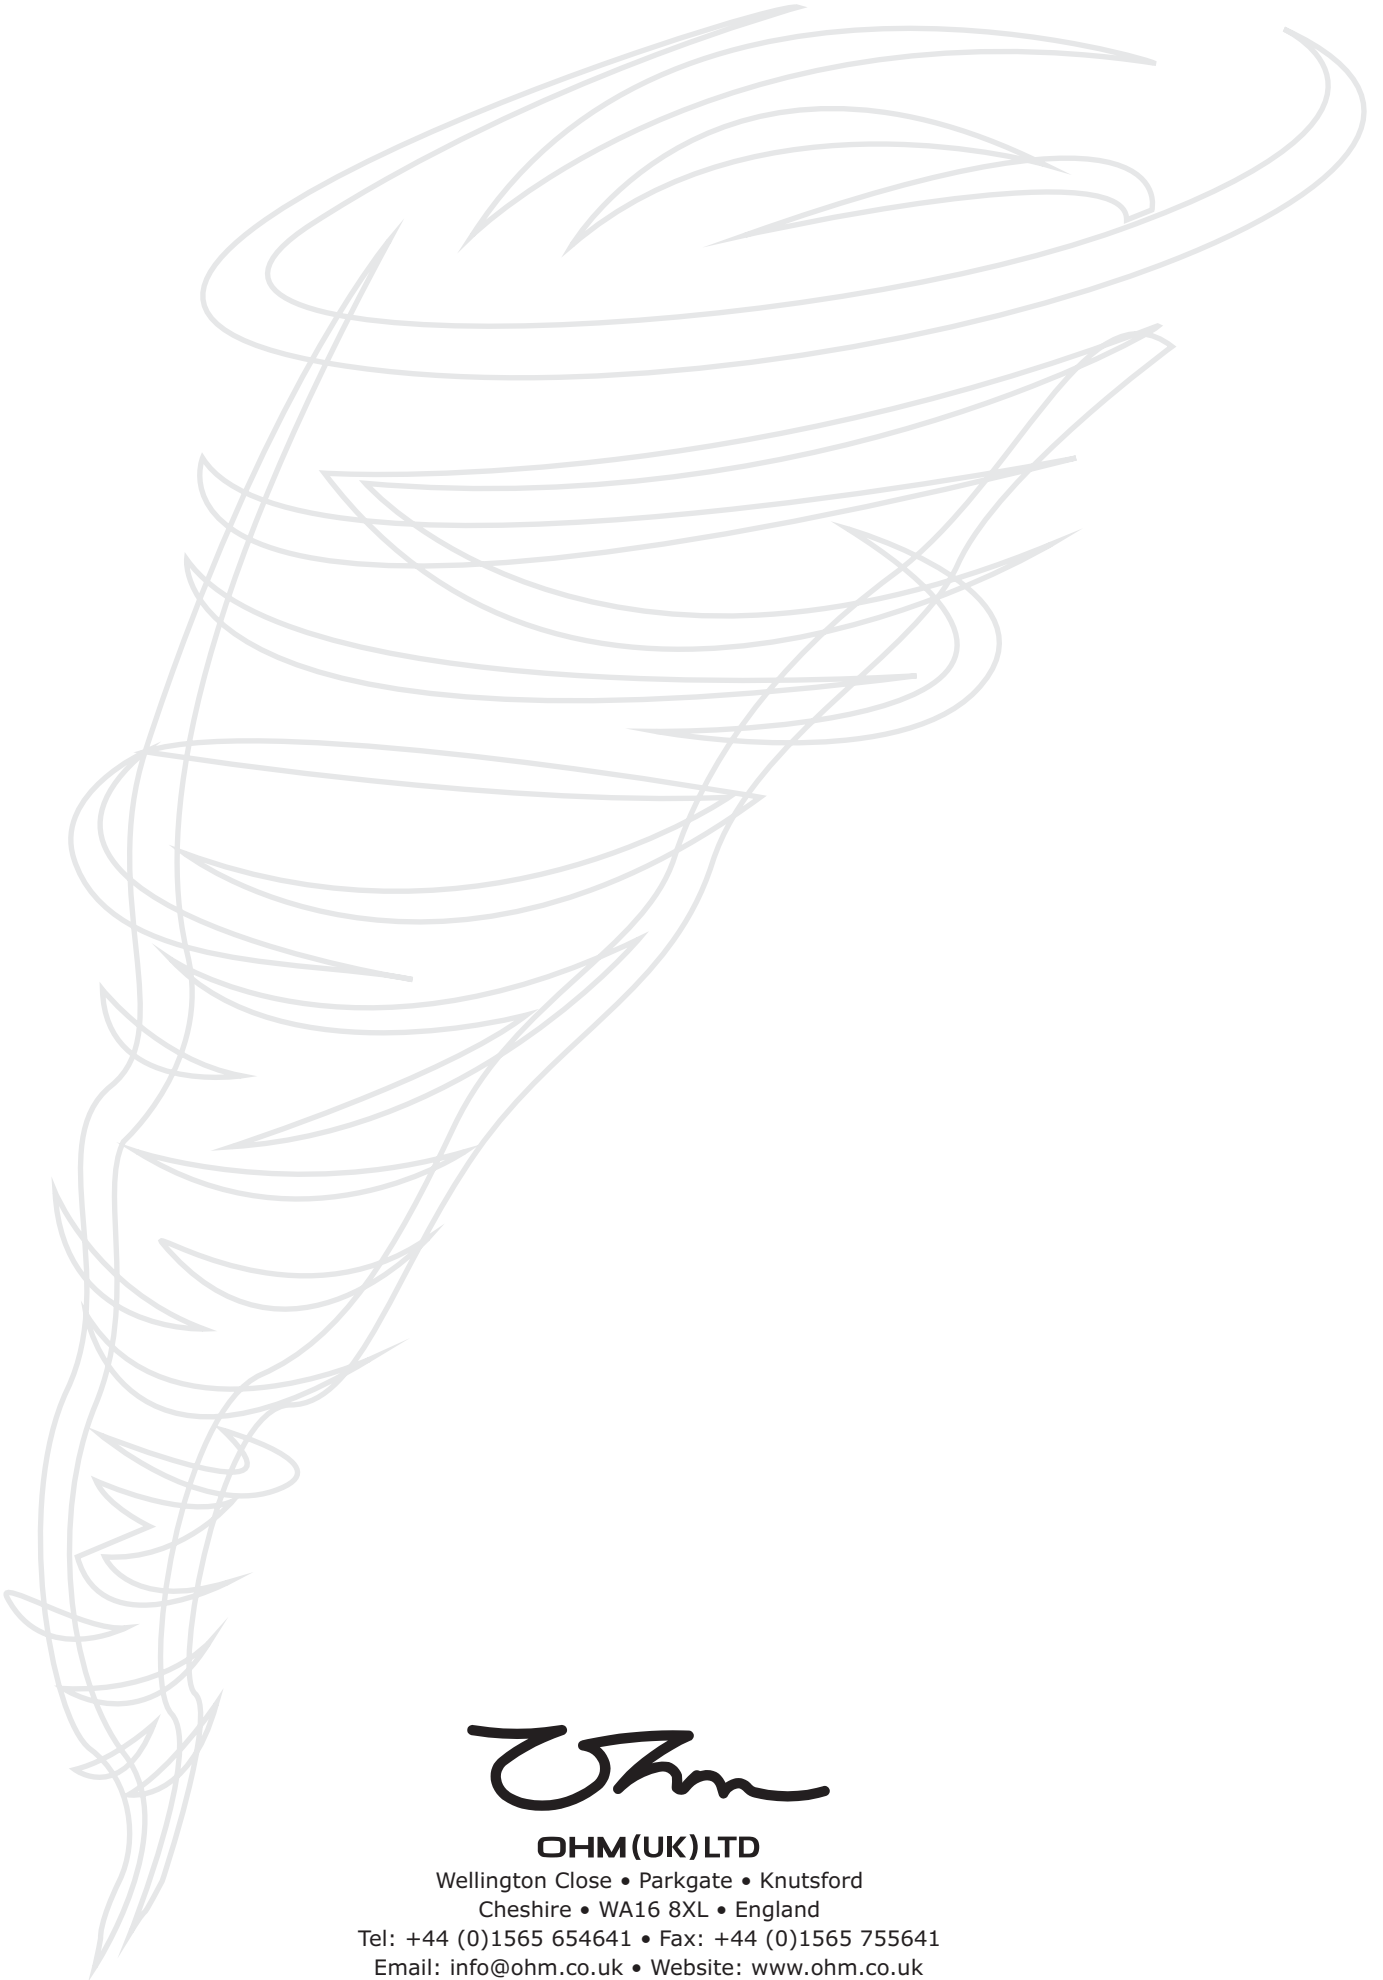

Ohm

OHM(UK)LTD

Wellington Close • Parkgate • Knutsford
Cheshire • WA16 8XL • England
Tel: +44 (0)1565 654641 • Fax: +44 (0)1565 755641
Email: info@ohm.co.uk • Website: www.ohm.co.uk