



ASRock® Jumpers and headers setting guide


IMB-780

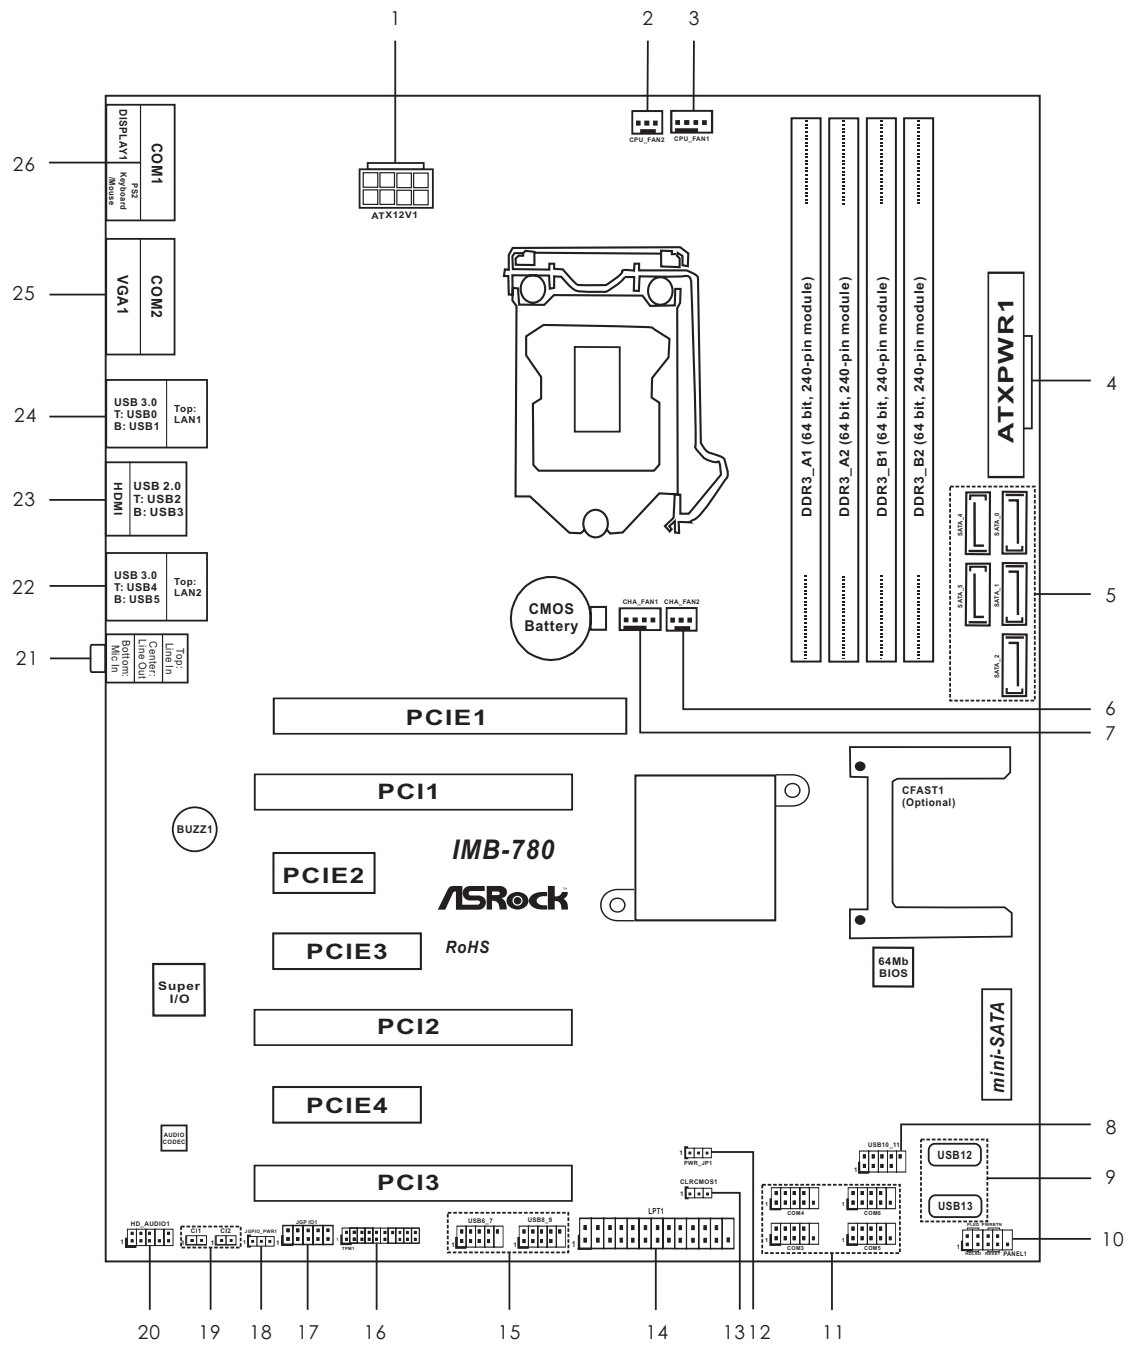


1 : ATX 12V Power Connector

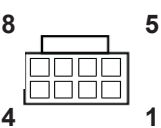


8, 15 : USB2.0 Headers

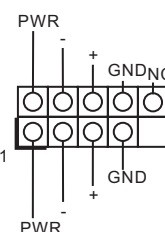

14 : Printer Port Header

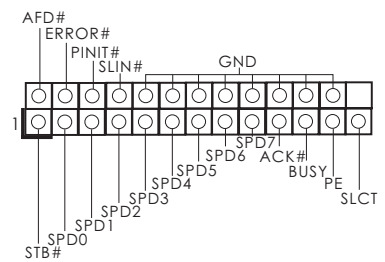


2 : 3-Pin CPU FAN Connector (+12V)

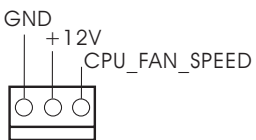


9 : USB2.0 Ports


10 : System Panel Header

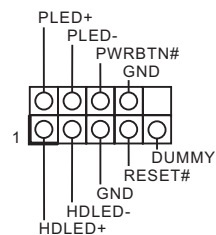


16 : TPM Header

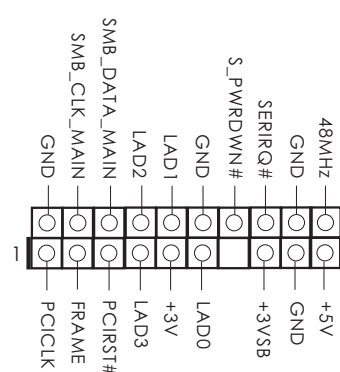

3 : 4-Pin CPU FAN Connector (+12V)

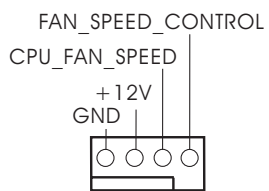


11 : RS-232 Port 4 Pin Headers

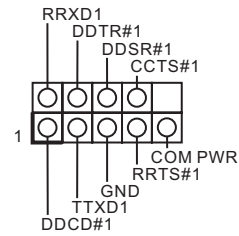


4 : 24-pin ATX Power Input Connector

5 : SATA3 Connectors

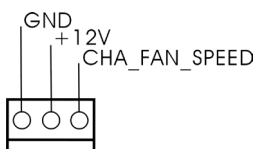

12 : ATX/AT mode Selection

1-2: AT mode
2-3: ATX mode

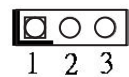


7 : 4-Pin Chassis FAN Connector (+12V)




13 : Clear CMOS Header

1-2: Normal
2-3: Clear CMOS

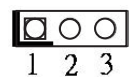

17 : Digital Input / Output Pin Header

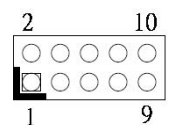



PIN	Signal Name	PIN	Signal Name
1	Digital Output 0	2	Digital Input 0
3	Digital Output 1	4	Digital Input 1
5	Digital Output 2	6	Digital Input 2
7	Digital Output 3	8	Digital Input 3
9	JGPIO_PWR1	10	GND

18 : Digital Input / Output Power select

1-2: +12V

2-3: +5V

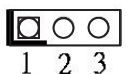


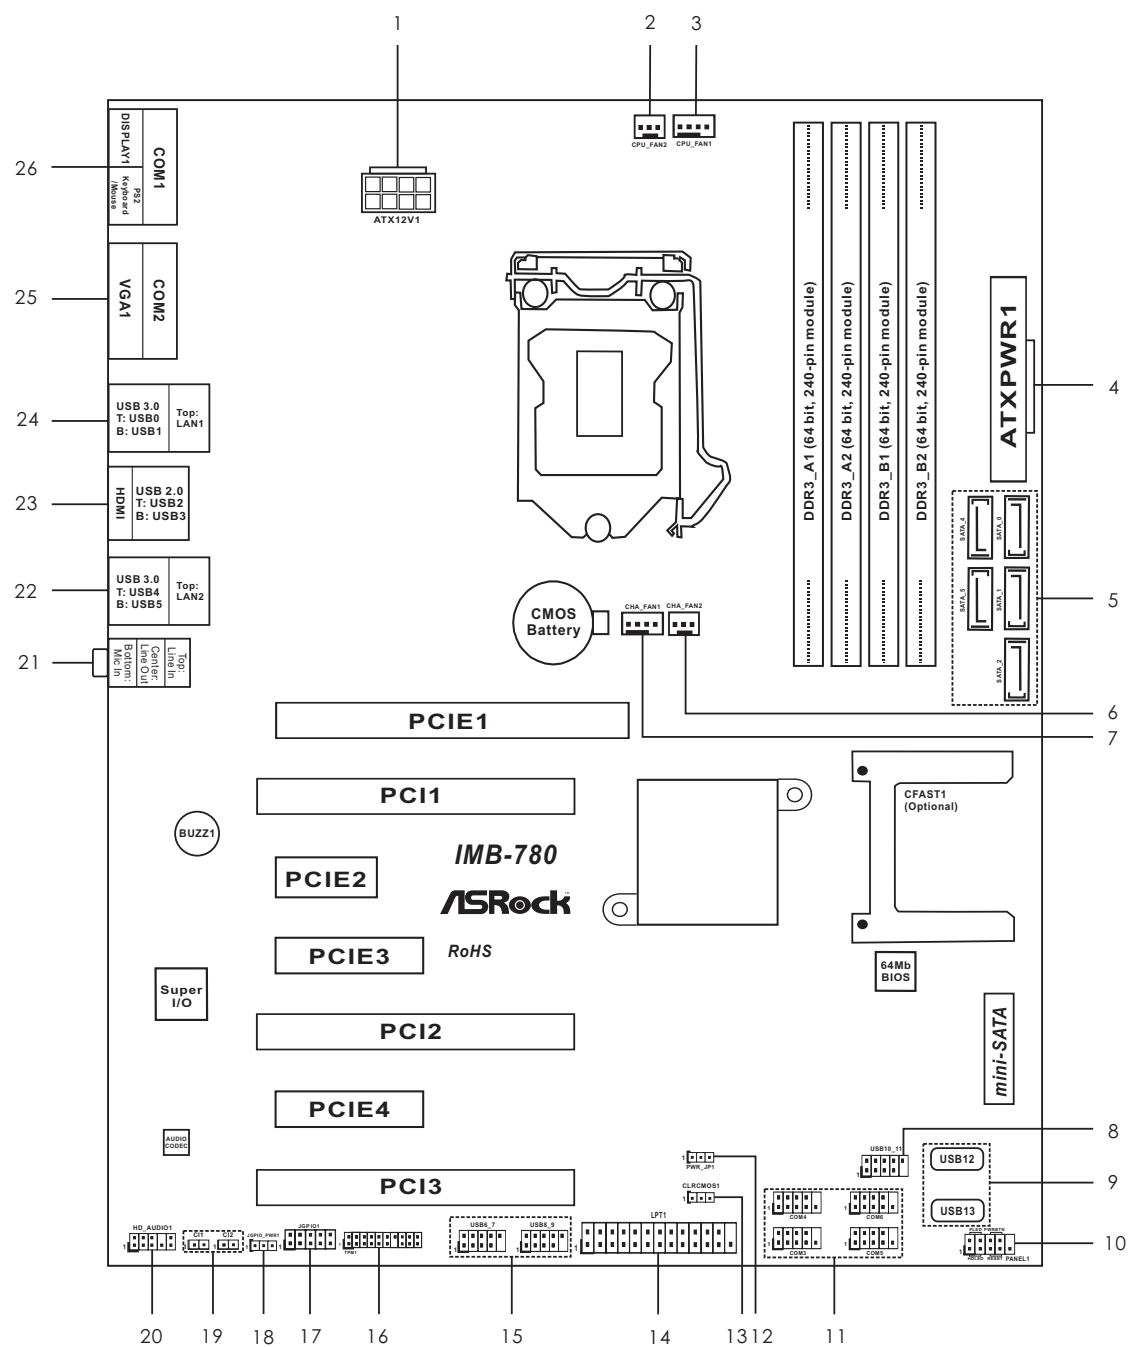

19 : Chassis Intrusion Headers



20 : Front Panel Audio Header

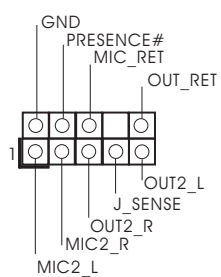

21 : Audio Jacks

Blue - Line In
Green - Line Out
Pink - Mic In

22 : Top : RJ45 LAN Port 2

Bottom : USB3.0 (USB3_4_5)

23 : Top : USB2.0 (USB23)

Bottom : HDMI

24 : Top : RJ45 LAN Port 1

Bottom : USB3.0 (USB3_0_1)

25 : Top : COM2

Bottom : VGA1

26 : Top : COM1

Bottom left: Display1

Bottom right: PS/2 Keyboard/Mouse