

ADDONICS TECHNOLOGIES

Model: ZHDUESA

I. HDD Duplicator Overview

Note: Make sure that the capacity of the target hard disk is equal or larger than the source hard disk.



Step 1


Connect the **Source drive** into the source eSATA port at the back of the HDD Duplicator. Make sure that the source eSATA drive is powered on.

Step 2

Connect the **Target drive** into the target eSATA port at the back of the HDD Duplicator. Make sure that the target eSATA drive is powered on.

II. Connecting the power cable and powering on

- a. Connect the power cord provided from the wall outlet to the back of the HDD Duplicator.

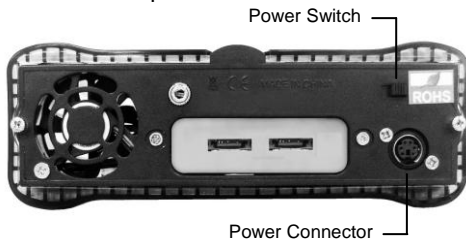


- b. A power switch is located at the back of the enclosure. Slide the switch to the left to turn on the HDD duplicator.

III. The Duplicator Panel

There are four buttons and an LCD on the panel of HDD Duplicator.

- 1 – LCD shows a function or a message.
- 2 – it is used to scroll up function menus.
- 3 – it is used to scroll down function menus.
- 4 – it is used to execute a function.
- 5 – it is used to cancel a function.

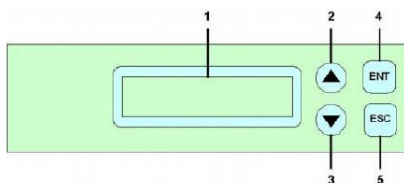

IV. Duplicating a drive

When the duplicator powers on, it initializes and goes through the steps below

Shows the firmware version

HD Duplicator
1-1 Ver:

Initialize SDRAM's status..

Initialize SDRAM

Detect Drives' status.

Detect Drives

Shows the first function: Copy HDD.

1. Copy HD

Copy HDD copies data directly from the source hard disk to the target hard disk.

Press ENT button to begin copy. The system will auto-detect the hard disks and show the following info on the LCD.

Copy-36MB/s 0%
235.7GB 1 : 48

The LCD will show the following info during the copying process: remaining time, completed percentage. The copy speed, capacity and time will vary depending on the source hard disk. Once the copying process is complete the LCD will display the following results.

Copy HD
OK :

The complete user manual of the HDD Duplicator Panel can found in the Driver Disk under User Guides or can be downloaded from

http://www.addonics.com/support/user_guides/

Technical Support

Contact Information

Phone: 408-573-8580
Fax: 408-573-8588
Email: <http://www.addonics.com/sales/query/>
Internet: <http://www.addonics.com>

TECHNICAL SUPPORT

Phone: 408-453-6212
Hours: 8:30 am - 6:00 pm PST
Email: <http://www.addonics.com/support/query/>