




User manual

DELOCK[®]
we move the world

USB 2.0 PCI Express card, 4+1 Port

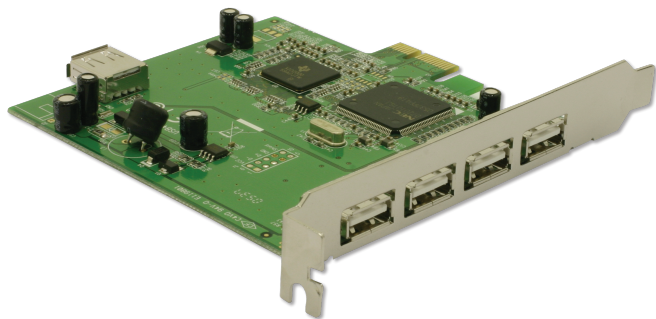

Product-No: 89110

User manual No: 89110-a

www.delock.de



Description

The DeLock PCI Express card expands your PC by four external USB 2.0 ports as well as one internal USB 2.0 ports. You can connect USB devices like e.g. printer, scanner, keyboards, mouse, speaker, MP3 player, CardReader, etc. to the card.

Specification

- USB 2.0 specification revision 2.0
- Data transfer rates: USB 2.0 up to 480 Mbps
x1 PCI Express up to 2.5 Gbps
- PCI Express x1 standard
- Supports PCI Express 1.1 specification
- Supports EHCI and OHCI standard
- Hot Plug, Hot Swap
- for Windows 2000/XP/2003, Linux 2.4x, 2.6x, and MAC G5

System requirements

- PC with one free PCI Express Slot
- Windows 2000/XP/2003, Linux 2.4x, 2.6x, and MAC G5

Package content

- PCI Express card
- Driver CD
- User manual

*Make sure that product package contains all items before operation. If any item is missing or damaged, then please contact your dealer immediately.



Hardware Installation

Note:

Follow the general instructions for installation of the card. If necessary, read the manual of your computer, or ask a specialist for help.

1. Turn off your PC, and unplug the power cord.
2. Open the housing.
3. Remove the slot holder from the available PCI Express slot.
4. Insert the card straight and carefully into the free PCI Express slot, until it is well seated.
5. Use a screw to attach the card to the housing.
6. Reattach the housing, and connect the power cord to the AC adapter.

Driver Installation

Windows XP

1. When the installation of the device is finished, the driver will be automatically installed after you restart the computer. To make sure the PCI Express card works proper, install the driver as follows.
2. Insert the driver CD into the drive.
3. Open the folder: "USB\USB2.0-Nec\Windows\setup".
4. Choose "Yes, I want to restart my computer now." and click on "Close".
5. After restart you can start using the device immediately.

Windows 2000

1. When the installation of the device is finished, the driver will be automatically installed after you restart the computer. To make sure the PCI Express card works proper, install the driver as follows.
2. Insert the driver CD into the drive.
3. Open the folder: "USB\USB2.0-Nec\Windows\setup".
4. The driver will be installed.
5. You can start using the device immediately.



Support Delock

If you have further questions, please contact our customer support
support@delock.de / www.delock.de or phone
0700 - DELOCKGE (0700 - 335 625 43).

You can contact our service hotline during the following times:

Mon - Fry: 9:00 - 17:30 pm charge 0,12 € / min*

* A connection fee applies according to fee schedule of Deutsche Telekom AG or your local telephone provider.

All callers outside of Germany dial please 00493081789324

You can find current product information on our homepage: www.delock.de

Final clause

Information and data contained in this manual are subject to change without notice in advance. Errors and misprints excepted.

Copyright

No part of this user's manual may be reproduced, or transmitted for any purpose, regardless in which way or by which means, electronically or mechanically, without explicit written approval of Delock.