




BRETFORD

UNI1 PRINTER STAND Assembly Instructions

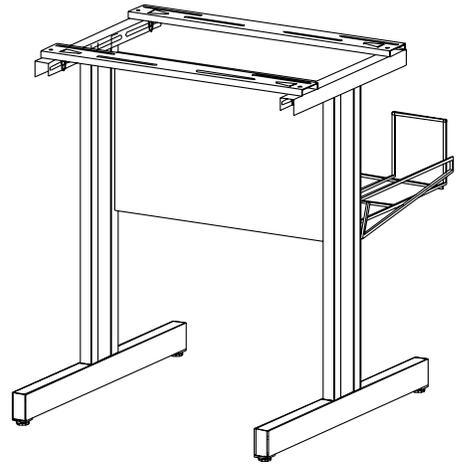

PARTS LIST


| Qty | Part# | Description |
|-----|----------|-------------------------|
| 2 | 010-1627 | Machine Rests |
| 4 | 010-1629 | Extender Brackets |
| 1 | 010-1630 | Modesty Panel |
| 1 | 014-0166 | Wire Basket |
| 1 | 022-1324 | Right Pedestal Assembly |
| 1 | 022-1325 | Left Pedestal Assembly |

HARDWARE LIST

| Ref | Qty | Part# | Description |
|-----|-----|--------------|------------------------------|
| AA | 4 | 015-0045 | Floor Glides |
| BB | 16 | 030-0325 | 1/4-20 x 1/2" Truss Screws |
| CC | 12 | 030-0207 | 1/4-20 Flanged Hex Nuts |
| DD | 4 | 030-0313-901 | Machine Rest Cups |
| EE | 4 | 030-0272 | 1/4-20 x 1/2" Carriage Bolts |
| FF | 4 | 030-0274 | Lock Washers |
| GG | 4 | 030-0006 | 1/4-20 Wing Nuts |
| | 1 | 018-0034 | 13" Ground Wire |


TOOLS REQUIRED

Phillips Screwdriver
Adjustable Wrench

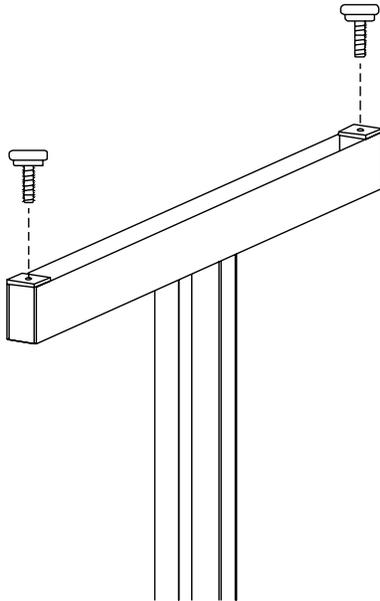


STEP 1

Twist on the floor glides (AA) onto the bottom of both pedestals.

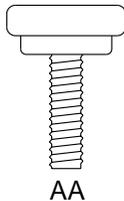


AA

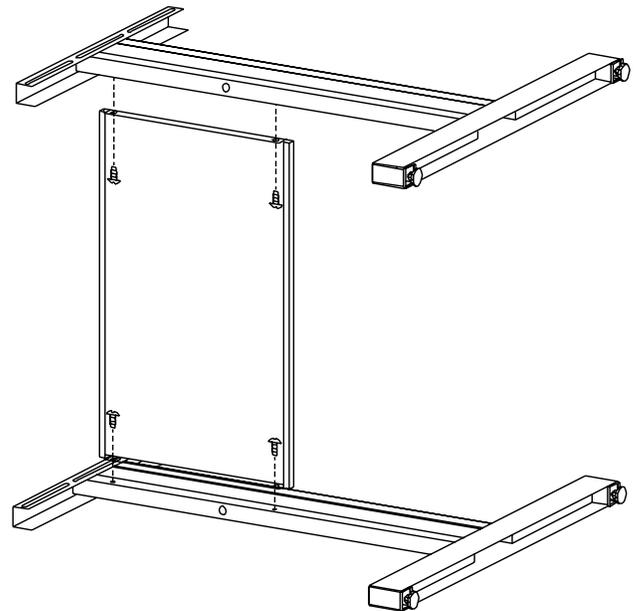


STEP 2

 Lay one pedestal on a flat surface with holes facing upward. Position modesty panel on pedestal panel and attach with screws (BB). Position other pedestal on modesty panel and attach with screws. Stand unit upright.





BB

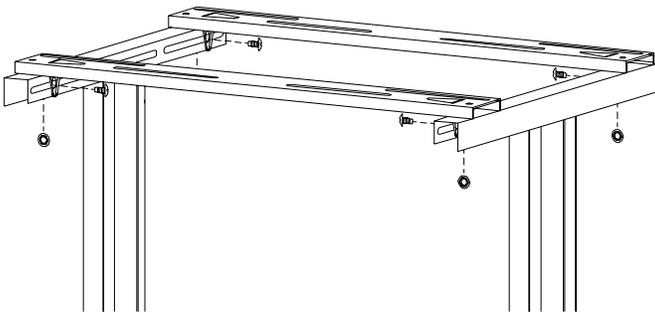




STEP 3

 Attach machine rests between pedestals using screws (BB) and flange nuts (CC) as shown. The spacing of the machine rests is determined by your printer size.

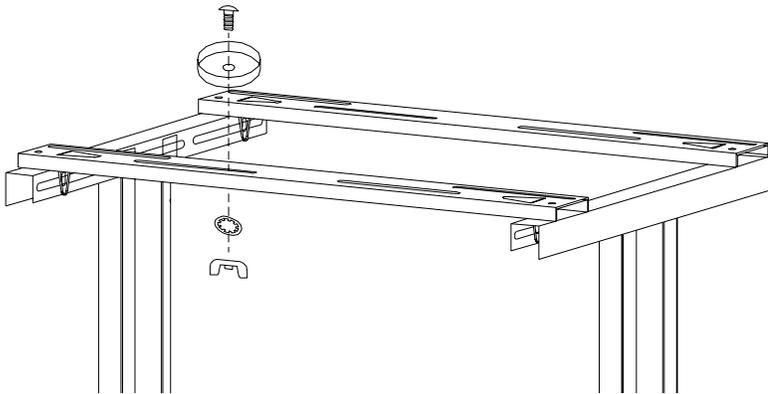


STEP 5

  Fasten machine rest cups (DD) onto machine rests **OR** extender brackets (if used) using carriage bolts (EE), washer (FF) and wing nut (GG) as shown. The location of machine rest cups is determined by the printer size. Once everything is attached, place your printer on stand.

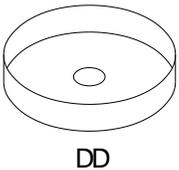


Bretford
 11000 Seymour Avenue
 Franklin Park, IL 60131
 TEL: 847.678.2545
 800.521.9614
 FAX: 847.678.0852
 800.343.1779

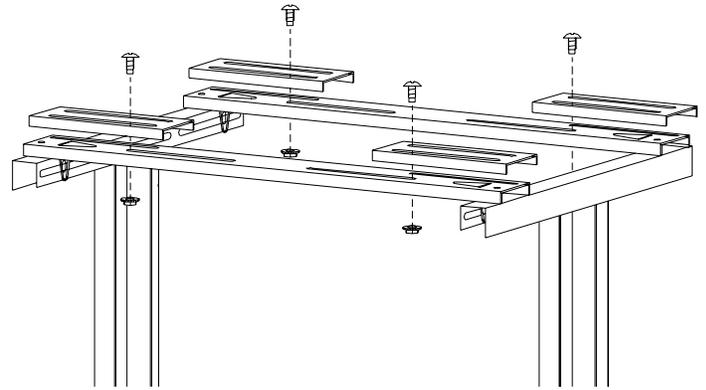

STEP 4

If printer is larger than printer stand, use the extender brackets to give you additional length. Place extender brackets on machine rests and fasten with screws (BB) and flange nuts (CC) as shown. Slide extender brackets out to desired size.

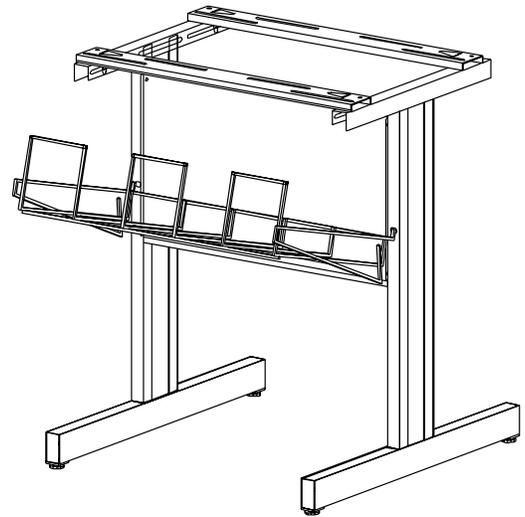

STEP 6

Hook wire basket into the slots on the back of the unit.

NOTE: Included in your hardware pack is ground wire. Consult your printer manual for proper procedures.

Bretford Ltd.
 Technology House
 7 Lake End Court, Taplow
 Bucks SL6 0JQ England
 TEL: 01628 603558
 FAX: 01628 604923