

# Uniden®

## **BTS150** **High Definition** **Bluetooth® Speaker**

---

*For more exciting new products please visit our website:*

*Australia: [www.uniden.com.au](http://www.uniden.com.au)*

*New Zealand: [www.uniden.co.nz](http://www.uniden.co.nz)*

---

# OWNER'S MANUAL

### ***Important Safety Instructions***

- Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
- Do not use this product while driving.
- Use only the power cord and batteries indicated in this manual. Do not expose the battery (or the device) to flames or dispose of it in a fire: the battery may explode. Check with local authorities for possible battery disposal instructions.
- Do not disassemble, modify, or attempt to repair any component of this product.
- Check the laws and regulations on the use of mobile phones and hands-free equipment in the areas where you drive. Always give full attention to driving and pull off the road and park before making or answering a call if driving conditions require.

**SAVE THESE INSTRUCTIONS!**

# Table of Contents

<b>Important Safety Instructions</b> .....	2	<b>BTS150 SPEAKER OPERATION</b> .....	10
<b>BTS150 HIGH-DEFINITION SPEAKER</b> .....	4	Basic Mobile Phone Operations .....	10
What's in the Box? .....	4	Basic Music Operation .....	12
<b>SET UP YOUR BTS150 SPEAKER</b> .....	5	<b>SPECIAL FEATURES</b> .....	14
Charge the Battery .....	5	Play Music through a Wired	
Turn on Your Speaker .....	5	Connection .....	14
Pair Bluetooth Devices to		<b>TROUBLESHOOTING</b> .....	15
Your Speaker.....	6	<b>SPECIFICATIONS</b> .....	17
<b>GETTING TO KNOW THE BTS150 SPEAKER</b> 7		Compatibility .....	17
BTS150 Top.....	7	<b>Two-Year Limited Warranty</b> .....	18
BTS150 Back.....	8		
LEDs.....	9		

## **BTS150 HIGH-DEFINITION SPEAKER**

Uniden's BTS150 high-definition Bluetooth speaker provides clear stereo sound in a compact, portable package. With Bluetooth V2.0 compatibility, the BTS150 pairs with your mobile phone to become a speakerphone for hands free conversations. You can also connect your music player (wired or wireless) for crisp, clear audio.

- Bluetooth V2.0.
- Up to 2 Bluetooth devices can be paired with your speaker.
- Supporting A2DP/AVRCP/HFP/HSP profiles.
- Portable
- Up to 5 hours of play from a fully-charged battery.
- Up to 33 ft (10 m).
- Call Waiting feature



**The BTS150 speaker is not a data storage device; do not attempt to copy files to it.**

### **What's in the Box?**

- BTS150 Speaker
- AC Adapter (E18-00774-01) with USB cable.

# SET UP YOUR BTS150 SPEAKER

## Charge the Battery


1. Slide the main power switch to the ON position (see page 8).
2. Insert the adapter's mini USB connection into your speaker's USB slot (see page 8).
3. Plug the adapter into your computer.
4. The LEDs flash blue while the battery is charging (charge time = 7.5 hours on a completely empty battery). The LEDs turn solid blue when the battery is fully charged.



**Charge the battery fully before using the speaker.**

## Turn on Your Speaker

When you turn on your speaker for the first time, it automatically goes into pairing mode. The LEDs rapidly flash red and blue while in pairing mode. After you pair Bluetooth devices to your speaker, the next time you turn it on it searches for these paired devices and then moves into a standby state.

1. Slide the main power switch to the ON position.
2. Press and hold  for at least 3 seconds. A "power on" tone sounds.
3. The LEDs flashes blue and red slowly while looking for Bluetooth devices. It remains steady on (blue) when Bluetooth devices are discovered; otherwise, it keeps flashing.

## Pair Bluetooth Devices to Your Speaker



Make sure your speaker has been fully charged and is in pairing mode.



### ***Pair First Bluetooth Device***

Pair your first Bluetooth device to your speaker when you turn your speaker on for the first time. Be sure your speaker is in pairing mode (see step 2-3 of 'Pair Second Bluetooth Device' below).

1. Select a Bluetooth V2.0 device (mobile phone or music player) to pair.
2. Select the *Searching* mode on your Bluetooth device (refer to your Bluetooth device's owner's manual for details if necessary).
3. Your Bluetooth device should find *BTS150*; select it and use *0000* for a pairing code if necessary.
4. Verify that you are connected to your speaker. The Bluetooth LED moves to a steady ON state when pairing is complete.


### ***Pair Second Bluetooth Device***

When you want to pair the second Bluetooth device:



1. Turn on your speaker.
2. Press and hold  until your speaker beeps twice.
3. Release . The BTS150 is ready to pair.
4. Follow the same procedures for pairing your first Bluetooth device (see above).

# GETTING TO KNOW THE BTS150 SPEAKER

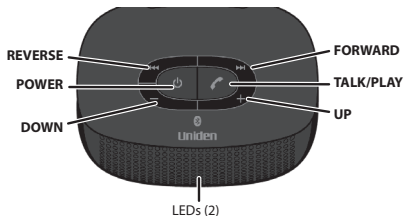
## BTS150 Top



Key name	Icon	Press to ...
<b>REVERSE</b>	⏮	Rewind or skip back in music.
<b>POWER</b>	⏻	<ul style="list-style-type: none"><li>• Turn your BTS150 speaker on/off.</li><li>• Press and hold to register devices.</li></ul>
<b>DOWN</b>	▬	Decrease the volume.
<b>FORWARD</b>	⏭	Fast forward or skip ahead in music.

Key name	Icon	Press to ...
<b>TALK/PLAY</b>		<ul style="list-style-type: none"> <li>– Handle phone calls and play music.</li> <li>– Press and hold to register devices.</li> </ul> <p><b>NOTE: This key can also turn your BTS150 speaker on and off.</b></p>
<b>UP</b>		Increase the volume.

## BTS150 Back

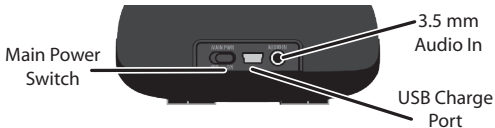

Use this...	To...
Main power switch	turn main power on and off.
USB charge port	connect your speaker to the AC adapter.
3.5 mm Audio In	connect non-Bluetooth devices.




## LEDs





Two LEDs on the front of your speaker provide visual cues to different processes.

Color	State	Meaning
Blue	On	Power is on.
	Flashing	Slow flash - Battery is charging. Fast flash - Lost Bluetooth connection.
Red	On	Bluetooth is connected but the battery level is low.
	Flashing	Power almost gone and Bluetooth is not connected.
Blue and Red	Flashing	Pairing mode.
LED	Off	Power is off.

## BTS150 SPEAKER OPERATION



When you want to turn on your speaker, remember to slide the main power switch to the ON position.




Press and hold  for at least 3 seconds.

The  and  keys control the speaker's volume level during mobile phone operation and music playback. Press and release the keys to increase or decrease the volume level one step at a time. Press and hold  and  to quickly raise and lower the volume levels. Your speaker sounds an alert tone when it reaches the maximum upper and lower volume levels.


## Basic Mobile Phone Operations

When you have an incoming call, the speaker sounds an incoming call tone and the LEDs flash blue. Both the speaker and your mobile phone may ring, depending on your mobile phone settings.




To...	Do this...
Answer an incoming call	Press any key.
Reject an incoming call	Press and hold  .
End a call	Press  .

To...	Do this...
Switch between your speaker and your mobile phone	Press and hold  during an active call.
Redial the last incoming number	From standby, press  twice.
Redial the last number dialed	From standby, press and hold  .

### ***Call Waiting***




You can receive call waiting notification when your mobile phone is paired to your speaker. The  LED flashes and your speaker sounds an alert tone.








**Your mobile phone must subscribe to Call Waiting service to use these features;  
contact your telephone provider for more information.**

To...	Do this...
Answer a call waiting call and put first call on hold	Press and release  twice. The existing call is put on hold and the second call is now active.
Switch between current call and calls on hold	Press and release  twice. The current call is put on hold and the call on hold is now active.
Answer a call waiting call and hang up first call	Press  ; the first call is ended and the call waiting call is now active.

## Basic Music Operation

When you pair a Bluetooth music player to your speaker, you can control operation through your speaker.

To...	Do this...
Play music	Press  . <b>NOTE: When you stop or pause the music playback, the music resumes at the same volume level after you press  .</b>
Skip to the next track	Press  .

To...	Do this...
Fast forward	Press and hold  .
Skip to the previous track	Press  .
Rewind	Press and hold  .
Control the volume	Press  to increase or  to decrease the volume.
Pause music	Press  while the music is playing.
Stop playing music	Press and hold  while the music is playing.


## SPECIAL FEATURES

### Play Music through a Wired Connection




You can still play music through your BTS150 speaker even if your music device is not paired to your speaker. You can physically connect your music device to your speaker with a 3.5 mm minijack cable (not included).


1. Plug one end of the cable into your music device, just like you would a pair of headphones.
2. Plug the other end of the cable into your speaker's 3.5 mm jack labeled **AUDIO IN**.
3. Use your music device to start and control music playback and volume through your speaker.

The following restrictions apply when you are playing music through a wired connection:

- If both a Bluetooth device and a wired device are connected to your speaker, the Bluetooth device will take priority over the wired device.
- The BTS150 does not control the wired device; it only plays music through a wired connection.
- If you are listening to music from the wired device and you press , your speaker will start playing music from the Bluetooth device if available.

# TROUBLESHOOTING

If this happens...	Try this...
Disconnection due to Out of Range	<p>Move back into connection range and:</p> <ul style="list-style-type: none"><li>– Turn your speaker off and back on to reconnect to your Bluetooth device.</li><li>– Press  for reconnection.</li></ul> <p><b>NOTE: The speaker automatically connects to the last device connected. If you need to reconnect to the first device that was connected, power off and back on.</b></p>
No “Beep” sound after disconnection of A2DP HFP	<p>Press  and  to connect to A2DP &amp; HFP successfully.</p>
Sound is not clear or there is no sound at all	<ul style="list-style-type: none"><li>– Turn your speaker off and then back on.</li><li>– Turn off your music device’s equalizer.</li><li>– Check your speaker or Bluetooth device volume level.</li></ul>
Music won’t play on the BTS150	<ul style="list-style-type: none"><li>– Make sure your Bluetooth device has A2DP.</li><li>– Check if both devices are connected.</li><li>– Turn your speaker off and then back on to auto-connect with your Bluetooth device.</li></ul>

If this happens...	Try this...
The BTS150 volume controls are not working.	<ul style="list-style-type: none"> <li>- Change the volume from your Bluetooth device.</li> <li>- If your music device is wired into your speaker, you cannot change the volume through the speaker.</li> <li>- Check the battery level.</li> </ul>
LED No Power	<ul style="list-style-type: none"> <li>- Make sure your speaker is turned on.</li> <li>- Make sure your speaker is charged.</li> </ul>
Sound is too small / too much distortion	<ul style="list-style-type: none"> <li>- Adjust your speaker or Bluetooth device volume level.</li> <li>- Turn off your Bluetooth device's equalizer.</li> </ul>
Phone call not answer by BTS150	<ul style="list-style-type: none"> <li>- Make sure your mobile phone has HFP.</li> <li>- Verify that both devices are connected.</li> <li>- Restart your speaker to auto-connect with your Bluetooth device.</li> </ul>
Music doesn't play after hanging up a call	Press  to resume music.
BTS150 doesn't control the music	Make sure your Bluetooth device has AVRCP.



## **SPECIFICATIONS**

- Total 6W output (3W / Channel)
- Full-range (35 mm) driver / Channel + Passive Radiator
- Li-Ion Batt: 1180mAh
- Playtime: Up to 5 hours in 80% Volume
- Recharging Time: 7.5 hours
- Range: Class 2, 10 m

## **Compatibility**

- Bluetooth 2.0 or above device with A2DP/AVRCP/ HFP / HSP

## **Safety and Handling Information**

For maximum product life, do not drop, throw, or crush the speaker. Do not expose it to humidity, dust, or temperatures above 51.6°C/125°F.

### ***Lithium-Ion battery information***

This device contains a non-removable lithium-ion battery. The battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal.

## Two-Year Limited Warranty

### UNIDEN BTS150 Bluetooth Wireless Speaker

**IMPORTANT: Evidence of the original purchase is required for warranty service.**

**Warrantor:** Uniden Australia Pty Limited ABN 58 001 865 498

Uniden New Zealand Limited

**Elements of Warranty:** Uniden warrants to the original retail owner for the duration of this warranty its **BTS150** (hereinafter referred to as the Product), to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

**Warranty Duration:** This warranty to the original retail owner only is only valid in the original country of purchase and shall be of no further effect 2 years after the date of original retail sale. This warranty will be deemed invalid if the Product is: (A) Damaged or not maintained as reasonable and necessary, (B) Modified, altered or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) Improperly installed, (D) Repaired by someone other than an authorized Uniden Repair Agent for a defect or malfunction covered by this warranty, (E) Used in conjunction with any equipment or parts or as a part of a system not manufactured by Uniden. (F) Only available in the original country of sale.

**Parts Covered:** This warranty covers for two (2) years, the Product and included accessories.

**Statement of Remedy:** In the event that the Product does not conform to this warranty at any time while this warranty is in effect, the warrantor, at its discretion, will repair the defect or replace the Product and return it to you without charge for parts and service. This warranty does not provide for reimbursement or payment of incidental or consequential damages. This EXPRESS WARRANTY is in addition to and does not in any way affect your rights under the TRADE PRACTICES ACT 1974 (Cth) (Australia) or the CONSUMER GUARANTEES ACT (New Zealand).

**Procedure for obtaining performance or warranty:** in the event that the Product does not conform to this warranty, the Product should be shipped or delivered, freight prepaid, with evidence of original purchase (e.g. a copy of the sales docket) to the warrantor at:

#### UNIDEN AUSTRALIA PTY LTD

Service Division  
345 Princes Highway,  
Rockdale, NSW 2216  
Fax (02) 9599 3278  
[www.uniden.com.au](http://www.uniden.com.au)

#### UNIDEN NEW ZEALAND LTD

Service Division  
150 Harris Road, East Tamaki,  
Auckland 2013  
Fax (09) 274 4253  
[www.uniden.co.nz](http://www.uniden.co.nz)



**Uniden<sup>®</sup>**

© 2011 Uniden Australia Pty Ltd/Uniden New Zealand Limited

Printed in PRC