## SONY





### **Quick Setup Guide**

DAV-HDX585


### Connecting the speakers

### Connect the speaker cords to match the color of the SPEAKER jacks of the unit.

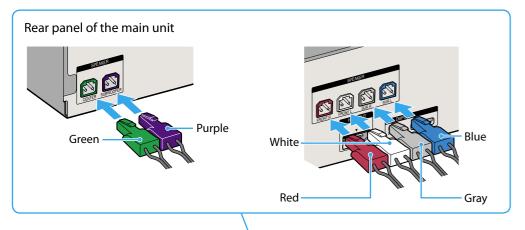

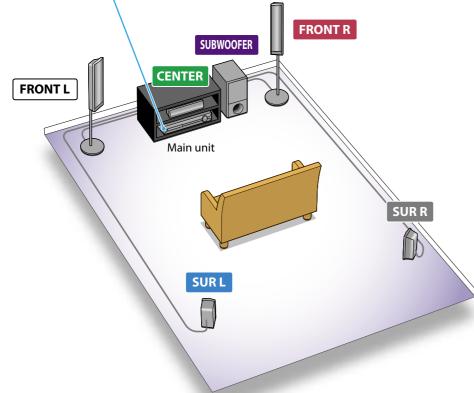

#### To connect speaker cords to the speaker

 



You can confirm that the System and TV are connected correctly using the Setup Disc.




For details, see the Operating Instructions.

# **2** Connecting the TV


Depending on the jacks on your TV, select the video and audio connection method.

#### **Video connection method**

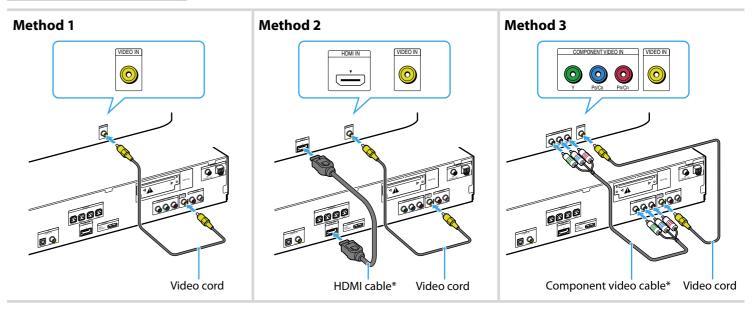

\*Not supplied

#### **Audio connection method**

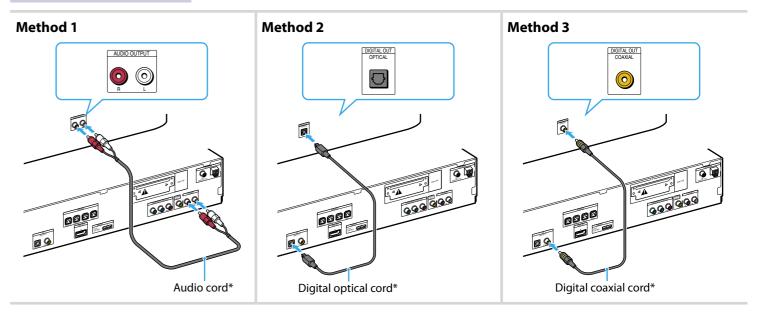

\*Not supplied


Continued —

Do not insert a disc before performing the Quick Setup.


1 Connect the AC power cord.



**2** Turn on the power of the main unit and TV.

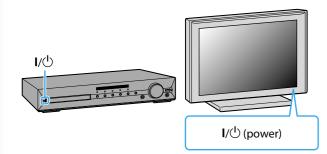

- 3 Switch the input selector on your TV to display "SONY Home Theatre System."
- 4 Set each following item, using ◆/◆/◆/→ and

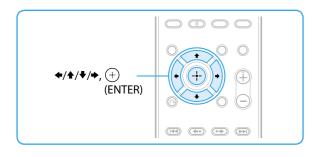

Displayed items vary depending on the area.





Select an on-screen language.





 
Select the aspect ratio of the connected TV.







Select [ON] when you connect the main unit and the TV with an HDMI cable.









Select the speaker formation.






 



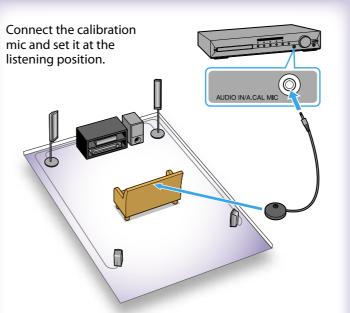

 Select [YES] to perform [AUTO CALIBRATION].







Select [YES] to save the measurement results.

 


 






Press FUNCTION +/- to display "TV/VIDEO."






**2** Press SYSTEM MENU.



 
3 Press ◆/◆ to display "DEC. MODE," then press +.






 4 Press ◆/♦ to display "PRO LOGIC," then press +.





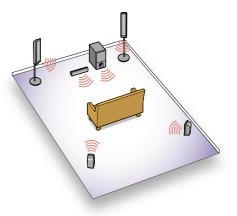

5 Press SYSTEM MENU to exit the menu.