

KENWOOD

MULTIPLE COMPACT DISC PLAYER

CD-2280M/DPF-J9010

INSTRUCTION MANUAL

KENWOOD CORPORATION

This unit is designed for home use only. If the unit is used in a location other than at home, such as in a shop (for commercial use), in a car or in a ship, etc., and is damaged, a service fee may be charged even during the warranty period.

This instruction manual is used for two models. Model availability and features (functions) may differ depending on the country and sales area.

About the DTS multi-channel audio format

The DTS multi-channel audio format is available on CD, LD and DVD software. DTS is a strictly digital format and can not be decoded inside most CD, LD or DVD players. For this reason, if you attempt to listen to DTS encoded software through the analog output of your new CD player, you will experience digital noise. This noise can be quite loud if the analog output is connected directly to a high power amplification system. Proper precautions should be taken to avoid this situation. To enjoy DTS Digital Surround playback, an external 5.1 channel DTS Digital Surround decoder system must be connected to the digital output (S/PDIF, AES/EBU, or TosLink) of the CD player.

COMPACT
disc
DIGITAL AUDIO

Introduction

CD-2280M/DPF-J9010 (En)

2

Before applying power



Caution : Read this section carefully to ensure safe operation.

Units are designed for operation as follows.

U.S.A. and Canada AC 120 V only
Australia AC 240 V only

Europe and U.K. AC 230 V only
Other countries AC 110-120 / 220-240 V switchable

For the United Kingdom

Factory fitted moulded mains plug

1. The mains plug contains a fuse. For replacement, use only a 13-Amp ASTA-approved (BS1362) fuse.
2. The fuse cover must be refitted when replacing the fuse in the moulded plug.
3. Do not cut off the mains plug from this equipment. If the plug fitted is not suitable for the power points in your home or the cable is too short to reach a power point, then obtain an appropriate safety approved extension lead or adapter, or consult your dealer.
If nonetheless the mains plug is cut off, remove the fuse and dispose of the plug immediately, to avoid a possible shock hazard by inadvertent connection to the mains supply.

IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

Blue : Neutral
Brown : Live

Do not connect those leads to the earth terminal of a three-pin plug.

Safety precautions




Caution : Read this section carefully to ensure safe operation.

WARNING : TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN		CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.
	THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED " DANGEROUS VOLTAGE " WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.		
	THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE.		

REQUIREMENT BY NEDERLAND GAZETTE

Batteries are supplied with this product. When they empty, you should not throw away. Instead, hand them in as small chemical waste.

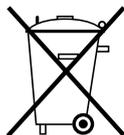

The marking of products using lasers (Except for some areas)

**CLASS 1
LASER PRODUCT**

The marking is located on the rear panel and says that the component uses laser beams that have been classified as Class 1. It means that the unit is utilizing laser beams that are of a weaker class. There is no danger of hazardous radiation outside the unit.

Special features

CD player with 200-disc changer

This unit can accommodate up to 200 discs and can be used like a home jukebox.

Multi-room capability

This unit consists of two CD player mechanisms and an independent second output (OUTPUT-B) for simultaneous playback of two discs. This makes it possible to enjoy different music in different rooms, by listening to the playback of a disc on Mechanism-A in Room A and that of a disc on Mechanism-B in Room B, for example.

CD-TEXT support

The text information (disc title, track titles, names of the artists, songwriters, composers, etc.) recorded on the CDs can be easily called and displayed in alphanumerics. (Some Japanese words and text may not be displayed.) → 15

Title name registrable

In case of a disc not corresponding to CD-TEXT, you can register a disc title and track titles yourself. → 20

Programmed playback

Desired tracks from up to 200 discs can be selected and programmed in the desired order. (Maximum 32 tracks) → 16

Continuous playback

By preparing the disc to be played next in the other mechanism while playing a disc, two discs can be played continuously with minimum disc change time. → 28

Filing functions suitable for a 200-disc changer

An enhanced filing function is provided to handle the large disc capacity.

Music type: Discs are filed by 26 music genres. → 24

Best selection: Only favorite tracks can be registered from 200 discs and played. → 27

Contents

Introduction	2	Repeated playback (REPEAT mode)	18
⚠ Before applying power	2	To repeat only the desired tracks (Mechanism-A only) ...	18
⚠ Safety precautions	2	To repeat one selected disc	18
Special features	3	Playback in a random order (RANDOM mode)	19
Important items	4	To select another track in the middle of playing one	19
System connections	6	To cancel random playback	19
Connection to digital amplifier or MD (OUTPUT-A only) ..	7	Registration of Title Name	20
Connection to a general-use amplifier	7	Assigning Title Names	20
Controls and indicators	8	To change or delete a title name	22
Operation of remote control unit (Mechanism-A only) ...	9	To change the character type	23
Loading batteries	9	To switch between insert and overwrite mode	23
Operation	9	To enter a space	23
Preparation	10	Listening to music by genre (MUSIC TYPE mode)	24
Loading discs in the carousel	10	Registration of music type files	24
Selecting Mechanism A or B	11	To delete the registered music type	25
In regard to ALL DATA READ mode (Mechanism-A only)	11	Playing the music type file (Mechanism-A only)	26
Normal play (TRACK mode)	12	Listening to your favorite titles	
Playing tracks in order from track No.1	12	(BEST SELECTION mode) (Mechanism-A only)	27
Direct disc selection (Mechanism-A only)	13	Registration of best selection file	27
Playback from desired track	14	Playing the best selection file	27
Skipping tracks	14	To delete the registered best selection	27
Searching	14	Continuous playback	28
Displays	15	Registration of DTS discs	29
Programming tracks in desired order		Timer operation (Mechanism-A only)	30
(PGM mode) (Mechanism-A only)	16	In case of difficulty	31
To check the programmed tracks	17	Specifications	32
To add a track to the program	17		
To change a track in the program	17		
To clear tracks from the program	17		

4 Unpacking

Unpack the unit carefully and make sure that all accessories are put aside so they will not be lost.

Examine the unit for any possibility of shipping damage. If your unit is damaged or fails to operate, notify your dealer immediately. If your unit was shipped to you directly, notify the shipping company without delay. Only the consignee (the person or company receiving the unit) can file a claim against the carrier for shipping damage.

We recommend that you retain the original carton and packing materials for use should you transport or ship the unit in the future.


Keep this manual handy for future reference.

Accessories

Audio cord (2)



System control cord (1)

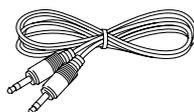


Communication cord (1)



Remote control unit (1)



Batteries (R6/AA) (2)

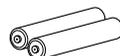

Important items

Types of discs playable on this unit


- With CD-G (CD Graphics) discs, this unit can play only the audio part.
- An 8 cm CD cannot be played back.

Disc Type	Disc Size
CD (ordinary Compact Disc)	12 cm
Audio part of CDV (CD with video)	12 cm


About the DTS multi-channel audio format

The DTS multi-channel audio format is available on CD, LD and DVD software. DTS is a strictly digital format and can not be decoded inside most CD, LD or DVD players. For this reason, if you attempt to listen to DTS encoded software through the analog output of your new CD player, you will experience digital noise. This noise can be quite loud if the analog output is connected directly to a high power amplification system. Proper precautions should be taken to avoid this situation. To enjoy DTS Digital Surround playback, an external 5.1 channel DTS Digital Surround decoder system must be connected to the digital output (S/PDIF, AES/EBU, or TosLink) of the CD player.

“Registration of DTS discs” → 29

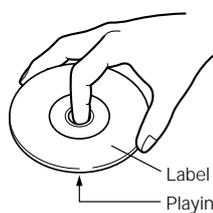Disc handling precautions**Handling**

Hold compact discs so that you do not touch the playing surface.

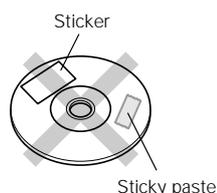


- Do not attach paper or tape to either the playing side or the label side of compact discs.

- The paste left on the label surface after a sticker has been peeled off is a factor which may cause malfunction. If the surface is sticky due to remaining paste, be sure to clean it with alcohol before use.

Cleaning

If fingerprints or foreign matter become attached to the disc, lightly wipe the disc with a soft cotton cloth (or similar) from the center of the disc outwards in a radial manner.

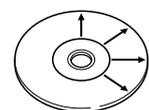**Storage**

When a disc is not to be played for a long period of time, remove it from the CD player and store it in its case.

Never play a cracked or warped disc

During playback, the disc rotates at high speed in the player. Therefore, to avoid danger, never use a cracked or deformed disc or a disc repaired with tape or adhesive agent. Please do not use discs which are not round because they may cause a malfunction.

CD accessories

The CD accessories (stabilizer, protection sheet, protection ring, etc.) which are marketed for improving the sound quality or protecting discs as well as the disc cleaner should not be used with this system because they may cause malfunction.

Cleaning

Do not use volatile solvents such as alcohol, paint thinner, gasoline, or benzine, etc. to clean the cabinet. Use a clean dry cloth.

Do not use contact cleaners because it could cause a malfunction. Be specially careful against contact cleaners containing oil, for they may deform the plastic components.

Periodic inspection

This unit incorporates an optical pickup which is a precision device. It is recommended to have this unit inspected periodically to clear the pickup after about 1000 hours of use, although this period may vary depending on the installation condition (temperature, humidity, dust, smoke, etc.) of the unit.

The unit has inspected, please consult your dealer or a KENWOOD service center in your area.

Caution on condensation

Condensation (of dew) may occur inside the unit when there is a great difference in temperature between this unit and the outside. This unit may not function properly if condensation occurs. In this case, leave the unit for a few hours with the power left ON, and restart the operation after the condensation has dried up.

Be specially cautious against condensation in a following circumstance:


When this unit is carried from a place to another across a large difference in temperature, when the humidity in the room where this unit is installed increases, etc.

Note related to transportation and movement

Before transporting or moving this unit, carry out the following operation:

1. Remove all discs from the carousel and close the door panel.
2. Confirm that the flashing "NO DISC" display has changed to steady lighting, and then switch off the power.

DISPLAY-A and DISPLAY-B

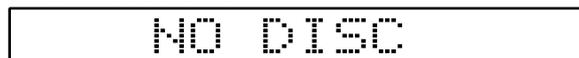

3. Wait a few seconds, then disconnect the power plug.

Memory backup function

Stored contents for at least 3 weeks after power plug is unplugged from the AC outlet.

Power status (ON or OFF),
Title name registration contents
Music type registration contents
Best selection registration contents
DTS registration contents

System connections

6

Make connections as shown below.
When connecting the related system components, refer also to the instruction manuals of the related components. Do not plug in the power lead until all connections are completed.



Malfunction of microcomputer

If operation is not possible or erroneous display appears even though all connections have been made properly, reset the microcomputer referring to "In case of difficulty". → 31

Be sure to use this unit placed on a level surface.

* 1

OUTPUT A : Output from Mechanism-A.
OUTPUT B : Output from Mechanism-B.


Optical connection

(Except for the U.S.A. and Canada)

Optical fiber cable (Commercially-available)

To OPTICAL terminals like receiver, MD, DAT, etc.

Remove the protection cap when using the DIGITAL OUTPUT (OPTICAL) jack.

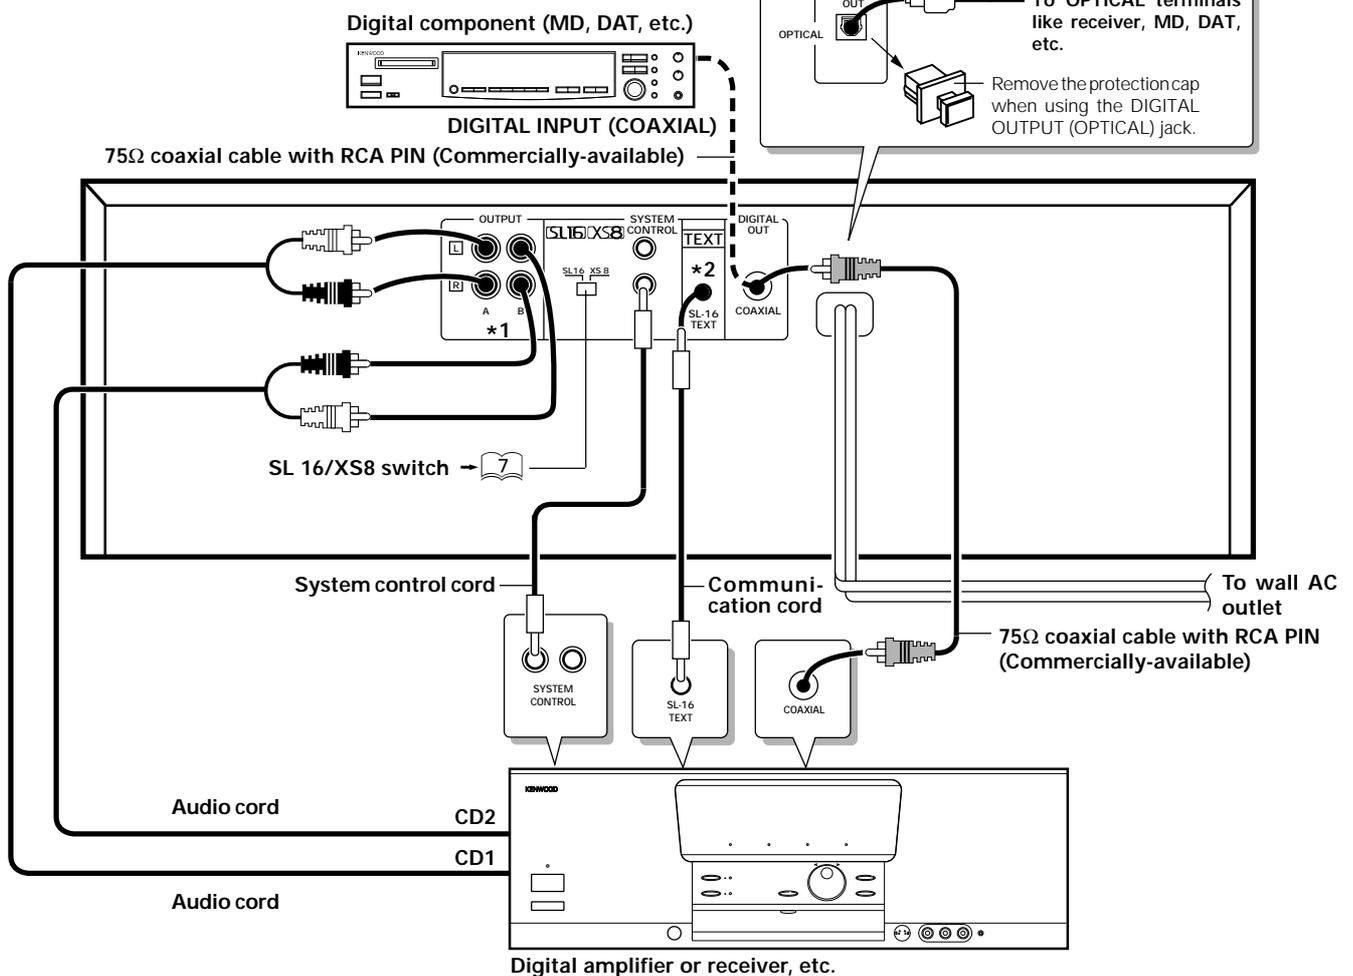

* 2

Note on the SL-16 TEXT jack

When using a KENWOOD Receiver equipped with the SL-16 TEXT jack, connect it to the Receiver using the communication cord provided with this unit. This makes it possible to display the disc and track titles on the LCD remote control unit (provided with the Receiver).



Do not forget to set the SL-16/XS8 switches of the Receiver and this unit to SL-16.

About the DTS multi-channel audio format

The DTS multi-channel audio format is available on CD, LD and DVD software. DTS is a strictly digital format and can not be decoded inside most CD, LD or DVD players. For this reason, if you attempt to listen to DTS encoded software through the analog output of your new CD player, you will experience digital noise. This noise can be quite loud if the analog output is connected directly to a high power amplification system. Proper precautions should be taken to avoid this situation. To enjoy DTS Digital Surround playback, an external 5.1 channel DTS Digital Surround decoder system must be connected to the digital output (S/PDIF, AES/EBU, or TosLink) of the CD player.




1. Connect all cords firmly. If connections are loose there could be loss of sound or noise produced.
2. When plugging and unplugging connection cords, be sure to first remove the power cord from the AC outlet. Plugging/unplugging connection cords without removal of the power cord can cause malfunctions or damage to the unit.

Connection to digital amplifier or MD (OUTPUT-A only)

Connect the DIGITAL OUT (OPTICAL or COAXIAL) jack to the digital input jack of the amplifier, DAT recorder, MD recorder, etc., using an optical fiber cable or coaxial cable which are commercially available in audio stores.

- When using an optical fiber cable to connect this unit to a digital amplifier, insert the plug straight into the jack until a snap sound is heard.
- Be careful not to bend, coil, or bundle the optical fiber cable.
- Optical fiber cables available on the market may not always be able to be used with this player. If your cord cannot be used with this unit, consult the store from which you purchased the cord or your nearest dealer.

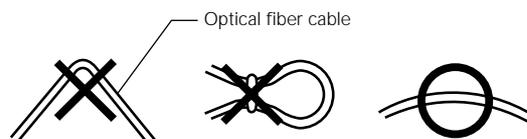

Connection to a general-use amplifier

Use the provided audio cords to connect the OUTPUT jacks of this unit to the CD input jacks (or AUX jacks) of the amplifier.


SYSTEM CONTROL CONNECTIONS

Connecting system control cords after connecting a KENWOOD audio component system lets you take advantage of convenient system control operations.


There are two KENWOOD system control modes. Make connections according to the groups of terminal symbols shown below. OUTPUT-B is available only in [SL16] mode.

- [XS8] Mode : lets you combine [XR], [XS], and [XS8] terminals
- [SL16] Mode : for [SL16] terminals only


This unit is compatible with both [XS8] and [SL16] modes. Select the mode according to the connected components.

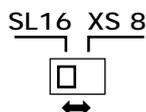

- Do this operation after completing all connections. (Ensure that the power plug is not connected.)

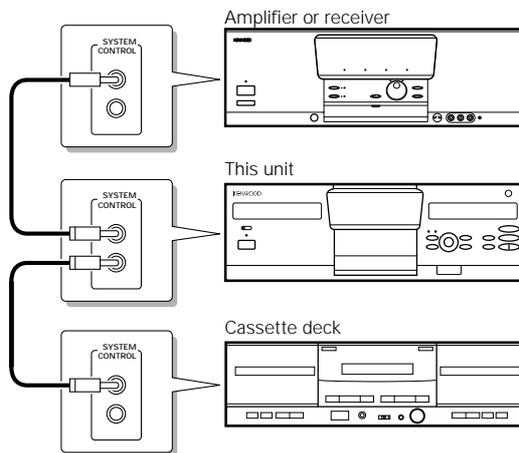

1. If your amplifier or receiver does not have a system control terminal, do not connect any system control cords to the system control terminals on the other components.
2. Do not connect system control cords to any components other than those specified by KENWOOD. It may cause a malfunction and damage your equipment.
3. Be sure the system control plugs are inserted all the way in to the system control terminals.

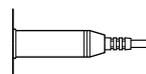

SYSTEM CONTROL OPERATIONS

Remote Control

Lets you operate this unit with the system remote control unit supplied with the amplifier or receiver.

Automatic Operation (Except [XR] equipment)


Automatically switches the input selector on the amplifier or receiver when you start playback from this unit.

Synchronized Recording (Except [XR] equipment)



Lets you synchronize recording with the start of playback when recording from a CD. Also, the simple CCRS operation enables great recordings from CDs.

See the operating instructions supplied with your cassette deck for details.

Play indicator Text information display (The displays given in this manual are approximations only. They may differ from what actually appears on the display.)

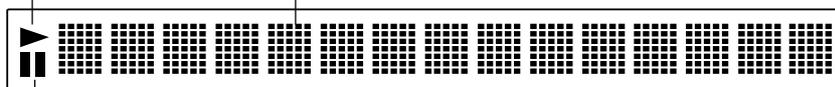

Pause indicator

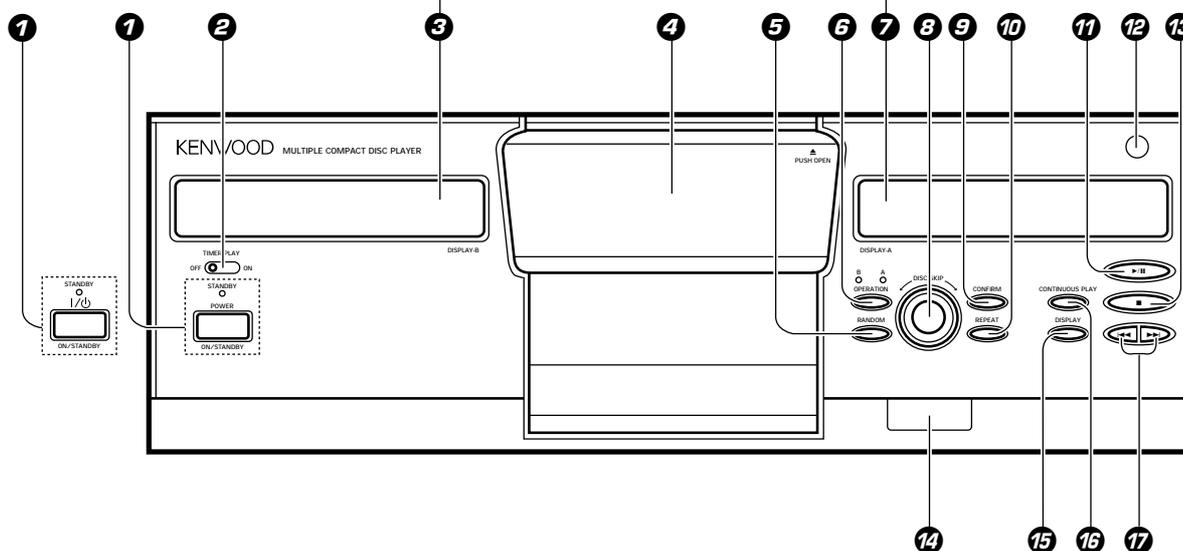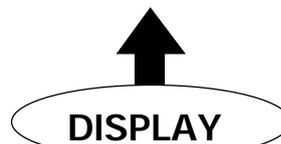

1 POWER key/STANDBY indicator (For the U.S.A. and Canada)
I / ⏻ key/STANDBY indicator (For other countries)

2 TIMER PLAY switch
Used for timer play ON/OFF.

3 Mechanism-B display

4 Door panel

5 RANDOM key
Press to start random playback.

6 OPERATION A-B key
Press to switch between mechanisms A and B. While the B indicator is lit, only the key on the main unit is valid.

7 Mechanism-A display

8 DISC SKIP knob
Used for disc selection. Characters are selected at the time of title registration.

9 CONFIRM key
The present playback mode is displayed.

10 REPEAT key
Press to start repeated playback.

11 Play/Pause key (▶/⏸)

12 Remote sensor

13 Stop key (■)

14 LCD remote control signal transmitter
The disc and track title data are output to the LCD remote control unit (provided with a KENWOOD Receiver) through this window.

15 DISPLAY key
Switching between title display and time display.

16 CONTINUOUS PLAY key
Used for continuous play mode switching.

17 Skip keys (◀◀ ▶▶)
Press to skip to the beginning of another track. Characters are selected at the time of title registration.


About the STANDBY mode

While the STANDBY indicator is lit, a small amount of power is supplied to the system to back up the memory. This is called the standby mode. Under that condition, the system can be turned ON by the remote control unit.

Operation of remote control unit (Mechanism-A only)

CD-2280M/DPF-J9010 (En)

The keys with the same name as those on the main unit operate the same way as on the main unit. The keys marked * are provided only on the remote control unit. The remote control unit controls Mechanism-A regardless of whether the **OPERATION A-B** indicator on the main unit is lit or not.

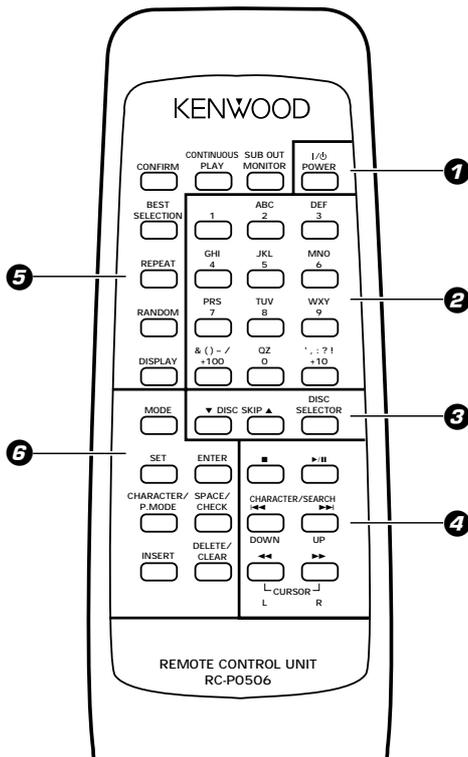

Model: RC-P0506
Infrared ray system

<p>1 POWER key</p> <p>2 Input keys for numbers and letters * Used for selection of disc numbers and track numbers, as well as for title name registration.</p> <p>3 Disc selection keys DISC SKIP keys (▼, ▲) * DISC SELECTOR key Press to select a disc number.</p> <p>4 Keys for basic operation and character input Stop key (■) Play/pause key (▶/⏸) CHARACTER/SEARCH; Skip (DOWN/UP) keys (◀◀, ▶▶) * Search; CURSOR (L/R) keys (◀◀, ▶▶) Press to move the played position of disc at high speed. Used as cursor keys at the time of title name registration.</p> <p>5 Keys related to playback mode and display CONFIRM key CONTINUOUS PLAY key * SUB OUT MONITOR key Used to monitor the audio played on Mechanism-B. * BEST SELECTION key Used for best selection registration and playback. REPEAT key, RANDOM key, DISPLAY key</p>	<p>6 Keys related to program and file registration * MODE key Used for music type file and title name registration and playback. * SET key Used for confirmation of mode settings. At the time of title name registration, one character is confirmed and the cursor goes to the next digit. * ENTER key Used for title name confirmation. * CHARACTER/P.MODE key Used for playback mode switching. At the time of title name registration, this key switches between capital letters/small letters/numbers and special characters. * SPACE/CHECK key Used to confirm the entered contents. Inserts a space at the time of title name registration. * INSERT key Switches between insert and overwrite mode at the time of title name registration. * DELETE/CLEAR key Used to delete the entered contents. At the time of title name registration, characters are deleted.</p>
---	---

Loading batteries

1 Remove the cover.

2 Insert batteries.


● Insert two AA-size (R6) batteries as indicated by the polarity making.

3 Close the cover.

Operation

After plugging in the power cord, press the **POWER (I / ⏻)** key of the main unit to turn the power ON. When the power is turned ON, press the key of the function to be operated.

- When pressing more than one remote control key successively, press the keys securely by leaving an interval of 1 second or more between keys.

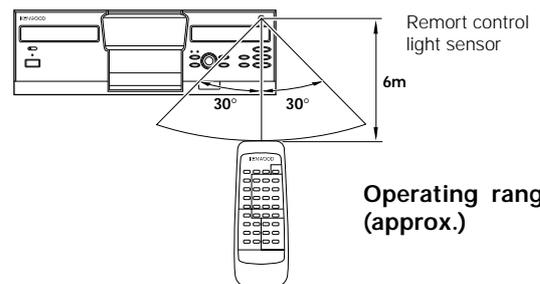

1. The supplied batteries are intended for use in operation checks. Therefore, their lives may be shorter than ordinary batteries.
2. When the remote-controllable distance gets shorter than before, replace both batteries with new ones.
3. Malfunction may occur if direct sunlight or the light of a high-frequency lighting fluorescent lamp enters the remote control light sensor. In such a case, change the system installation position to prevent the malfunction.

Preparation


10

Up to 200 CDs can be loaded in the carousel. Disc exchange also is possible during playback.


Never let your hand or any object enter inside the unit.

Loading discs in the carousel


1 Switch power ON.

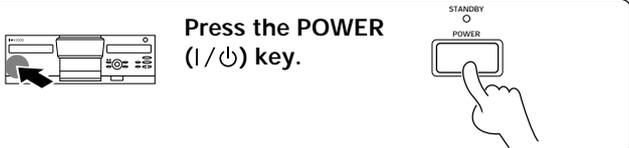

2 Open the door panel toward the front.

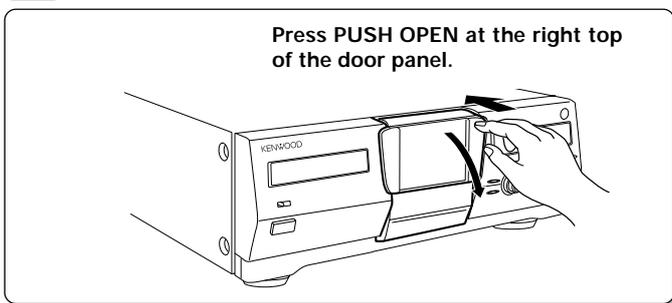


3 Load discs.

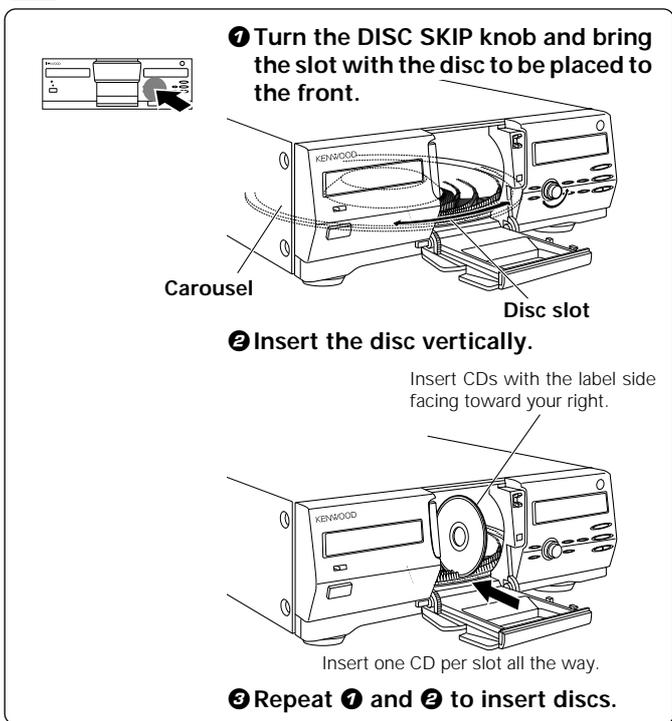

- Do not place any object on the open door panel.

DISPLAY-A (or DISPLAY-B)

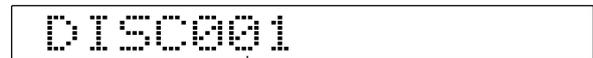

The slot No. is displayed when the **DISC SKIP** knob is turned.

DISPLAY-B (or DISPLAY-A)




Note Insert discs with the label on the right side. Playback is not possible when a disc is inserted the other way round.

- Do not insert more than one disc in a slot.


When a disc not corresponding to CD-TEXT is inserted, searching for this disc will be facilitated when the title name is registered at the time of disc insertion.
"Registration of Title Name" → 20

4 Close the door panel.

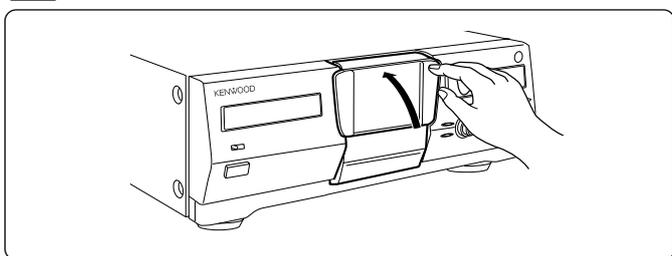

- When a title name has been registered and the door panel is closed, reading operation is performed automatically.


DISPLAY-A : The display flashes.

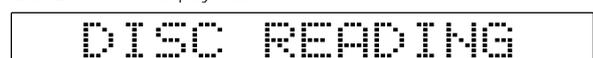

Disc replacement

Discs can be replaced with the same procedure as "Loading discs in the carousel". In stopped condition, all discs can be exchanged. However, when the door panel is opened while "DISC DETECTION" is being displayed, it may not be possible to remove the disc which had been played. Accordingly, wait for the "DISC DETECTION" indication to go out before opening the door panel. When the disc information has been read in at the time of registration of disc information like title name, music type, etc., the disc information can be recalled even when the disc insertion place is changed.


→ 20 → 24

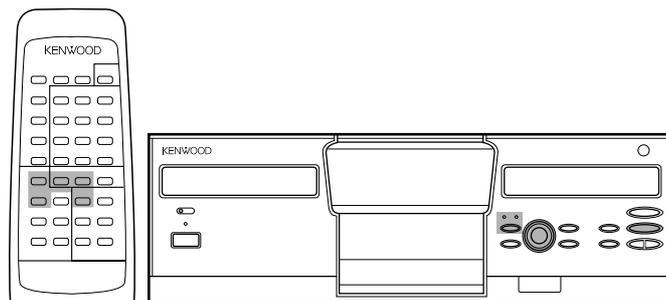

■ : Keys and controls used in the operations described on this page.

Selecting Mechanism A or B

The audio played on Mechanism-A is output from OUTPUT-A and that played on Mechanism-B is output from OUTPUT-B. This makes it possible to enjoy different music in different rooms.

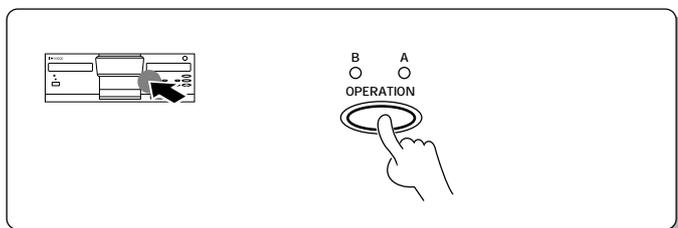


- Each press of the key switches mechanisms A and B alternately and lights the indicators accordingly.
- After selecting the mechanism, operate the player.
- The **OPERATION A-B** key is set to A during continuous play mode. It is not possible to switch the mechanism during it.

In regard to ALL DATA READ mode (Mechanism-A only)

The disc information for all discs will be read. It is convenient to execute this mode before playback after discs have been exchanged. Close the door panel before operation.



To display the title name on a LCD remote control unit (provided with a KENWOOD Receiver), perform the all data read operation first, and operate the LCD remote control unit with the door left closed. For the operation of the LCD remote control unit, refer to the instruction manual provided with your receiver.

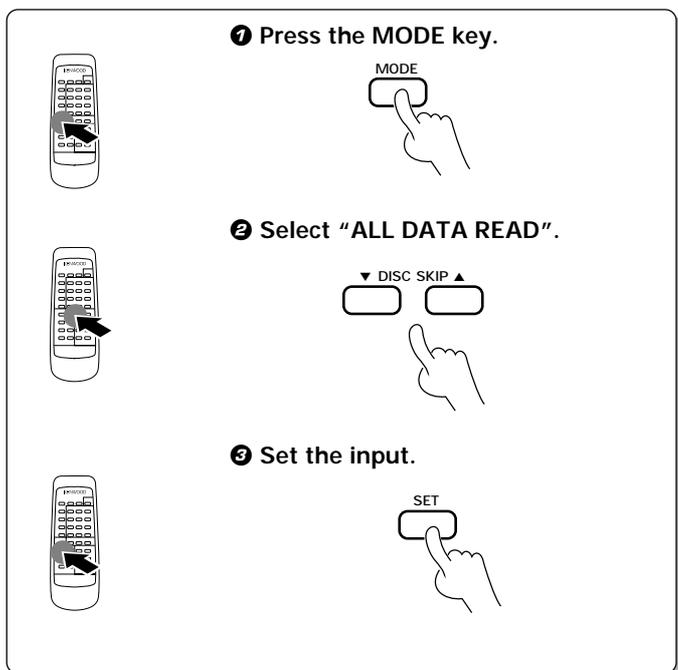

Each press switches the modes as follows:

- ① MUSIC TYPE
- ② TITLE INPUT
- ③ ALL DATA READ
- ④ ALL INFORMATION
- ⑤ DTS ANALOG MUTE

DISPLAY-A

ALL DATA READ

Search in progress or reading information The display flashes.

DISC READING

When the disc is CD-TEXT

D001 : CD TEXT

- Repeat the above procedure so that the complete disc information is read into the CD player.
- In the case of a non-CD-TEXT disc, the "D001:NO CD TEXT" display will appear for approx. 3 seconds.
- This operation is not available during the continuous play mode.

To quit ALL DATA READ mode

Press the ■ key.




1. Please remove all CDs from the carousel before moving the unit.
2. If blinking "PLEASE WAIT" is displayed when the door panel is opened, do not attempt to change the disc.

Normal play (TRACK mode)

12

Preparation

- Load discs into the carousel. → 10
- Select the Mechanism-A or Mechanism-B. → 11

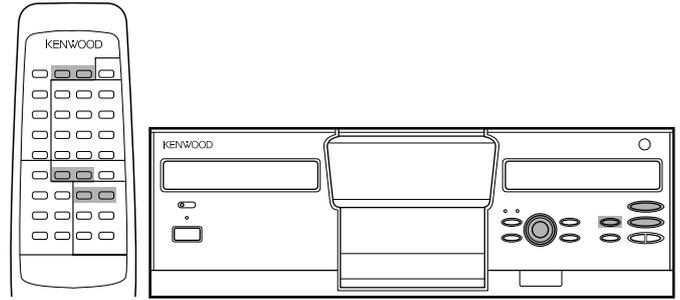

■ : Keys and controls used in the operations described on this page.

Playing tracks in order from track No.1


Use the following procedure to play a CD in the original order of tracks from track No.1.

1 Select the disc.

Go to step 2 within 8 sec.

- Each press of a key increases (or decreases) the disc number. Holding the key depressed varies the disc numbers successively.
- When the disc corresponds to CD-TEXT, or when the disc title has been registered, the disc title will be displayed with scrolling. Discs can be selected while looking at the registered contents. "Registration of Title Name" → 20

Display when disc No. 123 is selected

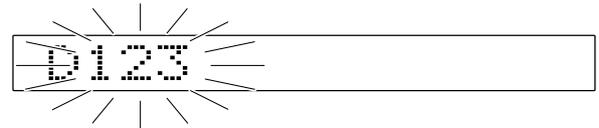

Lights up.



- When the disc corresponds to CD-TEXT, or when the track titles have been registered, the track title will be displayed with scrolling.
- If the selected disc is being played on the other mechanism, blinking "DISCXXX BUSY!" is displayed and the disc will not be played.

For continuous playback

Press the CONTINUOUS PLAY key.

To pause playback


- Each press pauses and plays the CD alternately.

To stop playback

In regard to SUB OUT MONITOR

Press the SUB OUT MONITOR key to output the audio played on Mechanism-B from OUTPUT-A. Each press of the key switches this feature on and off alternately.

DISPLAY-A

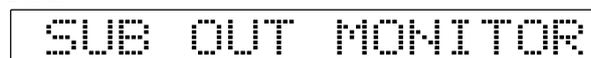

- This operation is not available during the continuous play mode.

Direct disc selection (Mechanism-A only)

1 Press the DISC SELECTOR key.

DISC SELECTOR

Within 8 seconds!

2 Input the disc number.

1	ABC	DEF
2		
GHI	JKL	MNO
4	5	6
PRS	TUV	WXY
7	8	9
& () - /	OZ	': : ? !
+100	0	+10

Within 8 seconds!

3 Start playback.

Press the numeric keys in the following order...

Disc No. 63 : **6 3**
 Disc No. 100 : **1 0 0**

- If the selected disc is being played on Mechanism-B, blinking "DISCXXX BUSY!" is displayed and the disc will not be played.

How to input numeric values

The input method for this product is of two different types. One can either use the traditional KENWOOD +10 key approach, or direct numeric input.

Special input method for CD player with 200-disc changer

To input 42 : **4 2**
 To input 115 : **1 1 5**
 To input 200 : **2 0 0**

Same input method as other KENWOOD products

To input 42 : **+10 +10 +10 +10 2**
 To input 115 : **+100 +10 5**
 To input 200 : **+100 +100**

What is the "normal play TRACK mode"?

Playback is made from the first track. The normal playback mode is called TRACK mode. Press the CONFIRM key to confirm the present mode.



TRACK mode

▶ TRACK D120 T02

PGM mode

▶ PGM01 D131 T02

BEST SELECTION mode

▶ BEST01 D104 T03

MUSIC TYPE mode

▶ M. TYPE Rhythm

RANDOM mode


▶ ONE DISC RANDOM

REPEAT mode


▶ REPEAT ON

To set the unit to the TRACK mode:


At the time of PGM mode : Press the P.MODE key.

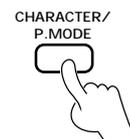

At the time of BEST SELECTION mode : Press the ■ key during playback.

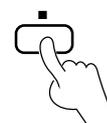

At the time of MUSIC TYPE mode : Press the MODE key.

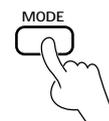


At the time of RANDOM mode : Select "RANDOM OFF".



If it is Mechanism-B that is selected, use the main unit keys for these operations.

Preparation

- Load discs into the carousel. → 10
- Select the Mechanism-A or Mechanism-B. → 11

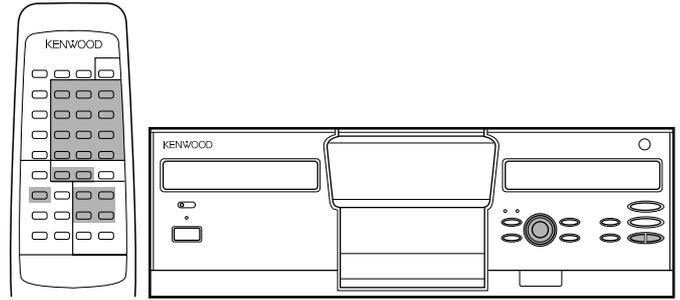

: Keys and controls used in the operations described on this page.

Playback from desired track

1 Select the disc.


1 Select the disc number.

Previous disc DISC SKIP Next disc

2 Set the input.

Go to step 2 within 8 sec.

Display when disc No. 123 is selected

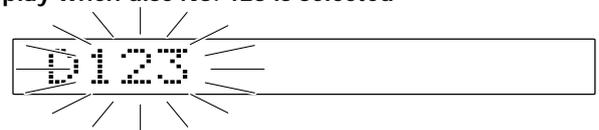

- The disc number can be selected directly by using the **DISC SELECTOR** and numeric keys in place of the **DISC SKIP** keys.
- When the disc corresponds to CD-TEXT, or when the disc title has been registered, the disc title will be displayed with scrolling. Discs can be selected while looking at the registered contents.
- "Registration of Title Name" → 20
- Repeat step 1 when it is required to change the disc number.

2 Select the track number.


1 Input the track number.

2 Set the input.

Press the numeric keys in the following order...

- Track No.8 : 8
 Track No.14 : 1 4
 Track No.20 : 2 0

Display when track No. 8 is selected

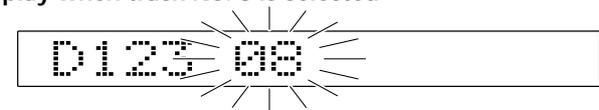

- When the disc corresponds to CD-TEXT, or when the track titles have been registered, the track title will be displayed with scrolling. Tracks can be selected while looking at the registered contents.
- "Registration of Title Name" → 20
- Playback starts.
- If the selected disc is being played on the other mechanism, blinking "DISCXXX BUSY!" is displayed and the disc will not be played.
- Repeat step 2 when it is required to change the track number.

Skipping tracks

To skip backward CHARACTER/SEARCH To skip forward
 DOWN UP

- When the **⏮** key is pressed once during playback, the track being played will be played from the beginning.

Searching

Backward search L CURSOR R CURSOR Forward search

- Playback starts from the position where the key is released.



If it is Mechanism-B that is selected, use the main unit keys for these operations.


Displays scrolling

Some track titles contain so much text information that the full titles will not fit on the display. In cases like this, the letters on the display move from right to left so that the non-visible part of the title is revealed. This type of display movement is known as "scrolling display."

Display example

← Scroll display


D123 GOOD OLD FASHION...
D123 FASHIONED

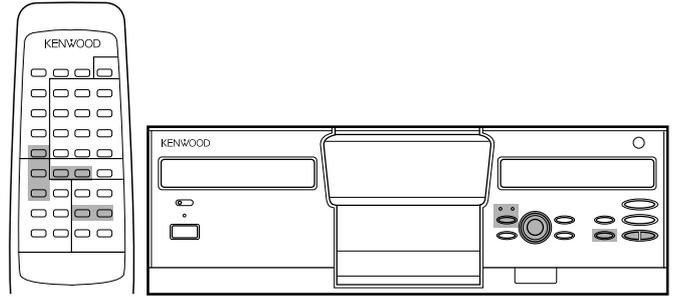

: Keys and controls used in the operations described on this page.

Time display

Each press of the DISPLAY key changes the displayed contents.

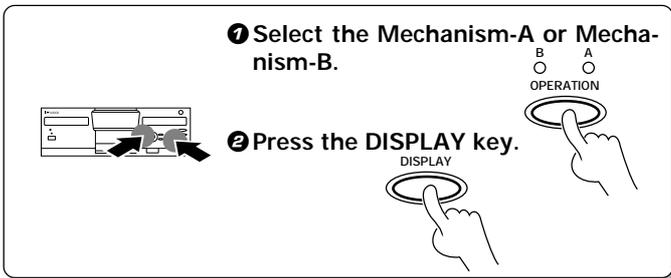


- ① ▶SAIL AWAY SWEET Track title display (with CD-TEXT or when the track title has been registered)
- ② ▶DISC123 TRACK10 DISC NO., TRACK NO. display
- ③ ▶D123 10 1:23 Elapsed time of track being played
- ④ ▶D123 10 -2:37 Remaining time of track being played
- ⑤ ▶D123 10 23:45T Elapsed time of entire disc (T lights up.)
- ⑥ ▶D123 10 -36:25T Remaining time on entire disc (T lights up.)

- The displays ①, ②, ③, and ④ are shown in PGM mode, RANDOM mode, MUSIC TYPE mode, and BEST SELECTION mode.
- The displays ①, ② and ③ are shown in stop mode.

Displaying all the text information (Mechanism-A only)

In the case of a CD-TEXT disc, the text information shown below is displayed automatically during normal play (TRACK mode).

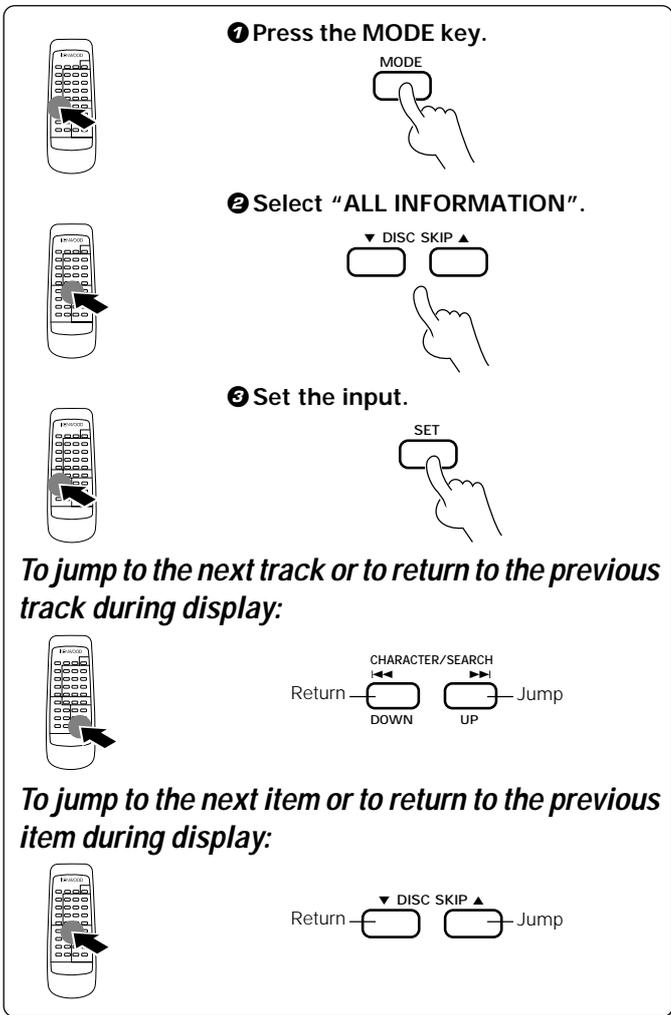

DISPLAY-A : The display flashes.

ALL INFORMATION

- ① Disc/Track Title : Disc and track titles
- ② Disc/Track Artist : Singer (or performer)
- ③ Disc/Track Songwriter : Songwriter
- ④ Disc/Track Composer : Composer
- ⑤ Disc/Track Arranger : Arranger
- ⑥ Disc/Track Message : Message from sponsor or artist
- ⑦ ID INFO. : Record company, release date, etc.
- ⑧ Genre INFO. : Music type information

- Items from ① to ⑥ are displayed in the sequence of disc and track.
- When there is no text information to be displayed "-----" is scrolled on the display.
- In the case of a non-CD-TEXT disc, the "NO CD TEXT" display will appear for approx. 3 seconds.
- This operation is not available during the continuous play mode.

To end ALL INFORMATION during display
Press the MODE key.

Programming tracks in desired order (PGM mode) (Mechanism-A only)


CD-2280M/DPF-J9010 (En)

16

Use the following procedure to select desired tracks (up to 32 tracks) from up to 200 discs and program them in the desired order.


Preparation

- Load discs into the carousel.
- Set the Mechanism-A to stop mode.

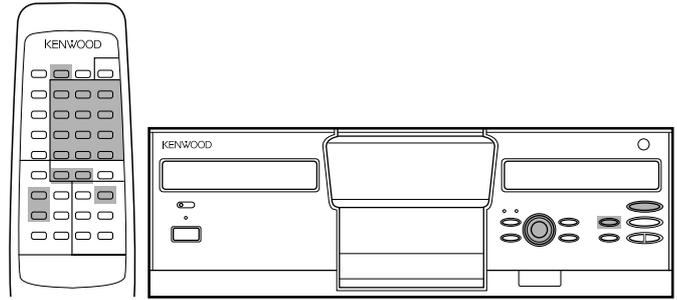

 : Keys and controls used in the operations described on this page.



1 Press so that the PGM indicator lights.

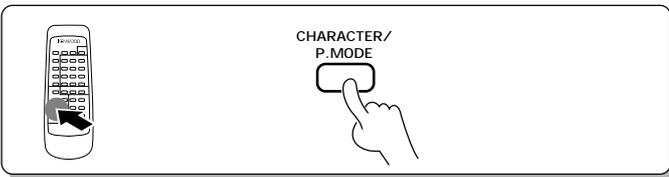

DISPLAY-A


PGM SELECT DISC

2 Select the disc.

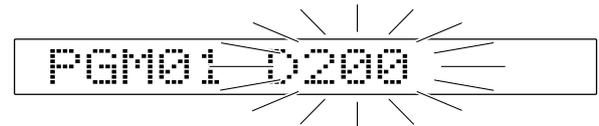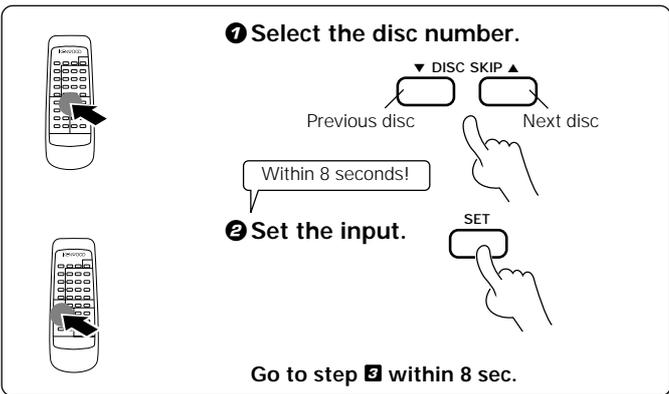

- The disc number can be selected directly by using the **DISC SELECTOR** and numeric keys in place of the **DISC SKIP** keys.
 - When the disc corresponds to CD-TEXT, or when the disc title has been registered, the disc title will be displayed with scrolling. Discs can be selected while looking at the registered contents.
- "Registration of Title Name"** 
- If you make a mistake, press the **CLEAR** key and enter the disc No. from the beginning.

3 Select the track number.

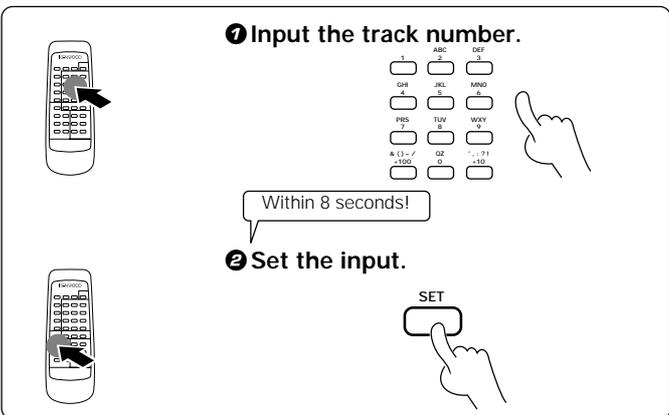


Press the numeric keys in the following order...

Track No.8 : **8**
Track No.14 : **1 4**
Track No.20 : **2 0**



- To program the entire disc, press the **SET** key without inputting the track number. **"ALL"** will be displayed.
 - When the disc corresponds to CD-TEXT, or when the track titles have been registered, the track title will be displayed with scrolling. Tracks can be selected while looking at the registered contents.
- "Registration of Title Name"** 
- Program other tracks in the desired order by repeating steps **2** and **3**.
 - Up to 32 tracks can be programmed. **"FULL"** is displayed when no more tracks can be programmed.
 - If you make a mistake, press the **CLEAR** key and restart from step **2**.


4 Start playback.

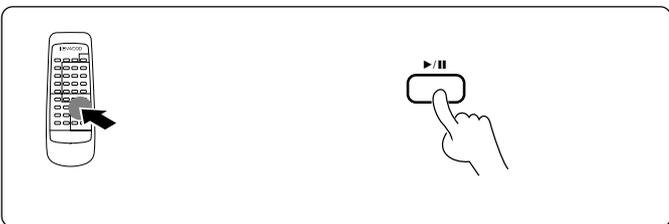

- Tracks will be played in the order they were programmed (in order of P Nos.).
- If a track to be played is located in the disc played on Mechanism-B, that track will be skipped.
- When the **◀◀** or **▶▶** key is pressed during playback, the track will be skipped in the direction of the pressed button.



For continuous playback

Press the **CONTINUOUS PLAY** key.

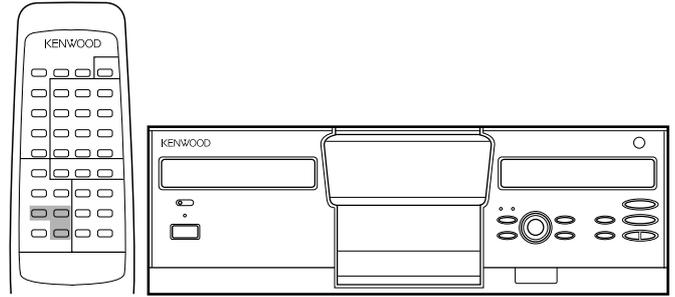


 : Keys and controls used in the operations described on this page.

To check the programmed tracks

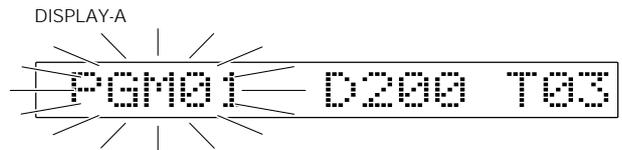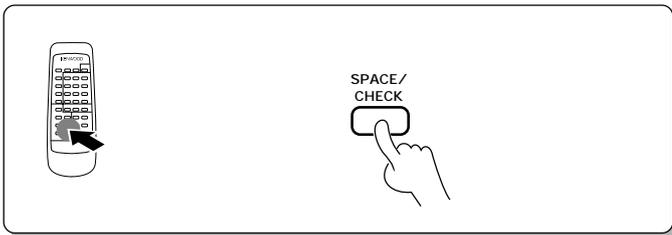

- Each time the key is pressed, the program No. (P-NO) and the disc No. are displayed.
- The previous display resumes in a few seconds.


To add a track to the program

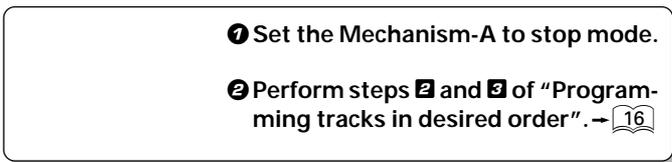

- 1 Set the Mechanism-A to stop mode.
- 2 Perform steps 2 and 3 of "Programming tracks in desired order". → 16


- When a track No. is entered, the track will be added to the end of the existing program.

To change a track in the program

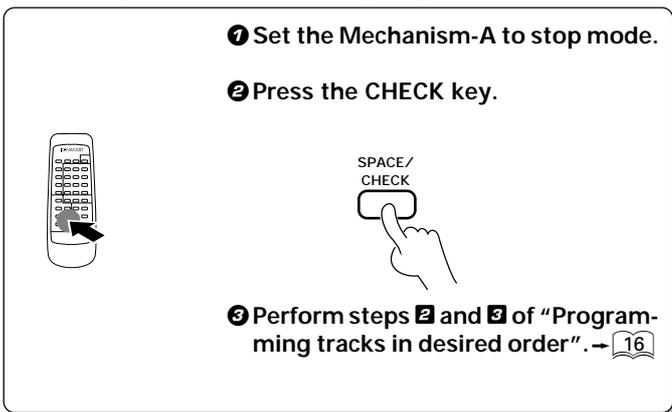

- 1 Set the Mechanism-A to stop mode.
- 2 Press the CHECK key.
- 3 Perform steps 2 and 3 of "Programming tracks in desired order". → 16

- Press the **CHECK** key repeatedly until the track No., to be changed is displayed.

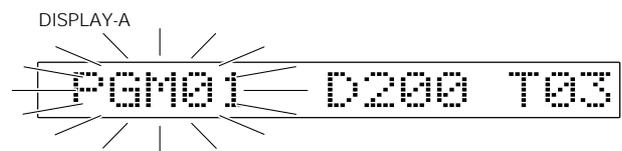


Example

- Press it while the "PGM01" indicator blinks.
- The track being played cannot be changed.


To clear tracks from the program

To clear tracks from the end

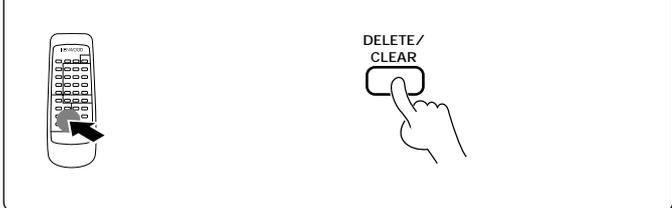

- Each time the key is pressed, the last track in the program is cleared.
- The tracks which are programmed earlier than the track being played cannot be cleared.

To clear all tracks

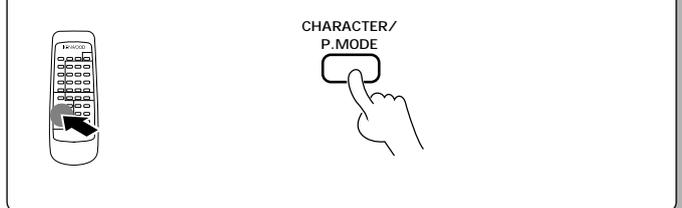

- When the **P.MODE** key is pressed during playback, playback in order of tracks starts from the track being played.


Repeated playback (REPEAT mode)

CD-2280M/DPF-J9010 (En)

18


Preparation

- Load discs into the carousel. → 10
- Select the Mechanism-A or Mechanism-B. → 11

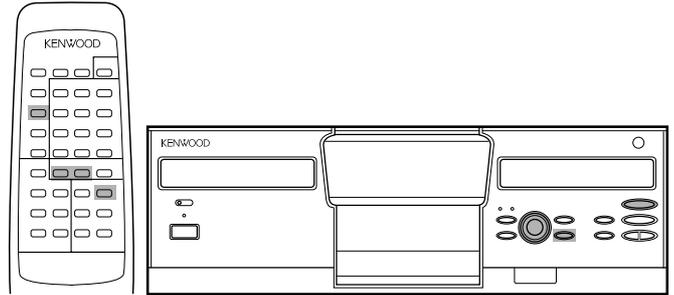

 : Keys and controls used in the operations described on this page.

To repeat only the desired tracks (Mechanism-A only)

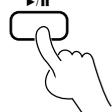- 1 Program the desired tracks by performing steps 1 to 3 of "Programming tracks in desired order". → 16
- 2 Switch REPEAT ON.
 
- 3 Start playback.
 

- Up to 32 tracks can be programmed by repeating steps 1.




- The current status is displayed when the key is pressed once. When it is pressed while the status is displayed, the repeat ON status can be set to OFF (or vice versa).

- All of the programmed tracks will be repeated.
- If a track to be played is located in the disc played on Mechanism-B, that track will be skipped.
- In case only one track is programmed, only that track will be repeated.

To cancel repeated playback


Press the REPEAT key twice. (REPEAT ON → OFF)

To repeat one selected disc

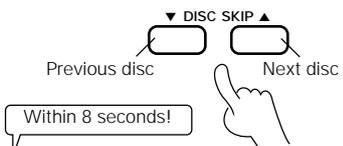- 1 Check that the Mechanism is in the normal play TRACK mode. → 13
- 2 Select the disc number.
 
- 3 Start playback.
 
- 4 Switch REPEAT ON.
 

- The disc number can be selected directly by using the DISC SELECTOR and numeric keys in place of the DISC SKIP keys.

- If the selected disc is being played on the other mechanism, blinking "DISCXXX BUSY!" is displayed and the disc will not be played.

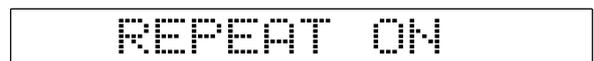

- The current status is displayed when the key is pressed once. When it is pressed while the status is displayed, the repeat ON status can be set to OFF (or vice versa).
- The operation is not available during the continuous play mode.

To cancel repeated playback

Press the REPEAT key twice. (REPEAT ON → OFF)

For random repetition → 19

For music type repetition → 26

For best selection repetition → 27




If it is Mechanism-B that is selected, use the main unit keys for these operations.

Playback in a random order (RANDOM mode)

Use the following procedure to activate random playback which selects a track at random after every track. This feature may allow you to play CDs for long hours without getting tired of.

Preparation

- Load discs into the carousel. → 10
- Select the Mechanism-A or Mechanism-B. → 11

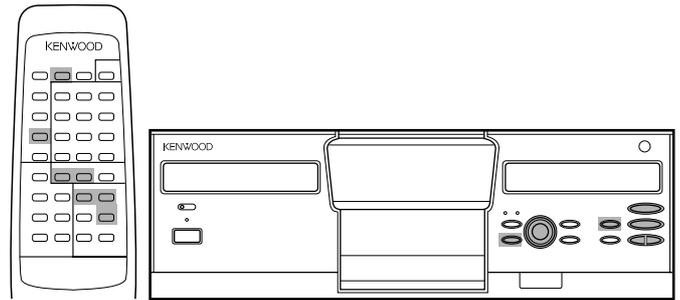


■ : Keys and controls used in the operations described on this page.

1 Check that the Mechanism is in the normal play TRACK mode. → 13

2 Select discs.

To select one disc

① Select the disc number.

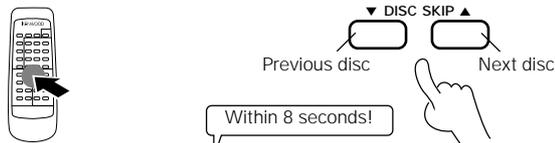

② Start playback.



③ Select "ONE DISC RANDOM".



To select all discs

Select "ALL DISC RANDOM".



- The disc number can be selected directly by using the **DISC SELECTOR** and numeric keys in place of the **DISC SKIP** keys.
- If the selected disc is being played on the other mechanism, blinking "DISCXXX BUSY!" is displayed and the disc will not be played.
- "ONE DISC RANDOM" cannot be selected during the continuous play mode.

Each press switches the modes as follows:

- ① ONE DISC RANDOM
- ② ALL DISC RANDOM
- ③ RANDOM OFF




The number here changes.

- Each time a track ends, the same operation as above is repeated, and the track selected next is played.
- Random play stops after all of the tunes have been played once.
- The random playback can also be repeated by pressing the **REPEAT** key.

- If a track to be played is located in the disc played on the other mechanism, that track will be skipped. (This track will not be selected later unless the REPEAT mode is set.)


For continuous playback (ALL DISC RANDOM only)
Press the **CONTINUOUS PLAY** key.

To select another track in the middle of playing one

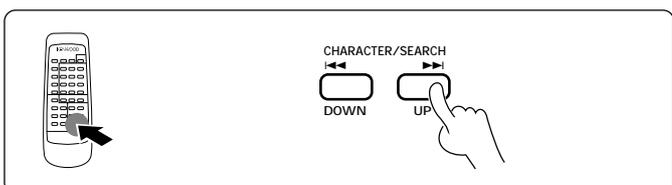

- Pressing the **◀◀** key once returns to the beginning of the track being played.

To cancel random playback

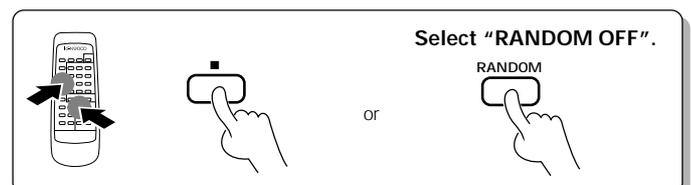

- Press the **■** key to stop playback.
- Normal playback will be performed when **RANDOM OFF** is selected.

For random music type




If it is Mechanism-B that is selected, use the main unit keys for these operations.

Registration of Title Name

For discs not corresponding to CD-TEXT, a title name can be given to the disc (max. 25 characters). Up to 20 tracks titles can be registered per disc. Operation is possible also when the door panel is open. It is convenient to register titles while discs are being inserted.

Preparation

- Load discs into the carousel. → 10
- Check that the Mechanism-A is in the normal play TRACK mode. → 13
- Set the Mechanism-A to stop mode.

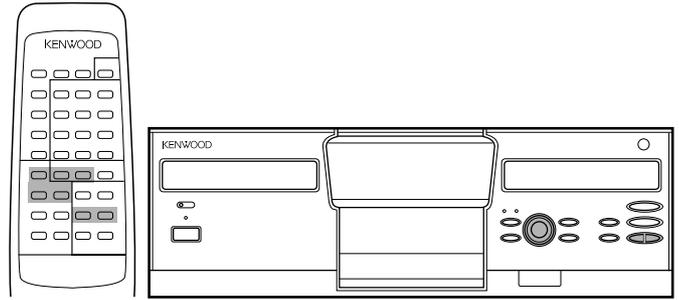

 : Keys and controls used in the operations described on this page.

Assigning Title Names


1 Switch to title name input mode.

1 Press the MODE key.

2 Select "TITLE INPUT".

- When the **MODE** key is pressed during title name input mode, the input mode is cancelled.

DISPLAY-A : The display flashes.

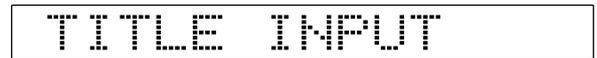

- To enter track titles without assigning the disc title, go to "To enter the track title". → 21

2 Enter the title names.

To enter the disc title

1 Select the disc number.

Previous disc Next disc

2 Select a character.

CHARACTER/SEARCH
DOWN UP


Press until the character to be entered comes to the position of the flashing cursor.

3 Press the SET key.

4 Store the disc title.

- The disc number can be selected directly by using the numeric keys in place of the **DISC SKIP** keys.
- During playback, the disc only being played can be selected.

- The characters also can be selected with the **DISC SKIP** knob on the main unit (provided that the **OPERATION-A** indicator is lit). Turn the knob until the character to be entered comes to the position of the flashing cursor.

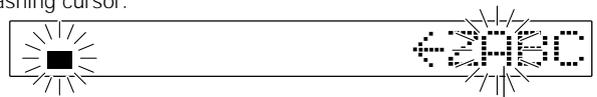

Flashing cursor

For direct selection of characters

Each press switches the modes as follows:

When capital letters have been selected : A→B→C→A


When small letters have been selected : a→b→c→a

When numbers/symbols have been selected : 2

To change the character type... → 23

- When the **SET** key is pressed, one character is set and the cursor goes to the next digit.
- Repeat this to enter the title name.

- One character is set and the cursor goes to the next digit.
- Input the entire disc title by repeating 2 and 3 for each character.

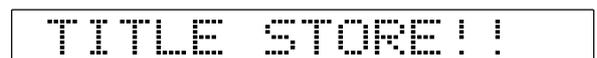

- To register the disc names of another disc, repeat the entire procedure of "To enter the disc title".
- To register another track titles in the same disc, go to step 1-2 in "To enter the track title". → 21

In regard to disc information reading

The entered title name is read in to the disc with the following timing.


- When the door panel is closed.
- With closed door panel, when title name mode is cancelled (except during the continuous play mode).

DISPLAY-A : The display flashes.



When there are discs for which the disc information already has been read in, there may be no display.

Do not move or exchange discs until the disc information has been read in.

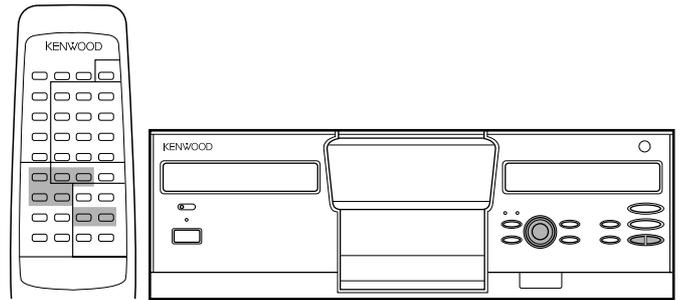


: Keys and controls used in the operations described on this page.


To enter the track title

① Select the track number.


1. Select the disc number.

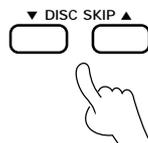


2. Select the track number.

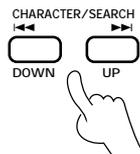

3. Press the SET key.

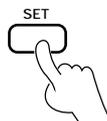


② Select a character.

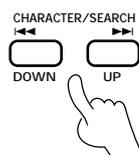

Press until the character to be entered comes to the position of the flashing cursor.


③ Press the SET key.

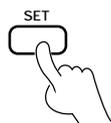


④ Store the track title.



DISPLAY-A

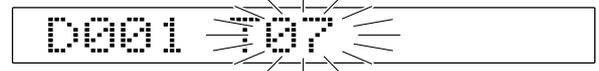

- The characters also can be selected with the **DISC SKIP** knob on the main unit (provided that the **OPERATION-A** indicator is lit). Turn the knob until the character to be entered comes to the position of the flashing cursor.

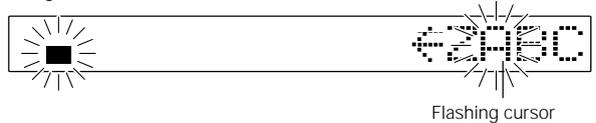

Flashing cursor

- One character is set and the cursor goes to the next digit.
- Input the entire track title by repeating ② and ③ for each character.



- Up to 20 track titles can be registered per disc by repeating steps from ①-2 to ④ for each.

To exit title name mode


Press the **MODE** key.



1. For discs corresponding to CD-TEXT, a new title name can not be registered.
2. As the entered title names and the CD-TEXT title information are memorized, the information may be displayed even when a disc has been removed.

Preparation

- Close the door panel.

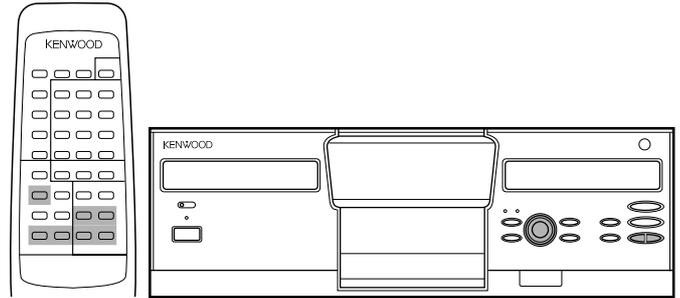

 : Keys and controls used in the operations described on this page.

To change or delete a title name

1 Perform steps **1** and **2-1** of "Assigning Title Names".
→  → 


2 Change or delete characters one by one.

Change


1 Select overwrite or insert mode.



2 Move the cursor to the desired character (to be changed).

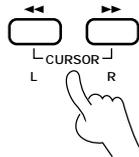


3 Select a character.

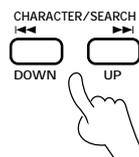


Press until the character to be entered comes to the position of the flashing cursor.

4 Set the selected character.

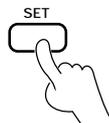


- Call the disc title or track title to be changed.
- Deletion mode is cancelled when the **MODE** key is pressed.

DISPLAY-A

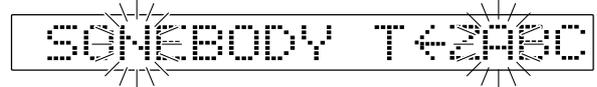

← Move with the ◀▶ keys →

- If the title to be changed is too long to be displayed on the display section, press the ◀ or ▶ key to scroll the display so that the characters hidden until then appear.

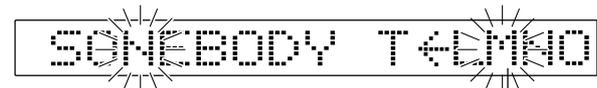


Flashing cursor

- The characters also can be selected with the **DISC SKIP** knob on the main unit (provided that the **OPERATION-A** indicator is lit). Turn the knob until the character to be entered comes to the position of the flashing cursor.

Deletion


1 Move the cursor to the desired character (to be deleted).

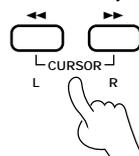

2 Press the DELETE key.




- When a title name is to be deleted, delete all characters one by one.

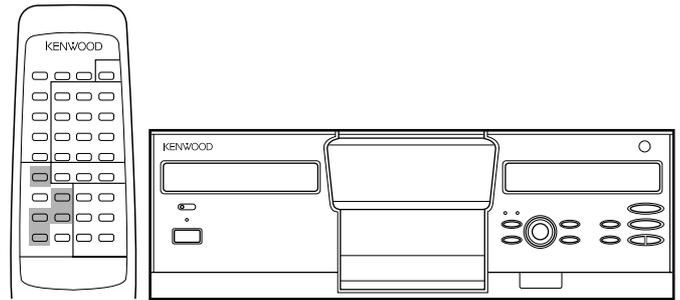

 : Keys and controls used in the operations described on this page.

3 Execute title change or deletion.


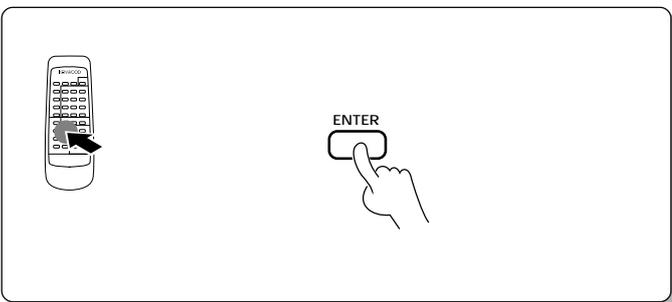


To exit title name mode


Press the MODE key.

To change the character type

The type of characters which can be entered is switched each time the CHARACTER key is pressed.

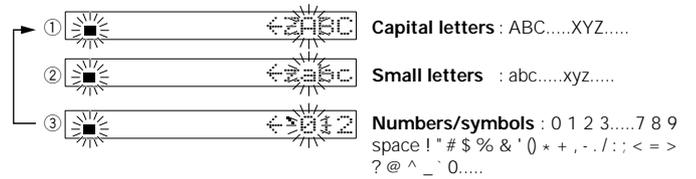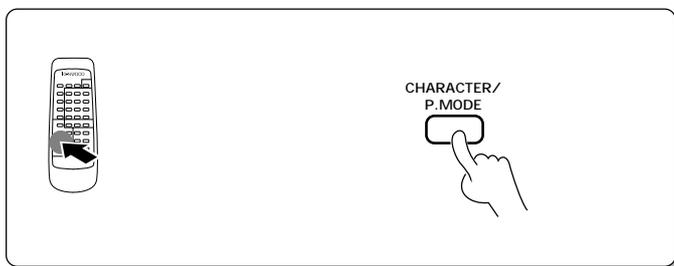


To switch between insert and overwrite mode

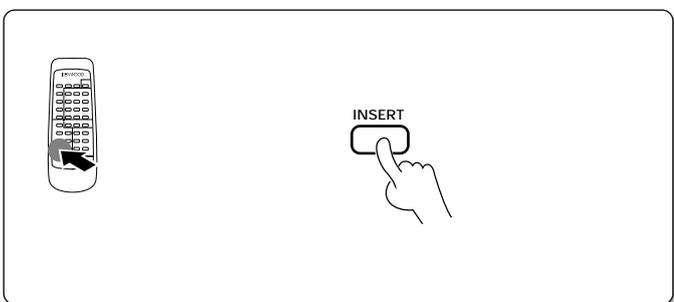


Each press switches the modes as follows:

- ① Insert mode : To insert characters before the cursor
- ② Overwrite mode : To replace characters


Insert mode

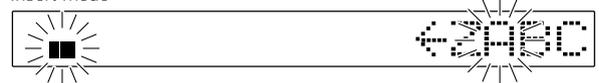

Overwrite mode

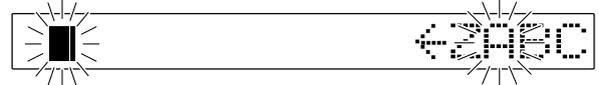

To enter a space

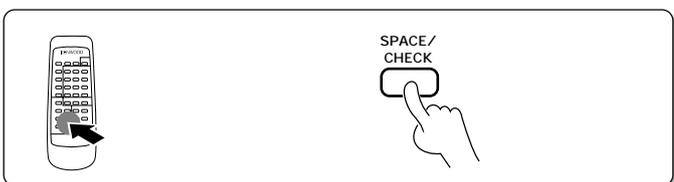


Listening to music by genre (MUSIC TYPE mode)

Discs can be registered separately by 26 types of music genres.

Preparation

- Load discs into the carousel. → 10
- Close the door panel. → 10
- Check that the Mechanism-A is in the normal play TRACK mode. → 13
- Set the Mechanism-A to stop mode.

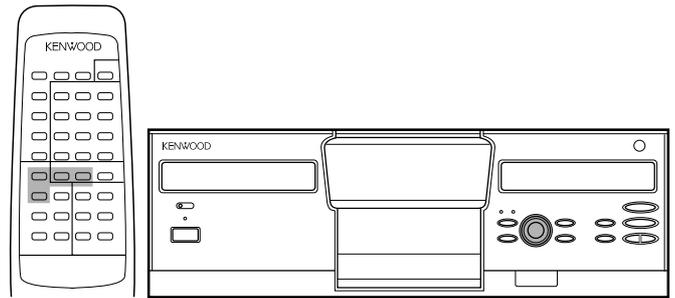

 : Keys and controls used in the operations described on this page.

Registration of music type files

1 Activate the music type mode.

- 1 Press the MODE key.**
A hand is shown pressing the 'MODE' key on the remote control.
- 2 Select "MUSIC TYPE".**
A hand is shown pressing the 'DISC SKIP' key on the remote control.
- 3 Set the input.**
A hand is shown pressing the 'SET' key on the remote control.
- 4 Set to registration mode.**
A hand is shown pressing the 'SET' key on the remote control.

- When the **MODE** key is pressed during MUSIC TYPE mode, the MUSIC TYPE mode is cancelled.

Each press switches the modes as follows:

- ① MUSIC TYPE
- ② TITLE INPUT
- ③ ALL DATA READ
- ④ ALL INFORMATION
- ⑤ DTS ANALOG MUTE

DISPLAY-A : The display flashes.

MUSIC TYPE

DISPLAY-A : The display flashes.

MUSIC TYPE SET

SELECT DISC

2 Select the desired disc.

- 1 Select the disc number.**
A hand is shown pressing the 'DISC SKIP' key on the remote control. Below the key, 'Previous disc' and 'Next disc' are indicated with arrows.
- 2 Set the input.**
A hand is shown pressing the 'SET' key on the remote control.

- The disc number can be selected directly by using the numeric keys in place of the **DISC SKIP** keys.


In regard to disc information reading

The entered music type is read in to the disc with the following timing.

- When that disc is played.
- When ALL DATA READ is executed.




Do not move or exchange discs until the disc information has been read in.

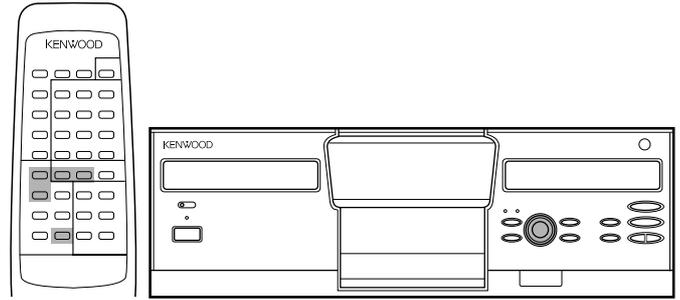


 : Keys and controls used in the operations described on this page.

3 Select the music type.

1 Select the music type.

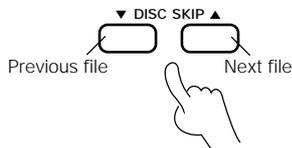

2 Set the input.

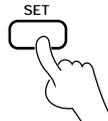

Each press switches the modes as follows:

Adult Contemporary → Alternative Rock → Children's Music → Classical → Contemporary Christian → Country → Dance → Easy Listening → Folk → Gospel → Hip Hop → Jazz → Latin → Musical → New Age → Opera → Operetta → Pop Music → RAP → Reggae → Rock Music → Rhythm & Blues → Sound Effects → Sound Track → Spoken Word → World Music.....

DISPLAY-A : When "Rock Music" is selected



- When the selected disc corresponds to CD-TEXT and contains a genre code, that genre code is registered as the music type.

To confirm the genre code ...

"Displaying all the text information"



- Repeat from step 2 to change the registered music type.
- To register another music type file, repeat the procedure from step 2.

To quit MUSIC TYPE mode

Press the MODE key.


To delete the registered music type

1 Play the music type file. → 26

2 Press the CLEAR key during playback of the disc to be deleted.




DISPLAY-A

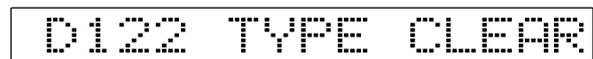

When music types have been registered for the discs, it is possible to enjoy playback of discs of the selected music type. Random playback for a selected music type also is possible.

Preparation

- Load discs into the carousel. → 10
- Register music type files. → 24
- Check that the Mechanism-A is in the normal play TRACK mode. → 13
- Set the Mechanism-A to stop mode.

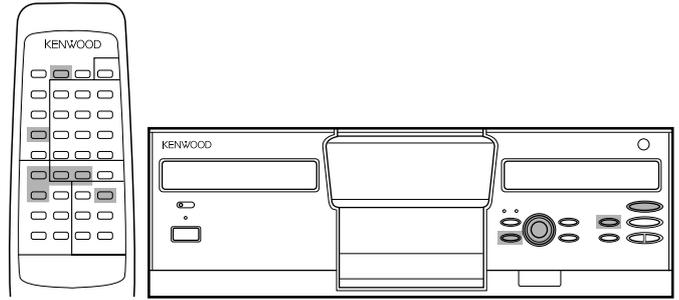

: Keys and controls used in the operations described on this page.

Playing the music type file (Mechanism-A only)

1 Activate the music type mode.

1 Press the **MODE** key.

2 Select "**MUSIC TYPE**".

3 Set the input.

- When the **MODE** key is pressed during MUSIC TYPE mode, the MUSIC TYPE mode is cancelled.

Each press switches the modes as follows:

- ① **MUSIC TYPE**
- ② **TITLE INPUT**
- ③ **ALL DATA READ**
- ④ **ALL INFORMATION**
- ⑤ **DTS ANALOG MUTE**

DISPLAY-A : The display flashes.



2 Select the music type.

Previous file Next file

- Press repeatedly until the desired music type is displayed.

DISPLAY-A : When "Rock Music" is selected



3 Start playback.

- Playback is performed in increasing order of the disc numbers they were registered for the respective music type. Skipping to the next disc is done when the ►► key is pressed.
- If the disc to be played is being played in Mechanism-B, the disc will be skipped.
- Each time the **CHECK** key is pressed, the registered disc numbers are displayed in increasing order of the disc numbers.
- When the **REPEAT** key is pressed, playback of the music type file will be repeated.

For random playback

Press the **RANDOM** key.

- Select "**RANDOM OFF**" to quit random playback.


For continuous playback

Press the **CONTINUOUS PLAY** key.

To quit MUSIC TYPE mode

Press the **MODE** key.

DISPLAY-A

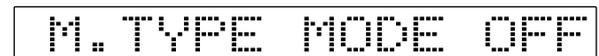


Listening to your favorite titles (BEST SELECTION mode) (Mechanism-A only)

CD-2280M/DPF-J9010 (En)

You can select only your favorite titles and register them as the best selection. Use the following procedure to register favorite tracks in the best selection file while playing a CD.

Preparation


- Load discs into the carousel.

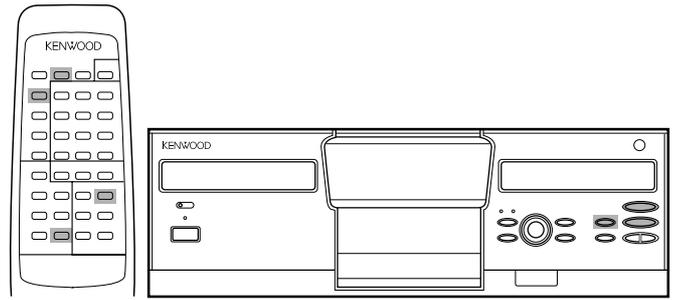

 : Keys and controls used in the operations described on this page.


Registration of best selection file

1 Play the track to be registered.

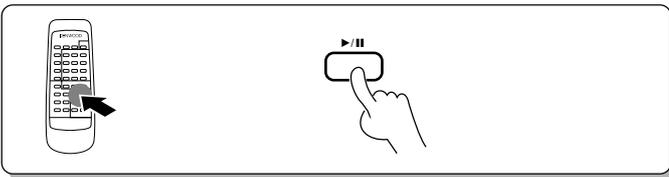

- Only the track being played can be registered.

2 Register it in the best selection file.

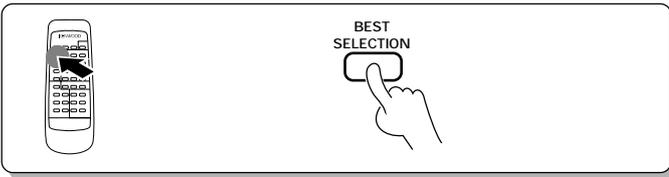

DISPLAY-A

BEST01 D104 T03


3 Register other favorite tracks by performing steps 1 and 2 for each of them.

- Up to 32 tracks can be registered. "FULL" is displayed when no more disc is acceptable.

Playing the best selection file

1 Check that the Mechanism-A is in the normal play TRACK mode, and set the Mechanism-A to stop mode.

2 Press the BEST SELECTION key.

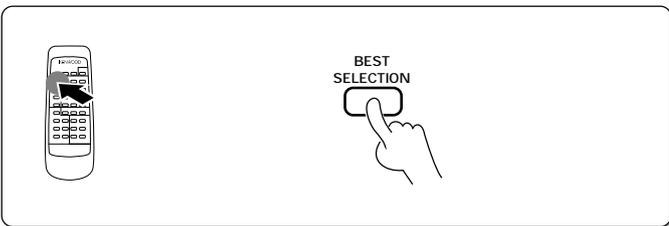

DISPLAY-A

BEST SELECTION

- The tracks are played in the order they were registered.
- If a track to be played is located in the disc played on Mechanism-B, that track will be skipped.
- Each time the CHECK key is pressed, the disc numbers and track numbers are displayed in the order they were registered.
- When the REPEAT key is pressed, playback of the best selection file will be repeated.

For continuous playback

Press the CONTINUOUS PLAY key.


To quit BEST SELECTION mode

Press the  key during playback.

- The recorded contents remain stored even when best selection mode is quit.

To delete the registered best selection

This is done during best selection mode.

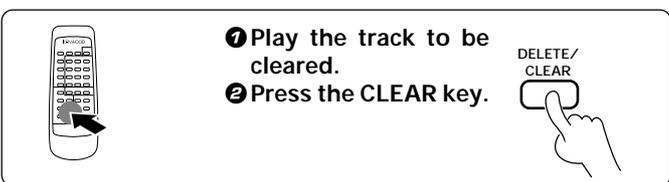

- 1 Play the track to be cleared.
- 2 Press the CLEAR key.

DELETE/
CLEAR

DISPLAY-A

BEST02 CLEAR

Continuous playback


CD-2280M/DPF-J9010 (En)

28

With this feature, the time required for disc change can be minimized so even different discs can be played naturally and almost continuously. The same audio signal is output at both OUTPUT-A and OUTPUT-B.

Preparation

- Load discs into the carousel. → 10
- Close the door panel. → 10
- Set the Mechanism-B to stop mode.

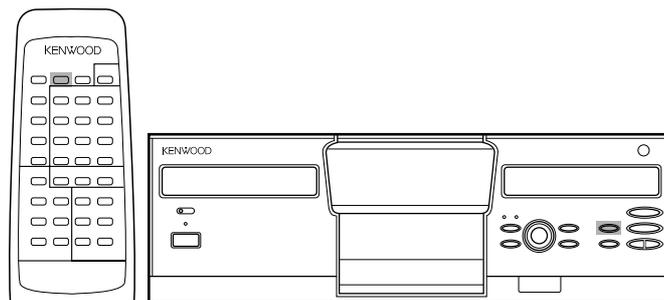

 : Keys and controls used in the operations described on this page.

Initiate the continuous play mode.



DISPLAY-B

CONTINUOUS PLAY

- The **OPERATION A-B** key is set to A during continuous play mode.
- When the door panel is opened, the continuous play mode is released and playback also stops.

To quit continuous play mode

Press the **CONTINUOUS PLAY** key.

For continuous playback in normal play mode → 12

For continuous playback in PGM mode → 16

For continuous playback in ALL DISC RANDOM mode
→ 19

For continuous playback in MUSIC TYPE mode
→ 26


For continuous playback in BEST SELECTION mode
→ 27

Registration of DTS discs

Use the following procedure before playing the DTS disc.

Preparation

- Load DTS discs into the carousel. → 10
- Check that the Mechanism-A is in the normal play TRACK mode. → 13

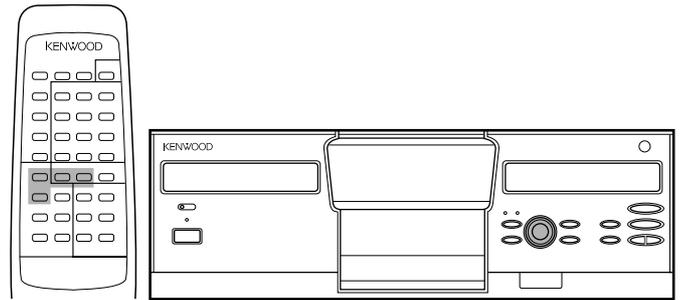

: Keys and controls used in the operations described on this page.

1 Activate the DTS ANALOG MUTE mode.

1 Press the **MODE** key.

2 Select "**DTS ANALOG MUTE**".

- When the **MODE** key is pressed during DTS ANALOG MUTE mode, the DTS ANALOG MUTE mode is cancelled.

Each press switches the modes as follows:

- 1 MUSIC TYPE
- 2 TITLE INPUT
- 3 ALL DATA READ
- 4 ALL INFORMATION
- 5 DTS ANALOG MUTE

2 Select "MUTE ON".

Each press switches the modes as follows:

- 1 MUTE ON
- 2 MUTE OFF

DISPLAY-A

SELECT DISC

3 Select the DTS disc.

Select the disc number.

Previous disc Next disc

- The disc number can be selected directly by using the numeric keys in place of the **DISC SKIP** keys.
- To register another DTS disc, repeat the procedure from step 1.

To quit DTS ANALOG MUTE mode
Press the **MODE** key.

To delete the DTS registration

Use the following procedure before moving or changing a DTS disc, and register the disc again.

1 Perform steps 1 of "Registration of DTS discs".

2 Select "**MUTE OFF**".

3 Select the DTS disc to be deleted.

Previous disc Next disc

Each press switches the modes as follows:

- 1 MUTE ON
- 2 MUTE OFF

To quit DTS ANALOG MUTE mode
Press the **MODE** key.



Note When a DTS disc is played, the audio signal is not output at the analog output jacks.

Timer operation (Mechanism-A only)


CD-2280M/DPF-J9010 (En)

30

As this unit incorporate the timer standby function, playback can be started at desired moment if a commercially available audio timer is combined with this unit.

Preparation

- Load discs into the carousel. → 10
- Close the door panel. → 10
- Select the Mechanism-A. → 11
- Connect the system components so that their power can be switched on by the timer.
- Read the instruction manual of the timer carefully.

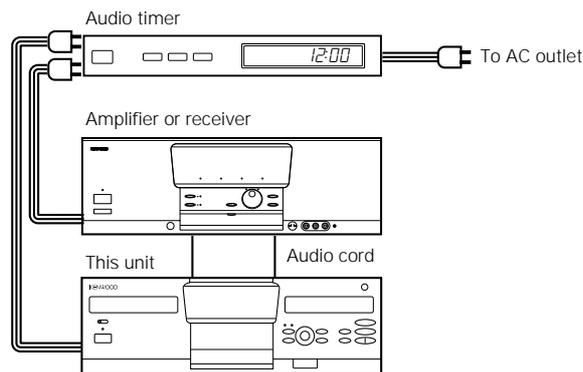

1 Set the power switches of the system components to the ON positions.

2 Select the disc to be played.

1 Select the disc number.

Previous disc DISC SKIP Next disc

Within 8 seconds!

2 Play the disc.

- The disc number can be selected directly by using the **DISC SELECTOR** and numeric keys in place of the **DISC SKIP** keys.

- If the selected disc is being played on Mechanism-B, blinking "**DISCXXX BUSY!**" is displayed. In this case, either stop Mechanism-B and select the same disc again, or select another disc.

3 Set the listening volume.

- 1 Adjust the volume on the amplifier or receiver.
- 2 Stop playback.

4 Set the timer for the desired ON time.

5 Set the **TIMER PLAY** switch to ON.

TIMER PLAY

OFF ON

The diagram shows a hand turning a slider switch labeled 'TIMER PLAY' from the 'OFF' position to the 'ON' position. An arrow points to the right above the switch.

- Read the instruction manual of the timer carefully.

- When the set time comes, playback will start automatically.

Operation to reset

The microcomputer may malfunction (impossibility to operate, erroneous display, etc.) when the connection cords are unplugged while power is ON or due to an external factor. In this case, execute the following method to reset the microcomputer and return it to normal condition.

Unplug the power cord from the power socket and plug the power cord into the socket again.

To reset the registered contents

The registered contents for title name, music type, best selection and DTS disc can be reset by the following procedure.

Unplug the power cord from the power socket and, while holding the ■ key depressed, plug the power cord into the socket again.

Remote control unit

Symptom	Cause	Remedy
Remote control operation is not possible.	<ul style="list-style-type: none"> ● Batteries are exhausted. ● The remote control unit is too far away from the main system, controlling angle is too large, or there is an obstacle in between. 	<ul style="list-style-type: none"> ● Replace with new batteries. →  ● Operate the remote control unit within the controllable range. → 

CD Player

Symptom	Cause	Remedy
No power is applied with the POWER(I/⏻) key ON.	<ul style="list-style-type: none"> ● Power plug is loosely connected. ● With the power plug connected to the switched AC outlet of an amplifier, the power of the amplifier is turned off. 	<ul style="list-style-type: none"> ● Insert the power plug firmly to the AC outlet. ● Insert the power plug to the wall AC outlet.
Disc is loaded, player does not play.	<ul style="list-style-type: none"> ● Disc is loose. ● Disc is dirty. ● Disc is cracked. ● Condensation occurred on the optical lens unit. 	<ul style="list-style-type: none"> ● Insert disc properly. →  ● Wipe off the dust on the surface of the disc referring to "Disc handling precautions". →  ● Replace the disc with a new one. ● Leave the player for about 1 hour so that the condensation is removed. → 
No sound.	<ul style="list-style-type: none"> ● Disc is not loaded. ● Play mode is not entered (The play indicator is not lit). ● Disc is too dirty. ● Disc is cracked. ● The connection cords are inserted loosely. ● A DTS disc is being played using the analog output. 	<ul style="list-style-type: none"> ● Load a disc and press the ▶/⏸ key. →  ● Press the ▶/⏸ key. ● Wipe off the dust on the disc surface referring to "Disc handling precautions". →  ● Replace the disc with a new one. ● Connect all connection cords firmly. →  ● When a DTS disc is played, the audio signal is not output at the analog output jacks.
Music is interrupted. (Sound is skipped.)	<ul style="list-style-type: none"> ● Disc is too dirty. ● Disc is cracked. ● Oscillation is applied to this unit. 	<ul style="list-style-type: none"> ● Wipe off the dust on the disc surface referring to "Disc handling precautions". →  ● Replace the disc with a new one. ● Try selecting a place where no strong vibrations occur by changing the installation place, etc.
Disc selection is not possible.	<ul style="list-style-type: none"> ● MUSIC TYPE mode is selected. 	<ul style="list-style-type: none"> ● Press the MODE key to quit MUSIC TYPE mode. → 
Disc begins to play when power is switched ON.	<ul style="list-style-type: none"> ● The TIMER PLAY switch is set to ON. 	<ul style="list-style-type: none"> ● Set the TIMER PLAY switch to OFF unless timer playback is required. → 

Specifications

CD-2280M/DPF-J9010 (En)

32

[Format]	
System	Compact disc digital audio system
Laser	Semiconductor laser
[D/A Convertors]	
D/A Conversion	1 Bit
Oversampling	8 fs (352.8 kHz)
[Audio]	
Frequency response	4 Hz ~ 20 kHz, \pm 0.5 dB
Signal to noise ratio	More than 97 dB
Dynamic range	More than 94 dB
Total harmonic distortion + noise	Less than 0.005% (at 1 kHz)
Channel separation	More than 92 dB (at 1 kHz)
Wow & flutter	Unmeasurable Limit
Output level/impedance	
Fixed	2.0 V/0.9 k Ω
Digital output	
Coaxial (CD-2280M only)	0.5 Vp-p/75 Ω
Optical (DPF-J9010 only)	-15 dBm ~ -21 dBm (Wave length 660 nm)
[General]	
Power consumption	14 W
Dimensions	
	W : 440 mm (17-5/16")
	H : 176 mm (6-15/16")
	D : 479 mm (18-7/8")
Weight (Net)	9.0 kg (19.8 lb)



1. KENWOOD follows a policy of continuous advancements in development. For this reason specifications may be changed without notice.
2. The full performance may not be exhibited in an extremely cold location (under a water-freezing temperature).

For the U.S.A.

FCC WARNING

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment may cause harmful interference to radio communications, if it is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

For the U.S.A.

CAUTION:

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

In compliance with Federal Regulations, following are reproductions of labels on, or inside the product relating to laser product safety.

KENWOOD CORPORATION
2967-3, ISHIKAWA-CHO, HACHIOJI-SHI,
TOKYO, JAPAN

KENWOOD CORP. CERTIFIES THIS EQUIPMENT CON-
FORMS TO DHHS REGULATIONS NO. 21 CFR 1040.10,
CHAPTER I, SUBCHAPTER J.

Location: Back Panel

KENWOOD

For your records

Record the serial number, found on the back of the unit, in the spaces designated on the warranty card, and in the space provided below. Refer to the model and serial numbers whenever you call upon your dealer for information or service on this product.

Model _____ Serial Number _____