

## QUICK SETUP GUIDE

24" LED TV

NS-24E40SNA14

### Thank you

for purchasing this state-of-the-art Insignia television. We hope you enjoy the quality and reliability of this television for years to come.




## 1 START HERE

### How do I attach the stand to my TV? (not for wall mounting)

**You'll need:** A Phillips screwdriver and a soft surface to lay the TV on.

- A Carefully place your TV face-down on a cushioned, clean surface to protect the screen from damages and scratches.
- B Attach the stand column to the TV using the four of the provided M4 screws.
- C Attach the stand to the stand column using the four of the provided M4 screws.

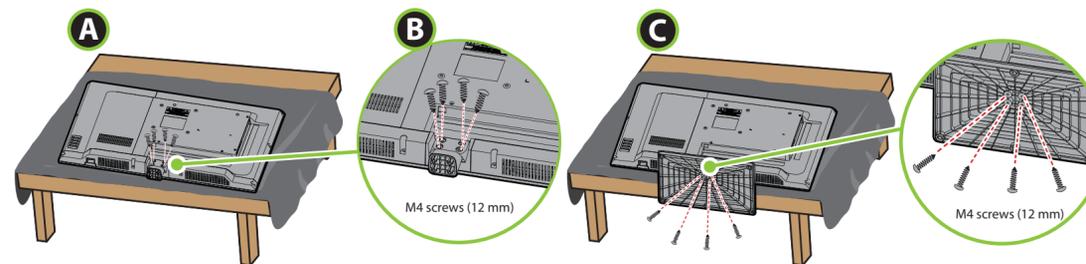


- OR -

### How do I prepare my TV for wall mounting? (not for use with a TV stand)

**You'll need:** A soft surface to lay the TV on.

- A Carefully place your TV face-down on a cushioned, clean surface to protect the screen from damages and scratches.
- B Attach the wall-mount bracket to your TV using the mounting holes on the back of your TV. See the instructions that came with the wall-mount bracket for information about how to correctly hang your TV.

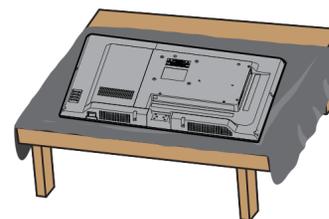

### STOP!

Do not plug your power adapter in until all other devices have been connected.

### Included accessories



 
Remote control and two AAA batteries



Power adapter



Stand column



TV stand



M4 screws (12 mm length) (8 pcs.)

### Which cables do you have?

Your TV has several different jacks for connecting devices. For the best video quality, use the best available connection. Use the cables that came with your devices.

VIDEO QUALITY	JACK TYPE	CABLE CONNECTOR
<b>BEST</b>	HDMI video/audio	
<b>BETTER</b>	Component video and analog audio	
<b>GOOD</b>	Composite video and analog audio	
<b>GOOD</b>	Coaxial video/audio	

**Note:** You can use the **HDMI 1/DVI** jack to connect a DVI device to your TV. Attach an HDMI-to-DVI adapter to the end of the HDMI cable. The adapter connects to the DVI device's jack. See your online User Guide for more information about different types of HDMI (ARC, DVI).


### Features

Front view



Power indicator  
Remote control sensor

Back view

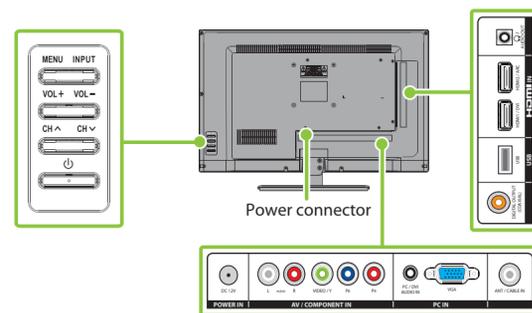


Power connector

**Note:** Images do not necessarily represent the exact design of your television.

## 2 MAKING CONNECTIONS

### How do I watch TV (cable or satellite receiver) and/or connect a device such as a DVD or Blu-ray Disc player, game station, or camcorder?

Using an HDMI cable (BEST)

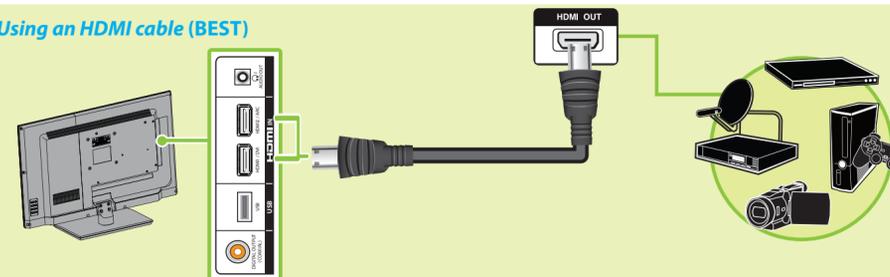


**Multi-purpose jacks:** You can plug any device that uses HDMI into either of the HDMI jacks. However, certain devices must be connected to HDMI1/DVI or HDMI2/ARC. See the instructions that came with your ARC or DVI device for more information.


Using component cables (BETTER)

- OR -

Using an AV cable (GOOD)

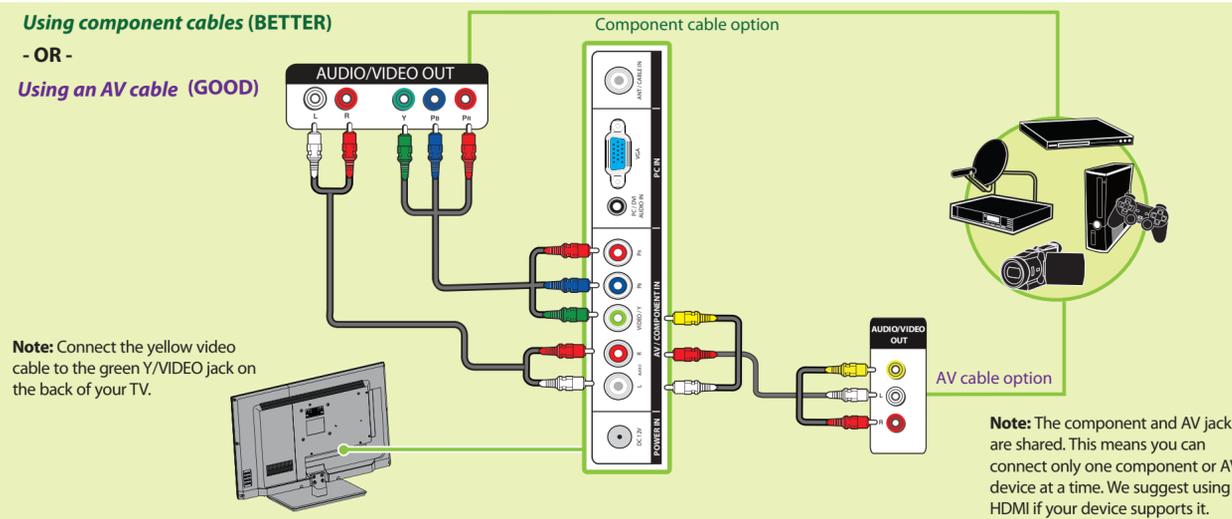

### How do I connect my TV to an antenna or cable wall jack?

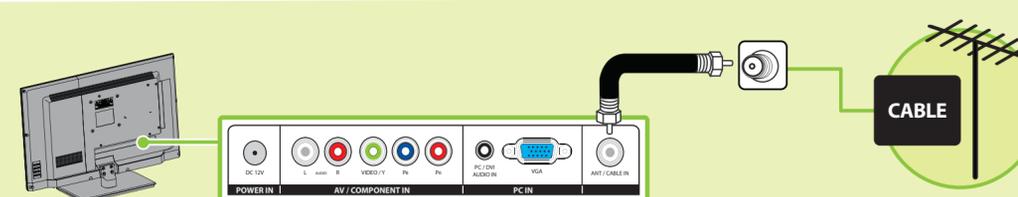


OVER

### 3 CONNECTING AUDIO DEVICES


How do I connect my TV to external speakers?

Using digital audio

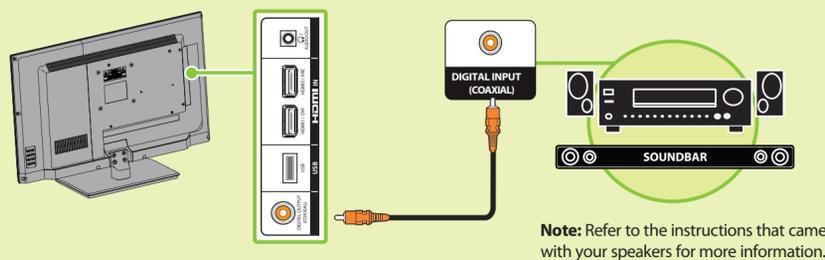


- OR -

Using analog audio


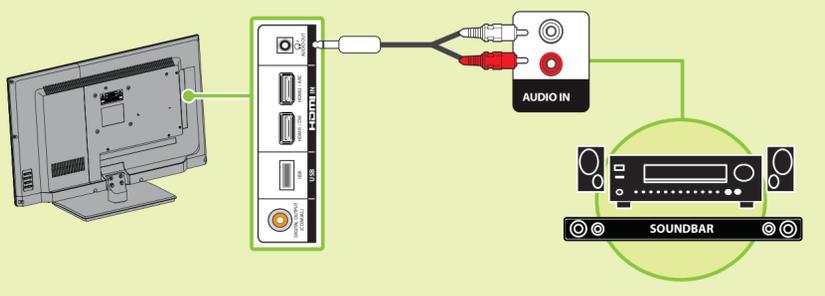


### Using your remote control

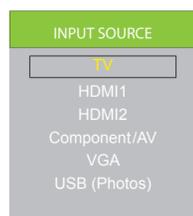

#### What are my screen-size options?

- NORMAL:** Original aspect ratio is preserved. Black bars are present if content is not widescreen (16:9).
- ZOOM:** Expands the image to fill the screen. The top and bottom of the image may be cropped.
- WIDE:** Displays content recorded in a 16:9 (wide-screen) aspect ratio.
- CINEMA:** Stretches the image at the edges, but keeps a clear image in the center.
- AUTO:** Automatically adjusts the image based on the screen size and the TV program. Select this option if you are uncertain which aspect ratio to choose. **Note: Auto is only available when Auto Aspect Ratio in the CHANNELS menu is set to On.**

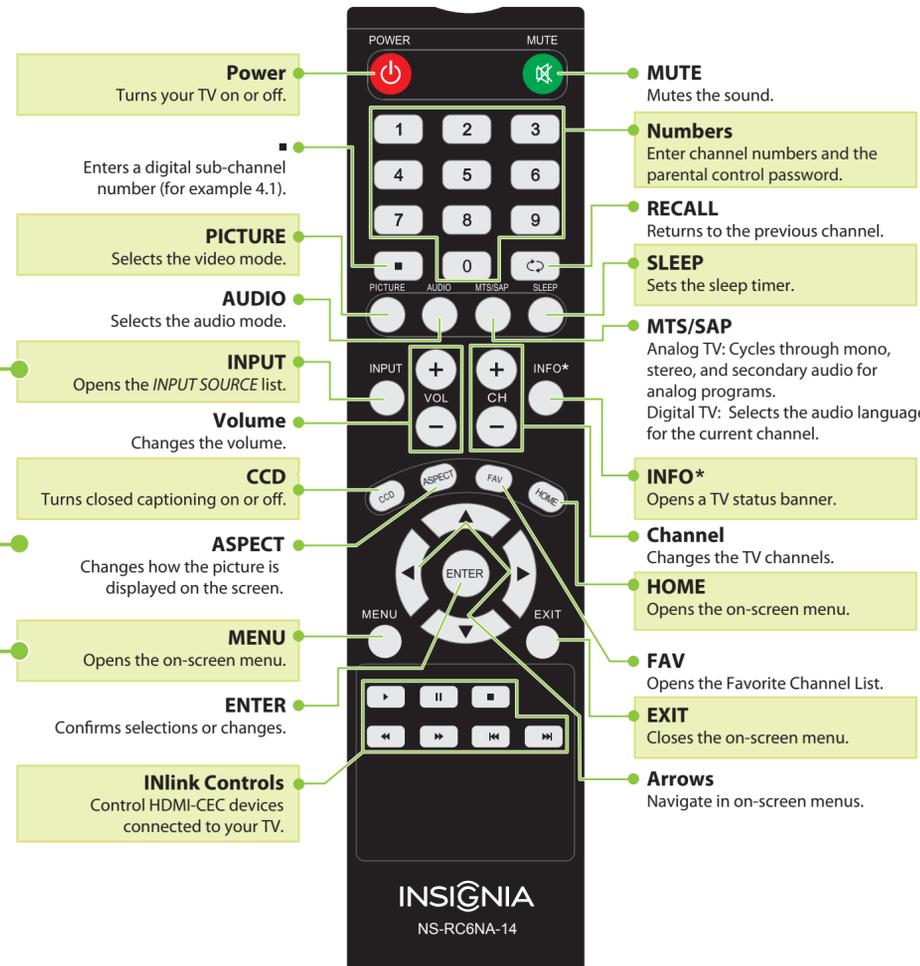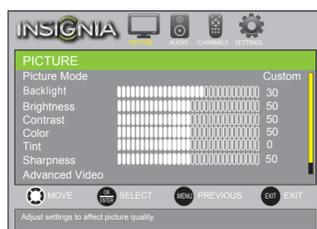


### 4 TURNING ON MY TV

When can I turn on my TV?


The best time to turn on your TV is after you have attached the TV stand or wall-mounted your TV and connected all devices.

When your television is in place:

- 1 Plug the AC power adapter into the DC IN connector on the back of your TV.
- 2 Plug on the power adapter cord into a power outlet.

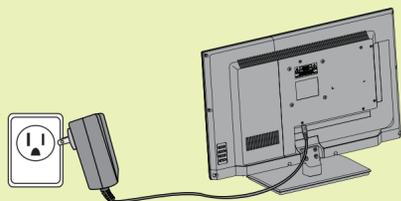

- 3 Install the remote control batteries.

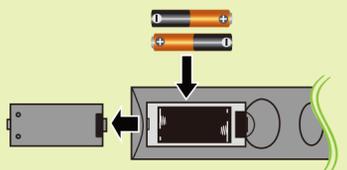

- 4 Press (power) on your remote control.
- 5 Follow the on-screen instructions.



### I already have a universal remote control. How do I make it control this TV?

If you already have a universal remote control that you would like to program to work with your TV and don't want to use the included Insignia remote control, see the table for common codes.

UNIVERSAL REMOTE TV CODES	
CABLE BOX, SATELLITE BOX, OR OTHER SET-TOP BOX	
<b>Cablevision</b>	068, 069, 078, 096, 100, 164, 168, 229, 026
<b>Charter</b>	2002, 1204, 1423, 1517, 0171, 1963, 0463, 1463, 0842, 1326, 167, 415, 424, 450, 456, 461, 507, 523, 567, 577, 586
<b>Comcast</b>	10171, 11204, 11326, 11463, 11517, 11641, 11780, 11785, 11892, 11963, 12002
<b>Cox</b>	1326, 1463
<b>Direct TV</b>	10171, 11204, 11326, 11517, 11564, 11641, 11963, 12002
<b>Dish Network</b>	720
<b>Time Warner</b>	400, 450, 461, 456, 10463, 1463, 0463
<b>Tivo</b>	0091
<b>Verizon</b>	0198, 0490
UNIVERSAL REMOTE CONTROLS	
<b>One for All</b>	0054
<b>Philips</b>	0198, 0490
<b>RCA</b>	135
<b>Sony</b>	068, 069, 078, 096



For an up-to-date list of codes for other cable providers and universal remote brands, scan this QR code or visit [www.insigniaproducts.com/remotecodes](http://www.insigniaproducts.com/remotecodes)

**One-year limited warranty**  
Visit [www.insigniaproducts.com](http://www.insigniaproducts.com) for details.

**Need additional help?**  
See your online *User Guide!* This comprehensive guide includes everything from basic how-to steps to more advanced features. A copy of your *User Guide* is not provided in the box but is available online. Go to [www.insigniaproducts.com](http://www.insigniaproducts.com), then click **Support & Service**. Enter your model number in the box under **Manual, Firmware, Drivers & Product Information**, then click **▶**. Check out our **online community forum** at [www.insigniaproducts.com](http://www.insigniaproducts.com) for helpful information from other Insignia TV owners.

**We're here for you**  
[www.insigniaproducts.com](http://www.insigniaproducts.com)  
For customer service, call:  
**877-467-4289** (U.S./Canada markets)

INSIGNIA is a registered trademark of BBY Solutions, Inc. Registered in some countries. Distributed by Best Buy Purchasing, LLC, 7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2013 BBY Solutions, Inc. All Rights Reserved  
1-877-467-4289  
[www.insigniaproducts.com](http://www.insigniaproducts.com)