

TOPCOM[®]

BUTLER 4502/TWIN/ TRIPLE/QUATTRO



USER GUIDE

2.0



Important

To use 'Caller ID' (display caller), this service has to be activated on your phone line. Normally you need a separate subscription from your telephone company to activate this function. If you don't have the Caller ID function on your phone line, the incoming telephone numbers will NOT be shown on the display of your telephone.

This product is in compliance with the essential requirements and other relevant provisions of the R&TTE directive 1999/5/EC.

The Declaration of conformity can be found on :

<http://www.topcom.net/support/cedclarations.php>

To be connected to the public analogue telephone network.

The CE symbol indicates that the unit complies with the essential requirements of the R&TTE directive.

The features described in this manual are published with reservation to modifications.

1	Description of telephone	6
1.1	Handset and base Butler 4502	6
1.2	Charger Butler 4502	7
1.3	Display	7
1.4	Handset indicator (LED)	8
2	Telephone installation	8
2.1	Connections	8
2.2	Rechargeable batteries	9
3	Using the telephone	10
3.1	Setting menu language	10
3.2	Handset ON/OFF	10
3.3	Receiving a call	10
3.4	Making an external call	10
3.5	Making an internal call	10
3.6	Internal call transfer	10
3.7	Conference Call	11
3.8	Handsfree mode	11
3.9	Display of call duration	11
3.10	Microphone mute	11
3.11	Pause Key	11
3.12	Caller Identification	11
3.13	Redial memory	12
3.14	Calling from the phonebook	13
3.15	Using the alphanumerical keypad	13
3.16	Using the menu	14
4	Personalisation	14
4.1	adjusting the ring volume	14
4.2	Choosing the ring melody	14
4.3	Speaker volume during call	15
4.4	Activation / Deactivation of beeps	15
4.5	Handset name	16
4.6	Changing the PIN code	16
4.7	Setting the dialling mode	17
4.8	flash time duration	17
4.9	Automatic answer	17
4.10	Reset	17
4.11	Keypad lock	18
4.12	Setting the time	19
4.13	Setting the alarm	19
5	Advanced functions	19
5.1	Phonebook	19
5.2	Searching a handset from the base	20

6	Managing multiple handsets	21
6.1	Setting up an additional handset	21
6.2	Removing a handset	22
6.3	Setting up a handset on another base	22
6.4	Selecting a base	22
7	Troubleshooting	23
8	Topcom warranty	23
8.1	Warranty period	23
8.2	Warranty handling	24
8.3	Warranty exclusions	24
9	Technical characteristics	24

Safety Instructions

- Only use the charger plug supplied. Do not use other chargers, as this may damage the battery cells.
- Only insert rechargeable batteries of the same type. Never use ordinary, non-rechargeable batteries. Insert rechargeable batteries so they connect to the right poles (indicated in the battery compartment of the handset).
- Do not touch the charger and plug contacts with sharp or metal objects.
- The operation of some medical devices may be affected.
- The handset may cause an unpleasant buzzing sound in hearing aids.
- Do not place the basic unit in a damp room or at a distance of less than 1.5 m away from a water source. Keep water away from the handset.
- Do not use the telephone in environments where there is a risk of explosions.
- Dispose of the batteries and maintain the telephone in an environment-friendly manner.
- As this telephone cannot be used in case of a power cut, you should use a mains-independent telephone for emergency calls, e.g. a mobile phone.

Disposal of the device (environment)

At the end of the product lifecycle, you should not throw this product into the normal household garbage but bring the product to a collection point for the recycling of electrical and electronic equipments. The symbol on the product, user guide and/or box indicate this.

Some of the product materials can be re-used if you bring them to a recycling point. By re-using some parts or raw materials from used products you make an important contribution to the protection of the environment.

Please contact your local authorities in case you need more information on the collection points in your area.



 
 
Cleaning

Clean the telephone with a slightly damp cloth or with an anti-static cloth. Never use cleaning agents or abrasive solvents.

The CE symbol indicates that the unit complies with the essential requirements of the R&TTE directive.


1 Description of telephone

1.1 Handset and base Butler 4502

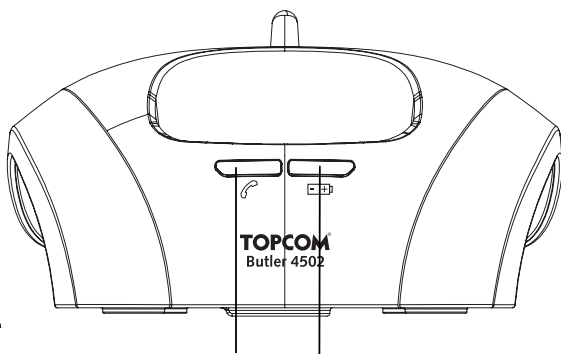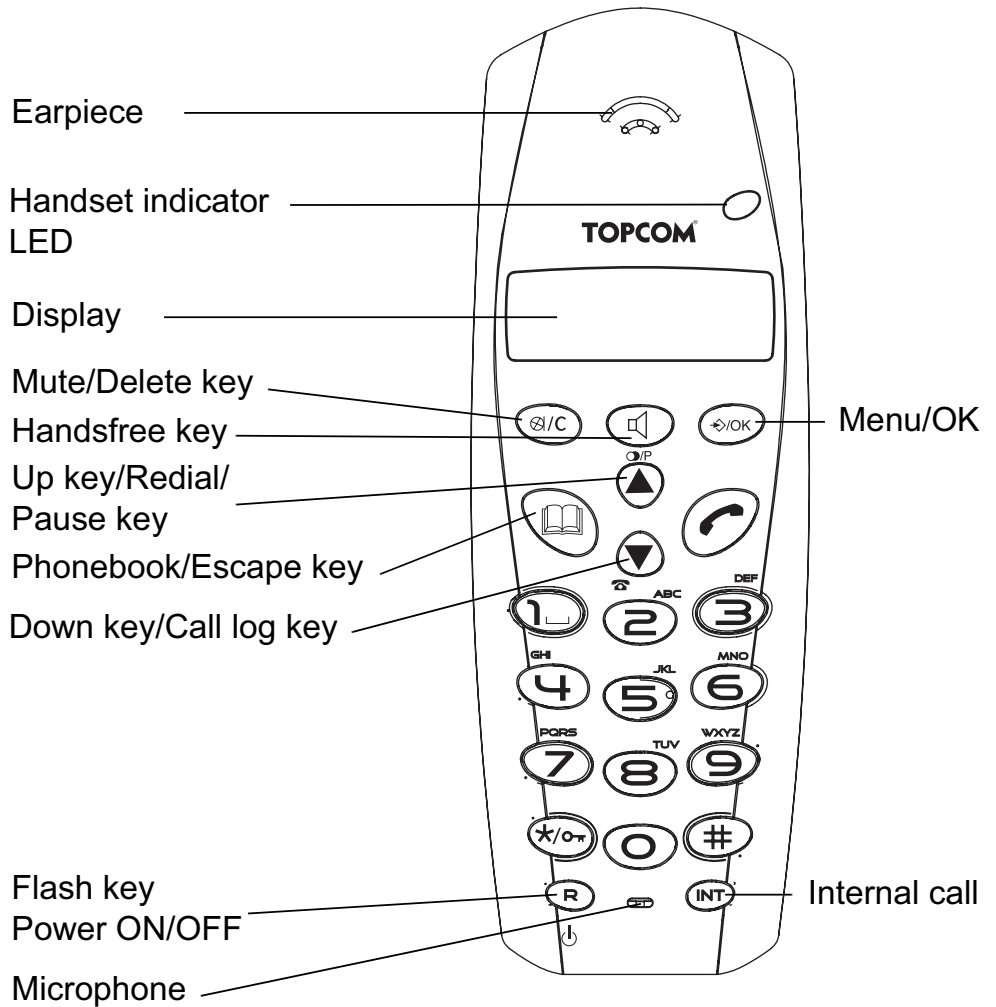


Power indicator Charge indicator
Incoming call LED

 1.2 Charger Butler 4502

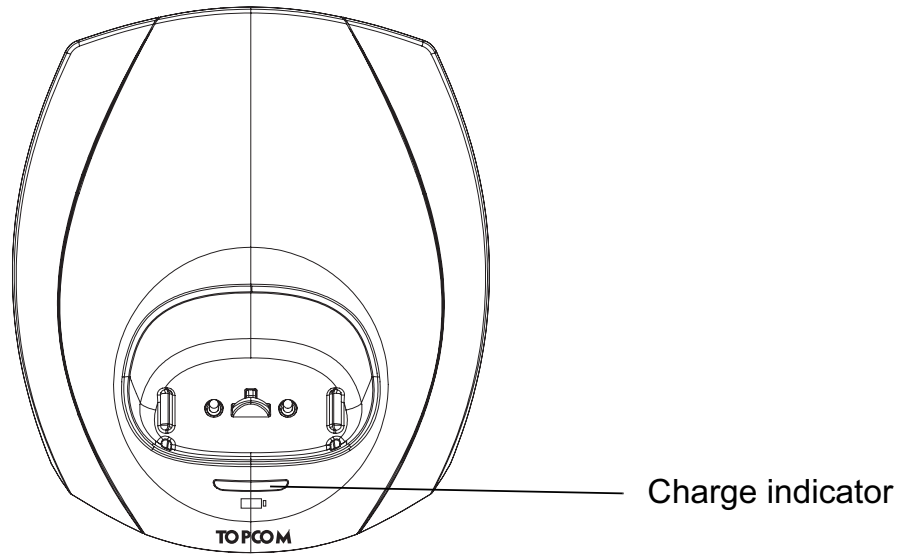

 1.3 Display

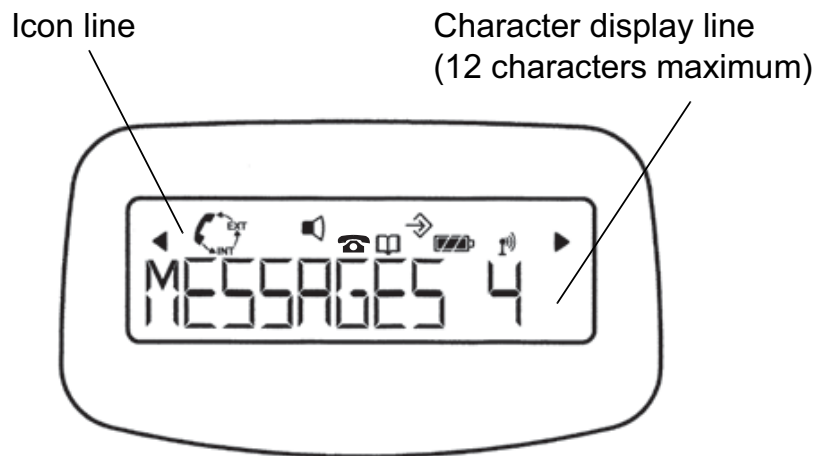

Each operation has an associated icon

Icon:	Meaning:
	You are online
EXT	You are in external communication
INT	You are in internal communication
	New numbers in call list
	Indicate answered call
	Indicate unanswered call
	You are opening your address book.
	You are in the menu.
	rechargeable battery level indicator 1 segment: weak, 2 segments: medium, 3 segments: full.
	The antenna indicates the quality of reception. The antenna flashes when the handset is not registered on the base.
	Handset keypad locked
◀ or ▶	Indicates that the displayed number is longer than the screen (12 digits)

1.3.1 Standby display

In standby mode, the display shows the time and the handset number:

12-05 HS1

1.4 Handset indicator (LED)

 
The handset LED has following function:

- ON when the external line is busy
- OFF when all handset are in stanby mode
- Flashes on all handset when there is an incoming call


2 Telephone installation

2.1 Connections

Back view of base Butler 4502

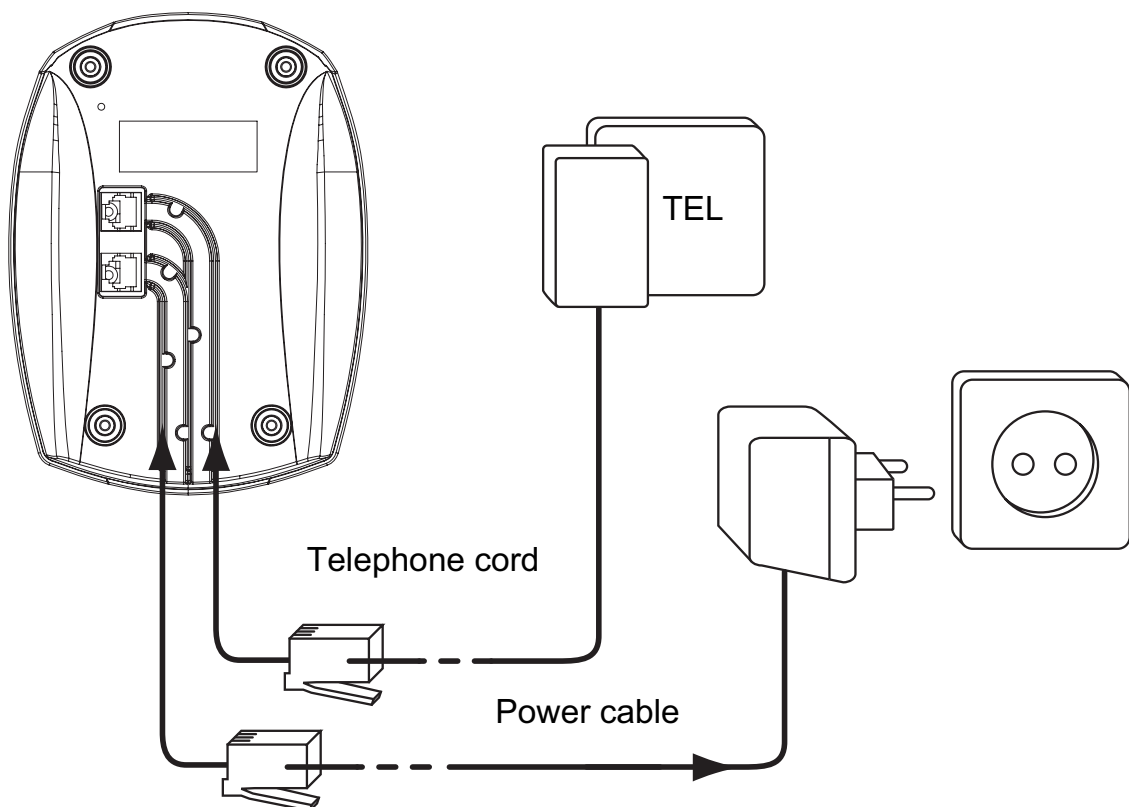

Back view of charger Butler 4502

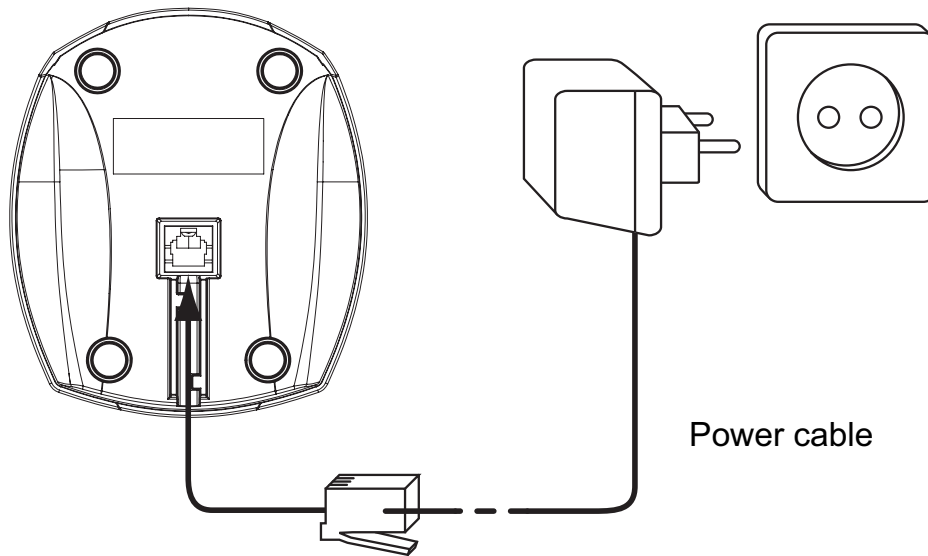 


2.2 Rechargeable batteries



Before you use your Butler 4502 for the first time, you must first make sure that the batteries are charged for 6-8 hours. The telephone will not work optimally if not properly charged.

To change or insert a rechargeable battery:

 1. Slide the cover towards the bottom and then lift it up.
2. Insert the batteries **respecting the (+ and -) polarity**.
3. Replace the battery cover.

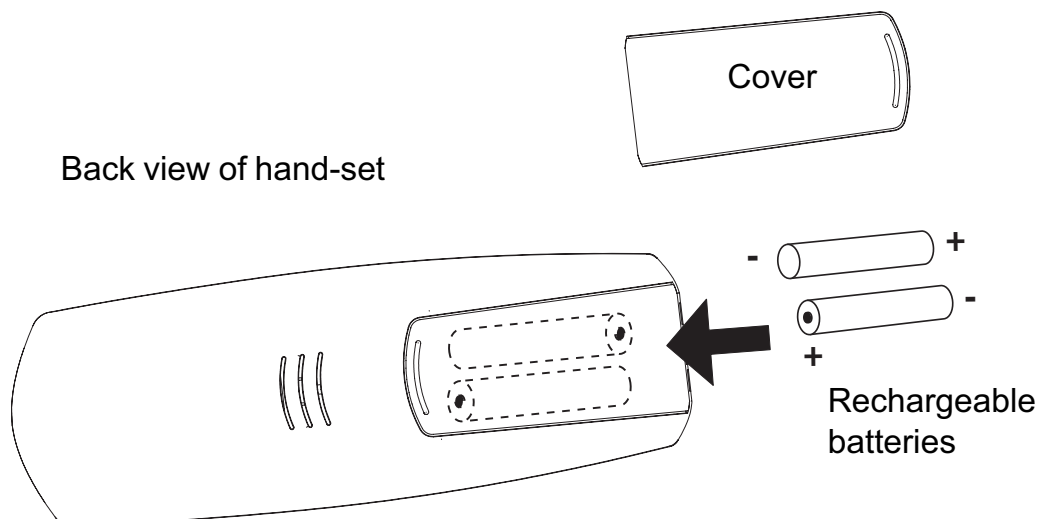

The maximum standby time of the batteries is approx. 200 h and the maximum talk time is 10 hours! In the course of time the batteries will start to drain faster. The batteries must be replaced. 2 rechargeable batteries, type AAA NiMH!

3 Using the telephone

3.1 Setting menu language

1. Enter the menu by pressing ↵/OK
2. Select HANDSET using the up ▲ and down ▼ keys
3. Press OK
4. Select LANGUAGE using the up ▲ and down ▼ keys
5. Press OK
6. Select the language of choice by means of the up ▲ and down ▼ keys.
7. Press OK to validate

3.2 Handset ON/OFF

- Turn ON handset: Press the ⏻ key on the handset. The handset will search the base.
- Turn OFF handset: Press ⏻ for 3 sec. The display will go OFF.

3.3 Receiving a call

When the handset rings, press ⏻ to answer. You are then connected to your correspondent. If the hand-set is on the base when the telephone rings, you just need to pick up the handset to answer the call (if the option autoanswer is activated: See 4.9. Automatic answer).

3.4 Making an external call

3.4.1 Normal:

1. Press ⏻
2. Enter telephone number

3.4.2 Block dialling:

1. Dial your correspondents number
2. Press ⏻

To correct a number use the ⓧ/C key to delete an entered digit

3.5 Making an internal call

1. Press INT
2. Enter the number of the internal handset (1 to 5)

3.6 Internal call transfer

When you want to transfer an external call to another handset:

1. During a conversation, press INT
2. Select the number of the internal handset, the external caller is put on hold.
3. When the other handset picks up, press ⏻ to hang up and transfer the call.

If the internal correspondent does not pick-up, press INT again to reconnect to the external caller on line.

3.7 Conference Call


Only possible when more than one handset are registered to the base!!

You can converse simultaneously with an internal correspondent and an external correspondent.

When you are on line with an external correspondent:

1. Press INT
2. Enter the number of the internal handset that you want to call
3. When the internal correspondent picks- up, press and hold #
4. If the internal correspondent does not answer, press INT again to reconnect to the external correspondent on-line.

3.8 Handsfree mode

You can speak with your correspondent without picking up the handset. To activate or deactivate the handsfree mode, press the  key during a call. To adjust the volume, See 4.3 "Speaker volume during call" on page 15.


3.9 Display of call duration


The call duration is displayed after 15 seconds, in minutes - seconds.

At the end of each call, the total call duration is displayed for 5 seconds.


3.10 Microphone mute

It is possible to mute the microphone during a conversation.

Press  during the conversation, the microphone is then deactivated, you can talk freely without being heard by the calling party.

"MUTE" is displayed. Press  again to return to normal mode.

3.11 Pause Key

When dialling a number you can add a pause between two digits by pressing the redial/pause  key for 2s.

3.12 Caller Identification

Caller identification is only available if you have subscribed to this service with your telephone operator.


When you receive an external call, the callers number will appear on the display as the telephone rings.


 




If the network sends it, or if the name of the caller is in the address book, the caller is identified by his or her name.

The caller identity is replaced by the call duration after 15 seconds in communication. It is still possible to display the caller's identity after this time by pressing OK-key repeatedly for the name and number.

3.12.1 List of calls

Your telephone keeps a list in memory of the last 40 calls received. This function is only available if you are subscribed to the caller ID information. The correspondents that have called are identified by their telephone number or name in the same way as in caller identification.




The presence of new / unanswered calls is indicated by the flashing  -icon on the display. To consult the list of calls:

1. Press  . If there are no calls in the list 'EMPTY' will appear.
2. Scroll through the calls using the up  or down  arrows. The callers names will be shown if the name is send by the network or is stored in the phonebook. When  is shown, this call is been aswered. When  is shown, the call is unanswerd. If you are at the end of the list you will hear a beep tone.
3. If you press OK, the telephone number will be shown. Note: if the telephone number is longer then 12 digits, press OK again to see the complete number.
4. Press OK again to see the time and date when the call is received
5. Pressing OK again will give you the option to add this entry in the phonebook if it's not already stored:
 - Press OK when 'ADD' is shown on the display. Enter or modify the name and press OK. Enter or modify the telephonenumber and press OK. Select the melody (1-5) which will be heard when this number is calling by means of the up/down keys and press OK. The entry will be stored in the phonebook.
6. To call back a correspondent, simply press the key  when their telephone number or name are displayed.

If a caller is in the phonebook, they are identified by their name in the list of calls.

3.12.2 Delete an entry or all entries in the call list





You can delete each entry separately or all entries at ones:

- When scrolling through the calls, press:
 - the mute key  short to delete this entry only. DELETE appears on the screen.
 - the mute key  long (2 sec.) to delete all entries: DELETE ALL appears on the screen.
- Press OK to delete current/all entr(y)(ies), or  to cancel the delete operation.

3.13 Redial memory

Your telephone keeps a list of the 10 last calls (of 32 digits) you have made in memory; The correspondents called are identified by their telephone number or by their name if they appear in the phonebook.

To consult the redial list:

1. Press 
2. Scroll through the calls with the up  and down  arrows.
3. To call by the selected correspondent, simply press  when their telephone number or name is displayed.



When name is displayed, you can toggle between name and number by pressing the OK key!

3.14 Calling from the phonebook

To call a correspondent whose name you have saved in the phonebook:

1. Press to enter the phonebook
2. Press the first letter of the name. The first name that starts with this letter or the nearest letter in the alphabet will be displayed.
3. Go through the list of names with the up and down keys. The list scrolls in an alphabetical order.
4. Press to dial the number of the correspondent whose name is displayed.

To see the number before dialling, carry out steps 1 to 3 from before and press Ok.

3.15 Using the alphanumerical keypad

With your telephone you can also enter alphanumeric characters. This is useful for entering a name into the phonebook, giving a name to a hand-set, ...

To select a letter, press the corresponding key as many times as is necessary. For example to select an 'A', press '2' once, to select a 'B', press '2' twice and so on. To select 'A' and then B consecutively, select 'A', wait until the cursor moves on to the next character, then press '2' twice.

To select a space, press 1.

To select a dash, press '1' twice.

The keypad characters are as follows:

Key	First press	Second press	Third press	Fourth press	Fifth press
1	space	-	1		
2	A	B	C	2	
3	D	E	F	3	
4	G	H	I	4	
5	J	K	L	5	
6	M	N	O	6	
7	P	Q	R	S	7
8	T	U	V	8	
9	W	X	Y	Z	9

3.16 Using the menu

A wide range of telephone functions are accessible through a user friendly menu.

1. To enter the menu, press ↵/OK
2. Scroll through the selections using the up ▲ and down ▼ keys, the selections scroll in a loop (you return to the first after the last).
3. To validate a selection, press OK
4. To return to the previous menu, press ⌂/C

4 Personalisation



Every programming is confirmed at the end by a double or single long beep. A double beep confirms the validation of your choice. A long beep signifies that the modification has not been taken into account.

4.1 adjusting the ring volume

4.1.1 Handset ringvolume External/internal calls

The handset ringvolume for internal or external calls can be set separately:

1. Enter the menu by pressing ↵/OK
2. Select HANDSET using the up ▲ and down ▼ keys
3. Press OK
4. Select INT RING VOL or EXT RING VOL using the up ▲ and down ▼ keys
5. Press OK
6. Select the desired volume (OFF or 1 to 5)
7. Press OK to confirm or ⌂/C to return to the previous menu.

4.1.2 Base ring

1. Enter the menu by pressing ↵/OK
2. Select SETUP using the up ▲ and down ▼ keys
3. Press OK
4. Select BASE VOLUME using the up ▲ and down ▼ keys
5. Press OK
6. Select the desired volume (OFF or 1 to 5)
7. Press OK to confirm or ⌂/C to return to the previous menu.

4.2 Choosing the ring melody

The base and each handset can ring with a different melody.

The handsets can ring with a different melody according to whether the call is internal or external.

4.2.1 Base melody

1. Enter the menu by pressing ↵/OK
2. Select SETUP using the up ▲ and down ▼ keys
3. Press OK
4. Select BASE MELODY using the up ▲ and down ▼ keys
5. Press OK
6. Select the melody of your choice (1 to 5) using the up ▲ and down ▼ keys
7. Press OK to confirm or ⌂/C to return to the previous menu.

4.2.2 Handset melody, external call

1. Enter the menu by pressing ↵/OK
2. Select HANDSET using the up ▲ and down ▼ keys
3. Press OK
4. Select EXT MELODY using the up ▲ and down ▼ keys
5. Press OK
6. Select the melody of your choice (1 to 5) using the up ▲ and down ▼ keys
7. Press OK to confirm or ⌂/C to return to the previous menu.

4.2.3 Handset melody, internal call

1. Enter the menu by pressing ↵/OK
2. Select HANDSET using the up ▲ and down ▼ keys
3. Press OK
4. Select INT MELODY using the up ▲ and down ▼ keys
5. Press OK
6. Select the melody of your choice (1 to 5) using the up ▲ and down ▼ keys
7. Press OK to confirm or ⌂/C to return to the previous menu.

4.3 Speaker volume during call

During conversation, press the up ▲ or down ▼ key to change the volume accordingly.



The handsfree volume is also adjusted together with the receiver in the handset as above described.

4.4 Activation / Deactivation of beeps

The handsets can emit beeptone when a key is pressed, when the batteries are low or when the handset is out of range.

4.4.1 Key pressed beeptone on/off

1. Enter the menu by pressing ↵/OK
2. Select HANDSET using the up ▲ and down ▼ keys
3. Press OK
4. Select BEEP using the up ▲ and down ▼ keys
5. Press OK
6. Select KEYTONE using the up ▲ and down ▼ keys
7. Press OK
8. Select ON to activate, OFF to deactivate
9. Press OK to confirm.

4.4.2 Low battery

Proceed as before, but select at point 6 "LOW BATTERY" instead of "KEYTONE".


4.4.3 Handset out of range

Proceed as before, but select at point 6 "OUT RANGE" instead of "KEYTONE".

4.5 Handset name

This function allows you to personalise each handset.

1. Enter the menu by pressing ↵/OK
2. Select HANDSET using the up ▲ and down ▼ keys
3. Press OK
4. Select NAME using the up ▲ and down ▼ keys
5. Press OK
6. Enter the name
7. Press OK to validate

While entering the name, press 'c' to delete a character and press and hold  to exit the menu without taking any modifications into account.

4.6 Changing the PIN code

Certain functions are only available to users who know the PIN code. By default this is PIN code = 0000.

To change the PIN code:

1. Enter the menu by pressing ↵/OK
2. Select SETUP using the up ▲ and down ▼ keys
3. Press OK
4. Select PIN CODE using the up ▲ and down ▼ keys
5. Press OK
6. Enter the old 4 figure PIN code.
7. Press OK
8. Enter the new 4 figure PIN code
9. Press OK
10. Enter the new PIN code a second time
11. Press OK to validate

4.7 Setting the dialling mode

There are two types of dialling mode:

- DTMF/Tone dialling (the most common)
- Pulse dialling (for older installations)

To change the dialling mode:

1. Enter the menu by pressing ↵/OK
2. Select setup using the up ▲ and down ▼ keys
3. Press OK
4. Select DIAL MODE using the up ▲ and down ▼ keys
5. Press OK
6. Select the dialling mode using the up ▲ and down ▼ keys
7. Press OK to validate

4.8 flash time duration

1. Enter the menu by pressing ↵/OK
2. Select SETUP using the up ▲ and down ▼ keys
3. Press OK
4. Select RECALL using the up ▲ and down ▼ keys
5. Choose RECALL 1 for short flash time (100ms) or RECALL 2 for long flash time (250ms)

4.9 Automatic answer

When there is a incoming call and the handset in on the base, the phone automatically takes the line when lifted. This is the default setting, but can be set OFF:

1. Enter the menu by pressing ↵/OK
2. Select HANDSET using the up ▲ and down ▼ keys
3. Press OK
4. Select AUTO ANSWER using the up ▲ and down ▼ keys
5. Select ON (for automatic answer) or OFF
6. Press OK

4.10 Reset

It is possible to return the phone to the original default configuration. This is the configuration which was installed when you first received the telephone.

To return to default settings:

1. Enter the menu by pressing ↵/OK
2. Select SETUP using the up ▲ and down ▼ keys
3. Press OK
4. Select DEFAULT using the up ▲ and down ▼ keys
5. Press OK
6. Enter the 4 digit PIN code (default =0000). Press OK.
7. Press again OK to validate


DEFAULT PARAMETERS ARE:

Low battery beeps	ON
Out of range warning beeps	OFF
Key click	ON
Auto answer	ON
Internal melody	1
Internal volume	3
External melody	3
External volume	3
Ear volume	3
Phonebook	Empty
Call log list	Empty
Redial list	Empty
Pin code	0000
Dial mode	DTMF
Keypad lock	OFF





 


Returning to default settings will delete all entries in the phonebook and call log. The PIN code will also be reset to 0000.

4.11 Keypad lock

The keypad can be locked so that no settings can be changed or no telephone number can be dialed. The -icon will appear on the screen when keypad is locked.

4.11.1 Locking the keypad by Menu

1. Enter the menu by pressing /OK
2. Select HANDSET using the up  and down  keys
3. Press OK
4. Select KEY LOCK? using the up  and down  keys
5. Press OK to lock the keypad

4.11.2 Locking the keypad by the *-key (quick lock)

Press and hold the *-key for 3 seconds. The keypad will be locked.

4.11.3 Unlock the keypad

1. Press any key
2. PRESS * will appear on the screen
3. Press the '*' key within 3 seconds to unlock the keypad

4.12 Setting the time

1. Enter the menu by pressing ↵/OK
2. Select HANDSET using the up ▲ and down ▼ keys
3. Press OK
4. Select CLOCK SET using the up ▲ and down ▼ keys
5. Press OK
6. Enter the time (24h format).
7. Press OK to validate

4.13 Setting the alarm

1. Enter the menu by pressing ↵/OK
 2. Select HANDSET using the up ▲ and down ▼ keys
 3. Press OK
 4. Select ALARM SET using the up ▲ and down ▼ keys
 5. Press OK
 6. Select ON to turn On the alarm and press OK. Enter the time (24h format) when the alarm must be activate.
- Or
7. Select OFF to turn off the alarm and press OK to confirm.



When the alarm goes off you can press any handset key to turn it off.

5 Advanced functions

5.1 Phonebook

The Phonebook allows you to memorise 50 telephone numbers and names. You can enter names of up to 12 characters length and numbers of up to 20 digits length. To call a correspondent whose number is stored in the phonebook, refer to the section 3.14. To enter alphanumerical characters, refer to the section 3.15.

5.1.1 Add an entry into the phonebook

1. Enter the menu by pressing ↵/OK
2. Select PHONE BOOK using the up ▲ and down ▼ keys
3. Press OK
4. Select ADD ENTRY using the up ▲ and down ▼ keys
5. Press OK
6. Enter the name
7. Press OK to validate.


8. Enter the telephone number
9. Press OK to validate
10. Select the desired melody (1-5) by means of the up/down key
11. Press OK to Validate

5.1.2 Modify a name or number

To modify a number in the phonebook:

1. Enter the menu by pressing ↵/OK
2. Select PHONE BOOK using the up ▲ and down ▼ keys
3. Press OK
4. Select MODIFY ENTRY using the up ▲ and down ▼ keys
5. Press OK
6. Move through the list of names with the up ▲ and down ▼ keys. The list scrolls in alphabetical order.
7. Press OK when you find the name to modify
8. Use the 'Ⓜ/c' key to go back and enter the new name
9. Press OK to validate
10. Enter the new telephone number
11. Press OK to validate




Warning! If you enter the Phonebook first with the  key and modify a telephone number with the Ⓜ/c key, the modification will be taken into account only for this call and will not be stored in the phonebook!

5.1.3 Deleting an entry

To delete an entry:

1. Enter the menu by pressing ↵/OK
2. Select PHONE BOOK using the up ▲ and down ▼ keys
3. Press OK
4. Select DELETE ENTRY using the up ▲ and down ▼ keys
5. Press OK
6. Move through the list of names using the up ▲ and down ▼ keys the list scrolls in alphabetical order.
7. Press OK when you find the name you wish to delete
8. CONFIRM appears, press OK to confirm or Ⓜ/c to stop.

5.2 Searching a handset from the base

When the paging button  on the base is pressed all the handsets will ring. This ringing will help you locate a lost handset. By simply pressing one of the handset keys the ringing stops.

6 Managing multiple handsets

6.1 Setting up an additional handset




You only need to register a 2nd handset in case your 2nd handset does not link with the base anymore or when you have bought a new one!!!

You can register new handsets on the base if these handsets support the DECT GAP protocol.







The base can support a maximum of 5 handsets. If you already have 5 handsets, and you wish to add another one or change one handset, you must first delete a handset, then associate the new handset.

To register any handset, the base must be put into a special registration mode:

1. Press and hold the paging key  of the base for 6 seconds.
2. The base will then emit a beeptone. The base is now ready to register a new handset. You have 90 seconds after pressing the button to register a new handset.


After putting the base into registration mode, start the procedure on the new handset:

6.1.1 if your additional handset is a Butler 450x

3. Enter the menu by pressing /OK
4. Select REGISTER using the up  and down  keys
5. Press OK
6. Select REG BASE using the up  and down  keys
7. Enter a base number (from 1 to 4). The flashing numbers are already in use.
8. Enter the Base PIN code (0000 by default)
9. Press OK. The handset will start searching for the DECT base
10. If the handset has located the base, it will display the base identification number, validate the base registration by pressing OK or stop by pressing .
11. If the handset does not locate the base, it will return to the standby mode after a few seconds.
12. Try again by changing the base number and check that you are not in a environment where there is interference. Move closer to the base.

6.1.2 if your handset is another model

After starting the registration procedure on the base, refer to the handset manual to find out how to register the handset. The handset must be GAP compatible.

The icon  and the text "NOT REG" flashes on the display when the handset is not associated with the base.

When a handset is associated with a base, it is attributed a handset number by the base. It is this number that is displayed on the handset after the name and must be used for internal calls.



DECT GAP Profile only guarantees that basic calling-functions will work correctly between different brands/types. There's a possibility that certain services (like CLIP) will not work correctly.

6.2 Removing a handset

You can remove a handset with a base to allow another handset to be registered

1. Enter the menu by pressing \Rightarrow /OK
2. Select SETUP using the up \blacktriangle and down \blacktriangledown keys
3. Press OK
4. Select DEL HANDSET using the up \blacktriangle and down \blacktriangledown keys
5. Press OK
6. Enter the 4 digit base PIN code
7. Press OK
8. Select the handset to be removed
9. Press OK to validate

6.3 Setting up a handset on another base

If you want to use a Butler 450x handset with a base of another model. The base must be GAP compatible.

1. To put the base in registration mode, refer to the base user manual.
2. Carry out operations 3 to 10 from the paragraph 6.1.

6.4 Selecting a base


The handsets can be registered up to 4 bases simultaneously.

To select a base:

1. Enter the menu by pressing \Rightarrow /OK
2. Select REGISTER using the up \blacktriangle and down \blacktriangledown keys
3. Press OK
4. Select SELECT BASE using the up \blacktriangle and down \blacktriangledown keys
5. Press OK
6. Select a base or select AUTO using the up \blacktriangle and down \blacktriangledown keys
7. Press OK

When selecting the base, the correct selected base is indicated by a blinking base number. If you select 'Auto' the handset will automatically search for another base when you are out of range!

7 Troubleshooting

Symptom	Possible cause	Solution
No display	Batteries uncharged	Check the position of the batteries
		Recharge the batteries
	Handset turned OFF	Turn ON the handset
No tone	Telephone cord badly connected	Check the telephone cord connection
	The line is occupied by another handset	Wait until the other handset hangs up
The icon  flashes	Handset out of range	Bring the handset closer to the base
	The base has no power supply	Check the mains connection to the base
	The handset is not registered on the base	Register the handset on the base
Base or handset do not ring	The ringing volume is zero or low	Adjust the ringing volume
Tone is good, but there is no communication	The dialling mode is wrong	Adjust the dialling mode (pulse/tone)
Not possible to transfer a call on PABX	The FLASH time is too short	Set the unit to Long Flash time
Telephone does not react to pressing the keys	Manipulation error	Remove the batteries and put them back in place

8 Topcom warranty

8.1 Warranty period

The Topcom units have a 24-month warranty period. The warranty period starts on the day the new unit is purchased. The warranty on batteries is limited to 6 months after purchase. Consumables or defects causing a negligible effect on operation or value of the equipment are not covered.

The warranty has to be proven by presentation of the original purchase receipt, on which the date of purchase and the unit-model are indicated.

8.2 Warranty handling

A faulty unit needs to be returned to a Topcom service centre including a valid purchase note. If the unit develops a fault during the warranty period, Topcom or its officially appointed service centre will repair any defects caused by material or manufacturing faults free of charge.

Topcom will at its discretion fulfil its warranty obligations by either repairing or exchanging the faulty units or parts of the faulty units. In case of replacement, colour and model can be different from the original purchased unit.

The initial purchase date shall determine the start of the warranty period. The warranty period is not extended if the unit is exchanged or repaired by Topcom or its appointed service centres.

8.3 Warranty exclusions

Damage or defects caused by incorrect treatment or operation and damage resulting from use of non-original parts or accessories not recommended by Topcom are not covered by the warranty.

Topcom cordless phones are designed to work with rechargeable batteries only. The damage caused by the use of non-rechargeable batteries is not covered under warranty. The warranty does not cover damage caused by outside factors, such as lightning, water and fire, nor any damage caused during transportation.

No warranty can be claimed if the serial number on the units has been changed, removed or rendered illegible.

Any warranty claims will be invalid if the unit has been repaired, altered or modified by the buyer or by unqualified, non-officially appointed Topcom service centres.

9 Technical characteristics

- Standard: DECT (Digital Enhanced Cordless Telecommunications)
GAP (Generic Access Profile)
- Frequency range: 1880 MHz to 1900 MHz
- Number of channels: 120 duplex channels
- Modulation: GFSK
- Speech coding: 32 kbit/s
- Emission power: 10 mW (average power per channel)
- Range: max 300 m in open space /10-50 m inhouse
- Base power supply: 230 V / 50 Hz for the base
- Handset Batteries: 2 rechargeable batteries AAA, NiMh 550mAh
- Handset autonomy: 200 hours in standby
- Talk time: 10 hours
- Charging time: 6-8 hours
- Normal conditions of use: +5 °C to +45 °C
- Dialling mode: Pulse / Tone
- Flash time: 100 or 250 ms

TOPCOM[®]

visit our website
www.topcom.net

U8006461