



ELMO®

RSU-200

Remote Control Extension Unit for PTC-200C / PTC-100S / PTC-110R

INSTRUCTION MANUAL

PART NAMES

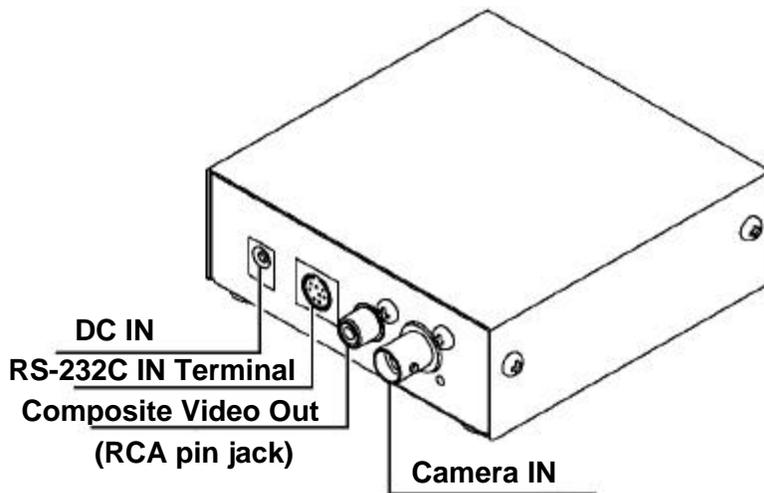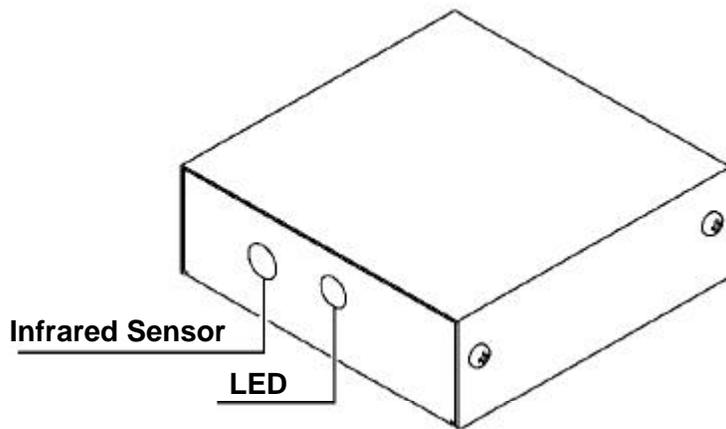

DIP SWITCH SETTING

Be sure to turn ON No.1 of the DIP Switch(4) on the bottom of the Camera before turning ON the power supply to the Camera.


Switch	
1	ON
2	OFF
3	(OFF)
4	(OFF)

DIP Switch(4) of the Camera



use of the RSU-200

CONNECTION

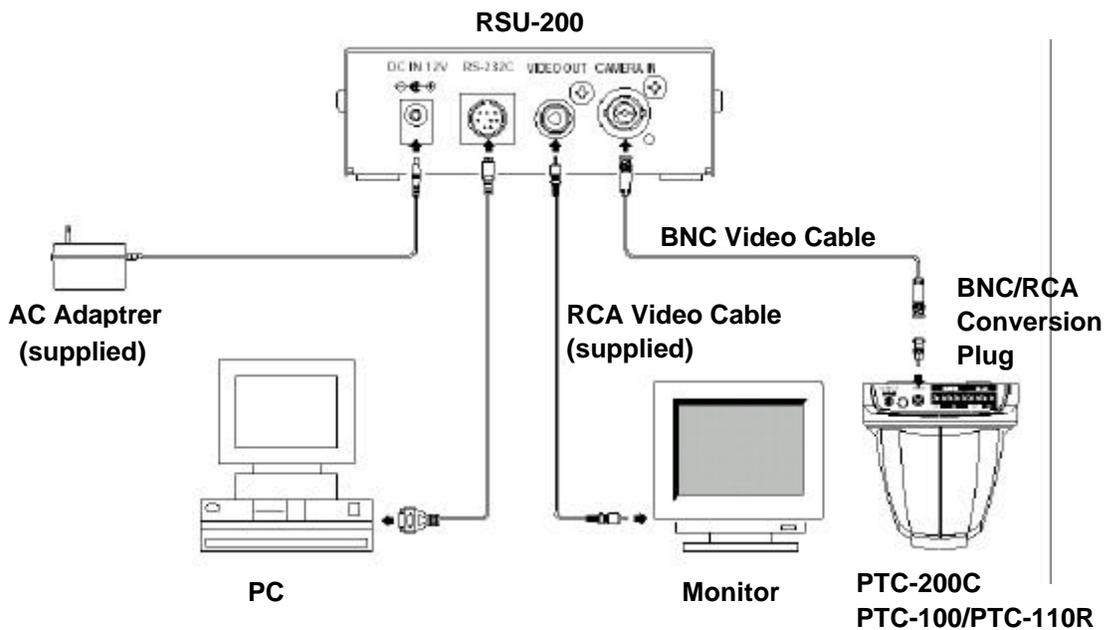

OPERATION


The infrared emitting window of the wireless remote controller is requested to point at the Infrared Sensor of RSU-200 whenever the controller is in use. When the unit receives the IR signal, the LED of RSU-200 lights up.

Note:

- * It is not possible to control the "POWER" button of the wireless remote controller.
- * It is not recommended to use ID number setting by wireless remote controller, when external control (RS-485) is activated.

INTERNAL SWITCH

When the unit is used for a long distance, select "LONG" ON the internal switch of RSU-200. It is recommended to use the unit within 500m(1640 ft) from PTC Cameras when the 5C-2V cable is used.

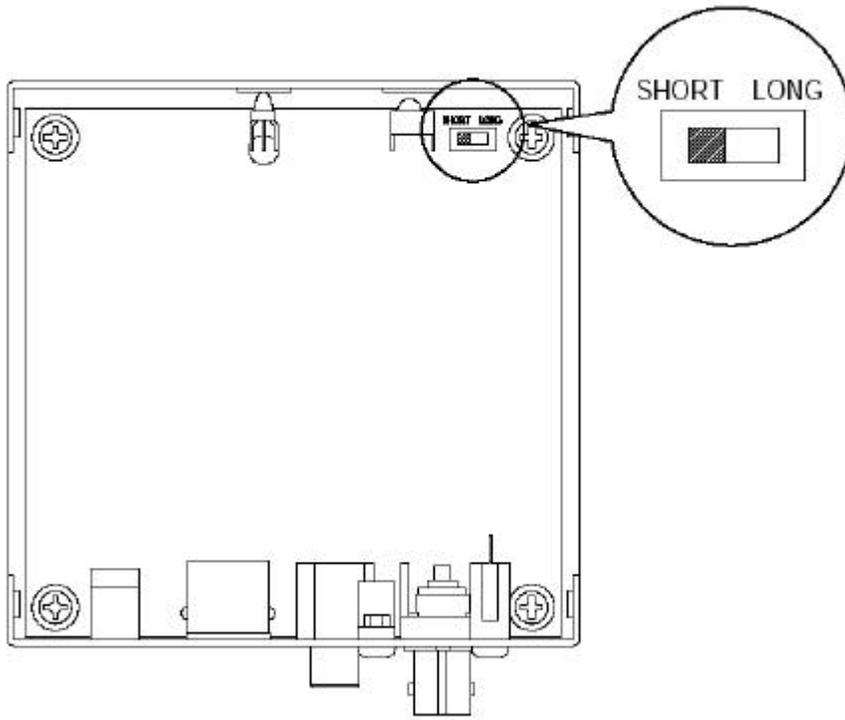


SPECIFICATIONS

Power source	12V DC
Power consumption	2.5W
Operating temperature	32 degF - 104 degF
Operating humidity	30% - 85%
Outside dimensions	98mm(H)x96mm(D)x36mm(H) 3.8in.(H)x3.8in.(D)x1.4in.(H)
Weight	300g (0.66 lbs)

RS-232C SPECIFICATIONS

Pin assignment


Pin No.	Code	Name
1	DTR	Data Terminal Ready
2	DSR	Data Set Ready
3	TXD	Transmitted Data
4	GND	Ground
5	RXD	Received Data
6	GND	Ground
7	NC	-
8	NC	-

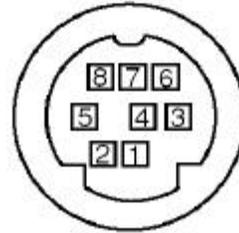

RS-232C Connector

Transmission specifications

- * Full duplex start-stop sync. mode.
- * Start bit : 1 bit
- * Data bit : 8 bits
- * Stop bit : 1 bit
- * Parity bit : None
- * X parameter : None
- * Baud rate : 9600 bps
- * Electric interface : RS-232C (Mini DIN 8P connector)
- * Flow control : None
- * Cable specifier : Dedicated cable

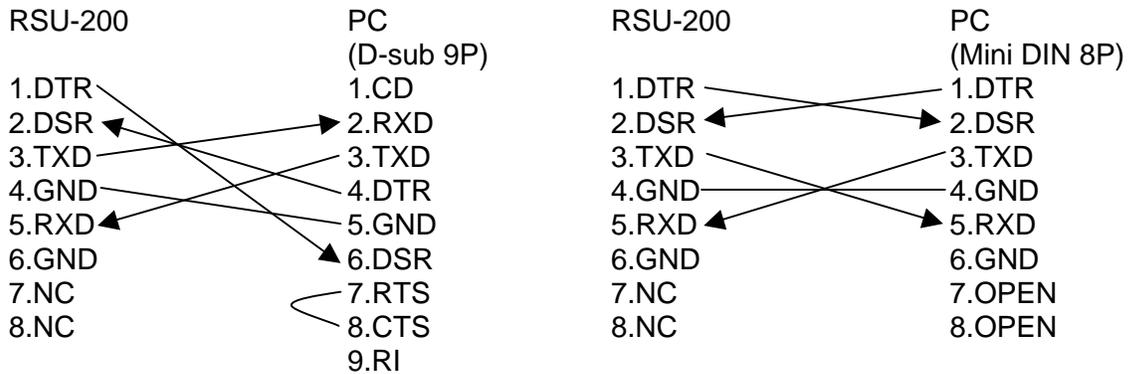

SUPPLIED ACCESSORIES

- Instruction manual
- Video cable
- AC adaptor