 




myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for CANON PIXMA MX452. You'll find the answers to all your questions on the CANON PIXMA MX452 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual CANON PIXMA MX452 User guide CANON PIXMA MX452 Operating instructions CANON PIXMA MX452 Instructions for use CANON PIXMA MX452 Instruction manual CANON PIXMA MX452

Canon		Start Here Easy Setup Instructions		PIXMA Pro 9000 Series Photo Printer	
<p>1 Unpack the Printer</p> <p>1 Carefully remove all items from the box.</p>  <p>PIXMA Pro9000 Photo Printer</p>  <p>PIXMA Pro9000 Photo Printer</p>  <p>PIXMA Pro9000 Photo Printer</p>  <p>Power Cord</p>    <p>Cyan Ink Tank Magenta Ink Tank Yellow Ink Tank</p>    <p>Cyan Ink Tank Magenta Ink Tank Yellow Ink Tank</p> <p>2 Remove the tapes from the printer.</p>	<p>2 Prepare the Printer</p> <p>1 Plug the power cord into the back of the printer and connect the other end to a power outlet. Press the POWER button. The printer will initiate. Wait until the POWER lamp displays a steady green light.</p>  <p>POWER lamp</p>  <p>POWER button</p> <p>2 Open the front tray. Raise the Top Cover.</p>  <p>Top Cover</p> <p>NOTE: Clearly press the  mark on the Front Tray. The Front Tray automatically opens.</p>  <p>Front Tray</p> <p>3 The Print Head Holder automatically moves to the center. Remove the protective tape from the Print Head Holder. The top position is subject to change.</p>  <p>Print Head Holder</p> <p>4 Write down the serial number located inside the printer. You will need this to register your products.</p>  <p>Serial Number Label</p> <p>IMPORTANT: If the Top Cover is left open for more than 10 minutes, the Print Head Holder moves to the right. Close and reopen the Top Cover to return the holder to the center.</p>	<p>3 Install the Print Head</p> <p>1 Firmly raise the print head lock lever.</p>  <p>Print Head Lock Lever</p> <p>2 Remove the Print Head from its package.</p>  <p>Print Head</p> <p>CAUTION: This inkjet printer uses pigment or light blue ink on the inside of the bag the Print Head comes in. This has no effect on print quality. Be careful not to get ink on your self when handling these items.</p> <p>NOTE: Do not touch the nozzle.</p> <p>3 Remove and discard the orange protective cap from the Print Head.</p>  <p>Orange Protective Cap</p> <p>CAUTION: These might be some ink splatters on light blue ink on the inside of the protective cap. This has no effect on print quality. Be careful not to get ink on your self when handling these items.</p> <p>NOTE: Do not touch the print head nozzles and the electrical contacts. Do not attempt to reattach the protective cap since it has been removed.</p>  <p>Print Head</p> <p>4 Slide the Print Head into the holder. The Print Head will rest at a slight angle.</p>  <p>Print Head in Holder</p> <p>NOTE: Do not touch the electrical contacts.</p> <p>5 Lower the print head lock lever carefully and press it down.</p>  <p>Print Head Lock Lever</p>	<p>4 Install the Ink Tanks</p> <p>1 Peel back the orange tab completely and remove the plastic wrapper from the Yellow Ink Tank (C13Y).</p>  <p>Yellow Ink Tank</p> <p>2 Twist off and discard the orange protective cap located on the bottom of the ink tank.</p>  <p>Orange Protective Cap</p> <p>IMPORTANT: Do not touch the electrical contacts.</p> <p>NOTE: To avoid spilling ink, never press on the sides of an ink tank. Do not touch the open ink port once the protective cap is removed, as this may prevent the ink from being detected properly.</p>  <p>Ink Tank</p> <p>3 Insert the ink tank into the rightmost slot. Press the  mark on the ink tank until it clicks into place and then its lamp lights red.</p>  <p>Ink Tank in Slot</p> <p>4 Insert the remaining seven ink tanks into their assigned slots. Ensure that ink lamps light red.</p>  <p>Ink Tanks in Slots</p> <p>5 Close the Top Cover. Lift open the Paper Support and the Paper Support Extension, then pull out the front Tray Extension.</p>  <p>Paper Support and Paper Support Extension</p> <p>NOTE: If the ALARM lamp on the printer flashes orange, after you have closed the Top Cover, an ink tank may not be installed properly. Open the Top Cover and make sure that the ink tanks are installed in the correct order directed on the label.</p>	<p>5 Connect the Printer and Load Paper</p> <p>IMPORTANT: Once you have installed the ink tanks, the POWER lamp will flash green. Wait for about 2 minutes. If necessary, the POWER lamp displays a steady green light and the printer has successfully completed its initialization.</p> <p>1 TURN THE PRINTER OFF.</p> <p>IMPORTANT: Be sure the printer is off before continuing, or the computer will attempt to install the printer driver before the printer is ready.</p> <p>2 Connect one end of the USB cable to the computer, the other to the appropriate USB port on the printer.</p>  <p>USB Cable</p> <p>NOTE: The Pix9000 Photo Printer is equipped with USB 2.0 Hi-Speed port. If your PC does not support USB 2.0 Hi-Speed, or if any non-certified USB 2.0 device or driver is used for the connection, the printer will operate at a lower speed (up to 12 Mbps, USB 1.1).</p>  <p>USB Port</p> <p>3 Pinch the Paper Guide and slide it to the left. Load two sheets of plain paper into the Auto Sheet Feeder; align the paper with the right edge of the Auto Sheet Feeder; then slide the Paper Guide toward the left edge of the paper.</p>  <p>Paper Guide</p> <p>4 Close the Top Cover. Press the  button on the printer to start printing.</p>  <p>Top Cover</p> <p>IMPORTANT: Print Job Alignment (Step 4) requires that letter-size paper is loaded in the Auto Sheet Feeder (Do paper Feeder).</p> <p>Continue with Step 6 on side two.</p> 	



[Your user manual](#)
[CANON PIXMA MX452](#)

Manual abstract:

exe, where D is your CD-ROM drive. 4 When the main menu appears, click Easy Install and then Install, then follow the onscreen instructions. NOTE: · Print head alignment will take about five minutes to complete. Do not start another operation here. · Do not open the Top Cover while printing. 9 Print head alignment is automatically adjusted d. Ensure that two sheets of letter size paper are loaded in the Auto Sheet Feeder (top paper feeder). e. Click the down-arrow to select Test Print. Click the Print Head Alignment icon and follow the on-screen instructions.

40 cm / 15.7 inches behind the Printer Install. by printing the patterns below. NOTE: · Select Easy Install in order to install the application software, on-screen manuals and printer driver. Select Custom Install in order to choose the options you would like to install.

· Adobe Photoshop CS, Adobe Photoshop CS2, or Digital Photo Professional must be installed to use Easy-PhotoPrint Pro. NOTE: Some parts of the first pattern that is printed will be faint. 10 After print head alignment is completed, click 4 Read the License Agreement and click Yes. NOTE: For details, refer to "Loading Paper in the Front Tray" in "Loading Paper" in the Quick Start Guide. NOTE: · Select Easy Install in order to install the application software, on-screen manuals and printer driver.

Select Custom Install in order to choose the options you would like to install. · To install PhotoRecord, click Custom Install and follow the instruction on the screen. · Adobe® Photoshop® CS, Adobe Photoshop CS2, or Digital Photo Professional must be installed to use Easy-PhotoPrint Pro. 5 When the list of applications to install appears, Follow the on-screen instructions to install the software. 5 Follow the on-screen instructions to register NOTE: · Print head alignment will take about five minutes to complete. Do not start another operation here. · Do not open the Top Cover while printing. 9 Print head alignment is automatically adjusted Next. 11 When the Installation Results screen appears, your product. 6 When the Print Head Alignment Recommended by printing the patterns below.

verify the contents, click Install, then follow the instructions on the screen. Move the cursor over items to display explanations of each application below. NOTE: Easy-PhotoPrint Pro and Adobe RGB (1998) cannot be installed in Windows Me and Windows 98. 6 Read the License Agreement and click Yes. click Next. 12 Follow the on-screen instructions to register screen appears, click Next. 7 When the Installation completed successfully your product. 13 When the Installation completed successfully screen appears, click Restart. Follow the on-screen instructions to install the software. If a message asking for your confirmation to restart your computer appears, click OK.

The system is restarted automatically. screen appears, click Exit. If Restart is displayed, ensure the Restart the system now (recommended) check box is selected, then click Restart. NOTE: Some parts of the first pattern that is printed will be faint. 10 Click Quit to exit the Canon IJ Printer Utility.

The system is restarted automatically. Part no. QT5-0114-V01 © 2006 Canon Inc. "Windows" is a trademark of Microsoft Corporation, registered in the United States and other countries. "Macintosh" and "Mac" are trademarks of Apple Computer, Inc. , registered in the U.S. and other countries. "Adobe", "Adobe Photoshop" and "Adobe RGB (1998)" are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and / or other countries. Specifications subject to change without notice. Printed in Japan..



[Your user manual](#)
[CANON PIXMA MX452](#)