


Fireball™ 540/1080

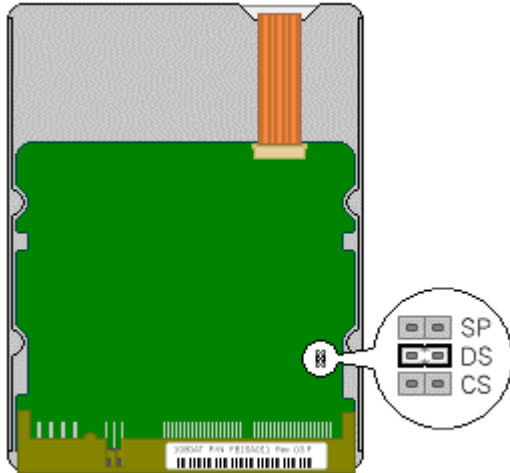

ATA Configuration Guide

CMOS Values

Capacity	540MB	1080MB
Cylinders	1056	2112
Heads	16	16
Sectors	63	63
Writing Precomp	65535	65535
Landing Zone	1056	2112


Note on Write Pre-compensation:

The Quantum Fireball does not require write pre-compensation, your CMOS setting should be set to reflect that this feature is not enabled. If the setting of 'none' is not present, the value 65535 is a number that the BIOS will accept to disable this feature.

Jumper Settings

Single Drive	DS only
Master Drive	DS only
Slave Drive	No jumpers

Fireball™ 540/1080

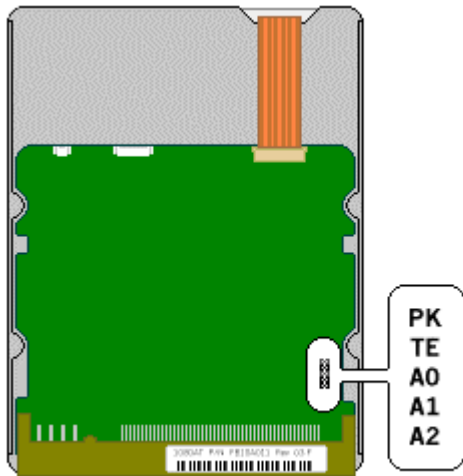

SCSI Configuration Guide

Jumper Settings

Drive Termination

Enable Termination	TE jumper on
Disable Termination	TE jumper off

Set SCSI ID

SCSI ID	A0	A1	A2
0	Off	Off	Off
1	On	Off	Off
2	Off	On	Off
3	On	On	Off
4	Off	Off	On
5	On	Off	On
6	Off	On	On
7	On	On	On

Note: PK (Park) jumper has no defined value and is used to hold extra jumper.

