



www.radioshack.comSM

Mini USB 4-Port 1.1 Hub

26-139

OWNER'S MANUAL
Please read before using this equipment.

Thank you for buying a RadioShack Illuminations Mini USB 4-Port 1.1 Hub. Your hub supports a transmission rate of up to 12 Mbps (full speed) and 1.5 Mbps (low speed). It is fully compatible with USB Revision 1.1 devices and allows your existing USB devices to function as usual.

Slim and compact, the hub's clear design lets you see at a glance when a device is powered. The hub's wide USB ports make it easy to connect wide USB connecting devices such as card readers. You can connect up to four USB devices such as a keyboard, mouse, printer, scanner, or camera that can all function simultaneously.

The hub supports both low (100 mA) (Max) or high (500 mA) (Max) bus power with automatic current sharing.

PACKAGE CONTENTS

Hub

Owner's Manual

SYSTEM REQUIREMENTS

- Windows 98/98SE/ME/2000/XP or Macintosh OS 9.0 or above
- IBM or iMAC PC or notebook with one available USB port

INSTALLATION


Plug the USB hub's connector into your PC's host port.



Connect up to four USB devices to the ports on the front of the USB hub. The blue indicators on the USB's top panel light if the corresponding USB ports are ready for use.

FEATURES

Hot Swappable — lets you add, remove, install, and configure peripherals while your computer is running.

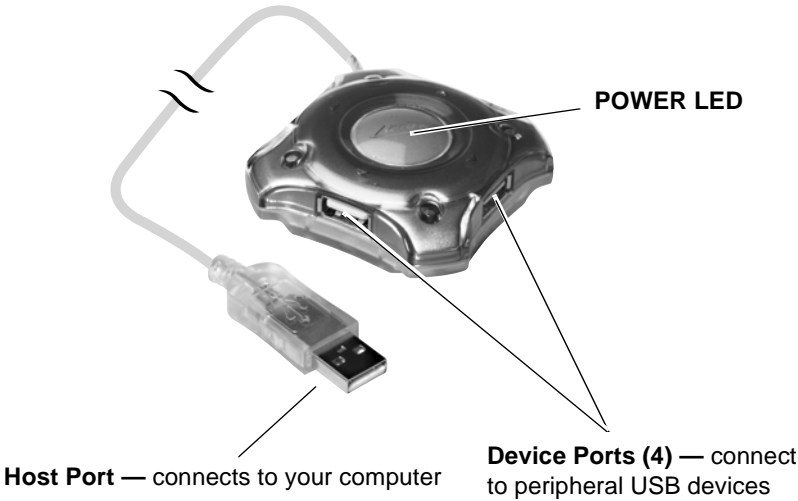

Host Port — connects to your computer

Device Ports (4) — connect to peripheral USB devices

ACCESSORIES

Accessories for your hub are available at your local RadioShack store. Accessories are also available online at www.radioshack.com. Accessories are available but not limited to the following. Visit your local RadioShack store for a more complete listing of available accessories.

USB Keyboard	USB Mouse	USB Cable
USB Scanner	USB CD-RW	USB Digital Camera

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period. This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

SPECIFICATIONS

USB Specifications	USB Revision 1.1
Operating System	Microsoft Windows 98, 98SE, 2000, ME, XP, Macintosh OS 9.0 or above
Data Speed	Low: 1.5 Mbps, High: 12 Mbps
Downstream Port	USB A Type Receptacle 4
LED Indicators	USB x 4 (Blue)
Dimensions (HWD)	7/8 in. x 2 ¹⁵ / ₁₆ x 2 ¹⁵ / ₁₆ in. (2.2 x 7.4 x 7.4 cm)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

THE FCC WANTS YOU TO KNOW

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the *FCC Rules*. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local RadioShack store or an experienced radio/TV technician for help.

If you cannot eliminate the interference, the FCC requires that you stop using your USB hub.

Changes or modifications not expressly approved by RadioShack may cause interference and void the user's authority to operate the equipment.

FCC DECLARATION OF CONFORMITY

This device complies with Part 15 of the *FCC Rules*. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Product:	Illuminations Mini USB 4-Port 1.1 Hub
Model:	26-139
Responsible Party:	RadioShack 100 Throckmorton Fort Worth, TX 76102
Phone:	817-415-3200



OVER CURRENT PROTECTION

In cases of excessive current, the hub's over current protection automatically disconnects power from the related port and that port's blue power LED goes off. You can reset the USB hub by unplugging the USB cable and then plugging it back in, or by clicking RESET if your operating system sends you an error message.

CARE

Keep the USB hub dry; if it gets wet, disconnect it from the PC and all devices immediately then wipe it dry. Use and store the USB hub only in normal temperature environments. Handle the USB hub carefully; do not drop it. Keep the USB hub away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the USB hub's internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it. If your USB hub is not performing as it should, take it to your local RadioShack store for assistance.

© 2003 RadioShack Corporation. All Rights Reserved.
RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.