



# Part Names – Main Unit

■ The number shown in each  is the page number where the part's function and/or use are explained either in English or Japanese.

## Front view

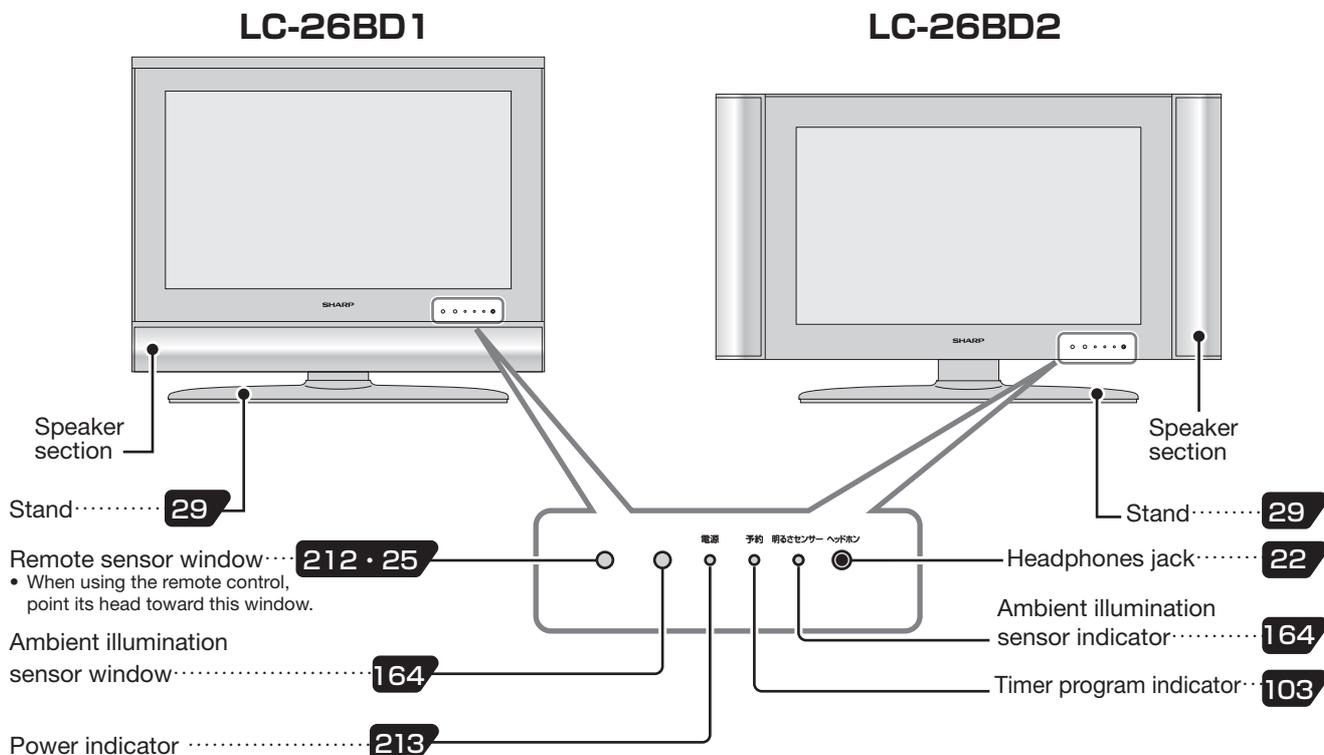


## Top view

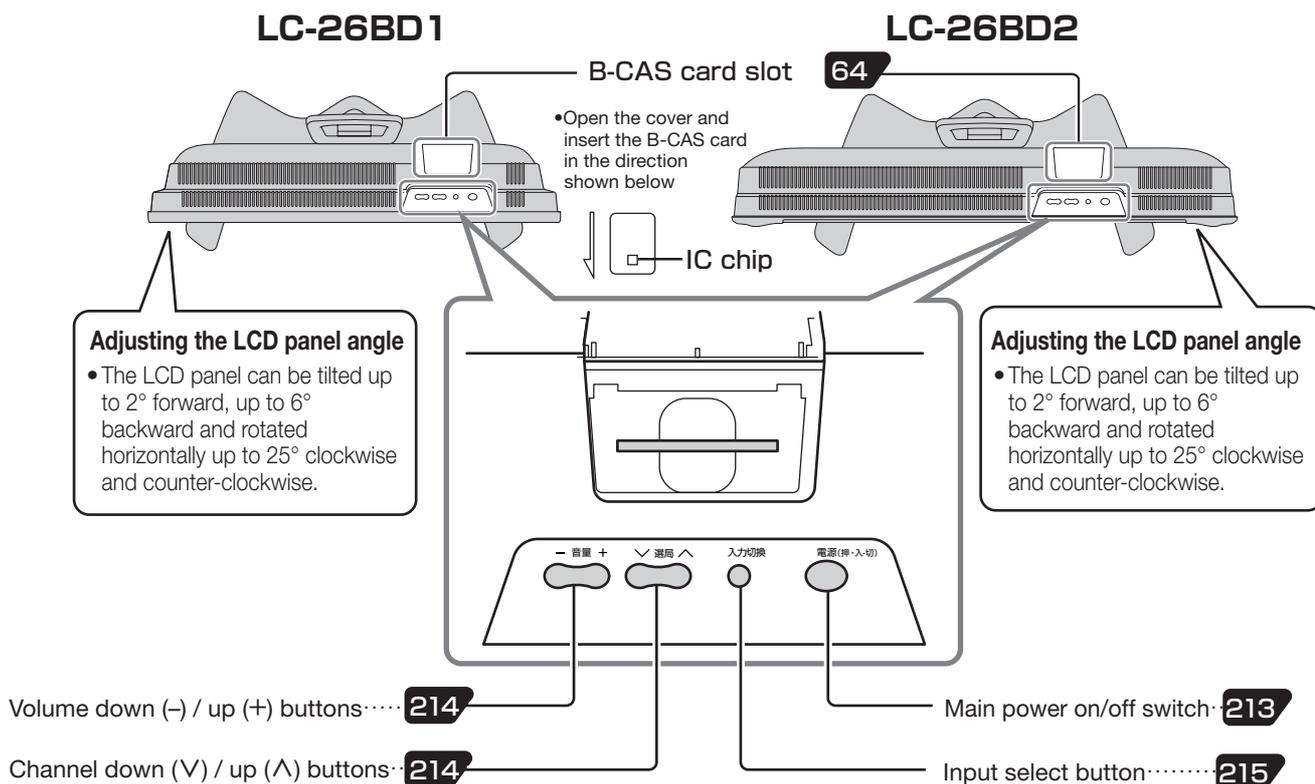

# Rear view

The illustrations below are those of LC-26BD1. LC-26BD2 has the same layout of jacks and terminals as LC-26BD1.

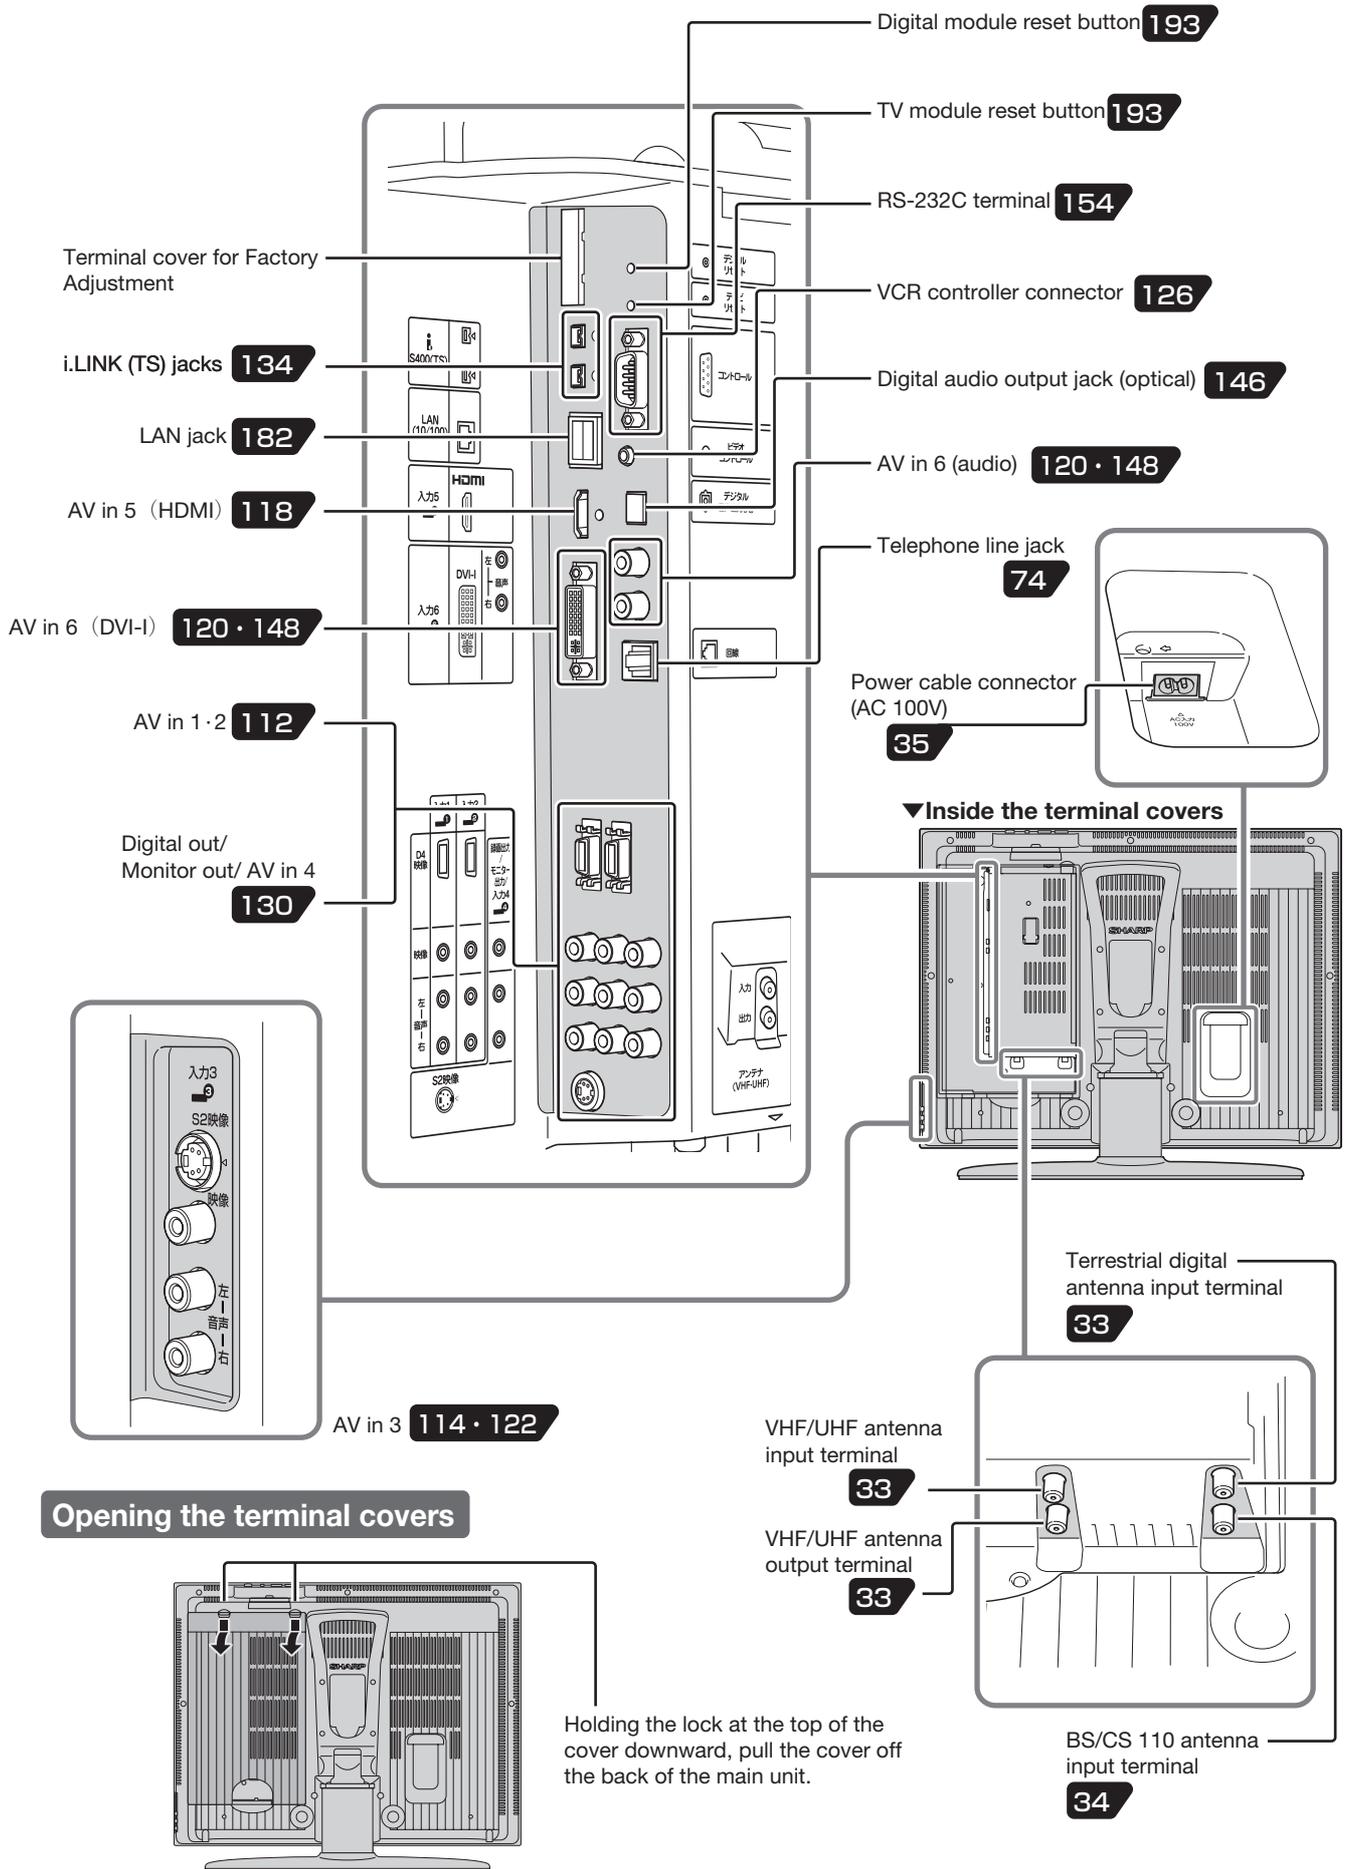

# Part Names – Remote Control Unit

Cover closed

**Display** ..... 39  
Press to display or turn off the channel call, etc.

**Active/Standby** ..... 36  
Press to engage the TV set in the active or standby mode.

**CATV** ..... 215·83  
When selecting a CATV channel by entering the channel number, press this button first, then enter the 2-digit number with the TV channel select buttons (1-10/0).

**Terrestrial digital select** ..... 211·214  
Press to select the terrestrial digital network.  
\* Use this button after the TV set is tuned to receive terrestrial digital broadcasts.

**Terrestrial analog select** ..... 211·214  
Press to select the terrestrial analog network.

**d (linked data broadcast)** ..... 90  
Press to call the data broadcast linked with the current digital TV program.

**Volume up (+)/down (-)** ..... 214  
Press to adjust the volume.

**Mute** ..... 214  
Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

**EPG** ..... 219·92  
Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

**Program info** ..... 219·90  
Press to display detailed information (e.g. title, genre, on-air time, cast, writer, etc.) on the current digital program.

**Cursor (up, down, left, right)** ..... 44  
Use to select a menu item, column, etc.

**Enter/Confirm** ..... 44  
Press to confirm a selected setting or menu item.

**Finish** ..... 44  
Press to end the picture freeze mode, turn off the EPG display, or finish menu operation, etc.

**Note**

This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

**Color (blue, red, green, yellow)** ..... 217·90·92·184

Use to operate EPGs and data program screens.

**Sleep timer** ..... 170  
Press to select the desired remaining time period after which the TV set is automatically turned off and enters the standby mode.

**i.LINK** ..... 138  
Press to select the i.LINK mode. Press to display or turn off the D-VHS VCR, AV-HDD recorder, Blu-ray Disc recorder or Hi-Vision Video camera control panel.

**Favorite channel select/register** ..... 83·172  
Press to select a user-registered channel and to turn on/off the favorite channel register/registered channel table screen.

**Digital channel number input** 83  
When selecting a digital channel by entering the 3-digit channel number, press this button first, then enter the channel number with the channel select buttons (1-10/0).

**Channel select** ..... 211·82  
• Press to select a channel after selecting the desired network (terrestrial analog [地上A], terrestrial digital [地上D], BS, CS) and media (TV, radio, or data).  
• Use to input a number for various settings.

**CS select** ..... 211·82  
Press to select the CS digital networks.

**BS select** ..... 211·82  
Press to select the BS digital network.

**Media select** ..... 217·82  
Press to select the desired media (TV, radio, or data).


**Channel up (^)/down (v)** ..... 217·82  
Press to select channels in the current network, media and CATV channels in the ascending or descending order.  
\* CATV channels are factory set to be skipped.


**Input select** ..... 215·112·133  
Press to select the desired input.

**Other on-air programs** ..... 98  
Press to display the EPG for currently on-air programs only (裏番組).


**Menu** ..... 44·48  
Press to display or turn off the menu screen.  
*The menus can be displayed in English. See page 216 for instructions on how to switch the display language.*

**Return** ..... 44  
Press to go back to the previous screen. Press this button instead of the Enter/Confirm (決定) button when you have selected the wrong item or input the wrong number, etc.

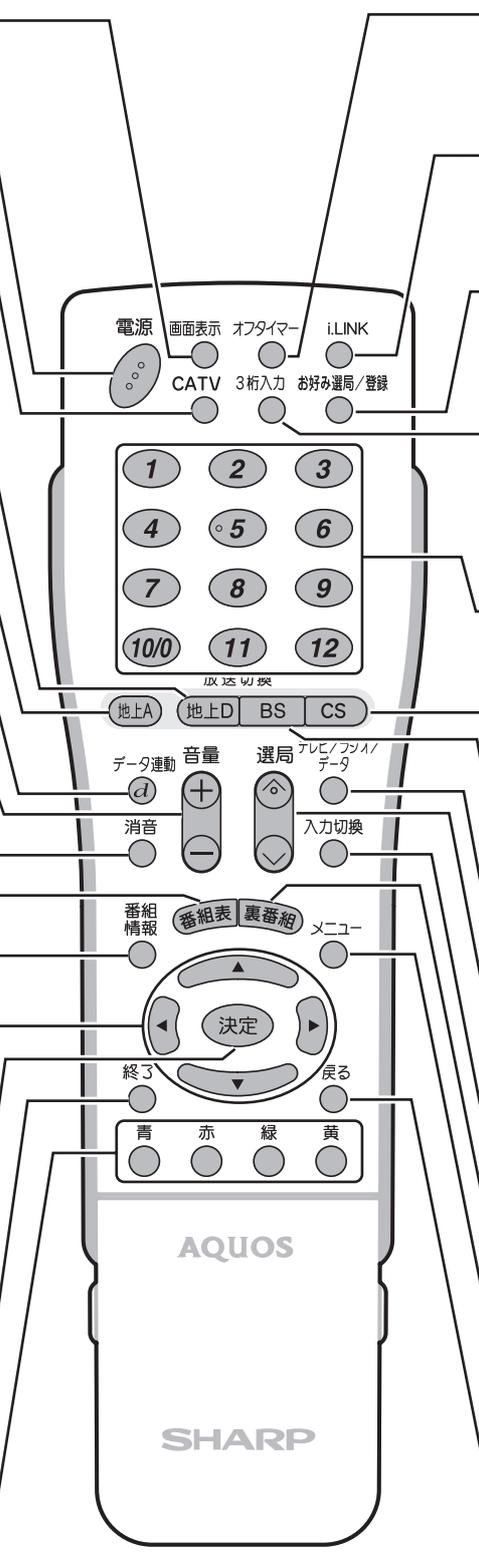

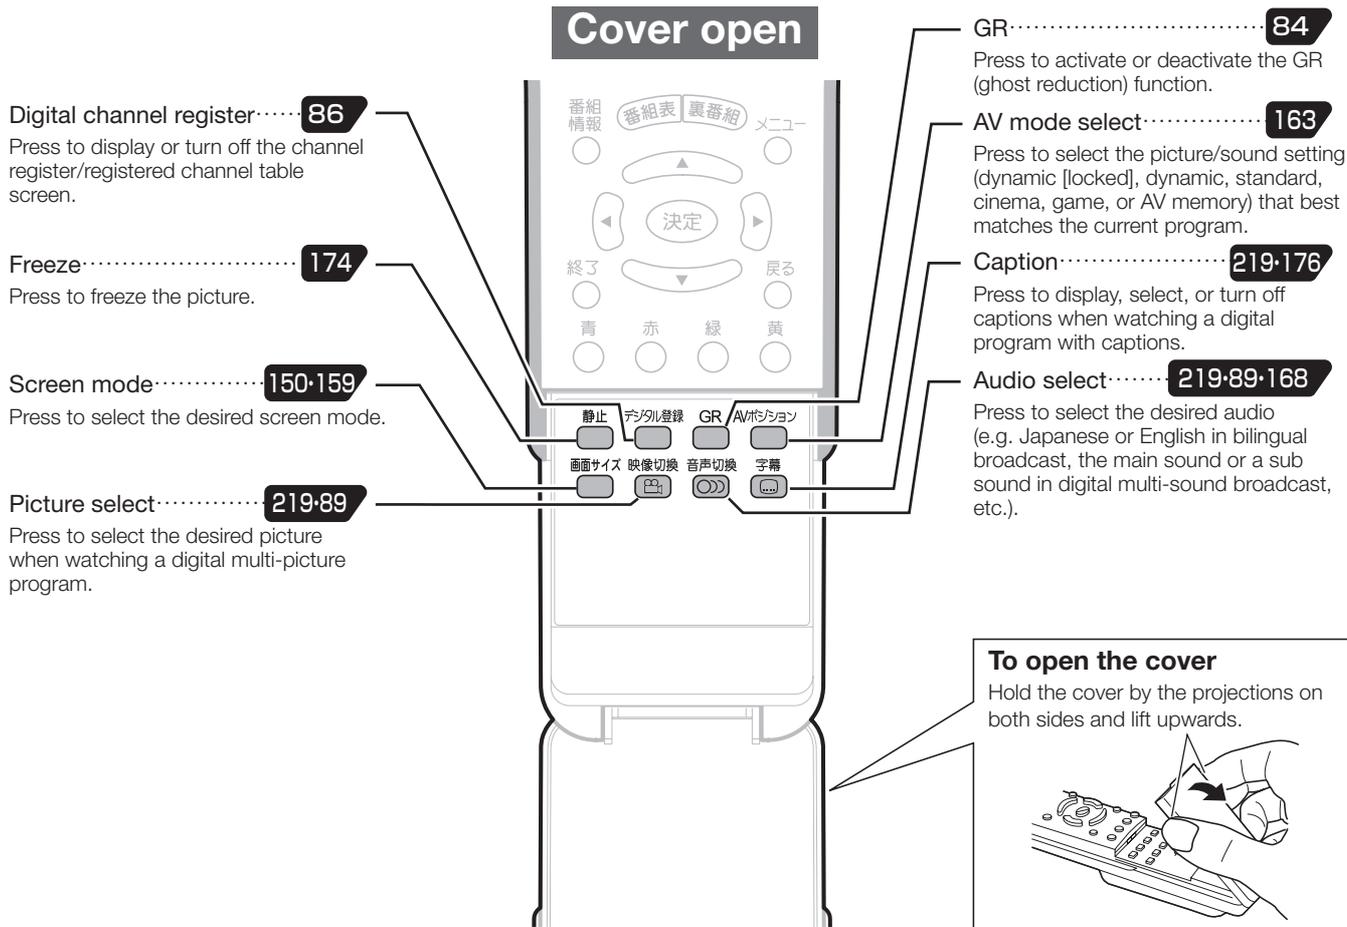

## Basic operation for channel selection

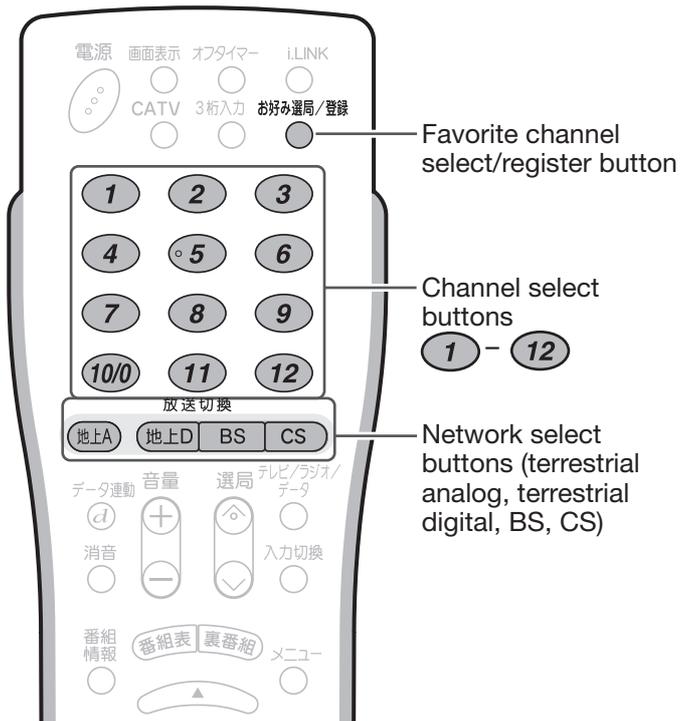

### Selecting terrestrial analog (VHF/UHF) channels

- 1 Press **地上A** to select terrestrial analog broadcast.
- 2 Press **1** - **12** to select the desired channel.

### Selecting digital channels

- 1 Press **地上D**, **BS** or **CS** to select the desired digital broadcast network.
- 2 Press **1** - **12** to select the desired channel.

### Types of broadcast

- **地上A** Terrestrial analog: Conventional VHF/UHF broadcast
- **地上D** Terrestrial digital: Terrestrial digital broadcast
- **BS** BS: BS digital broadcast
- **CS** CS: CS 110 digital broadcast

■ For details about channel selection, see pages **214** and **217**.


### Selecting favorite channels

- 1 Press **お好み選局/登録** to display the registered channel screen.
- 2 Press **1** - **12** to select the desired channel.

# Part Names — Remote Control Unit


## Inserting batteries in the remote control

### 1 Open the battery cover.

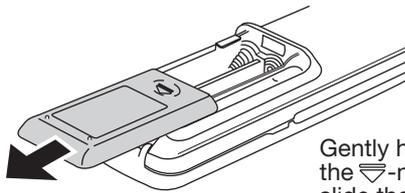

Gently holding down the -marked area, slide the cover in the direction of the arrow.

### 2 Insert the supplied two AAA batteries, and close the cover.

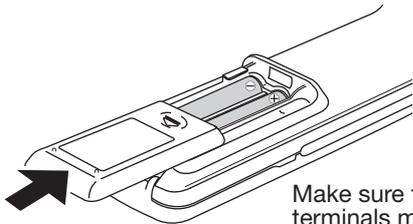

Make sure that the terminals match the  $\oplus$  and  $\ominus$  indications in the battery compartment.

#### Cautions regarding batteries

Improper use of batteries can result in chemical leakage or explosion. Be sure to follow the instructions below.

- Do not mix batteries of different types.
- Do not mix old and new batteries.
- Do not try to charge or disassemble batteries.
- Place the batteries with their terminals corresponding to the  $\oplus$  and  $\ominus$  indications.
- Do not short-circuit batteries.




CAUTION



- The supplied batteries may have a shorter life expectancy due to storage conditions. Replace them with new ones before they are depleted.
- Remove the batteries from the remote control, if you will not use it for a long time.
- If, after replacing batteries, the remote control does not work, make sure the new batteries are placed in the right direction.

## Remote control operating range

When operating the remote control, direct its head toward the remote sensor window located at the bottom right corner of the main unit, as shown below. The maximum operating range is approximately 5 meters in distance, and 30 degrees in angle against the straight line normal to the remote sensor window, as shown below.

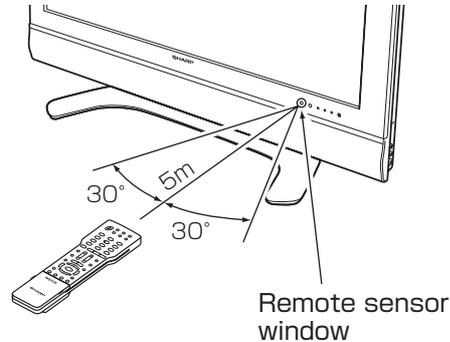

Remote sensor window

#### Note:

- The remote control may not work when there is an obstacle between the remote control and the main unit's remote sensor window.
- As the batteries are depleted, the operating distance will become shorter. Replace them with new ones.
- The remote control may not work properly when there is a fluorescent light near the main unit's remote sensor window.

#### Cautions regarding the remote control

- Do not expose the remote control to shock, water, or high humidity.
- The remote sensor window on the main unit may not properly receive remote control signals when it is under direct sunlight or strong lighting. In such a case, change the angle of the lighting or the main unit.



# Basic Operations

Shown on this and the next three pages are the basic operations for enjoying TV and video programs.

## Turning the power on


**1 Press the main power on/off (電源(押・入-切)) switch in the control section of the main unit to turn the main power on.**

· The power indicator lights up in green indicating the TV set is now in the active mode.

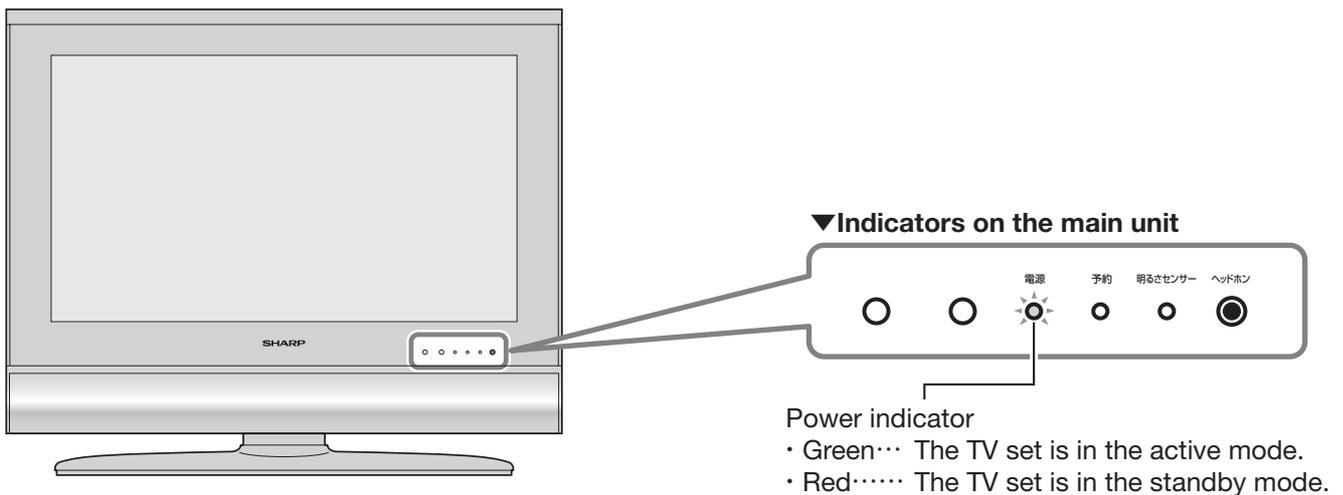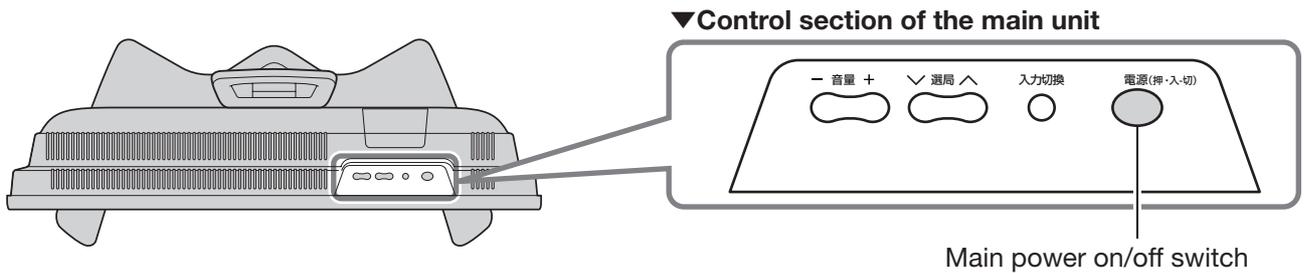

**2 After the main power is turned on, press the active/standby (電源) button on the remote control to engage the TV set in the active or standby mode.**

· The power indicator is lit red when the TV set is in the standby mode.

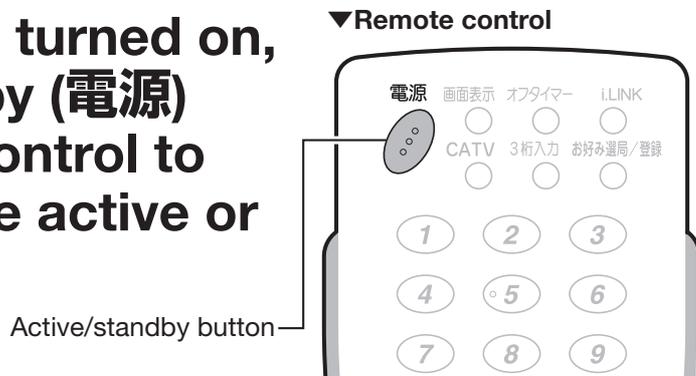

- This TV set communicates with digital TV stations even when it is in the standby mode (with the power indicator lit red).
- When you press the active/standby (電源) button on the remote control to turn off the TV, it may take a while before the power is actually turned off. (During this time, the system is storing the internal data to its memory.)

# Basic Operations

## Power on/off, channel selection, volume control

### 1 Turn on the TV.

Power on ..... The power indicator (Active mode) lights green.

### 2 Select the desired network.

#### Network select buttons

- Press to select the desired network (terrestrial analog [地上A], terrestrial digital [地上D], BS, CS).  
(\* The 地上D [terrestrial digital select] button works only after terrestrial digital broadcasting services are started in your area and the TV set is tuned to receive terrestrial digital broadcasts.)

### 3 Select the desired channel.

#### Channel select buttons

- Press to select a channel after selecting the desired network (terrestrial analog [地上A], terrestrial digital [地上D], BS, CS) and media (TV, radio, or data).

#### Channel up (^)/down (v) buttons

- Press to select channels in the network and media of last selected channel.

See pages 217 through 219, 82 through 110 for digital broadcast-related operations.

### 4 Adjust the volume.


The volume indicator will appear on the TV screen showing the current volume level with numerals and a bar.



- You can adjust the volume for each input independently.

### 5 Turn off the TV.

Power off ..... The power (Standby mode) indicator lights red.

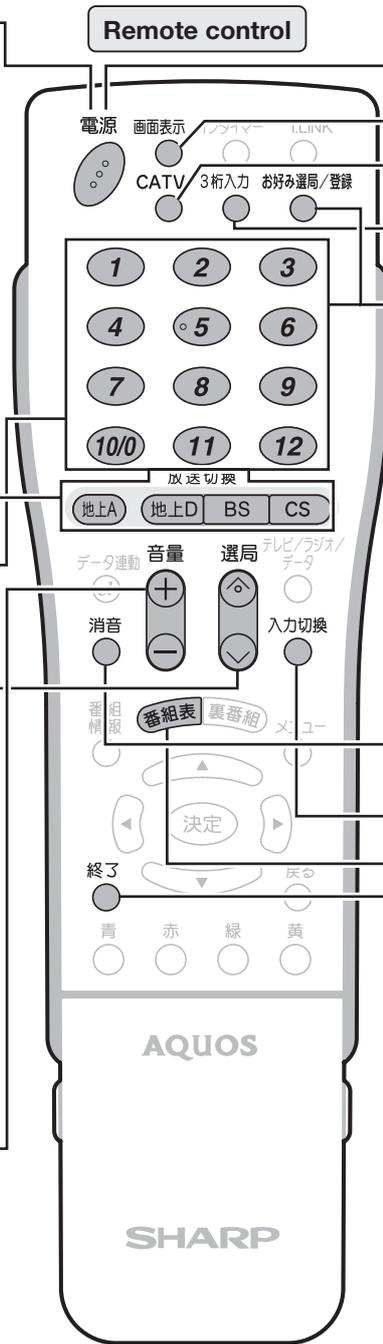

#### Select the desired favorite channel. Favorite channel select /register


- Press to select the user-registered channel.  
( Press the favorite channel select/register (お好み選局/登録) button, then press the channel select button. )

#### Press to temporarily turn off the sound.

- Press this button again or press the volume up/down buttons to return the sound volume to the previous level.

The main unit's control section is available for performing basic operations.

#### step 4 step 3 Input select

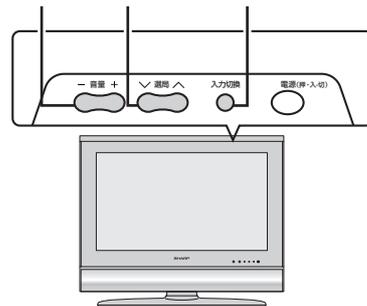

#### Power cable connection

- This TV communicates with digital TV stations even when it is in the standby mode.
- Do not disconnect the power cable from the wall outlet immediately after it has been plugged in. In rare instances, the main unit's built-in memory will be initialized causing timer programs, the PPV program purchase history (unrecoverable), etc. to be erased. If this happens, perform all necessary settings again.
- Do not unplug the power cable or interrupt the power supply when the TV set is in use. This may damage the data stored in the built-in memory.

#### Preset channels

- This TV set is factory preset to receive VHF channels 1 to 12 and BS/CS 110 channels. See pages 51 through 61 if you wish to receive terrestrial analog UHF broadcasts or change the channel settings.

# On-screen displays, CATV, input selection, etc.


## Press to display or turn off the channel sign.

- Press to display the current channel sign.  
Press again to turn it off.

## Use to select a CATV channel by entering the 2-digit channel number.

<Ex.> Selecting channel C23


- ① Press the CATV button.
- ② Enter the channel number with the number (channel select) buttons (1-10/0).

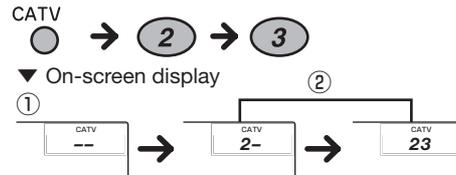

## Use to select a digital channel by entering the 3-digit channel number.

<Ex.> Selecting BS digital channel 162

- ① Press the BS select button, then the digital channel number input button.
- ② Enter the 3-digit channel number with the number (channel select) buttons (1-10/0).

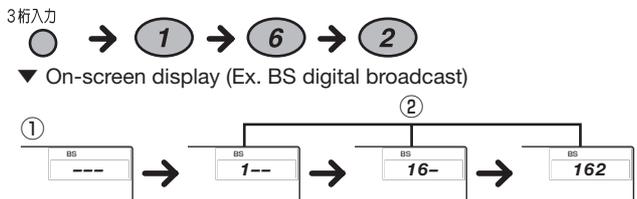


**Note** You can also use the following steps.

- ① Press the 3桁入力 (digital channel number input) button.
- ② Press the 地上D (terrestrial digital), BS, or CS button to select the desired network.
- ③ Input the desired channel number using the 1-10/0 number buttons.

## Press to select the desired input.

 - Each time you press the button, the screen changes in the following order. (Factory setting)



- Press any channel select button to return to the TV screen.

## Press to display the electronic program guide (EPG) when receiving a digital broadcast.

- Press again to turn off the EPG display.

## Press to end operation.

- Use to end the picture freeze mode, turn off the EPG display, or finish menu operation, etc.

**Tip on use** This button can be conveniently used when you are at a loss during menu or EPG operation, etc.



## When broadcasting service for the selected channel is over for the day

- If the no-signal-off function is activated, approximately 15 minutes after the end of service day, the power automatically turns off, and the TV set enters the standby mode with the power indicator lit red. (See page 171.)
- The no-signal-off function may not work properly if the TV set receives a weak signal from any other channel or some other wave.
- The no-signal-off function works in the same way when the TV set is in the AV input mode.

## CATV channel reception

- CATV channels can be received only in areas where CATV broadcast services are available.
- To receive CATV channels, you need to sign up with your local CATV broadcasting company for subscription. To watch (and record) charged, scrambled broadcasts, you need to connect a home terminal adapter to the TV set. For further details, consult with your local CATV service provider.
- The channel up/down buttons can be used for CATV channel selection only after you perform individual channel registration. (See pages 60 and 61.)
- The selectable CATV channels are C13 through C63.

## Channel sign examples

- Terrestrial analog TV
- BS digital broadcast
- CS 110 digital broadcast
- Terrestrial digital broadcast
- CATV broadcast
- AV input
- PC input



## AV in 1-6 indications

- The AV in 1-6 indications can be changed to match the connected equipment. See “外部機器のなまえを表示させる” on page 133 for details.

Ex. AV in 1

INPUT1	VCR1	VCR	COMPONENT1
COMPONENT	D-VIDEO1	D-VIDEO	CATV
CS	DVD	GAME	CAMERA
D-VHS	HDD	DVR	BD
User Setting: <input type="text"/>			

## User Setting

- As for the input selections to be displayed, you can create a new name in addition to the present ones such as INPUT1, CS, HDD, etc. with the USER SETTING function. (See page 133.)

# Basic Operations

## Switching the Display Language to English


■ Using the menu screen, you can switch the on-screen display language to English.



- 1 Press  (menu) to display the menu screen.
- 2 Press  or  to select “本体設定”(Setup).



- 2 Press  or  to select “Language (言語設定)”, then press  (enter).

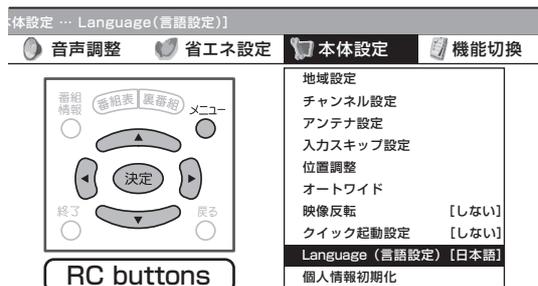

- 3 Press  or  to select “English”, then press  (enter).



• The menu screen is now displayed in English.

- 4 Press  (menu) or  (finish) to return to normal screen.

# Enjoying Digital Broadcasts

## Selecting a digital program

### 1 Select the desired digital broadcast network

The TV set incorporates a digital tuner that allows you to receive three digital broadcast networks—terrestrial digital, BS, CS. What you do first is to select the network of your choice.

Press **地上D** (terrestrial digital), **BS** or **CS** to select the desired network.



### 2 Select the type of broadcast (Not necessary when selecting a channel by entering the channel number.)

Digital broadcasts offer not only TV programs but also radio and data programs. After you have selected the network of your choice in step 1 above, what you do next is to select the type of broadcast—TV, radio, or data, by pressing **テレビ/ラジオ/データ** (media select).

Press **テレビ/ラジオ/データ** (media select) to select the desired media (TV, radio, or data).

- Each time you press the button, the media changes as shown below.



#### Operating a data program screen

Data programs usually display control button and item graphics on the screen. Use

cursor buttons and **決定** (enter/confirm) as well as color buttons (青 Blue, 赤 Red, 緑 Green, 黄 Yellow) to select an item, confirm your choice, or switch screens back and forth, etc.

### 3 Select the desired channel

#### ① Using the channel select buttons

The channel select buttons are factory preset to receive the channels listed in the tables shown on page 218.

After you have received the desired type of broadcast in step 2 above, all you do now is to press one of the channel select buttons **1** - **12** to directly select the channel of your choice.

#### ② Selecting a channel by entering the 3-digit channel number (Ex. Selecting a BS channel)

Press **3桁入力** (digital channel number input). "BS---" is displayed in the top right corner of the screen. Enter the 3-digit channel number using the channel select buttons (1-10/0).

Ex. Press **1** → **4** → **1** to select BS Nippon.

As you press the third button, **1**, a BS Nippon program will be displayed on the screen.

#### ③ Using **選局** (channel up/down)

After you have received the desired type of broadcast in step 2 above, press the **選局** **上** or **下** side

of **選局** (channel up/down) to select the next higher or lower channel.



# Enjoying Digital Broadcasts

## Factory preset digital channels

### Terrestrial digital channels\*

Channel select button	Channel name	Channel number	Channel select button	Channel name	Channel number
1	NHK General (Tokyo)	011	7	TV Tokyo	071
2	NHK Education (Tokyo)	021	8	Fuji Television	081
3	—	—	9	Tokyo MX TV	091
4	Nippon TV	041	10/0	—	—
5	TV Asahi	051	11	—	—
6	TBS	061	12	University of the Air	121

\* This table shows the terrestrial digital broadcast channel plan for Tokyo area.

### BS (BS digital) channels

Channel select button	TV		Radio		Data	
	Channel name	Channel number	Channel name	Channel number	Channel name	Channel number
1	NHK BS1	101	—	—	—	—
2	NHK BS2	102	—	—	Weathernews	910
3	NHK Hi-Vision	103	—	—	Digicas 933	933
4	BS Nippon	141	WINJ	333	—	—
5	BS Asahi	151	—	—	—	—
6	BS-i	161	—	—	—	—
7	BS Japan	171	—	—	ch999	999
8	BS Fuji	181	—	—	—	—
9	WOWOW	191	—	—	—	—
10/0	Star Channel	200	—	—	—	—
11	—	—	—	—	—	—
12	—	—	—	—	—	—

### CS (CS 110 digital) channels

Channel select button	TV	Radio	Data	Channel select button	TV	Radio	Data
	Channel number	Channel number	Channel number		Channel number	Channel number	Channel number
1	100	—	—	7	—	—	—
2	001	—	—	8	—	—	—
3	—	—	—	9	—	—	—
4	—	—	—	10/0	—	—	—
5	—	—	—	11	—	—	—
6	—	—	—	12	—	—	—



- The channel plans listed above are those known as of December 2005, and subject to change in the future.



## Various services of digital broadcasting

Digital broadcasting stations offer various services which take advantage of digital technologies that allow far more data volume to be transmitted within a single channel than the traditional terrestrial or satellite analog TV. These services include programs with multiple pictures and sounds, program-linked data broadcast in which program-related or independent information is provided with still images and texts, and provision of program information using which your TV shows an on-screen electronic program guide (EPG) when desired.

### ● Multiple pictures

Press  (picture select) under the cover until the desired picture is selected. (This feature is only available when the current program has multiple pictures.)

### ● Multiple sounds

Press  (audio select) under the cover until the desired sound is selected. (This feature is only available when the current program has multiple sounds.)

### ● Captions

Press  (caption) under the cover to display or turn off captions, or press the button until the desired caption is selected when the current program offers multiple captions. (This feature is only available when the current program has one or more captions.)

### ● Program-linked data broadcast

Press  (linked data) to display the linked data screen. A program-linked data screen usually has an inset screen that shows the program which has been being viewed. To return to the normal screen, press  again. (This feature is only available when the current program has a linked data broadcast.)

### ● Program information

Press  (program info) to display detailed information (title, genre icon, on-air time, cast, writer, etc.) on the current program. When the information window has multiple pages, press the down cursor button to see the next page. Press the up cursor button to return to the previous page. To turn off the information window, press  again.

### ● Electronic program guide (EPG)

Press  (EPG) to display an on-screen program guide, a schedule of programs currently on air and ones to be broadcast in the future (as far as a week ahead not including today), with which you can select a program you wish to see. The EPG also allows you to timer-record programs. (You need to connect the TV to a VCR, D-VHS VCR, AV-HDD recorder, or Blu-ray Disc recorder with a timer programming function.) To turn off the EPG, press  again or press .

