

**morphy richards®**



## Storm pets cylinder vacuum cleaner



Please read and keep these instructions

### ***Getting the best from your new cleaner...***

***If your cleaner is not picking up as well as it should, please check***

#### ***Dustbags***

*It is important to replace them when the dustbag indicator shows red, otherwise the performance of the cleaner will be impaired. Call our parts helpline for replacement dust bags.*

#### ***Filters***

*It is important that the filters are cleaned regularly or replaced to allow air through the appliance.*

#### ***Blockages***

*Check nozzles, tubes and hose and dust canister connector for blockages.*

#### ***Stairlock***

*The stairlock mechanism makes a slight clicking when the wheels turn, this is normal.*



 
For replacement parts, help with using your Morphy Richards, problems and lots more, contact us by phone or through our website.

VC70313MUK Rev 3



UK Helpline: 0870 060 2604  
Replacement parts: 0870 167 6635  
Ireland 1800 409119

[www.morphyrichards.com](http://www.morphyrichards.com)



## **IMPORTANT SAFETY INSTRUCTIONS**

The use of any electrical appliance requires the following common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance.

### **Location**

- Do not use or keep this product outside in the rain.
- Do not store the appliance near hot surfaces eg ovens or heating appliances.

### **Mains lead**

- Do not allow the mains lead to become strained or run this appliance over it.
- If the electrical cable becomes damaged the cable assembly must be replaced. Do not attempt this task yourself, contact the helpline number that is found at the bottom of the page.

### **Personal safety**

- **WARNING: Keep loose clothing, hair, fingers etc. away from the floor nozzle whenever the cleaner is connected to the mains.**
- Disconnect from the mains supply before attempting to clear blockages and clear the brush.
- The plug must be removed from the wall socket before cleaning or maintaining the appliance.
- Never use in the presence of explosive liquid or vapours.

- Never pick up inflammable or poisonous liquids such as petrol, copier toner or other volatile substances. Never pick up acids, asbestos or asbestos dust.
- Never touch the plug or cable with wet hands.
- Unprofessional repairs can be dangerous for users.
- The appliance must never be left running unsupervised.
- This appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.
- Always disconnect the appliance from the main supply after use or prior to emptying or cleaning.
- To protect against fire, electric shock and personal injury do not immerse cord, plug or cleaner in water or other liquid.

### **Product safety**

- Never use the appliance without the filters being installed.
- Never use the appliance to vacuum hot ashes, broken glass, sharp objects or liquids.
- Use only Morphy Richards spare parts and accessories.
- Never modify the cleaner in any way.

### **Children**

- Children do not understand the dangers associated with operating electrical appliances. Never allow children to use this appliance.

## **ELECTRICAL REQUIREMENTS**

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating current).


If the socket outlets in your home are not suitable for the plug supplied with this appliance the plug should be removed and the appropriate one fitted.

If you cut off the plug and let go of the cable it will rewind into the machine, therefore you must pull out a length of cable and secure it before cutting the plug off and re-fitting a new one.

**WARNING: The plug removed from the mains lead, if severed, must be destroyed as a plug with a bared flexible cord is hazardous if engaged into a live socket outlet.**

Should the fuse in the 13 amp plug require changing a 13 amp BS1362 fuse must be fitted.



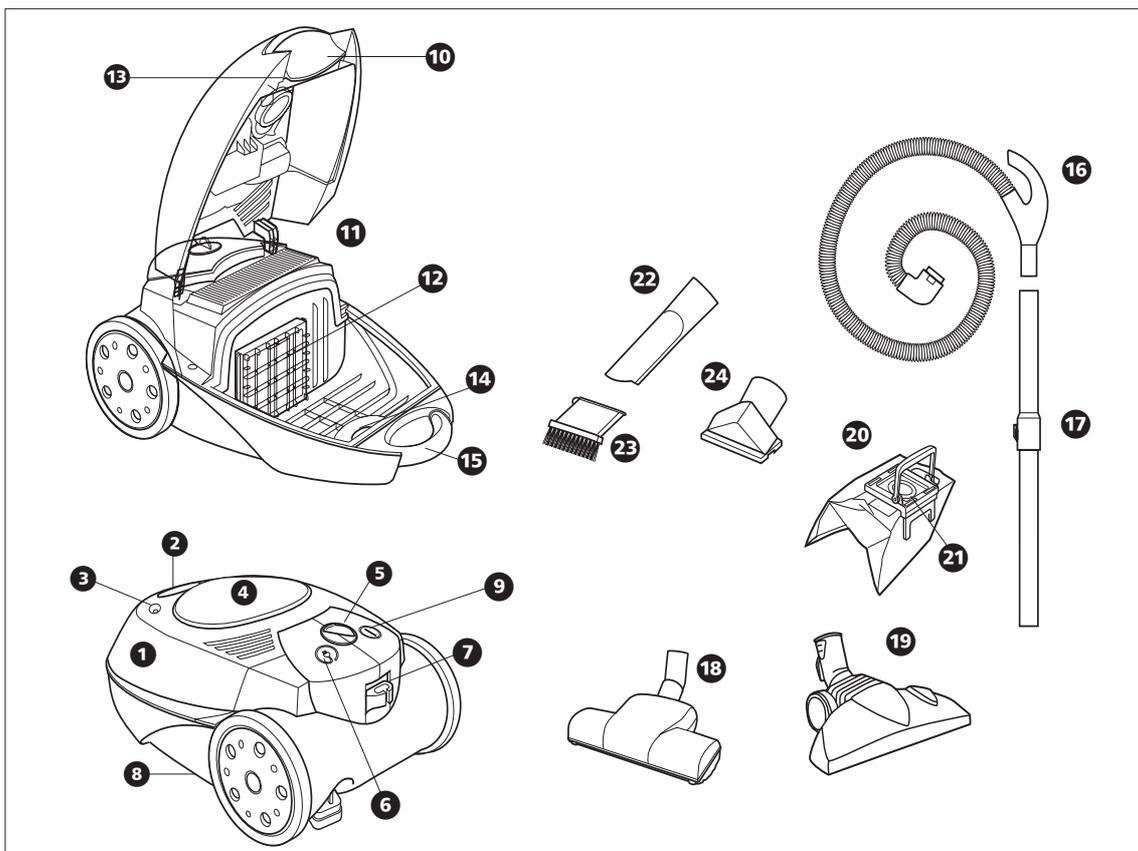

## FEATURES

- |                                       |                                       |
|---------------------------------------|---------------------------------------|
| 1 Dust compartment cover              | 15 Carrying handle                    |
| 2 Hose inlet                          | 16 Suction hose with air flow control |
| 3 Bag full indicator                  | 17 Telescopic metal tubes             |
| 4 Tool storage compartment cover      | 18 Turbo brush                        |
| 5 Variable power control              | 19 Floor nozzle                       |
| 6 Cable rewind switch                 | 20 Paper dust bag                     |
| 7 Tube standby slot                   | 21 Dust bag holder                    |
| 8 Tube park                           | 22 Crevice tool                       |
| 9 On/off switch                       | 23 Brush attachment                   |
| 10 Dust compartment release lever     | 24 Upholstery nozzle                  |
| 11 Exhaust filter                     |                                       |
| 12 Motor protection filter            |                                       |
| 13 Dust bag safety lock               |                                       |
| 14 Slot for attaching dust bag holder |                                       |

## OPERATING THE APPLIANCE

### TOOLS AND ACCESSORIES

#### Standard floor nozzle **19**

This nozzle is suitable for general purpose cleaning on a wide variety of floor coverings.

#### Turbo brush **18**

This nozzle is suitable for cleaning and rejuvenating cut pile carpets and is ideal for picking up stubborn dirt and pet hairs.

#### Cleaning the turbo nozzle

The turbo nozzle should be regularly cleaned and any hairs or fibres wrapped around the brush bar removed to maintain optimum performance.

#### Tool storage **A**

The upholstery nozzle **24**, and the crevice tool **22** and brush attachment **23** are stored in the internal storage compartment. Lift to open.

## OPERATION


#### Suction hose **B**

Push the 360° rotating head on the suction hose **16** into the suction hose opening **2** on the vacuum cleaner.


The appropriate cleaning tool can be attached directly to the other end of the suction hose or the telescopic metal tube can be used between the suction hose and the tool.



#### Switching on **C**

Always pull out the supply cable to its maximum length. Plug the appliance into the mains supply. Ensure that the variable power

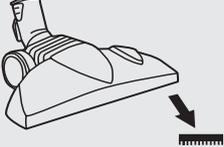Standard accessories	Application
	 Curtains and delicate fabrics
	 Textiles and upholstery
	Shelves and hard surfaces
	 Carpets and other textile floor coverings (brushes up)
	 Settings for heavy dirt and smooth floors (brushes down)

control **5** is set to minimum by turning the dial anti-clockwise as far as it will go. Push the on/off switch **9** to start the motor. Turn the variable power dial clockwise to the desired power.

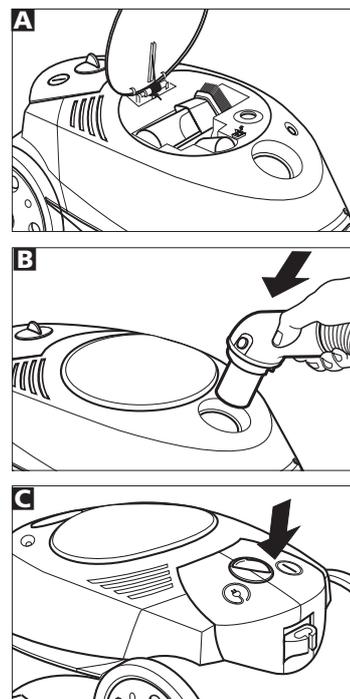

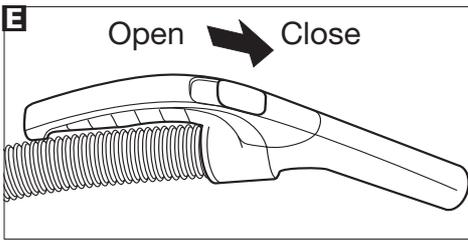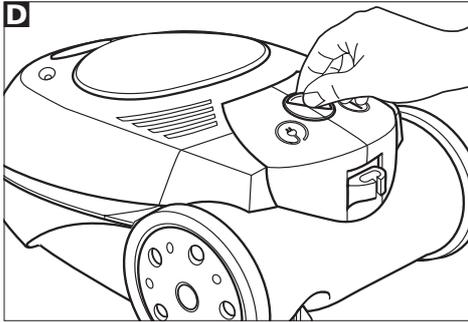

### Controlling suction power

The suction power can be varied to suit the surface being cleaned, by using the variable power control **D**. See table for guideline settings.

The suction power can also be adjusted using the fingertip control on the handle **E**.

**Closed:** full suction

**Open:** reduced suction

Power setting	Application
	Curtains and delicate fabrics
	Textiles and upholstery
	Floor coverings such as rugs economy setting for carpets
	Carpets or hard floor coverings

### Recommended settings

Alter the power setting to suit surface.



### Tube standby

During short breaks in cleaning the tubes can be held in an upright, 'standby' position , whilst you move furniture for instance.

**IMPORTANT:** Ensure that the appliance is never left unattended whilst it is switched on.

### Switching off

Switch off the appliance. Remove the plug from the mains supply and rewind the power cable using the cable rewind switch .

**WARNING: When using the cable rewind, always hold the plug as the cable will rewind quickly.**

## STORAGE

### Tube park

The vacuum cleaner can be stored in an upright position. Rotate the floor nozzle until the lug on the back of it can be fitted into the tube park slot on the base of the appliance .

## DUSTBAG

### Changing the dustbag

If suction power is reduced or if the 'dust bag full' indicator is permanently fully red, the dust bag needs changing. Also check whether the suction hose, tube or nozzle are blocked.

To access the dust bag, press the dust compartment release lever to open the cover .

- 1 Pull the tab on the dust bag to one side so that the opening is hygienically sealed.
- 2 Pull out the dust bag holder and dust bag in an upward direction .
- 3 Pull the bag sideways out of the holder .

- 4 Dispose of the bag with your household waste.

- 5 Insert a new dust bag in the holder.

- 6 Replace the dust bag holder and close the cover.

**IMPORTANT:** The dust bag compartment cover can only be closed once a dust bag has been correctly fitted.

### Vacuum fresheners

Vacuum fresheners can be used to banish pet odours from your vacuum and carpets.

- 1 After removing the dustbag (as described in points 1-4 above) open the clear packaging and remove the vacuum freshener.
- 2 Place it directly into the new dust bag.
- 3 Insert the new dustbag (as described in points 5 & 6 above).

Only place the vacuum freshener directly into the dust bag. Do not place in the filter or any other part of your vacuum cleaner.

New vacuum fresheners can be ordered by calling Morphy Richards Replacement parts.

 








## FILTERS

### Changing/cleaning the motor protection filter

The motor protection is accessible from the dust compartment only when the dust bag has been removed first.

**IMPORTANT:** Never use the appliance without the motor protection filter installed, otherwise damage to the motor may occur which would not be covered by the guarantee.

- 1 Slide the filter upwards to remove.

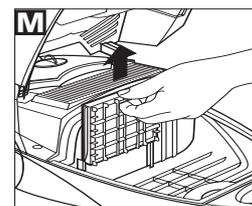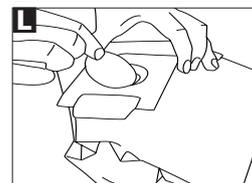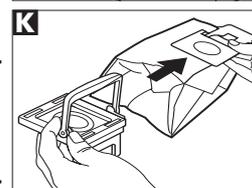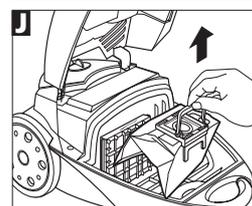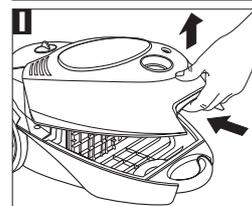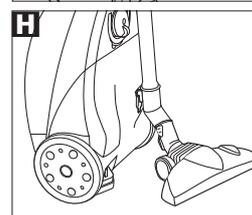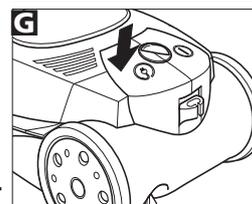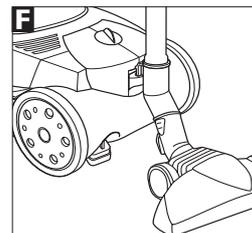

- 2 Open the flap on the filter holder.
- 3 Take out the filter and clean (by shaking) or wash .
- 4 To wash the filter, gently wash in warm water and leave to air dry. Do not use detergents. Ensure the filter is fully dry before replacing into the machine.
- 5 Close the filter holder and place back into position before removed.

It is recommended that this filter is cleaned everytime the dustbag is changed, and is replaced every 5 dustbag changes.

## HINTS AND TIPS

### Changing/cleaning the exhaust air filter

The exhaust air filter should be cleaned by shaking every time the dustbag is changed. The exhaust filter is non-washable .

### Cleaning and maintenance

Unplug from the mains before cleaning. The vacuum cleaner, especially the dust compartment and all accessories can be cleaned using a damp cloth or a non-abrasive domestic cleaner and wiped dry.

To keep the underside of the floor nozzle clean, vacuum it at regular intervals using the crevice tool.

### Stair lock

This unique system assists with stair cleaning. The stairhook, found underneath, is lifted out as shown and locked onto the stairs. In addition, the rear wheels automatically lock in position as further security .

After use, simply push the stairhook firmly back into position.

**IMPORTANT:** When cleaning on stairs, for convenience and safety, work from the bottom to the top with the desired accessory connected directly onto the hose handle. It is recommended not to use the extension tube.

Note: The stairlock mechanism makes a slight clicking sound when the wheels turn, this is normal.

### Purchasing dustbags replacement filters

Use only genuine replacement dustbags and filters which can be purchased from specialist retailers or by calling the number on the front page of this leaflet.

### HELPLINE

If you have any difficulty with your appliance, do not hesitate to call us.

We are more likely to be able to help than the store from where you bought it.





Please have the following information ready to enable our staff to deal with your query quickly.

- Name of the product
- Model number as shown on the underside of the appliance.
- Serial number as shown on underside of the appliance.

*UK Helpline* 0870 060 2604

*Replacement Parts* 0870 167 6635

*Ireland Helpline* 1800 409119

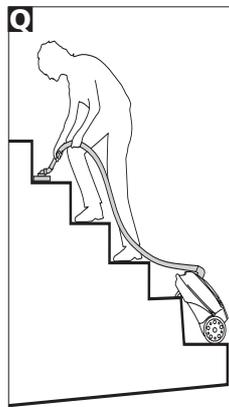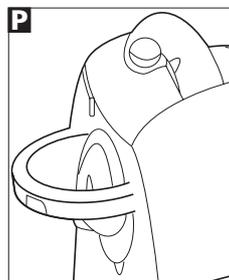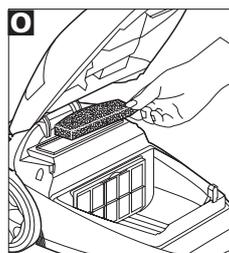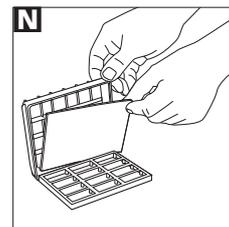

## YOUR TWO YEAR GUARANTEE

**It is important to retain the retailers receipt as proof of purchase.** Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.            Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown.

You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out below (see Exclusions) the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt.

If you suspect a fault, follow the simple checks detailed below before

retrying the appliance or calling the helpline.

- Check the filters for blockages.
- Check the tools / tubes for blockages.
- Check the plug is firmly in the socket is working by trying another appliance.
- Check the fuse in the plug.

If for any reason this item is replaced during the 2 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee the appliance must have been used according to the instructions supplied.

## EXCLUSIONS

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturers recommendations or where the fault has been caused by power surges or damage caused in transit.
- 2 The appliance has been

used on a voltage supply other than that stamped on the products.

- 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).
  - 4 Where the appliance has been used for hire purposes or non domestic use.
  - 5 Morphy Richards are not liable to carry out any type of servicing work, under the guarantee.
  - 6 The guarantee excludes consumables such as some filters.
- This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.

- This guarantee is valid in the UK and Ireland only.



For electrical products sold within the European Community. At the end of the electrical products useful life it should not be disposed of with household waste.

Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

**morphy richards®**

**The After Sales Division  
Morphy Richards Ltd**  
Mexborough, South Yorkshire,  
England, S64 8AJ

Helpline (office hours)  
UK 0870 060 2604  
Republic of Ireland 1800 409119

Morphy Richards products are intended for household use only.

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.

VC70313MUK Rev3 06/06

For details of other products in the Morphy Richards range please see our website . . .