

SPECIFICATIONS

AC Power	AC 230V, 50Hz DC 3V (1.5V x 2 "AAA" batteries for tuner and clock memory). Batteries are not supplied.	CD Section	Vertical Front Loading CD
		Speaker System	Woofer: 4", 4 ohm Tweeter: 2", 4 ohm
Power Output	5 W/CH 10% THD	Remote Control	32 Keys, Battery size "CR2032" (Battery Included)
Dimension of: Main Section	619(W) x 200(D) x 315.5(H)mm		
Radio section	Tuning : PLL with 40 Presets (FM 30, MW 10) Freq. Range : MW 522-1620KHz FM : 87.5-108MHz		

Manufacturer code: 3388

ACCESSORIES

Instruction manual	1 pc
iPod Insert	6 pcs
Remote control handset with battery	1 pc
MW loop antenna	1 pc
Wall mounting bracket for main console & speakers	3 pcs
Dowel & screw	6 pcs each
Bracket for speaker	2 pcs

Instructions on environment protection



Do not dispose of this product in the usual household garbage at the end of its lifecycle; hand it over at a collection point for the recycling of electrical and electronic appliances. The symbol on the product, the instructions for use or the packing will inform about the methods for disposal.

The materials are recyclable as mentioned in this marking. By recycling, material recycling or other forms of re-utilization of old appliances, you are making an important contribution to protect our environment.

Please inquire at the community administration for the authorized disposal location.

ALL RIGHTS RESERVED
COPY RIGHT DENVER ELECTRONICS A/S

 
www.denver-electronics.com



DENVER[®]

3 - PIECE SYSTEM

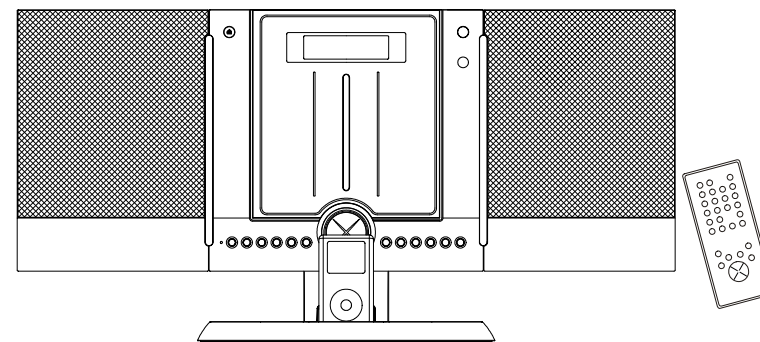



- Digital MW/FM Stereo Tuner
- CD/MP3 Player
- Clock
- Wall mountable
- Remote Control
- iPod Docking



INSTRUCTION MANUAL DENVER MCI-7800

www.denver-electronics.com

 SAFETY INFORMATION

 <div data-bbox="219 97 436 188"> CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN </div> 	 <p>This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.</p>
<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL</p>	 <p>This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.</p>

- *TO AVOID THE HAZARDS OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR OTHER MOISTURE.*

PRECAUTION : DO NOT EXPOSE THIS PRODUCT TO WATER OR HUMIDITY TO AVOID RISK OF ELECTRIC SHOCK.

DEAR CONSUMER : PLEASE READ THE FOLLOWING INSTRUCTIONS TO BETTER UNDERSTAND THE FUNCTIONS OF THIS PRODUCT. AFTER READING THESE INSTRUCTIONS, PLEASE KEEP THEM FOR FUTURE REFERENCE.

Please take good note of the following instructions:

- The unit must be connected to the power voltage which is the same as the local area. If not, there is a danger of "burning" the unit that causes a fire.
- Do not expose to the temperature higher than 35°C.
- Avoid installation near heaters or in areas subjected to direct sunlight.
- Ensure good air circulation.
- Protect the unit from dust, moisture and water.
- Avoid strong magnetic fields, e.g. near TVs or Speakers for other units.
- Avoid using strong chemical agents to clean.
- Do not grease or oil components, running mechanisms, etc. The CD player is designed to be maintenance free.
- Take the unit to approved service point for servicing.

CAUTION:

- To avoid electric shock, this unit must not be exposed to dripping water or water splash.
- Minimum distances around the apparatus for sufficient ventilation;
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus;
- The use of apparatus in tropical and / or moderate climates.
- Before scrapping the appliance, remove the batteries and place them in the appropriate battery collection container.

 
CAUTION CLASS 1 LASER PRODUCT

Use of Controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION
CLEANING:
Always disconnect unit from power supply before attempting to clean it.
Use soft cloth moistened with soapy water, wipe gently.
Do not use solvents or abrasive materials.

LASER SAFETY

This unit employs a laser. Only qualified service personnel should attempt repair.



DANGER: INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK FAILED OR DEFEATED. AVOID DIRECT EXPOSURE TO BEAM. CAUTION: HAZARDOUS LASER RADIATION WHEN OPEN AND INTERLOCK DEFEATED.

This unit is made and tested to meet exacting safety standards

 
 
CAUTION - USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. THIS UNIT SHOULD NOT BE ADJUSTED OR REPAIRED BY ANYONE EXCEPT QUALIFIED SERVICE PERSONNEL.

FOR SAFE AND EFFICIENT OPERATION

- Do not damage the power cord.
- When not in use, disconnect the power cord from the outlet. Grasp the plug, not the cord, when disconnecting the unit.
- If water should enter the unit, electrical shock or malfunction may result. Use in an area where there is low humidity and little dust.
- Do not disassemble or alter the unit in any way.
- Do not use the unit in areas where extremes in temperature occur (below 5°C or exceeding 35°C), or where it may be exposed to direct sunlight.
- Because of the CD player's extremely low noise and wide dynamic range, there is a tendency to turn the volume on the amplifier higher than necessary. Doing so may produce an excessively high output from the amplifier, which can cause damage to your speakers. Please be careful in this regard.
- Sudden changes in the surrounding temperature can cause dew to form on the optical pickup lens inside unit. Under this condition, the unit may be unable to operate properly. If this should occur, remove the disc and allow the player to adjust to the surrounding temperature.
- Please use the original CD software, and any copy discs are not recommendable for use.

THIS UNIT SHOULD NOT BE ADJUSTED OR REPAIRED BY ANYONE EXCEPT PROPERLY QUALIFIED SERVICE PERSONNEL.

LOCATION OF CONTROLS - UNIT

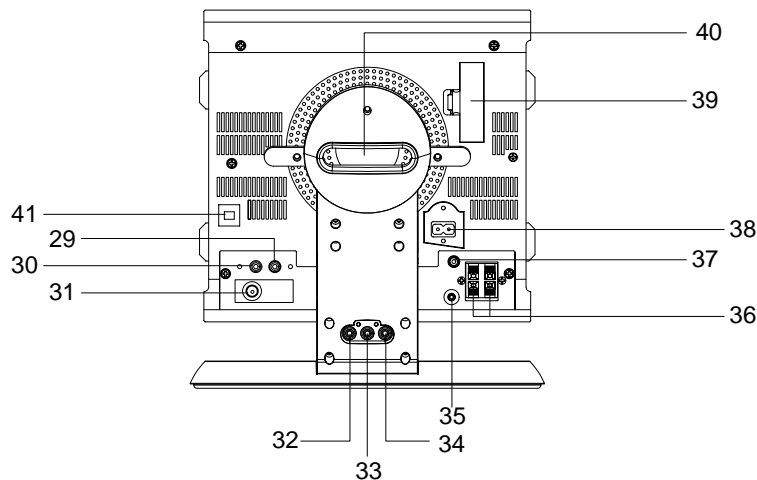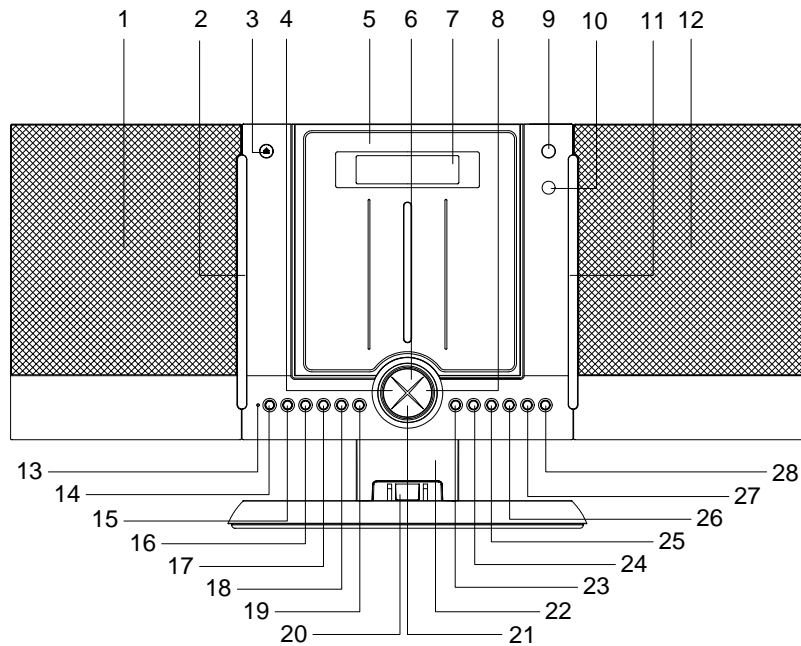

LOCATION OF CONTROLS - UNIT (cont.)


1. **Detachable Speaker (L)**
2. **Insert**
3. **CD Door OPEN/CLOSE Button**
Open or close the CD door
4. **iPod/CD-SKIP/TUNING/CLOCK Time Backward Button (⏮)**
-iPod/CD-Skip/search backward
-TUNER-Backward tuning or station search
-Clock or Timer-Select the time
-SUREWAKE vol level setting adjustable
5. **CD Door**
6. **Volume UP Button (+)**
To increase volume level
7. **LCD Display**
Shows the operating status in all modes
8. **iPod/CD-SKIP/TUNING/CLOCK Time Forward Button (⏭)**
-iPod/CD-Skip/search forward
-TUNER-Forward tuning or station search
-Clock or Timer-Select the time
-SUREWAKE vol level setting adjustable
9. **POWER ON/STANDBY Button**
To power ON, standby light should be switched off
10. **Remote Control Sensor**
11. **Insert**
12. **Detachable Speaker (R)**
13. **Surround Indicator**
14. **SURROUND ON/OFF Button**
Press to turn the surround sound ON or OFF. The indicator lights while surround is ON
15. **iPod PLAY/PAUSE ⏯ Button**
To start iPod playback/short interruption of iPod playback
16. **AUX Button**
To activate AUX mode
17. **MP3 MODE/ST/MO/ENTER Button**
-To display ID3 TAG information, if available during MP3 playback
-To select Stereo or Mono in TUNER FM mode
-To confirm iPod menu selected
18. **PRESET/FOLDER/SELECT ▼ Button**
-Press to retrieve preset radio station down
-Press to retrieve MP3 folder down
-Press to select iPod menu down
19. **PRESET/FOLDER/SELECT ▲ Button**
-Press to retrieve preset radio station up
-Press to retrieve MP3 folder up
-Press to select iPod menu up
20. **iPod DOCK**
21. **Volume DOWN Button (-)**
To decrease volume level
22. **Pedestal**

LOCATION OF CONTROLS - UNIT (cont.)


- | | |
|--|--|
| <p>23. CD/iPod STOP Button (■)
Interrupting the CD/iPod playback/clearing the CD program/To iPod charging mode</p> <p>24. CD PLAY/PAUSE Button
To play or pause CD playback</p> <p>25. PROG/MENU/CLOCK SETTING Button
-Tuner/CD program/Clock setting button (in off mode)
-iPod menu selection</p> <p>26. TUNER/BAND Button
Sets to tuner (radio) mode and selects the MW or FM band</p> <p>27. DISPLAY ON/OFF Button
To select display back light on/off</p> <p>28. AUX IN Jack (3.5mm)
AUX input for stereo line level input</p> <p>29. AUX Socket (L) (LINE OUT)</p> <p>30. AUX Socket (R) (LINE OUT)</p> <p>31. FM Antenna (75 ohm socket)</p> | <p>32. AUDIO OUT for iPod (R)</p> <p>33. AUDIO OUT for iPod (L)</p> <p>34. VIDEO OUT for iPod</p> <p>35. HEADPHONE Jack (3.5mm)
Connect a pair of stereo headphones (not supplied) for private listening</p> <p>36. Speaker Terminal
Connect the speaker wires to left and right speakers</p> <p>37. Subwoofer Jack
To connect powered subwoofer (not supplied)</p> <p>38. AC Input Socket
To connect to AC power cord
Note: The cord was fixed on main unit</p> <p>39. Battery Cover/Compartment
For tuner and clock memory back-up, to install 1.5V x 2 "AAA" Batteries</p> <p>40. WALL MOUNTING SLOT</p> <p>41. MW Antenna Socket
MW antenna connection socket (for the loop antenna included in the accessories)</p> |
|--|--|

INSTALLATION (Speakers and Decorative Insert)

 DISASSEMBLE AND FIX THE DECORATIVE INSERT

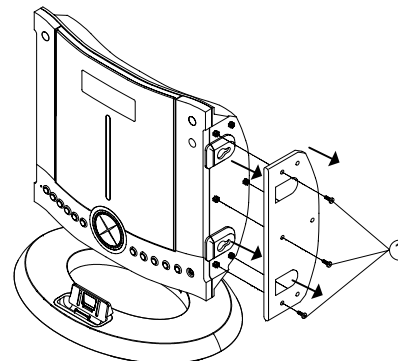

 
To remove the insert, release 3 pcs screws (1), then pull out the insert from the main unit.

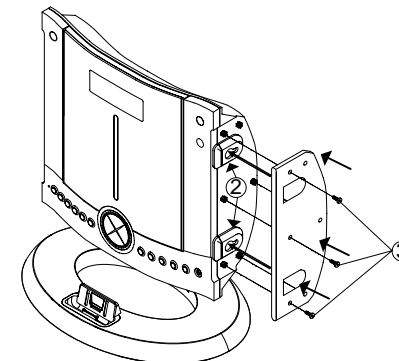

To fix the insert, place it with two holes into main unit speaker holder (2), then fix it by 3 pcs screws (3).


PLACE AND FIX THE SPEAKER

 - Insert the speaker stud into the hole of the main unit (1).
- Push the speaker backward to the end until it clicks (2).

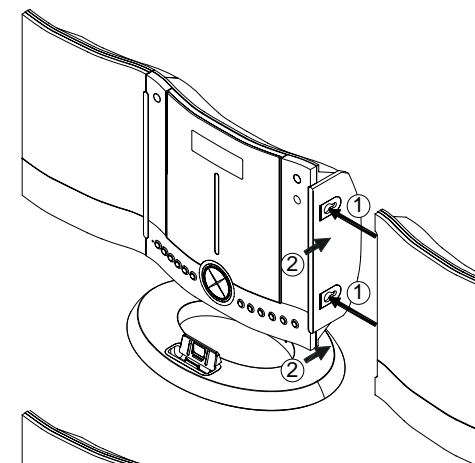

DISASSEMBLE THE SPEAKER

 - Push the speaker forward from the back side (1).
- Release the speaker from the main unit speaker holder (2).

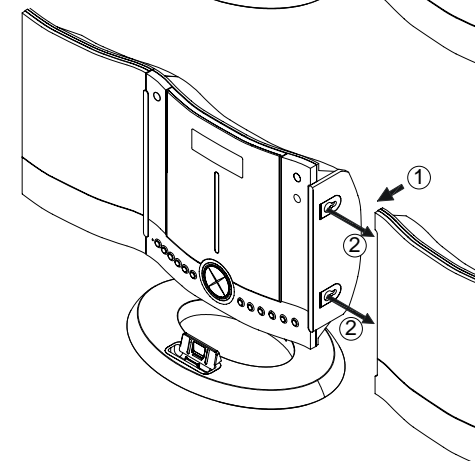


ANGLE ADJUSTMENT (Speakers)

Used to connect the bracket (included) to set the speaker box on an angle.


VERTICAL ANGLE

 Insert the bracket with (A) side and push upward to adjust for vertical angle.

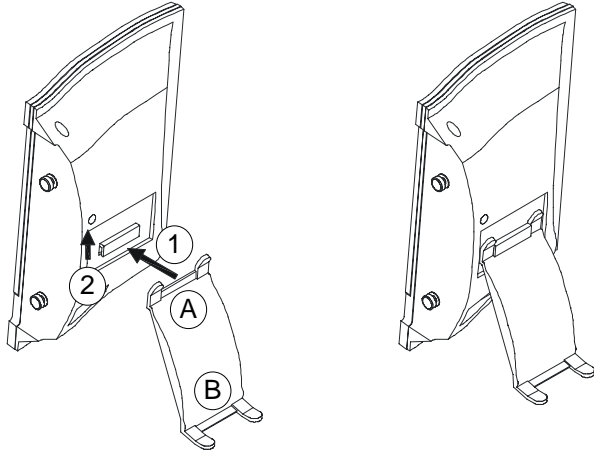

TILT ANGLE

 Insert the bracket with (B) side and push upward to adjust for desired angle.

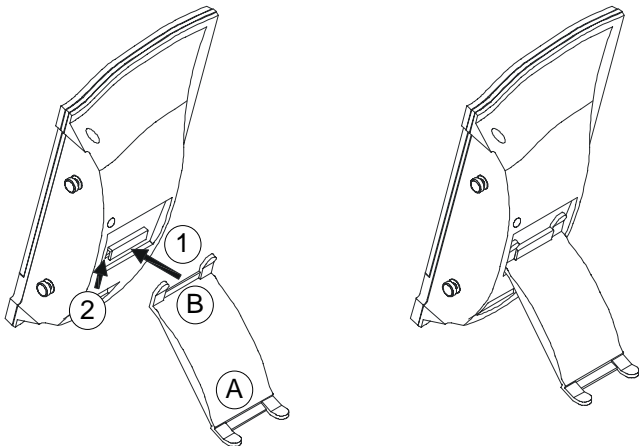


INSTALLATION (Wall Mounting)

Installation options:


- Wall mount

To mount the center section on the wall:

 - Position the bracket (supplied) on the wall (as show below) where you want to hang the whole unit. Drill 2 holes slightly undersized for a firm fit.
- Secure the bracket on the wall using 2 dowels and 2 screws (supplied).
- The mounting screws should be anchored into solid wall support, such as wood frame or concrete wall. Mount the center unit onto the wall bracket.
- Make sure the mounting tab on the center unit fits securely into the mounting slot on the wall bracket.
- Screws and plastic dowels are also provided for speakers if they are to be wall-mounted away from the center section.

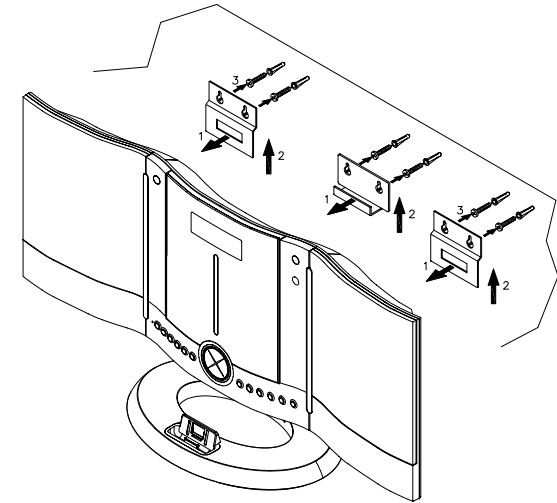



 
- Note: speakers can be wall mounted separately as on below drawing.

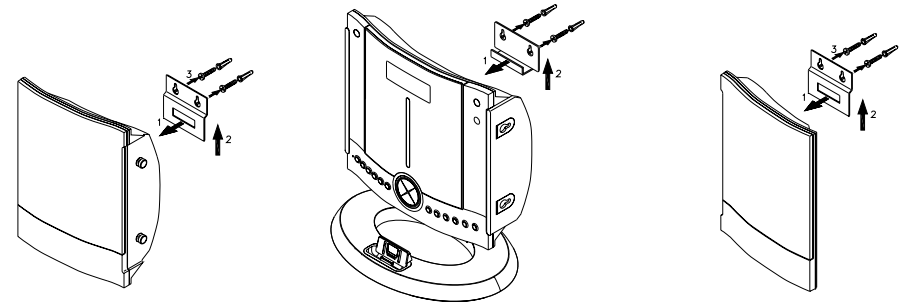


REMOTE CONTROL

Battery Installation

   1. Remove the battery tray by pressing point (1a) inside, then sliding point (1b) area at the same time.
2. Pull out the battery tray.
3. Install or replace the button-type battery "CR2032" (supplied).
4. Close the battery tray.

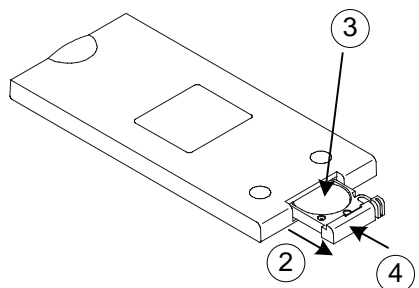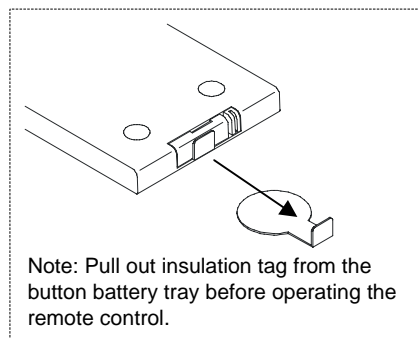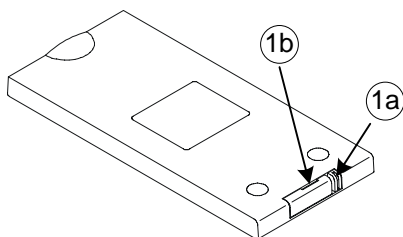


LOCATION OF CONTROLS - REMOTE CONTROL

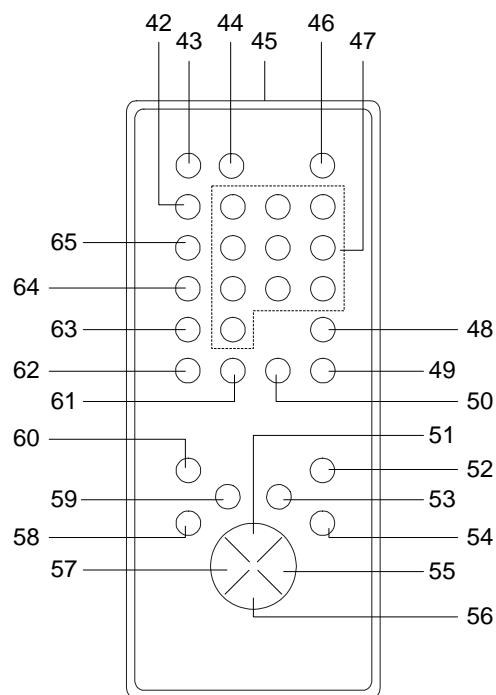 


LOCATION OF CONTROLS - REMOTE CONTROL (Cont.)

- 42. MUTE Button**
To mute the sound
- 43. CD Door OPEN/CLOSE Button**
Press to open or close the CD door at CD mode
- 44. SUREWAKE/TIMER Button**
To activate surewake/deactivate the timer
- 45. Remote Control Transmitter**
- 46. POWER ON/STANDBY Button**
Switches the system on or off
- 47. 0 - 9 NUMERIC Buttons**
Tuner: To recall preset stations
CD: To recall tracks
- 48. REPEAT Button**
Repeat 1/ALL function for CD/iPod mode
- 49. INTRO Button**
Plays 10 seconds of each CD track
- 50. RANDOM Button**
CD play in random sequence
- 51. Volume UP Button (+)**
To increase volume level
- 52. SUPER BASS Button**
Press for a rich bass sound
- 53. PLAY/PAUSE ►|| Button**
To start CD/iPod playback/short interruption of CD playback
- 54. EQ Button**
To select "PASS, CLASSIC, ROCK, POP and JAZZ" for desired sound effect
- 55. iPod/CD-SKIP/TUNING/CLOCK time Forward Button (►►)**
-iPod/CD-Skip/search forward
-TUNER-Forward tuning or station search
-Clock or Timer-Select the time
-SUREWAKE vol level setting adjustable
- 56. Volume DOWN Button (-)**
To decrease volume level
- 57. iPod/CD-SKIP/TUNING/CLOCK time Backward Button (◀◀)**
-iPod/CD-Skip/search backward
-TUNER-Backward tuning or station search
-Clock or Timer-Select the time
-SUREWAKE vol level setting adjustable
- 58. PRESET/FOLDER/SELECT ▼ Button**
-Press to retrieve preset radio station down
-Press to retrieve MP3 folder down
-Press to select iPod menu down
- 59. CD/iPod STOP Button (■)**
Interrupting the CD/iPod playback/clearing the CD program/To iPod charging mode
- 60. PRESET/FOLDER/SELECT ▲ Button**
-Press to retrieve preset radio station up
-Press to retrieve MP3 folder up
-Press to select iPod menu up
- 61. PROG/MENU/CLOCK SETTING Button**
-Tuner/CD program/Clock setting (in off mode)
-iPod menu for selection
- 62. MP3 MODE / ST/MO/ENTER Button**
-To display ID3 TAG information if available during MP3 playback
-To select Stereo or Mono in TUNER FM mode
-To confirm iPod menu selected
- 63. SLEEP Button**
Press for sleep to music function
- 64. TUNER/BAND Button**
Sets to tuner (radio) mode and selects the MW or FM band
- 65. SOURCE Button**
To select "CD, iPod, AUX, TUNER" mode

 POWER SUPPLY

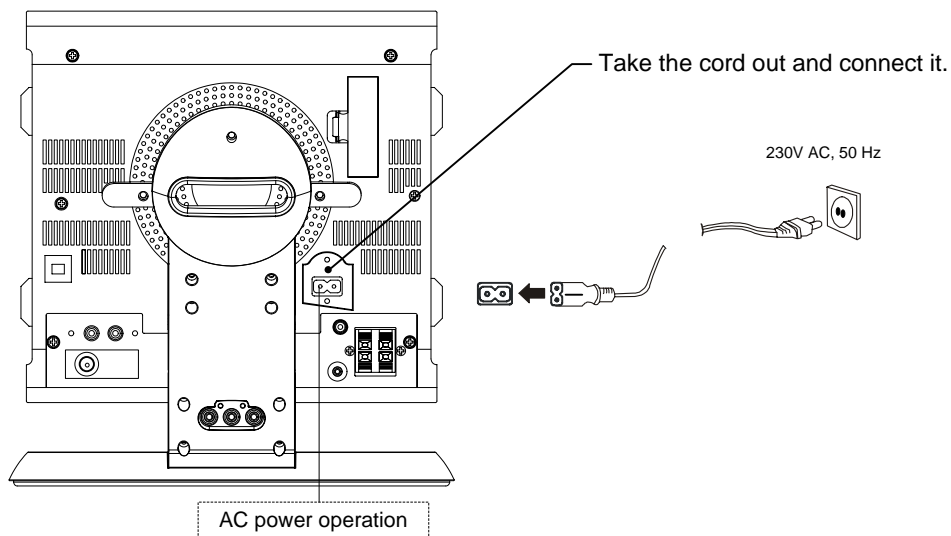

 BATTERY SUPPLY (For Tuner/Clock Memory Back-up)

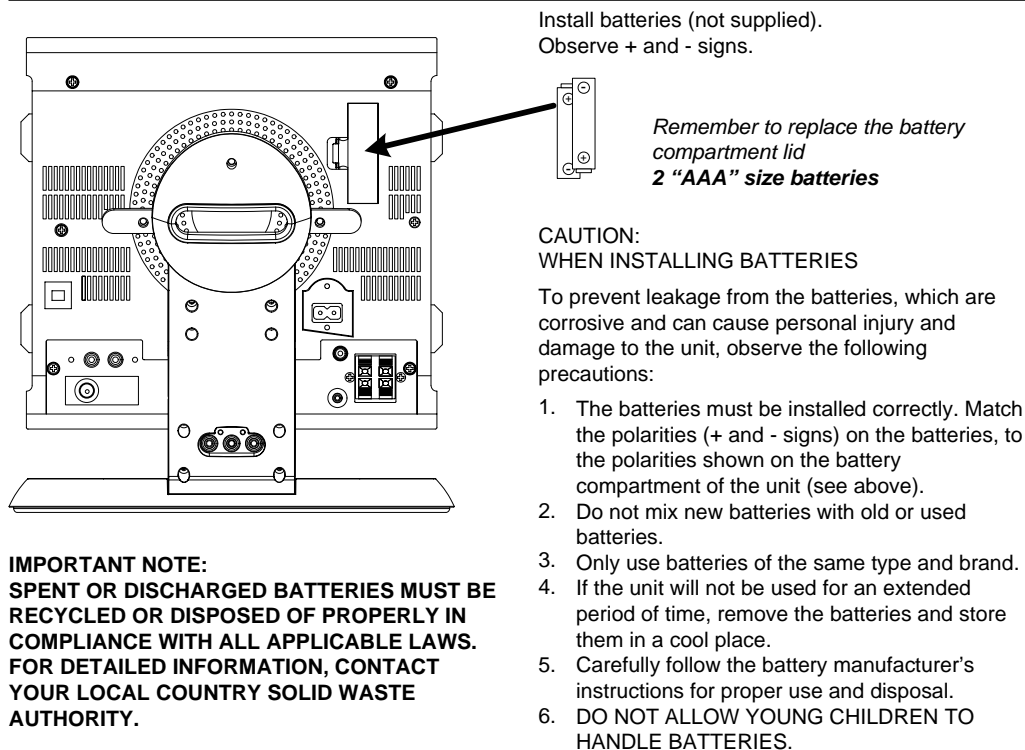


OPERATING INSTRUCTIONS

POWER ON/OFF

When the AC power is connected, "-- -- : -- --" shows on the LCD display.

1. Press the POWER/STANDBY button to turn the unit 'ON'.
Note: The LCD display lights up and "HELLO" greeting shows on display, the STANDBY LED light goes off. Volume at 13 (max 30).
2. You can now select your desired music source by pressing one of the function buttons: TUNER/BAND or CD PLAY/PAUSE **▶||** or AUX or iPod on main console.
3. To switch to POWER OFF, press the POWER/STANDBY button to turn the unit 'OFF'. "GOOD BYE" appears on display. The STANDBY LED lights.
4. Display back light ON/OFF won't be affected by power ON/OFF.

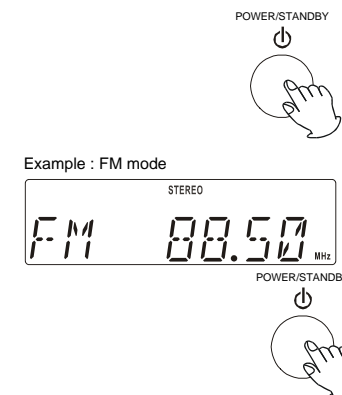 

NOTE: Please turn off the unit to standby mode before disconnecting main power supply from the unit.

SETTING THE TIME

When the unit is first connected to an AC power outlet, the display shows "-- -- : -- --". To set the clock to the current time proceed as follows:

 
 
 
 
 
 
1. In power off mode, press and hold the PROG button for 2 seconds, the "12" hour digits begin to flash.
2. Press the **◀▶** / **▶▶** to select your desire 12 or 24 hour clock time format.
3. Press the PROG button to hour mode.
4. Press the **◀▶** / **▶▶** to adjust the hour time while it is flashing. Be sure to set the hour correctly for AM or PM.
5. Press PROG button once to minute mode.
6. Press the **◀▶** / **▶▶** to adjust the minute time while it is flashing.
7. Press the PROG button once more, the display stops flashing and the clock begins to run.



TIMER ON/OFF SETTING

NOTE: The clock should be adjusted before the Timer On/Off setting.

1. Press the SUREWAKE TIMER button on remote control once, the TIMER ON indicator and hour digit begin to flash.
2. Press the ◀▶ / ▶▶ to adjust the hour time up or down. Be sure to set the hour correctly for AM or PM.
3. Press the SUREWAKE TIMER button once, minute digit begin to flash.
4. Press the ◀▶ / ▶▶ to adjust the minute time up or down.
5. Press the SUREWAKE TIMER button on remote control again, the TIMER OFF indicator and hour digit begin to flash.
6. Press the ◀▶ / ▶▶ to adjust the hour time up or down. Be sure to set the hour for correctly for AM or PM.
7. Press the SUREWAKE TIMER button once, minute digit begin to flash.
8. Press ◀▶ / ▶▶ button to adjust the minute time up or down.
9. Press the SUREWAKE TIMER button once setting to: TUNER or CD or iPod, selected by pressing the ◀▶ / ▶▶ button.
10. Press the SUREWAKE TIMER button, then press the ◀▶ / ▶▶ to select the volume level.
11. Press the TIMER button on remote control once more, then the Timer On and Off adjustment is finished with the "⊙" display remaining ON (The SUREWAKE TIMER setting will show you once on display).




Note: Timer function with **SUREWAKE** starts the music quietly and then increases the volume to room level or your selected volume level to make sure you are awake.

To cancel the Timer On setting, press SUREWAKE TIMER button on remote control until "⊙" display goes off.

Note : To turn off the set while timer is on, press POWER button.

SETTING THE SLEEP

 Pressing SLEEP button on remote control permits settings from 90 minutes. When the desired time appears, releasing your finger will set the time. (Pressing "SLEEP" after the 10 minute showed, sleep timer will cancel.)



Change of SLEEP Setting



BASIC OPERATION

Electronic volume control

 
Electronic volume control display



1. Press VOL-DOWN (-) button to adjust sound level down, the volume level (00 - 30) will be shown in the LCD display.
2. Holding down the button will result in continuous decrease of the sound level.
3. Similarly, press VOL-UP (+) button to adjust sound level up

Muting Function

If the MUTE button is pressed, the audio output will be muted, and the current display begins to flashing.




Pressed the MUTE button again to resume.



SUPER BASS Control


Press the SUPER BASS button to get the rich bass sound.

 SUPER BASS shows on display



To switch off the SUPER BASS function, press the button once more.

 SUPER BASS shows on display



PRESET EQUALIZATION

Press the EQ button on remote control repeatedly to cycle through the preset EQ showing on the LCD display -- PASS, CLASSIC, ROCK, POP and JAZZ.

LISTENING TO THE RADIO

- 1. Press the POWER/STANDBY button to turn the system 'ON'.
- 2. Press the TUNER/BAND button to select the radio function.



Example : FM mode



- 3. Press the TUNER/BAND button repeatedly to select MW or FM band.
- 4. Press the SKIP Forward or Backward buttons to tune to the desired station.



STORING PRESET STATIONS

- 1. Tune to the station you wish to store.

 


The unit enables you to program 30 stations of FM and 10 stations of MW band.

- 2. Press the PROG button once, preset station number will be flashing.



- 3. Press the PRESET button repeatedly to set the desired preset station number.



Auto tuning - Press the TUNING Forward or Backward buttons momentarily and release. The tuner will move Forward or Backward to the next available station.

Manual Tuning - Press and hold the SKIP Forward/Backward buttons until the display approaches your desired station. Then tap the buttons repeatedly until the display shows the exact frequency.

- 5. When finished listening, press the POWER button to shut the system OFF.

Note: For MW reception, plug the supplied frame antenna into the MW ANT jack. Then adjust the frame antenna until it is in position with the best reception.



- 4. Press the PROG button again. The station is stored.



- 5. To store other stations, repeat above steps.

RECALLING PRESET STATION

Press the PRESET ▼▲ buttons to select the desired station.

Note: When setting or recalling preset station by direct press the number, on remote control unit to press key number 0, 1 to preset station 01; press 0, 9 to preset station 09; press 1, 5 to preset station 15.

PLAYING COMPACT DISCS


- 1. Switch on the power and press the CD PLAY/PAUSE button ►|| to the CD mode.
- 2. If there is no CD inside, a "NO DISC" display will appear.

When there is no disc



Loading a disc

 
- 1. Press the CD DOOR OPEN/CLOSE button to open the CD door.



- 2. To load a disc, simply put the disc onto the center spindle of the player and then press the CD DOOR OPEN/CLOSE button again to close the CD door. After that, reading TOC will start.

Ensure that the disc is correctly mounted on the spindle and locked in place.

 After reading TOC



The display will show the total number of tracks and the playing time of the disc.

Playing the disc (►||)

Press PLAY/PAUSE button to play the CD.

Playing track 1



ESP will be stopped flashing after 40 seconds.

Pause the playing (►||)

Press PLAY/PAUSE button while the disc is playing, the playing time will flash.

While paused

 


Press PLAY/PAUSE button again to resume.

Stopping the disc

Press STOP (■)

Stop condition (TOC display)




To operate by remote control

Select desired track by pressing 0-9 buttons, then press PLAY/PAUSE button to start playback.
Example: 03=Track 3, 11=Track 11.

Skip and Search Function

 Press the SKIP Forward or Backward buttons momentarily during play mode or stop mode.

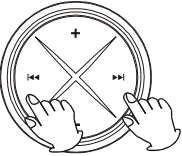

	IN PLAY MODE		IN STOP MODE
	PRESS ONCE	PRESS TWICE	PRESS ONCE
◀◀	BACK TO THE BEGINNING OF THE CURRENT TRACK	PREVIOUS TRACK	PREVIOUS TRACK
▶▶	NEXT TRACK		NEXT TRACK

Press and hold the SKIP button during playback:

◀◀ : FAST BACKWARD

▶▶ : FAST FORWARD

To repeat a track or disc

Press REPEAT button on remote control one time, "one track repeat" will be active. "REPEAT" shows on display.

One track repeat



Random play function

Press RANDOM button on remote control during CD play or stop mode to start random play. Pressing once again will cancel the function.

Random playing start



Note: Random play cannot operate while playing programmed tracks.

PROGRAMMED PLAYBACK

The CD player enables you to program up to 64 tracks in a sequence of your choice. First select CD stop mode.

1. Press the PROG button one time.

Program input mode



2. Press the SKIP Forward or Backward buttons to select the desired track to be programmed. For example:



Choose track 4



3. Press PROG button again; then track 4 is stored.

With one more press, "all track repeat" will be active. "REPEAT ALL" shows on display.

All track repeat



With one further press, the repeat mode is cancelled.

Intro play function

In the stop condition, press the INTRO button to start the intro playing. After that the first 10 seconds of each song will be played. If the INTRO button is pressed again, the CD will change to normal playing mode.

Intro playing



4. Continue to program, repeat steps 2 and 3.

Reviewing programs

Press the PROG button repeatedly. The track number programmed on each program number will be displayed.

5. Press PLAY/PAUSE button to play the program tracks.



Note: If the program function has stopped, press the PROG button and then press the PLAY/PAUSE button, the program play will start.

 
Clear the program

In stop mode, press the PROG button one time and then press the STOP button. The preset programs will be cancelled.

PLAYING MP3 DISC

1. Switch on the power and press the CD PLAY/PAUSE button to the CD mode. Loading a MP3 disc.

After reading TOC



2. Press the FOLDER button or buttons to select desired album.



3. Press the SKIP button or buttons to select desired track.



4. Press the PLAY/PAUSE button to play MP3.



Note: When MP3 is playing, press and hold MP3 MODE button about 2 seconds, the track no, title and artist information will be shown repeatedly in the display if disc information is available.

To resume normal play display, press and hold MP3 MODE button about 2 seconds.

Notice: For MP3/CD Playback capability because of None-Standardized format definition/production of MP3/CD Playback quality & performance are not guarantee. DENVER is not responsible for the playability of MP3 in any case due to recording conditions such as PC performance, writing software, Media ability etc.

Album search (if disc information available)

1. Press the MP3 MODE button once, Title name is displayed. (If no name is on the disc, NOTHING is displayed). Press SKIP button or buttons to select desired title from A to Z, 0 to 9, then press PLAY/PAUSE button to start playback.
2. Press the MP3 MODE button twice and ALBUM is displayed. (If no name is on the disc, UN_KNOWN is displayed). Press the SKIP button or buttons to select desired album; then press the PLAY/PAUSE button to start playback.

To repeat a track or album

1. Press the REPEAT button on remote control once, MP3 plays one track repeatedly and REPEAT is displayed.

One track repeat



2. Press this button twice, MP3 plays all tracks repeatedly and REPEAT ALL is displayed.

All track repeat



3. Press this button three times, MP3 disc repeats the current playing Album and ALBUM REPEAT displayed.

Album repeat



4. To cancel repeat function, Press REPEAT button on remote control repeatedly until repeat function display goes off.

Random play function

Press RANDOM button on remote control during playing or stop condition to start random play. Press once again to cancel the function.

Random playing start



Intro play function

During the stop condition, pressing the INTRO button to start the intro playing. After that the first 10 seconds of each song will be played. If the INTRO button is pressed again, the MP3 will change to normal playing mode.

Intro playing



PROGRAMMED PLAYBACK

The MP3 player enables you to program up to 64 tracks in a sequence of your choice. First select CD stop mode.

 
1. Press the PROG button once.




2. Press the SKIP **▶▶** or **◀◀** buttons to select your desired folder; for example folder 3.




3. Press the PROG button again.

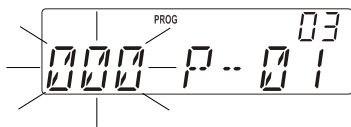

 4. Press the SKIP **▶▶** or **◀◀** buttons to select your desired track, for example, track10.

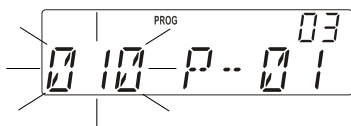

 5. Press the PROG one more time, and track 10 of folder 3 is stored.



6. Continue to program, repeating steps 1 to 5.

Reviewing programs

Press the PROG button repeatedly. The track number programmed on each program number will be displayed.

7. Press PLAY/PAUSE button to play the program tracks.



Note: If the program is already exit, press the PROG button and then press the PLAY/PAUSE button, the program play will start.

Clear the program

In the stop mode, press the PROG button one time and then press the STOP button, the preset programs will be cancelled or power off or open/close CD door.

iPod OPERATION

When connecting an iPod to this iPod Dock, please ensure that the correct removable insert is used.

iPod dock insert

 
This iPod Dock comes with 6 removable inserts.

To place a dock insert:







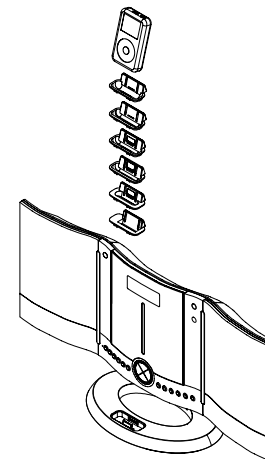






1. Refer to the compatibility table as follow and select the correct dock insert for the iPod. Using the correct insert and ensures the proper fit for your iPod, this can help to reduce the stress on the iPod dock connector when operating the iPod.
2. Carefully align and then gently insert the iPod into the dock. (The iPod must not be in a case or "skin").
3. To remove/replace an dock insert, remove the iPod first, then grip the insert and pull gently upwards.

Note: If iPod unit in PAUSE mode, main console can't detect the iPod to automatic play once connected to the dock, we should press play key to play the iPod.

- iPod could be operated directly to TV/Amplifier equipment when power off.



Dock Insert Compatibility

		Photo 40 / 60GB 	20GB (Color)/ Photo 30GB 	mini 	nano 	40GB 	20GB 
		A	B	C	D	E	F
5G with Video 	30GB		X				
	60GB			X			
	80GB			X			
nano (1st generation) 	1GB				X		
	2GB				X		
	4GB				X		
nano (2nd generation) 	2GB				X		
	4GB				X		
	8GB				X		
photo 	20GB		X				
	30GB		X				
	40GB	X					
	60GB	X					
4G 	20GB						X
	40GB	X					
mini 	4GB			X			
	6GB			X			
3G 	10GB			X			
	15GB			X			
	20GB			X			
	30GB	X					
	40GB					X	

Charging your iPod

Please ensure you are using the correct insert for your iPod and it is properly docked.

FAILURE TO DO SO MAY CAUSE THE iPod can't charging.

Whilst the iPod is docked in the system, it will recharging (until fully charged) by power on the system unit.

Once remove iPod from the docking, main console will go to standby mode then turn off.

Note: there are no charging function while main console at power off mode.

Listening to your iPod

1. Insert the iPod.
2. The main console power on, press the iPod PLAY/PAUSE button, "iPod" will show on the display.



3. Press iPod PLAY/PAUSE button on the unit to commence, control playback and stop.

NOTE: The volume control on the iPod only for adjusting the volume of any headphones connected, it won't affect the volume control of the main console.

TROUBLESHOOTING GUIDE

Should this unit exhibit a problem, check the following before seeking service.

Symptom	Possible cause	Solution
Radio Noise or sound distorted on MW or FM broadcasts.	Station not tuned properly for MW or FM	Retune the MW or FM broadcast station.
	FM: Antenna wire is not extended.	Extend FM antenna wire.
	MW: Frame antenna is not positioned correctly.	Placed the frame antenna until best reception is obtained.
FM STEREO indicator does not light	FM MODE button is set to MONO position.	Set FM MODE to FM STEREO position.
MW or FM, no sound.	TUNER Function button is not pressed.	Press TUNER/BAND function button.
	Volume at minimum	Increase Volume level.

Compact Disc Player

CD Player will not play.	CD Function button is not pressed.	Press the CD Function button.
	CD is not installed or installed incorrectly.	Insert CD with label side out.
CD skips while playing.	Disc is dirty or scratched.	Wipe disc with cloth or use another disc.
Disc is inserted but CD player skips over spot and will not play,	Disc inserted upside down.	Insert disc properly.
	Disc is dirty.	Clean disc.
	Disc is non-standard.	Use correct disc.

iPod Player

Cannot insert the iPod.	The iPod dock insert is not correct.	Check the dock insert.
	There are dust or obstacles in the Dock.	Remove dust or obstacles from the Dock connector, and insert the iPod again.

If normal operation cannot be recovered, unplug the power cord from the outlet and plug it again.