

MF667

USB Modem Quick Guide

Introduction

 
The ZTE MF667 USB modem is a multi-mode USB modem, working in HSPA+/HSUPA/HSDPA/WCDMA/EDGE/GPRS/GSM networks. With USB interface connecting to a laptop or a desktop PC, it integrates the functionality of a modem and a mobile phone (SMS), and combines mobile communication with Internet perfectly. It supports data and SMS services through the mobile phone network, enabling you to communicate anytime and anywhere.

Specification

The following table shows the specification of your device.


Interface type	USB 2.0 HIGH SPEED
Systems supported	Supports most types of laptop and desktop PC.
Operating systems supported	Windows XP (SP3 and above), Vista, Windows 7 MAC 10.4.11 and later Linux (Kernel 2.6.20 later)
Functions	SMS service, Data service, Applications management, support microSD card, etc.

Network standards	HSPA+/HSUPA/HSDPA/WCDMA/EDGE/GPRS/GSM
Transmission speed (Max)	HSPA+: 21.6 Mbps DL HSUPA: 5.76 Mbps UL
Temperature	Storage: -20 °C ~ +70 °C Operation:-10 °C ~ +60 °C
Dimension	76.5 mm * 27.2 mm * 10.5 mm (Without USB Cap)
Weight	About 22 g
microSD capability	Support up to 32 GB microSD card

Notes: The microSD Logo () is a trademark of SD Card Association.

Getting to know your device

 The following figure shows the appearance of the MF667. It is only for your reference. The actual product may be different.

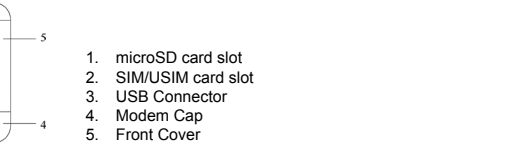


1. microSD card slot
2. SIM/USIM card slot
3. USB Connector
4. Modem Cap
5. Front Cover




Notes: Do not open the front cover rudely so as to avoid the damage of the front cover.

 2. Insert the SIM/USIM card into the SIM/USIM card slot. Insert the SIM/USIM card with the metal contact area facing downwards into the slot, and then push SIM/USIM card as far as possible, shown as the following picture.

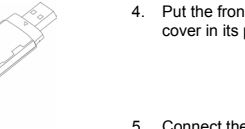


3. Insert the microSD card into the microSD card slot.

 
Notes:
This modem only supports microSD card.
Insert your microSD card into the microSD card slot, shown as the following picture.

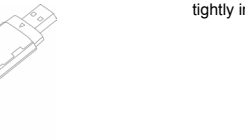

 
4. Put the front cover flatly upon the body of modem and push the front cover to lock the cover in its place.



 
5. Connect the Modem to your laptop or desktop PC.
 - Plug the USB connector into your computer's USB port and make sure that it is tightly inserted.

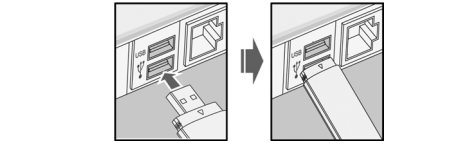

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

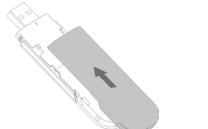

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

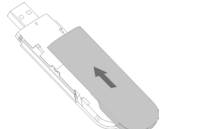

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

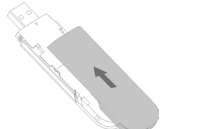

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

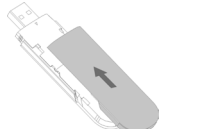

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

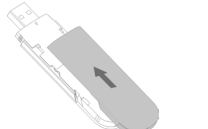

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

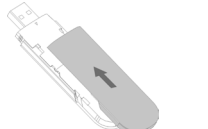

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

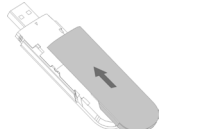

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

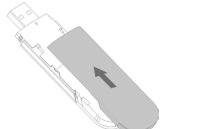

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

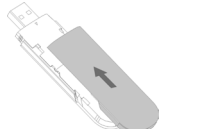

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

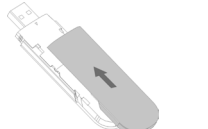

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

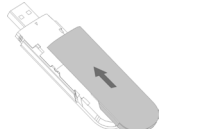

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

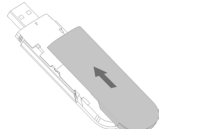

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

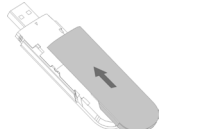

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

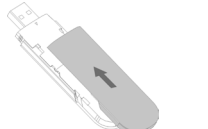

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

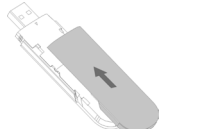

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

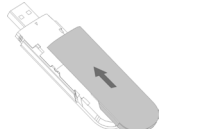

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

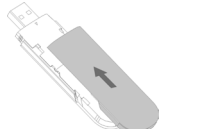

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

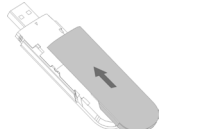

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

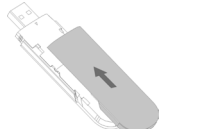

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

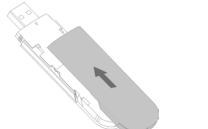

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

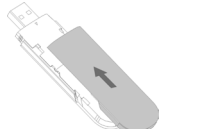

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

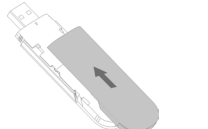

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

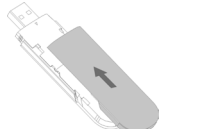

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

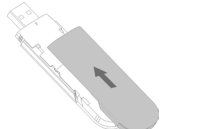

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

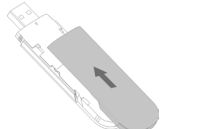

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

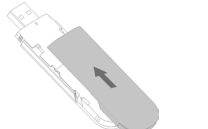

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

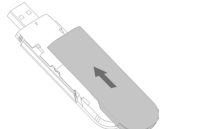

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

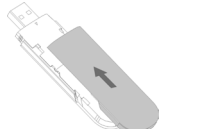

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

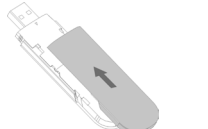

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

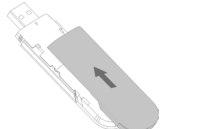

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

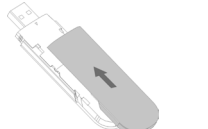

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

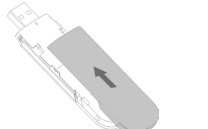

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

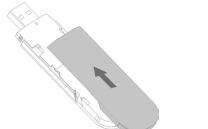

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

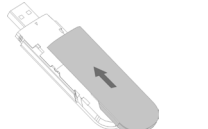

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

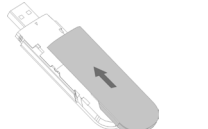

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

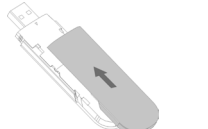

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

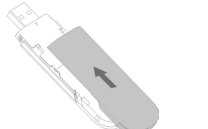

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

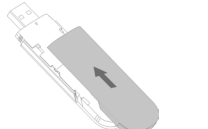

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

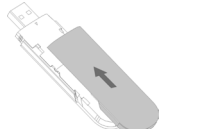

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

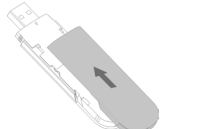

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

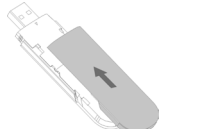

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

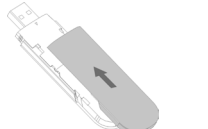

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

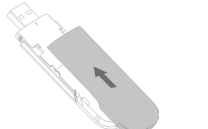

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

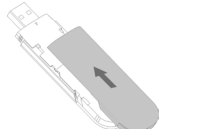

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

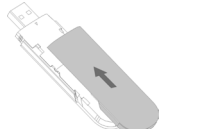

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

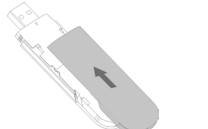

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

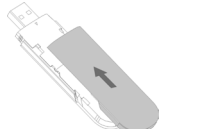

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

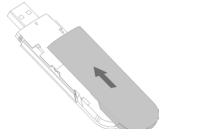

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

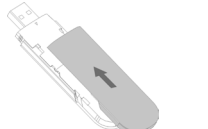

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

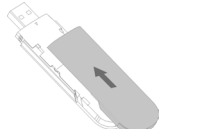

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

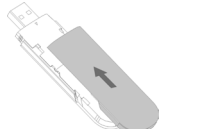

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

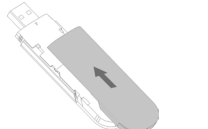

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

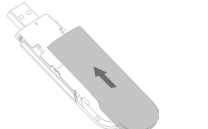

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

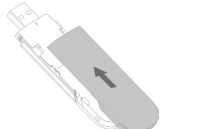

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

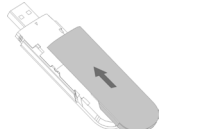

 
- The OS automatically detects and recognizes new hardware and starts the installation wizard.

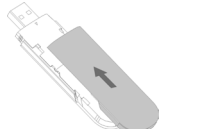

 - The OS automatically detects and recognizes new hardware and starts the installation wizard.

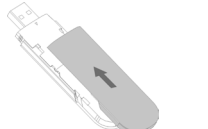

 - The OS automatically detects and recognizes new hardware and starts the installation wizard.

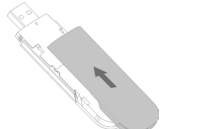

-

LEGAL INFORMATION

Copyright © 2012 ZTE CORPORATION.

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Version No. : R1.0

Edition Time: 2012.01

Manual No. : 079584504257

C € 1588

ZTE CORPORATION

NO. 55, Hi-tech Road South, ShenZhen, P.R.China

Postcode: 518057

URL: <http://www.zte.com.cn>

Tel: +86-755-26779999

E-mail: mobile@zte.com.cn

3. When you connect properly, the system will automatically detect and recognize the new hardware. After a

few seconds, the new icon



is show on the desktop, and then the management software interface

will display as the following picture:



Notes: If the system does not launch installation automatically, you can run the installation program in path of

My Computer > ZTEMODEM > Windows > AutoRun.exe. Then double click



icon.

How to Use Your Modem

Various icons are presented to enable quick operation of the following functions:

	Connect to the Internet.
	Set WAN connection modes and APN .
	Manage the contacts information.
	Send and receive text messages.
	Configure the USB modem.
	View the network related information.

LED Lights

Indication	Modem Status
Red	Power on, but not registered to a network
Green bright	Register to 2G/3G network
Green twinkling	Connect to 2G/3G network

Warning and Notice

To the Owner

- Some electronic devices are susceptible to electromagnetic interference sent by modem if inadequately shielded, such as the electronic system of vehicles. Please consult the manufacturer of the device before using the modem if necessary.
- Operating the modem may interfere with medical devices like hearing aids and pacemakers. Please always keep them more than 20 centimeters away from such medical devices when they are turned on. Turn the modem off if necessary. Consult a physician or the manufacturer of the medical device before using the modem.

LED Lights

Indication	Modem Status
Red	Power on, but not registered to a network
Green bright	Register to 2G/3G network
Green twinkling	Connect to 2G/3G network

Warning and Notice

To the Owner

- Some electronic devices are susceptible to electromagnetic interference sent by modem if inadequately shielded, such as the electronic system of vehicles. Please consult the manufacturer of the device before using the modem if necessary.
- Operating the modem may interfere with medical devices like hearing aids and pacemakers. Please always keep them more than 20 centimeters away from such medical devices when they are turned on. Turn the modem off if necessary. Consult a physician or the manufacturer of the medical device before using the modem.

warranties of merchantability and fitness for a particular purpose, unless otherwise required under the

mandatory provisions of the law.

Limited Warranty

- This warranty does not apply to defects or errors in the Product caused by:
 - Reasonable abrasion.
 - End User's failure to follow ZTE's installation, operation or maintenance instructions or procedures.
 - End User's mishandling, misuse, negligence, or improper installation, disassembly, storage, servicing or operation of the Product.
 - Modifications or repairs not made by ZTE or a ZTE-certified individual.
 - Power failures, surges, fire, flood, accidents, actions of third parties or other events outside ZTE's reasonable control.
 - Usage of third-party products, or usage in conjunction with third-party products provided that such defects are due to the combined usage.
 - Any other cause beyond the range of normal usage intended for the Product.

How to Get Help

You can get Help by:

- Clicking **Help** on the software.
- Sending E-mail to **mobile@zte.com.cn**
- Visiting **<http://www.zte.com.cn>**
- Calling Service Hotline: **+86-755-26779999**

End User shall have no right to reject or return the Product, or receive a refund for the Product from ZTE under the above-mentioned situations.

- This warranty is End User's sole remedy and ZTE's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied