

Welcome

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola V547 GSM wireless phone.



Welcome - 1

www.motorola.com

MOTOROLA and the Stylised M Logo are registered in the US Patent & Trademark Office.

The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under licence.

Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

All other product or service names are the property of their respective owners.

© Motorola, Inc., 2004.

The information contained in Motorola's user's guides is believed to be correct at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice. The contents of Motorola's user's guides are provided "as is." Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability, or contents of this guide.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any licence under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free licence to use that arises by operation of law in the sale of a product.

While Products specifications and features may be subject to change without notice, we are making every possible effort to ensure that user manuals are updated on a regular basis to reflect product functionality revisions. However, in the unlikely event that your manual version does not fully reflect the core functionality of your product, please let us know. You may also be able to access up-to-date versions of our manuals in the consumer section of our Motorola web site, at <http://www.motorola.com>.

Contents

Safety and General Information	7
Getting Started	14
About This Guide	14
Installing the SIM Card	14
Battery Use	15
Installing the Battery	17
Charging the Battery	17
Turning Your Phone On	18
Adjusting Volume	19
Making a Call	19
Answering a Call	19
Viewing Your Phone Number	20
Highlight Features	21
Taking and Sending a Photo	21
Recording Video Clips	23
Sending a Multimedia Message	24
Receiving a Multimedia Message	26
Using the Phonebook	27
Learning to Use Your Phone	30
Using the Display	30
Using the 5-Way Navigation Key	34
Using Menus	35
Entering Text	38
Using the Smart Key	47
Using the External Display	47
Using the Handsfree Speaker	48

Changing a Code, PIN, or Password	48
Locking and Unlocking Your Phone	49
If You Forget a Code, PIN, or Password	50
Setting Up Your Phone	51
Storing Your Name and Phone Number	51
Setting the Time and Date	51
Setting a Ring Style	51
Setting Answer Options	52
Setting a Wallpaper Image	52
Setting a Screen Saver Image	53
Setting Display Skin	54
Setting Display Brightness	54
Adjusting the Backlight	55
Setting Display Timeout	55
Conserving Battery Power	55
Calling Features	56
Changing the Active Line	56
Redialling a Number	56
Using Automatic Redial	56
Using Caller ID	57
Cancelling an Incoming Call	58
Turning Off a Call Alert	58
Calling an Emergency Number	58
Dialling International Numbers	59
Viewing Recent Calls	59
Returning an Unanswered Call	60
Using the Notepad	61
Attaching a Number	61
Calling With Speed Dial	61
Calling With 1-Touch Dial	62

Using Voicemail	62
Using Call Waiting	64
Putting a Call On Hold	64
Transferring a Call	64
Phone Features	66
Menu Map	66
Feature Quick Reference	68
Specific Absorption Rate Data	85
Index	87

Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.

The information provided in this document supersedes the general safety information in user guides published prior to December 1, 2002.

Exposure To Radio Frequency (RF) Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following procedures.

External Antenna Care

Use only the supplied or Motorola-approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the phone.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed. In addition, use of unauthorised antennas may result in non-compliance with the local regulatory requirements in your country.

Safety and General Information - 7

Phone Operation

When placing or receiving a phone call, hold your phone as you would a wireline telephone.

Body-Worn Operation

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines. If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 1 inch (2.5 centimetres) from your body when transmitting.

Data Operation

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 1 inch (2.5 centimetres) from your body.

Approved Accessories

Use of accessories not approved by Motorola, including but not limited to batteries and antenna, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at www.Motorola.com.

RF Energy Interference/Compatibility

Note: Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.

Facilities

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

Aircraft

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

Medical Devices

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 6 inches (15 centimetres) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 6 inches (15 centimetres) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimise the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your GP may be able to assist you in obtaining this information.

Use While Driving

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- Give full attention to driving and to the road.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Operational Warnings

For Vehicles With an Air Bag

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

Potentially Explosive Atmospheres

Turn off your phone prior to entering any area with a potentially explosive atmosphere, unless it is a phone type especially qualified for use in such areas and certified as "Intrinsically Safe." Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

Note: The areas with potentially explosive atmospheres referred to above include fuelling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.





 
Blasting Caps and Areas

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off electronic devices." Obey all signs and instructions.

Batteries

Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewellery, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, bag, or other container with metal objects. **Use only Motorola original batteries and chargers.**

Your battery or phone may contain symbols, defined as follows:

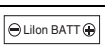Symbol	Definition
	Important safety information will follow.
	Your battery or phone should not be disposed of in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Your battery or phone should not be thrown in the trash.
	Your phone contains an internal lithium ion battery.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to blinking lights, such as when watching television

or playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor before playing video games on your phone or enabling a blinking-lights feature on your phone. (The blinking-light feature is not available on all products.)

Parents should monitor their children's use of video game or other features that incorporate blinking lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a blinking-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

Repetitive Motion Injuries

 
When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.

European Union Directives Conformance Statement

Hereby, Motorola declares that this product is in compliance with

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

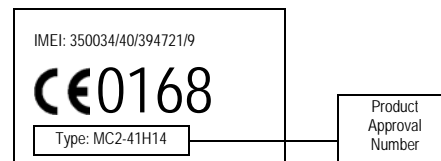

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (the R&TTE Directive) at www.motorola.com/rtte - to find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site

Getting Started

About This Guide

This guide describes the basic features of your Motorola wireless phone.

To obtain a copy of this guide, see the Motorola Web site at:

<http://hellomoto.com>

Optional Features



This label identifies an optional network, SIM card, or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

Optional Accessories

 


This label identifies a feature that requires an optional Motorola Original™ accessory.

Installing the SIM Card


Your Subscriber Identity Module (SIM) card contains your phone number, service details, and phonebook/message memory.

Caution: Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

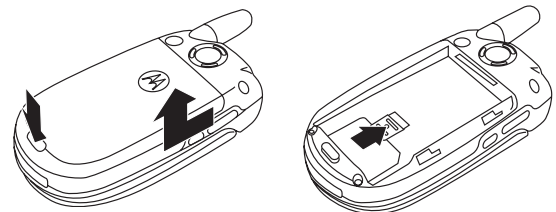


1

 2

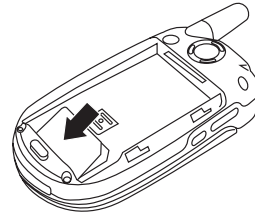

3

 4

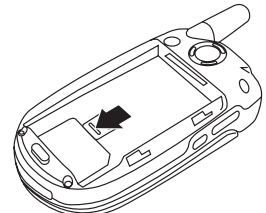

Battery Use

Battery performance depends on many factors, including your wireless carrier's network configuration; signal strength; the temperature at which you operate your phone; the features and/or settings you select and use; items attached to your phone's accessory connector; and your voice, data, and other application usage patterns.

Caution: To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximise your battery's performance:

- Always use Motorola Original™ batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- New batteries or batteries that have been stored for a long time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.



 
The rechargeable batteries that power this phone must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling centre for proper disposal methods.

Warning: Never dispose of batteries in a fire because they may explode.

Installing the Battery





™ Your phone is designed to use only Motorola Original batteries and accessories.

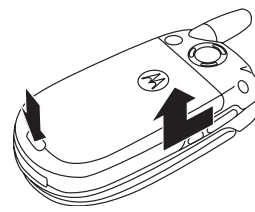

1

  2

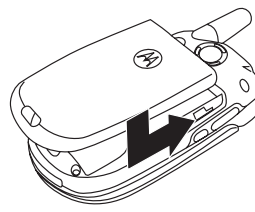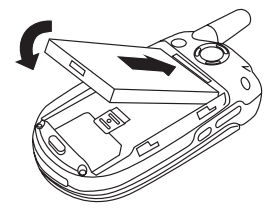


3

Charging the Battery

New batteries are shipped partially charged. Before you can use your phone, install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.

Action

 - 1 Plug the travel charger into the bottom of your phone.

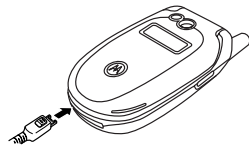


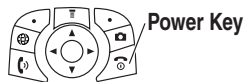 
- 2 Plug the other end of the travel charger into the appropriate electrical outlet.
- 3 When your phone indicates **Charge Complete**, remove the travel charger.


Tip: You can safely leave the travel charger connected to your phone after charging is complete. This will not damage the battery.

Turning Your Phone On


Action

- 1 Press and hold  for 2 seconds to turn on the phone.



- 2 If necessary, enter your SIM card PIN code and press the  key to unlock the SIM card.

Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays **SIM Blocked**.

- 3 If necessary, enter your 4-digit unlock code and press the  key to unlock the phone.

Adjusting Volume



Press up or down on volume keys to:



- increase or decrease earpiece volume during a call
- turn off an incoming call alert
- increase or decrease the ringer volume setting when the home screen is visible



Tip: At the lowest volume setting, press the down volume key once to switch to vibrate alert. Press it again to switch to silent alert. Press the up volume key to cycle back to vibrate alert, then ring alert.

Making a Call



Press	To
1 keypad keys	dial the phone number
2 	make the call
3 	end the call and "hang up" the phone when you are finished


Answering a Call

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

Press	To
1 	answer the call
2 	end the call and "hang up" the phone when you are finished

Viewing Your Phone Number

To view your phone number from the home screen, press  .

While you are on a call, press  > **My Tel. Numbers**.

 
Note: Your phone number must be stored on your SIM card to use this feature. To store your phone number on the SIM card, see page 51. If you do not know your phone number, contact your service provider.

Highlight Features

You can do much more with your phone than make and receive calls! This section describes some of your phone's highlight features.

Taking and Sending a Photo

Press **Ⓜ** to display the camera viewfinder:

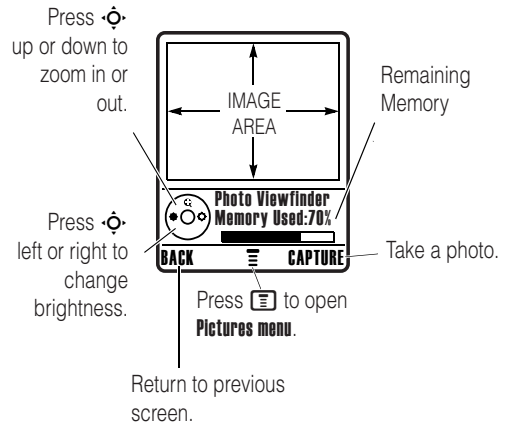

Highlight Features - 21

Point the camera lens at the photo subject, then:

Press	To
1 CAPTURE key	take a photo
2 STORE key	view storage options
	If you choose to store the photo, continue to step 3.
or	
DISCARD key	delete the photo and return to the active viewfinder
3 Ⓜ	scroll to Send in Message, Store Only, Apply as Wallpaper, Apply as Screen Saver, or Apply as Phonebook Entry
4 SELECT key	perform the storage option of your choice

Press **Ⓜ** to open the **Pictures Menu** when the camera is active. The **Pictures Menu** can include the following options:


Option	Description
Go To Pictures	View pictures and photos stored on your phone.
Auto-Timed Capture	Set a timer for the camera to take a photo.
Delete All	Delete all picture files captured.
Pictures Setup	Open the setup menu to adjust picture settings.
View Free Space	See how much memory remains.

Recording Video Clips

To record a video on your phone:

Find the Feature **Ⓜ** > **Multimedia** > **Videos**
> **New Video**

The active viewfinder image displays.

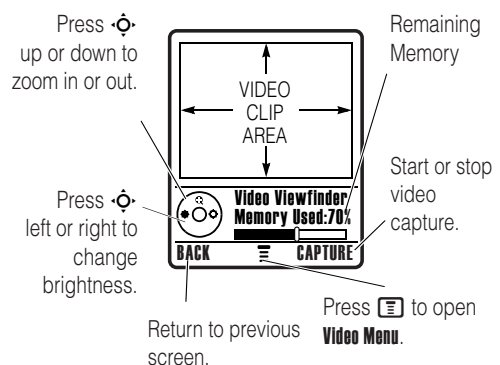 

Note: You can only zoom before you start recording.

Point the camera lens at the video subject, then:

Press	To
1 CAPTURE key	start the video
2 STOP key	stop the video

Press	To
3 STORE key	view storage options If you choose to store the video, continue to step 4.
or	
DISCARD key	delete the video and return to active viewfinder
4 UP or DOWN key	scroll to Send or Store Only
5 SELECT key	select the option

Press **MENU** to open the **Videos Menu** when the camera is active. The menu can include the following options:

Option	Description
Go To Videos	View videos stored on your phone.
Videos Setup	Open the setup menu to adjust picture and video settings. If you want to send MMS messages with videos, you might need to set a shorter video length. If necessary, ask your service provider about the network limitations for video messages.
View Free Space	See how much memory remains.

Sending a Multimedia Message



A *Multimedia Messaging Service (MMS)* message contains one or more slides with text and media objects (including photos, pictures, animations, sounds, voice records, and/or video clips). You can send the multimedia message to other wireless phone users, and to email addresses.

Press	To
15 UP key	<ul style="list-style-type: none"> Highlight (One Time Entry) to enter one or more phone numbers and/or email addresses. Highlight (New Phonebook Entry) to enter a number/address and add it to the phonebook. Or highlight an existing phonebook entry.
16 SELECT key	select (One Time Entry) or (New Phonebook Entry) and enter a number/address
or	
ADD key	add a phonebook entry to the list of recipients
17 DONE key	store the numbers/addresses
18 UP key	scroll to Subject
19 CHANGE key	select Subject
20 keypad keys	enter the subject
21 OK key	store the subject
22 SEND key	send the message



Receiving a Multimedia Message



When you receive a multimedia message or letter, your phone displays the **Message Waiting** indicator and a **New Message** notification, and sounds an alert.

Find the Feature **MENU** > **Messages** > **Create Message**
> **New Multimedia Msg**

Press	To
1 keypad keys	enter slide text
2 MENU key	open the MMS Menu
3 UP key	scroll to Insert
4 SELECT key	display a list of items you can insert
5 UP key	scroll to a type of object to insert
6 SELECT key	select the object type
7 UP key	highlight the object you want
8 SELECT key	insert the object To add another slide to the message, continue. To send the message, go to step 14.
9 MENU key	open the MMS Menu to insert a new slide
10 UP key	scroll to Insert
11 SELECT key	display a list of items you can insert
12 UP key	scroll to New Page
13 SELECT key	insert a new slide after the current slide Repeat steps 1 to 8 to enter contents for the new slide.
14 OK key	store the message

Press	To
READ key	open the message

Multimedia messages that you receive can contain different media objects:

- Photos, pictures, and animations are displayed as you read the message.
- A sound file or video clip begins playing when its slide is displayed. Use the volume keys to adjust the volume as the sound file or video clip plays.
Note: In a multimedia letter, you may have to highlight an indicator in the text to play a sound file or video clip.
- Attached files are added to the end of the message. To open the attachment, highlight the file indicator/filename and press the **VIEW** key (image file type), **PLAY** key (sound file or video clip), or **OPEN** key (object such as phonebook or datebook entry, or unknown file type).

Using the Phonebook

This section briefly describes basic phonebook operations. For more information about using the phonebook, see page 71.

Storing a Phone Number

Enter a phone number in the home screen, then press the **STORE** key to create a phonebook entry with that number. Fill in the other fields to complete the entry.

Select **MORE** to store another number (for example, a work number) under the same Name.

Recording a Voice Name

When creating a phonebook entry, scroll to **Voice Name** and press the **RECORD** key. Press and release the voice key and say the entry's name (within 2 seconds). When prompted, press and release the voice key and repeat the name. Press the **DONE** key to store the voice name.

Note: This option is not available for entries stored on the SIM card.

Storing a Picture for Caller ID

You can store a picture for a phonebook entry. The picture appears when you receive calls from the entry.

When creating a phonebook entry, scroll to **Picture** and press the **CHANGE** key. Press **⓪** to select a picture, and press the **SELECT** key to store it for the entry.

Note: This option is not available for entries stored on the SIM card.

Dialling a Number

Press **☰** > **Phonebook** > *entry to call* **☎**.

Tip: To quickly highlight entries in your **Phonebook** list: If your entries are sorted by **Speed No.**, press an entry's speed number to highlight it. For example, press **1** **5** for entry number 15. If your entries are sorted by **Name**, **Voice Name**, or **Email**, enter the first letter of the entry's name to highlight it. For example, press **3** **5** for the first entry that starts with "K".

Voice Dialling a Number

Press and release the voice key, and say the entry's name (within 2 seconds).

Note: To voice dial a phonebook entry you must first record a voice name for the entry (see page 28).

Sorting Phonebook Entries

Press **☰** > **Phonebook**, press **☰** > **Setup** > **Sort by**, then select whether you want to sort the phonebook list by **Name**, **Speed No.**, **Voice Name**, or **Email**.

When sorting by name, you can view **All** numbers or just the **Primary** number for each name. To set the primary number for a name, see page 73.

Viewing Entries By Category

Press **☰** > **Phonebook**, press **☰** > **Categories**, then select whether you want to view **All** entries, entries in a predefined category (**Business**, **Personal**, **General**, **VIPs**), or entries in a category you created.

To set the category for a phonebook entry, see page 72.

Setting Picture ID View

 
Press **☰** > **Phonebook**, press **☰** > **Setup** > **View by** > **Picture**.

Learning to Use Your Phone

See page 1 for a basic phone diagram.

Using the Display

The *home screen* displays when you are *not* on a call or using the menu. You must be in the home screen to dial a phone number.

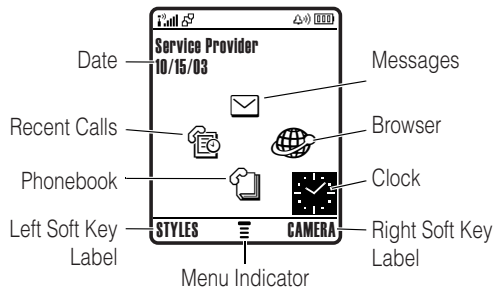

Press the 5-way navigation key (⬇️) left, right, up, or down to select one of the menu feature icons. If you select a menu icon by mistake, press (⏪) to return to the home screen.

 
Note: Your home screen may look different from the display shown above. For example, your service provider may hide the menu feature icons to allow a better view of the wallpaper image. You can still select the menu icons when they are hidden from view. To show or hide the menu icons, see page 74.

The (☰) (menu) indicator indicates that you can press the menu key (⏪) to enter the main menu.

Labels at the bottom corners of the display show the current soft key functions. Press the left or right soft key to perform the function indicated by the left or right soft key label.

Your phone can display an analogue or digital clock in the home screen (see page 74).

The following status indicators can display:

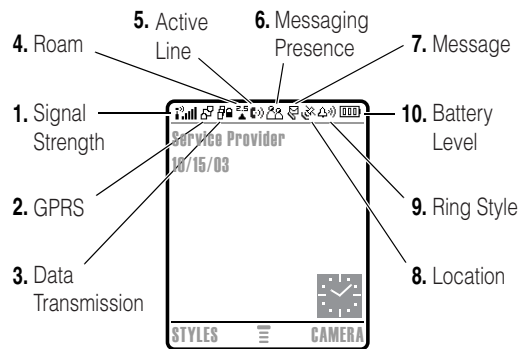

1. Signal Strength Indicator

Vertical bars show the strength of the network connection. You cannot make or receive calls when the (no signal) indicator or (no transmit) indicator displays.

2. GPRS Indicator



Shows that your phone is using a high-speed General Packet Radio Service (GPRS) network connection. GPRS allows faster data transfer speeds. Indicators can include:

(GPRS icon) = GPRS PDP context active

(GPRS icon) = GPRS packet data available

3. Data Transmission Indicator

Shows connection and data transmission status. Indicators can include:

(Secure icon) = secure packet data transfer

(Insecure icon) = insecure packet data transfer

(Secure app icon) = secure application connection

(Insecure app icon) = insecure application connection

(CSD icon) = secure Circuit Switch Data (CSD) call

(Insecure CSD icon) = insecure CSD call

(Bluetooth icon) = Bluetooth® connection

4. Roam Indicator



Shows when your phone is seeking or using another network outside your home network. Indicators can include:

(2.5G home icon) = 2.5G home

(2.5G roam icon) = 2.5G roam

(2G home icon) = 2G home

(2G roam icon) = 2G roam

5. Active Line Indicator



Shows (L1) to indicate an active call, or (L1) to indicate when call diverting is on. Icons for dual-line-enabled SIM cards can include:

(L1 icon) = line 1 active

(L2 icon) = line 2 active

(L1 icon) = line 1 active, call divert on

(L2 icon) = line 2 active, call divert on

6. Messaging Presence Indicator



Shows when Instant Messaging (IM) is active. Indicators can include:

(IM active icon) = IM active

(Busy icon) = busy

(Invisible icon) = invisible to IM

When a Java™ application is active, a (Java midlet) indicator can display in this location.

7. Message Indicator



Displays when you receive a new message. Indicators can include:

(Text icon) = text message

(Voicemail icon) = voicemail message

(IM icon) = IM message

(Chat icon) = active chat session

(Voicemail and text icon) = voicemail and text message

8. Location Indicator



Your phone may be able to send location information to the network during an emergency call. Indicators show when your phone is sending location information:

(Location on icon) = location on

(Location off icon) = location off

9. Ring Style Indicator

Shows the ring style setting.

🔊 = loud ring

🔊 = soft ring

🔊 = vibrate

🔊 = vibrate and ring

🔊 = silent

10. Battery Level Indicator

Vertical bars show the battery charge level. Recharge the battery when **Low Battery** displays and the battery alert sounds.

 
Using the 5-Way Navigation Key

Use the 5-way navigation key (⬆️) to scroll up, down, left, or right through the menu system, highlight menu items, change feature settings, and play games. Press the centre select button to select a highlighted menu item.



Using Menus

From the home screen, press **Menu** to enter the main menu.

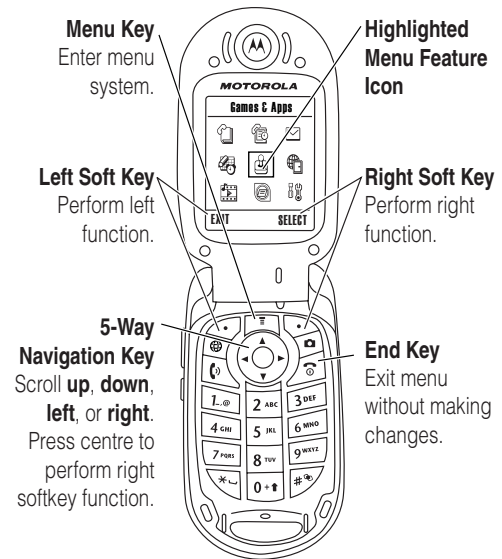

Press **5-Way Navigation Key** to scroll to and highlight a menu feature icon in the main menu. The following icons represent features that may display in the main menu, depending on your service provider and service subscription options.

Icon	Feature	Icon	Feature
	Games & Apps		Multimedia
	Office Tools		Settings
	IM		Web Access
	Phonebook		Recent Calls
	Messages		Chat

Selecting a Menu Feature

 
To select a menu feature, starting from the home screen:

Find the Feature **Menu** > Recent Calls > Dialed Calls

This example shows that from the home screen, you must press **Menu**, scroll to and select **Recent Calls** from the main menu, then scroll to and select **Dialed Calls**. Press **5-Way Navigation Key** to scroll, and the left/right soft keys to select the functions displayed in the bottom left and right corners of the display.

Selecting a Feature Option

Some features require you to select an option from a list:

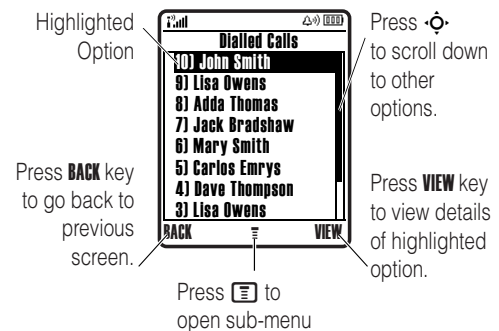

Press **5-Way Navigation Key** to scroll up or down to highlight the option you want.

In a numbered list, press a number key to highlight the option.

 
In an alphabetised list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list option.

When an option has a list of possible values, press **5-Way Navigation Key** left or right to scroll through and select a value.


When an option has a list of possible numeric values, press a number key to set the value.

Entering Text

Some features require you to enter information.

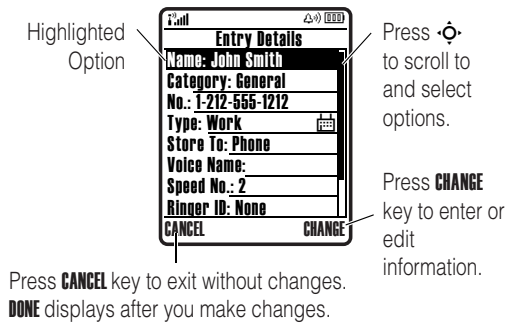

 The message centre lets you compose and send text messages. A *Character Counter* indicates how many more characters will fit in the message.

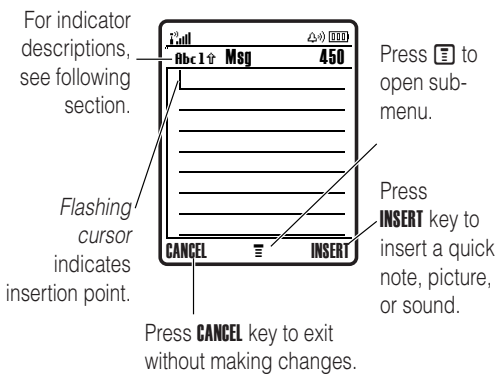

Choosing a Text Entry Mode

Multiple text entry modes make it easy for you to enter names, numbers, and messages. The mode you select remains active until you select another mode.

Press [#] in any text entry screen to select one of the following entry modes:

Primary	The primary text entry mode (see below to set).
Numeric	Enter numbers only (see page 45).
Symbol	Enter symbols only (see page 45).
Secondary	The secondary text entry mode (see below to set).

Alternatively, you can select a text entry mode in any text entry screen by pressing [≡] > **Entry Mode**.

Setting Up a Text Entry Mode

Press [≡] > **Entry Setup** from any text entry screen. Select **Primary Setup** or **Secondary Setup**, and choose:

iTAP	Let the phone predict each word as you press keys (see page 43).
Tap	Enter letters and numbers by pressing a key one or more times.
Tap Extended	Enter letters, numbers, and symbols by pressing a key one or more times.
None	Hide the Secondary setting (only available for Secondary Setup).

Using Capitalisation

Press [Q] in any text entry screen to change text case. The following indicators show capitalisation status:

abc = no capital letters Abc = capitalise next letter only
 ABC = all capital letters

Text Entry Mode Indicators

When you select the **Primary** or **Secondary** text entry mode, the following indicators identify the text entry setting:

Primary	Second.	
1	2	Tap, no capital letters
1↑	2↑	Tap, capitalise next letter only
1↑	2↑	Tap, all capital letters
[Q]	[Q]	iTAP, no capital letters
[Q]	[Q]	iTAP, capitalise next letter only
[Q]	[Q]	iTAP, all capital letters

The following indicators identify Numeric or Symbol entry mode:

123 = numeric mode @ = symbol mode

Using Tap Mode


This is the standard mode for entering text on your phone.

Tap mode cycles through the letters and number of the key you press. Tap Extended mode also cycles through additional symbols as shown in the chart on page 42.


Press	To
1 A keypad key one or more times	select a letter, number, or symbol
2 keypad keys	enter remaining characters. Tip: Press ⌵ right to accept a word completion, or [X] to insert a space.
3 OK key	store the text

In a text entry screen, you can press [#] to switch entry modes. If **Tap** or **Tap Extended** is not available as the **Primary** or **Secondary** entry mode, see page 39.

 When you enter text with **Tap** or **Tap Extended** mode, the soft key functions change.

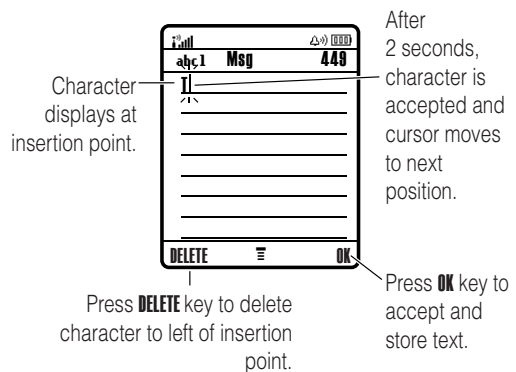

 When you enter 3 or more characters in a row, your phone may guess the rest of the word. For example, if you enter **prog** you might see:

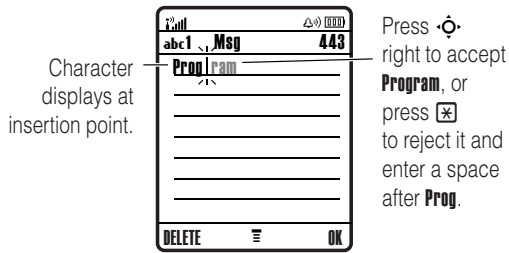


If you want a different word (such as **progress**), continue pressing keypad keys to enter the remaining characters.

Character Chart

Use this chart as a guide for entering characters with **Tap Extended** mode.

1	.?! , @ ' - _ : ; () & " - 1 0 ; j % £ \$ ¥ ¢ € + x * / \ [] = > < # \$
2	a b c 2 á à â ã ç æ
3	d e f 3 é ê ë è
4	g h i 4 í î ï
5	j k l 5
6	m n o 6 ñ ó ô õ ö ø
7	p q r s 7
8	t u v 8 ú û ü ü
9	w x y z 9

 For example, if you press **[7][7][6][4]**, letter combinations that match your keypresses display:

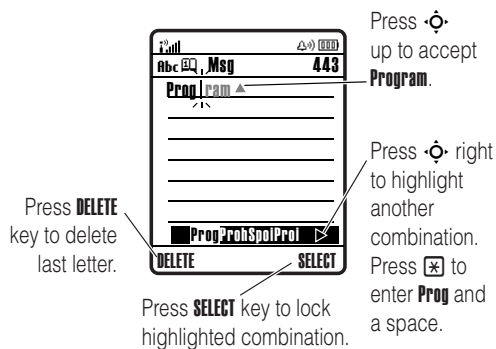

If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining characters.

Entering Words

In a text entry screen, you can press **[#]** to switch entry modes. An indicator shows which mode is active (see page 40). If **iTAP** mode is not available as the **Primary** or **Secondary** entry mode, see page 39.

Press	To
1 keypad keys (one press per letter)	Show possible letter combinations at the bottom of the display
2 [arrow left/right]	highlight the combination you want

0	change text case, for capital letters
[X]	enter a space (hold to enter a return)
#	change text entry mode (hold for default)

*Note: This chart may not reflect the exact character set available on your phone. In an email address or URL editor, **1** first shows common characters for that editor.*

Tap Mode Text Entry Rules

- Press a keypad key repeatedly to cycle through its characters.
- Press [arrow left/right] to move the flashing cursor to the left or right in a text message.
- The first character of every sentence is capitalised. If necessary, press [arrow down] to force the character to lowercase before the cursor moves to the next position.
- If you enter or edit information and do not want to save the changes, press [X] to exit without saving.

Using iTAP™ Mode

iTAP software provides a predictive text entry mode that lets you enter a word using one keypress per letter. This can be faster than **Tap** mode, because your phone combines the keypresses into common words.

Press	To
3 SELECT key	lock a highlighted combination You can press keypad keys to add more letters to the end of the combination.
or [X]	enter the highlighted combination when it spells a word A space is automatically inserted after the word.

If you enter a word your phone does not recognise, the phone stores it to use as one of your word options. When you fill memory space for unrecognised words, your phone deletes the oldest words to add new words.

Using Numeric Mode

In a text entry screen, press **[#]** to switch entry modes until the **123** (numeric) indicator displays.

Press keypad keys to enter the numbers you want. When you finish entering numbers, press **[#]** to switch to another entry mode.

Using Symbol Mode

In a text entry screen, press **[#]** to switch entry modes until the **@** (symbol) indicator displays.

Press	To
1 keypad keys (one press per symbol)	show possible symbol combinations at the bottom of the display
2 left or right	highlight the combination you want
3 SELECT key	lock a highlighted combination
	You can press keypad keys to add more symbols to the end of the combination.
or	
	enter the highlighted combination

Symbol Chart

Use this chart as a guide for entering characters with symbol mode.

1	.?! , @ ' - _ : ; () & " ~ 1 0 ç % £ \$ ¥ ¢ € + x * / \ [] = > < # §
2	@ _ \ α β
3	/ : ; δ Δ ε φ Φ
4	" & ' γ Γ η ι
5	() [] {} κ λ Λ
6	ç ~ μ ν ω Ω
7	< > = π Π ρ σ Σ
8	\$ £ ¥ ¢ € θ Θ τ υ
9	# % * ζ ξ Ξ χ ψ Ψ
0	+ - x * / = > < # §

	enter a space (hold to enter a return)
	change text entry mode (hold for default)

Note: This chart may not reflect the exact character set available on your phone. In an email address or URL editor, 1 first shows common characters for that editor.

Deleting Letters and Words

Place the cursor to the right of the text you want to delete, and then:

Action

Press the **DELETE** key to delete one letter at a time.

Hold the **DELETE** key to delete all the text.

Using the Smart Key

The smart key (see the diagram on page 1) gives you another way to perform many basic phone functions. It anticipates the next action you are likely to perform. For example, when you highlight a menu item, you can press the smart key to select it. You can use the smart key to make and end calls, turn features on and off, and open your phonebook. The smart key usually performs the same function as the right soft key.

Using the External Display

When the flip is closed, the external display shows time and phone status information. It also displays messages to notify you of incoming calls and other events. See page 30 for descriptions of the status indicators that may appear in the external display.

Note: You cannot make or receive calls when the phone is closed unless you attach a headset.

Using the Handsfree Speaker

When you activate your phone's built-in handsfree speaker, you can talk to the other party without holding the phone to your ear.

Press the **SPEAKER** key to turn the handsfree speaker on or off during a call.

When you turn the handsfree speaker on, your phone displays **Speaker On** in the home screen. The handsfree speaker remains on until you press the **SPEAKER** key again or turn the phone off.

Note: The handsfree speaker is disabled when you connect your phone to a handsfree car kit or headset accessory.

Changing a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset these codes before you receive your phone.

If your service provider has not reset these codes, we recommend that you change them to prevent others from accessing your personal information. The unlock code must contain 4 digits, and the security code must contain 6 digits.

You can also reset your SIM card PIN code, or PIN2 code if necessary.

To change a code or password:

Find the Feature > **Settings** > **Security**
> **New Passwords**

Locking and Unlocking Your Phone

You can lock your phone manually or set the phone to lock automatically whenever you turn it off.

To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, but you must unlock it to answer.

You can make emergency calls on your phone even when it is locked (see page 58).

Locking Your Phone Manually

Find the Feature > **Settings** > **Security**
> **Phone Lock** > **Lock Now**

Press	To
1 keypad keys	enter your unlock code
2 OK key	lock the phone

Unlocking Your Phone

Your phone's unlock code is originally set to 1234. Your service provider may reset the unlock code to the last 4 digits of your phone number.

At the **Enter Unlock Code** prompt:

Press	To
1 keypad keys	enter your unlock code
2 OK key	unlock your phone

Setting Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off:


Find the Feature  > **Settings** > **Security**
> **Phone Lock** > **Automatic Lock**
> **On**

Press	To
1 keypad keys	enter your unlock code
2 OK key	activate automatic lock

If You Forget a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset the unlock code to the last 4 digits of your phone number before you receive your phone.

If you forget your unlock code, try entering 1234 or the last 4 digits of your phone number. If that does not work, at the **Enter Unlock Code** prompt:

Press	To
1 	display the unlock code bypass screen
2 keypad keys	enter your security code
3 OK key	submit your security code

If you forget your security code, SIM card PIN code, or PIN2 code, contact your service provider.



Setting Up Your Phone

Storing Your Name and Phone Number



To store or edit your name and phone number information on your SIM card:

Find the Feature  > **Settings** > **Phone Status**
> **My Tel. Numbers**

Shortcut: Press   from the home screen to edit your name and phone number.

If you do not know your phone number, contact your service provider.

Setting the Time and Date

Your phone uses the time and date for the **Datebook**. To change the time or date on your phone.

Find the Feature  > **Settings** > **Initial Setup**
> **Time and Date** > *time* or *date*



If you see an **Autoupdate** option under **Time and Date**, you can select **Autoupdate** > **On** to have the network update your phone's time and date automatically.

Setting a Ring Style


Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an *alert*.

Setting Up Your Phone - 51

You can select one of five different ring styles. The ring style indicator in the display shows the current ring style (see page 34).

To set a ring style:

Find the Feature  > **Settings** > **Ring Styles** > **Style**

Press	To
1 	scroll to the ring style
2 SELECT key	select the ring style

Each ring style contains settings for specific event alerts, ringer ID, and ringer and keypad volume. To change these settings, press  > **Settings** > **Ring Styles** > *style Detail*.

Setting Answer Options

You can activate additional modes for answering calls:


 
 
 
Find the Feature  > **Settings** > **In-Call Setup**
> **Answer Options**

Option	Description
Multi-key	answer by pressing any key
Open to Answer	answer by opening the phone

Setting a Wallpaper Image

You can set a photo, picture, or animation as a wallpaper (background) image in your phone's home screen. The wallpaper image appears as a faint watermark in text and menu displays.

Find the Feature  > **Settings** > **Personalise**
> **Wallpaper**

Press	To
1 	scroll to Picture
2 CHANGE key	open the picture viewer
3  up or down	scroll to a picture/animation
	Scroll to (None) to turn off the wallpaper image.
4 SELECT key	select the image
5 	scroll to Layout
6 CHANGE key	adjust the image layout
7 	scroll to Centre , Tile , or Fit-to-screen
	Centre places the image in the centre of the display.
	Tile fills the display with multiple copies of the image.
	Fit-to-screen resizes the image, if necessary, to fit the display.
8 SELECT key	confirm the layout setting
9 BACK key	save wallpaper settings


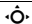 


Setting a Screen Saver Image

Set a photo, picture, or animation as a screen saver image.

The screen saver image displays when the phone is on and no activity is detected for a specified time. The image shrinks to fill the display, if necessary. An animation repeats for one minute, then the first frame of the animation displays.

Tip: Turn off the screen saver to extend battery life.

Find the Feature  > **Settings** > **Personalise**
> **Screen Saver**

Press	To
1 	scroll to Picture
2 CHANGE key	open the picture viewer
3  up or down	scroll to a picture/animation
	Scroll to (None) to turn off the screen saver image.
4 SELECT key	select the image
5 	scroll to Delay
6 CHANGE key	set the delay interval
7 	scroll to the inactivity interval that triggers the screen saver
8 SELECT key	confirm the delay setting
9 BACK key	save the screen saver settings

Setting Display Skin

Change the look and feel of your phone's display by selecting a different skin setting.

Find the Feature  > **Settings** > **Personalise** > **Skin**

Setting Display Brightness

Find the Feature  > **Settings** > **Initial Setup**
> **Brightness**

Adjusting the Backlight

Set the amount of time that the display and keypad backlights remain on.

Find the Feature  > **Settings** > **Initial Setup**
> **Backlight**

Setting Display Timeout

Set the display to turn itself off when no activity is detected for a specified time.

Find the Feature  > **Settings** > **Initial Setup**
> **Display Timeout**

Conserving Battery Power

Some networks and phones include a battery save setting to extend battery life. When this feature is activated, your phone automatically turns off the keypad backlight when it detects that enough ambient light is available.

Find the Feature  > **Settings** > **Initial Setup**
> **Battery Save**

Calling Features

For basic instructions on how to make and answer calls, see page 19.

Changing the Active Line






Change the active phone line to make and receive calls from your other phone number.

Note: This feature is available only for dual-line-enabled SIM cards.

Find the Feature  > **Settings** > **Phone Status**
> **Active Line**

Tip: The active line indicator in the display shows the currently active phone line (see page 32).

Redialling a Number

Press	To
1 	view the dialled calls list
2 	scroll to the entry you want to call
3 	redial the number


Using Automatic Redial



When you receive a busy signal, your phone displays **Number Busy**.

Cancelling an Incoming Call

While the phone is ringing or vibrating:

Press	To
	cancel the incoming call



Depending on your phone settings and/or service subscription, the call may be diverted to another number, or the caller may hear a busy signal.

Turning Off a Call Alert


You can turn off your phone's incoming call alert before answering the call.

Press	To
either volume key	turn off the alert


Calling an Emergency Number

Your service provider programs one or more emergency phone numbers, such as 999, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

Press	To
1 keypad keys	dial the emergency number
2 	call the emergency number

To redial the phone number:

Press	To
 or RETRY key	activate automatic redial

Your phone automatically redials the number. When the call goes through, your phone rings or vibrates one time, displays **Redial Successful**, and then connects the call.

Using Caller ID

Incoming Calls



Calling line identification (Caller ID) displays the phone number for incoming calls in your phone's display.


The phone displays the caller's name (and picture, if available) when the name is stored in your phonebook, or **Incoming Call** when caller ID information is not available.

Outgoing Calls




You can show or hide your phone number as an ID for the calls that you make.

Find the Feature  > **Settings** > **In-Call Setup**
> **My Caller ID**


Shortcut: While dialling (with digits visible in the display), press  > **Hide ID/Show ID**.

Dialling International Numbers






Press and hold  to insert the local international access code (+) for the country from which you are calling.

Viewing Recent Calls

Your phone keeps lists of the calls you recently received and dialled, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new entries are added.

Shortcut: Press  from the home screen to view the dialled calls list.

Find the Feature  > **Recent Calls**

Press	To
1 	scroll to Received Calls or Dialled Calls
2 SELECT key	select the list
3 	scroll to an entry ✓ means the call connected.
4 	call the entry's number Press and hold  for 2 seconds to send the number as DTMF tones during a call.
or VIEW key	view entry details
or 	open the Last Calls Menu to perform various operations on the entry

The **Last Calls Menu** can include the following options:

Option	Description
Store	Create a phonebook entry with the number in the No. field.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Hide ID/Show ID	Hide or show your caller ID for the next call.
Send Message	Open a new text message with the number in the To field.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent calls lists.
Send Tones	Send the number to the network as DTMF tones. <i>Note: This option displays only during a call.</i>
Talk then Fax	Talk and then send a fax in the same call (see page 79).

Returning an Unanswered Call

Your phone keeps a record of your unanswered calls, and displays:

- **X Missed Calls**, where X is the number of missed calls

Press	To
1 VIEW key	see the received calls list
2 ◂◃	select a call to return
3 ☎	make the call

Using the Notepad

The most recent set of digits entered on the keypad are stored in your phone's notepad memory. This can be a phone number that you called, or a number that you entered but did not call. To retrieve the number stored in the notepad:

Find the Feature	To
☎ > Recent Calls > Notepad	
Press ☎	call the number
or ☎	open the Dialling Menu to attach a number or insert a special character
or STORE key	create a phonebook entry with the number in the No. field

Attaching a Number

While dialling (with digits visible in the display):

Press	To
☎ > Attach Number	attach a number from the phonebook or recent calls lists

Calling With Speed Dial

Each entry you store in your phonebook is assigned a unique speed dial number.

To see an entry's speed dial number, press **☎** > **Phonebook**, scroll to the entry, press **VIEW** key.

To speed dial a phonebook entry:

Press	To
1 keypad keys	enter the speed dial number for the entry you want to call
2 #	submit the number
3 ☎	call the entry

Calling With 1-Touch Dial

To call phonebook entries 1 to 9, press and hold the single-digit speed dial number for one second.

Tip: You must specify which phone number list you want to use with this feature: phone memory phonebook or SIM card phonebook (see page 73).

Using Voicemail



Voicemail messages that you receive are stored on the network. To listen to your messages, you must call your voicemail phone number.

Your service provider may include additional information about using this feature.

Listening to Voicemail Messages

Find the Feature **☎** > **Messages** > **Voicemail**

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

Receiving a Voicemail Message

When you receive a voicemail message, your phone displays the **☎** (voicemail message) indicator and a **New Voicemail** notification.

Press	To
CALL key	listen to the message

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

Storing Your Voicemail Number

If necessary, use the following procedure to store your voicemail phone number on your phone. Usually, your service provider has already done this for you.

Find the Feature **☎** > **Messages**
☎ > **Voicemail Setup**

Press	To
1 keypad keys	enter your voicemail number
2 OK key	store the number

You cannot store a **⏸** (pause), **⏴** (wait), or **⏵** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then, you can use the entry to call your voicemail.

Using Call Waiting



When you are on a call, an alert tone sounds to indicate that you have received a second call.

Press	To
1	answer the new call
2 SWITCH key	switch between calls
or	
LINK key	connect the 2 calls
or	
> End Call On Hold	end the call on hold

You must turn on call waiting to use the feature. To turn call waiting on or off:

Find the Feature > **Settings** > **In-Call Setup**
> **Call Waiting**

Putting a Call On Hold

Press	To
> Hold	put the call on hold

Transferring a Call



You can announce that you are transferring an active call to another party, or you can directly transfer the call.

Announce the Call Transfer

Find the Feature > **Hold**

Press	To
1 keypad keys	dial the number where you are transferring the call
2	call the number and speak to the person who answers
3	open the menu
4	scroll to Transfer
5 SELECT key	select Transfer
6 OK key	confirm the transfer

Do Not Announce the Call Transfer

Find the Feature > **Transfer**

Press	To
1 keypad keys	dial the number where you are transferring the call
2	transfer the call

Phone Features

Menu Map

Main Menu

- Phonebook**
- Recent Calls**
 - Received Calls
 - Dialed Calls
 - Notepad
 - Call Times
 - Call Cost *
 - Data Times
 - Data Volumes
- Messages**
 - Create Message
 - Email Msgs
 - Message Inbox
 - Voicemail
 - Browser Msgs
 - Info Services *
 - Quick Notes
 - Outbox
 - Drafts
 - MMS Templates
- Office Tools**
 - SIM Tool Kit Apps *
 - Calculator
 - Datebook
 - Shortcuts
 - Voice Records
 - Alarm Clock
 - Dialling Services
 - Fixed Dial
 - Service Dial *
 - Quick Dial *
 - Chat
- Games & Apps**
- Web Access**
 - Browser
 - Web Shortcuts
 - Stored Pages
 - History
 - Go To URL
 - Browser Setup
 - Web Sessions
- Multimedia**
 - Themes
 - Camera
 - Pictures
 - Sounds
 - MotoMixer
 - Videos
- IM**
 - Sign On
 - Offline Conversations
 - Offline Settings
 - Help
- Settings**
 - (see next page)

* optional features

This is the standard main menu layout. Menu organisation and feature names may vary on your phone. Not all features may be available on your phone.

Settings Menu

- Personalise**
 - Home Screen
 - Main Menu
 - Skin
 - Greeting
 - Wallpaper
 - Screen Saver
 - Quick Dial
- Ring Styles**
 - Style
 - style Detail
- Connection**
 - Bluetooth Link
 - Sync
- Call Divert**
 - Voice Calls
 - Fax Calls
 - Data Calls
 - Cancel All
 - Divert Status
- In-Call Setup**
 - In-Call Timer
 - Call Cost Setup *
 - My Caller ID
 - Talk and Fax
 - Answer Options
 - Call Waiting
- Initial Setup**
 - Time and Date
 - 1-Touch Dial
 - Display Timeout
 - Backlight
 - Scroll
 - Language
 - Battery Save
 - Brightness
 - DTMF
 - Master Reset
 - Master Clear
- Phone Status**
 - My Tel. Numbers
 - Credit Info/Available *
 - Active Line *
 - Battery Meter
 - Other Information
- Headset**
 - Auto Answer
 - Voice Dial
- Car Settings**
 - Auto Answer
 - Auto Handsfree
 - Power-off Delay
 - Charger Time
- Network**
 - New Network
 - Network Setup
 - Available Networks
 - My Network List
 - Service Tone
 - Call Drop Tone
- Security**
 - Phone Lock
 - Lock Application
 - Fixed Dial
 - Restrict Calls
 - SIM PIN
 - New Passwords
 - Certificate Mgmt
- Java Settings**
 - Java System
 - Delete All Apps
 - App Vibration
 - App Volume
 - App Priority
 - App Backlight
 - Set Standby App
 - DNS IP

* optional features

Feature Quick Reference

This section helps you locate features on your phone that are not described in this guide.

Calling Features

Feature	Description
Conference Call	During a call: > Hold , dial next number, press , press the LINK key
Call Diverting	Set up or cancel call diverting: > Settings > Call Divert
Restrict Calls	Restrict outgoing or incoming calls: > Settings > Security > Restrict Calls

Messages

Feature	Description
Send Text Message	Send a text message: > Messages > Create Message > New Short Msg
Send Multimedia Message	Send a multimedia message: > Messages > Create Message > New Multimedia Msg

Feature	Description
Send Letter	Send a multimedia letter: > Messages > Create Message > New Letter
Use MMS Template	Open an MMS template with preloaded media: > Messages > Create Message > MMS Templates
Read Message	Read a new text or multimedia message that you have received: Press the READ key.
Store Message Objects	Go to a multimedia message slide, or highlight an object in a letter, then: > Store

Instant Messaging

Feature	Description
Sign On	Log in to instant messaging: > IM > Sign On
Find Others Online	After you log in: Select Contact List to see a list of other users.
Start Conversation	Start a conversation: From your Contact List , highlight a name in Online Contacts , press the SEND IM key.

Feature	Description
Open Active Conversation	Open a conversation in progress: From your Contact List , highlight a name in Conversations , press the VIEW key.
End Conversation	From the conversation display: VIEW > End Conversation
Log Out	Log out of instant messaging: Select Log Out from the IM Online menu.

Chat

Feature	Description
Start Chat	Start a new chat session: VIEW > Office Tools > Chat VIEW > New Chat
Receive Chat Request	When you receive a chat request: Press the ACCEPT key or the IGNORE key.
End Chat	During a chat session: VIEW > End Chat

Email

Feature	Description
Send Email Message	Send an email message: VIEW > Messages > Create Message > New Email
Read Email Message	Read a new email message that you have received: Press the READ key.

Phonebook








Feature	Description
Create Entry	Create a new phonebook entry: VIEW > Phonebook VIEW > New > Phone Number or Email Address
Dial Number	Call a number stored in the phonebook: VIEW > Phonebook , highlight the phonebook entry, press CALL to call
Voice Dial Number	Voice dial a number stored in the phonebook: Press and release the voice key, and say the entry's name (within 2 seconds).



Feature	Description
Set Ringer ID for Entry	Assign a distinctive ringer alert to a phonebook entry: VIEW > Phonebook > <i>entry</i> VIEW > Edit > Ringer ID > <i>ringer name</i> <i>Note: The Ringer ID option is not available for entries stored on the SIM card.</i>
Set Picture ID for Entry	Assign a picture to display when you receive calls from an entry: VIEW > Phonebook > <i>entry</i> VIEW > Edit > Picture > <i>picture</i> <i>Note: The Picture option is not available for entries stored on the SIM card.</i>
Set Category for Entry	Set the category for a phonebook entry: VIEW > Phonebook > <i>entry</i> VIEW > Edit > Category > <i>category name</i> <i>Note: The Category option is not available for entries stored on the SIM card.</i>
Set Picture ID View	View phonebook entries as text list, or with picture caller ID photos: VIEW > Phonebook VIEW > Setup > View by > <i>view</i> <i>Note: The Picture option is not available for entries stored on the SIM card.</i>

Feature	Description
Sort Phonebook List	Set the order in which phonebook entries are listed: VIEW > Phonebook VIEW > Setup > Sort by > <i>sort order</i>
Set Primary Number	Set the primary number for a phonebook entry with multiple numbers: VIEW > Phonebook , scroll to entry, press VIEW > Set Primary > <i>phone number</i>
Copy Phonebook Entry to Another Device	Copy a phonebook entry to another phone, computer, or device: VIEW > Phonebook , highlight the entry, press VIEW > Send > Bluetooth
1-Touch Dial	Set 1-touch dial to call entries stored in your phone memory phonebook or the SIM card phonebook: VIEW > Settings > Initial Setup > 1-Touch Dial




Personalising Features

Feature	Description
Ring Style	Change the ring alert for an event: VIEW > Settings > Ring Styles > <i>style Detail</i> > <i>event name</i>
Ringer IDs	Activate distinctive ring alerts assigned to phonebook entries: VIEW > Settings > Ring Styles > <i>style Detail</i> > Ringer IDs










Feature	Description
Ring Volume	Set ringer volume:  > Settings > Ring Styles > <i>style Detail</i> > Ring Volume
Keypad Volume	Set keypad keypress volume:  > Settings > Ring Styles > <i>style Detail</i> > Key Volume
Clock View	Display an analogue clock or digital time readout in the home screen:  > Settings > Personalise > Home Screen > Clock
Menu View	Display the main menu as graphic icons or as a text-based list:  > Settings > Personalise > Main Menu > View
Main Menu	Reorder your phone's main menu:  > Settings > Personalise > Main Menu > Reorder
Show or Hide Menu Icons	Show or hide menu feature icons in the home screen:  > Settings > Personalise > Home Screen > Home Keys > Icons
Change Home Screen Keys & Icons	Change soft key labels, smart key function, and menu feature icons in the home screen:  > Settings > Personalise > Home Screen > Home Keys

Feature	Description
Shortcuts	Create a shortcut to a menu item: Highlight the menu item, then press and hold  . Select a shortcut:  > Office Tools > Shortcuts > <i>shortcut name</i>


Menu Features

Feature	Description
Language	Set menu language:  > Settings > Initial Setup > Language
Master Reset	Reset all options except unlock code, security code, and lifetime timer:  > Settings > Initial Setup > Master Reset
Master Clear	Reset all options except unlock code, security code, and lifetime timer, and clear all user settings and entries except SIM card information:  > Settings > Initial Setup > Master Clear





Dialling Features

Feature	Description
Fixed Dial	When you turn on fixed dialling, you can call only numbers stored in the fixed dial list.  Turn fixed dialling on or off:  > Settings > Security > Fixed Dial Use the fixed dial list:  > Office Tools > Dialling Services > Fixed Dial
Service Dial	Dial service phone numbers:   > Office Tools > Dialling Services > Service Dial
Quick Dial	Your service provider may program your phone with one or more quick dial numbers, such as the customer service number.  Dial preprogrammed phone numbers:  > Office Tools > Dialling Services > Quick Dial
DTMF Tones	Activate DTMF tones:  > Settings > Initial Setup > DTMF Send DTMF tones during a call: Press number keys. Send stored numbers as DTMF tones during a call: Highlight a number in the phonebook or recent calls lists, then press  > Send Tones .

Call Monitoring


Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.






The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.

Feature	Description
Call Times	View call timers:  > Recent Calls > Call Times
In-Call Timer	Display time information during a call:  > Settings > In-Call Setup > In-Call Timer
Call Cost	View call cost information:   > Recent Calls > Call Cost



Handsfree Features

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.



Feature	Description
Speaker-phone	Activate the speakerphone during a call: Press the SPEAKER key (if available) or  > Spkrphone On .


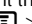 

Feature	Description
Auto Answer (car kit or headset)	Automatically answer calls when connected to a car kit or headset:  > Settings > Car Settings or Headset > Auto Answer
Voice Dial (headset)	Enable voice dial with headset send/end key:  > Settings > Headset > Voice Dial
Auto Handsfree (car kit)	Automatically route calls to a car kit when connected:  > Settings > Car Settings > Auto Handsfree
Power-Off Delay (car kit)	Set the phone to stay on for a specified time after the ignition is switched off:  > Settings > Car Settings > Power-off Delay
Charger Time (car kit)	Charge the phone for a specified time after the ignition is switched off:  > Settings > Car Settings > Charger Time

Data and Fax Calls


Feature	Description
Send Data or Fax	Connect your phone to the device, then place the call through the device application.
Receive Data or Fax	Connect your phone to the device, then answer the call through the device application.
Talk Then Fax	Connect your phone to the device, enter the number, then press  > Talk Then Fax  to make the call.

 Bluetooth® Wireless Connections





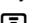


Feature	Description
Make Phone Visible to Other Device	Allow an unknown Bluetooth device to discover your phone:  > Settings > Connection > Bluetooth Link > Setup > Find Me Tip: After the first connection, you do not need to select Find Me to reconnect.
Connect to a Handsfree Device	Connect to a handsfree device:  > Settings > Connection > Bluetooth Link > Handsfree > <i>device name</i> or Look for Devices





Feature	Description
Connect to a Handsfree Device During a Call	Switch to a headset or car kit during a call:  > Use Bluetooth
Disconnect From Device	Disconnect from a device: Highlight the device name and press the DROP key.
Edit Device Properties	Edit the properties of a recognised device: Highlight the device name and press  > Edit .
Set Bluetooth Options	Set your phone's Bluetooth options:  > Settings > Connection > Bluetooth Link > Setup

Network Features


Feature	Description
Network Settings	View network information and adjust network settings:  > Settings > Network



Personal Organiser Features

Feature	Description
Create Datebook Event	Create a new datebook event:  > Office Tools > Datebook , highlight the day, press the centre select button, press  > New
View or Edit Datebook Event	View or edit event details:  > Office Tools > Datebook , highlight the day, press the centre select button, press the VIEW key
Event Reminder	View event reminder: VIEW key Close event reminder: BACK key
Copy Datebook Event to Another Device	Copy a datebook event to another phone, computer, or device:  > Office Tools > Datebook , highlight the day, press the centre select button, highlight the event, press  > Send > Bluetooth
Set Alarm	Set an alarm:  > Office Tools > Alarm Clock
Turn Off Alarm	Turn off alarm: Press the DISABLE key or  . Set 8-minute delay: Press the SNOOZE key.








Feature	Description
Create Voice Record	Create a voice record: Press and hold voice key, speak into the phone, release voice key. <i>Note: Recording phone calls is subject to varying laws regarding privacy and recording of conversations.</i>
Play Voice Record	Play back a voice record:  > Office Tools > Voice Records > <i>voice record</i>
Calculator	Calculate numbers:  > Office Tools > Calculator
Currency Converter	Convert currency:  > Office Tools > Calculator  > Exchange Rate Enter exchange rate, press the OK key, enter amount, and select \$ in the bottom of the display.












Security

Feature	Description
SIM PIN	Lock or unlock the SIM card:  > Settings > Security > SIM PIN Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays SIM Blocked .

Feature	Description
Lock Application	Lock phone applications:  > Settings > Security > Lock Application
Certificate Management	Certificates let your phone verify the identity and security of Web sites when you download files or share information. Enable or disable security certificates stored on your phone:  > Settings > Security > Certificate Mgmt

News and Entertainment

Feature	Description
Launch Micro-Browser	Start a micro-browser session: Press  . 
Download Objects from Web Page	Download a picture, sound, or phone theme from a Web page: Highlight the file, press the SELECT key, press the STORE key. 
Web Sessions	Select or create a Web session:  > Web Access > Web Sessions 
Apply Phone Theme	Apply a grouped set of image and sound files to your phone:  > Multimedia > Themes > <i>theme</i> 

Feature	Description
Download Game or Application	Download a Java™ game or application with the micro-browser: Press  , highlight the application, press the SELECT key, press the DOWNLOAD key. 
Launch Game or Application	Launch a Java™ game or application:  > Games & Apps , highlight the application, press the SELECT key 
Manage Pictures	Manage pictures and animations:  > Multimedia > Pictures 
Manage Sounds	Manage ring tones, sounds that you have composed or downloaded:  > Multimedia > Sounds
Manage Video Clips	Manage video clips:  > Multimedia > Videos
Edit Sounds With MotoMixer	Edit MIDI-based sound files that you can use with your phone:  > Multimedia > MotoMixer > (New Mix) or mix file name
Create Ring Tones	Create ring tones that you can use with your phone:  > Multimedia > Sounds > (New iMelody)
Camera	Adjust light level and other settings for the built-in camera:  > Pictures Setup

Specific Absorption Rate Data

This model phone meets international standards for exposure to radio waves

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. Under the guidelines for your phone model, the SAR limit is 2.0 W/kg.¹ Tests for SAR are conducted in accordance with CENELEC² testing procedures using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

Before a phone model is available for sale to the public, it is tested to confirm compliance with the guidelines. The tests are performed in positions that conform to a uniform testing methodology determined by an expert standards body. The highest SAR value for this model phone when tested for use at the ear is: 0.93 W/kg.³

Specific Absorption Rate Data - 85

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

-
- 1 The SAR limit recommended by international guidelines (ICNIRP) for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of tissue. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements.
 - 2 CENELEC is a European Union standards body.
 - 3 Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

- ring style 19, 51, 73
- speakerphone 77
- timers 77
- transferring 64
- unanswered call 60
- Call Failed, Number Busy message 56
- call waiting 64
- caller ID 22, 29, 57, 72
- calling line identification. *See* caller ID
- camera
 - settings 84
 - taking a photo 21
- category
 - phonebook entry 72
- centre select button 34
- certificates 83
- character chart 42
- chat 70
- clock
 - selecting analogue or digital 74
 - setting 51
- codes
 - changing 48
 - default 48, 50
 - forgetting 50
 - colour, setting 54
 - conference call 68

customising the menu 74

D

- data call 79
- date, setting 51
- datebook 81
- dialled calls list 59
- dialling a number 19, 76
- display
 - backlight 55
 - brightness 54
 - colour 54
 - description 30
 - home screen 30
 - language 75
 - personalising 74
 - skin 54
 - timeout 55
- distinctive ringer alert 73
- diverting calls 68
- DTMF tones
 - activating 76
 - sending 76

E

- earpiece volume 19
- email 71
- emergency number 58
- end key 1
- ending a call 19

A

- accessories 14
- accessory connector port 1
- active line indicator 32
- active line, changing 56
- alarm clock 81
- alert
 - creating 84
 - defined 51
 - setting 19, 51, 73
 - turning off 19, 58
- animation
 - downloading 83
 - screen saver 53
 - viewing 84
 - wallpaper 52
- answering a call 19, 52
- application, locking and unlocking 83
- automatic redial 56

B

- backlight 55
- battery
 - charging 17
 - extending battery life 15, 55

- installing 17
- level indicator 34
- battery save 55
- Bluetooth 73, 79, 81
- brightness, setting 54
- browser. *See* micro-browser

C

- calculator 82
- call
 - alert, turning off 19, 58
 - answer options 52
 - answering 19
 - call waiting 64
 - costs 77
 - dialled calls list 59
 - dialling 19
 - diverting 68
 - emergency number 58
 - ending 19
 - handsfree speaker 48
 - hold 64
 - international access code 59
 - making 19
 - received calls list 59
 - receiving 19
 - restricting 68

Index - 87

- Enter Unlock Code message 49
- external display 47

F

- fax call 79
- 5-way navigation key 1, 34
- fixed dial 76

G

- games 84
- GPRS indicator 31
- groove tunes 84

H

- handsfree speaker 48
- headset jack 1
- hold a call 64
- home keys, personalising 74
- home screen
 - defined 30
 - selecting clock view 74

I

- IM 69
- incoming call
 - answering 19
 - diverting 68
- Incoming Call message 57

indicators

- active line 32
- battery level 34
- GPRS 31
- Java midlet 33
- location 33
- message 33
- message waiting 26
- messaging presence 33
- ring style 34
- roam 32
- signal strength 31
- text case 40
- text entry mode 33, 40
- transmission 32
- voicemail message 33, 63
- instant messaging. *See* IM
- international access code 59
- iTAP software 43

J

- Java applications 84
- Java midlet indicator 33
- joystick 1

K

- key
 - centre select button 34
 - end 1
 - 5-way navigation 1, 34

- left soft key 1, 31, 74
- menu 1
- power 1
- right soft key 1, 31, 74
- send 1
- smart 47
- voice 1
- volume control 1, 19

keypad

- answering calls 52
- volume, setting 74

L

- language, setting 75
- left soft key
 - functions 1, 31
 - personalising 74
- line, changing 56
- location indicator 33
- lock
 - application 83
 - phone 49
 - SIM card 82
- Low Battery message 34

M

- making a call 19
- master clear 75
- master reset 75

menu

- entering text 38
- icons, changing in home screen 74
- icons, converting to text 74
- icons, showing or hiding 74
- language, setting 75
- personalising 74
- rearranging features 74
- using 35
- view, changing 74

menu key 1

message

- chat 70
- MMS template 69
- MMS, defined 24
- multimedia letter 69
- multimedia message 68
- reading 69
- text 68, 69

message indicator 33

message waiting indicator 26

messaging presence indicator 33

micro-browser

- browser setup 83
- certificates 83
- Java applications 84
- using 83
- Web sessions 83

- MMS template 69
- MMS. *See* message
- MotoMixer 84
- multimedia letter, sending 69
- multimedia message
 - receiving 26
 - sending 24, 68
- multimedia messaging service.
See message
- my telephone number 20, 51

N

- network settings 80
- notepad 61
- number
 - storing your number 51
 - viewing your number 20
- numbers, entering 45

O

- 1-touch dial
 - setting preference 73
 - using 62
- open to answer 52
- optional accessory, defined 14
- optional feature, defined 14

P

- passwords. *See* codes

phone

- active line indicator 32
- active line, changing 56
- alert, turning off 19, 58
- answer options 52
- clear stored information 75
- codes 48
- date, setting 51
- keypad, answering calls 52
- language, setting 75
- locking 49
- network settings 80
- open to answer 19
- reset all options 75
- ring style 19, 51, 73
- security code 48
- time, setting 51
- turning on/off 18
- unlock code 48
- unlocking 18, 49
- phone number
 - active line indicator 32
 - active line, changing 56
 - attaching 2 numbers 61
 - international access code 59
 - redialling 56
 - storing in phonebook 71
 - storing your number 51
 - viewing your number 20
- phone theme 83

phonebook

- attaching 2 numbers 61
- category for entry 72
- copying entries 73
- dialling a number 71
- 1-touch dial 62
- picture ID 22, 28, 29, 57, 72
- primary number, setting 73
- ringer ID 72, 73
- sorting entries 29, 73
- speed dial number 61
- storing an entry 71
- voice dialling 71

photo

- downloading 83
- picture ID 22, 29, 57, 72
- sending 21
- taking 21

picture

- downloading 83
- screen saver 53
- viewing 84
- wallpaper 52

- picture ID 22, 29, 57, 72
- setting 28, 72

PIN code

- changing 48
- entering 82

PIN2 code, changing 48

power key 1

predictive text entry 43

primary text entry mode 39

Q

quick dial 76

R

- received calls list 59
- recent calls 59
- redial
 - automatic redial 56
 - busy number 56
- restricting calls 68
- right soft key
 - functions 1, 31
 - personalising 74
- ring style indicators 34
- ring style, setting 19, 51, 73
- ring tone
 - creating 84
 - downloading 83
 - editing with MotoMixer 84
 - managing 84
- ringer ID
 - setting 72
 - turning on/off 73
- ringer volume, setting 19, 74
- roam indicator 32

S

- screen saver 53
- secondary text entry mode 39
- security code
 - changing 48
 - default 48
- send key 1
- service dial 76
- shortcuts 75
- signal strength indicator 31
- silent alert, setting 19, 51, 73
- SIM Blocked message 18, 82
- SIM card
 - defined 14
 - installing 14
 - locking 82
 - PIN code entry 18
 - PIN code, changing 48
 - PIN2 code, changing 48
 - precautions 14
 - SIM Blocked message 18, 82
- SIM PIN code
 - changing 48
 - entering 82
- SIM PIN2 code, changing 48
- skin, changing 54
- smart key 47
- soft keys
 - functions 31

- illustration 1
- personalising 74
- sound
 - creating 84
 - downloading 83
 - managing 84
- Speaker On message 48
- speakerphone
 - activating 77
 - automatic answer 78
- speed dial 61
- standby time, increasing 55
- symbol chart 46
- symbols, entering 45

T

- tap mode text entry 40
- telephone number
 - storing your number 51
 - viewing your number 20
- text
 - capitalisation, changing 40
 - character chart 42
 - entering 38
 - entry mode, selecting 39
 - entry mode, setup 39
 - iTAP software predictive text entry 43
 - numeric mode 45
 - symbol chart 46

- symbol mode 45
- tap mode 40
- text case indicator 40
- text entry mode
 - selecting 39
 - setup 39
- text entry mode indicator 33, 40
- theme 83
- time, setting 51
- timers 77
- transfer a call 64
- transmission indicator 32
- travel charger 18

U

- unlock
 - application 83
 - phone 49
- unlock code
 - bypassing 50
 - changing 48
 - default 48, 50
 - entering 18

V

- vibrate alert
 - setting 19, 51, 73
 - turning off 19, 58

- video clip
 - downloading 69
 - managing 84
 - recording 23
- voice dial 71, 78
- voice key
 - dialling a number 71
 - illustration 1
- voice record 82
- voicemail 62
- voicemail message indicator 33, 63
- volume
 - earpiece 19
 - keypad 74
 - ringer 19, 74
- volume keys 1, 19

W

- wallpaper 52
- Web pages 83
- Web sessions 83
- Welcome 1

6803533C08