

SILVERCREST®

PERSONAL CARE


Hair Trimmer SHBS 1000 A1



GB IE


Hair Trimmer






 
Operation and Safety Notes



GB IE

       Before reading, unfold both pages containing illustrations and familiarise yourself with all functions of the device.

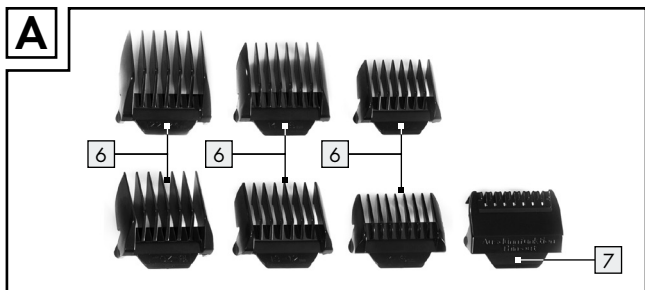

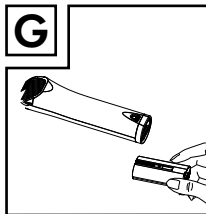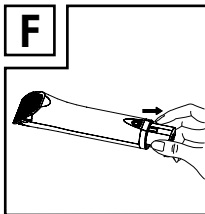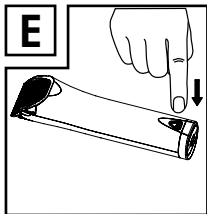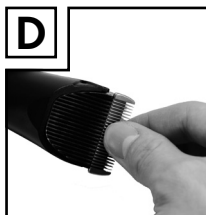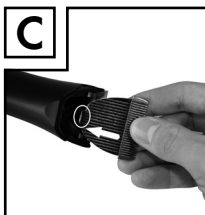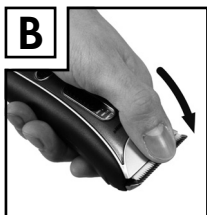

Introduction

Proper use.....	Page 7
Included items	Page 8
Description of parts.....	Page 8
Technical data	Page 9

Safety	Page 9
General safety advice	Page 10

Before first use

Charging the batteries	Page 13
------------------------------	---------

Use

Prolonging the life of the rechargeable batteries.....	Page 15
Tips.....	Page 15
Cutting hair.....	Page 16
Cutting without an attachment.....	Page 17
Thinning hair	Page 18
Cutting to shape the hairline, neck and sideboards	Page 18
Trimming and cutting your beard.....	Page 18






 



Cleaning and care	Page 18
Cleaning the housing.....	Page 19
Cleaning your hair and beard clippers	Page 19

Disposal	Page 20
-----------------------	---------

Warranty and service	Page 21
-----------------------------------	---------

Conformity	Page 22
-------------------------	---------

The following icons / symbols are used in this instruction manual:

	Read instruction manual!
	Damaged appliances, power cables and power plugs mean potentially fatal risks from electric shock. Regularly check the condition of the appliance, the power cables and the power plugs.
	Observe caution and safety notes!
	Caution - electric shock! Dangerous electric current - danger to life!
	Voltage
	Milliamps / Milliamp-hours
	Keep children and other unauthorised personnel at a safe distance when using electrical tools.
	Safety class II
	Dispose of the packaging, device and rechargeable batteries separately and in an environmentally compatible manner.

Hair Trimmer

● Introduction

Dear Customer,

We are pleased you chose to purchase this product and hope you enjoy using your new hair and beard clippers.

These hair and beard clippers and their easily fitted cutting length comb attachments **6** can be used to cut different hair lengths and shape perfect hair contours. The clippers also have a sliding switch **2** for fine adjustment of the cutting length. The cutting system consists of a blade set **1** with titanium-coated blade block and ceramic cutting blade. These materials ensure your clippers cut well and efficiently, whilst being particularly gentle to your skin.

These instructions are intended to familiarise you with your new device and make using it a pleasure. Please read through the instructions for use carefully before using your new device for the first time and keep them in a safe place for future reference.

● **Proper use**

The hair and beard clippers are intended for private use only and not for commercial purposes. The device is intended only for cutting natural hair. Use on human hair only – not on artificial or animal hair. The warranty is invalidated if the device is used for any purpose other than those indicated.

Introduction

● Included items

- 1 Hair and beard clippers
- 1 Charging station
- 1 Plug-in adapter
- 6 Cutting length comb attachments
- 1 Thinning attachment
- 1 Cleaning brush
- 1 Scissors
- 1 Comb
- 1 Cutter oil
- 1 Travel bag
- 1 Hairdressing cape
- 1 Instructions for use

● Description of parts

- 1 Blade set with titanium-coated blade block and ceramic cutting blade
- 2 Sliding switch for fine adjustment of cutting length 0.5 mm / 1.2 mm / 1.9 mm / 2.5 mm
- 3 On / Off switch (ON / OFF)
- 4 Charge state indicator (FULL-CHARGE, 100% / 80% / 60% / 40% / 20%)
- 5 Charging station / holder with connection socket for plug-in mains adapter
- 6 Cutting length comb attachments 4-6 mm / 7-9 mm / 10-12 mm / 16-18 mm / 22-24 mm / 28-30 mm
- 7 Thinning attachment

● Technical data

Plug-in mains adapter:

Input:	100-240V ~, 50/60Hz
Output:	4.5V $\overline{=}$, 1,000 mA
Protection class:	□
Ambient conditions:	For indoor use only

Hair and beard clippers:

Model:	SHBS 1000 A1
Article No.:	9133711
Rechargeable batteries:	2 x NiMH, HR6 (AA) 1,000 mAh
Input:	4.5V $\overline{=}$, 1,000 mA
Permissible ambient temperature range:	+10 °C to +40 °C

● Safety



Please read carefully through the operating instructions before using the device for the first time. By strictly observing the safety advice you will avoid accidents, injury and damage.

The following operating instructions and advice are intended to help make you familiar with the clippers and accessories and how to use them. The product is fitted with safety features. In spite of this you should read through the safety advice carefully and use the product only as described in these instructions. By doing this you will avoid inadvertent injury or damage.

Keep these instructions in a safe place for future reference. If you pass on the product to a third party, please include this documentation as well.



General safety advice

- **This device is not intended to be used by persons (including children) with restricted physical, sensory or mental abilities or with insufficient experience and / or knowledge, unless they are supervised by a person who is responsible for their safety or they have received instruction on how to use the device from such a responsible person.** Children should be supervised in order to ensure that they do not play with the device.



- Keep the hair and beard clippers and the adapter inaccessible for children as they cannot always correctly assess the possible risks connected with the use of such devices.
- After using them, keep the hair and beard clippers and the adapter in a safe place, out of the reach of children.

When unpacking the device, please pay attention to the following:

- ⚠ **DANGER FOR CHILDREN! DANGER TO LIFE FROM SUFFOCATION!** Keep the packaging material out of reach of children.



To avoid injury:

- Do not use the device with defective cutting length comb attachments **6** or a defective thinning attachment **7** as they can have sharp edges. Risk of injury!



The device will operate at its best if you observe the following:

- To ensure optimum performance, operate the device only in accordance with the information on the rating plate.
- Do not expose the hair clippers to temperatures below +10 °C or above +40 °C.
- Thoroughly clean the device after each use.




To avoid the danger of loss of life from electric shock:

- Disconnect the mains adapter after use or before cleaning.
- ⚠ **CAUTION! DANGER OF ELECTRIC SHOCK!** Do not use while in the bath.
- **ATTENTION!** Keep the device dry.
- Never immerse the device or the lead in water or other liquids.
- Operate the device only in compliance with the rating plate. Never leave the device to operate unattended.
- Pull the mains adapter out of the mains socket
 - if a fault occurs,
 - before you clean the device,
 - if you intend leave the device unused for a long period,
 - after every use.
 When doing this pull directly on the mains adapter and not on the lead.
- Stop using the device immediately if the lead, mains adapter, housing or any other part is found to be damaged.
- Have all repairs carried out by a specialist dealer or through our Service Centre (see the warranty sheet).

⚠ CAUTION! DANGER OF ELECTRIC SHOCK! If the device falls into the water, the first thing you must do is pull the mains adapter out of the mains socket before you put your hands into the water.

⚠ CAUTION! DANGER OF ELECTRIC SHOCK! Never touch the mains adapter with wet hands particularly when you insert or pull out the adapter from the mains socket.

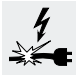- Handle the mains adapter only by its body when you insert it into the mains socket.
- Incorporation of a residual current device (RCD) with a rated trip current of not more than 30 mA will provide you with additional protection against electric shock. Have this RCD incorporated by an electrician.
- Use only the supplied original mains adapter for mains operation.
- Regularly check the adapter and the hair and beard clippers for any possible mechanical defects.
- Replace defective parts with original replacement parts obtained from a specialist dealer but never attempt to repair the device yourself!
- Have all repairs carried out by a specialist dealer or through our Service Centre (see Service Hotline on the warranty sheet).
-  Ensure that the lead does not become trapped in cupboard doors or pass over hot surfaces. Otherwise you risk damaging the insulation on the lead.



To avoid fire:

- Disconnect the mains adapter after use or before cleaning.
- Operate the device only in compliance with the rating plate. Never leave the device to operate unattended.

- Pull the mains adapter out of the mains socket
 - if a fault occurs,
 - before you clean the device,
 - if you intend leave the device unused for a long period,
 - after every use.When doing this, pull directly on the mains adapter and not on the lead.
- Stop using the device immediately if the lead, mains adapter, housing or any other part is found to be damaged.
- Use only the supplied original mains adapter for mains operation.
- Connect the mains adapter to an easily accessed mains socket only.
- Do not cover the mains adapter, otherwise it may lead to a dangerous build-up of heat.

● **Before first use**

The hair and beard clippers can be operated as a cordless device or from the mains adapter.

● **Charging the batteries**

The batteries should be charged for at least 3 hours before the hair and beard clippers are used for the first time. For subsequent charging processes, a charging time of 90 minutes is adequate.

Make sure that the device is fully charged before you use it without the plug-in mains adapter.

Before first use

The device is fitted with 2 NiMH rechargeable batteries and an overcharge protection system so that the batteries can be topped up without being overcharged.

- Connect the cable of the plug-in mains adapter to the charging station [5] of the hair and beard clippers.
- **Avoid injury and damage to the device!** Make sure that the device is switched off before you charge the rechargeable batteries.
- Insert the plug-in mains adapter (wide voltage range 100-240V) into a mains outlet socket that meets the requirements of the device.
- The charge state indicator [4] on the front of the device illuminates red and shows the battery symbol (the symbol indicating that the device is connected to the mains) and the value indicating the % of the full charge achieved. After a charge state of approx. 20% has been achieved, the charge state indicator [4] changes colour to blue and the relevant % value for the charge capacity flashes until that charge state is achieved. The rechargeable batteries are fully charged when the 100% mark stops flashing and is continuously illuminated.
- The charge state indicator [4] switches off a few seconds after completion of the charging process.
- The device can operate with fully charged batteries for up to about 60 minutes when disconnected from the mains.

Operation with the plug-in mains adapter:

If your hair and beard clippers stop during use because of discharged or weak rechargeable batteries, you can continue by connecting the plug-in mains adapter.

- Insert the connector plug of the plug-in mains adapter into the socket on the underside of the hair and beard clippers.
- To avoid injury and damage to the device, always switch off the device before you connect it to the mains supply.
- Insert the plug-in mains adapter (wide voltage range 100-240 V) into a mains outlet socket that meets the requirements of the device.
- After 1-2 seconds you can switch on the device by pressing the ON/OFF switch **3**. If the device does not start working immediately, switch it off again and wait for about 1 minute before you switch it on again.
- If you wish to charge the batteries in this way without using the charging station **5**, then do so only with the device switched off.

● Use

● Prolonging the life of the rechargeable batteries

For a longer rechargeable battery service life, it is recommended that the batteries are completely discharged before they are recharged. To completely discharge the battery, run the device until it comes to a complete stop.

● Tips

The hair to be cut should be clean and dry.

- Comb your hair through carefully to remove any knots.
- Place the hairdresser's cape or a cloth around the throat and neck to prevent hair from dropping into the collar.

● Cutting hair


Tip: Start with a cutting length comb attachment with a longer cutting length than is finally required, then proceed in stages until you achieve the desired length.

Cutting length comb attachments **6**:


- Select the cutting length comb attachment **6** (4-6 mm / 7-9 mm / 10-12 mm / 16-18 mm / 22-24 mm / 28-30 mm) to suit the desired cutting length.
- Push the selected cutting length comb attachment **6** from the rear on to the blade set **1**. Ensure that the two pins on the attachment engage properly into the recesses in the sides of cutter head mount.

Note: By adjusting the setting of the sliding switch **2** you can finely graduate the desired cutting length of the cutting length comb attachments **6**. If you select the cutting length comb attachment **6** for a hair length of 22-24 mm and would like to cut your hair to 22 mm, then slide the sliding switch **2** for the fine adjustment of the cutting length as far as it will go upwards (0.5 mm). Stepping the fine adjustment setting switch downwards increases the cutting length to 22.7 mm (with a fine adjustment of 1.2 mm); to 23.4 mm (with a fine adjustment of 1.9 mm) or to 24 mm (with a fine adjustment of 2.5 mm).

Cutting length comb attachment 6 (mm)	Cutting lengths* with cutting length fine adjustment (mm)			
	0.5	1.2	1.9	2.5
4-6	4.0	4.7	5.4	6.0
7-9	7.0	7.7	8.4	9.0
10-12	10.0	10.7	11.4	12.0
16-18	16.0	16.7	17.4	18.0

 Cutting length comb attachment  (mm)	Cutting lengths* with cutting length fine adjustment (mm)			
	0.5	1.2	1.9	2.5
22-24	22.0	22.7	23.4	24.0
28-30	28.0	28.7	29.4	30.0


 
* Please note that the actual cutting lengths may deviate from the cutting lengths given here, depending on the cutting angle.

- Always cut off small amounts at a time.
- Guide the hair and beard clippers slowly through the hair.
- Hold the device so that the selected cutting length comb attachment  is always lying as flat on the scalp as possible.
- Always cut from the neck towards the top of the scalp or from the forehead and temples upwards towards the centre of the scalp.

● Cutting without an attachment



CAUTION! DANGER OF INJURY!
The cutter head is very sharp!

Without a cutting length comb attachment  in place, the device can cut hair to a length of between 0.5 mm and 2.5 mm. Slide the sliding switch  to finely adjust the cutting length to the desired value.

Note: By varying how and at what angle you hold the hair clippers, you can depart from the cutting lengths indicated in these instructions for use or marked on the attachment/device.

● Thinning hair

This attachment allows you to reduce the volume of hair by only picking up and cutting part of the hair.

- Push the thinning attachment **7** on to the blade set **1** from the front to thin out the hair. This attachment reduces the volume of the hair.

● Cutting to shape the hairline, neck and sideboards

- Turn the device over so that the back is facing upwards.
- Place the edge of the blade set **1** without a cutting length comb attachment **6** at the point where you wish the hairline to start.
- Move the operating hair and beard clippers downwards.

● Trimming and cutting your beard

- Select a cutting length to suit your desired length of beard.
- Now gradually shorten your beard in steps.

● Cleaning and care



RISK TO LIFE FROM ELECTRIC SHOCK!

- Before you clean the device, pull the mains plug out of the mains socket.

- Never touch the mains adapter with wet hands when you insert or pull out the adapter from the mains socket.
- Always keep the mains adapter and connection lead dry.

⚠ WARNING! Do not immerse the hair and beard clippers in water or other liquids for cleaning as the device is not waterproof. Failure to observe this advice could damage the electrically conducting parts (rechargeable batteries).

● Cleaning the housing

- Clean the housing using a slightly moist cloth.

● Cleaning your hair and beard clippers

- Switch off the hair and beard clippers by pressing the ON/OFF switch **3**.
- Disconnect the lead from the device and pull the plug-in mains adapter out of the mains socket.
- Take any fitted cutting length comb attachment **6** off the device.
- Wash the cutting length comb attachments **6** when necessary by holding them under flowing water.
- Then fully dry the attachments.
- Using your thumb from the front of the device, press against the teeth of the cutter head to release the blade set **1** from its mount (see Fig. B).
- Use the supplied cleaning brush to remove any remaining hair residue from the blade set **1**.

Cleaning and care / Disposal

- After cleaning, place the locating lug of the blade set **1** back into the locating hole of the cutter head mount (see Fig. C).
- Re-engage the blade set **1** by applying a little light pressure from the rear of the device (see Fig. D).

Tip: To reduce friction apply one or two drops of cutter oil (accessory) from time to time between the blades and spread it out evenly. You may also use any acid-free oil (such as sewing machine oil). Wipe away any excess oil with a cloth.

● Disposal



This hair and beard clipper contains two NiMH rechargeable batteries.

The batteries should be discharged before disposal.

- Disconnect the device from the power supply.
- Switch the device on and allow it to continue to operate until it switches itself off.
- Press the release button on the back of the device (bottom) to remove the rechargeable batteries from the device (see Figs. E-G).

Now you can dispose of all the components in accordance with the regulations.



You are not permitted to throw away single-use or rechargeable batteries with household refuse. Please dispose of single-use or rechargeable batteries through a battery return system or a battery collection point run by your dealer or local council.



When you decide to discard the device, please do not place it (even without batteries) into the household refuse bin. Contact your local council to find out about environmentally friendly and proper disposal of the device as electrical scrap.



The packaging is composed of natural materials and can be recycled. Dispose of these materials properly in the interests of environmental protection.

● Warranty and service

For details of the service hotline for your country, please refer to the enclosed warranty documents.

Our device was manufactured with the greatest of care. Nevertheless, in the event of a malfunction we guarantee the quality and function of the product within the scope of our terms of guarantee. The warranty period is 36 months and begins on the date of purchase. Please retain your receipt as proof of the purchase date. The statutory warranty is not restricted by this guarantee.

The guarantee excludes:

- parts subject to regular wear and tear such as all trimming and cutting parts.
- damage to fragile parts.
- damage resulting from unauthorised interference.
- damage resulting from the use of non-original spare parts.
- damage resulting from improper handling.
- damage resulting from force majeure.
- damage resulting from non-compliance with the care instructions.
- batteries.

Warranty and service / Conformity

We are furthermore unable to assume liability for the consequences of improper use of the device.

● **Conformity**

The CE marking has been applied to the product in compliance with the following European directives:


EU Low Voltage Directive (2006 / 95 / EC)
Electromagnetic Compatibility (EMC) Directive
(2004 / 108 / EC)


The Declaration of Conformity is held by the distributor:

LUTTER & PARTNER GmbH
Schleissheimer Strasse 93 a
D-85748 Garching bei München

NOTE:

We reserve the right to make technical and optical modifications to the article and its accessories in the course of product improvement.

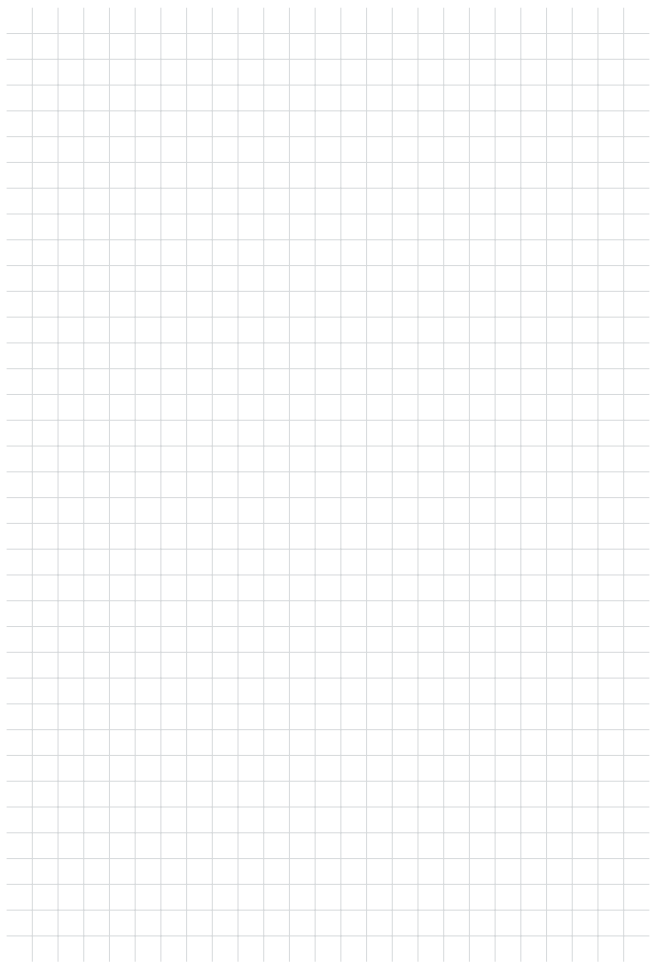

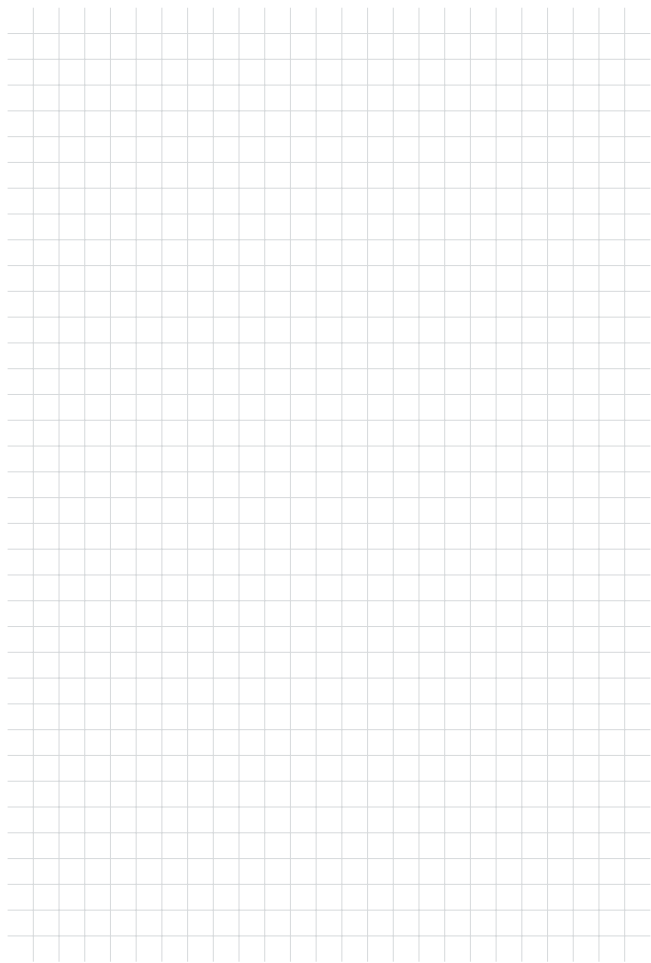

IAN 61924

LUTTER & PARTNER GmbH

Schleissheimer Strasse 93 a
D-85748 Garching bei München
L&P Art.-Nr. 9133711

© by ORFGEN Marketing

Last Information Update: 12/2010
Ident.-No.: SHBS 1000 A1122010-6

