

# YURAKU

---

## **Yur.Photo 8M / 8B**


Yur-PFR80M / B

### **User manual**

Version 1.00



## Connecting diagram

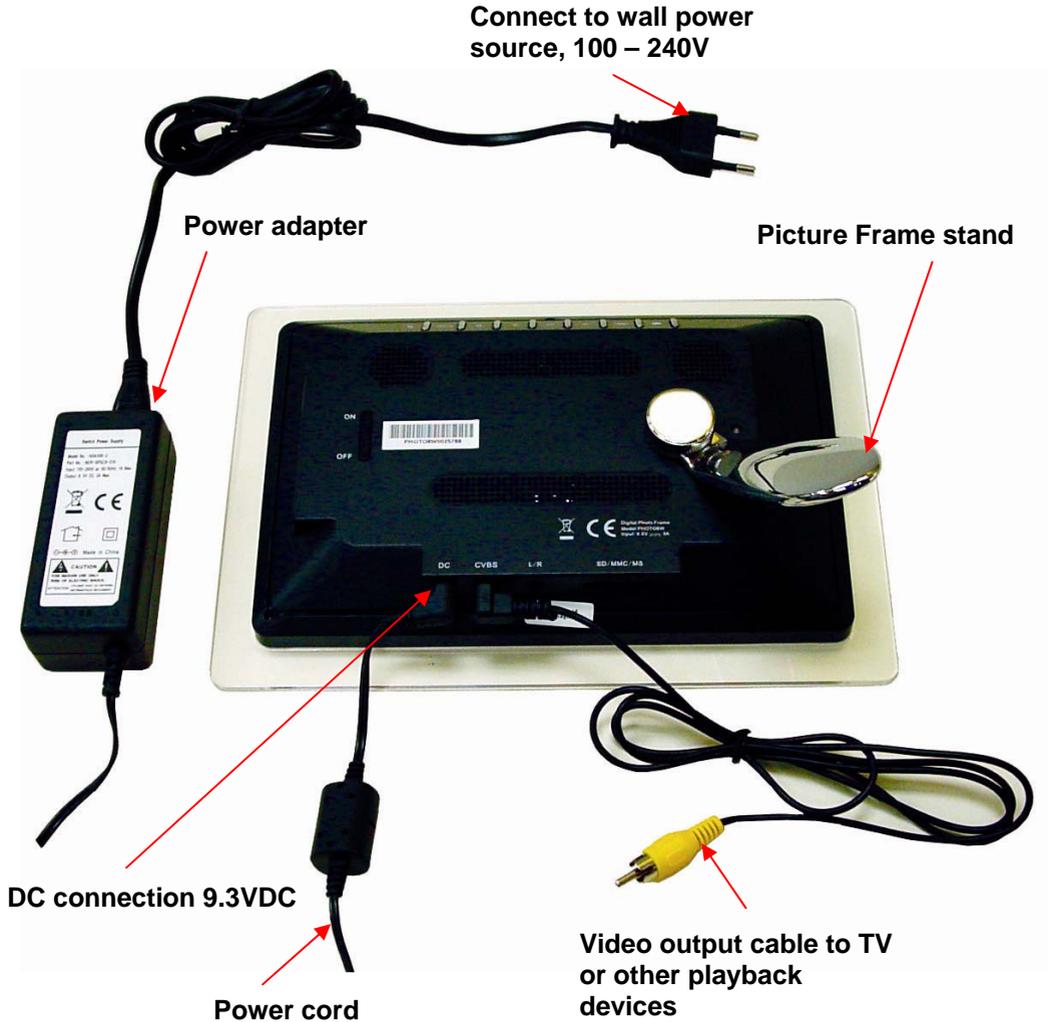

## Notes:

This unit has a hot plug-in function memory card reader. But in order to protect the unit, please turn off the power before unplugging or plugging the memory card.

## Safety Information:

1. Use the included DC 9.5V/3A power adapter
2. Make sure the power is off before cleaning the picture frame, lightly wipe it with dry soft cloth.
3. Do not place the unit near heater or any other heat sources
4. Do not splash or fill it with liquids
5. Keep the screen cleaning (please use dry soft cloth for cleaning)
6. Temperature and Humidity  
Operating temperature:  $+0^{\circ}\text{C} \pm 45^{\circ}\text{C}$ ,  $+32^{\circ}\text{F} \pm 113^{\circ}\text{F}$   
Humidity: 20% - 80%
7. This equipment must comply with the voltage type labeled on the unit to use.
8. Disconnect the DC adaptor before cleaning the photo viewer.
9. Keep the frame away from strong magnets, heat sources, direct sunlight and excessive dust.
10. Only clean the cover, acrylic body, LCD screen and buttons with a soft wet towel, Do NOT use a rough towel, sprays or chemical cleaning equipment like alcohol, benzene, etc.

Many Thanks for selecting one of our Yuraku products.

Enjoy the beautiful features of the latest digital display technology.

Please read this user manual before installing, setting up or using the product.

After reading these instructions, you will be able to use it in minutes.



### WEEE (Waste Electrical and Electronic Equipment Directive)

If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



## ***Introduction***

View your digital photo images on the vivid 8" Yur.Photo 8M / 8B Digital Picture Frame. The 16:9 ratios provide you wide versatility for different digital camera photo formats. Comes with a memory card slot for three different memory cards, giving you more flexibility with the image sources. The Yur.Photo 8B excludes the speakers.

## ***Features:***

- 8" high definition 16:9 Digital screen
- Preview matrix (3 x 4) 12 small preview images
- Support SD / MMC / MS memory cards
- USB 1.1 / 2.0 interface
- Built-in 2 x 1.5Watts stereo speakers (8M only)
- Support JPEG file format with MP3 background playing (8M only)
- Able to process MP3 / WMA / WAV / AVI / MPEG4 audio and video files (8M only)
- Multiple functional picture viewing
- 8 kinds of OSD languages
- Image enhancing functions to improve image quality
- Video output
- Sleek looking classy exterior

## ***Description:***

### ***Picture: JPEG***

1. Preview matrix (3 x 4 matrix) small images
2. Automatic slide show
3. Changeable slide show durations
4. Picture rotation and zoom function
5. Slide show with background music (MP3 format). (Please select MP3 song to play first, and then play the Jpeg. Otherwise the function will be disabled. (8M only)
6. Display folder name and resolution information
7. Brightness / Contrast / Hue / Saturation adjustments
8. Interchangeable logo designs for customization

### ***Audio: MP3 format (8M only)***

1. Play / Pause, Volume +, Volume -, Music effects such as Equalizer and Reverb functions.
2. Display folder name, Music filename, playback time lapse, etc.

### Support Playback Format

1. Video: MPEG1, MPEG2, MPEG4, DivX3.11 / 4.X / 5.X, XviD

### Support Video Format

Support AVI, MP4, .dat, .mpg formats. The Video playback modes are

1. Play / Pause, Volume +, Volume -, Zoom functions
2. Display folder name, size and time

Note: Motion-JPEG format is not available

### Memory Card Reader

Support 3 main memory cards: MS, SD and MMC cards

### Easy use:


#### Easy steps to usage

- 1) Remove the memory card from your camera
- 2) Connect the power supply by using the AC-adaptor
- 3) Put the memory card in the slot with the front side facing the unit
- 4) View your pictures

### Operations:

#### Remote Control

1. MODE - Press to browse 12 small pictures when playing picture.
2. LCD ON/OFF - Press to open or close LCD screen.
3. DIRECTION BUTTONS - Use to select menu items or settings.
4. SETUP - Press to access the photo frame's setup menu.
5. NUMBER BUTTONS - Select picture when playing pictures.
6. PREVIOUS SKIP - Press to skip the previous menu or track.
7. NEXT SKIP - Press to skip the next menu or track.
8. PAUSE - Press to pause the playback.
9. DIGITAL - Press to shift between

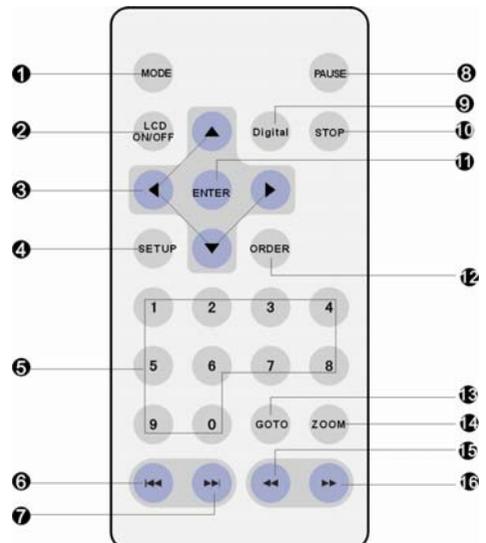

USB, memory card.

10. STOP

- a. Press to stop the playback when playing video files.
- b. Press this button to back to the playback list when browsing 12 small pictures.

11. ENTER - Press to play or confirm selection.

12. ORDER - Press to shift between random and sequence.

13. GOTO - Press to select the desired starting time or track.

14. ZOOM-Press this button and, to zoom in or zoom out the picture; While press this button and to move the picture.

15. REVERSE-Press to search backward fast.

16. FORWARD-Press to search forward fast.

### *How to use the Remote Control*


1. Insert the coin battery into the remote control,
2. Point the remote control toward to the remote sensor on the unit's front panel.
3. The operating distance is within 3m.

Note: When using the remote control, no obstacle should be found between the remote control and remote sensor.

Normally the battery can last for around one year. If the remote control does not work, replace the battery. For long period of inactivity, take out the battery to prevent battery leakage and possible damage to the remote control.

### **USB/SD/MMC/MS PLAYBACK**

- 1 Plug the USB into the unit USB interface as desired, or connect the SD / MS / MMC card into the unit's SD / MS / MMC slot as below:

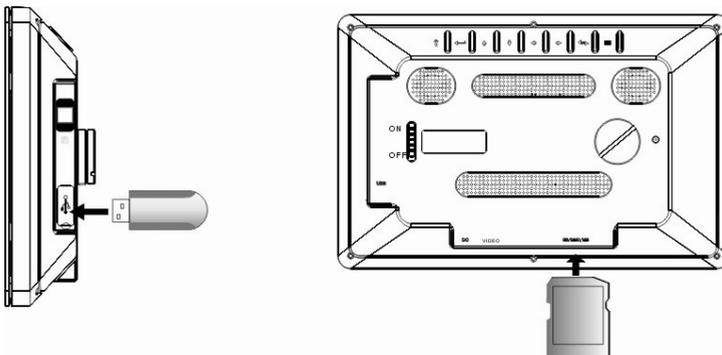


- 2 After correct connection, turn on the Digital frame power;
- 3 Press **[=]** ( Digital) to choose USB or memory card for playback.

### Under Picture Mode

- 1 Select pictures: press **↑ ↓ ← →** direction buttons to do up / down / Right / left selection
- 2 Full screen display: press **←** button, the unit will start playback from the current selected picture.
- 3 Display content (display picture size and browse the picture).

### JPEG PLAYBACK

**Example:** Press **[=]** (Digital) to choose USB or memory card, the screen will display as below:

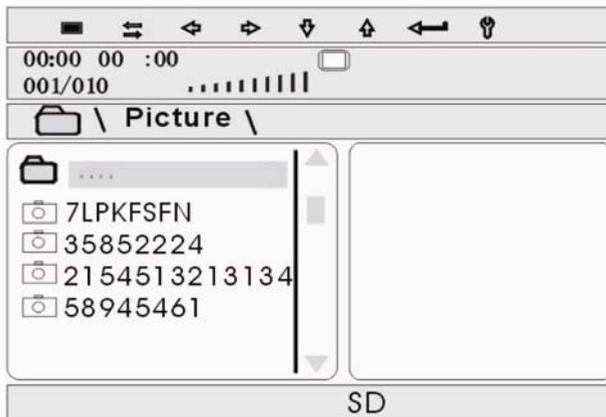

Use **↑ ↓** direction button to select a JPEG file, and then press **[←]** button to enter into playback.

## USB/SD/MMC/MS PLAYBACK



Press  $\uparrow$   $\downarrow$  direction button to view previous or next picture while playing the pictures.  
Press  $\leftarrow$   $\rightarrow$  direction button to rotate the pictures in different angel (such as clockwise / counter-clockwise rotate 90°) on normal playing.

### **Note:**

- When on browsing menu mode, you are suggested to do the below operations to enter file list menu.
- 1 Press  MODE (on the panel) / STOP button once to back to preview menu (12 small pictures).
  - 2 Press  MODE (on the panel) / STOP button again to enter file list.
- When on browsing menu mode, press  MODE (on the panel) / STOP button twice to back to file list.


### **Under Video Mode**

- Select Movie: press  $\uparrow$   $\downarrow$   $\leftarrow$   $\rightarrow$  direction buttons to do up/down/right/left selection;
  - FWD: press  $\gg$  to fast search forward;
  - REV: press  $\ll$  to fast search backward;
- When playing video format files, press  MODE (on the panel)/ STOP to enter file list menu.
  - On video playback, no captured function;
  - For playing the video format files, back to playback list to switch digital.

## System Setup


### Main Menu Setting

The pictures and parameters of audio settings can be set according to the contents and types in the USB and memory card. Press **【 ⚙️ 】** (setup) button on the rear panel, the screen will display the main menu .Use **↑ ↓** direction button to highlight the setup page that you need. And then press **⇒** direction button to enter into the submenu. Press the **⇐** direction button to back to the main menu and press **【 ⚙️ 】** (setup) button to exit.

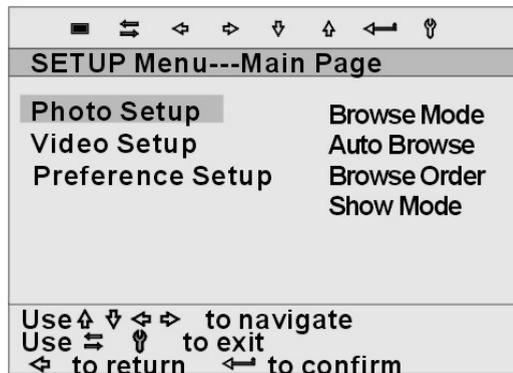

### Photo Setting

Choose “Photo Setting “ in the main menu ,you will get a menu shown as below:

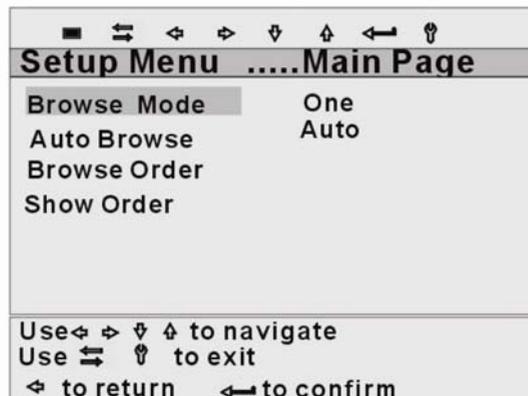

Press  $\uparrow$   $\downarrow$  direction button to choose the best way to enjoy the pictures.

### **Slide Show (Browse) Mode**

You can set the view mode according to your fancy in the unit.

Selecting “One”: the unit will play only one picture each time;

Selecting “Out”, the unit will play the pictures continuously.

### **Auto Slide (Browse)**

There are “5sec, 20sec, 1min “ and so on for your selection;

The interval for viewing picture is varied depending on different time selected.

### **Slide Show (Browse) Order**

Select “Random” : the pictures will be played in random;

Select “Sequence” : the pictures will be played in continued and circulatory sequence.

### **Scale Size (Show) Mode**

Selecting “Normal”, you can rotate the picture, while selecting “Full”, no this function.

## *Video Setting*

After finishing audio setting, press  $\leftarrow$  button to back to the main menu to do other options. In the main menu, use  $\downarrow$  direction button to select Video Setup, and press **【↔】** button to enter, the screen will display as below.

### **Select Hue Saturation**

Considering of outside environmental light or personal fancy, adjust hue, saturation.

### **Select Brightness, Contrast**


Considering of outside environmental light or personal fancy, adjust brightness.

Press **【↔】** button on the option menu for brightness or contrast to enter into setting up column, increase or decrease the brightness and contrast by  $\leftarrow$ ,  $\rightarrow$  direction.

**TV Type** : In the “TV Type”, you can choose “PAL、NTSC” mode.

## **Preference Setting**

After finishing video setting, press  $\leftarrow$  button to back to the main menu .Use  $\downarrow$  direction button to select Initial setting page, and press **【↔】** button to enter .the screen will display as below:

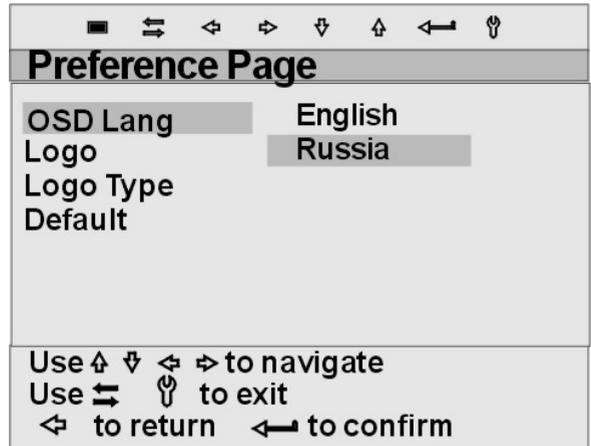

## **OSD LANG**

Two OSD languages are available: English, Russian. You can select it according to your preference.

## **SYSTEM SETUP**

### **LOGO**

When playing pictures: Use ↑, ↓ direction button to highlight Captured on the preference setup page and use → button to choose Captured menu, press ↶ button to achieve capture function

### **LOGO TYPE**


Select "Captured": while playing USB /Memory card, you can change the logo type by choosing "Captured" in the preference setting page

Select "Default": a initial picture will be viewed


### **DEFAULT**

Select "Reset", press [↶] button will back to the default status.

**Key Functions:**

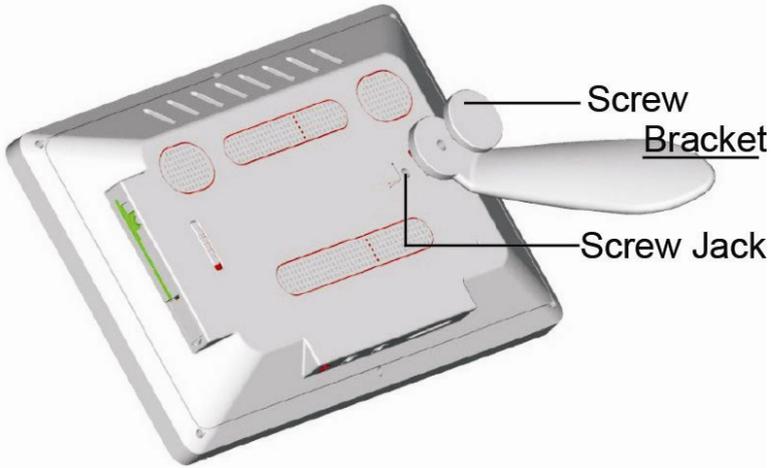


**Schematic Diagram (8B)**

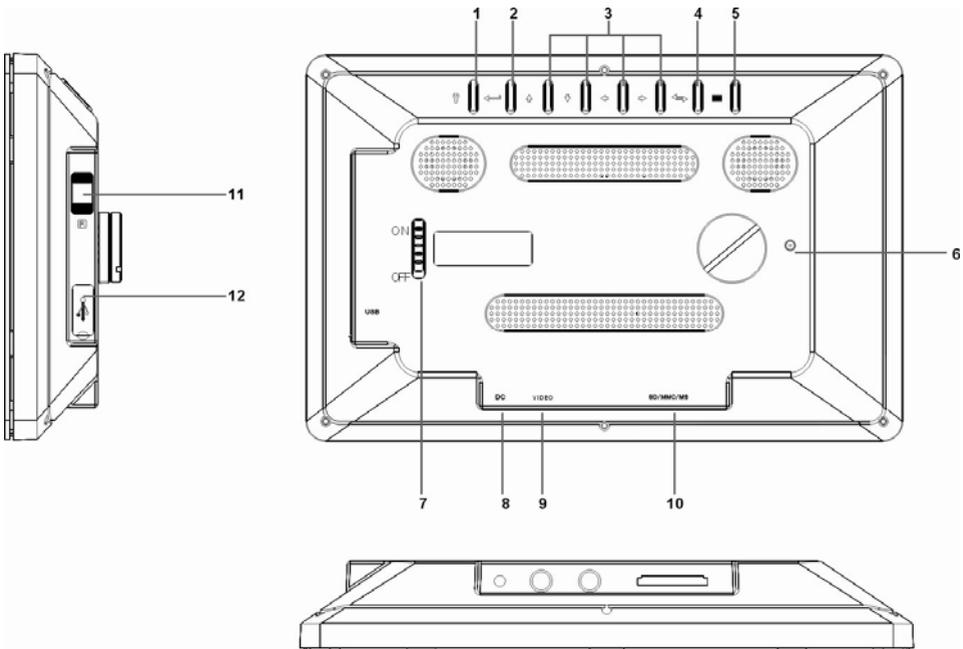

- 1 **SETUP** – Press to enter into setup menu;
- 2 **ENTER** – Press to enter into playback status while playing pictures or video files;
- 3 **DIRECTION BUTTONS** (  $\blacktriangle$   $\blacktriangledown$   $\blacktriangleleft$   $\blacktriangleright$  ) – Press to enter into make selections in menus;
- 4 **DIGITAL** - Press to shift between USB, memory card;
- 5 **MODE** - For pictures: press this button once to enter into browse 12 small pictures, while twice to back to the file list; - For list: Press this button to stop when playing Video files;
- 6 **POWER LED**
- 7 **POWER SWITCH**
- 8 **POWER** socket, DC
- 9 **VIDEO OUTPUT** socket (CONNECT TO TV)
- 10 **SD / MMC / MS CARD** slot
- 11 **REMOTE CONTROL RECEIVE SENSOR**
- 12 **USB** interface
- 13 **Left Speaker**
- 14 **Right Speaker**

### Parts Diagram (8M)

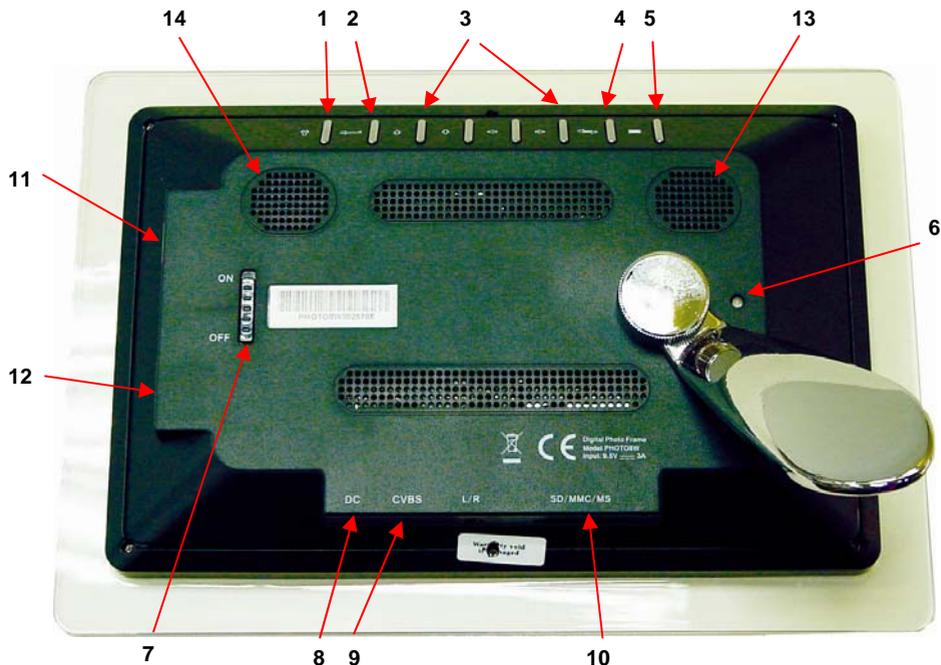

All specifications and information are subject to changes without further notices

---

**Specifications:**

8" (20.3cm) high definition Digital screen  
Aspect Ratio: 16:9  
Resolution: 720 x 480  
Contrast: 300:1  
LUM: 250nit  
Support SD / MMC / MS cards  
USB 1.1 / USB 2.0 interface  
Built-in 2 x 1.5Watts stereo speakers  
Support JPEG file format and MP3 as background player (8M only)  
Compatible with MP3 / WMA / WAV / AVI / MPEG4 format (8M only)  
8 kinds of OSD language  
Browse / Thumbnail / Slideshow / Zoom / Rotate Picture viewing  
Image enhanced: Brightness / Hue / Saturation / Contrast  
Video output jack: CVBS  
Dimension size: 246 x 170 x 34mm  
Weight: 0.62kg

**Package contents:**

Yur.Photo 8M or 8B  
Power Adapter (DC 9.3V/3A)  
Remote Control  
Video Cord  
Bracket & Screws

**System Requirements:**

AC 240V power supply  
Secure Digital up to 2GB  
Multimedia Card up to 2GB  
Memory Stick up to 2GB

- end -