

Focus 3 Universal Remote Control

Users Guide

PREPROGRAMMED FOR YOUR SET-TOP BOX

(Note: Some keys different than displayed)



Table of Contents

About Your UNIVERSAL FOCUS 3-MODE.....	3
Batteries.....	3
The Keypad.....	4
Device Keys:.....	5
LED:.....	5
AV Key:.....	5
Menu Key:.....	5
Power Key:.....	5
Shift Key:.....	5
Number Keys:.....	5
Menu Key:.....	5
Channel Up / Down Control:.....	5
Mute Key:.....	5
Volume Up / Down Control:.....	5
Directional Keys.....	5
OK Key.....	5
TXT Key:.....	6
Action Key:.....	6
The BACK Key.....	6
VCR / DVD keys (PLAY, PAUSE, STOP, REW , FF, RECORD).....	6
Setting up the FOCUS 3-MODE.....	6
Step and Set.....	7
Code blink out.....	7
Quick Code Reference.....	8
Volume Punch Through.....	8
Real Time Macro.....	9
Troubleshooting.....	9
MANUFACTURER'S CODES.....	11
Setup Codes for TVs.....	11
Setup Codes for TVs (DLP).....	14
Setup Codes for TVs (HDTV).....	14
Setup Codes for TVs (LCD).....	14
Setup Codes for DVD Players.....	15
Setup Codes for DVD Recorders.....	17
Setup Codes for VCRs.....	17

About Your UNIVERSAL FOCUS 3-MODE

Congratulations on your purchase of the FOCUS 3-MODE Universal Remote Control. By choosing the FOCUS 3-MODE remote you have opted for the User Friendly remote control solution. Made according to the highest quality, the FOCUS 3-MODE will provide you with long-term satisfaction. Please read these enclosed instructions carefully before putting your FOCUS 3-MODE to use.

Your FOCUS 3-MODE Remote Package contains:

- Your FOCUS 3-MODE Remote
- Your FOCUS 3-MODE Manual

Your Manual is divided into two parts: the set-up instructions and the device codes.

PLEASE DO NOT DISCARD THIS MANUAL AS YOU MAY NEED IT AGAIN IN THE FUTURE!

Your FOCUS 3-MODE can operate three devices: a Television, DVD Player and the ADB set top box.

Batteries

Your FOCUS 3-MODE Remote needs 2 new "AA/LR6" Alkaline batteries.

1. Push and slide the battery door downwards and lift it up to remove it.
2. Match the batteries to the (+) and (-) marks inside the battery case, then insert the batteries.
3. Place the battery cover by sliding upwards and allowing it to click back into position.

- Also it is recommended that you do not use rechargeable batteries.

- On the inside of the battery compartment door you will find a label on which to write your Set-Up Codes for future reference. This you will do after setting up your UNIVERSAL FOCUS 3-MODE remote for your devices.

The Keypad

Please refer to the picture of the UNIVERSAL FOCUS 3-MODE Remote Control .



Device Keys:

The TV, DVD & STB keys select the home entertainment device you wish to control. For example, pressing the TV key allows the remote to control the functions of your television. Pressing the DVD key allows the remote to access either DVD or VCR devices.

LED:

During the use of your FOCUS 3-MODE, the LED under the corresponding device key will light up red.

AV Key:

The AV key operates the same function it did on your original remote.

Menu Key:

The Menu key brings up the menu.

Power Key:

The Power key controls the same function as it did on your original remote.

Shift Key:

The Shift key is used to set-up your FOCUS 3-MODE Remote Control and to access special functions.

Number Keys:

The Number keys (0-9) provide the functions just like your original remote, such as the direct access to program/channel selection.

Menu Key:

The Menu key brings up the menu list, The menu allows scrolling access to Guide, PVR (if so equipped), Vault, Settings, Favorites, Search. Use Navigation keys to highlight an item and OK to select it.

Channel Up / Down Control:

These keys control the same functions as your original remote control.

Mute Key:

The Mute key operates the same function it did on your original remote.

Volume Up / Down Control:

These keys operate just as those on your original remote.

Directional Keys

These keys will allow you to navigate through menus or the program guide.

OK Key

If your original remote control required that you press an "OK" or "ENTER" key during Menu operation, this key can be used for this function.

TXT Key:

The TXT key accesses the Closed Captioning capabilities of the ADB set top box.

Action Key:

This key accesses the electronic program guide. Once the guide is visible pressing this key again cycles through your favorites lists. Once the cycle returns to the original selection the guide will disappear. To navigate one channel at a time, use the navigation keys. To scroll ahead or back by one screen use the CH+/CH- keys. You can scroll ahead in time using the right navigation key.

The BACK Key

This key allows quickly jumping between the current channel and the last accessed channel.

VCR / DVD keys (PLAY, PAUSE, STOP, REW, FF, RECORD)

After pressing the DVD mode key, the Playback keys operate the same functions of your Video Recorder or DVD Keys.

Setting up the FOCUS 3-MODE

Example: To set up the FOCUS 3-MODE for your television:

1. Make sure your device (television) you wish to operate is switched on (not in standby).
2. Find the code for your device in the Code List (page). The device codes are listed per device type and brand name. Also the most popular code for each brand is listed first. If your brand is not listed at all, try the Search Method on page 7.
3. Press the device mode key (e.g. TV) on the Focus remote for the device you wish to set up.
4. Press and hold down FUNC until the red light blinks twice (the red light will blink once then twice).
5. Enter your four-digit device code using the number keys. The red light will blink twice.
6. Now aim the FOCUS 3-MODE remote at your device (television) and press POWER. If your device switched off, the FOCUS 3-MODE is ready to operate your device.

- Most TV's do not switch back on pressing the POWER key, please try pressing a "number" key or the "TV-text off" key to switch your TV back on.

- If your device does not respond, follow steps 1 through 6 with each code listed for your brand. If none of the codes listed for your brand operate your device, then try the Search Method described on page 7, even if your brand is not listed at all.

- Some codes are quite similar. If your device does not respond or is not functioning properly with one of the codes, try another code listed under your brand.

- If the original remote control from your Video Recorder / DVD player did not have a POWER key, press PLAY instead of POWER during step 6.

- To set up your other devices, follow the same instructions above, only press the appropriate device key during step 3.

- Remember to press the correct device key before operating your device. Only one device can be assigned to a device key.

- Write your device code in the applicable four digit boxes provided in the battery compartment and on page 8 for future reference.

Step and Set

--> If your device does not respond to the FOCUS 3-MODE after you have tried all the codes listed for your brand.

--> If your brand is not listed at all.

The Search Method allows you to scan through all the codes contained in the memory of the FOCUS 3-MODE.

Example: To search for your television code:

1. Switch your television on (not in standby mode).
2. Press the TV key on the FOCUS 3-MODE.
3. Press and hold down FUNC key until the red light blinks twice (the red light will blink once then twice).
4. Press 9 9 1. The red light will blink twice.
5. Next, press a function. *
6. Aim the FOCUS 3-MODE at your Television. Now press PROG+ over and over, in order to scan through the codes available in the memory. You may have to press this key many times (up to 150 times) so please be patient.

If you skip past a code, you can go to the previous code(s) by pressing the PROG- key. Remember to keep pointing the FOCUS 3-MODE at your Television while pressing this key. **

7. As soon as you have found an appropriate code, press Shift key to store the code.

(*) You can sample all functions (0, 1,2 3, Power, Volume Up, Play Stop and Mute), the last function that was sampled before PROG up/PROG down will be the designated function to send for each PROG up/PROG down key press. If no key is pressed before PROG up/PROG down then the default function will be power.

(**) In each code you can test the following functions: 0, 1,2 3, Power, Volume Up, Play Stop and Mute. After sampling these functions you can continue the search with the previous (PROG down) or next (PROG up) code which will send the function that was originally pressed after 991.

- Most TV's do not switch on pressing the POWER key. Please try pressing a "number" key or the "TV-text off" key to switch your TV back on.

- If you cannot control your Television properly, please continue the Search Method, you may be using the wrong Code.

- To search for the code for another device follow the instructions above only press the appropriate device key instead of TV during step 2.

- If the original remote control of your Video recorder or DVD player does not have a POWER key, press PLAY instead of POWER during step 5.

Code blink out

Once you have Set-Up your FOCUS 3-MODE, you can blink back your Set-up Code for future reference.

Example: to blink out your television code:

1. Press the TV key once.
2. Press and hold down FUNC until the red light blinks twice (the red light will blink once then twice).
3. Press 9 9 0. The red light will blink twice.
4. For the first digit of your four-digit code, press 1 and count all the red blinks. If there are no blinks, the digit is "0".
5. For the second digit of your four-digit code, press 2 and count all the red blinks. If there are no blinks, the digit is "0".
6. For the third digit of your four-digit code, press 3 and count all the red blinks. If there are no blinks, the digit is "0".

7. For the fourth digit of your four-digit code, press 4 and count all the red blinks. If there are no blinks, the digit is "0". Now you have your four-digit code.

- To blink back the code for your other devices, press the appropriate device key during step 1.

Quick Code Reference

Make sure you write down the codes for your devices in the boxes below and in the battery compartment for future easy reference.

Device Type

- 1
- 2
- 3

Volume Punch Through

You may be able to use some functions of your Television, DVD player or ADB set top box at the same time. For example: if you are watching a program on your DVD player, you can adjust the volume (a TV function) without pressing the TV mode key on your FOCUS 3-MODE. The table below lists some of the possibilities.

Last Device Mode Key Pressed:	You Can Control:
STB	TV volume up and down, mute
DVD	TV volume up and down, mute

To punch through to TV volume while in the DVD or STB mode:

1. Press and hold FUNC until the red light blinks twice.
2. Press 9 9 3.
3. Then press the TV key and the red light will blink twice.

To cancel the "Volume Punch Through" per mode:

(Example: to cancel the "Volume Punch Through" for the DVD mode)

1. Press DVD once.
2. Press and hold down the FUNC key until the red light blinks twice.
3. Press 9 9 3.
4. Then press the Volume (-) key and the red light will blink four times.

Example: being in DVD mode, you will be able to control VOL+/- or MUTE functions of your DVD (provided it has volume control).

To cancel the "Volume Punch Through":

1. Press and hold SHIFT until the red light blinks twice.
2. Press 9 9 3.
3. Press the Volume (+) key and the red light will blink four times.

Real Time Macro

You can program your UNIVERSAL FOCUS 3-MODE to issue a sequence of commands at the press of one button. For example, you may want to turn off your TV, DVD and ADB set top box at the same time. Any sequence you regularly use can be reduced to one keystroke for your convenience. A key that is programmed with a Macro works through all modes (provided it is accessible in that mode). You can install a Macro on any key except for the Mode keys and SHIFT key.

To set up a Macro:

1. Press and hold SHIFT until the red light blinks twice.
2. Press 9 9 5
3. Press the key to which you want to assign the Macro to
4. Press the command you want program in the macro (up to 8 commands are possible)
5. Press the SHIFT key to store the Macro

To clear a Macro setup:

1. Press and hold SHIFT until the red light blinks twice.
2. Press 9 9 5
3. Press the key to which you had the Macro assigned to
4. Press the SHIFT key to clear the Macro

Feature Reset (980)

The feature reset clears all configuration settings that you programmed with features as Macros and Volume Lock.

1. Press and hold FUNC until the red light blinks twice.
2. Press 9 8 0
3. A successful reset is indicated when the red light will blink twice, pause and blink twice again.

Master Reset (977)

The master reset clears all configuration settings that you programmed with features as Macros and Volume Lock as well as it clears the programmed devices codes. The remote will revert back to the default settings for features and default device codes. As a result the remote will start up in the STB mode.

1. Press and hold FUNC until the red light blinks twice.
2. Press 9 7 7
3. A successful reset is indicated when the red light blinks twice, pause and blink twice again

Troubleshooting

Your brand is not listed in the code section?

- Try the search method on page 7.

The FOCUS 3-MODE does not operate your device(s)?

- a. Try all the codes listed for your brand.
- b. Try the search method on page 7.

The FOCUS 3-MODE is not performing commands properly?

- You may be using the wrong code. Try repeating the Direct Set-Up using another code listed under your brand or start the search method over again to locate the proper code.

Problems changing channels?

- Enter the program number exactly as you would on your original remote.

The FOCUS 3-MODE does not respond after pressing a key?

- Make sure you are using new batteries and are aiming the FOCUS 3-MODE at your device.

The red light (LED) does not blink when you press a key?

- Replace batteries with 2 fresh, new “AA/LR6” alkaline batteries.

MANUFACTURER'S CODES

Setup Codes for TVs

A-Mark	0003
Abex	0032
Accurian	1803
Action	08731
Admira	0093, 0463
Advent	0761, 0783, 0815, 0817, 0842, 1933
Adventura	0046
Aiko	0092
Aiwa	0701
Akai	0812, 0702, 0030, 0098, 0672, 1207, 1903, 1935
Alaron	0179, 0183, 0216
Albatron	0700, 0843
Ambassador	0177
America Action	0180
Ampro	0751
Anam	0180, 0004, 0009, 0068
Anam National	0055, 0161
AOC	0030, 0003, 0019, 0052, 0137, 0185, 1365
Apex Digital	0748, 0879, 0765, 0767, 0890, 1217, 1943
Archer	0003
Astar	1548
Audiovox	0451, 0180, 0092, 0003, 0623, 0710, 0802, 0846, 0875, 1284, 1937, 1951, 1952
Aventura	0171
Axion	1937
Belcor	0019
Bell & Howell	0154, 0016
BenQ	1032, 1315
Bradford	0180
Brockwood	0019
Broksonic	0236, 0463, 0003, 1935, 1938
Byd:sign	1309, 1311
Cadia	1283
Candle	0030, 0046, 0056, 0186
Carnivale	0030
Carver	0054, 0170
CCE	0217, 0329
Celebrity	0000
Celera	0765
Champion	1362
Changhong	0765
Cinego	1986
Citizen	0060, 0030, 0092, 0039, 0046, 0056, 0186, 0280
Clairtone	0185
Clarion	0180
Commercial Solutions	1447, 0047
Concerto	0056
Contec	0180, 0157, 0158, 0185
Craig	0180, 0161
Crosley	0054
Crown	0180, 0039
Curtis Mathes	0047, 0054, 0154, 0451, 0093, 0060, 0702, 0030, 0145, 0166, 1347, 1147, 0747, 0466, 0056, 0039, 0016
CXC	0180
CyberHome	0794
Cytron	1326
Daewoo	0451, 0092, 1661, 0019, 0039, 0066, 0067, 0091, 0623, 0661, 0672
Daytron	0019
Dell	1080, 1178, 1264, 1403
Denon	0145, 0511
Denstar	0628
Diamond Vision	1996, 1997
Dumont	0017, 0019
Durabrand	0463, 0180, 0178, 0171, 1034, 0003
Dwin	0720, 0774
Dynatech	0049
Electroband	0000, 0185
Electrograph	1623, 1755
Electrohome	0381, 0389, 0409
Emerson	0154, 0236, 0463, 0180, 0178, 0171, 1963, 1944, 0623, 0282, 0280, 0270, 0185, 0183, 0182, 0181, 0179, 0177, 0158, 0039, 0038, 0019
Emprex	1422, 1546
Envision	0030, 0813, 1365
Epson	0833, 0840, 1290
ESA	0812, 0171, 1944, 1963
Fisher	0154, 0159
FlexVision	0710
Fujitsu	0179, 0186, 0683, 0809, 0853
Funai	0180, 0171, 0179, 1271, 1963
Futuretech	0180

Gateway	1001, 1002, 1003, 1004, 1755, 1756
GE	1447, 0047, 0051, 0451, 0178, 1347, 0747, 0282, 0279, 0251, 0174, 0138, 0135, 0055, 0029, 0027, 0021
Gibraltar	0017, 0030, 0019
Go Video	0886
GoldStar	0178, 0030, 0001, 0002, 0019, 0032, 0106, 0409
Goodmans	0360
Gradiente	0392
Grunpy	0180, 0179
Haier	1034, 0768
Hallmark	0178
Hannspree	1348, 1351, 1352
Hantarex	1338
Harley Davidson	0043, 0179
Harman/Kardon	0054, 0078
Harvard	0180, 0068
Havermy	0093
Helios	0865
Hello Kitty	0451
Hewlett Packard	1088, 1089, 1101, 1494, 1502
Hisense	0748
Hitachi	1145, 0145, 0016, 0032, 0038, 0056, 0095, 0097, 0151, 0173, 0227, 0279, 0409, 0413, 0797, 1960
HP	1088, 1089, 1101, 1494, 1502
Hyundai	0849, 1219, 1294
iLo	1286, 1603, 1990
Infinity	0054
Initial	1603, 1990
Insignia	0171, 1204, 1326, 1517, 1963, 2002
Inteq	0017
Janeil	0046
JBL	0054
JCB	0000
Jensen	0761, 0050, 0815, 0817, 1299, 1933
JVC	0053, 0036, 0069, 0160, 0169, 0182, 0731, 1253
Kamp	0216
Kawasho	0158, 0216, 0308
Kaypani	0052
KEC	0180
Kenwood	0030, 0019
KLH	0765, 0767, 1962
Kloss	0024, 0046, 0078
KMC	0106

Konka	0628, 0632, 0638, 0703, 0707
Kost	1262, 1483
KTV	0180, 0030, 0039, 0183, 0185, 0217, 0280
LG	1265, 0178, 0442, 0700, 0829, 0856, 1178, 1325, 1423, 1758, 1993
Loewe	0136
Logik	0016
Luxman	0056
LXI	0047, 0054, 0154, 0156, 0178, 0148, 0747
Magnavox	1454, 0054, 0030, 0706, 1963, 1944, 1525, 1254, 1198, 0802, 0386, 0230, 0187, 0186, 0179, 0096, 0036, 0028, 0024, 0020
Majestic	0015, 0016
Marantz	0054, 0030, 0444, 0704, 0854, 0855, 1154, 1398
Matsushita	0250, 0650
Maxent	0762, 1211, 1755
Megapower	0700
Megatron	0178, 0145, 0003
MEI	0185
Memorex	0154, 0463, 0150, 0178, 0016, 0106, 0179
MGA	0150, 0178, 0030, 0019, 0155
Midland	0047, 0017, 0051, 0032, 0039, 0135, 0747
Mintek	1603, 1990
Minutz	0021
Mitsubishi	0093, 1250, 0150, 0178, 0014, 0019, 0098, 0155, 0331, 0358, 0836, 0868, 1550
Monivision	0700, 0843
Motorola	0093, 0055, 0835
Moxell	0835
MTC	0060, 0030, 0019, 0049, 0056, 0091, 0185, 0216
Multitech	0180, 0049, 0217
NAD	0156, 0178, 0866
NEC	0030, 0019, 0036, 0056, 0170, 0434, 0497, 0882, 1398, 1704
Neovia	1338
NetTV	0762, 1755
Nikko	0178, 0030, 0092, 0317
Noblex	0430
Norcent	0748, 0824, 1089, 1365, 1589, 1590, 1591
Norwood Micro	1286, 1296, 1303

Noshi	0018
NTC	0092
Olevia	1144, 1240, 1331, 1610
Olympus	1342
Onwa	0180
Optimus	0154, 0250, 0166, 0650
Optoma	0887
Optonica	0093, 0165
Orion	0236, 0463, 1463, 0179
Panasonic	0250, 0051, 0055, 0162, 0226, 0338, 0375, 0650, 1291, 1410, 1941, 1946, 1947
Penney	0047, 0156, 0051, 0060, 0178, 0030, 1347, 0747, 0309, 0149, 0138, 0135, 0110, 0039, 0032, 0027, 0021, 0019, 0018, 0003, 0002
Petters	1523
Philco	0054, 0030, 0019, 0020, 0028, 0096, 0302
Philips	1454, 0054, 0690, 1154, 1483
Pilot	0030, 0019, 0039
Pioneer	0166, 0038, 0172, 0679, 0866, 1260, 1398
Polaroid	0765, 0865, 1262, 1276, 1314, 1316, 1326, 1327, 1328, 1341, 1498, 1523, 1991, 1992
Portland	0092, 0019, 0039
Prima	0761, 0783, 0815, 0817, 1933
Princeton	0700, 0717
Prism	0051
Proscan	1447, 0047, 0747, 1347
Proton	0178, 0003, 0031, 0052, 0466
Protron	1320, 1323
Proview	0835, 1401, 1498
Pulsar	0017, 0019
Quasar	0250, 0051, 0055, 0165, 0219, 0650
RadioShack	0047, 0154, 0180, 0178, 0030, 0019, 0032, 0039, 0056, 0165, 0409, 0747
RCA	1447, 0047, 2002, 1958, 1953, 1948, 1547, 1347, 1247, 1147, 1047, 0747, 0679, 0278, 0174, 0135, 0090, 0038, 0029, 0019, 0018

Realistic	0154, 0180, 0178, 0030, 0019, 0032, 0039, 0056, 0165
Rhapsody	0183, 0185, 0216
Runco	0017, 0030, 0251, 0497, 0603, 1398
Sampo	0030, 0032, 0039, 0052, 0100, 0110, 0762, 1755
Samsung	0060, 0812, 0702, 0178, 0030, 1903, 1575, 1395, 1312, 1060, 0814, 0766, 0427, 0408, 0329, 0056, 0032, 0019
Samsux	0039
Sansui	0463, 1409, 1935
Sanyo	0154, 0088, 0107, 0146, 0159, 0232, 0484, 0799, 0893, 1142
Sceptre	0878, 1217, 1360, 1599
Scimitsu	0019
Scotch	0178
Scott	0236, 0180, 0178, 0019, 0179, 0309
Sears	0047, 0054, 0154, 0156, 0178, 0171, 0015, 0056, 0146, 0148, 0149, 0159, 0168, 0179, 0281, 0747
Sharp	0093, 0039, 0153, 0157, 0165, 0220, 0281, 0386, 0398, 0491, 0688, 0689, 0818, 0851, 1602
Sheng Chia	0093
Sherwood	1399
Shogun	0019
Signature	0016
Signet	1262
SIM2 Multimedia	1297
Simpson	0186, 0187
Sony	1100, 0000, 0011, 0080, 0111, 0273, 0353, 0810, 0834, 1317
Soundesign	0180, 0178, 0179, 0186
Sova	1320, 1952
Soyo	1520
Spectricon	0003, 0137
Squareview	0171
SSS	0180, 0019
Starlite	0180
Studio Experience	0843
Superscan	0093, 0864
Supre-Macy	0046
Supreme	0000
SVA	0748, 0587, 0768, 0865, 0870, 0871, 0872

Sylvania	0054, 0030, 0171, 0020, 0028, 0065, 0096, 0381, 1271, 1944, 1963
Symphonic	0180, 0171, 1944
Syntax	1144, 1240, 1331
Tandy	0093
Tatung	0003, 0049, 0055, 0396, 1101, 1285, 1286, 1287, 1288, 1361, 1756
Technics	0250, 0051
Technol Ace	0179
Technovox	0007
Techview	0847
Techwood	0051, 0003, 0056
Teknika	0054, 0180, 0150, 0060, 0092, 0016, 0019, 0039, 0056, 0175, 0179, 0186, 0312, 0322
Telefunken	0702, 0056, 0074
Tera	0031
Thomson	0209, 0210
TMK	0178, 0056, 0177
TNCi	0017
Toshiba	0154, 1256, 0156, 1265, 0060, 1945, 1935, 1704, 1656, 1635, 1356, 1343, 1325, 1306, 1156, 0845, 0832, 0650, 0149, 0036
Tosonic	0185
Totevision	0039
Trical	0157
TVS	0463
Ultra	0391, 1323
Universal	0027
Universum	1337
US Logic	1286, 1303
Vector Research	0030
Victor	0053
Video Concepts	0098
Vidikron	0054, 0242, 1398
Vidtech	0178, 0019, 0036
Viewsonic	0797, 0857, 0864, 0885, 1330, 1342, 1578, 1627, 1755
Viking	0046, 0312
Viore	1207
Visart	1336
Vizio	0864, 0885, 1499, 1756, 1758
Wards	0054, 0178, 0030, 1156, 0866, 0202, 0179, 0174, 0165, 0111, 0096, 0080, 0056, 0029, 0028, 0027, 0021, 0020, 0019, 0016
Waycon	0156

Westinghouse	0885, 0889, 0890, 1282, 1577
White Westinghouse	0463, 0623
Wyse	1365
Yamaha	0030, 0019, 0769, 0797, 0833, 0839
Zenith	0017, 0463, 1265, 0178, 0092, 0016
Zonda	0003

Setup Codes for TVs (DLP)

Hewlett Packard	1494
HP	1494
LG	1265
Magnavox	1525
Mitsubishi	1250
Optoma	0887
Panasonic	1291
RCA	1447
Samsung	0812, 1060, 1312
SVA	0872
Toshiba	1265, 1306
Vizio	1499

Setup Codes for TVs (HDTV)

Advent	0842
Hitachi	1960
Marantz	0854
Mitsubishi	0150
Panasonic	0250, 0650, 1291
Pioneer	0679
Princeton	0717
RCA	1447
Samsung	0812, 0702
Sharp	0688, 0689
Toshiba	1256

Setup Codes for TVs (LCD)

Accurian	1803
Action	0873
Akai	1935
AOC	1365
Apex Digital	0890, 1217
Astar	1548
Audiovox	0180, 0710, 0802, 0846, 0875, 1284, 1937, 1951, 1952
BenQ	1315
Byd:sign	1309, 1311
Cadia	1283
CyberHome	0794

Dell	1080, 1178, 1264
Emprex	1422, 1546
Envision	0813, 1365
FlexVision	0710
Funai	0171
Go Video	0886
Hannspre	1348, 1351
Hewlett Packard	1088
HP	1088
Hyundai	0849, 1219, 1294
iLo	1286, 1603, 1990
Initial	1603, 1990
Insignia	1204, 1517, 2002
Jensen	1299
Kost	1262
LG	0856, 1178, 1993
Magnavox	1454, 0802, 1198
Marantz	0855
Maxent	0762, 1211
Mintek	1603, 1990
Mitsubishi	1250
NetTV	0762
Norcent	1365, 1589, 1591
Norwood Micro	1286, 1296
Olevia	1144, 1240, 1331, 1610
Panasonic	0650, 1941
Petters	1523
Philips	1454, 1483
Polaroid	1262, 1276, 1316, 1341, 1498, 1523
Protron	1320, 1323
Proview	1401
RCA	0047, 1958
Sampo	0762
Samsung	0812, 0766, 0814, 1395, 1575
Sansui	1409
Sanyo	1142
Sceptre	0878, 1217, 1360, 1599
Sharp	0093, 0818, 1602
Sherwood	1399
Signet	1262
Sony	0810
Sova	1320
Soyo	1520
Superscan	0864
SVA	0587, 0870, 0871
Sylvania	0171, 1271
Symphonic	0171
Syntax	1144, 1240, 1331
Tatung	1286
Techview	0847
Toshiba	0845, 1343, 1635, 1656
Ultra	1323
US Logic	1286

Vidikron	1398
Viewsonic	0857, 0864, 0885, 1330, 1578, 1627
Visart	1336
Vizio	0864, 0885, 1756
Westinghouse	0885, 0889, 0890, 1282, 1577
Wyse	1365
Zenith	1265

Setup Codes for DVD Players

Accurian	1072, 1416
Adcom	1094
Advent	1016
Aiwa	0641
Akai	0695, 0770, 0899, 1089
Alco	0790
Allegro	0869
Amphion Media Works	0872, 1245
AMW	0872, 1245
Apex Digital	0672, 0717, 0755, 0794, 0796, 0797, 0830, 1004, 1020, 1056, 1061, 1100
Arrgo	1023
Aspire Digital	1168, 1407
Audiologic	0736
Audiovox	0790, 1041, 1071, 1072, 1121, 1122
Axion	1071, 1072
B & K	0655, 0662
BBK	1224
Bel Canto Design	1571
Blaupunkt	0717
Blue Parade	0571
Broksonic	0695, 0868, 1419
Buffalo	1882
Cary Audio Design	1477
CAVS	1057
Centrios	1577
Cinea	0831
Cinego	1399
CineVision	0876, 0833, 0869
Citizen	1277
Coby	0778, 0852, 1086, 1107, 1165, 1177, 1351
Craig	0831
Curtis Mathes	1087
CyberHome	0816, 0874, 1023, 1024, 1117, 1129, 1502, 1537
D-Link	1881
Daewoo	0784, 0705, 0833, 0869, 1169, 1172, 1234, 1242, 1441, 1443
Denon	0490, 0634
Desay	1407, 1455

Diamond Vision	1316, 1609, 1610
Disney	0675, 1270
Dual	1068, 1085
Durabrand	1127
DVD2000	0521
Emerson	0591, 0675, 0821, 1268
Enterprise	0591
ESA	0821, 1268, 1443
Fisher	0670, 1919
Funai	0675, 1268, 1334
Gateway	1073, 1077, 1158
GE	0522, 0815, 0717
Go Video	0744, 0715, 0741, 0783, 0833, 0869, 1044, 1075, 1099, 1144, 1158, 1304, 1443, 1730
Go Vision	1071, 1072
GoldStar	0741
GPX	0699, 0769
Greenhill	0717
Harman/Kardon	0582, 0702
Hitachi	0573, 0664, 1247, 1919
Hiteker	0672
iLo	1348, 1472
Initial	0717, 1472
Innovative Technology	1542
Insignia	1268
Integra	0627
Jaton	1078
JBL	0702
Jensen	1016
JSI	1423
JVC	0558, 0623, 0867, 1164, 1275, 1602, 1863
jWin	1049, 1051
Kawasaki	0790
Kenwood	0490, 0534, 0682, 0737
KLH	0717, 0790, 1020, 1149, 1261
Konka	0711, 0719, 0720, 0721
Koss	0651, 0896, 1423
Kreisen	1421
Landel	0826
Lasonic	0798, 1173
Lenoxx	1127
LG	0591, 0741, 0801, 0869, 1526
LiteOn	1058, 1158, 1416, 1440
Loewe	0511
Magnavox	0503, 0539, 0646, 0675, 0821, 1268, 1506
Malata	0782, 1159
Marantz	0539
McIntosh	1273
Memorex	0695, 0831, 1270

Microsoft	0522, 1708
Mintek	0839, 0717, 1472
Mitsubishi	1521, 0521
Momitsu	1082
NAD	0741
Nakamichi	1222
NEC	0785
Nesa	0717, 1603
NeuNeo	1454
Next Base	0826
NexxTech	1402
Norcent	1003, 0872, 1107, 1265, 1457
Onkyo	0503, 0627, 0792
Oppo	1224, 1525
OptoMedia Electronics	0896
Oritron	0651
Panasonic	0490, 0632, 0703, 1362, 1462, 1490, 1762
Philips	0503, 0539, 0646, 0675, 0854, 1260, 1267, 1354
Pioneer	0525, 0571, 0631, 0632
Polaroid	1020, 1061, 1086, 1245, 1316, 1478, 1480, 1482
Polk Audio	0539
Portland	0770
Presidian	0675, 1072
Prima	1016
Primare	1467
Princeton	0674
Proscan	0522
ProVision	0778
Qwestar	0651
RCA	0522, 0571, 0717, 0790, 0822, 1022, 1132, 1193
Rio	0869
RJTech	1360
Rotel	0623, 1178
Rowa	0823
Sampo	0698, 0752, 1501
Samsung	0490, 0573, 0820, 0899, 1044, 1075
Sansui	0695
Sanyo	0670, 0695, 0873, 1919
Sensory Science	1158
Sharp	0630, 0675, 0752, 1256
Sharper Image	1117
Sherwood	0633, 0770, 1043, 1077, 1889
Shinsonic	0533, 0839
Sigma Designs	0674
Sonic Blue	0869, 1099
Sony	0533, 1533, 0864, 1033, 1431, 1432, 1433, 1548, 1892

Sound Mobile	1298
Sova	1122
Sungale	1074, 1532
Superscan	0821
SVA	0860, 1105
Sylvania	0675, 0821, 1268
Symphonic	0675, 0821
TAG McLaren	0894
Teac	0790, 0809
Technics	0490, 0703
Technosonic	0730
Techwood	0692
Terapin	1031
Theta Digital	0571
Toshiba	0503, 0695, 1045, 1154, 1854
Tredex	0799, 0800, 0803, 0804
Urban Concepts	0503
US Logic	0839
Valor	1298
Venturer	0790
Vialta	1509
Vizio	1064, 1226
Vocopro	1027, 1360
Xbox	0522, 1708
Xwave	1001
Yamaha	0490, 0539, 0545
Zenith	0503, 0591, 0741, 0869
Zoece	1265

Setup Codes for DVD Recorders

Accurian	1416
Apex Digital	1056
Aspire Digital	1168
Coby	1086
CyberHome	1129, 1502
Funai	0675, 1334
Gateway	1073, 1158
Go Video	0741, 1158, 1304, 1730
iLo	1348
JVC	1164, 1275
Kreisen	1421
LG	0741
LiteOn	1158, 1416, 1440
Magnavox	0646, 0675, 1506
Panasonic	0490
Philips	0646
Pioneer	0631
Polaroid	1086
RCA	0522
Samsung	0490
Sensory Science	1158
Sharp	0675
Sony	1033, 1431, 1432, 1433
Sylvania	0675

Zenith	0741
--------	------

Setup Codes for VCRs

ABS	1972
Admiral	0048, 0209
Adventura	0000
Aiko	0278
Aiwa	0037, 0000, 0124, 0307, 0468
Akai	0041, 0049, 0053, 0061, 0106, 0175
Alienware	1972
America Action	0278
American High	0035
Asha	0240
Audiovox	0037, 0278
Beaumarck	0240
Bell & Howell	0104
Broksonic	0184, 0121, 0209, 0002, 0211, 0295, 0361, 0479, 1479, 1815
Calix	0037
Canon	0035, 0102
Capehart	0020
Carver	0081
CCE	0072, 0278
Citizen	0037, 0278, 1278
Colt	0072
Craig	0037, 0047, 0240, 0072, 0271
Curtis Mathes	0060, 0035, 0162, 0041, 0760, 1035
Cybernex	0240, 0051
CyberPower	1972
Daewoo	0045, 0278, 0020, 0561, 0637, 1278
Daytron	0020
Dell	1972
Denon	0042
DirecTV	0739
Durabrand	0039, 0038
Dynatech	0000
Electrohome	0037
Electroponic	0037
Emerex	0032
Emerson	0037, 0184, 0000, 0121, 0043, 0209, 0002, 0278, 1479, 1278, 0637, 1593, 0593, 0561, 0510, 0479, 0361, 0295, 0294, 0212, 0211, 0208, 0088, 0068, 0061, 0036
Fisher	0047, 0104, 0054, 0066
Fuji	0035, 0033
Funai	0000, 0593, 1593

Garrard	0000
Gateway	1972
GE	0060, 0035, 0240, 0065, 0202, 0760, 0761, 0807, 1035, 1060
Go Video	0232, 0279, 0432, 0526, 0643
GoldStar	0037, 0038, 0018, 1237
Gradiente	0000, 0408
Grundig	0195
Harley Davidson	0000
Harman/Kardon	0081, 0038, 0075
Harwood	0072, 0068
Headquarter	0046
Hewlett Packard	1972
HI-Q	0047
Hitachi	0000, 0042, 0041, 0065, 0082, 0089, 0105, 0166
Howard Computers	1972
HP	1972
Hughes Network Systems	0042, 0739
Humax	0739
Hush	1972
iBUYPOWER	1972
Jensen	0041
JVC	0067, 0041, 0008, 0206, 0207, 0384, 1707
KEC	0037, 0278
Keen	0693
Kenwood	0067, 0041, 0038, 0384
KLH	0072
Kodak	0035, 0037
LG	1037
Linksys	1972
Lloyd's	0000, 0208
Logik	0072
LXI	0037
Magnasonic	0593, 1278
Magnavox	0035, 0039, 0081, 0000, 0149, 0110, 0563, 0593, 1593, 1781
Magnin	0240
Marantz	0035, 0081
Marta	0037
Matsushita	0035, 0162, 1162
Media Center PC	1972
MEI	0035
Memorex	0035, 0162, 0037, 0048, 0039, 0047, 0240, 0000, 0104, 0209, 0046, 0307, 0454, 0479, 1037, 1162, 1237, 1262
MGA	0240, 0043, 0061
MGN Technology	0240
Microsoft	1972

Mind	1972
Minolta	0042, 0105
Mitsubishi	0067, 0043, 0061, 0075, 0173, 0443, 0807
Motorola	0035, 0048
MTC	0240, 0000
Multitech	0000, 0072
NAD	0058
NEC	0104, 0067, 0041, 0038, 0040, 0050, 0082
Nikko	0037
Nikon	0034
Niveus Media	1972
Noblex	0240
Northgate	1972
Olympus	0035, 0226
Onkyo	0222
Optimus	1062, 0162, 0037, 0048, 0104, 0058, 0432, 0454, 0593, 1048, 1162, 1262
Optonica	0062
Orion	0184, 0209, 0002, 0295, 0479, 1479
Panasonic	1062, 0035, 0162, 0077, 0102, 0225, 0226, 0227, 0378, 0454, 0616, 1035, 1162, 1262
Penney	0035, 0037, 0240, 0042, 0038, 0040, 0054, 1035, 1237
Pentax	0042, 0065, 0105
Philco	0035
Philips	0035, 0081, 0062, 0110, 0618, 0739, 1081, 1181
Pilot	0037
Pioneer	0067, 0058
Polk Audio	0081
Portland	0020
Presidian	1593
Profitronic	0240
Proscan	0060, 0202, 0760, 0761, 1060
Protec	0072
Pulsar	0039, 0051
Quarter	0046
Quartz	0046
Quasar	0035, 0162, 0077, 0454, 1035, 1162
RadioShack	0000, 1037
Radix	0037
Randex	0037
RCA	0060, 0240, 0042, 0149, 0058, 0065, 0077, 0105, 0106, 0202, 0760, 0761, 0807, 0880, 1035, 1060

Realistic	0035, 0037, 0048, 0047, 0000, 0104, 0046, 0062, 0066
ReplayTV	0614, 0616
Ricavision	1972
Ricoh	0034
Runco	0039
Salora	0075
Samsung	0240, 0045, 0051, 0053, 0739, 1014
Samtron	0643
Sanky	0048, 0039
Sansui	0000, 0067, 0209, 0041, 0082, 0271, 0479, 1479
Sanyo	0047, 0240, 0104, 0046, 0159
Scott	0184, 0045, 0121, 0043, 0210, 0211, 0212
Sears	0035, 0037, 0047, 0000, 0042, 0104, 0046, 0054, 0066, 0105, 1237
Sharp	0048, 0062, 0807, 0848
Shintom	0072
Shogun	0240, 0051
Singer	0072
Sonic Blue	0614, 0616
Sony	0035, 0032, 0033, 0000, 0011, 0034, 0636, 1032, 1232, 1972
Stack 9	1972
STS	0042
Sylvania	0035, 0081, 0000, 0043, 0110, 0593, 1593, 1781
Symphonic	0000, 0593, 1593

Systemax	1972
Tagar Systems	1972
Tatung	0041
Teac	0000, 0041
Technics	0035, 0162
Teknika	0035, 0037, 0000, 0052
Thomas	0000
Tivo	0618, 0636, 0739, 1996
TMK	0240, 0036, 0208
Toshiba	0045, 0043, 0066, 0210, 0212, 0366, 0845, 1008, 1145, 1972, 1996
Totevision	0037, 0240
Touch	1972
Unitech	0240
Vector	0045
Vector Research	0038, 0040
Video Concepts	0045, 0040, 0061
Videomagic	0037
Videosonic	0240
Viewsonic	1972
Villain	0000
Voodoo	1972
Wards	0060, 0035, 0048, 0047, 0081, 0240, 0000, 0042, 0072, 0149, 0062, 0212, 0760
White Westinghouse	0209, 0072, 0637
XR-	1000 0035, 0000, 0072
Yamaha	0038
Zenith	0039, 0033, 0000, 0209, 0034, 0479, 0637, 1139, 1479
ZT Group	1972