

**Uniden** | A World Without Wires<sup>®</sup>

UNIDEN  
CORDLESS  
TELEPHONES



# TWX977

**OWNER'S MANUAL**

# Welcome

Congratulations on your purchase of the Uniden TWX977 accessory waterproof handset and charger. You can place this fully featured cordless handset anywhere your home has AC power even outside by the pool!

## Notes:

- **Illustrations in this manual are used for explanation purposes. Some illustrations may differ from the actual unit.**
- **JIS7 Specs is a water submersion standard. The cordless handset was designed to be submerged in water to a depth of 3 feet and for up to 30 minutes.**

## Accessibility

Uniden provides a customer service hotline for accessibility questions. If you have a disability and need customer service assistance or if you have any questions about how Uniden's products can accommodate persons with disabilities, please call the accessibility voice/TTY line: 1-800-874-9314.

A representative is available to talk to you M-F, 8:00 am to 5:00 pm, CST. After hours, you can leave us a message, and we will call you back. Information is also available on our website, [www.uniden.com](http://www.uniden.com), under the "Accessibility" link.

## Important!

The TWX977 accessory handset will not operate until it is registered to a Uniden main base. This manual describes how to set up your new handset; for more detailed instructions on operating your new handset, please refer to the manual supplied with your base as the TWX977 waterproof accessory handset operates just like Uniden's non-waterproof TCX905 accessory handset.

# Terminology Used in this Manual

Base	The main part of the phone that connects to your phone line and lets you make and receive calls.
Charger	A cradle that charges an accessory handset. It connects to power but not to a phone line.
Accessory Handset	A handset that works with an expandable phone base. Accessory handsets must be registered to a base.
Standby	The handset is not in use. If it is off the cradle, no line has been activated. No dial tone is present.
Station	Any handset or the base.
Talk	A telephone line has been activated on the handset or the base, enabling a dial tone.

Uniden® is a registered trademark of Uniden America Corporation.

## Compatible Bases

Your phone is compatible with the following Uniden 5.8 GHz Digital Expandable Systems: the TRU9 series (TRU9460, TRU9465, TRU9466, TRU9480, TRU9485, TRU9488, TRU9496, TRU9060, TRU9085), the TRU8 series (TRU8860, TRU8865, TRU8866, TRU8880, TRU8885, TRU8888), the CLX series (CLX465, CLX485), the Elite series (ELT560, ELBT585, ELBT595), and the UIP18 series (UIP1868P and UIP1869V).

Please visit our website at [www.uniden.com](http://www.uniden.com) for the most up-to-date list of compatible bases.

**Note: Two-line operation is supported only when the handset is registered to a two-line base.**

# Installing the Accessory Handset

## Checking the Package Contents

Make sure your package contains the following items. If any items are missing or damaged, contact our Customer Service Hotline. See back cover page for contact information.

- Cordless Handset
- Rechargeable NiMH Battery Pack, model # BT-446
- Charging Cradle
- AC Adapter, model # AD-1011 Capacity: 800 mAh, 3.6V
- Input: 120V AC 60 Hz
- Beltclip
- Output: 21V DC 100 mA
- Printed Material

## Activate the handset


The handset is powered by a rechargeable battery pack already installed in the handset's battery compartment. Before charging the battery for the first time, push the pin for activation, located on the bottom of the handset (see label with instructions). Once activated, remove the label and then place the handset in the charger.

### Notes:

- Use only the Uniden (BT-446) rechargeable battery pack supplied with your cordless telephone.
- Replacement batteries and/or rubber seals are also available through the Uniden Parts Department at (800) 554-3988, Monday thru Friday from 8:00 a.m. to 5:00 p.m. or online at [www.uniden.com](http://www.uniden.com).

### Caution:

- Keep magnetic items away from the handset.
- Don't place the handset where it will be subjected to direct sunlight for long periods of time.

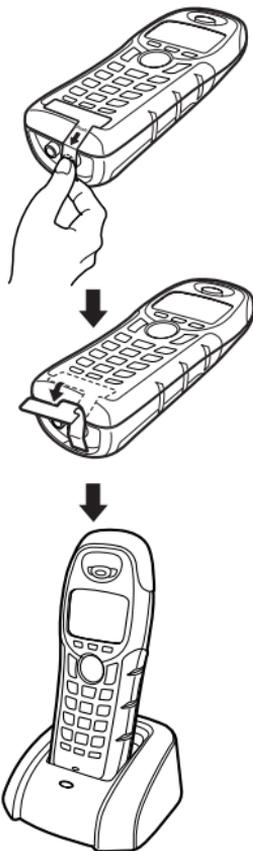


## Charging the Accessory Handset

The handset is powered by a rechargeable battery pack that automatically recharges when the handset is placed in the charger. Unlike your typical household phone chargers, your new waterproof accessory handset uses an enclosed charging method called magnetic inductive charging. This type charger allows us to charge your handset without exposing any electronic components; therefore, making it safer to use around water or in highly humid environments.

1. Connect the AC adapter to the **DC IN 21V** jack and to a 120V AC outlet that is not controlled by a wall switch.

**Caution: Use only the Uniden AD-1011 adapter.**

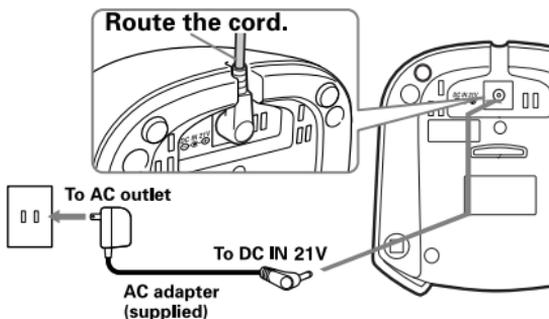

2. Set the charger on a desk or tabletop, and place the handset in the charger with the keypad facing forward.
3. Make sure that the **charge** LED illuminates. If the LED does not illuminate, check to see that the AC adapter is plugged in.
4. Charge the handset battery pack for at least 25 hours before using your new handset for the first time.

### Notes:

- **The charger is not water submersible. Wipe off dirt or shake water from handset before placing in the base.**
- **Due to the enclosed type of magnetic inductive charging used with this model, it will be normal for the bottom of the handset to be warmer than room temperature when you first remove it from the charging cradle. However, the warmth should not be excessive or uncomfortable to touch.**

## Registering the Handset

You must register the handset to the base before you can use it. Only one handset can be registered at a time. (If an accessory handset has previously been registered to a base, you must reset the handset before you can register it to a new base.)

1. Select your base model from this list and follow these directions:

MODEL	DIRECTIONS:
TRU9465 TRU9485 TRU9085 TRU9466 TRU9488 TRU9496 TRU8888 UIP1868P UIP1869V	<ul style="list-style-type: none"><li>• On the base, press the <b>MENU</b> soft key.</li><li>• Scroll down to REGISTER HANDSET and press the <b>OK</b> soft key.</li><li>• On the handset, press and hold <b>[#]</b> until the display reads HANDSET REGISTERING and you hear a beep.</li></ul>
TRU9460 TRU9060 TRU9480 TRU8880	<ul style="list-style-type: none"><li>• Disconnect the base AC adapter.</li><li>• While holding the <b>[find hs/intercom]</b>, reconnect the AC Adapter.</li><li>• On the handset, press and hold <b>[#]</b> until the display reads HANDSET REGISTERING and you hear a beep.</li></ul>
TRU8860 TRU8865	<ul style="list-style-type: none"><li>• Disconnect the base AC adapter.</li><li>• While holding the <b>[find handset]</b>, reconnect the AC Adapter.</li><li>• On the handset, press and hold <b>[#]</b> until the display reads HANDSET REGISTERING and you hear a beep.</li></ul>
TRU8866 TRU8885	<ul style="list-style-type: none"><li>• Disconnect the base AC adapter.</li><li>• While holding the <b>[flash/find hs]</b>, reconnect the AC Adapter.</li><li>• On the handset, press and hold <b>[#]</b> until the display reads HANDSET REGISTERING and you hear a beep.</li></ul>


MODEL	DIRECTIONS:
CLX465 CLX485 ELBT585 ELBT595	<ul style="list-style-type: none"> <li>• On the base, press <b>[menu/select]</b>.</li> <li>• Scroll down to SYSTEM SETUP and press the <b>OK</b> soft key.</li> <li>• Select REGISTER HANDSET and press the <b>OK</b> soft key.</li> <li>• On the handset, press and hold <b>[#]</b> until the display reads HANDSET REGISTERING and you hear a beep.</li> </ul>
ELT560	<ul style="list-style-type: none"> <li>• Remove the battery compartment cover from the bottom of the main base.</li> <li>• Press and hold the <b>Registration</b> button located in the battery compartment until the base LEDs start blinking.</li> <li>• On the handset, press and hold <b>[#]</b> until the display reads HANDSET REGISTERING and you hear a beep.</li> </ul>

2. When REGISTRATION COMPLETE. is displayed; the handset has been registered to the base. If REGISTRATION FAILED. appears, please try these steps again.

# Replace the rechargeable handset battery pack

1. Remove the 4 screws holding the battery compartment with a screwdriver and take off the battery cover. Remove the old battery pack in the battery compartment.
2. Plug the replacement battery connector (red & black wires) into the small, black jack inside the battery compartment. (The connector notches fit into the grooves of the jack only one-way.) Match the wire colors to the polarity label in the battery compartment, connect the battery and listen for a click to insure connection.
3. Make certain you have made a good connection by slightly pulling on the battery wires. If the battery connector is not securely connected, the handset will not charge properly.
4. Before placing the battery cover back on the handset, make sure there is no foreign matter under the rubber seal located on the under side. By inserting the bottom first, place the battery cover back on the handset and tighten the 4 screws.

If the rubber seal appears worn, nicked, or dried out, replacement seals are available through the Uniden Parts Department. If you have questions regarding the installation of the battery pack and/or rubber seal, please call our Customer Service Hotline at 1-800-297-1023.

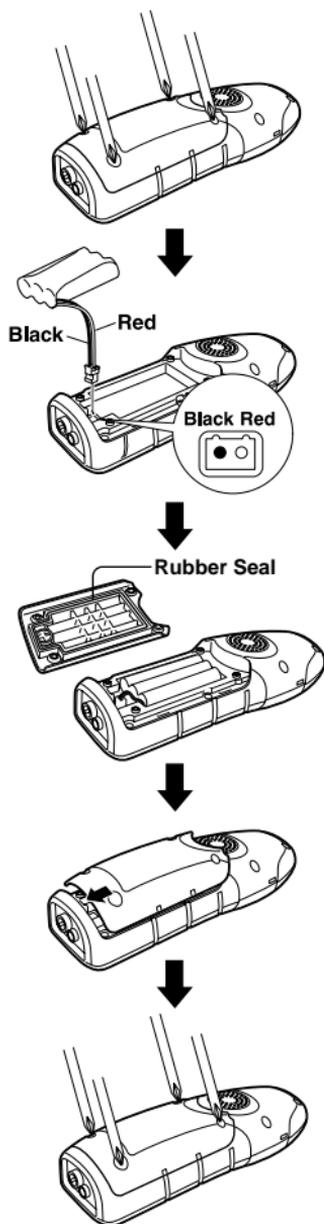


## Notes:

- If there is any foreign matter on the rubber seal located on the under side of the battery cover, the handset may not be water resistant.
- The rubber seal should be kept clean and replaced every 2 years to ensure the handset is water resistant even if the seal does not look worn.
- Do not place an excessively dirty handset in the base.
- Shake excess water from handset prior to placing back in the charging cradle.

## Installing the Belt Clip

Line up the tabs with the holes on each side of the handset. Press the belt clip down until both tabs click into place. To remove the belt clip, pull both sides of the clip to release the tabs from the holes.

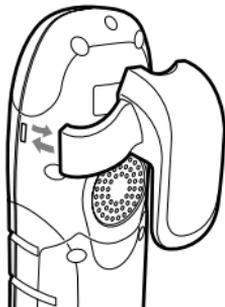

## Resetting Handsets

If you want to register the handset to a different base or replace a handset with another one, you must first clear the registration information from the base and the handset.

1. Press and hold **[\*]** and **[#]** for at least 5 seconds, until the SYSTEM RESET menu appears.
2. Select the DEREGISTER HS submenu. WHICH HANDSET? appears in the display.
3. Move the cursor to select the handset ID to be de-registered from the list, and then press the **OK** soft key. DEREGISTER HS appears.
4. Move the cursor to select YES, and then press the **OK** soft key. When ARE YOU SURE? appears, select YES. You will hear a confirmation tone.



## Resetting the Handset without the Base


If the original base this handset was registered to is not available for some reason (for example, it is lost or somehow incapacitated), you can still reset the handset and use it with another base.

1. Press and hold **[\*]** and **[#]** for more than 5 seconds, until the SYSTEM RESET menu appears.
2. Select the BASE UNAVAILABLE submenu.  
BASE UNAVAILABLE appears in the display.
3. Move the cursor to select YES, and then press the **OK** soft key. When ARE YOU SURE? appears, select YES. You will hear a confirmation tone, and the handset deletes its own link to the base without trying to contact the base.

Now you are ready to register the handset to the new base.

# Using the Interface

## Parts of the Handset

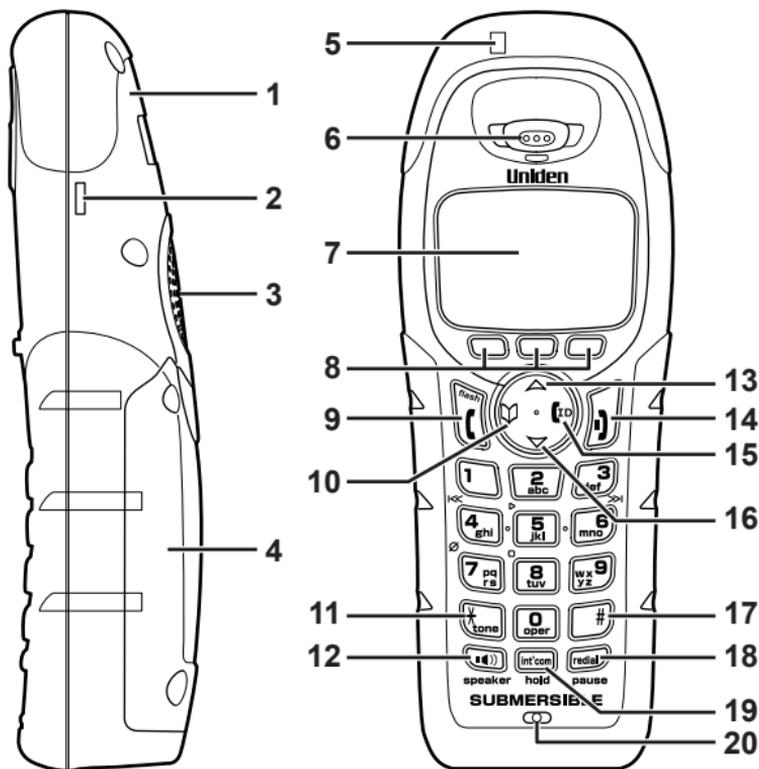

- |                                    |                               |  |
|------------------------------------|-------------------------------|--|
| 1. Handset Antenna                 | 8. Soft keys                  | 14. [⏏] (end call) key                 |
| 2. Beltclip Hole                   | 9. [⏏/flash] (talk/flash) key | 15. [ID] (caller ID) key               |
| 3. Speakerphone Speaker and Ringer | 10. [📖] (phonebook) key       | 16. [▽] (down) key                     |
| 4. Handset Battery Compartment     | 11. [*/tone] key              | 17. [#] (pound) key                    |
| 5. New Message LED                 | 12. [🔊] (speaker) key         | 18. [redial/pause] key                 |
| 6. Handset Earpiece                | 13. [▲] (up) key              | 19. [int'com/hold] (intercom/hold) key |
| 7. LCD Display                     |                               | 20. Handset Microphone                 |


## Reading the Display

The handset display uses icons to tell you the status of your phone. The table below lists the icons and what they mean.

ICON	STATUS	DESCRIPTION
	Talk	The talk icon appears while on a call.
	Talk	The privacy icon appears when Privacy mode is turned on.
	Talk	The call record icon appears while recording a conversation (Answering System base only).
	Talk	The mute icon appears when you mute the handset.
	Talk	The speaker icon appears when the handset speakerphone is in use.
	Talk	This icon appears when T-coil mode is turned on.
	Talk	This icon appears when Line 1 is in use. (two-line base only.)
	Talk	This icon appears when Line 2 is in use. (two-line base only.)
	Standby	The ringer off icon indicates that the ringer is turned off.
	Standby/Talk	The battery icon indicates the handset battery status: empty, low, medium, and full.

## The Standby Screen

 When the phone is in standby, the handset display shows the following items:




**Note: Illustration is of a single line system. Dual line systems will have different soft keys and standby screen.**

## Using the Four-way Function Key

Your handset has a four-way function key that allows you to move the cursor (or highlighted area) on the display and access the most commonly used features at the touch of a button. By moving this key to the left, you open the Phonebook. Move the key to the right to access Caller ID information.

To use this four-way key, place your thumb over the key on the station and move to the four positions to get the feel of how it moves and operates.

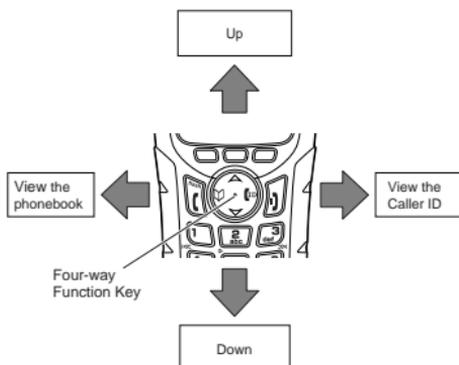

## Using the Handset Menu

To open the menu, press the **MENU** soft key. Highlight the option you want by pressing the four-way function key. This will move the cursor; the option currently highlighted appears in reversed out text. Select the highlighted option by pressing the **OK** soft key. To exit the menu and return to standby, press **[\*]** on the handset.

If you do not press a key within 30 seconds, the phone will time out and exit the menu. When setting Date and Time, the time-out period is extended to two minutes.

## Entering Text from Your Handset

You can use the number keypad on your phone to enter text by referring to the letters printed on each number key. When you press the number key in a text entry field, the phone displays the first letter printed on the number key. Press the number key twice to display the second letter and three times to display the third. Capital letters are displayed first, then lower case letters, then the number on the key.

If two letters in a row use the same number key, enter the first letter, then use **[right]** or **[left]** on the four-way function key to move the cursor to the next position to enter the second letter. For example, to enter “Movies”:

	Number of times key is pressed								
keys	1	2	3	4	5	6	7	8	9
1	1								
2 abc	A	B	C	a	b	c	2		
3 def	D	E	F	d	e	f	3		
4 ghi	G	H	I	g	h	i	4		
5 jkl	J	K	L	j	k	l	5		
6 mno	M	N	O	m	n	o	6		
7 pqrs	P	Q	R	S	P	q	r	s	7
8 tuv	T	U	V	t	u	v	8		
9 wxyz	W	X	Y	Z	w	x	y	z	9
0 oper	&	<	>	<	>	/	(blank)	-	-
	.	,	:	?	!	@	'	"	*
	#	0							

1. Press **[6]** once to enter *M*.
2. Use **[right]** on the four-way function key to move the cursor to the right.
3. Press **[6]** six times to enter *o*.
4. Press **[8]** six times to enter *v*.
5. Press **[4]** six times to enter *i*.
6. Press **[3]** five times to enter *e*.
7. Press **[7]** eight times to enter *s*.
8. Press the **OK** soft key to end your text entry.

If you make a mistake while entering a name, use **[right]** or **[left]** on the four-way function key to move the cursor to the incorrect character. Press the **DELETE** soft key to erase the wrong character, and then enter the correct character. To delete all characters, press and hold the **DELETE** soft key.

# Using Your Accessory Handset

## Making and Receiving Calls

	Using the handset	Using the speakerphone
<b>Making a call</b>	<ol style="list-style-type: none"><li>1. Remove the handset from the charger.</li><li>2. Dial the number.</li><li>3. Press <b>[/flash]</b>.</li></ol>	<ol style="list-style-type: none"><li>1. Remove the handset from the charger.</li><li>2. Dial the number.</li><li>3. Press <b>[]</b>.</li></ol>
<b>Answering a call</b>	<ol style="list-style-type: none"><li>1. Pick up the handset. (If AutoTalk is on, the phone will answer when you remove the handset from the charging cradle.)</li><li>2. Press <b>[/flash]</b>. (If Any Key Answer is on, you can also press any number keypad.)</li></ol>	<ol style="list-style-type: none"><li>1. Pick up the handset. (If AutoTalk is on, the phone will answer when you remove the handset from the charging cradle.)</li><li>2. Press <b>[]</b>.</li></ol>
<b>Hanging up</b>	Press <b>[]</b> .	Press <b>[]</b> .

### Notes:

- If your handset was submerged in water, water remaining in and around the speaker and microphone may distort sound.
- Shake the handset to clear excess water.
- If the handset is under water, the ringer will not be heard, but the phone can still receive calls.
- However, to prevent accidents, DO NOT try and answer your handset while it is submerged under water.

## Adjusting the Volume

<b>Ringer Volume</b>	Choose from three ringer volume settings (off, low, and high). With the phone in standby, use <b>[]</b> and <b>[]</b> to adjust the ringer volume.
<b>Earpiece Volume</b>	Choose from six volume levels for the handset. While on a call, press <b>[]</b> to make the handset volume louder or <b>[]</b> to make it softer.
<b>Speaker Volume</b>	Choose from six volume levels for the handset speakerphone. While on a call, press <b>[]</b> to make the speaker volume louder or <b>[]</b> to make it softer.

## Using Caller ID and Call Waiting

You can store up to 100 Caller ID numbers in your handset. Your phone shares a total of 100 memory entries between your Phonebook and Caller ID. Once you store 100 phonebook names, Caller ID information can not be stored (but it will still display when the call comes in).

**Note: You must subscribe to Caller ID and Call Waiting through your telephone provider.**

Press **[CID]** to open the Caller ID list. The first thing you will see is the summary screen. From the summary screen, you have the following options:

Scroll through the list	To scroll through the list from A to Z, press <b>[▽]</b> . To scroll through the list from Z to A press <b>[△]</b> .
Jump to entries beginning with a particular letter	Press the number key corresponding to the letter you want to jump to.
Store a Caller ID entry in the phonebook	Find the entry you want to store and press <b>STORE</b> soft key.
Dial a Caller ID entry	Find the entry you want to dial and press <b>[[/flash]</b> or <b>[*]]</b> .
Delete a Caller ID entry	Find the entry you want to delete and press the <b>DELETE</b> soft key.
Delete all entries	Press the <b>DELETE</b> soft key. ARE YOU SURE? appears, select YES and press the <b>OK</b> soft key.
Exit the Caller ID list	Press <b>[i]</b> or press the <b>BACK</b> soft key or <b>[[/flash]</b> again if you are on a call.

## Using Call Waiting

If a second call comes in when you are on the phone, a call waiting tone sounds, and the caller ID information of the waiting call appears on the display. Press **[[/flash]** on the handset to accept the waiting call. There is a short pause, and then you will hear the new caller. To return to the original caller, press **[[/flash]** on the handset again.

## Using the Phonebook

Your phone allows you to store up to 2 numbers per name and up to 100 names in your phonebook. Your phone shares a total of 100 memory entries between your phonebook and CID. Once you store 100 phonebook entries, CID information will not be stored and will only display at time of new incoming calls. When Phonebook entries are full, you will hear a beep and MEMORY FULL appears. You cannot store any additional names and numbers unless you delete some of the existing ones.

Press [>] to enter the phonebook. Once in the phonebook, you have the following options:

Scroll through the entries	To scroll through the phonebook from A to Z, press [  >]. To scroll through the phonebook from Z to A press [  >].
Jump to entries beginning with a particular letter	Press the number key corresponding to the letter you want to jump to.
Store a new entry	Press the <b>NEW</b> soft key and follow the directions.
Copy entries to another handset	<ol style="list-style-type: none"><li>1. Find the entry you want to copy.</li><li>2. Press the <b>OPTIONS</b> soft key.</li><li>3. Select COPY SELECTION, and then press the <b>OK</b> soft key.</li><li>4. TO WHICH UNIT? appears. Select the station you want to copy this entry to, and then press the <b>OK</b> soft key. You will hear a confirmation tone.</li></ol>
Copy ALL entries to another handset	<ol style="list-style-type: none"><li>1. Press the <b>OPTIONS</b> soft key.</li><li>2. Select COPY ALL and press the <b>OK</b> soft key.</li><li>3. TO WHICH UNIT? appears. Select the station you want to copy this entry to, and then press the <b>OK</b> soft key.</li><li>4. ARE YOU SURE? appears. Select YES and press the <b>OK</b> soft key. You will hear a confirmation tone.</li></ol>
Dial an entry	<ol style="list-style-type: none"><li>1. Find the entry you want to dial.</li><li>2. Press [/flash] or [].</li></ol>
Delete an entry	<ol style="list-style-type: none"><li>1. Find the entry you want to delete.</li><li>2. Press the <b>OPTIONS</b> soft key.</li><li>3. Select DELETE SELECTION, and then press the <b>OK</b> soft key.</li><li>4. ARE YOU SURE? appears. Select YES and press the <b>OK</b> soft key. You will hear a confirmation tone.</li></ol>

Delete all entries	<ol style="list-style-type: none"> <li>1. Press the <b>OPTIONS</b> soft key.</li> <li>2. Select DELETE ALL and press the <b>OK</b> soft key.</li> <li>3. ARE YOU SURE? appears. Select YES and press the <b>OK</b> soft key. You will hear a confirmation tone.</li> </ol>
Close the phonebook	Press <b>[*]</b> or the <b>BACK</b> soft key repeatedly if you are on a call.

## Redialing a Number

You can quickly redial the last 3 numbers dialed on the handset.

1. With the phone in standby, press **[redial/pause]** or the **REDIAL** soft key to open the redial list.
2. Use **[▲]** and **[▼]** to scroll through the redial list.
3. When you find the number you want to dial, press **[\*/flash]** or **[\*☎]**.

**Note:** You can also press **[\*/flash]** or **[\*☎]** before you open the redial list. In this case, press **[redial/pause]**.

## Muting the Ringer (One Call Only)

While the handset is ringing, press **[\*]** to mute the ringer for this call. The phone will ring again on the next call. (The handset must be off the cradle to mute the ringer.)

## Muting the Microphone

To mute the microphone so the caller can't hear you, press the **MUTE** soft key while on a call. MUTE ON will appear in the display for 2 seconds, but the  icon will appear and remain in the display until the feature is turned off. Repeat the procedure to cancel muting.

## Privacy Mode

To prevent other stations from interrupting a call, press the **PRIVACY** soft key while on a call. PRIVACY MODE ON will appear in the display for 2 seconds, but the  icon will appear in the display until the feature is turned off. Repeat the procedure to turn off privacy mode.

# Using Hold, Conference, Transfer and Intercom

<b>Put a call on hold</b>	Press <b>[int'com/hold]</b> . If you leave a caller on hold for more than five minutes, the call will be disconnected. To return to the party on hold, press <b>[{/flash]</b> or <b>[*]]</b> .
<b>Join a call in progress</b>	To join a call already in progress, press <b>[{/flash]</b> or <b>[*]]</b> . You can hang up normally; the other station remains connected to the call.
<b>Transfer a call</b>	Press <b>[int'com/hold]</b> ; the call will automatically be placed on hold. Use <b>[△]</b> or <b>[▽]</b> to select the station you want to transfer the call to, and press the <b>OK</b> soft key. (To page all stations at once, select <b>ALL</b> .) When the other station answers, you can talk to the station; the outside call remains on hold. If the other station accepts the call, you will be disconnected.
<b>Cancel a transfer</b>	To cancel the transfer and return to the call, press <b>[{/flash]</b> or <b>[*]]</b> .
<b>Accept a transferred call</b>	To answer the page and speak to the transferring station, press <b>[{/flash]</b> or <b>[int'com/hold]</b> . To accept the call and speak to the caller, press <b>[{/flash]</b> again.
<b>Make an intercom page</b>	With the phone in standby, press <b>[int'com/hold]</b> . Use <b>[△]</b> or <b>[▽]</b> to select the station you want to talk with, then press the <b>OK</b> soft key. (If you select <b>ALL</b> , all other stations will be paged.)
<b>Cancel a page</b>	To cancel the intercom page, press the <b>CANCEL</b> soft key.
<b>Answer an intercom page</b>	Press <b>[{/flash]</b> or <b>[int'com/hold]</b> . If AutoTalk is on, the handset automatically answers the page when you remove it from the cradle.

# Accessing Your Answering Machine

If your base has an answering machine, you can use your handset to get your messages and change your answering machine setup. To access the answering machine, press the  soft key. The answering machine announces the number of new and old messages and then waits for your next command. You have the following options:

<b>Play messages</b>	Press [ <b>&gt; /2</b> ]. The system announces the time, and number of new and old messages.
<b>Repeat a message</b>	Press [ <b>  &lt;&lt;/1</b> ] to go to the start of the current message. Press [ <b>  &lt;&lt;/1</b> ] repeatedly to go back to a previous message.
<b>Skip a message</b>	Press [ <b>&gt;&gt; /3</b> ] to go to the beginning of the next message.
<b>Delete a message</b>	While a message is playing, press [ <b>Ø/4</b> ] and the message will be permanently deleted.
<b>End message review</b>	Press [ <b>□/5</b> ] to stop the message playback.
<b>Record a memo</b>	Press [ <b>7</b> ] to start recording. Press [ <b>□/5</b> ] or [ <b>7</b> ] to stop.
<b>Turn the answering machine on or off</b>	<b>TRU9480 and TRU8 series:</b> Press [ <b>6</b> ] to turn the answering machine on. Press [ <b>9</b> ] to turn the answering machine off. <b>TRU9485/9488/9496 &amp; ELT/CLX series:</b> Press [ <b>9</b> ] to turn the answering machine on/off.
<b>Record a greeting</b>	Press [ <b>8</b> ] to start recording. Press [ <b>□/5</b> ] or [ <b>8</b> ] to stop.
<b>Listen to Help</b>	Press [ <b>0</b> ] to hear the Help prompts.
<b>Exit and hang up</b>	Press [ <b>] ]</b> ] to exit the system and return to standby.

## Screening Calls

You can listen to callers who leave a message. Press the **SCREEN** soft key when the system is answering to listen to the caller without answering the phone.

# Accessing Voicemail

If you subscribe to a voice mail service, you can program your access number into your handset and access your voice mail at the touch of a button.

1. Press the **MENU** soft key. Select HANDSET SETUP and EDIT VOICE MAIL submenu.
2. Enter your personal access number (up to 20 digits).
3. If you need to have the phone wait before sending the next digits, press **[redial/pause]** to insert a two-second pause in the dialing sequence. For a longer pause, press the key multiple times. A P appears in the display each time you press the key and each pause counts as one digit.
4. Press the **OK** soft key when you are finished.

Once you program your access number, press the  soft key to dial your voice mail service.

## Maintenance

### Battery Life

With average use, your battery talk time will be approximately 5 hours and standby time will be approximately 7 days. For optimum performance, be sure to return the handset to the cradle after each call. If the handset is left off of the base, the actual talk time duration will be reduced respective to the amount of time the handset is off the cradle.

**Note: Do not place the power cord where it creates a trip hazard or where it could become chafed and create a fire or electrical hazard.**

### Low Battery Alert

When the battery pack is very low, the display shows LOW BATTERY and the empty battery icon. If the phone is in standby, none of the keys will operate. If you are on a call, complete your conversation as quickly as possible, and return the handset to the charging cradle.

## Battery Replacement and Handling

With normal usage, your battery should last about one year. When the talk time becomes short, even after the battery is recharged, please replace the battery. A replacement Uniden adapter or battery may be purchased by calling Uniden's Parts department. See back cover page for contact information.

### Warning

**To avoid the risk of personal injury or property damage from fire or electrical shock, use only BT-446 battery pack with your phone.**

### Caution:

- **This equipment contains a rechargeable Nickel-Metal-Hydride battery.**
- **Do not remove the batteries from the handset to charge them.**
- **Never throw the battery into a fire, disassemble it, or heat it.**
- **Do not remove or damage the battery casing.**
- **Nickel is a chemical known to State of California to cause cancer.**
- **Do not short-circuit the battery.**
- **Do not charge the battery used in this equipment in any charger other than the one specified in the owner's manual. Using another charger may damage the battery or cause the battery to explode.**
- **Rechargeable Batteries Must Be Recycled or Disposed of Properly.**

# The FCC Wants You To Know

Changes or modifications to this product not expressly approved by Uniden, or operation of this product in any way other than as detailed by the owner's manual, could void your authority to operate this product.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this phone.

To insure the safety of users, the FCC has established criteria for the amount of radio frequency energy various products may produce depending on their intended usage. This product has been tested and found to comply with the FCC's exposure criteria. For body worn operation, the FCC RF exposure guidelines were also met when used with the Uniden accessories supplied or designed for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines and should be avoided.

## I.C. Notice

### Terminal Equipment

NOTICE: This equipment meets the applicable Industry Canada Terminal Equipment Technical Specifications. This is confirmed by the registration number. The abbreviation, IC, before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment.

### Radio Equipment

The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. "Privacy of communications may not be ensured when using this telephone".

# One Year Limited Warranty

Important: Evidence of original purchase is required for warranty service.

**WARRANTOR:** UNIDEN AMERICA CORPORATION ("Uniden") **ELEMENTS OF WARRANTY:** Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

**WARRANTY DURATION:** This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the owner's manual for this product.

**STATEMENT OF REMEDY:** In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor, at its option, may replace the unit with a new or refurbished unit. **THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES.** Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

**LEGAL REMEDIES:** This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is void outside the United States of America and Canada.

**PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY:** If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). Disconnect the battery from the Product and separately secure the battery in its own separate packaging within the shipping carton. The Product should include all parts and accessories originally packaged with the Product. Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:

Uniden America Service  
4700 Amon Carter Blvd.  
Fort Worth, TX 76155

# Memo

# Memo

# At Uniden, we'll take care of you!

Thank you for purchasing a Uniden product. If you have any questions or problems, please do not return this product to the place of purchase.

<b>Having trouble?</b>	Our customer care specialists are here to help you! Visit our website at <a href="http://www.uniden.com">www.uniden.com</a> or call our Customer Service Hotline at 1-800-297-1023, Monday through Friday, 7 AM to 7 PM or Saturday/Sunday, 9 AM to 5 PM, CST. The Customer Service Hotline is closed on holidays.
<b>Need a part?</b>	To order headsets, additional handsets, replacement batteries, or other accessories, visit our website at <a href="http://www.uniden.com">www.uniden.com</a> or call 1-800-554-3988, Monday through Friday, 8 AM to 5 PM, CST.
<b>Help for our customers with special needs</b>	If you need special assistance due to a disability or have questions on the accessibility features of this product, please call 1-800-874-9314 (voice or TTY).

May be covered under one or more of the following U.S. patents:

4,797,916	5,381,460	5,426,690	5,434,905	5,491,745
5,493,605	5,533,010	5,574,727	5,581,598	5,650,790
5,660,269	5,661,780	5,663,981	5,671,248	5,696,471
5,717,312	5,732,355	5,754,407	5,758,289	5,768,345
5,787,356	5,794,152	5,801,466	5,825,161	5,864,619
5,893,034	5,912,968	5,915,227	5,929,598	5,930,720
5,960,358	5,987,330	6,044,281	6,070,082	6,125,277
6,253,088	6,314,278	6,418,209	6,618,015	6,671,315
6,714,630	6,782,098	6,788,920	6,788,953	6,839,550
6,889,184	6,901,271	6,907,094	6,914,940	6,953,118

Other patents pending.

**VISIT  
WWW.UNIDEN.COM  
TO REGISTER YOUR  
PRODUCT**

© 2006 Uniden America Corporation, Fort Worth, Texas. Contains additional foreign articles. Printed in China.