



19462 Powder Hill Place
Poulsbo, WA 98370
800.762.5757
360.779.7901
www.boxlight.com

USER MANUAL

Broad View



Copyright

This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. Neither this manual, nor any of the material contained herein, may be reproduced without written consent of the author.

© Copyright January, 2006

Disclaimer

The information in this document is subject to change without notice. The manufacturer makes no representations or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. The manufacturer reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of the manufacturer to notify any person of such revision or changes.

Trademark Recognition

Kensington is a U.S. registered trademark of ACCO Brand Corporation with issued registrations and pending applications in other countries throughout the world.

All other product names used in this manual are the properties of their respective owners and are acknowledged.

Important Safety Information

Congratulations on purchasing the DLP® projector!

Important:

It is strongly recommended that you read this section carefully before using the projector. These safety and usage instructions will ensure that you enjoy many years of safe use of the projector. Keep this manual for future reference.

Symbols Used

Warning symbols are used on the unit and in this manual to alert you of hazardous situations.

The following styles are used in this manual to alert you to important information.

Note:

Provides additional information on the topic at hand.

Important:

Provides additional information that should not be overlooked.

Caution:

Alerts you to situations that may damage the unit.

Warning:

Alerts you to situations that may damage the unit, create a hazardous environment, or cause personal injury.

Throughout this manual, component parts and items in the OSD menus are denoted in bold font as in this example:

"Push the **Menu** button on the remote control to open the **Main** menu."

Remote Control

Some remote controls have a laser for pointing out items on a screen.

DANGER: Do not point the laser in the eyes. Doing so can damage the eyes permanently.

General Safety Information

- Do not open the unit case. Aside from the projection lamp, there are no user-serviceable parts in the unit. For servicing, contact qualified service personnel.
- Follow all warnings and cautions in this manual and on the unit case.
- The projection lamp is extremely bright by design. To avoid damage to eyes, do not look into the lens when the lamp is on.
- Do not place the unit on an unstable surface, cart, or stand.
- Avoid using the system near water, in direct sunlight, or near a heating device.
- Do not place heavy objects such as books or bags on the unit.

Power Safety

- Only use the supplied power cord.
- Do not place anything on the power cord. Place the power cord where it will not be in the way of foot traffic.
- Remove the batteries from the remote control when storing or not in use for a prolonged period.

Replacing the Lamp

Replacing the lamp can be hazardous if done incorrectly. Refer to “Replacing the Projection Lamp” on page 28 for clear and safe instructions for this procedure. Before replacing the lamp:

- Unplug the power cord.
- Allow the lamp to cool for about one hour.

Spent Lamp Management

- This product contains a metal halide lamp, which contains mercury. Dispose of it as required by local ordinances and regulations.
- The USA restricts or prohibits the disposal of some or all mercury containing lamps in the municipal waste stream. Please visit www.lamprecycle.org for more information on specific state disposal requirements and recycling facilities.

Cleaning the Projector

- Unplug the power cord before cleaning. Refer to “Cleaning the Projector” on page 30.
- Allow the lamp to cool for about one hour.

Regulatory Warnings

Before installing and using the projector, read the regulatory notices in the “Regulatory Compliance” section on page 42.

Main Features

- *Lightweight unit, easy to pack away and transport*
- *Compatible with all major video standards including NTSC, PAL, and SECAM*
- *A high brightness rating allows for presentations in daylight or in lit rooms*
- *Supports resolutions up to SXGA at 16.7 million colors to deliver crisp, clear images*
- *Flexible setup allows for front, rear, and ceiling projections*
- *Line-of-vision projections remain square, with advanced keystone correction for angled projections*
- *Input source automatically detected*
- *Auto-keystone for easy keystone correction*

About this manual

This manual is intended for end users and describes how to install and operate the DLP projector. Wherever possible, relevant information—such as an illustration and its description—has been kept on one page. This printer-friendly format is both for your convenience and to help save paper, thereby protecting the environment. It is suggested that you only print sections that are relevant to your needs.

Table of contents

GETTING STARTED	1
PACKING CHECKLIST	1
VIEWS OF PROJECTOR PARTS.....	2
<i>Front-right View</i>	2
<i>Top view—On-screen Display (OSD) buttons and LEDs</i>	3
<i>Rear view</i>	4
<i>Bottom view</i>	5
REMOTE CONTROL PARTS	6
REMOTE CONTROL OPERATING RANGE.....	8
PROJECTOR AND REMOTE CONTROL BUTTONS.....	8
SETUP AND OPERATION.....	9
INSERTING THE REMOTE CONTROL BATTERIES	9
CONNECTING INPUT DEVICES	10
STARTING AND SHUTTING DOWN THE PROJECTOR.....	11
SETTING AN ACCESS PASSWORD (SECURITY LOCK)	12
ADJUSTING THE PROJECTOR LEVEL	13
ADJUSTING THE ZOOM, FOCUS AND KEYSTONE	14
ADJUSTING THE VOLUME	14
ON-SCREEN DISPLAY (OSD) MENU SETTINGS.....	15
OSD MENU CONTROLS	15
<i>Navigating the OSD</i>	15
SETTING THE OSD LANGUAGE	16
MAIN MENU	17
<i>Main Menu Functions Available for Connected Source</i>	18
SETUP MENU	19
<i>Setup Menu Functions Available for Connected Source</i>	19
<i>Advance Feature</i>	20
<i>User Color</i>	22
CONFIG MENU	23
UTILITY MENU	24
<i>Utility Menu Functions Available for Connected Source</i>	25
LANGUAGE MENU	26
STATUS MENU	27
MAINTENANCE AND SECURITY.....	28
REPLACING THE PROJECTION LAMP.....	28
<i>Resetting the Lamp</i>	30
CLEANING THE PROJECTOR.....	30
<i>Cleaning the Lens</i>	31
<i>Cleaning the Case</i>	31
USING THE KENSINGTON® LOCK	31
TROUBLESHOOTING	32
COMMON PROBLEMS AND SOLUTIONS	32
TIPS FOR TROUBLESHOOTING	32
LED ERROR MESSAGES.....	33
IMAGE PROBLEMS.....	33
LAMP PROBLEMS	34
REMOTE CONTROL PROBLEMS	34
AUDIO PROBLEMS	34
HAVING THE PROJECTOR SERVICED	35
SPECIFICATIONS.....	36
SPECIFICATIONS.....	36
<i>Input/output connectors</i>	37
PROJECTION DISTANCE V.S. PROJECTION SIZE.....	38

TIMING MODE TABLE 39

PROJECTOR DIMENSIONS 41

REGULATORY COMPLIANCE 42

FCC WARNING..... 42


CANADA 42

SAFETY CERTIFICATIONS..... 42


EN 55022 WARNING 42

Packing Checklist


Carefully unpack the projector and check that the following items are included:

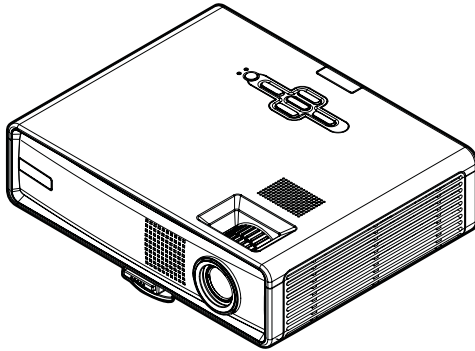


DLP® PROJECTOR

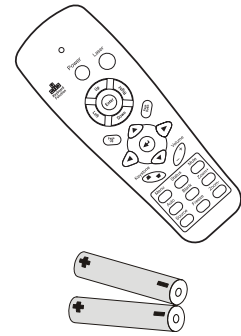


*REMOTE CONTROL
(WITH TWO AAA BATTERIES)*

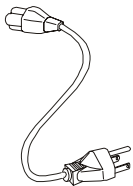


POWER CORD

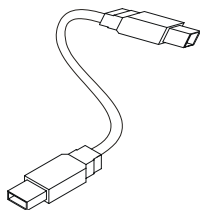


USB CABLE

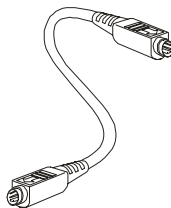

S-VIDEO CABLE

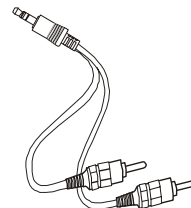

*AUDIO CABLE
(MINI JACK-TO-RCA x 2)*

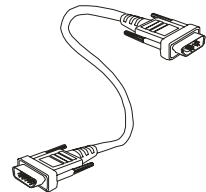


*COMPUTER CABLE
(DVI-DB15)*



CD-ROM (THIS USER'S MANUAL)



QUICK START GUIDE

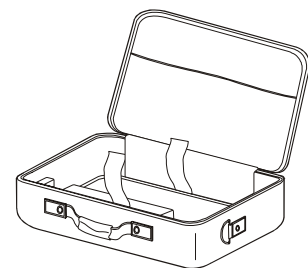

CARRYING CASE


Contact your dealer immediately if any items are missing, appear damaged, or if the unit does not work.

Caution:

Avoid using the projector in dusty environments.

Views of Projector Parts

Front-right View

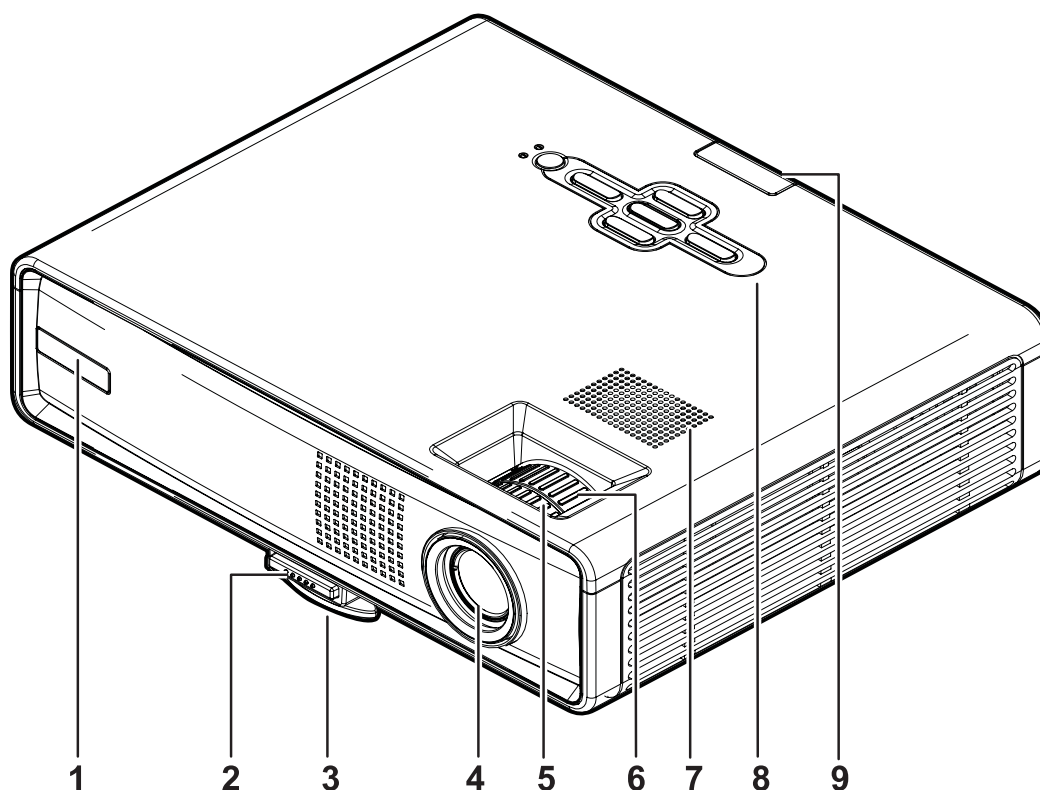


ITEM	LABEL	DESCRIPTION	SEE PAGE:
1.	Front IR receiver	Receiver for IR signal from remote control	8
2.	Height-adjuster button	Push to release height adjuster	13
3.	Height adjuster	Adjusts level of projector	
4.	Lens	Adjust focus/zoom on top opening	
5.	Focus	Focuses the projected image	14
6.	Zoom	Enlarges the projected image	
7.	Speaker	Built-in mono speaker	
8.	See “Top view—OSD buttons and LEDs” on next page		
9.	Rear IR receiver	Receiver for IR signal from remote control	8


Important:

Ventilation openings on the projector allow for good air circulation, which keeps the projector lamp cool. Do not obstruct any of the ventilation openings.

Top view—On-screen Display (OSD) buttons and LEDs

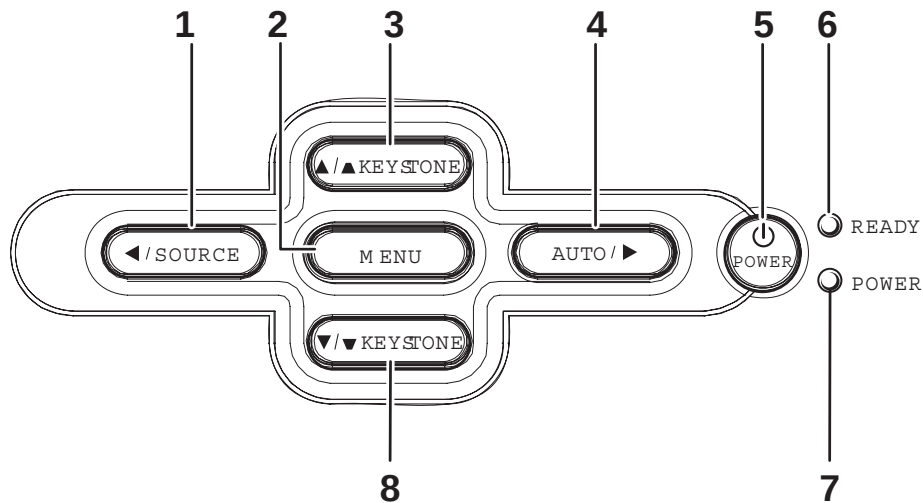

ITEM	LABEL	DESCRIPTION		SEE PAGE:
1.	Source/ Left cursor	Detects the input device Navigates and changes settings in the OSD		11
2.	Menu	Opens and exits the OSD		15
3.	Keystone/ Up cursor	Corrects image-trapezoid (wider top) effect Navigates and changes settings in the OSD		14
4.	Auto/ Right cursor	Optimizes image size, position, and resolution Navigates and changes settings in the OSD		
5.	Power button	Turns the projector on or off		11
6.	Ready LED	Orange	Lamp ready—you can safely turn on or off the projector	
		Flashing	Lamp not ready—do not press the power button	
7.	Power LED	Green	Unit is powered on and working correctly	
		Off	Unit is powered off	
		Flashing	Operational error code (refer to “LED Error Messages” on page 33)	
8.	Keystone/ Down cursor	Corrects image-trapezoid (wider bottom) effect Navigates and changes settings in the OSD		14

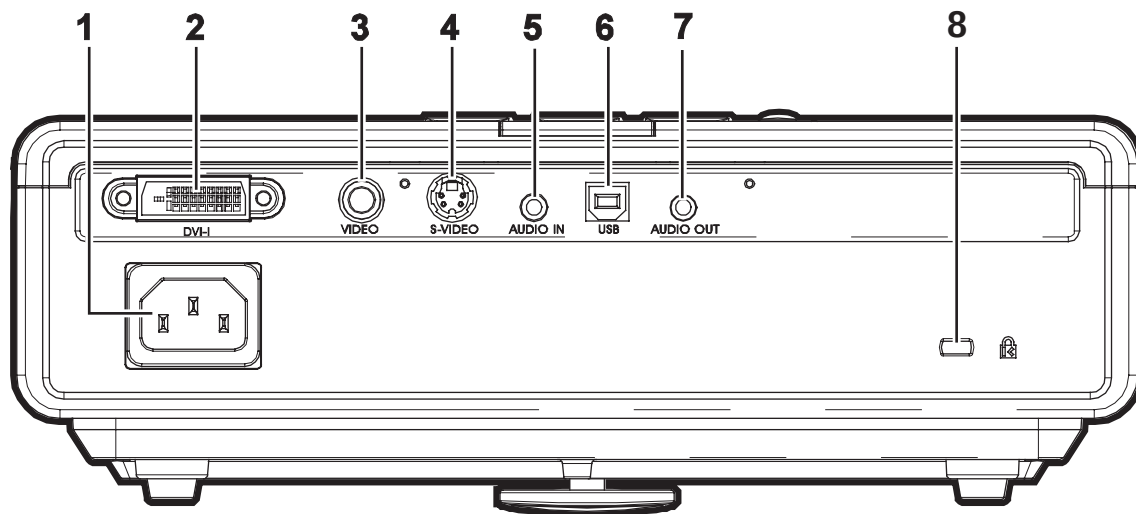
Rear view

ITEM	LABEL	DESCRIPTION	SEE PAGE:
1.	Power	Connect the supplied power cord	11
2.	DVI-I	Connect the computer cable (supplied) from a computer	10
3.	Video	Connect a composite video cable from a video device	
4.	S-video	Connect the S-video cable (supplied) from a video device	
5.	Audio-in	Connect the audio cable (supplied) from the input device	
6.	USB	Connect the USB cable (supplied) from a computer	
7.	Audio-out	Audio loop-thru	31
8.	Security Lock	Secure to permanent object with a Kensington® Lock system	

Note:

If your video equipment has both S-video and RCA jacks (composite video) connect to the S-video connector.
S-video provides a better quality signal.


Bottom view

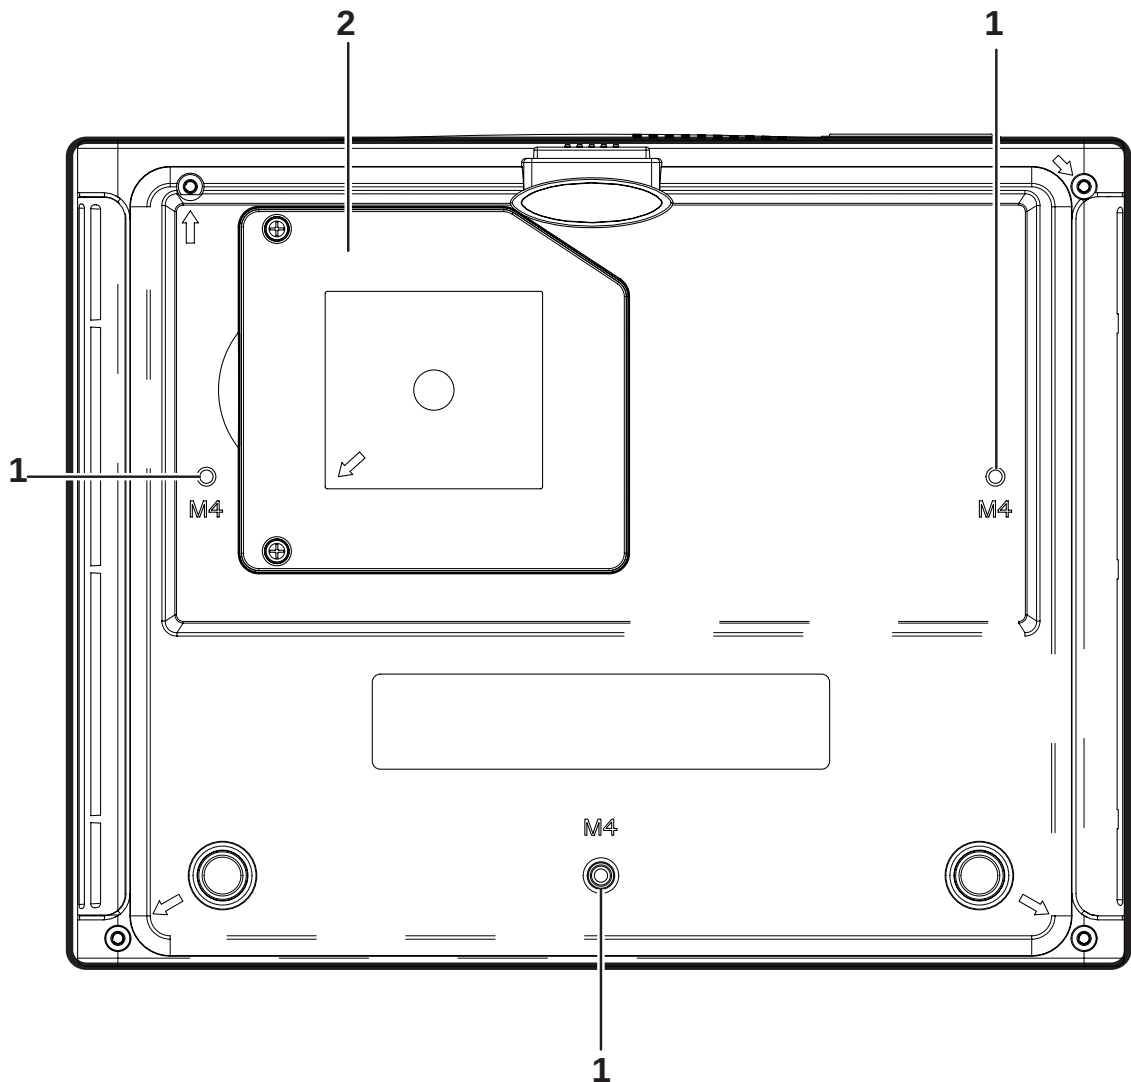

ITEM	LABEL	DESCRIPTION	SEE PAGE:
1.	Ceiling support holes	Contact your dealer for information on mounting the projector on a ceiling.	
2.	Projection lamp cover	Remove when changing lamp	28

Caution:
For ceiling installations, use approved mounting hardware and M4 screws with a maximum screw depth of 6 mm (1/4 inch). To allow for proper ventilation, keep a distance of 50 cm (20 inches) from walls and ceiling. For permanent installations, follow local codes.

Remote Control Parts

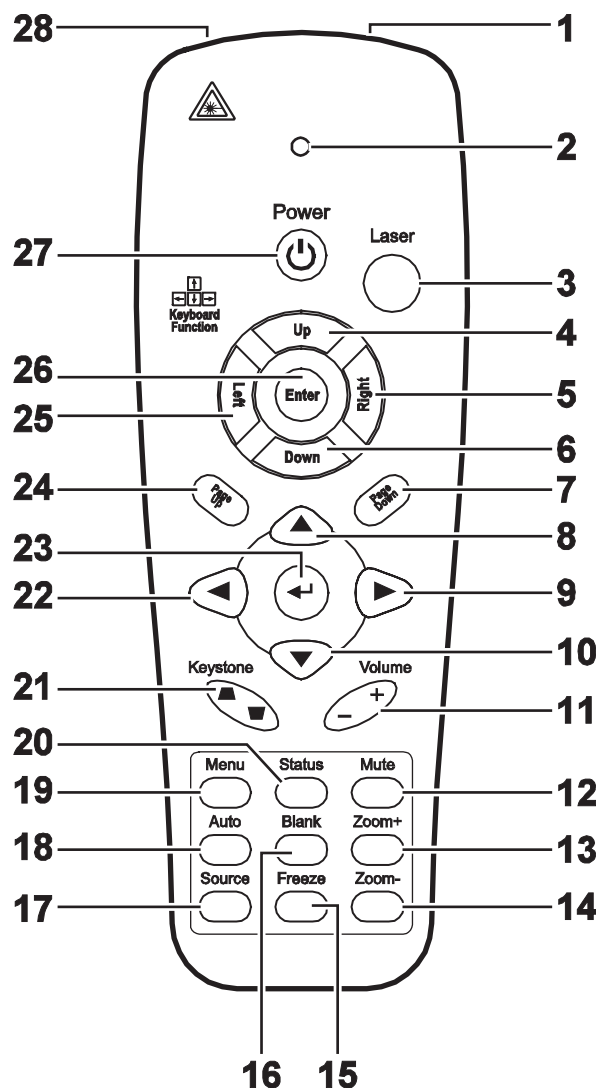

- Important:**
- 1. Avoid using the projector with bright fluorescent lighting turned on. Certain high-frequency fluorescent lights can disrupt remote control operation.
 - 2. Be sure nothing obstructs the path between the remote control and the projector. If the path between the remote control and the projector is obstructed, you can bounce the signal off certain reflective surfaces such as projector screens.
 - 3. The buttons and keys on the projector have the same functions as the corresponding buttons on the remote control. This user’s manual describes the functions based on the remote control.

ITEM	LABEL	DESCRIPTION	SEE PAGE:
1.	IR transmitter	Transmits signals to projector	
2.	Status LED	Lights when the remote control is used	
3.	Laser	Press to operate the on-screen pointer	

ITEM	LABEL	DESCRIPTION	SEE PAGE:
4.	Up	Up arrow when connected through USB to a PC	
5.	Right	Right arrow when connected through USB to a PC	
6.	Down	Down arrow when connected through USB to a PC	
7.	Page Down	Page down when connected through USB to a PC	
8.	Up cursor	Navigates and changes settings in the OSD	15
9.	Right cursor		
10.	Down cursor		
11.	Volume +/-	Adjusts volume	14
12.	Mute	Mutes the built-in speaker	
13.	Zoom+	Zoom in	
14.	Zoom-	Zoom out	
15.	Freeze	Freeze/unfreezes the on-screen picture	
16.	Blank	Makes the screen blank	
17.	Source	Detects the input device	
18.	Auto	Auto adjustment for phase, tracking, size, position	
19.	Menu	Opens the OSD	15
20.	Status	Opens the OSD Status menu (the menu only opens when an input device is detected)	27
21.	Keystone top/bottom	Corrects image-trapezoid (wider top/bottom) effect	14
22.	Left cursor	Navigates and changes settings in the OSD	15
23.	Enter	Changes settings in the OSD	
24.	Page Up	Page up when connected through USB to a PC	
25.	Left	Left arrow when connected through USB to a PC	
26.	Enter	Enter key when connected through USB to a PC	
27.	Power	Turns the projector on or off	11
28.	Laser	Use as on-screen pointer. DO NOT POINT IN EYES.	

Note:


The remote control can only interface with a computer when connected to the computer through a USB cable connection. The computer cable connects a computer to the projector for display purposes only.

Remote Control Operating Range

The remote control uses infrared transmission to control the projector. It is not necessary to point the remote directly at the projector. Provided you are not holding the remote perpendicular to the sides or the rear of the projector, the remote will function well within a radius of about 10 meters (33 feet) and 30 degrees above or below the projector level. If the projector does not respond to the remote control, move a little closer.

Projector and Remote Control Buttons


The projector can be operated using the remote control or the buttons on the top of the projector. All operations can be carried out with the remote control; however the buttons on the projector are limited in use. The following illustration shows the corresponding buttons on the remote control and on the projector.

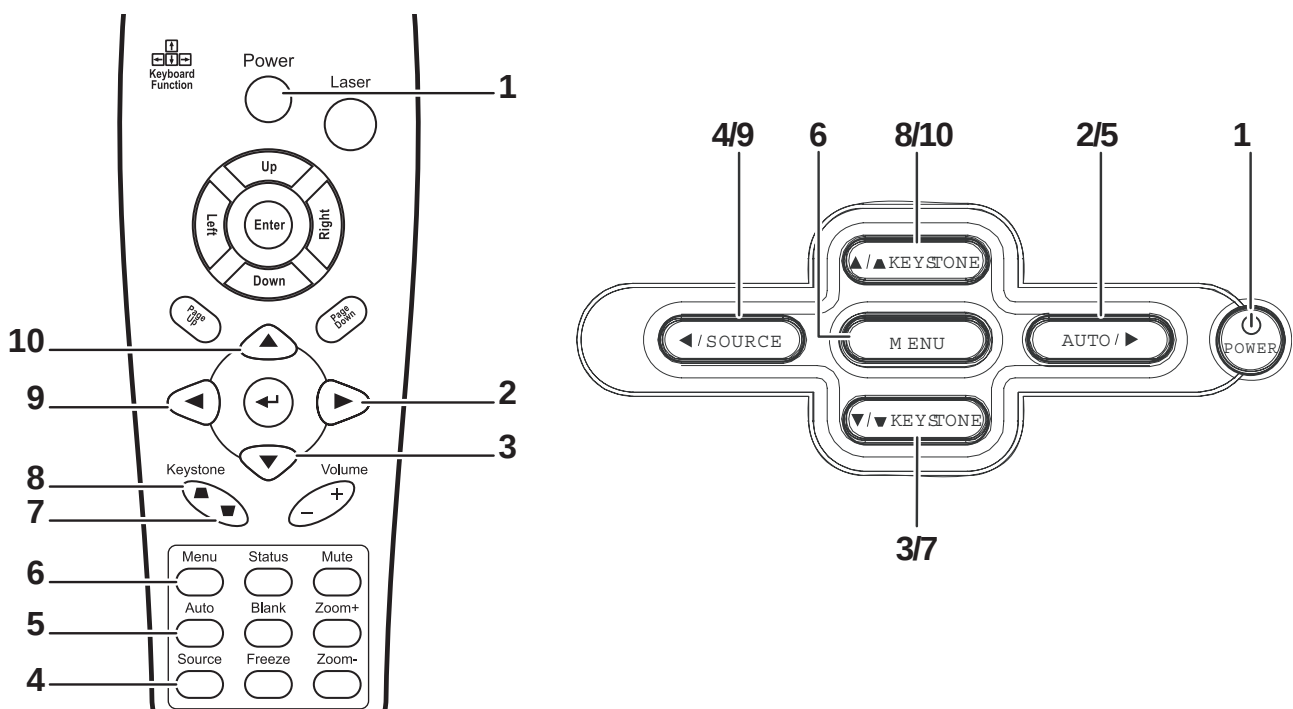


Some buttons on the projector have two functions. For example, item 8/10 on the projector functions both as the keystone button and as the up cursor key in OSD menus.

Inserting the Remote Control Batteries


1. Remove the battery compartment cover by sliding the cover in the direction of the arrow.

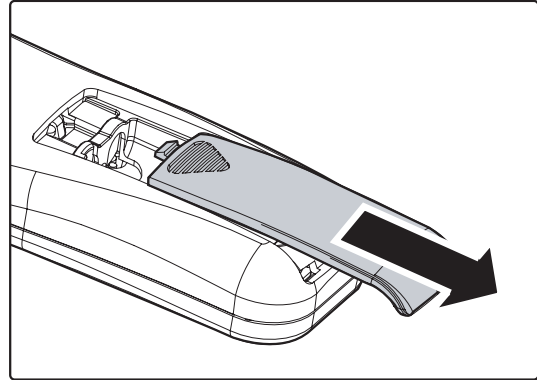

2. Insert the supplied batteries taking note of the polarity (+/-) as shown here.

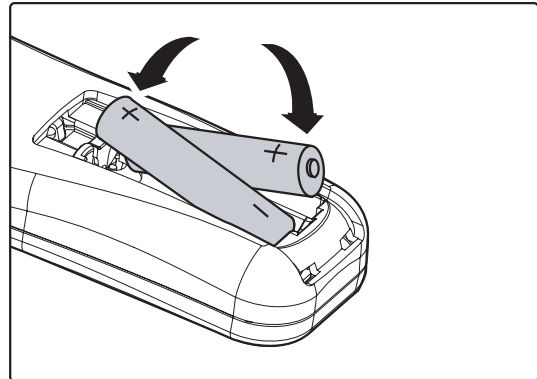

3. Replace the cover.

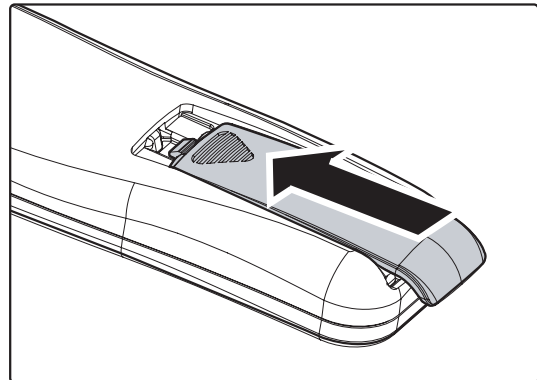


Caution:

1. Only use AAA batteries. (Alkaline is better)
2. Dispose of used batteries according to local ordinance regulations.
3. Remove the batteries when not using the projector for prolonged periods.

Connecting Input Devices

A PC or notebook computer as well as video devices can be connected to the projector at the same time. Video devices include DVD, VCD, and VHS players, as well as movie camcorders and digital still cameras. Check the user manual of the connecting device to confirm it has the appropriate output connector.

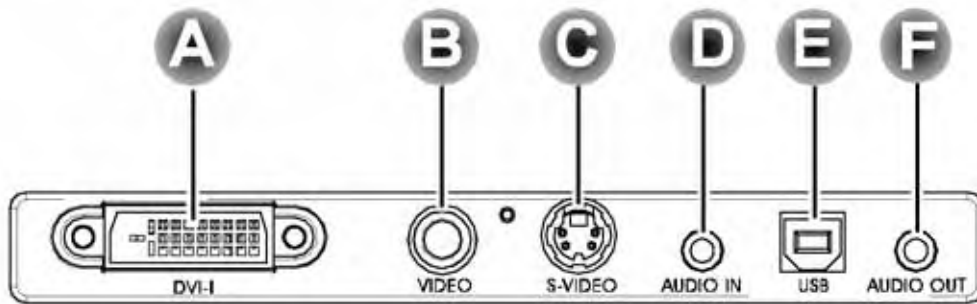


ITEM	LABEL	DESCRIPTION
A	DVI-I	Connect the supplied computer cable from a computer.
B	Video	Connect a composite video cable from a video device.
C	S-video	Connect the supplied S-video cable from a video device.
D	Audio-in	Connect an audio cable (not supplied) from the computer's audio-out connector. Connect the supplied audio cable (mini jack-to-RCA x 2) from a video device.
E	USB	Connect the supplied USB cable from a computer.
F	Audio-out	Audio loop-thru

Warning:

As a safety precaution, disconnect all power to the projector and connecting devices before making connections.

Starting and Shutting down the Projector

1. Connect the power cord to the projector. Connect the other end to a wall outlet. The POWER and READY LEDs on the projector turn on.
2. Turn on the connected devices.
3. Ensure the Ready LED is on a steady (not flashing) orange and then press the **Power** button to turn on the projector.

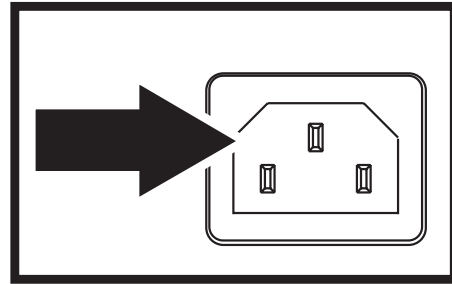

The projector splash screen displays and connected devices are detected. If the connected device is a PC, press the appropriate keys on the computer keyboard to switch the display output to the projector. (Check the user manual of the PC to determine the appropriate Fn key combination to change display output.)



See "Setting an Access Password (Security Lock)" on page 12 if Security Lock is enabled.


4. If more than one input device is connected, press the **Source** button repeatedly to switch among devices. (DVD and HDTV are supported through the DVI-I connector.)



5. To turn off the projector, press the **Power** button. The projector prepares for shutdown and a "Wait a moment please..." message appears.



6. When the "Power Off?/Press Power again" message appears, press the **Power** button. The projector turns off.

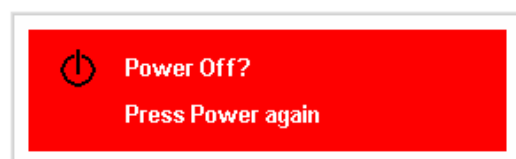

Caution:
Do not unplug the power cord until the Ready LED stops flashing, indicating the projector has cooled down.

Setting an Access Password (Security Lock)

You can use the four cursor (arrow) buttons to set a password and prevent unauthorized use of the projector. When enabled, the password must be entered after you power on the projector. (See “Navigating the OSD” on page 15 and “Setting the OSD Language” on page 16 for help on using OSD menus.)





Important:

Keep the password in a safe place. Without the password, you will not be able to use the projector. If you lose the password, contact your reseller for information on clearing the password.

1. Press the **Menu** button to open the OSD menu.
2. Press the cursor ◀▶ button to move to the **Setup** menu.
3. Press the cursor ▲▼ button to select **Advance Feature** and press **Enter** or ▶.
4. Press the cursor ▲▼ button to select **Security Lock**.
5. Press the cursor ◀▶ button to select **Enable**. (White text is selected.)
A password dialog box automatically appears.
6. You can only use the cursor buttons ▼▲◀▶ in the password fields. You can use any combination including the same arrow four times, but not less than four. Press the cursor buttons in any order to set the password. When you confirm the password, **OK** appears.

Every time you start the projector, a password dialog box appears.


Enter the password in the order you set it at step 6. (Press the **Menu** button to cancel if you enter the wrong password.)

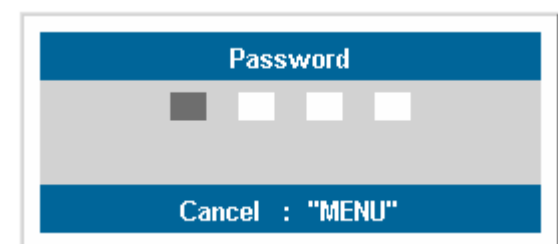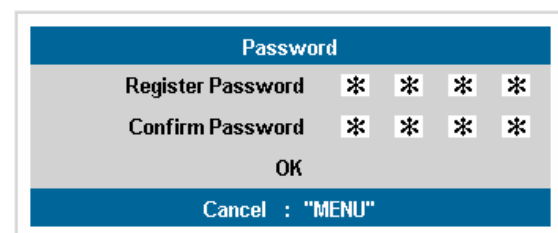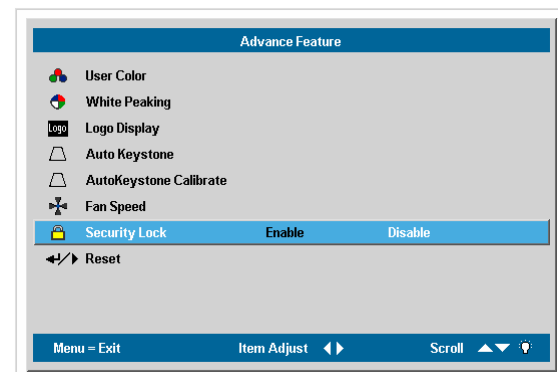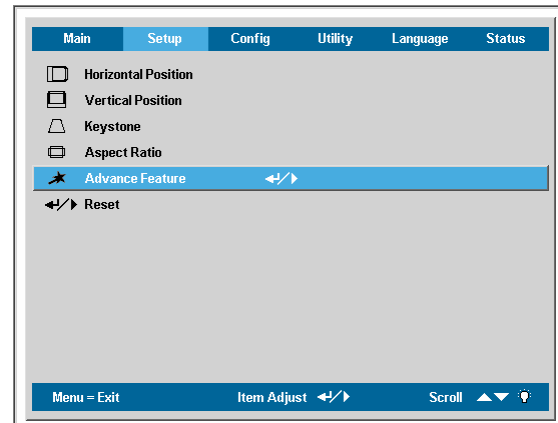

Adjusting the Projector Level

Take note of the following when setting up the projector:

- *The projector table or stand should be level and sturdy.*
- *Position the projector so that it is perpendicular to the screen.*
- *Be sure cables are not in the way or can cause the projector to be knocked over.*

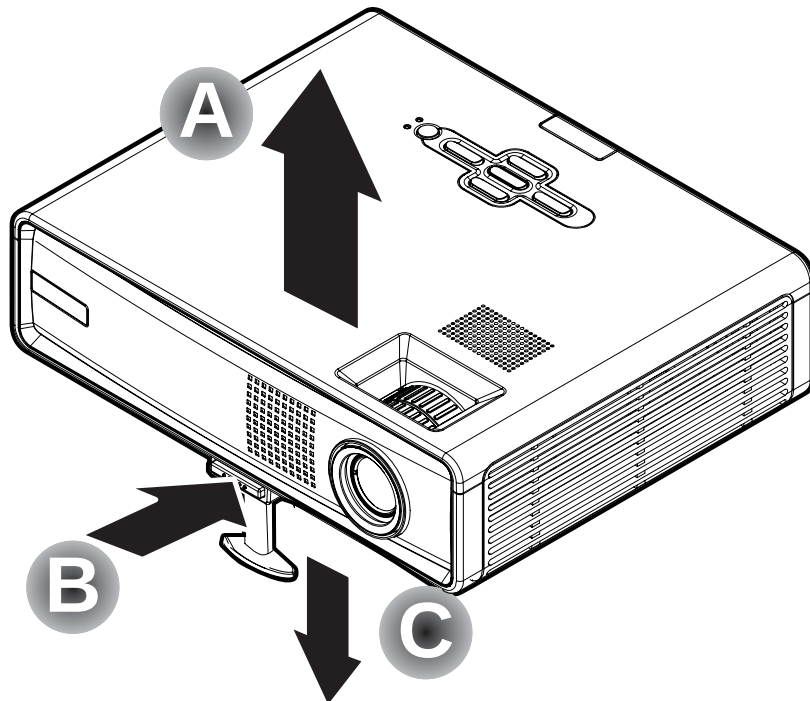


1. To raise the level of the projector, lift the projector [A] and press the height-adjuster button [B].

The height adjuster drops down [C].


2. To lower the level of the projector, press the height-adjuster button and push down on the top of the projector.

Adjusting the Zoom, Focus and Keystone


1. Use the **Image-focus** control (on the projector only) to sharpen the projected image **A**.
2. Use the **Image-zoom** control (on the projector only) to resize the projected image and screen size **B**.

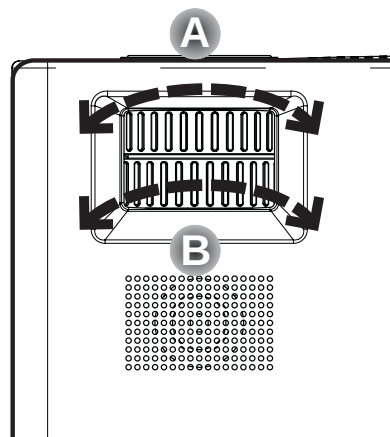

3. Use the **Keystone** buttons (on the projector or the remote control) to correct image-trapezoid (wider top or bottom) effect.

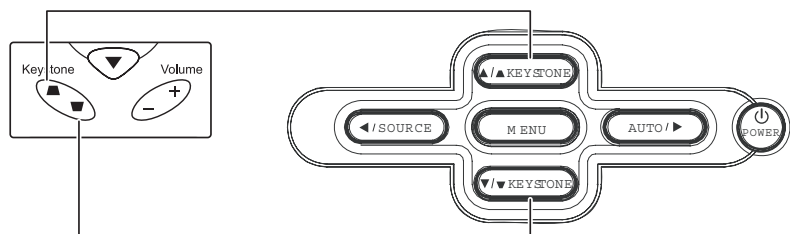


The keystone control appears on the display.

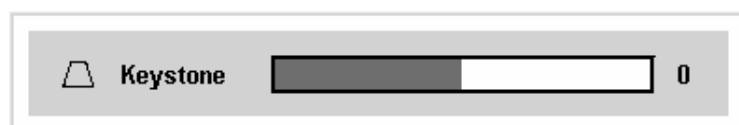

Adjusting the Volume

1. Press the **Volume +/-** buttons on the remote control. The volume control appears on the display.
2. Use the **Volume +/-** buttons to adjust the level.
3. Press the **Mute** button to turn off the volume.

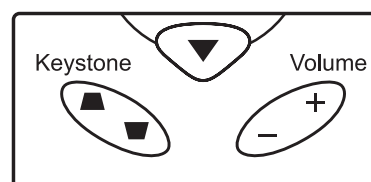



ON-SCREEN DISPLAY (OSD) MENU SETTINGS

OSD Menu Controls


The projector has an OSD that lets you make image adjustments and change various settings.

Navigating the OSD

You can use the remote control cursor buttons or the buttons on the top of the projector to navigate and make changes to the OSD. The following illustration shows the corresponding buttons on the remote control and on the projector.

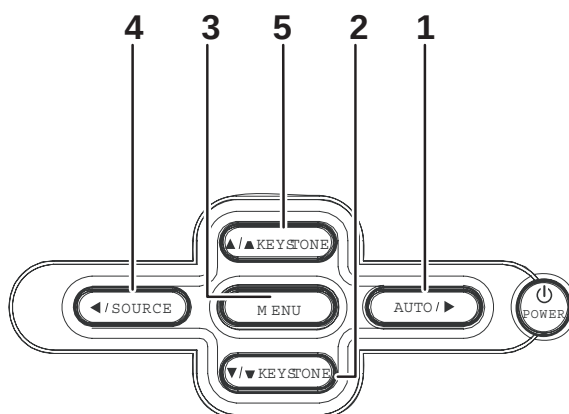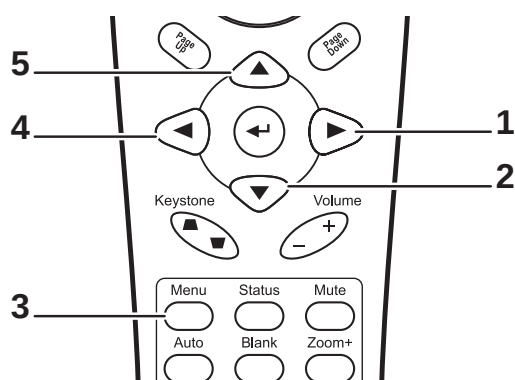

1. To open the OSD, press the **Menu** button.
2. There are six menus. Press the cursor ◀▶ button to move through the menus.
3. Press the cursor ▲▼ button to move up and down in a menu.
4. Press ◀▶ to change values for settings, and then press **Enter** or ▶ to confirm the new setting.
5. Press **Menu** to close the OSD or leave a submenu.

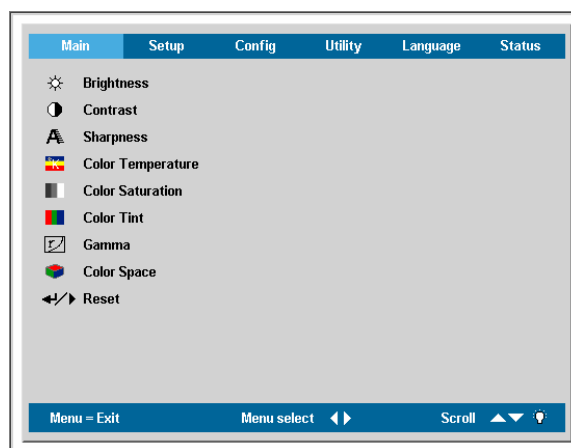


Note:

Depending on the video source not all items in the OSD are available. For example, the **Horizontal/Vertical Position** items in the Setup menu can only be modified when connected to a PC. Items that are not available cannot be accessed and are grayed out.


Setting the OSD Language

You may want to reference the OSD on your projector while reading this section. Set the OSD language to your preference before continuing. (The default language is English.)

1. Press the **Menu** button. The **Main** menu appears.

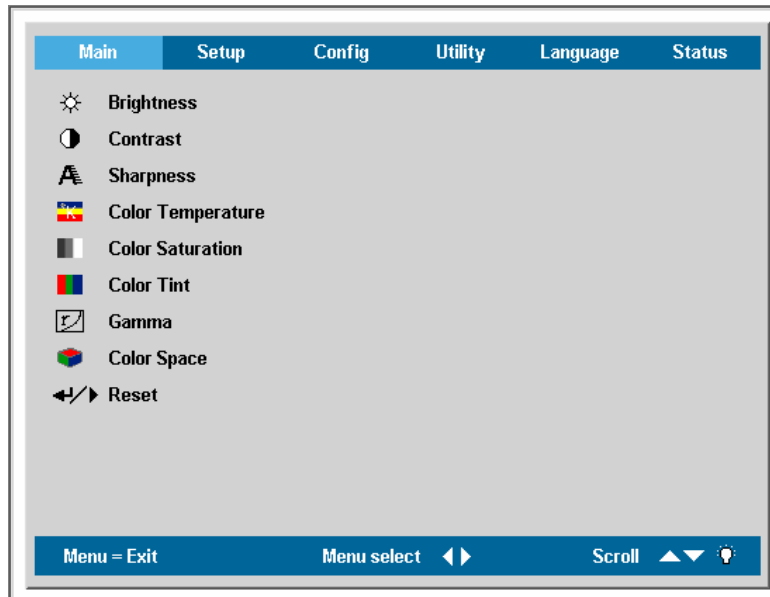


2. Press the cursor ◀▶ button until **Language** is highlighted.

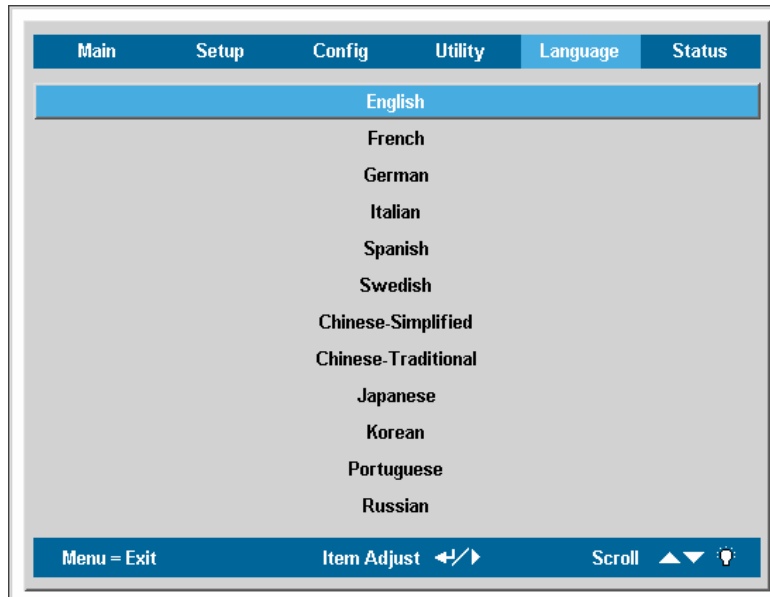

3. Press the cursor ▲▼ button until the language you want is highlighted.
4. Press the cursor ▶ or **Enter** button to confirm the language.
5. Press the **Menu** button twice to close the OSD.

Main Menu

Press the **Menu** button to open the **OSD** menu. Press the cursor ◀▶ button to move to the **Main** menu. Press the cursor ▲▼ button to move up and down in the **Main** menu. Press ◀▶ to change values for settings, and then press **Enter** or ▶ to confirm the new setting.

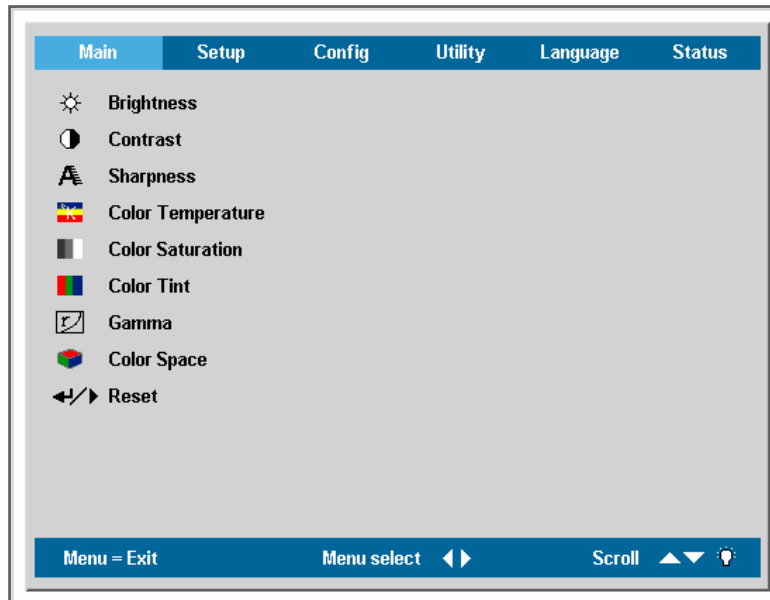

ITEM	DESCRIPTION	DEFAULT												
Brightness	Press the cursor ◀▶ button to adjust the brightness. (Range: 0 – 100)	50												
Contrast	Press the cursor ◀▶ button to adjust the contrast. (Range: 0 – 100)	50												
Sharpness	Press the cursor ◀▶ button to adjust the display sharpness (Range: 1-5)	3												
Color Temperature	Press the cursor ◀▶ button to adjust the video tint/hue. (Range: Cool/Normal/Warm)	Normal												
Color Saturation	Press the cursor ◀▶ button to adjust the video saturation. (Range: 0 – 100)	50												
Color Tint	Press the cursor ◀▶ button to adjust the video tint/hue. (Range: 0 – 100)	50												
Gamma	Press the cursor ◀▶ button to adjust the gamma correction of the display. <table><tr><th>Input</th><th>Gamma</th></tr><tr><td>PC</td><td>2.2</td></tr><tr><td>MAC</td><td>1.8</td></tr><tr><td>Video</td><td>2.4</td></tr><tr><td>Chart</td><td>2.2</td></tr><tr><td>B&W</td><td>2.4</td></tr></table>	Input	Gamma	PC	2.2	MAC	1.8	Video	2.4	Chart	2.2	B&W	2.4	PC
Input	Gamma													
PC	2.2													
MAC	1.8													
Video	2.4													
Chart	2.2													
B&W	2.4													
Color Space	Press the cursor ◀▶ button to adjust the color space. (Range: Auto – RGB – YPbPr- YCbCr)	Auto												

ITEM	DESCRIPTION	DEFAULT
Reset	Resets all Main settings to default values	—


Main Menu Functions Available for Connected Source

Function	RGB	DVI	Component Video	Composite Video	S-video
Brightness	O	O	O	O	O
Contrast	O	O	O	O	O
Sharpness	O	O	O	O	O
Color Temp	O	O	O	O	O
Color Saturation			O	O	O
Color Tint			O	O	O
Gamma	O	O	O	O	O
Color Space	O	O	O	O	O
Reset	O	O	O	O	O

O = available to video source

Setup Menu

Press the **Menu** button to open the **OSD** menu. Press the cursor ◀▶ button to move to the **Setup** menu. Press the cursor ▲▼ button to move up and down in the **Setup** menu. Press ◀▶ to change values for settings, and then press **Enter** or ▶ to confirm the new setting.

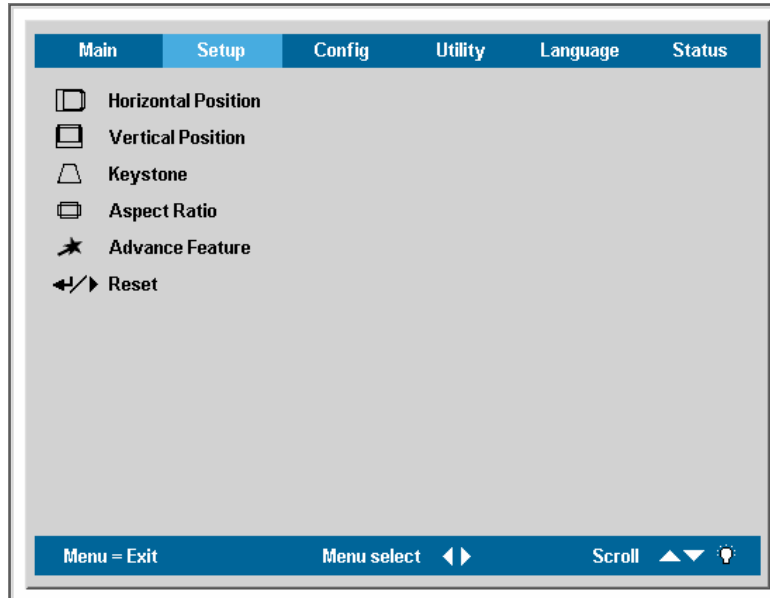

ITEM	DESCRIPTION	DEFAULT
Horizontal Position	Press the cursor ◀▶ button to move the image left or right. (Range: 0 – 100)	50
Vertical Position	Press the cursor ◀▶ button to move the image up or down. (Range: 0 – 100)	50
Keystone	Press the cursor ◀▶ button to correct distortion of the projected image. (Range: -50 – +50)	0
Aspect Ratio	Press the cursor ◀▶ button to toggle between the 4:3 standard format and the 16:9 High Definition TV (HDTV) format.	16:9
Advance Feature	See “Advance Feature” on page 20.	—
Reset	Resets Keystone and Aspect Ratio to default values	—

Setup Menu Functions Available for Connected Source


Function	RGB	DVI	Component Video	Composite Video	S-video
H Position	○				
V Position	○				
Keystone correction	○	○	○	○	○
Aspect Ratio	○	○	○	○	○

Function	RGB	DVI	Component Video	Composite Video	S-video
Advance Feature	O	O	O	O	O
Reset	O	O	O	O	O

O = available to video source

Advance Feature

Press the **Menu** button to open the **OSD** menu. Press ◀▶ to move to the **Setup** menu. Press ▲▼ to move to the **Advance Feature** menu and then press **Enter** or ▶. Press ▲▼ to move up and down in the **Advance Feature** menu. Press ◀▶ to change values for settings, and then press **Enter** or ▶ to confirm the new setting.

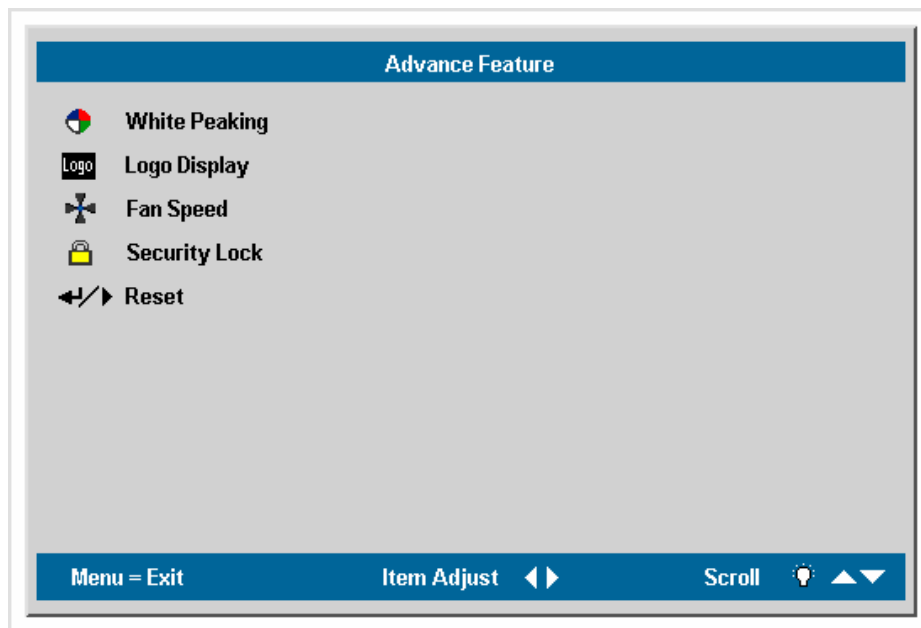

ITEM	DESCRIPTION	DEFAULT
White Peaking	White Peaking increases the output in the brightest whites without changing the blacks and dark grays. It crushes the whites slightly, but it does not appear to clip them or seriously obscure white detail. If you prefer a stronger image, adjust toward the maximum setting. For a smoother, more natural image, adjust toward the minimum setting. Press ◀▶ to adjust the value of white peaking. (Range: 0 – 10)	Data source: 10 Video source: 2
Logo Display	Press ◀▶ to enable or disable if the logo displays when the projector starts, and when no source is detected. (Range: On – Off)	On
Fan Speed	Press the cursor ◀▶ button to toggle between Normal and High fan speeds. Set Fan Speed to High in altitudes over 1500 meters (5000 feet).	Normal


ITEM	DESCRIPTION	DEFAULT
Security Lock	Press the cursor ◀▶ button to enable or disable Security Lock. When you enable Security Lock a Register Password dialog box appears: You can only use the cursor buttons ▼ ▲ ◀ ▶ in the password fields. Press the cursor buttons in any order and confirm to set the password. When the password is enabled, it must be entered every time after you power on the projector. See “Setting an Access Password (Security Lock)” on page 12 for steps on setting the password.	—
Reset	Resets White Peaking, Logo Display and Auto Keystone settings to default values	—

Note:

If Security Lock is enabled, you must enter the password every time the projector is turned on. However, if the projector is already turned on, Security Lock can be disabled without knowing the current password.

User Color


Press the **Menu** button to open the **OSD** menu. Press ◀▶ to move to the **Setup** menu. Press ▲▼ to move to the **Advance Feature** menu and then press **Enter** or ▶. Press ▲▼ to move to the **User Color** menu and then press **Enter** or ▶. Press ▲▼ to move up and down to select a color. Press ◀▶ to change values for settings, and then press **Enter** or ▶ to confirm the new setting.

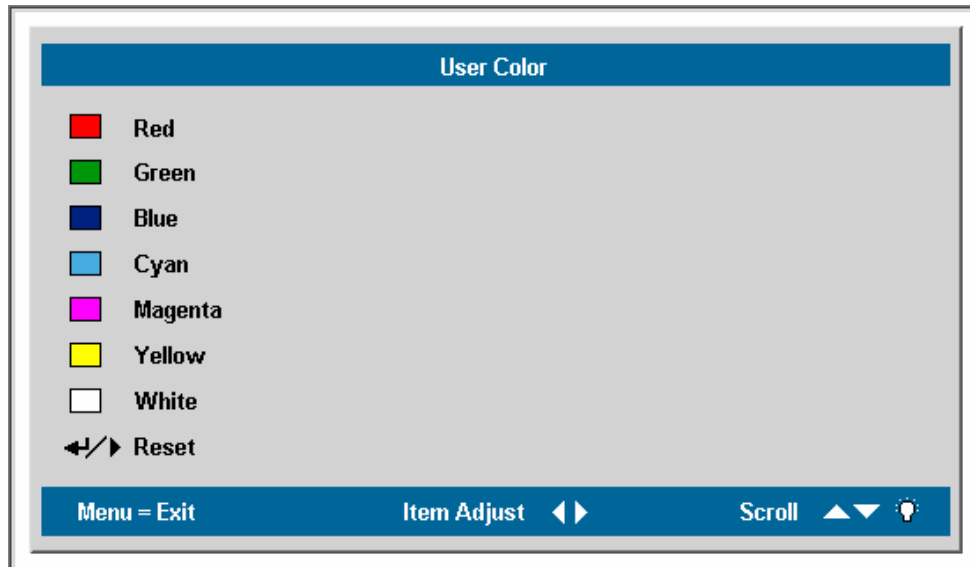

ITEM	DESCRIPTION	DEFAULT
Red	Press the cursor ◀▶ button to adjust the red color level. (Range: 0 - 100)	80
Green	Press the cursor ◀▶ button to adjust the green color level. (Range: 0 - 100)	80
Blue	Press the cursor ◀▶ button to adjust the blue color level. (Range: 0 - 100)	80
Cyan	Press the cursor ◀▶ button to adjust the cyan color level. (Range: 0 - 100)	80
Magenta	Press the cursor ◀▶ button to adjust the magenta color level. (Range: 0 - 100)	80
Yellow	Press the cursor ◀▶ button to adjust the yellow color level. (Range: 0 - 100)	80
White	Press the cursor ◀▶ button to adjust the white color level. (Range: 0 - 100)	80
Reset	Resets all User Color settings to default values	—

Config Menu

Press the **Menu** button to open the **Main** menu. Press the cursor ◀▶ button to move to the **Config** menu. Press the cursor ▲▼ button to move up and down in the **Config** menu. Press ◀▶ to change values for settings, and then press **Enter** or ▶ to confirm the new setting.

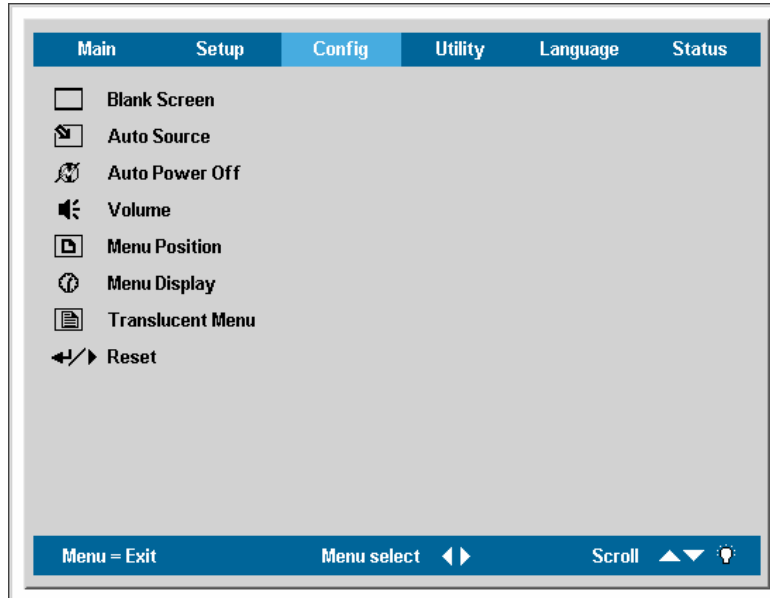


ITEM	DESCRIPTION	DEFAULT
Blank Screen	Press the cursor ◀▶ button to select a background color for the blank screen. (Range: Black – Red – Green – Blue – White)	Blue
Auto Source	Press the cursor ◀▶ button to enable or disable automatic source detection. (Range: On – Off)	On
Auto Power Off	Press the cursor ◀▶ button to enable or disable automatic shut-down of lamp after 10 minutes of inactivity. (Range: On – Off)	Off
Volume	Press the cursor ◀▶ button to adjust the audio volume level. (Range: 0 - 100)	50
Menu Position	Press the cursor ◀▶ button to position the OSD on screen. (Range: Left – Right – Center – Down – Up)	Center
Menu Display	Press the cursor ◀▶ button to determine the timeout delay of the OSD. (Range: 10 – 20 sec.)	15
Translucent Menu	Press the cursor ◀▶ button to set menu screen translucency. (Range: 0% – 100%)	0%
Reset	Resets all Config items to default values	

Note:
The Config menu functions are available to all video sources.

Utility Menu

Press the **Menu** button to open the **Main** menu. Press the cursor ◀▶ button to move to the **Utility** menu. Press the cursor ▲▼ button to move up and down in the **Utility** menu. Press ◀▶ to change values for settings, and then press **Enter** or ▶ to confirm the new setting.

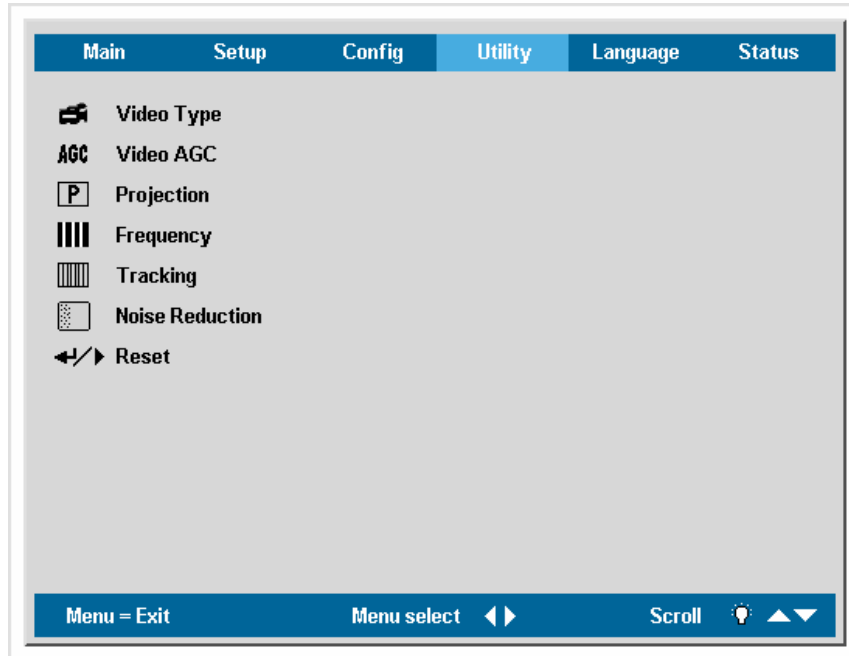

ITEM	DESCRIPTION	DEFAULT
Video Type	Press the cursor ◀▶ button to select the video standard (Range: Auto – NTSC – PAL – SECAM)	Auto
Video AGC	Press the cursor ◀▶ button to enable or disable automatic gain control for the video source. (Range: On – Off)	On
Projection	Press the cursor ◀▶ button to choose from four projection methods: P Desktop mount, front of screen Q Desktop mount, rear of screen d Ceiling mount, front of screen b Ceiling mount, rear of screen	Desktop front P
Frequency	Press the cursor ◀▶ button to adjust the A/D sampling clock. (Range: 0° - 180°)	Auto detected
Tracking	Press the cursor ◀▶ button to adjust the A/D sampling number. (Range: 1 - 100)	Auto detected

ITEM	DESCRIPTION	DEFAULT
Noise Reduction	Press the cursor ◀▶ button to reduce noise for sources of Video , S-Video , 480i and 576i	On
Reset	Resets Video Type, Video AGC, Projection, and Noise Reduction to default values	—


Utility Menu Functions Available for Connected Source

Function	RGB	DVI	Component Video	Composite Video	S-video
Video Type				O	O
Video AGC				O	O
Projection	O	O	O	O	O
Frequency	O		O		
Tracking	O				
Digital Zoom	O		O	O	O
Reset	O	O	O	O	O

O = available to video source

Language Menu


Press the **Menu** button to open the **Main** menu. Press the cursor ◀▶ button to move to the **Language** menu. Press the cursor ▲▼ button to move up and down in the **Language** menu. Press **Enter** or ▶ to confirm the new setting.

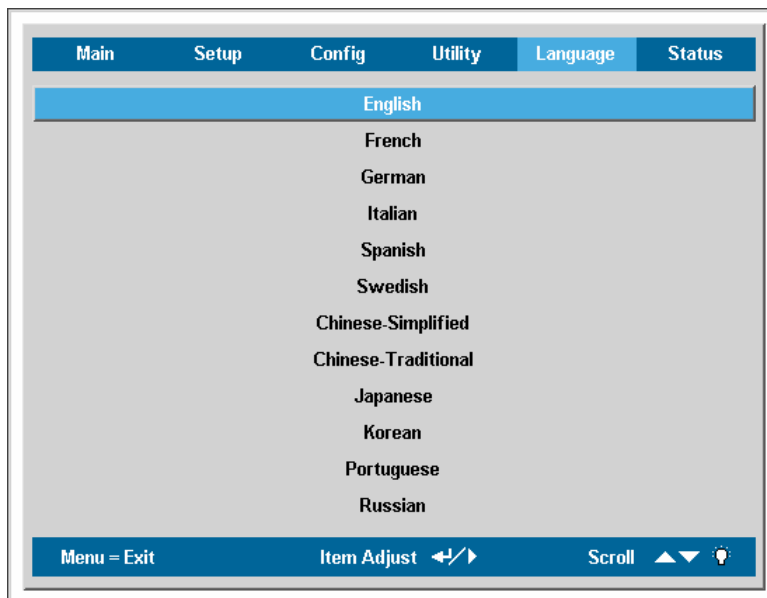

ITEM	DESCRIPTION	DEFAULT
English	Press the cursor ▲▼ button to move up and down in the menu. Press the Enter or ▶ to confirm the language.	English
French		
German		
Italian		
Spanish		
Swedish		
Chinese Simplified		
Chinese Traditional		
Japanese		
Korean		
Portuguese		
Russian		

Status Menu

Press the **Menu** button to open the **Main** menu. Press the cursor ◀▶ button to move to the **Status** menu. Press the cursor ▲▼ button to move up and down in the **Status** menu.

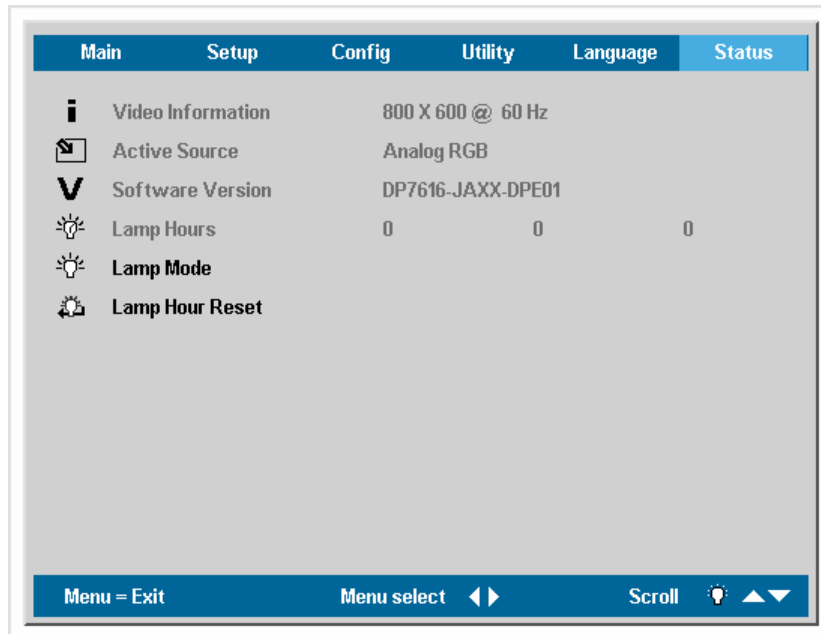

ITEM	DESCRIPTION	DEFAULT
Video Information	Displays the resolution and refresh rate for RGB/DVI mode. Displays the color standard for video mode.	These items are display only.
Active Source	Displays the active source.	
Software Version	Displays information about the software version.	
Lamp Hours	Shows the number of hours lamp has been in use for Eco, Normal, and Boost mode.	
Lamp Mode	Press the cursor ◀▶ button to choose the lamp mode. Range: Eco; Normal; and Boost. Eco mode uses less power and extends lamp life, but decreases lamp brightness. Boost mode uses more power and increases lamp brightness, but shortens lamp life.	Normal
Lamp Hour Reset	After replacing the lamp, this item should be reset. Refer to “Replacing the Projection Lamp” on page 28.	—

Replacing the Projection Lamp

The projection lamp should be replaced when it burns out. It should only be replaced with a certified replacement part, which you can order from your local dealer.

Important:

1. The lamp contains a certain amount of mercury and should be disposed of according to local ordinance regulations.


2. Avoid touching the glass surface of the new lamp: Doing so may shorten its operation life.

Warning:

Be sure to turn off and unplug the projector at least an hour before replacing the lamp. Failure to do so could result in a severe burn.


1. Loosen the two captive screws on the lamp compartment cover (A).

2. Remove the lamp compartment cover (B).

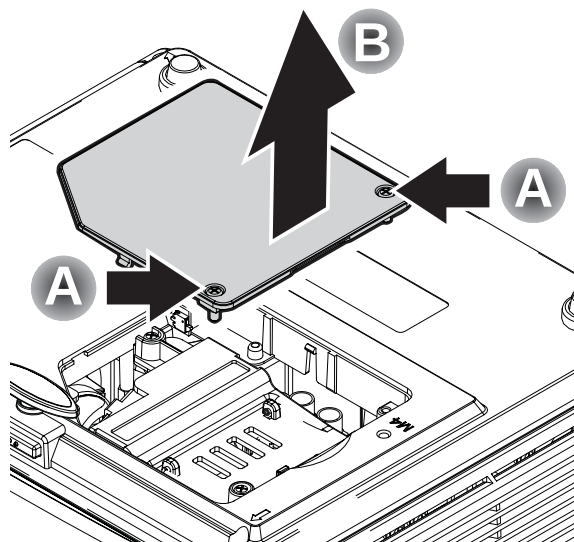


- 3.** Remove the two screws from the lamp module (A).

- 4.** Lift the module handle up (B).

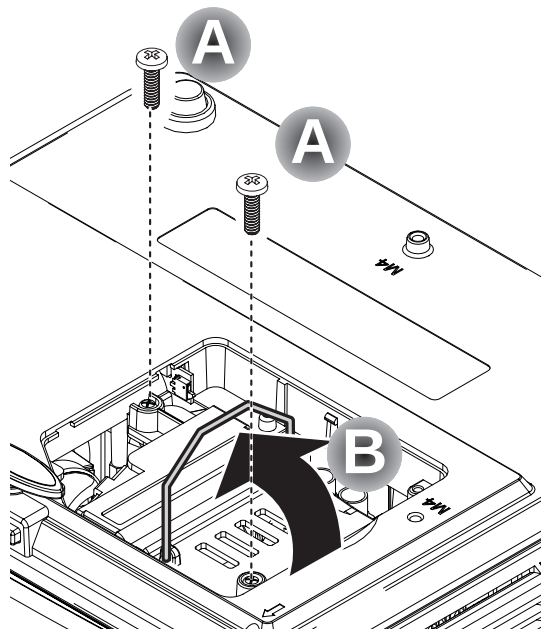

- 5.** Pull firmly on the module handle to remove the lamp module.


- 6.** Reverse steps 1 to 5 to install the new lamp module.

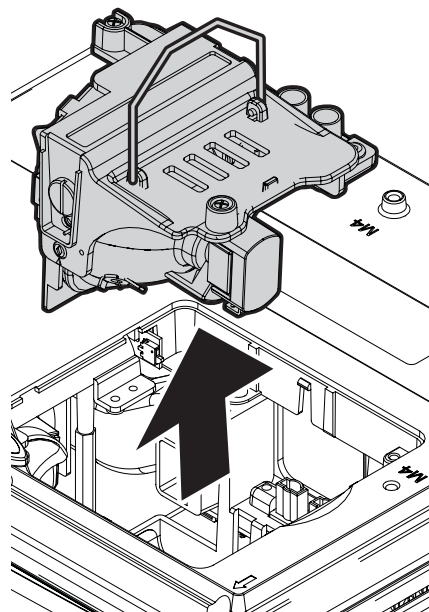

Resetting the Lamp

After replacing the lamp, you should reset the lamp hour counter to zero. Refer to the following:


1. Press the **Menu** button to open the Main menu.
2. Press the cursor ◀▶ button to move to the **Status** menu.
3. Press the cursor ▲▼ button to move down to **Lamp Hour Reset**.

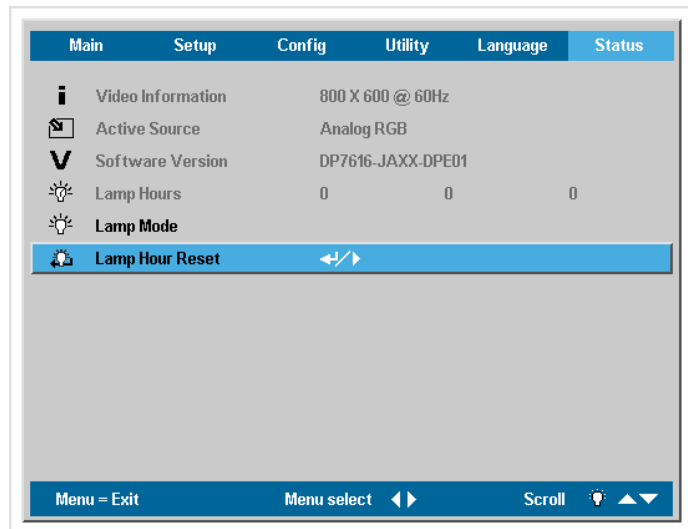

4. Press the cursor ▶ or **Enter** button.

A message screen appears.

5. Press the cursor buttons in this order: ▼; ▲; ◀; ▶.
The **Status** menu appears again showing the **Lamp Hours** reset to zero.

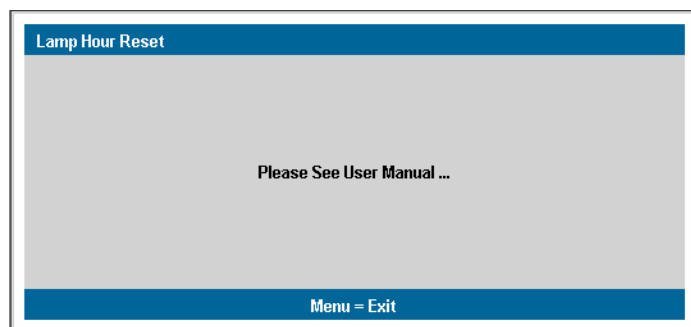

Cleaning the Projector

Cleaning the projector to remove dust and grime will help ensure trouble-free operation.

Warning:

1. Be sure to turn off and unplug the projector at least an hour before cleaning. Failure to do so could result in a severe burn.
2. Use only a dampened cloth when cleaning. Do not allow water to enter the ventilation openings on the projector.
3. If a little water gets into the projector interior while cleaning, leave unplugged in a well-ventilated room for several hours before using.
4. If a lot of water gets into the projector interior when cleaning, have the projector serviced.

Cleaning the Lens

You can purchase optic lens cleaner from most camera stores. Refer to the following to clean the projector lens.

1. Apply a little optic lens cleaner to a clean soft cloth. (Do not apply the cleaner directly to the lens.)
2. Lightly wipe the lens in a circular motion.

Caution:

1. Do not use abrasive cleaners or solvents.
2. To prevent discoloration or fading, avoid getting cleaner on the projector case.

Cleaning the Case

Refer to the following to clean the projector case.


1. Wipe off dust with a clean dampened cloth.
2. Moisten the cloth with warm water and mild detergent (such as used to wash dishes), and then wipe the case.
3. Rinse all detergent from the cloth and wipe the projector again.

Caution:

To prevent discoloration or fading of the case, do not use abrasive alcohol-based cleaners.

Using the Kensington® Lock

If you are concerned about security, attach the projector to a permanent object with the Kensington slot and a security cable.

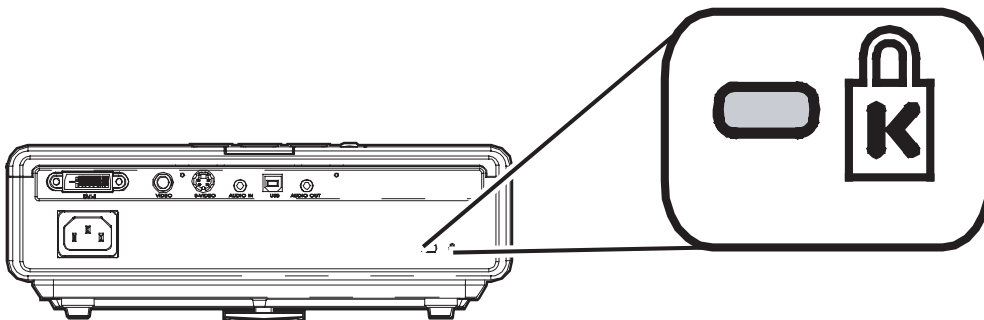

Note:

Contact your vendor for details on purchasing a suitable Kensington security cable.

The security lock corresponds to Kensington's MicroSaver Security System. If you have any comment, contact: Kensington, 2853 Campus Drive, San Mateo, CA94403, U.S.A. Tel: 800-535-4242, <http://www.Kensington.com>.

Common problems and solutions

These guidelines provide tips to deal with problems you may encounter while using the projector. If the problem remains unsolved, contact your dealer for assistance.

Often after time spent troubleshooting, the problem is traced to something as simple as a loose connection. Check the following before proceeding to the problem-specific solutions.

- *Use some other electrical device to confirm that the electrical outlet is working.*
- *Ensure the projector is turned on.*
- *Ensure all connections are securely attached.*
- *Ensure the attached device is turned on.*
- *Ensure a connected PC is not in suspend mode.*
- *Ensure a connected notebook computer is configured for an external display. (This is usually done by pressing an Fn-key combination on the notebook.)*

Tips for Troubleshooting

In each problem-specific section, try the steps in the order suggested. This may help you to solve the problem more quickly.

Try to pin point the problem and thus avoid replacing non-defective parts. For example, if you replace batteries and the problem remains, put the original batteries back and go to the next step.

Keep a record of the steps you take when troubleshooting: The information may be useful when calling for technical support or for passing on to service personnel.

LED Error Messages

LED	STATUS/ NUMBER OF FLASHES	DESCRIPTION
Ready	Flashing	Lamp not ready—do not press the power button
	1	T1 sensor error / Ballast Fan error / Lamp off(Optional)
	2	Burner Fan error
	3	Ballast UART error / Lamp Fan error
	4	Power Fan error
Power	2	Environment Task Created Fail
	3	System overheating
	4	T1 sensor error
	5	Ballast UART error / Lamp off(Optional)
	6	Fan Error

Image Problems

Problem: No image appears on the screen

1. Verify the settings on your notebook or desktop PC.
2. Turn off all equipment and power up again in the correct order.

Problem: The image is blurred

1. Adjust the **Focus** on the projector.
2. Press the **Auto** button on the remote control or projector.
3. Ensure the projector-to-screen distance is within the 10-meter (33-feet) specified range.
4. Check that the projector lens is clean.

Problem: The image is wider at the top or bottom (trapezoid effect)

1. Position the projector so it is as perpendicular to the screen as possible.
2. Use the Keystone button on the remote control or projector to correct the problem.

Problem: The image is reversed or upside down

Check the **Projection** setting on the **Utility** menu of the OSD.

Problem: The image is streaked

1. Set the **Frequency** and **Tracking** settings on the **Utility** menu of the OSD to the default settings.

2. To ensure the problem is not caused by a connected PC's video card, connect to another computer.

Problem: The image is flat with no contrast

Adjust the **Contrast** setting on the **Main** menu of the OSD.

Problem: The color of the projected image does not match the source image.

Adjust the **Color Temperature** and **Gamma** settings on the **Main** menu of the OSD.

Lamp Problems

Problem: There is no light from the projector

1. Check that the power cable is securely connected.
2. Ensure the power source is good by testing with another electrical device.
3. Restart the projector in the correct order and check that the Power LED is green.
4. If you have replaced the lamp recently, try resetting the lamp connections.
5. Replace the lamp module.
6. Put the old lamp back in the projector and have the projector serviced.

Problem: The lamp goes off

1. Power surges can cause the lamp to turn off. Press the power button twice to turn off the projector. When the Ready LED is on, press the power button.
2. Replace the lamp module.
3. Put the old lamp back in the projector and have the projector serviced.

Remote Control Problems

Problem: The projector does not respond to the remote control

1. Direct the remote control towards remote sensor on the projector.
2. Ensure the path between remote and sensor is not obstructed.
3. Turn off any fluorescent lights in the room.
4. Check the battery polarity.
5. Replace the batteries.
6. Turn off other Infrared-enabled devices in the vicinity.
7. Have the remote control serviced.

Audio Problems

Problem: There is no sound

1. Adjust the volume on the remote control.
2. Adjust the volume of the audio source.
3. Check the audio cable connection.
4. Test the source audio output with other speakers.
5. Have the projector serviced.

Problem: The sound is distorted

1. Check the audio cable connection.
2. Test the source audio output with other speakers.
3. Have the projector serviced.

Having the Projector Serviced

If you are unable to solve the problem, you should have the projector serviced. Pack the projector in the original carton. Include a description of the problem and a checklist of the steps you took when trying to fix the problem. The information may be useful to service personnel. For servicing, return the projector to the place you purchased it.

Specifications


Display type	TI DMD 0.65", 720P-WXGAx1, LVDS DLP® with DDP 3020 ASIC controller
Resolution	WXGA 1280 x 768 native
Color	16.7 Million (30-bits/pixel)
Bandwidth	Up to 170 MHz
Weight	2.0 kg (4.4 lbs.)
Projection distance	1.5 to 7 meters (59 to 276 inches)
Projection screen size	0.8 to 4.39 meters (31.51 to 172.73 inches)
Brightness uniformity	Typical 80%; minimum 70%
Projection lens	Manual and digital zoom; manual focus
Zoom ratio	1.16
Vertical keystone correction	+/- 15
Projection methods	Desktop front/rear; ceiling front/rear
Data compatibility	IBM PC or compatibles (VGA, SVGA, XGA, SXGA, UXGA), Mac
SDTV/EDTV/HDTV	480i, 576i/480p, 576p/720p, 1080i
Video compatibility	NTSC/NTSC 4.43, PAL (B/G/H/I/M/N 60), SECAM
H-Sync	15,31 - 90 kHz
V-Sync	50 - 85 Hz
Safety certification	FCC Class B, UL, C-UL, CE, CB, TUV-CB
Operation temperature	5° C ~ 35° C
Dimensions	See "Projector Dimensions" on page 41
Power consumption	260W (normal mode); 235W (ECO mode); 295W (boost mode) @110 Vac
Stand By	< 10 watts
Lamp	Boost mode: 230W; normal mode: 200W; Eco mode: 180W

Audio speaker	1W mono speaker
---------------	-----------------

Input/output connectors

PC	DVI-I
	USB
Video	Composite video (RCAx1)
	S-video (Mini-DIN)
Audio-in	Mini-jack
Audio-out	Mini-jack
Security	Kensington slot

Projection Distance V.S. Projection Size

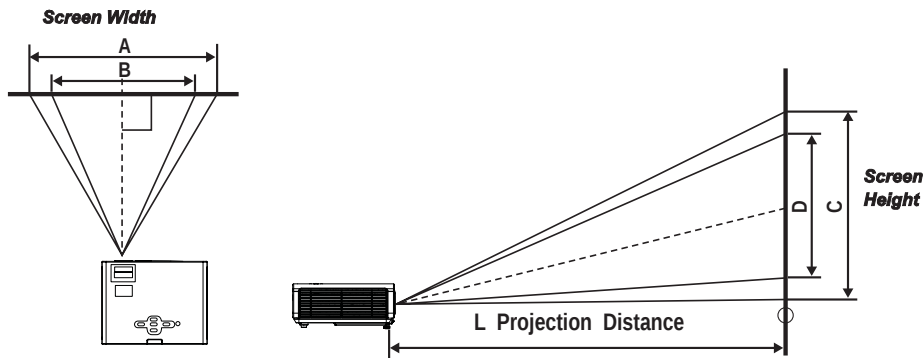

0.65" WXGA		Max. Screen Size			Min. Screen Size	
Projection Distance L	Diagonal	Width A	Height C	Diagonal	Width B	Height D
1.00 m	0.63 m	0.55 m	0.31 m	0.53 m	0.47 m	0.26 m
3.28 ' <i></i>	24.68 " <i></i>	21.51 " <i></i>	12.10 " <i></i>	21.00 " <i></i>	18.31 " <i></i>	10.30 " <i></i>
1.50 m	0.94 m	0.82 m	0.46 m	0.80 m	0.70 m	0.39 m
4.92 ' <i></i>	37.01 " <i></i>	32.27 " <i></i>	18.15 " <i></i>	31.51 " <i></i>	27.47 " <i></i>	15.45 " <i></i>
2.40 m	1.50 m	1.31 m	0.74 m	1.28 m	1.12 m	0.63 m
7.87 ' <i></i>	59.22 " <i></i>	51.63 " <i></i>	29.04 " <i></i>	50.41 " <i></i>	43.95 " <i></i>	24.72 " <i></i>
2.80 m	1.75 m	1.53 m	0.86 m	1.49 m	1.30 m	0.73 m
9.18 ' <i></i>	69.09 " <i></i>	60.24 " <i></i>	33.88 " <i></i>	58.81 " <i></i>	51.27 " <i></i>	28.84 " <i></i>
3.20 m	2.01 m	1.75 m	0.98 m	1.71 m	1.49 m	0.84 m
10.50 ' <i></i>	78.96 " <i></i>	68.84 " <i></i>	38.72 " <i></i>	67.21 " <i></i>	58.60 " <i></i>	32.96 " <i></i>
3.60 m	2.26 m	1.97 m	1.11 m	1.92 m	1.67 m	0.94 m
11.81 ' <i></i>	88.83 " <i></i>	77.45 " <i></i>	43.57 " <i></i>	75.61 " <i></i>	65.92 " <i></i>	37.08 " <i></i>
4.00 m	2.51 m	2.19 m	1.23 m	2.13 m	1.86 m	1.05 m
13.12 ' <i></i>	98.70 " <i></i>	86.05 " <i></i>	48.41 " <i></i>	84.01 " <i></i>	73.25 " <i></i>	41.20 " <i></i>
4.40 m	2.76 m	2.40 m	1.35 m	2.35 m	2.05 m	1.15 m
14.43 ' <i></i>	108.58 " <i></i>	94.66 " <i></i>	53.25 " <i></i>	92.42 " <i></i>	80.57 " <i></i>	45.32 " <i></i>
4.80 m	3.01 m	2.62 m	1.48 m	2.56 m	2.23 m	1.26 m
15.74 ' <i></i>	118.45 " <i></i>	103.27 " <i></i>	58.09 " <i></i>	100.82 " <i></i>	87.90 " <i></i>	49.44 " <i></i>
5.20 m	3.26 m	2.84 m	1.60 m	2.77 m	2.42 m	1.36 m
17.06 ' <i></i>	128.32 " <i></i>	111.87 " <i></i>	62.93 " <i></i>	109.22 " <i></i>	95.22 " <i></i>	53.56 " <i></i>
5.60 m	3.51 m	3.06 m	1.72 m	2.99 m	2.60 m	1.47 m
18.37 ' <i></i>	138.19 " <i></i>	120.48 " <i></i>	67.77 " <i></i>	117.62 " <i></i>	102.55 " <i></i>	57.68 " <i></i>
7.00 m	4.39 m	3.83 m	2.15 m	3.73 m	3.26 m	1.83 m
22.96 ' <i></i>	172.73 " <i></i>	150.60 " <i></i>	84.71 " <i></i>	147.02 " <i></i>	128.18 " <i></i>	72.10 " <i></i>
10.00 m	6.27 m	5.46 m	3.07 m	5.33 m	4.65 m	2.62 m
32.80 ' <i></i>	246.76 " <i></i>	215.14 " <i></i>	121.01 " <i></i>	210.03 " <i></i>	183.12 " <i></i>	103.00 " <i></i>

Shaded rows are equivalent measurement in feet and inches

Timing Mode Table

The projector can display several resolutions. The following table outlines the resolutions that can be displayed by the projector.

Signal	Resolution	Frequency H. (KHz)	Frequency V. (Hz)	Video	Digital	Analog
NTSC	--	15.734	60.0	○	--	--
PAL/SECAM	--	15.625	50.0	○	--	--
VESA	640 x 350	31.5	70.1	--	○	○
	640 x 350	37.9	85.1	--	○	○
	720 x 350	31.5	70.0	--	○	○
	640 x 400	31.5	70.1	--	○	○
	640 x 400	37.9	85.1	--	○	○
	720 x 400	31.5	70.0	--	○	○
	720 x 400	37.9	85.0	--	○	○
	640 x 480	31.5	60.0	--	○	○
	640 x 480	37.9	72.8	--	○	○
	640 x 480	37.5	75.0	--	○	○
	640 x 480	43.3	85.0	--	○	○
	800 x 600	35.2	56.3	--	○	○
	800 x 600	37.9	60.3	--	○	○
	800 x 600	46.9	75.0	--	○	○
	800 x 600	48.1	72.2	--	○	○
	800 x 600	53.7	85.1	--	○	○
	1024 x 768	48.4	60.0	--	○	○
	1024 x 768	56.5	70.1	--	○	○
	1024 x 768	57.7	72.0	--	○	○
	1024 x 768	60.0	75.0	--	○	○
	1024 x 768	68.7	85.0	--	○	○
	1280 x 1024	64.0	60.0	--	○	○
	1280 x 1024	80.0	75.0	--	○	○
	1280 x 1024	91.1	85.0	--	○	○

	1280 x 768	47.4	60	--	○	○
	1600 x 1200	75.0	60	--	○	○
Apple Macintosh	640 x 480	35.0	66.7	--	○	○
	832 x 624	49.7	74.5	--	○	○
	1024 x 768	60.2	74.9	--	○	○
	1152 x 870	68.7	75.1	--	○	--
HDTV	1920 x 1080	33.8	30.0	○	--	--
	1920 x 1080	28.1	25.0	○	--	--
	1280 x 720	45.0	60.0	○	--	--
SDTV	720 x 576	31.3	50.0	○	--	--
	720 x 480	31.5	60.0	○	--	--

○: Frequency supported

--: Frequency not supported


*The native resolution of the panel is 1280 x 768. Resolution others than 1280 x 768 may be display with uneven size of text or line.

*The color of yellow mean Displayable only. (4:3 only)

*The color of cyan mean may have a little noise is acceptable

* HDTV timing main check tool is DVD player, VG828 is secondary.

Projector Dimensions

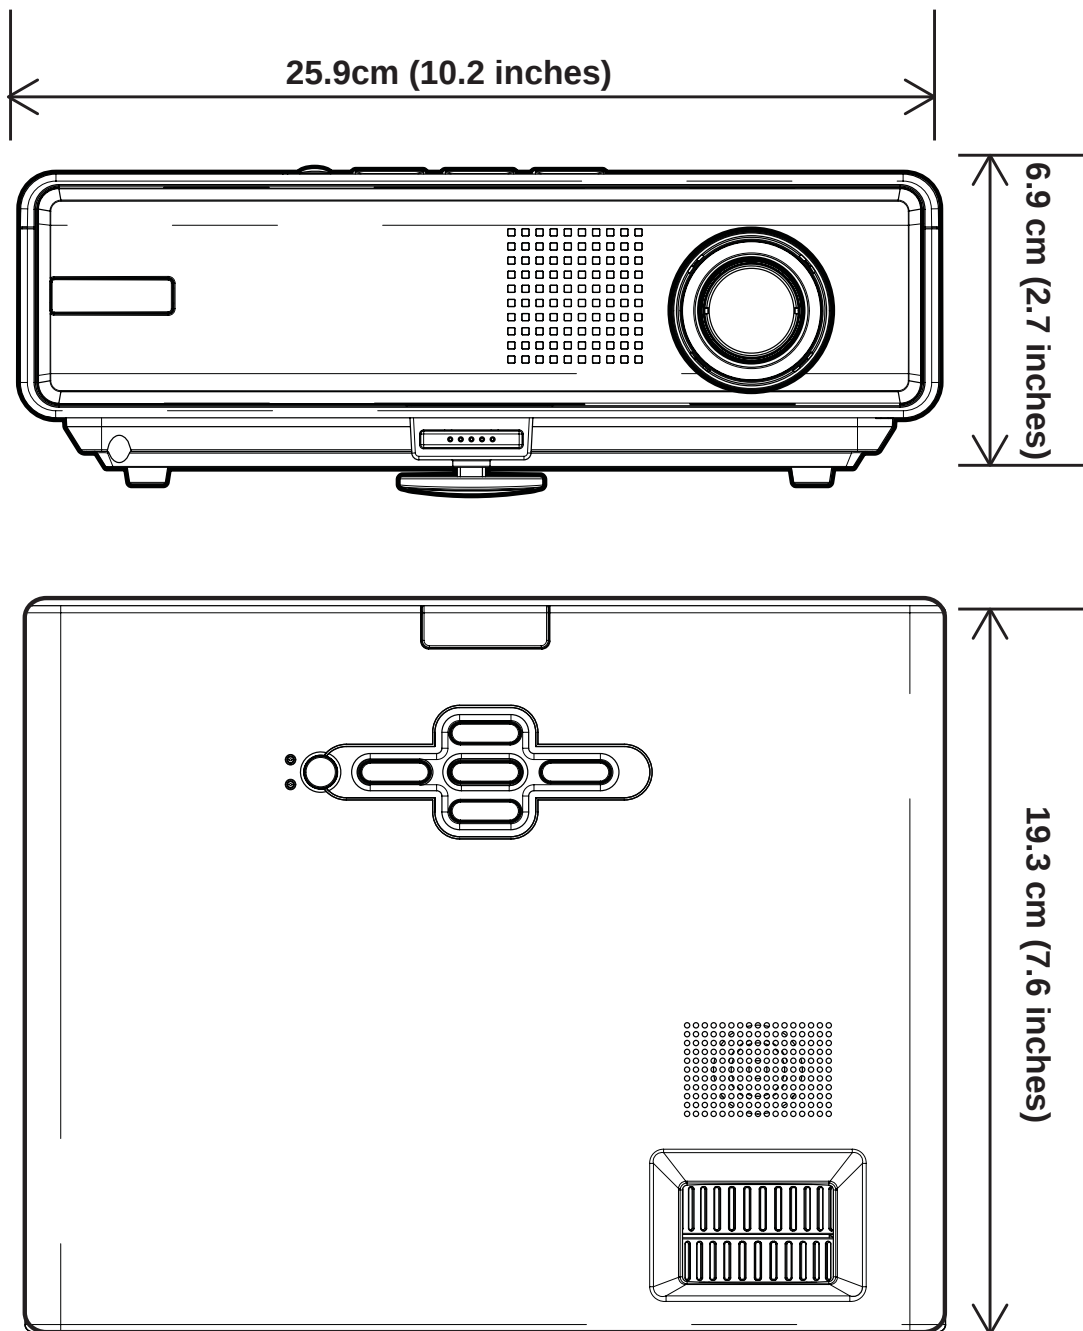

FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Changes or modifications not expressly approved by the parties responsible for compliance could void the user's authority to operate the equipment.

Canada

This class B digital apparatus complies with Canadian ICES-003.

Safety Certifications

UL, CUL, CB, TUV-GS

EN 55022 Warning

This is a Class B product. In a domestic environment, it may cause radio interference, in which case the user may be required to take adequate measures. The typical use is in a conference room, meeting room, or auditorium.