

Users Manual



Model 686 / 686 HT

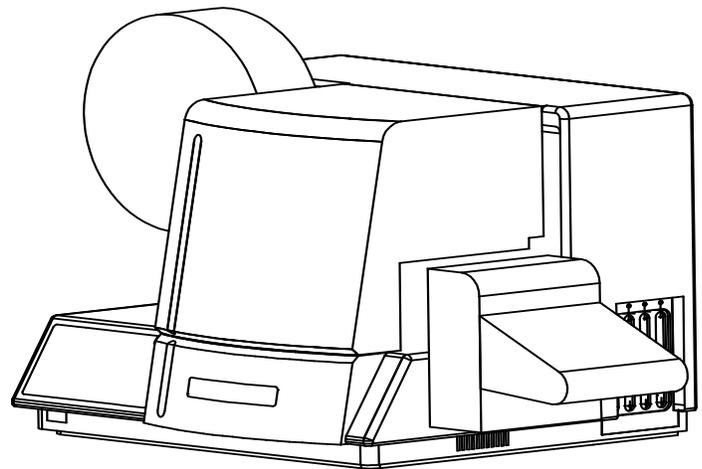

AVERY DENNISON
Manual Edition 7.0

09 June, 2010

Manual Part Number 551398

This page intentionally left blank



Contents

Scope	4
Introduction	4
Safety Issues / Warnings	4
Caution.....	4
Warranty Information	5
Customer Responsibility	7
Location of Printer	7
AC Power Line	8
Unpacking.....	8
Inventory of Components	9
Printer Setup	10
Installing the Stacker (Option).....	10
Fuse Configuration	11
P.C. Board Identification	12
TCB Dip Switch Settings.....	13
Installing the Power Cord	13
Installing the PC Interface Cable	14
Installing the PC Software	14
Product Description	15
Printer Description.....	15
Personal Computer Specifications	16
Printer Specification	17
Printer Operation & Quick Set-Up	19
Loading Ink.....	19
Loading Stock.....	20
Decurler / Turnbar	21
Butt Splicing Stock	22
Web Guide Adjustment	22
Modified Drive Assembly	23
Flash Disk Module.....	23
Sensor Adjustment.....	24
Ink Guide Adjustment.....	25
Print Head Operation	27
Control Panel Operation	28
Control Buttons.....	28
Indicator Lights.....	29
LCD Display.....	30

Front Panel Menu Map	31
Front Panel Power Up / Home Screens	32
Front Panel Mode Descriptions	35
Adjustments / Maintenance	45
Print Head Handling	45
Print Head Cleaning	46
Print Head Replacement	47
Print Head Adjustment	49
Stock Feed Roller Adjustment	49
Knife Square Adjustment	49
Stacker Adjustments	50
Sensor Identification / Adjustment / Calibration	50
Print Registration Sensor	52
Sensor Calibration	53
Lubrication Procedure	54
Printer Set Up Sequence	55
Electrical Trouble Shooting	56
Power Up / Sign On / Communications	56
Stock / Ink Advance	58
Print	59
Cut / Stack	61
Mechanical Trouble Shooting	62
Stock	62
Ink	64
Print	64
Electrical Drawings	65
Printer Wiring	66
Electrical System Schematic	67
Motherboard Power Connectors	68
Appendix A	69
Error Messages	69
Appendix B	70
Software Upgrade Chip Placement Positions	70
Front Panel Diagnostic Descriptions	72
Appendix C	73
Ink and Stock Transfer Types	73
Appendix D	74
Knife MFG Guideline	74
Appendix E	77
Printhead Life Extension	77

Printhead Fail Modes	78
Printhead Cleaning Procedure	79
Printhead Installation and Removal Procedures	80
Static Checks for 686 / 686 HT Printers	81
Print Quality Adjustment	82

Assembly Drawings 83

Unwind Assembly Drawing	84
Unwind Parts List	85
Unwind Turnbar Assembly Drawing	86
Unwind Turnbar Parts List	87
Contrast Sensor Assembly Drawing	88
Contrast Sensor Parts List	89
Web Guide / Sensor Assembly Drawing	90
Web Guide / Sensor Parts List	91
Drive Assembly Drawing	92
Drive Parts List	93
Printhead Assembly Drawing	94
Printhead Parts List	95
Printhead Module Assembly Drawing	96
Printhead Module Parts List	97
Printhead Adjustment Assembly Drawing	98
Printhead Adjustment Parts List	99
Ink Drive 686HT Assembly	100
Ink Drive 686HT Parts List	101
Ink Save Assembly	102
Ink Save Parts List	103
Ink Save PC Board Assembly	104
Ink Save PC Board Parts List	105
Timing Belt Threading Diagram	106
Timing Belt Parts List	107
Timing Belt 686HT Threading Diagram	108
Timing Belt 686HT Parts List	109
Knife Assembly Drawing	110
Knife Parts List	111
Stacker Assembly Drawing (Part 1)	112
Stacker Parts List (Part 1)	113
Stacker Assembly Drawing (Part 2)	114
Stacker Parts List (Part 2)	115
Back Reflective Sensor Option Assembly Drawing	116
Back Reflective Sensor Option Parts List	117
Cover Assembly Drawing	118
Cover Assembly Parts List	119

Scope

Introduction

This user manual was arranged for the person who is going to operate the printer. The information is arranged in the order that is needed to install and then operate the printer. It starts with general information, then to unpacking the carton, setup, installing the ink and stock, printer operation, control panel operation, and finally care and maintenance of the printer.

We at AVERY DENNISON hope that you will come to appreciate the efforts and quality that have gone into producing your AVERY DENNISON 686 / 686 HT Printer and wish to remind you that you are our number one priority. We welcome any constructive comments or criticisms so that we may continue to offer you the best printer in the industry for years to come.

Safety Issues / Warnings

Caution

This printer has some pinch points. All of these areas have been well guarded and it is recommended that the safety features of this printer are never altered or defeated.

Warranty Information

Warranty Policy

Avery Dennison Retail Information Systems, In-Plant Printing Solutions provides the following warranty policy.

Scope

Warranties against defects from workmanship for equipment and parts manufactured and sold from Sayre, PA. Includes time and material except as otherwise noted below.

Time

- New equipment and parts: 6 months
- Refurbished equipment and parts: 90 days
- Warranty period starts when equipment ships from selling location.

General Conditions

Avery Dennison extends warranty coverage under the following conditions.

- Equipment and parts will perform within published specifications. Promised or implied statements by any Avery Dennison employee or representative will not be deemed to vary the terms of the warranty.
- Equipment and parts must be installed and operated according to recommended procedures and operating conditions.
- Consumable elements are not covered. Consumable elements are those that show normal wear from typical equipment usage including, without limitation, printheads, knives, rollers in contact with the web, and sonic units. Avery Dennison reserves the right to determine which elements are defined as “consumable.”
- No customer maintenance may be performed except as directed by qualified Avery Dennison personnel.
- Equipment and parts damaged by negligence or abuse are not covered.
- Avery Dennison US reserves the right in its sole discretion to incorporate any modifications or improvements in the machine system and machine specifications which it considers necessary but does not assume any obligation to make said changes in equipment previously sold.

Equipment Purchased In US and Shipped In US

- Avery Dennison US covers warranty for equipment and parts installed and operated in the Americas (United States, Canada, Mexico, Central America, Caribbean Region, and South America excluding Brazil).
- Outside the US, the local Avery Dennison office is responsible for equipment and parts warranty. Customers must ensure coverage during machine purchase.
- Equipment purchased and exported to regions outside local Avery Dennison office coverage are not covered by warranty. The purchasing agent must acquire a service contract from the Avery Dennison

office where the equipment or parts are operated to ensure machine coverage. For example, if an agent purchases a printer in the US, exports to Brazil, and then needs warranty coverage, Avery Dennison Brazil has no obligation to provide warranty coverage. The agent must purchase services from Avery Dennison Brazil.

THE WARRANTIES PROVIDED HEREIN ARE EXCLUSIVE AND ARE IN LIEU OF ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR OTHER WARRANTY OF QUALITY OR PERFORMANCE, WHETHER EXPRESS OR IMPLIED. EXCEPT THE WARRANTY OF TITLE, IN NO EVENT SHALL AVERY DENNISON BE LIABLE FOR ANY INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, EVEN IF AVERY DENNISON HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Service

When ordering machines and supplies in the U.S.A., reference all correspondence to the address below.

AVERY DENNISON Corporation
One Wilcox Street
Sayre, PA 18840
Call: 1-800-967-2927 or (570) 888-6641
Fax: (570) 888-5230

For spare parts, requests for service or technical support, contact

AVERY DENNISON Corporation
One Wilcox Street
Sayre, PA 18840
Call: 1-800-967-2927 or (570) 888-6641
Fax: (570) 888-5230

For parts and service in other countries, please contact your local AVERY DENNISON supplier

Customer Responsibility

Location of Printer

The printer weighs approximately 57 Lbs (~26Kg) and requires a table of sufficient quality and strength to handle this load while the printer is operating. AVERY DENNISON recommends an industrial type worktable having the approximate dimensions of 96" wide to 30" deep to 32" high. (See *Figure 1*).

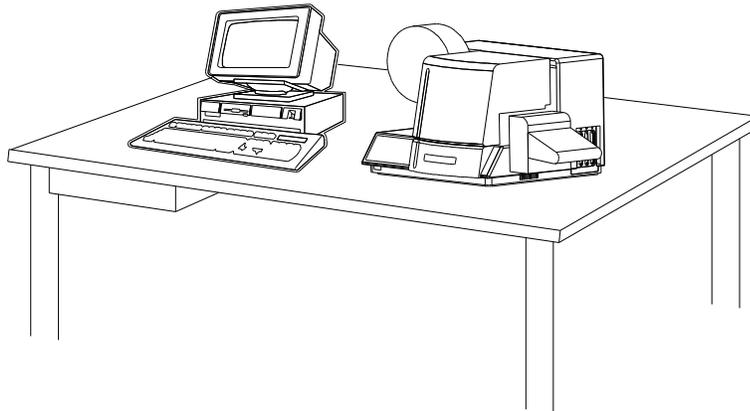


Figure 1 - Recommended Workstation Layout.

The location of the AVERY DENNISON 686 / 686 HT printer should be based on human factors. The printer should be located in an area that maintains optimum flow of your product while providing for the operator's comfort. AVERY DENNISON has taken significant steps to ensure that the operator controls and operations are easily accessible. This goal can only be met, however, if the printer is also located with human factors in mind. These include the height of the printer, the space around the printer, and the accessibility to the printer.

The AVERY DENNISON 686 / 686 HT printer is a high-resolution thermal printer. While AVERY DENNISON has designed the printer to be reasonably quiet, it is recommended to locate the printer in an area where printing and cutting repetitious noise is acceptable.

The unit should always be operated with the cover closed to minimize the amount of dust and dirt in the printer.

AC Power Line

AVERY DENNISON requires that the electrical service be 10 Amps @ 115VAC or 10 Amps @ 230VAC. This will allow the computer and any additional support or service equipment to be plugged into the same service.

Any electrical service that is supplying a AVERY DENNISON printer or peripheral equipment connected to a AVERY DENNISON printer should follow standard electrical code practices including proper grounding and neutral requirements.

The AVERY DENNISON printer was designed to operate in an industrial setting for extended periods of time; however, the printer is controlled by a microprocessor that is very sensitive to brownouts or power spikes. For this reason as well as the minimum recommended current supply, AVERY DENNISON recommends that a separate “clean” service be installed or reserved for the exclusive use of the AVERY DENNISON printer and it’s peripherals.

Unpacking

The AVERY DENNISON printer is shipped in a large cardboard box that may be difficult to move by hand.

DO NOT REMOVE THE PRINTER FROM THE BOX OR UNPACK IN THE SHIPPING / RECEIVING DEPARTMENT.

NOTE: Unpacking in the shipping / receiving department is not recommended for the following reasons.

First: The cardboard carton in which your AVERY DENNISON printer was shipped allows the printer to be moved with a forklift, fork cart or hand cart. Because of the weight of the printer, it is easier and safer to use one of these devices to move the printer to its intended installation location.

Second: Leaving the printer in the carton while it is being moved within your facility will help to protect the printer during any movements to this location. Once the printer has reached its intended location you should begin the unpacking process.

Open the printer from the top of the box (See *Figure 2*). Do not cut deep into the carton, as there are items located just under the top. Remove the items located on the top insert. Remove the top insert. Lift the printer onto the table with the two banding straps. Remove the two straps and the plastic from the printer. Inspect the printer for shipping damage. If damage is discovered, contact AVERY DENNISON for further instructions - in the U.S.A. at (570) 888-6641. In other countries please contact your local AVERY DENNISON supplier. Once you are satisfied that there was no obvious shipping damage to the printer, the printer can now be lifted to its intended location.

In some cases, a double box has been used to ship your printer.

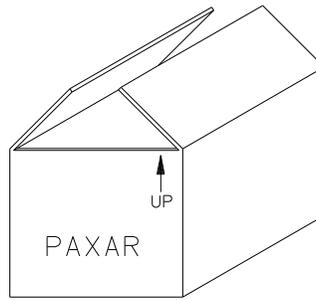


Figure 2 - Shipping Carton.

Save the shipping materials to relocate the printer or return to factory for service.

Inventory of Components

The following list shows the additional parts (pieces) that should be included in your AVERY DENNISON 686 / 686 HT shipping container. If anything is missing, notify AVERY DENNISON immediately - in the U.S.A. at (570) 888-6641. In other countries please contact your local AVERY DENNISON supplier.

- AVERY DENNISON 686 / 686 HT "User's Manual" - 551398
- Tool kit – Option
- A quick-disconnect power cord
- Stacker assembly – Option
- Optional software ordered to drive the printer.
- A serial communications cable / converter.

AVERY DENNISON 686 / 686 HT TOOL KIT (#551390 - Option)

241149	Anti-Static Gloves (2)
921309	Hex Key Set
921364	3/16" Ball Driver, Long
181301	2.5mm Ball Driver
351156	Chip Removal Tool
241132	Anti Static Wrist Strap
921341	T-T Printer Cleaning Kit

Printer Setup

Installing the Stacker (Option)

Remove the stacker from the separate packaging. Remove the packaging from around the stacker and save with the rest of the printer packing supplies.

Swing open the top cover to the printer. Locate the large knob and two round pins on the right hand side of the printer. Loosen the knob enough to allow the stacker to slide between the printer housing and the knob. The stacker will rest on the two pins. Slide the stacker to the back until it contacts the up-right frame. Tighten the knob. Adjusting the stacker is covered later.


Install the stacker up-right rails. Remove one of the thumbscrews. Insert the thumbscrew through the mating hole in the up-right rail assembly. Thread the thumbscrew into the mounting block. Repeat the above procedure for the other thumbscrew.

There is a cable with a connector leading from the back of the stacker that plugs into a socket on the TCB (refer to the P.C. Board Identification section in this manual). The socket and plug are polarized. Rotate the plug until the polarized keyway and socket align and push the stacker connector into the socket.

Fuse Configuration


The main fuse(s) on the AVERY DENNISON 686 / 686 HT are located inside the AC entry. The entry has a fuse drawer that holds the fuse(s) and selects the appropriate line voltage. If the voltage in the window **DOES NOT** match the AC line amplitude intended to be supplied to the printer, **DO NOT** plug the power cord in. Reconfigure as follows:

- 1) Using a flat blade screwdriver, open the AC entry by lifting the tab just above the voltage indicator window.

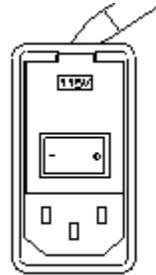

AC Entry

- 2) Remove the red fuse drawer.

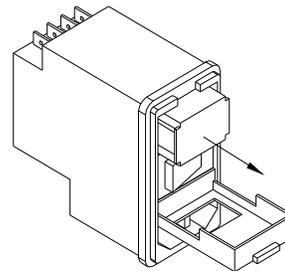

- 3) Remove all fuses and the fuse jumper if it is present.
- 4) Insert into the fuse drawer the correct number and style of fuse(s) and fuse jumper for your application.

Configuration Number One: Line voltage within the range of
(See 115VAC Fuse Placement) 90 - 132VAC @ 50 - 60Hz


- 1) Install one 990689 – 6.25A 250V Fast Acting 1/4 x 1 1/4"
- 2) Install one Fuse Jumper

Configuration Number Two: Line voltage within the range of
 (See 230VAC Fuse Placement) 180 - 265VAC @ 50 - 60Hz



1) Install two 990757 6.0A 250V Fast Acting 5 x 20MM

NOTE: The fuse jumper must be removed to install both 5 x 20mm fuses.

115VAC Fuse Placement

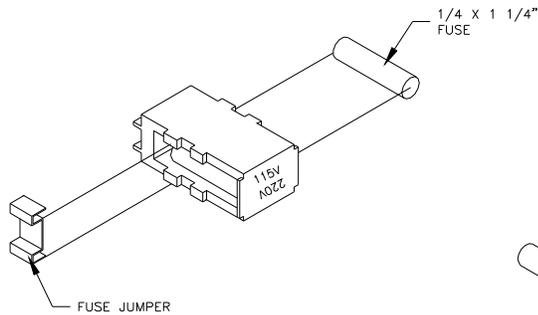

230VAC Fuse Placement

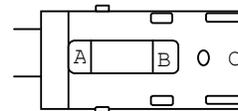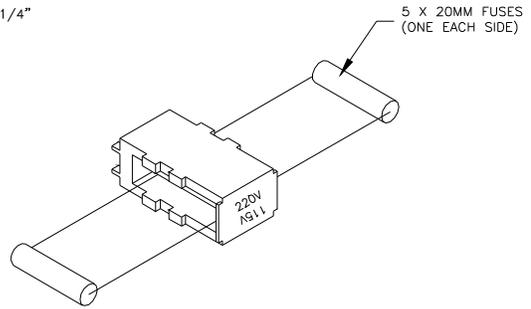

The fuses must be between points A and B as shown not B and C.

5 X 20MM Fuse Placement

- 5) Reinsert the fuse drawer into the AC entry with the desired voltage up.
- 6) Close the AC entry and verify the correct voltage is now visible.

P.C. Board Identification

Mother Bd. (371170)	- Horizontal on bottom of printer
Front Panel Bd. (511108)	- User interface system
686 Thermal Control Bd. (371105NE)	- AT Slot 2
686 HT Thermal Control Bd. (371105HT)	- AT Slot 2
Head Driver Bd. (341106NE)	- AT Slot 1
686 Ink Drive Bd. (551105)	- Back of upright frame
686 HT Ink Drive Bd. (551105HT)	- Back of upright frame

TCB Dip Switch Settings

DIP SWITCH #	DEFINITION	686 / 686 HT
8	DOWNSTACKER/ LOKPRINT	DOWNSTACKER ON LOKPRINT® OFF
7	UNUSED	OFF
6	UNUSED	OFF
5	STACKER JAM	ENABLE ON DISABLE OFF
4	MACHINE TYPE	ON
3	MACHINE TYPE	ON
2	UNUSED	ON
1	PRINTHEAD DPI	ON – 300 DPI N/A OFF

Installing the Power Cord

A power cord is shipped with each printer. The cord for 115-volt printers will use the standard three-prong plug used in the U.S.A. All other power configurations are the customer's responsibility to have the plug and alteration work done by a certified electrician. AVERY DENNISON supplies printers to many countries with many variations. Therefore we leave this to the customer to make the proper selection for their country.

Installing the PC Interface Cable

The 686 / 686 HT requires a 9-pin RS232 cable. This cable is provided with the printer. If the cable was not found, it can be ordered from AVERY DENNISON (Part number 351124).

The male end of the cable should be connected to the 9-pin D-shell female connector that is located on the right side of the printer at the TCB (refer to the P.C. Board Identification section in this manual). The female end of the cable is made to fit a 9-pin male RS232 connector on the back of a PC. In case a 9 pin serial port is not available - a 9 to 25-pin converter is also shipped with all printers.

Installing the PC Software

The software to drive the AVERY DENNISON family of printers is covered in separate documentation. The "PcMate Platinum" software to create formats on site for the AVERY DENNISON 686 / 686 HT printer is a Windows application. The original "Selfform" will not create formats for the 686 / 686 HT. The new "PcMate Platinum" package is capable of creating formats for all AVERY DENNISON control printers.

PcMate Plus version 3.22 or above must be used to drive the 686 / 686 HT.

The printer is also capable of operating directly from a mainframe when using the RS232 interface and AVERY DENNISON's PCL command language. (See AVERY DENNISON PCL Command Language Manual)

Product Description

Printer Description

The AVERY DENNISON model 686 / 686 HT thermal printer (*See Figure 4*) is an electronic printer that can print on Card Stock, Size Stickers, and Pressure Sensitive rolled stocks. The printer interfaces to a computer or a mainframe system thus allowing electronic data input or even custom design of labels with AVERY DENNISON'S "PcMate Platinum" program. This printer can generate a complete tag printed on one side.

- Design your own labels on a PC
- Computer interface = IBM Compatible
- Mainframe direct interface
- RS232 9 Pin D shell female Serial interface connector

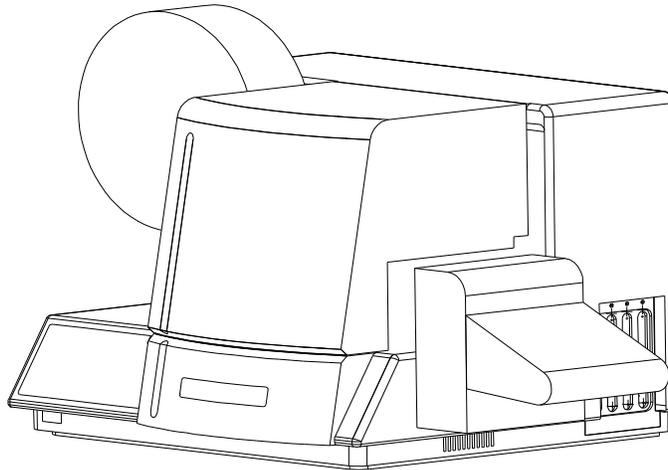


Figure 4 - AVERY DENNISON Model 686 / 686 HT Label Printer

Personal Computer Specifications

This specification describes the hardware and application software requirements for the Personal Computer that is used to download to the AVERY DENNISON 686 / 686 HT Printer.

The AVERY DENNISON 686 / 686 HT Printer uses a Windows version of "PcMate Platinum". This application will create the tag or label formats (layouts) then fill and transfer data to the printer through the serial port of the computer.

When using PCMate™ Platinum 5.0, the following minimum system requirements is highly recommended:

- IBM® PC or Compatible
- Microsoft Windows® 2000, XP or later
- 256 Megabytes of RAM
- At least 4 Gigabyte of available disk space
- Pentium III or later processor, 800Mhz minimum
- CD ROM drive

DISK DRIVES: You will need a hard disk with at least 4 Gigabytes of free disk space to store the PCMate™ Platinum program. Additional space will be required to store designs, print files, etc.

COMPATIBILITY: This application supports the conversion and use of basic tag and label layouts and print files created with PCMate™ for DOS, and earlier versions of PCMate™ for Windows. When importing tag and label layouts (designs) from older versions of PCMate™ caution should be taken due to a chance that feature changes and enhancements in your current version of PCMate™ Platinum may require field modifications within the imported design

Refer to your specific software package for proper installation procedures.

Printer Specification

Print method:	Thermal transfer, one sided, near edge printhead printer for tags and pressure sensitive labels. Speed - up to 12 IPS (305mm/second) - 7"(178mm), 10"(254mm), & 12"(305mm)
Label Size	Max: 686 - Up to 5.125" (130.2mm) web x up to 7" (177.8 mm) feed - cut and stacked 686HT - Up to 3.00" (76.2mm) web x up to 7" (177.8 mm) feed - cut and stacked Transfers tested as of June 9, 2006 - Up to 14.0" (355.6mm) feed w/ Rewind Min: 1" (25.4mm) web x 1" (25.4mm) feed at speeds of 7"(178mm) or 10"(254mm) – using the standard 558091 Stacker. Min: 1" (25.4mm) web x 1.250" (31.75mm) feed at speeds of 12"(305mm) or when using the High Volume Stacker at any speed.
Print Area	Max: up to 5" (127mm) web x up to 13.875" (352.4 mm) feed Min: None
Resolution	300 DPI x 300 DPI
Fonts	- Six scalable fonts resident: condensed, standard, and bold typefaces, upper and lower case - 4pt up to 96pt (300 DPI) - All rotations 0°, 90°, 180°, 270°
Logos	- No restriction on number or size per tag (up to maximum image area) - All rotations 0°, 90°, 180°, 270°
Care Symbols	- Full Ginetex Care Symbol set and full NAFTA / ASTM Care Symbol Set - Fully Scaleable - All rotations 0°, 90°, 180°, 270°
Justification	Left, Right, and Center - field selectable
Stock	Support for blank or pre-printed card stock and blank or pre-printed pressure sensitive
Interface	AVERY DENNISON PCL via RS232 serial port - 9 pin D-shell
Control Panel	Push-button printer function with 2 Line x 24 Character International LCD Backlit Display
Dimensions	16.0" (406.4 mm) high x 27" (685.8 mm) wide Including stacker x 18.5" (469.9mm) deep
Weight	57 Lbs. (26Kg.)
Electrical	90-132 / 180-265 VAC 50-60Hz 10Amp - Switch selectable
Temperature	41°F (5°C) to 104°F (40°C)
Humidity	5% to 90% non-condensing

Other Features	<ul style="list-style-type: none"> - Downloading of information while printer is operating - Sequenced Fields - Time / Date Stamping - Life Counts - Operator adjustable: strobe, cut position, print position, baud rate, and buffer size - Error Detection of: stock out, ink out, print head open, full stacker, stacker jam, and print head over-temperature - Display: labels left to print in a batch, batch ID, total life inches, total life cuts - Self Diagnostics - Missed sense mark detection and correction - Slot, Notches, Hole or Reflective registration detection
Ink Ribbon	AVERY DENNISON standard thermal colors and widths
Options	<ul style="list-style-type: none"> - SV-100 Barcode Verifier System - Rewind Unit - Reflective Sensor (Back of web) - PcMate Platinum - Spare Parts Kit - International Hardware Kit

Printer Operation & Quick Set-Up

Loading Ink

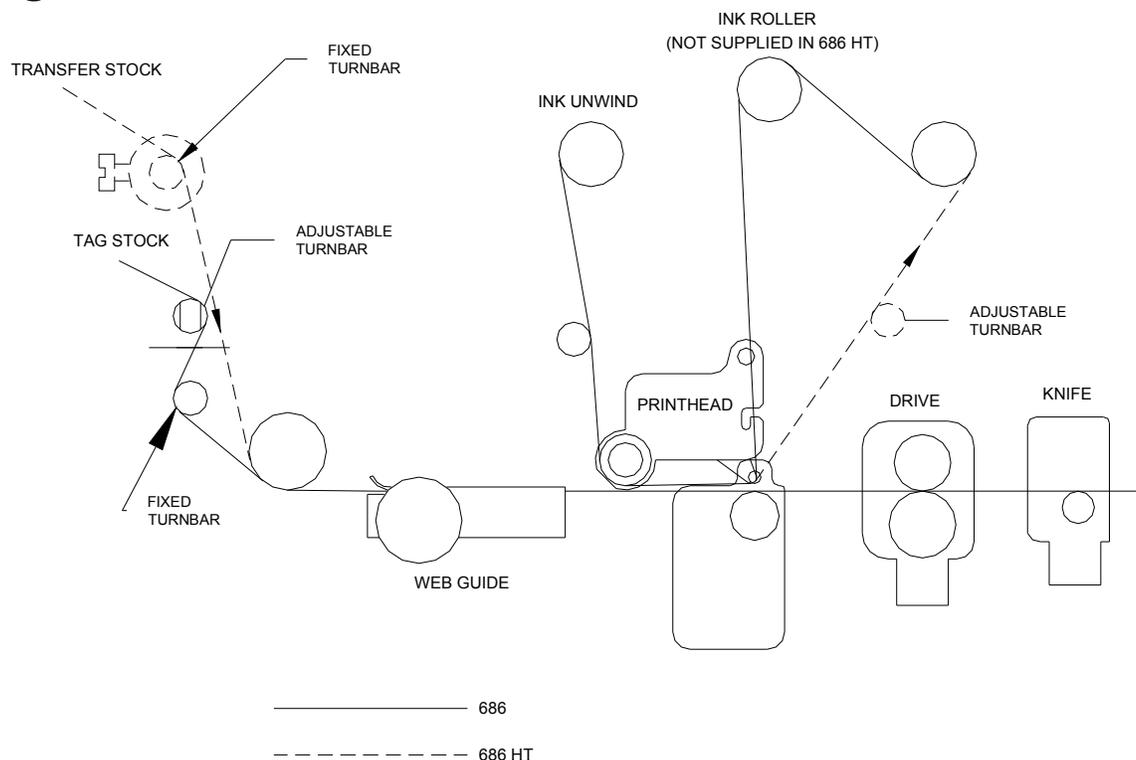


Figure 5 - Ink Threading Path

The ink ribbon comes packaged in a plastic bag. For best results, leave the ink ribbon wrapped in this bag until you are ready to use it in the printer. Use the procedure and diagram above for loading the ink.

- 1) Unwrap the ink ribbon and put it on the ink-ribbon unwind arbor (*See Figure 5*) by pressing it on to the arbor when the three slots are lined up.
- 2) Make sure the ink ribbon comes off the roll in the direction shown above and is threaded as illustrated.

NOTE: A new ink ribbon has a leader that makes it easier to use when threading the ribbon through the print area.

- 3) Put an empty ink-ribbon take-up core on the ink rewind arbor. The ink take-up core must be at least as wide as the ink supply. The adhesive on the supply roll of ink can be used to fasten the leader to the rewind core.
- 4) Advance the ink until ink starts to wrap around the take-up core.
- 5) You should rotate the ink arbors to keep excess slack ink from between the print head and the ink cores.

NOTE: Make sure that the ink-ribbon take-up core and the ink-ribbon supply roll are against the ink backer plate so that the ink ribbon tracks straight through the print station.

Loading Stock

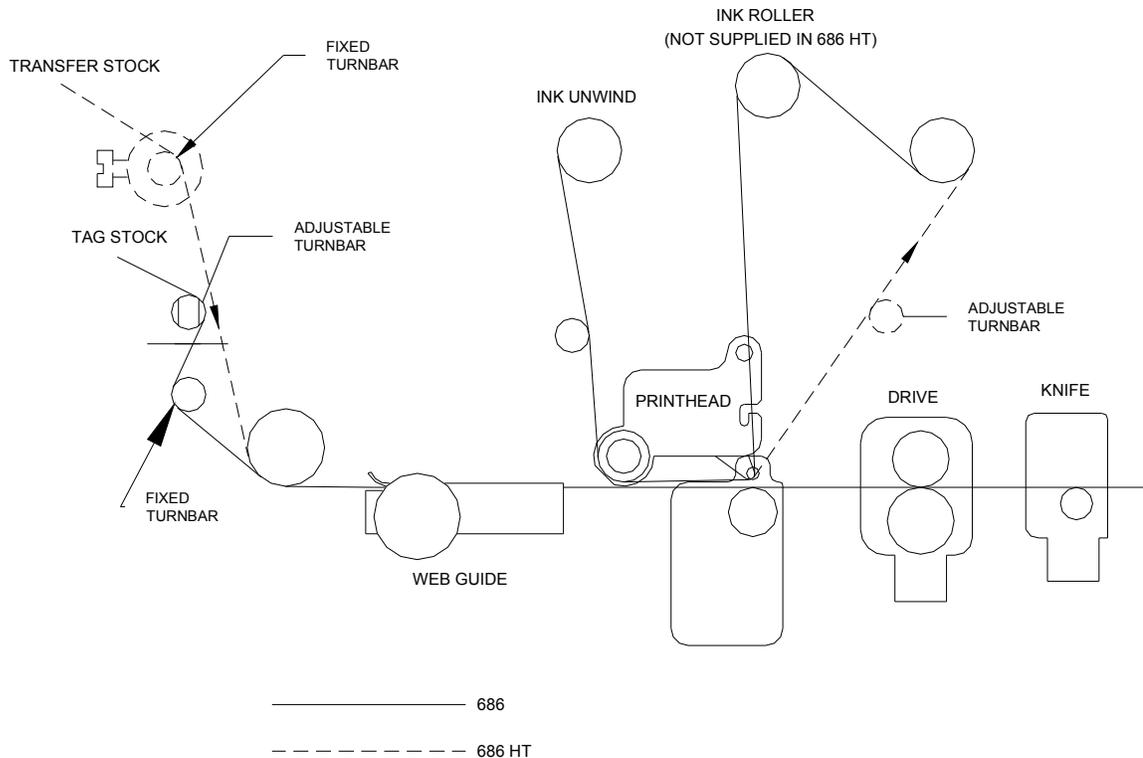


FIGURE 6 – Tag Stock / Transfer Threading

Loading Stock for the First Time

- 1) Adjust the unwind width wider than the roll of stock to be loaded. Set the stock roll on the unwind - between the guides with the stock unwinding from the top clockwise. Adjust the unwind width down to the stock size without clamping the core.
- 2) Adjust the web guides to a width wider than the stock.
- 3) Remove the tape or pull the glued end of the stock loose from the supply roll of stock. Pull off about 2 feet (.5 m) of stock to thread it through the printer.


NOTE: If the end of the material was glued down, cut off all material that has glue on any surface. Do not feed sticky adhesive or rough surfaces through the printer because they can damage the print head.

- 4) Open the hinged cover to the printer.
- 5) When the printer stops, the platen roller under the print head will rotate open enough to slide the stock through without opening the head assembly. This has been designed for quick & easy loading without splicing on new rolls. If for some reason the roller doesn't provide easy passage, open the print head upper assembly by rotating the knob.

NOTE: Platen roll in 686HT will not rotate open

- 6) Open the print head by turning the knob.
- 7) After looping the leading edge of the stock over the two-decurler bars, slide it through the web guides.
- 8) As the stock exits the web guide, continue to slide the stock through the print station.
- 9) Push the stock until it touches the blue roller.
- 10) Clear all errors on the front panel. Push and hold the upper feed button to move the stock through the drive, knife, and into the stacker. The bottom feed button can be used to reverse the stock if necessary.
 - 686-HT you must open the feed and push the material through – there is no feed button
- 11) Check that the stock is center and tracking straight through the printer. Adjust as needed.
- 12) Adjust the web guides on the decurler and web guides down to the edges of the stock without deforming the stock.

Decurler / Turnbar

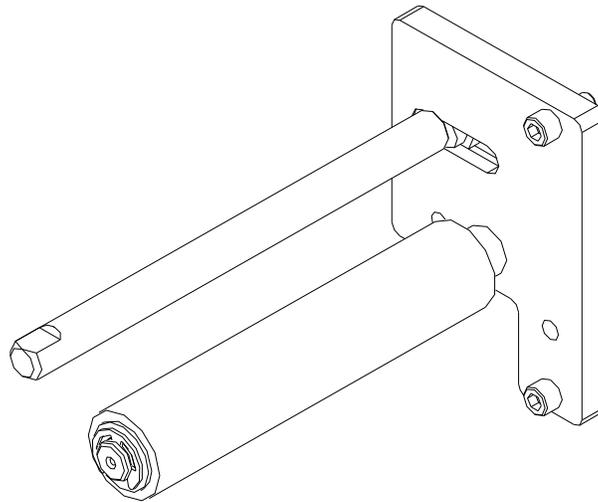

The 686 / 686 HT printer is equipped with an adjustable turn bar system to allow optimum adjustment of multiple supplies in an effort to control flatness through the printer.

The system consists of one large diameter (1.125 Dia.) fixed position roller and two smaller (.500 Dia.) turnbars. One turnbar is fixed; the other is horizontally adjustable. Web guide supplies at the start of the roll require less de-curl than narrow web or end-of-roll supplies. The adjustable roll is equipped with wrench flats to allow loosening so it can be moved in its mount key slot.

- Web tension is not required on the 686-HT
- By-pass the turnbar shafts to avoid damage to the transfers

Butt Splicing Stock

NOTE: DO NOT RUN BUTT SPLICES THROUGH THE PRINT STATION.

The AVERY DENNISON 686 / 686 HT has been designed so that supplies can be changed / replenished quickly. Removing the stock trailer remaining in the printer and re-threading the stock altogether is quicker than butt splicing.

Web Guide Adjustment


The AVERY DENNISON 686 / 686 HT printer has been designed with only three web guides in the printer that need to be changed as the width of the rolls change from format to format. None of these adjustments requires any tools.

The first guide is on the unwind itself. A knob located on the front of the unwind adjusts the width of the guides on the unwind while maintaining center justification. To increase the width - turn the knob counter clockwise - to decrease the width, turn the knob clockwise. Adjust the unwind width wider than the roll of stock to be loaded. Set the stock roll on the unwind between the guides with the stock unwinding from the top clockwise. Adjust the unwind width down to the stock size without clamping the core. It is important not to pinch the supply roll: **This is a guide only - not a brake.**

The second set of guides is center justified to the left of the print station. Close the guides to the width of the stock using the adjustment knob. Do not pinch the stock as it will deform the edges of the tags and can affect print registration.

The only other web guide adjustment is the stacker up-right rails (refer to the Stacker Adjustments section in this manual). To fine-tune the location of the up-rights, loosen the knob behind each upright rail and slide the rail in or out as needed. The up-right rails should be located approximately 1/16" (1.5mm) to the back or front of the label or tag as it enters the stacker.

Modified Drive Assembly

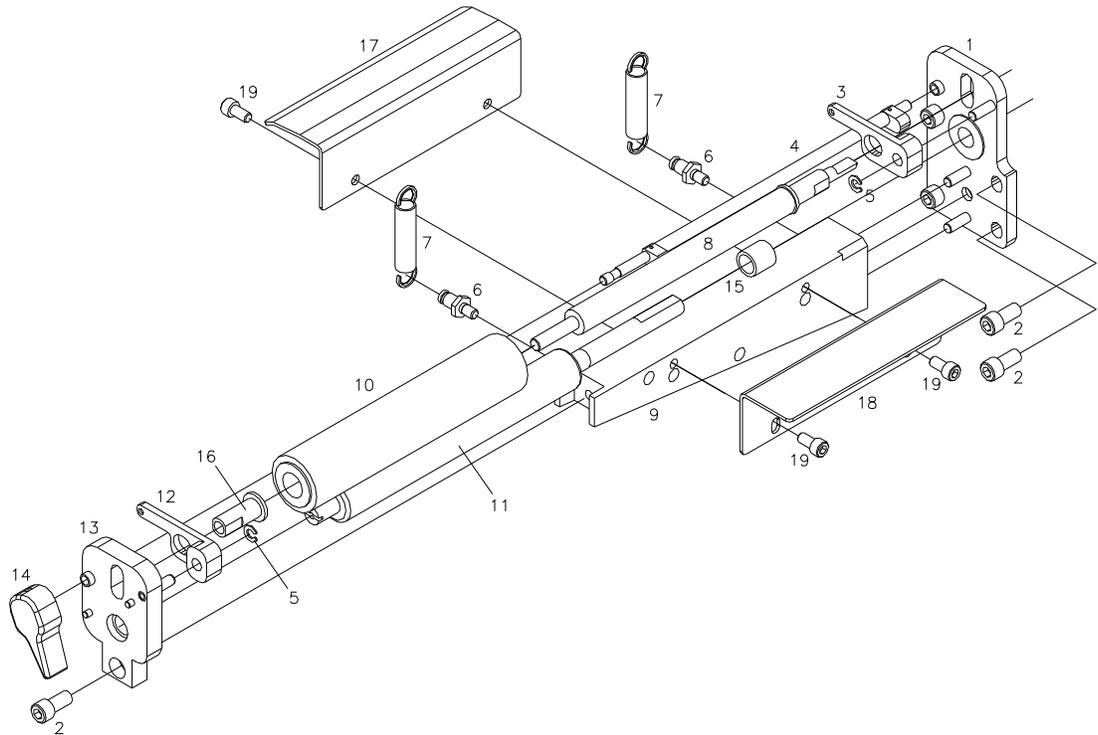

The spring loaded drive assembly mounted in the 686 / 686 HT printer has been modified to prevent it from being left in the “Drive Open” position. In addition the drive open sensor has been eliminated. The drive can be opened, if necessary, to clear a jam or remedy other problems, but must be held in the open position.

To aid in threading, the printer is equipped with a button controlled drive system. The buttons are on the lower right side of the front housing.

To thread the printer, the stock should be pushed through the web guide and printhead up to and touching the bottom of the blue roller.


Clear all errors on the front panel. Push and hold the upper button to move the stock through the drive, knife, and into the stacker. The lower button will reverse the stock if necessary.

Flash Disk Module

The Flash Disk Module contains information that is loaded during power up only.

The Flash Disk Module may also contain logos, fonts, formats, and may even in the future contain some operating system updates. Logos fonts and formats can be copied to the Flash Disk Module using PCMCIA manager that is provided with PcMate Platinum.

Sensor Adjustment

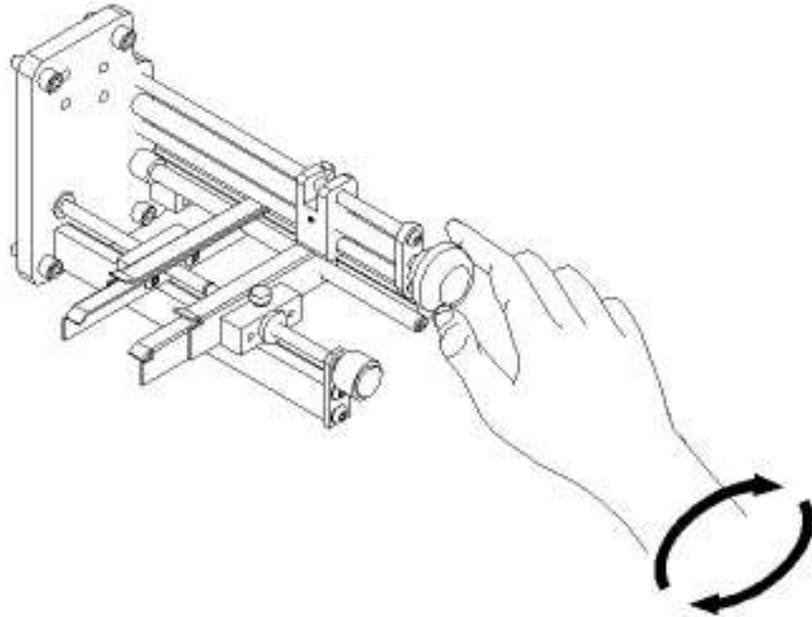


The hole and top reflective registration sensor can be adjusted by turning the knob as shown above. Move the sensor over the desired registration mark. To ensure the sensor is in the right location - hold the feed lever open and move the stock back and forth. If the sensor LED in the front panel flashes as the hole passes through the sensor - it is in the correct location. If the sensor LED does not flash, readjust the sensor.

NOTE: The hole and top reflective sensor registration is selected from PC Mate Platinum in the Design Layout Information.

See "Print Registration Sensor" for more detail.


- The 686-HT uses a top reflective setting in PcMate. The bottom part of the sensor assembly is blocked with a metal plate for better reflection.

Ink Guide Adjustment

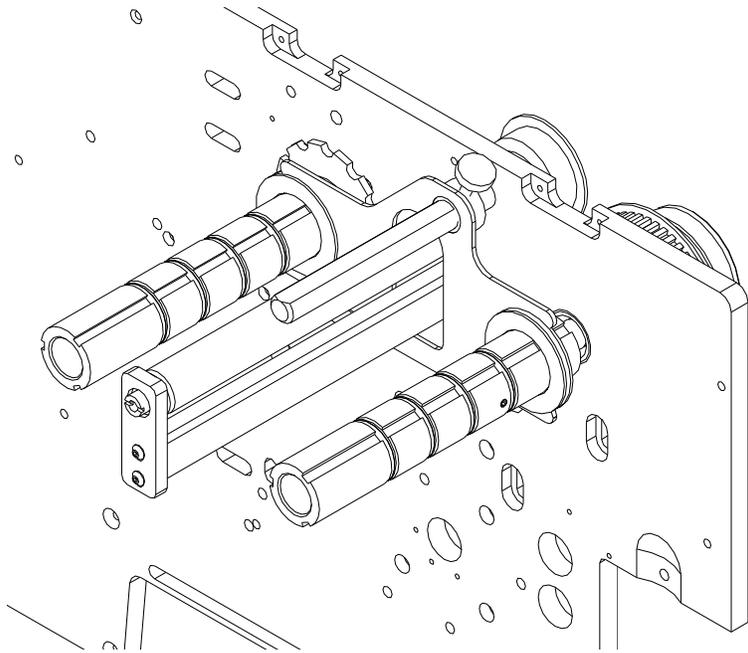


686

The ink guides on the 686 / 686 HT will move together as shown above and below. To adjust the guides - loosen the thumbscrew and slide the ink guide into position, then retighten the thumbscrew.

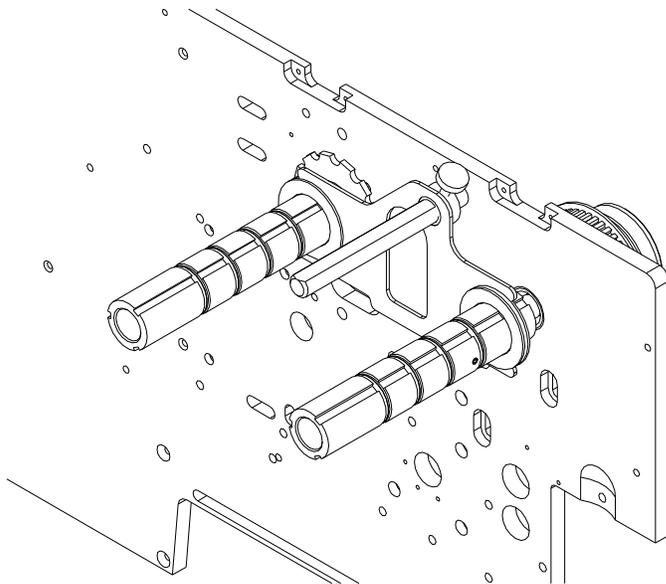


686 HT

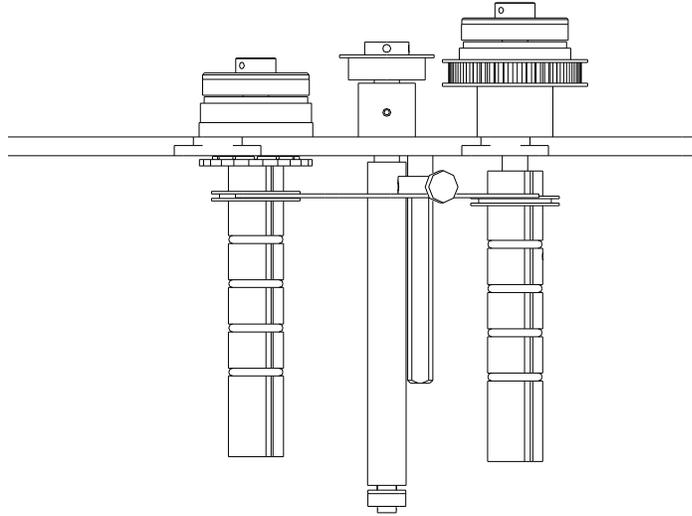

686

The ink guides must be even with each other in order for the system to work correctly.

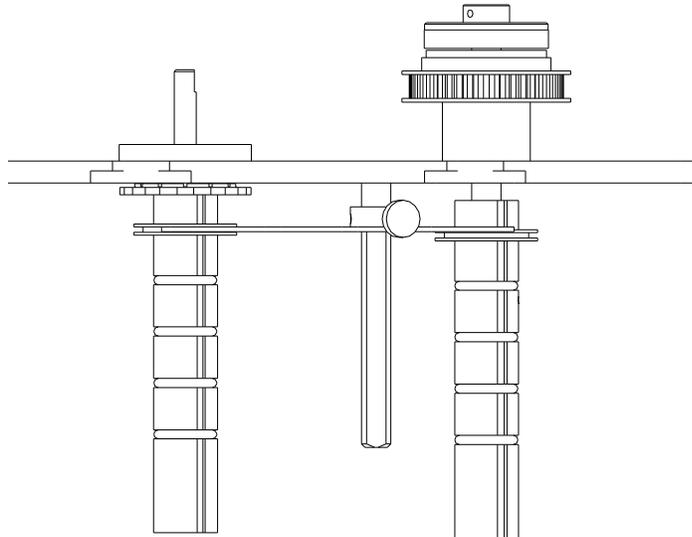

686 HT

Print Head Operation

The print head module is to be opened and closed for threading the stock and ink. The head must also be opened to clean the head and for print head replacement. Later in the manual, under Print Head Cleaning, and Print Head Replacement, cleaning and replacement will be covered.

The print head has an interlock switch that prevents the printer from running with the head in the open position. If the head is open the display will read - HEAD OPEN.

WARNING: DO NOT TOUCH THE PRINT HEAD WITHOUT WEARING THE ANTI-STATIC GLOVES AND THE STATIC WRIST STRAP.

To open the print head for threading supplies, turn knob "A" clockwise and pull out. (See figure 7).


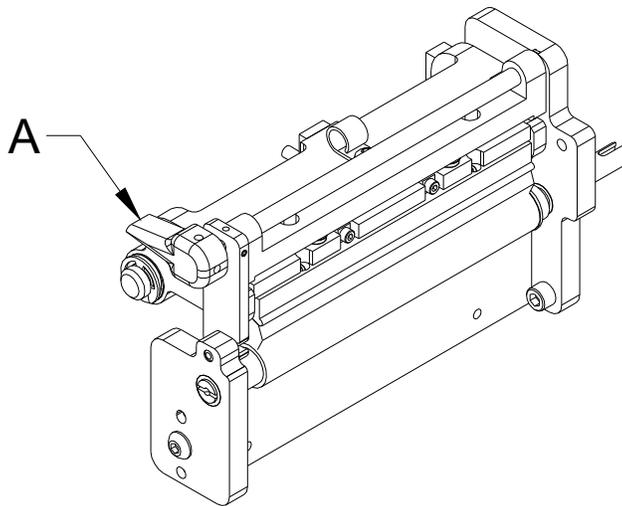



Figure 7 - Print Head Operation

To close the head mount plate, pull the knob out and lower the head assembly. Turn knob "A" counterclockwise to its original position as shown above.

Control Panel Operation

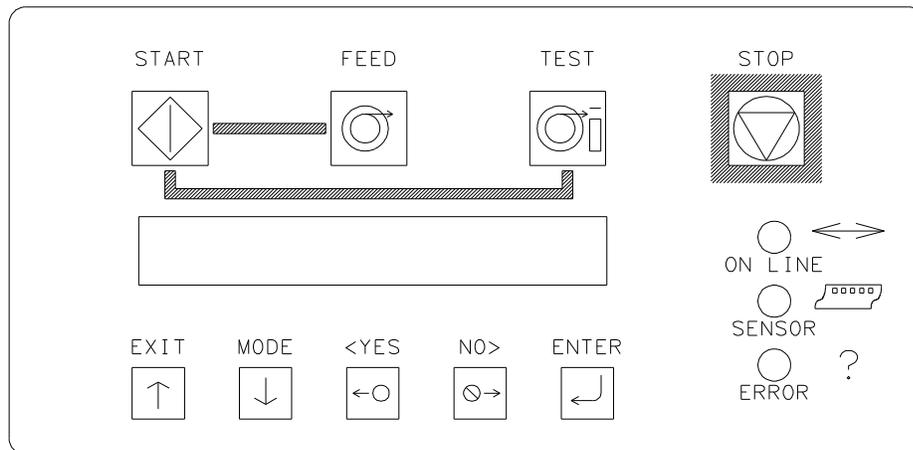

Control Buttons

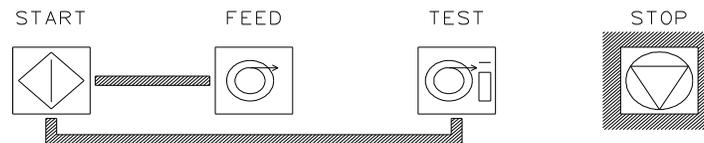

Start

- Starts the printer.
- ON LINE light must be GREEN.
(Batches downloaded to be printed)

Feed

- FEED and START must both be used.
- Feed will stop when the buttons are released.
- Labels between the head and knife will be cut and stacked as finished labels.
- Stock moves through in one continuous strip.
- Stock moves through without printing.
- Ink will not advance; ink save on the 686 / 686 HT will automatically be activated.
- The print head must be closed.

Test


- TEST and START must both be used.
- Test will stop when the buttons are released.
- Labels between the head and knife will be cut and stacked as finished labels.
- Stock moves through in one continuous strip.
- Stock moves through with test pattern printing.
- The ink will advance with the stock.
- The print head must be closed.

Stop

- The stop button will stop the printer at the end of the current label being printed.

Indicator Lights

The AVERY DENNISON 686 / 686 HT has three Indicator lights. These lights are used along with the LCD display to tell the operator the current status of the printer.

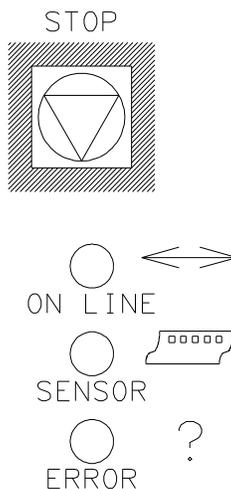

On Line

OFF

- Has not been powered on.
- Is in its power - up sequence.
- Failed the system test.

After Power Up Sequence:

- Printer is running.

ORANGE

- System is operational.
- Ready for batches to be downloaded.

GREEN

- Batches to print, ready to start.

Sensor

GREEN = "C" SENSOR

- Printer is stopped, - light is on, - sensor is setting over a stock sensor mark hole.
- Flashing light while the printer is running, - the sensor is in-line with the registration HOLES.

ORANGE = REFLECTIVE SENSOR

- Flashing light while the printer is running, - the sensor is in-line with the registration PRINTED MARKS.


Error

ORANGE


- System inter-lock triggered, see display for error.

LCD Display

The LCD display is a 2 line, 24 character, with back lighting feature for easy readability. The first line of the display in most cases will be a prompt or question. The second line is the response.

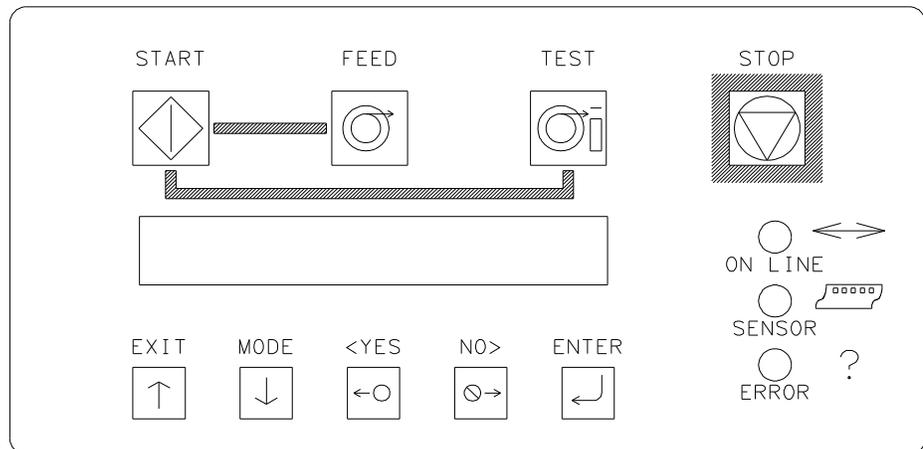

Front Panel Menu Map

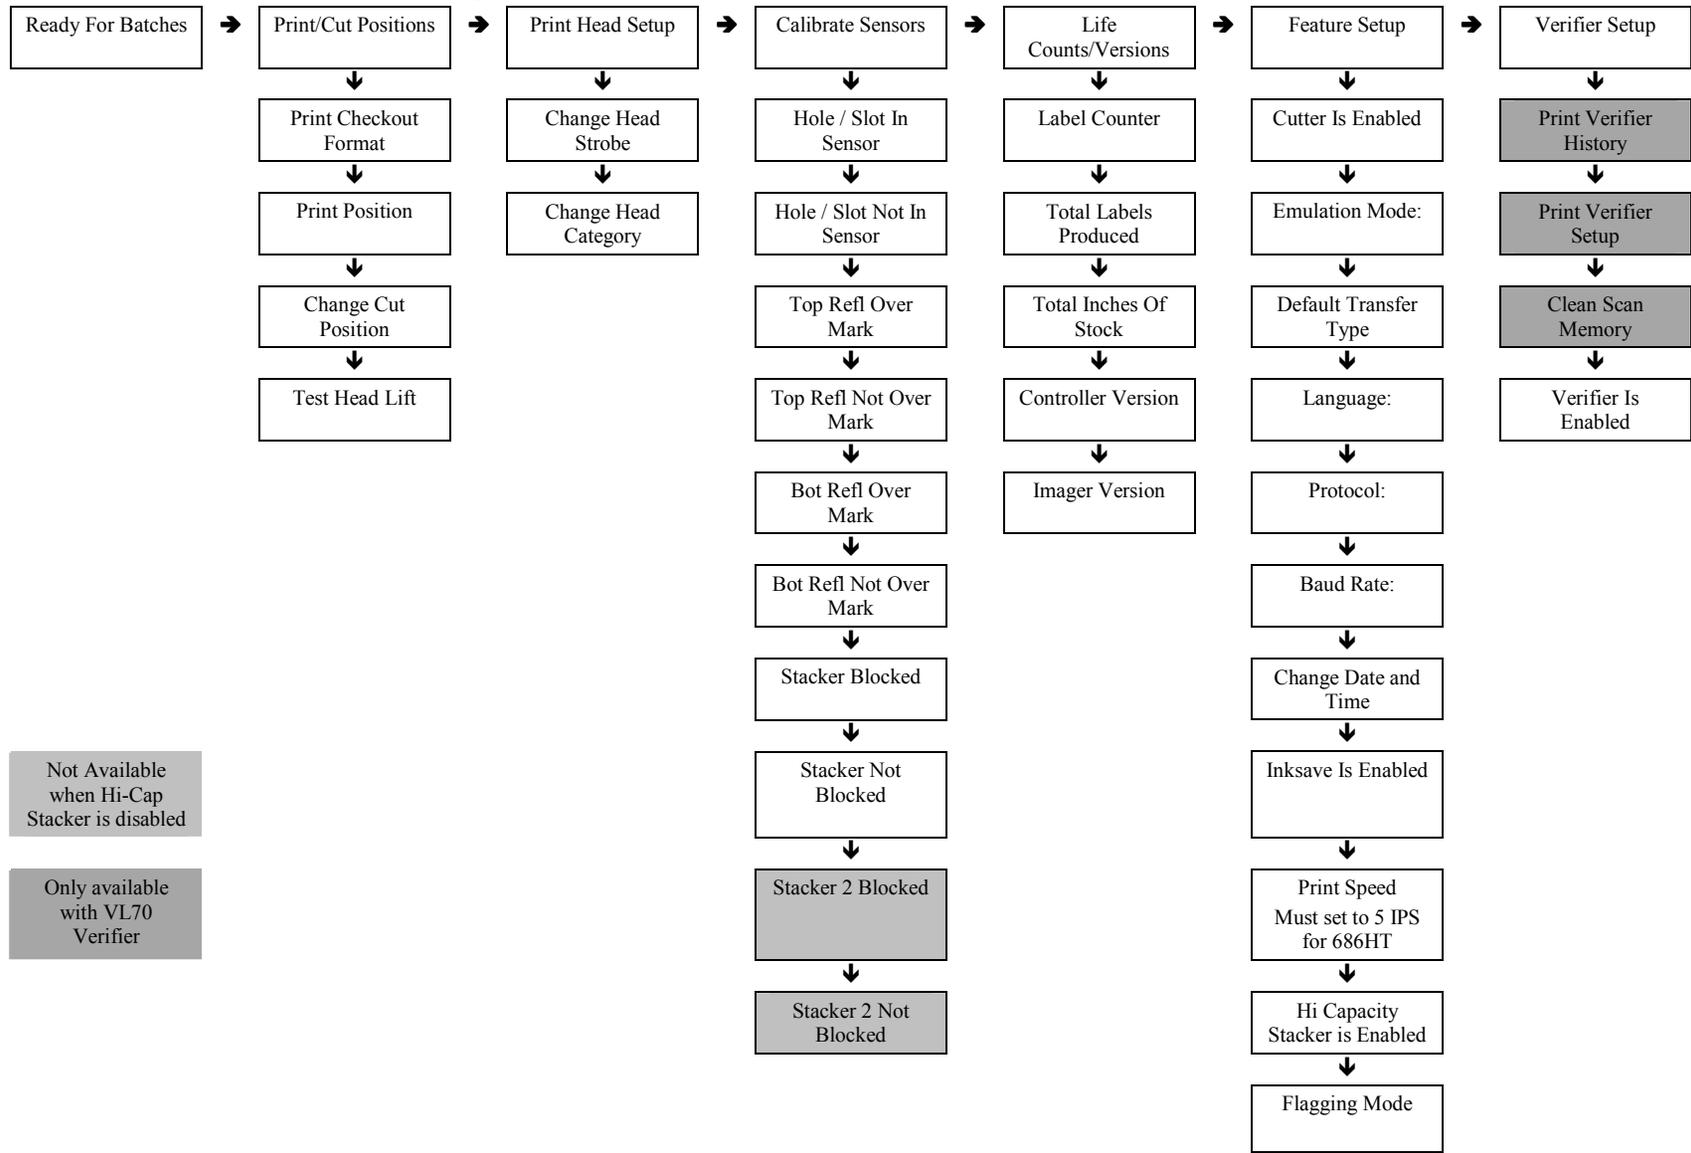

Not Available when Hi-Cap Stacker is disabled

Only available with VL70 Verifier

Front Panel Power Up / Home Screens

POWER UP (DIAGNOSTICS TESTS)

D	I	A	G	N	O	S	T	I	C	T	E	S	T	1					

This screen is displayed while the Front Panel is initializing and waiting for the Thermal Control Board (TCB) response. While this screen is displayed the code will check the functionality of the LED's and the display. Each state of the LED's will be checked - (orange, green, amber and off). The LCD is checked by writing a character to the display, checking for communications and then reading the character back and comparing with the code. If an error occurs, the code will halt the diagnostic test and blink the ERROR LED.

The keypad is also checked during DIAGNOSTIC TEST 1. Each key is tested to see if it is stuck on. If a fault condition is detected, the test is halted and the screen will display the first error key found with the following display:

(B	U	T	T	O	N		N	A	M	E)			K	E	Y		S	T	U	C	K	

The (BUTTON NAME) will be one of the push button names on the front panel - START, FEED, TEST, STOP, EXIT, MODE, <YES, NO>, OR ENTER.

When the code has finished the above tests, the code will attempt to communicate with the Thermal Control Board (TCB).

D	I	A	G	N	O	S	T	I	C	T	E	S	T	#	#	#							
T	C	B		V	E	R	S	I	O	N	0	0	.	0	0								

This screen will be updated with diagnostic numbers as the TCB and AT go through different stages of PowerPC initialization.

The diagnostic test screen will also be displayed when the Diagnostic tests that are runnable from the front panel are being executed.

Once the diagnostic tests are complete, the Front Panel should display the HOME screen.

HOME SCREEN

R	E	A	D	Y		F	O	R		B	A	T	C	H	E	S							
6	8	6	/	3	0	0																	

OR

B	A	T	C	H		I	D										Q	U	A	N	T	I	T	Y	
P	C	L	0	0	1																			1	0

Pressing the MODE / Down Arrow key will take the user to the various mode screens listed below (refer to the Front Panel Mode Descriptions section in this manual).

Pressing the EXIT / Up Arrow key at any time will take the user back to the "HOME" screen.

PRINTER ADJUSTMENTS

P	R	E	S	S		E	N	T	E	R		F	O	R									
P	R	I	N	T	/	C	U	T		P	O	S	I	T	I	O	N	S					

PRINTHEAD ADJUSTMENTS

P	R	E	S	S		E	N	T	E	R		F	O	R								
P	R	I	N	T		H	E	A	D		S	E	T	U	P							

CALIBRATE SENSORS

P	R	E	S	S		E	N	T	E	R		F	O	R								
C	A	L	I	B	R	A	T	I	N	G		S	E	N	S	O	R	S				

LIFE COUNTS / VERSIONS

P	R	E	S	S		E	N	T	E	R		F	O	R								
L	I	F	E		C	O	U	N	T	S	/	V	E	R	S	I	O	N	S			

SETUP SCREEN


P	R	E	S	S		E	N	T	E	R		F	O	R								
F	E	A	T	U	R	E		S	E	T	U	P										

VERIFIER SETUP SCREEN

P	R	E	S	S		E	N	T	E	R		F	O	R								
V	E	R	I	F	I	E	R		S	E	T	U	P									

Front Panel Mode Descriptions

There are six (6) main mode levels that are selected and modified using the following function keys:

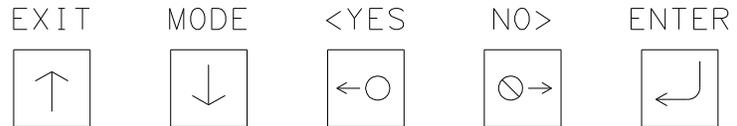

Use the MODE ↓ key to move through the main mode screens shown below:

**PRESS ENTER FOR
PRINT / CUT POSITIONS**

**PRESS ENTER FOR
PRINT HEAD SETUP**

**PRESS ENTER FOR
CALIBRATING SENSORS**

**PRESS ENTER FOR
LIFE COUNTS / VERSIONS**

**PRESS ENTER FOR
FEATURES SETUP**

**PRESS ENTER FOR
VERIFIER SETUP**

Use the EXIT ↑ to move to the HOME screens.

PRINT / CUT POSITIONS

P	R	E	S	S		E	N	T	E	R		F	O	R												
P	R	I	N	T	/	C	U	T		P	O	S	I	T	I	O	N									

This screen follows the "BATCH ID / BATCH QTY" screen if there are batches to be printed, otherwise it follows the "READY FOR BATCHES / MODEL DPI" home screen.

Pressing ENTER will take the user to the "PRINT / CUT POSITIONS" screens. Pressing the MODE / Down Arrow key will take the user to the "PRINTHEAD SETUP" screen. Pressing the EXIT / Up Arrow key will take the user back to the "HOME" screen.

P	R	E	S	S		E	N	T	E	R		T	O												
P	R	I	N	T		C	H	E	C	K	O	U	T		F	O	R	M	A	T					

This screen is the first screen under "PRINT / CUT POSITIONS". Pressing ENTER will cause the printer to print the checkout format. The printer will setup to do the checkout format and start printing. The front panel will remain on this screen so the user can use the MODE / Down Arrow key to get to the printer adjustments. When the EXIT / Up Arrow key is pressed the printer stops printing - the checkout format and goes back to what it was doing before the checkout was requested.

Pressing the MODE / Down Arrow key will take the user to the "PRINT POSITION" screen. Pressing the EXIT / Up Arrow key will take the user back to the "HOME" screen.

P	R	I	N	T		P	O	S	I	T	I	O	N												
V	A	L	U	E	:	±	X	X		N	E	W		V	A	L	U	E	:	±	Y	Y			

This screen follows the "PRINT CHECKOUT FORMAT" screen. This screen allows the print position to be adjusted in the feed direction.

The <YES / NO> buttons are used to change the new print value. The value is displayed in a positive / negative format. The value ranges for XX and YY can be from a -9 to a +9. Pressing ENTER will change the CURRENT PRINT value to the NEW PRINT value. A more positive number will move the print to the right while a more negative number will move the print to the left.

Pressing the MODE / Down Arrow key will take the user to the "CHANGE CUT POSITION" screen. Pressing the EXIT / Up Arrow key will take the user back to the "HOME" screen.

C	H	A	N	G	E		C	U	T		P	O	S	I	T	I	O	N							
V	A	L	U	E	:	±	X	X		N	E	W		V	A	L	U	E	:	±	Y	Y			

This screen follows the "PRINT POSITION" screen. This screen allows the cut position to be adjusted. The <YES / NO> buttons are used to change the new cut value. The value is displayed in a positive / negative format. The value ranges for XX and YY can be from a -9 to a +9. Pressing ENTER will change the CURRENT CUT value to the NEW CUT value. A more positive number will move the cut to the right while a more negative number will move the cut to the left.

Pressing the MODE / Down Arrow key will take the user to the "DOT SHIFT" screen. Pressing the EXIT / Up Arrow key will take the user back to the "HOME" screen.

D	O	T	S	H	I	F	T														
V	A	L	U	E	:	±	X	X		N	E	W	V	A	L	U	E	:	±	Y	Y

This screen follows the "CHANGE CUT POSITION" screen. This screen allows the print position to be adjusted in the WEB direction. The <YES / NO> buttons are used to change the new shift value. The value is displayed in a positive / negative format. The value ranges for XX and YY can be from a -16 to a +16 dots. Pressing ENTER will change the CURRENT DOT SHIFT value to the NEW DOT SHIFT value. A more positive number will move the print to the front while a more negative number will move the print to the back.

Pressing the MODE / Down Arrow key will take the user back to the "PRINT CHECK OUT FORMAT" screen. Pressing the EXIT / Up Arrow key will take the user back to the "HOME" screen.

PRINTHEAD SETUP

P	R	E	S	S		E	N	T	E	R		F	O	R							
P	R	I	N	T	H	E	A	D		S	E	T	U	P							

This screen follows the "PRINT / CUT POSITIONS" screen. Pressing ENTER will take the user to the "PRINTHEAD SETUP" screens. Pressing the MODE / Down Arrow key will take the user to the "CALIBRATING SENSORS" screen. Pressing the EXIT / Up Arrow key will take the user back to the "HOME" screen.

C	H	A	N	G	E		S	T	R	O	B	E									
V	A	L	U	E	:	±	X	X		N	E	W	V	A	L	U	E	:	±	Y	Y

This screen is the first screen under "PRINTHEAD SETUP" screen. This screen allows the user to adjust the strobe. The <YES / NO> buttons are used to change the new value. The value is displayed in a positive / negative format. The value ranges for X and Y can be from a -7 to a +7. Pressing ENTER will change the CURRENT STROBE value to the NEW STROBE value. A more positive number will make the print darker while a more negative number will make the print lighter.

Pressing the MODE / Down Arrow key will take the user to the "CHANGE HEAD CATEGORY" screen. Pressing the EXIT / Up Arrow key will take the user back to the "HOME" screen.

H	E	A	D		C	A	T	E	G	O	R	Y									
V	A	L	U	E	:	±	X	X		N	E	W	V	A	L	U	E	:	±	Y	Y

This screen follows the "CHANGE STROBE" screen. The screen allows the user to enter the head category. The <YES / NO> buttons are used to change the new head category value. The value ranges from 1 to 8. Pressing ENTER will change the CURRENT HEAD category value to the NEW HEAD value. See the section "PRINTHEAD REPLACEMENT" for instructions for setting the head category.

Pressing the MODE / Down Arrow key will take the user back to the "CHANGE STROBE" screen. Pressing the EXIT / Up Arrow key will take the user back to the "HOME" screen.

CALIBRATE SENSORS

P	R	E	S	S		E	N	T	E	R		T	O													
C	A	L	I	B	R	A	T	E		S	E	N	S	O	R	S										

This screen follows the "PRINT HEAD SETUP" screen.

Pressing ENTER will take the user to the "CALIBRATE SENSORS" screens.

Pressing the MODE / Down Arrow key will take the user to the "LIFE COUNTS / VERSIONS" screen. Pressing the EXIT / Up Arrow key will take the user back to the "HOME" screen.

H	O	L	E	/	S	L	O	T		I	N		S	E	N	S	O	R							
V	A	L	U	E	:	0	0	0		N	E	W		V	A	L	U	E	:	0	0	0			

This is the first screen under "CALIBRATE SENSORS". Place the stock hole / slot sense mark under the sensor. Slowly move the stock under sensor until the NEW VALUE reading is its smallest value then press 'Enter'.

Pressing the MODE / Down Arrow key will take the user to the "HOLE / SLOT NOT IN SENSOR" screen. Pressing the EXIT / Up Arrow key will take the user back to the "HOME" screen.

H	O	L	E	/	S	L	O	T		N	O	T		I	N		S	E	N	S	O	R			
V	A	L	U	E	:	0	0	0		N	E	W		V	A	L	U	E	:	0	0	0			

This screen follows the "HOLE / SLOT IN SENSOR" screen. Place the stock under the sensor so that it blocks the sensor and when NEW VALUE is at its largest value press 'Enter'.

Pressing the MODE / Down Arrow key will take the user to the "TOP REFL OVER MARK" screen. Pressing the EXIT / Up Arrow key will take the user back to the "HOME" screen.

T	O	P		R	E	F	L		O	V	E	R		M	A	R	K								
V	A	L	U	E	:	0	0	0		N	E	W		V	A	L	U	E	:	0	0	0			

This screen follows the "HOLE / SLOT NOT IN SENSOR" screen. Place the stock under the sensor so that the reflective mark is under the sensor and when NEW VALUE is at its largest value press 'Enter'.

Pressing the MODE / Down Arrow key will take the user to the "TOP REFL NOT OVER MARK" screen. Pressing the EXIT / Up Arrow key will take the user back to the "HOME" screen.

T	O	P		R	E	F	L		N	O	T		O	V	E	R		M	A	R	K			
V	A	L	U	E	:	0	0	0		N	E	W		V	A	L	U	E	:	0	0	0		

This screen follows the "TOP REFL OVER MARK" screen. Place the stock under the sensor so that the stock is under the sensor but the reflective mark is not under the sensor and when NEW VALUE is at its smallest value press 'Enter'.

Pressing the MODE / Down Arrow key will take the user to the "BOT REFL OVER MARK" screen. Pressing the EXIT / Up Arrow key will take the user back to the "HOME" screen.

B	O	T		R	E	F	L		O	V	E	R		M	A	R	K							
V	A	L	U	E	:	0	0	0		N	E	W		V	A	L	U	E	:	0	0	0		

This screen follows the "TOP REFL NOT OVER MARK" screen. Place the stock over the sensor so that the reflective mark is over the sensor and when NEW VALUE is at its largest value press 'Enter'.

Pressing the MODE / Down Arrow key will take the user to the "BOT REFL NOT OVER MARK" screen. Pressing the EXIT / Up Arrow key will take the user back to the "HOME" screen.

B	O	T		R	E	F	L		N	O	T		O	V	E	R		M	A	R	K			
V	A	L	U	E	:	0	0	0		N	E	W		V	A	L	U	E	:	0	0	0		

This screen follows the "BOT REFL OVER MARK" screen. Place the stock over the sensor so that the stock is over the sensor but the reflective mark is not over the sensor and when NEW VALUE is at its smallest value press 'Enter'.

Pressing the MODE / Down Arrow key will take the user to the "STACKER BLOCKED" screen. Pressing the EXIT / Up Arrow key will take the user back to the "HOME" screen.

S	T	A	C	K	E	R		B	L	O	C	K	E	D										
V	A	L	U	E	:	0	0	0		N	E	W		V	A	L	U	E	:	0	0	0		

This screen follows the "BOT REFL NOT OVER MARK" screen. Place the stock in the stacker jam sensor so that the stock is within the sensor site path and when NEW VALUE is at its highest value press 'Enter'.

Pressing the MODE / Down Arrow key will take the user to the "STACKER NOT BLOCKED" screen. Pressing the EXIT / Up Arrow key will take the user back to the "HOME" screen.

S	T	A	C	K	E	R		N	O	T		B	L	O	C	K	E	D						
V	A	L	U	E	:	0	0	0		N	E	W		V	A	L	U	E	:	0	0	0		

This screen follows the "STACKER BLOCKED" screen. Remove any stock from the stacker jam sensor so that no stock is within the sensor site path and when NEW VALUE is at its lowest value press 'Enter'.

Pressing the MODE / Down Arrow key will take the user back to the "HOLE / SLOT IN SENSOR" screen. Pressing the EXIT / Up Arrow key will take the user back to the "HOME" screen.

I	M	A	G	E	R	V	E	R	S	I	O	N								
U	S	A	1	9	.	0	1													

This screen follows the "CONTROLLER VERSION" screen. This screen shows operating system version for the imager (AT).

Pressing the MODE / Down Arrow key will take the user back to the "LABEL COUNTER" screen.

Pressing the EXIT / Up Arrow key will take the user back to the HOME screen.

FEATURE SETUP SCREEN

P	R	E	S	S	E	N	T	E	R	F	O	R								
F	E	A	T	U	R	E	S	E	T	U	P									

This screen follows the "LIFE COUNT / VERSIONS".

Pressing ENTER will take the user to the "FEATURE SETUP" screens. Pressing the MODE / Down Arrow key will take the user to the "VERIFIER SETUP" screen.

Pressing the EXIT / Up Arrow key will take the user back to the "HOME" screen.

C	U	T	T	E	R	I	S	E	N	A	B	L	E	D						
P	R	E	S	S	E	N	T	E	R	T	O	D	I	S	A	B	L	E		

OR

C	U	T	T	E	R	I	S	D	I	S	A	B	L	E	D					
P	R	E	S	S	E	N	T	E	R	T	O	E	N	A	B	L	E			

This screen is the first screen of the "FEATURE SETUP". This screen allows the cutter to be enabled or disabled. Pressing ENTER will toggle from ENABLED to DISABLED and vice versa. Pressing the MODE / Down Arrow key will take the user to the "EMULATION MODE" screen. Pressing the EXIT / Up Arrow key will take the user back to the "HOME" screen.

E	M	U	L	A	T	I	O	N	M	O	D	E	:	N	O	N	E				
N	E	W	E	M	U	L	A	T	I	O	N	M	O	D	E	:	6	3	0		

This screen follows the "CUTTER ENABLE / DISABLE" screen. This screen allows the EMULATION MODE to be changed. Use the <YES and NO> keys to move between NONE, 630, and 650 modes. Pressing ENTER will update the emulation mode with the selection after new emulation mode. Pressing the MODE / Down Arrow key will take the user to the "DEFAULT TRANSFER TYPE" screen. Pressing the EXIT / Up Arrow key will take the user back to the "HOME" screen.

D	E	F	A	U	L	T	T	R	A	N	S	F	E	R	T	Y	P	E			
V	A	L	U	E	:	X	X	X	N	E	W	V	A	L	U	E	:	Y	Y	Y	

This screen follows the "EMULATION MODE" screen IF emulation mode is something other than none. This screen allows the DEFAULT TRANSFER TYPE to be changed. This transfer type is used when the printer is in 630 or 650 emulation mode. The 630 and 650 do not send valid 6X6 transfer types in their PCL code. This default is used for those formats. Use the <YES and NO> keys to change the number value at the cursor position. Pressing ENTER will update the current value with the new value (i.e. 053 for type 53). After ENTER is pressed on the last digit the TRANSFER TYPE on the top line will be updated. Pressing the MODE / Down

Arrow key will take the user to the "LANGUAGE" screen. Pressing the EXIT / Up Arrow key will take the user back to the "HOME" screen.

				L	A	N	G	U	A	G	E	:	X	X	X	X	X	X				
N	E	W		L	A	N	G	U	A	G	E	:	Y	Y	Y	Y	Y	Y				

This screen follows the "DEFAULT TRANSFER TYPE" screen. This screen allows the front panel display language to be changed. Use the <YES and NO> keys to move between the supported languages on the printer. Any number of front panel languages can be stored on the Flash Disk Module (dependent on available space). If no additional languages other than the default are available on the printer XXXXXX and YYYYYY will be the same value. Pressing ENTER will update the display language with the selection. Pressing the MODE / Down Arrow key will take the user to the "PROTOCOL" screen. Pressing the EXIT / Up Arrow key will take the user back to the "HOME" screen.

Warning: Mis-matched communication protocols may result in the inability to communicate with the printer and / or loss of data.

				P	R	O	T	O	C	O	L	:	X	X	X	X	X	X				
N	E	W		P	R	O	T	O	C	O	L	:	Y	Y	Y	Y	Y	Y				

This screen follows the "LANGUAGE" screen. This screen allows the communications protocol to be changed between the supported types. Use the <YES and NO> keys to move between the supported protocols – RTS / CTS is considered hardware handshaking and XON / XOFF is considered to be software. Pressing ENTER will update the communications protocol with the selection. Pressing the MODE / Down Arrow key will take the user to the "BAUD RATE" screen. Pressing the EXIT / Up Arrow key will take the user back to the "HOME" screen.

				B	A	U	D		R	A	T	E	:	X	X	X	X	X	X				
N	E	W		B	A	U	D		R	A	T	E	:	Y	Y	Y	Y	Y	Y				

This screen follows the "PROTOCOL" screen. This screen allows the serial communications speed to be changed. Use the <YES and NO> keys to move between the supported speeds – typical is 9600 dependent on serial communication cable length. Pressing ENTER will update the communications speed with the selection. Pressing the MODE / Down Arrow key will take the user to the "CHANGE DATE AND TIME" screen. Pressing the EXIT / Up Arrow key will take the user back to the "HOME" screen.

C	H	A	N	G	E		D	A	T	E		A	N	D		T	I	M	E				
0	3	/	1	4	/	0	0		1	2	:	0	5		P	M							

This screen follows the "BAUD RATE" screen. This screen allows the system date and time to be changed. When this screen appears, the first digit of the month will be blinking. (The date is shown in US format, MM/DD/YY.) Pressing the <YES and NO> keys will change the digit up and down respectively. Pressing ENTER will move to the next digit. Only the digits and the A or P in AM or PM can be changed. When all changes are complete, pressing the MODE / Down Arrow key will take the user to the "INKSAVE ENABLE / DISABLE" screen, and pressing the EXIT / Up Arrow key will take the user back to the "HOME" screen. If an illegal date or time is entered, this screen will be re-displayed with the original date or time. A valid date and time must be entered before the user can go on.

I	N	K	S	A	V	E		I	S		E	N	A	B	L	E	D							
P	R	E	S	S				E	N	T	E	R		T	O		D	I	S	A	B	L	E	

OR

I	N	K	S	A	V	E		I	S		D	I	S	A	B	L	E	D					
P	R	E	S	S				E	N	T	E	R		T	O		E	N	A	B	L	E	

This screen allows inksave to be enabled or disabled. Inksave is an option that is available on certain models. It must be enabled in the format to operate. If inksave is enabled in the format, it can be disabled using this screen. Pressing ENTER will toggle from ENABLED to DISABLED and vice versa. Pressing the MODE / Down Arrow key will take the user to the "CUTTER ENABLE / DISABLE" screen. Pressing the EXIT / Up Arrow key will take the user back to the "HOME" screen.

VERIFIER SETUP

P	R	E	S	S				E	N	T	E	R		F	O	R							
V	E	R	I	F	I	E	R		S	E	T	U	P										

This screen follows the "FEATURE SETUP" screen.

Pressing ENTER will take the user to the "VERIFIER SETUP" screens. Pressing the MODE / Down Arrow key will take the user back to the "PRINT / CUT POSITIONS" screen. Pressing the EXIT / Up Arrow key will take the user back to the "HOME" screen.

Note: This screen for SV-70 Verifier only

P	R	E	S	S				E	N	T	E	R		T	O								
P	R	I	N	T				V	E	R	I	F	I	E	R		H	I	S	T	O	R	Y

This screen is the first screen under "VERIFIER SETUP". Pressing ENTER will cause the printer to print a verifier history report containing bar code information for all the problem scans since the scan memory was last cleared.

Pressing the MODE / Down Arrow key will take the user to the "PRINT VERIFIER SETUP" screen. Pressing the EXIT / Up Arrow key will take the user back to the "HOME" screen.

Note: This screen for SV-70 Verifier only

P	R	E	S	S				E	N	T	E	R		T	O								
P	R	I	N	T				V	E	R	I	F	I	E	R		S	E	T	U	P		

This screen follows the "PRINT VERIFIER HISTORY" screen. Pressing ENTER will cause the printer to print a report containing the present verifier setup.

Pressing the MODE / Down Arrow key will take the user to the "CLEAR SCAN HISTORY" screen. Pressing the EXIT / Up Arrow key will take the user back to the "HOME" screen.

Note: This screen for SV-70 Verifier only

P	R	E	S	S		E	N	T	E	R		T	O							
C	L	E	A	R		S	C	A	N		M	E	M	O	R	Y				

This screen follows the "PRINT VERIFIER SETUP" screen. Pressing ENTER will clear the verifier scan memory.

Pressing the MODE / Down Arrow key will take the user to the "VERIFIER ENABLE" screen. Pressing the EXIT / Up Arrow key will take the user back to the "HOME" screen.

V	E	R	I	F	I	E	R		I	S		E	N	A	B	L	E	D					
P	R	E	S	S		E	N	T	E	R		T	O		D	I	S	A	B	L	E		

OR

V	E	R	I	F	I	E	R		I	S		D	I	S	A	B	L	E				
P	R	E	S	S		E	N	T	E	R		T	O		E	N	A	B	L	E		

This screen follows the "CLEAR SCAN HISTORY" screen. This screen allows the verification process to be enabled or disabled. Pressing ENTER will toggle from ENABLED to DISABLED and vice versa.

Pressing the MODE / Down Arrow key will take the user back to the "PRINT VERIFIER HISTORY" screen. Pressing the EXIT / Up Arrow key will take the user back to the "HOME" screen.

Adjustments / Maintenance

Print Head Handling

Warning

Print heads can be damaged easily, and are subject to premature failure if not cleaned on a regular basis. Please follow the procedures carefully to help ensure print head life and print quality.

Thermal print heads are very sensitive and must be handled with care to help ensure longer print head life. Because print heads may be damaged through a number of ways, AVERY DENNISON has developed the following procedures;

Handling

Static discharge is very detrimental to thermal print heads. To avoid contacting print heads with a static charge, follow these simple procedures:

- All print heads should be kept in original anti-static bags until they are installed in the printer.
- The 686 / 686 HT printer is supplied with an anti-static wrist strap. Locate the strap - it must be worn at all times when handling the print heads.
- Do not touch any terminals extending from the print head or the print line.
- Anti-static gloves are provided with your printer upon installation and extras may be ordered from AVERY DENNISON. These gloves must be worn at all times when handling the print head. If an anti-static glove is not available, make absolutely certain to thoroughly wash and dry your hands before handling the print head. Oils from your hands can contaminate the print line and quickly destroy the printing elements.

Print Head Cleaning

CAUTION: TURN OFF THE POWER TO THE PRINTER BEFORE STARTING ANY CLEANING.

NEVER REMOVE THE HEAD FROM THE PRINTER EXCEPT FOR REPLACEMENT.

The Anti-static wrist strap (which must contact the skin and be tight) and anti-static gloves must be worn at all times when handling a print head to avoid damaging the print head.

Supplies:

- Always use clean supplies when cleaning the head.
- NEVER use anything abrasive to the head.
- NEVER use anything metallic on or near the printhead.
- Alcohol and a cotton swab are the recommended items to use when cleaning the printhead.

RECOMMEND AVERY DENNISON "MASTER CLEANING KIT" # 921338

Procedure:


See Appendix E

Print Head Replacement

NEVER REMOVE THE PRINT HEAD FROM THE PRINTER - EXCEPT FOR REPLACEMENT.

TURN OFF THE POWER TO THE PRINTER BEFORE STARTING ANY ELECTRONIC COMPONENT REPLACEMENT.

NOTE: The Anti-static wrist strap (which must contact the skin and be tight) and anti-static gloves must be worn at all times when handling a print head to avoid damaging the print head.

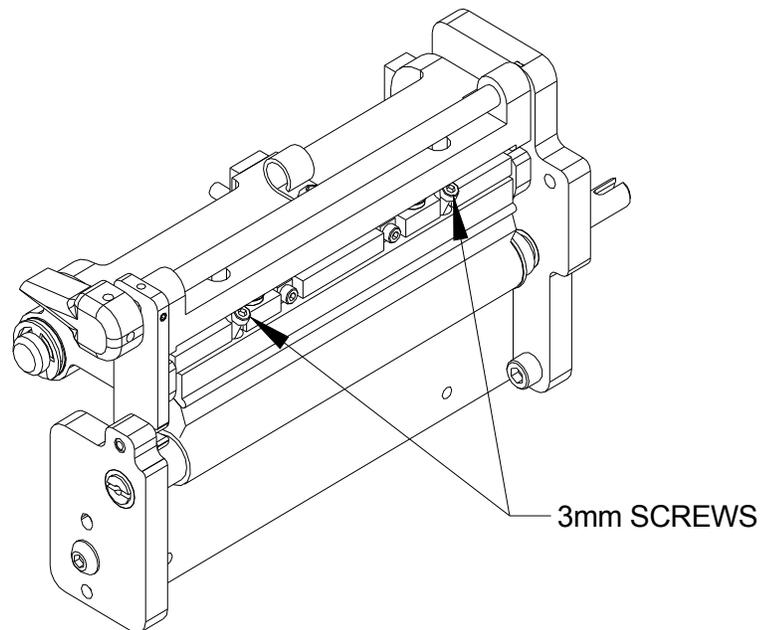

- 1) The head can then be removed by loosening the two 3.0mm screws simultaneously. The head will then drop out, sliding off the two-locator pins. To replace, reverse the procedure - taking care that the head properly engages the locator pins.

NOTE: The printhead connectors on the top new printhead must be upward approximately 15 degrees to enable the printhead cable to clear the ink roller.

- 2) After printhead replacement, the printer should be ready to print. There is no tangent adjustment required. This adjustment is factory set and sealed. Printhead pressure is also set by design and is not adjustable

NOTE: If the cable is not connected correctly, the print head will be damaged when the printer is powered on. Check to see that the cable is tight by observing from underneath the print head. The print head cable connector should be inside of the black connector located on the print head.

- 3) Replace the ink and double-check your work. Power the printer on and make sure that no adverse effects are noted.
- 4) Set the head category. Press the MODE key twice to get to the ENTER PRINTHEAD SETUP prompt. Press the ENTER key, then press the MODE key until the HEAD CATEGORY prompt appears. Use the <YES and NO> keys to

select the head category. The head category is based on the mean resistance of the print head being used. The printhead will have a value for the average printhead resistance, for example “ $R_{av} = 1438\Omega$ ”, printed on a label on the printhead. Look up the value in the following table and enter the appropriate head category. Press the ENTER key to enter the value. The printer must be turned off and back on for the change to take effect.

HEAD CATEGORY	AVERAGE RESISTANCE (R_{av})
1	1075 -1123
2	1124 -1170
3	1171 -1218
4	1219 -1265
5	1266 -1312
6	1313 -1360
7	1361 -1407
8	1408 -1455

As a final test of the print head installation, run a test pattern to check the print quality. You should observe an even grid of rectangles. If you do not see such a grid, you may wish to reference the topic of "Print Head Tangent Adjustment".

Print Head Adjustment

Clean Platen Roller

You may determine if the print head has been adjusted properly by performing a test pattern as documented under Control Buttons in this manual. A properly adjusted print head will produce an even grid of rectangles when the test pattern is performed. **Before making any judgments as to the quality of the print head, it is absolutely necessary to ensure that the platen roller and the printhead is clean of all debris.** Clean the platen roller located immediately beneath the print head with a clean cloth and a small amount of alcohol. The Velcro head-cleaning pad may also be used to clean heavy build up. Be careful not to damage the platen roller while cleaning. If the roller is worn, replace the roller.

Print Head Tangent Point

No tangent adjust is required in the field.

Print Head Pressure Setting

No Head Pressure adjustment is available.

Squaring the Print Head

The Print Head is squared at the factory.

Stock Feed Roller Adjustment

General

The Drive module is spring-loaded and requires no field adjustment. If you have a feed problem see trouble-shooting guide in the manual.

Knife Square Adjustment

The knife has an adjustment to square the cut to the stock. To make the adjustment, loosen the two cap screws, one on top of the knife and one below the knife, using the 3/16" ball driver in the tool kit. Move the knife in the direction desired to square the cut and retighten.

Stacker Adjustments

The stacker has four adjustments that can be made without a tool to accommodate different types and widths of stock.

Stock Length Adjustment

Loosen the two thumbscrews at the base of the stacker uprights and slide the uprights to a position that allows the cut tag or label to hang over the last belt roller approximately 1/4" (6mm). Retighten.

Stock Width Adjustment

Loosen the two thumbscrews behind the stacker uprights and adjust the stacker uprights to the desired stock width position. Retighten.

Stacker Angle Adjustment

Loosen the lever located on the side of the stacker assemble nearest the operator and adjust the angle of the stacker with a few cut labels in the stacker so that there is a slight gap under the last label as it hangs over the last belt drive roller. Retighten.

Stacker Full Adjustment

The sensor on the inboard stack upright is used to stop the printer when the stack is full. A thumbscrew adjustment is provided to set the stack height.

Warning: Some stock materials cannot be stacked to the full height of the stacker because of excessive weight.

Sensor Identification / Adjustment / Calibration

Sensor Identification:

Stock Out

A micro switch located on the back of the stock unwind will detect and stop the printer when the stock core is lifted because the stock is consumed.

Hole / Slot Index Registration

The stock hole / slot registration is via an optical sensor used in conjunction with an LED located in the stock funnel which allows the printer to register to pre-punched or preprinted stock.

Reflective Index Registration

The same optical sensor that is used for stock hole / slot registration, allows the printer to register to preprinted stock by detecting a black mark when the LED is turned off via the format.

Ink Out

An optical sensor located near the ink unwind arbor allows the printer to monitor the availability of ink.

Roller Drop (686) – Not on 686 HT

An optical sensor on back of the printer upright allows the printer to control and register the platen roller position to perform ink save.

Feed Open

A micro switch on the back of the feed module will detect the position of the feed module pressure knob and only allow the printer to operate with the feed pressure knob closed.

Jam

An optical sensor located in the stacker will detect each cut label as it leaves the cutter. If a cut fails to occur or a label remains in the sensor sight path, the machine will stop.

Full Stacker

A micro switch on the stacker rail allows the printer to detect a full load of labels in the stacker. The stack full condition will stop the machine when the stacker is full.

Sensor Adjustment

All the micro switches and optical sensors in your 686 / 686 HT printer were calibrated at the time your printer was manufactured, however from time to time it may become necessary to readjust / recalibrate due to the large variety of stocks and inks that can be run on the machine.

Stock Out

With a full roll of stock loaded on the stock unwind with the unwind web guides properly adjusted you should heard the switch click as you raise and lower the roll. If not - the switch bale is adjusted by carefully bending it as needed.

Print Registration Sensor

Web Position Adjustment

If you are running sense mark media with a hole, slot, or preprinted mark for registration - the registration sensor web position must be adjusted for the sense mark media being run. The type of sensor mark registration is selected in PC Mate Plus - Label Design Menu (attributes).

Hole Registration

- 1) Move the stock until the registration hole or slot desired is under the sensor and over the red LED.
- 2) Adjust the sensor block assembly using the sensor knob while looking at the sensor LED on the front panel. When the LED turns on with the registration sensor over the media in the vicinity of the hole / slot, and stays on, the sensor is over the registration hole or slot.
- 3) The front panel has a calibrating sensor main menu. Press the mode button until Calibrating Sensors is showing up on the display panel then Press the enter button. Press the mode button; the first two menu tasks will set the sensor range with the sensor open and then blocked, (See Front Panel Menu Map in this manual).

If your machine stops, for no apparent reason, while it is in the middle of printing a batch, you may be missing sense marks (three consecutive tickets in a row in which a sense mark was not found). Check for the following:

- The front panel will display an error message indicating that there has been a missed sensor.
 - 1) Check that the web guides have been positioned properly - both on the unwind and web guide assembly.
 - 2) Compare the actual feed length of the sense mark stock being run with the feed length set in PC Mate Plus.
 - 3) Repeat the sensor alignment procedure.

Reflective Registration

- 1) Move the stock by opening the feed roller and print head and moving the material until the printed mark desired is under the sensor. The LED will be turned off.
- 2) Adjust the sensor block assembly using the sensor knob while looking at the sensor LED on the front panel. When the LED turns on with the registration sensor over the media in the vicinity of the reflective mark, and stays on, the sensor is over the reflective mark.
- 3) The front panel has a calibrating sensor main menu. Press the mode button until Calibrating Sensors is showing up on the display panel then Press the enter button. Press the mode button; the third and fourth menu tasks will set the sensor range with the sensor open and then blocked, (See Front Panel Menu Map in this manual).

Sensor Calibration

Optical Sensor Electrical Calibration

The troubleshooting section will recommend when re-calibration is required.

The following guidelines indicate the proper procedure used to calibrate these sensors.

Note: Clean all optical sensors with clean compressed air or canned air prior to adjustment, as dust and debris will adversely affect their performance.

Supplies

- Always use clean supplies when cleaning the sensor and LED.
- NEVER use anything abrasive on the sensor and the LED.
- NEVER use an alcohol-based solution when cleaning the sensor or LED.
- Dry air or cotton swabs are the AVERY DENNISON recommended items to use when cleaning the sensor and LED.

There are three basic steps to calibrating each optical sensor.

- 1) Select the sensor to be calibrated in the Calibrate Sensors mode on the front panel.
- 2) Place media or ink as the case maybe in the appropriate sensor and press the “ENTER” button on the front panel.
- 3) In the case of stock registration sensing - reposition the media so that a hole / slot or black reflective mark is in the sight path of the appropriate registration sensor and press the “enter” button on the front panel. In the case of stacker jam sensor - reposition the media so the media is not in the sight path of the jam sensor and press the “ENTER” button on the front panel.

Reflective Registration – Transfers

There is a metal plate mounted over the bottom sensor. This plate must cover the bottom sensor.

Lubrication Procedure

General

The 686 / 686 HT series printers are factory equipped with either composition bearings not requiring lubrication or pre-lubricated bronze bearings. The one exception is the rub cams on either end of the rotary knife. Periodic cleaning of the printer and removal of dust will greatly enhance the length of the time the printer will function.

Cam - Lubrication Procedure

- 1) Clean dust and residue from cams (using alcohol or other suitable solvent) daily, or approximately every 100K cuts. Use any good quality general-purpose grease (not oil). Apply with cotton swab or other non-metallic device.
- 2) If lubrication is omitted, knife will squeak and draw attention to required lubrication.

Composition (Iglide) Bearings

- 1) If field replacement of an assembly fitted with an Iglide bearing is performed, a single drop of spindle oil should be applied to assist in bearing break-in.
- 2) If, after long use, an Iglide bearing starts to "squeak", disassemble the component containing the bearing and lightly abrade the shaft surface. Clean the bearing (dust or old oil) with alcohol, re-lubricate with 1 drop of light oil and reassemble.

Bronze Bushings

- 1) After extended periods of time, card dust will build up in and around the bushings. This should be cleaned to allow free movement of the device mounted.
- 2) Turn off the power to the printer.
- 3) Remove the device mounted in the bushing that shows signs of a cleaning required.
- 4) Wipe down the part with alcohol and a cloth. The Velcro pad may be used to clean heavy buildup.
- 5) Wipe out the bearing and surrounding surface with a cloth; avoid using alcohol, as that will wipe away the natural oil impregnated into the bushing. Check for heavy build-up and remove.
- 6) Add a drop of SAE 30 WT oil if available. If not - use one drop of lightweight spindle oil.

Printer Set Up Sequence

- 1) Power off the printer, remove the stock and ink and thoroughly clean the printer from the unwind to the stacker using alcohol and a clean soft cloth. The print head should be cleaned as per the Print Head Cleaning section in this manual.
- 2) NEVER use an alcohol-based solution when cleaning the sensors or LED.
- 3) Load a full roll of an average width stock and ink on the printer.
- 4) Power on the printer. After passing the diagnostics tests the front panel will display READY FOR BATCHES.
- 5) Arrow down to the Print / Cut Position mode and press enter.
- 6) At the Print Checkout Format screen press enter.
- 7) Press start. After several tags have been printed and cut, stop the printer and evaluate the last tag out.
- 8) Confirm the centerline is actually in the center of the media. If it is not, first check and adjust, as needed, the unwind core guides - then adjust the web guides. If the print quality is inadequate, refer back to step number six.
- 9) Using two consecutive labels back to back, check the squareness of the cut. Adjust the knife module as needed (refer to the Knife Square Adjustment section in this manual).
- 10) Using the front panel, adjust the label leading edge cut to be 1.0" +/- .032" from the cut line printed on the label. The printer is now ready for production formats at which time you should need only to fine-tune the print, cut, and strobe via the front panel for individual formats.

Electrical Trouble Shooting

Power Up / Sign On / Communications

Problem	Probable Cause	Corrective Action
Printer fails to power up.	1) Incorrect AC power supplied to printer.	1) Confirm that the AC entry is configured for the line voltage intended to be applied to the printer. Failure to do so can damage the printer's internal power supply (refer to the Fuse Configuration section in this manual).
	2) Lack of power to printer.	1) Check that both ends of the power cord are plugged in securely. 2) Confirm that the outlet the printer is plugged into has power.
	3) Missing or blown fuse(s)	1) Check that the fuse(s) located inside the AC entry are present and intact. Replace as needed (refer to the Fuse Configuration section in this manual).
	4) Cable / connector inside printer not properly seated or disconnected.	1) Power off and remove the power cord from the AC entry. Remove the back cover and inspect the cables and connectors to and from the power supplies (refer to the Electrical System Schematic in this manual).
	5) Thermal Control Board unplugged from the Mother Board	1) Power off and remove the power cord from the AC entry. Remove the back cover and reseat the Thermal Control Board.
Front panel displays no text or nothing at all.	1) Front panel cable unplugged.	1) Power off and remove the power cord from the AC entry. Remove the back cover and inspect the cable and connectors to and from the front panel (refer to the Electrical System Schematic section in this manual).

Problem	Probable Cause	Corrective Action
Front panel does not complete diagnostics test 2.	1) One or more PC board(s) unplugged from the Mother Board.	1) Power off and remove the power cord from the AC entry. Remove the back cover and reseat the offending board.
Printer does not receive batches.	1) Serial communications cable loose or unconnected.	1) Check and secure both ends of the serial cable with the thumbscrews.
	2) Printer not powered on or has not completed diagnostics tests.	1) Power printer on and wait until front panel displays "Ready for batches". Re-download data.
	3) Data sent to wrong printer.	1) In PcMate change to the printer the data is intended to be sent.
	4) Configuration incorrect in PcMate.	1) Reconfigure PcMate for AVERY DENNISON PCL printer as per your PcMate manual.
	5) Faulty Thermal Control Board.	1) Replace Thermal Control Board.
	6) Jumpers not configured correctly.	1) Contact AVERY DENNISON Service.

Stock / Ink Advance

Problem	Probable Cause	Corrective Action
Stock does not advance when the start button is depressed.	1) No batches to be printed.	1) Download batch (if batch downloaded uses the same format as a previously downloaded batch - the printer with start automatically).
	2) An interlock condition exists.	1) Determine the number and type of interlock(s) by reading the front panel display. As each is corrected the number of errors will decrease (Example "Error 901 Stock Out" reload stock).
	3) Feed motor unplugged or faulty.	1) Check feed motor cable and or replace feed motor.
	4) Thermal Control Board unplugged or faulty.	1) Check Thermal Control Board / AT board connection and or replace Thermal Control Board.
	5) Feed roller not closed.	1) Close feed rollers and press start twice (once to clear the feed open error, and once to start printer).
	6) Feed rollers bound.	1) With power off check that all rollers turn freely.
	7) Stock bound.	1) With the print head and feed open check that the stock will pull through the printer with little resistance.
Ink does not advance when the start button is depressed.	1) No batches to be printed.	1) Download batch (if batch downloaded uses the same format as a previously downloaded batch the printer with start automatically).
	2) An interlock condition exists.	1) Determine the number and type of interlock(s) by reading the front panel display. As each is corrected the number of errors will decrease (Example "Error 901 Stock Out" reload stock).
	3) Ink motor unplugged or faulty.	1) Check ink motor cable and or replace ink motor.
	4) Thermal Control Board unplugged or faulty.	1) Check Thermal Control Board / AT board connection and or replace Thermal Control Board.
	5) Ink roller bound.	1) With power off check that all rollers and arbors turn freely.
	6) Ink bound.	1) With the print head open - check that the ink will pull through the printer with little to no resistance.

Print

Problem	Probable Cause	Corrective Action
Printer advances stock but does not print.	1) Stock registration sensor miss aligned.	1) Adjust sensor position so that the sensor light on the front panel flashes as a sense mark hole passes under the sensor.
	2) Print head cable unconnected or faulty.	1) Power off the printer and reinsert the offending connector or replace cable.
	3) Print head faulty.	1) Replace print head.
	4) Head Driver Board unplugged or faulty.	1) Check Head Driver Board / AT board connection and or replace Head Driver Board.
Printer stops after ever third label.	1) Stock registration sensor miss aligned.	1) Adjust sensor position so that the sensor light on the front panel flashes as a sense mark hole passes under the sensor.
	2) Stock registration sensor uncalibrated.	1) Calibrate the sensor (refer to the Sensor Calibration section in this manual).
Print registration is off in the feed direction.	1) Printer print position is incorrect.	1) Enter the Print / Cut Positions Mode on the front panel and readjust the Print Position setting as needed.
	2) Field(s) position incorrect in the format.	1) Using PcMate Platinum – check and readjust the field(s) position(s) as needed.
	3) Bound platen roller.	1) Check that the platen roller turns freely on its shaft. If it does not, clean bearing or replace it.
Print registration is off in the web direction.	1) Printer incorrectly threaded.	1) Check and rethread the stock as needed (refer to Loading Stock section in this manual).
	2) Web guides incorrectly adjusted.	1) Check and adjust as needed (refer to Web Guide Adjustment in this manual).
	3) Unwind incorrectly adjusted.	1) Check and adjust as needed (refer to Web Guide Adjustment in this manual).
	4) Incorrect DIP switch settings on the Thermal Control Board.	1) Check and reset DIP switches as needed (refer to TCB Dip Switch Settings section in this manual).

Problem	Probable Cause	Corrective Action
Print contrast is too light or dark.	1) Incorrect strobe setting selected in the format.	1) Using PcMate Platinum - check and adjust the strobe setting according to the stock and ink being used.
	2) Printer strobe setting is incorrect.	1) Enter the Print Head Setup Mode on the front panel and readjust the Strobe setting as needed.
Voids in print image in the feed direction.	1) Ink miss aligned with format.	1) Adjust ink position on the arbors to achieve full ink coverage over all fields on the format.
	2) Print head dirty.	1) Power off the printer - clean the print head and platen (refer to Print Head Cleaning section in this manual).
	3) Faulty print head.	1) After cleaning head and running the test pattern to confirm that a void still exists, replace the print head.
	4) Worn platen roller.	1) Replace platen roller.
Printer continually stops with an erroneous interlock condition.	1) Sensor uncalibrated.	1) Determine which sensor and re-calibrate as needed (refer to Sensor Calibration section in this manual).
	2) Sensor position miss-adjusted.	1) Determine which sensor and relocate accordingly.

Cut / Stack

Problem	Probable Cause	Corrective Action
Printer fails to cut labels (the rotary knife does not rotate).	1) The cut is disabled in the Feature Setup mode.	1) Enter the Feature Setup Mode on the front panel and Enable the knife.
	2) Knife cable unconnected.	1) Power off and remove the power cord from the AC entry. Remove the back cover and inspect the cable and connector to the knife module (refer to the Electrical System Schematic section in this manual).
	3) Knife jammed causing auto resetting fuse to trip on the Thermal Control Board.	1) Remove cause of jam at the knife.
	4) Faulty knife motor.	1) Replace the knife motor.
	5) Faulty knife motor drive circuit on the Thermal Control Board.	1) Replace the Thermal Control Board.
The stacker fails to run.	1) The stacker cable is unconnected.	1) Power off and insert the stacker cable in the stacker socket on the Thermal Control Board.
	2) Faulty stacker motor.	1) Replace the stacker motor.
	3) Stacker jammed causing auto resetting fuse to trip on the Thermal Control Board.	1) Remove cause of jam at the stacker.
	4) Faulty stacker motor drive circuit on the Thermal Control Board.	1) Replace the Thermal Control Board.

Mechanical Trouble Shooting

Stock

Problem	Probable Cause	Corrective Action
Stock will not roll or jumps	1) Incorrect adjustment of unwind web guides	1) Be sure stock roll is as flat as possible and does not extend over core.
		2) Adjust unwind knob until back plate and front post touch roll. Do not over-tighten. Roll must rotate smoothly.
		3) Adjust the web guide to the edge of stock. Do not pinch web.
Printer fails to stop at end of roll.	1) Stock roll is too tight in guides.	1) Adjust unwind knob until back plate and front post touch roll. Do not over-tighten. Roll must rotate smoothly.
Stock does not pull smoothly through printhead module.	1) Web guide is too tight.	1) Adjust turn-bar collars to same position as unwind back plate and front post.
	2) Stock is slipping in drive or drive pressure is uneven.	1) Be sure cam lift knob is closed. Be sure springs are not improperly installed on bottom pins. Be sure cam lift surfaces are not holding lift arms up when knob is in the run position. Re-adjust unwind and web guide to relieve possible stock "pinch".

Problem	Probable Cause	Corrective Action
Cracks or craze marks appear on face of finished labels.	1) Incorrect adjustment of decurler.	1) Move decurler turn-bar toward unwind end of printer until cracks no longer appear.
Stock jams in bridge blade rollers or knife area.	1) Knife not cutting full width of stock.	1) Loosen knife shear adjustment screws and move outer end of knife until full cut is accomplished.
	2) Stacker not operating or nip rollers not turning.	1) Check stacker connection to access port. Be sure nip roller is free to rotate and moves easily in the bearing slots.
Will not stack.	1) Stacker not operating.	1) Check stacker connection to access port. Be sure nip roller is free to rotate and moves easily in the bearing slots.
	2) Stacker position on printer too far forward so labels go under stacker rail.	1) Loosen stacker mounting knob and move stacker toward rear of printer - tighten. 2) Adjust position of stacker rails.
	3) Incorrect rail position or stacker bed angle.	1) Using a cut label, position stacker rails so that approximately 3/8" (9.5mm) overhangs the second grooved roller. Loosen quick-turn handle on stacker clamp and raise or lower stacker bed until opening between 1st label overhang and belt surface will allow entry of next label.
Knife will not cut or partial cut	1) Incorrect pre-load on clutch pawl.	1) With back cover removed and <u>power off</u> - operate solenoid by hand. When lever is moved, clutch pawl should move counter-clockwise about 1/32" (0.79mm) with the "pac-man" in home position. If not - loosen "pac-man" set screws and readjust "pac-man" to stop with spring in detent.
	2) Partial cut	1) Loosen shear adjustment screws and move outer end of knife until full cut is obtained.

Ink


Problem	Probable Cause	Corrective Action
Ink wrinkles or will not pull smoothly.	1) Unwind roller and ink take-up roller misaligned.	1) Align rear edge of ink with rear of print area (allow approximately 1/8" (3mm) overlap). Loosen thumb cap screw on ink roll locator plate and adjust until it touches rear of ink roll on unwind arbor. Slide rewind cores toward rear of printer until it just contacts plate.
	2) Ink buildup on turn bar(s).	1) Clean with alcohol.
	3) Incorrect ink width.	1) Use ink 1/4 inch wider than stock being printed by overhanging 1/8 inch on either side of stock. This is especially critical when using a narrow web with cut down rollers.
Ink rolls loosely on take-up roller.	1) Take-up roller not turning.	1) Be sure belt is on rear drive sprocket. Be sure magnetic drive (rear of center frame) can turn freely. No adjustment for tension is available or required.
	2) Take-up core binding on locator plate.	1) Move core .015" - .030" (.38mm - .76mm) away from plate.
	3) Take-up roller too full.	1) Remove used ink roll. It is designed to hold only 1 full roll.

Print


Problem	Probable Cause	Corrective Action
Poor print - uneven or no print (mechanical). Also see electrical troubleshooting.	1) Broken ink.	1) Replace ink and readjust (see INK troubleshooting).

Electrical Drawings

Printer Wiring

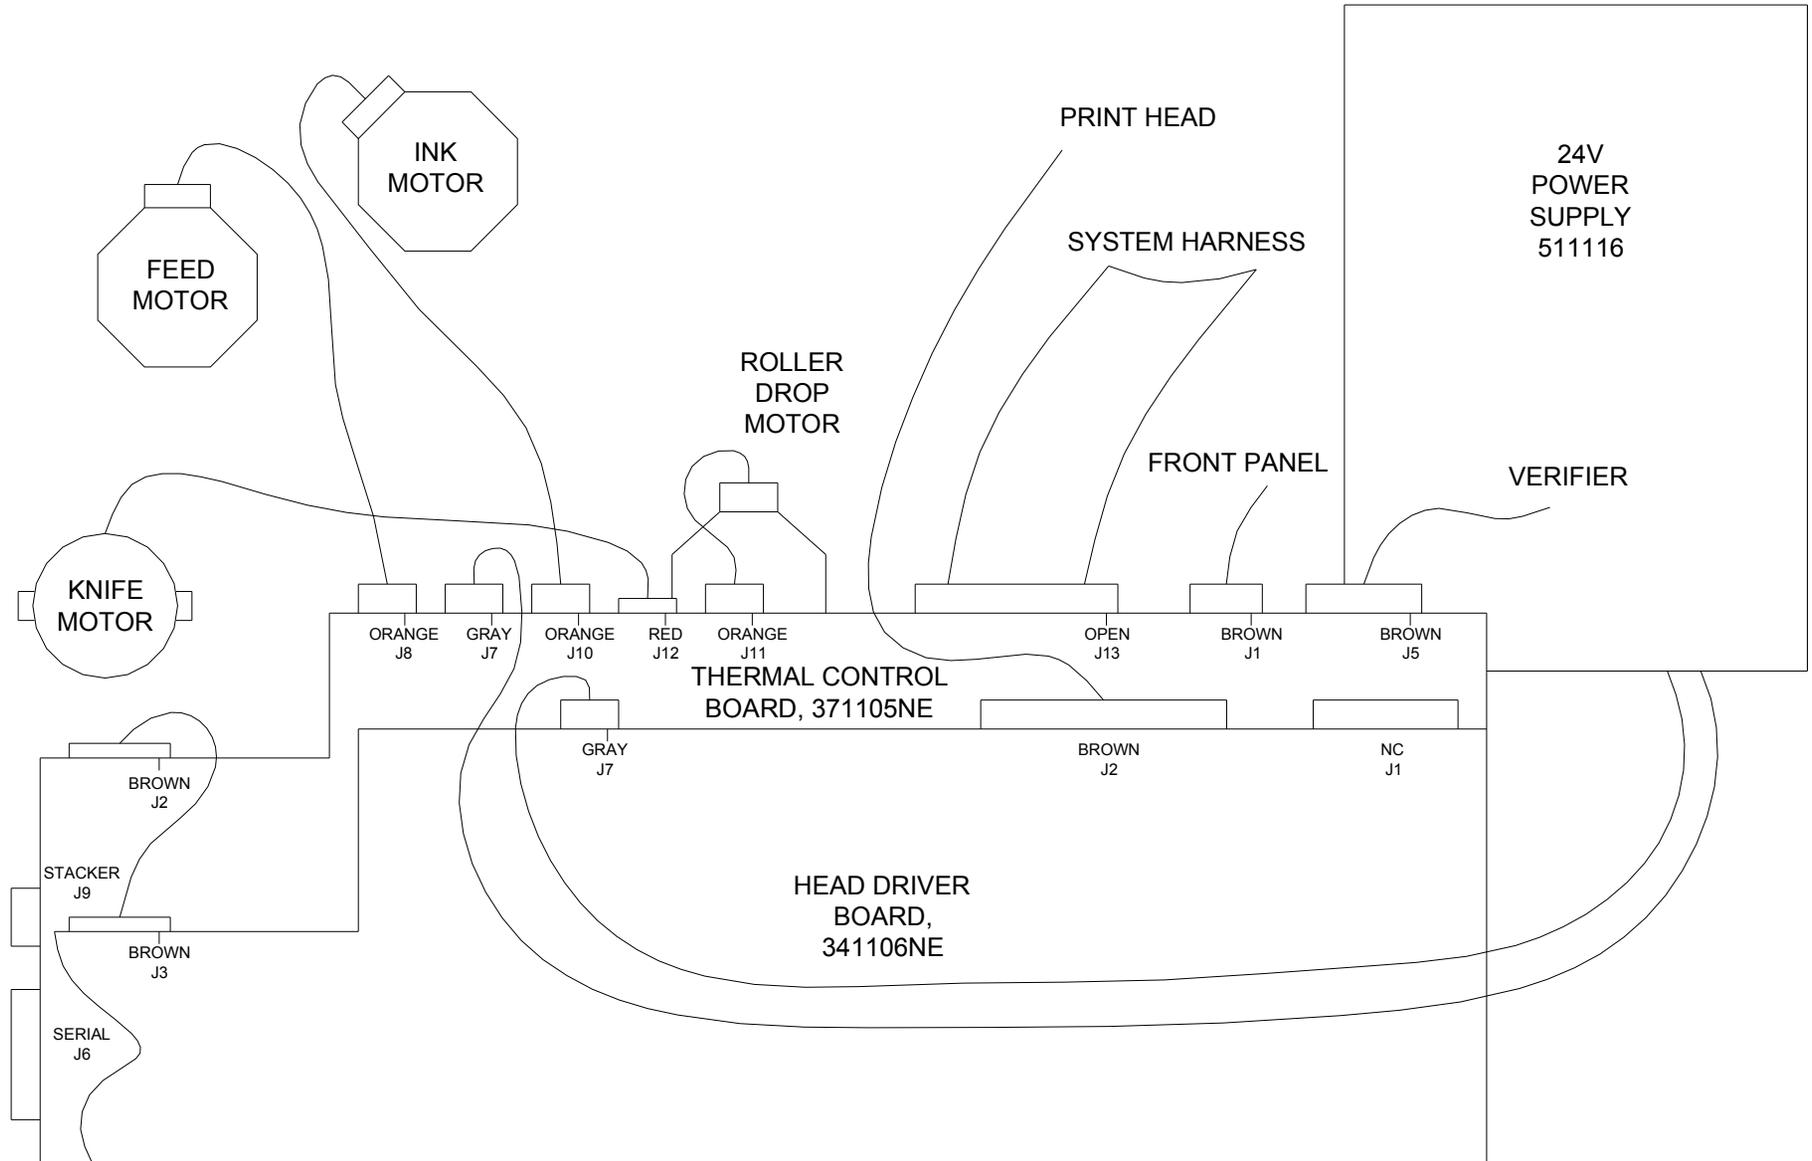

Electrical System Schematic





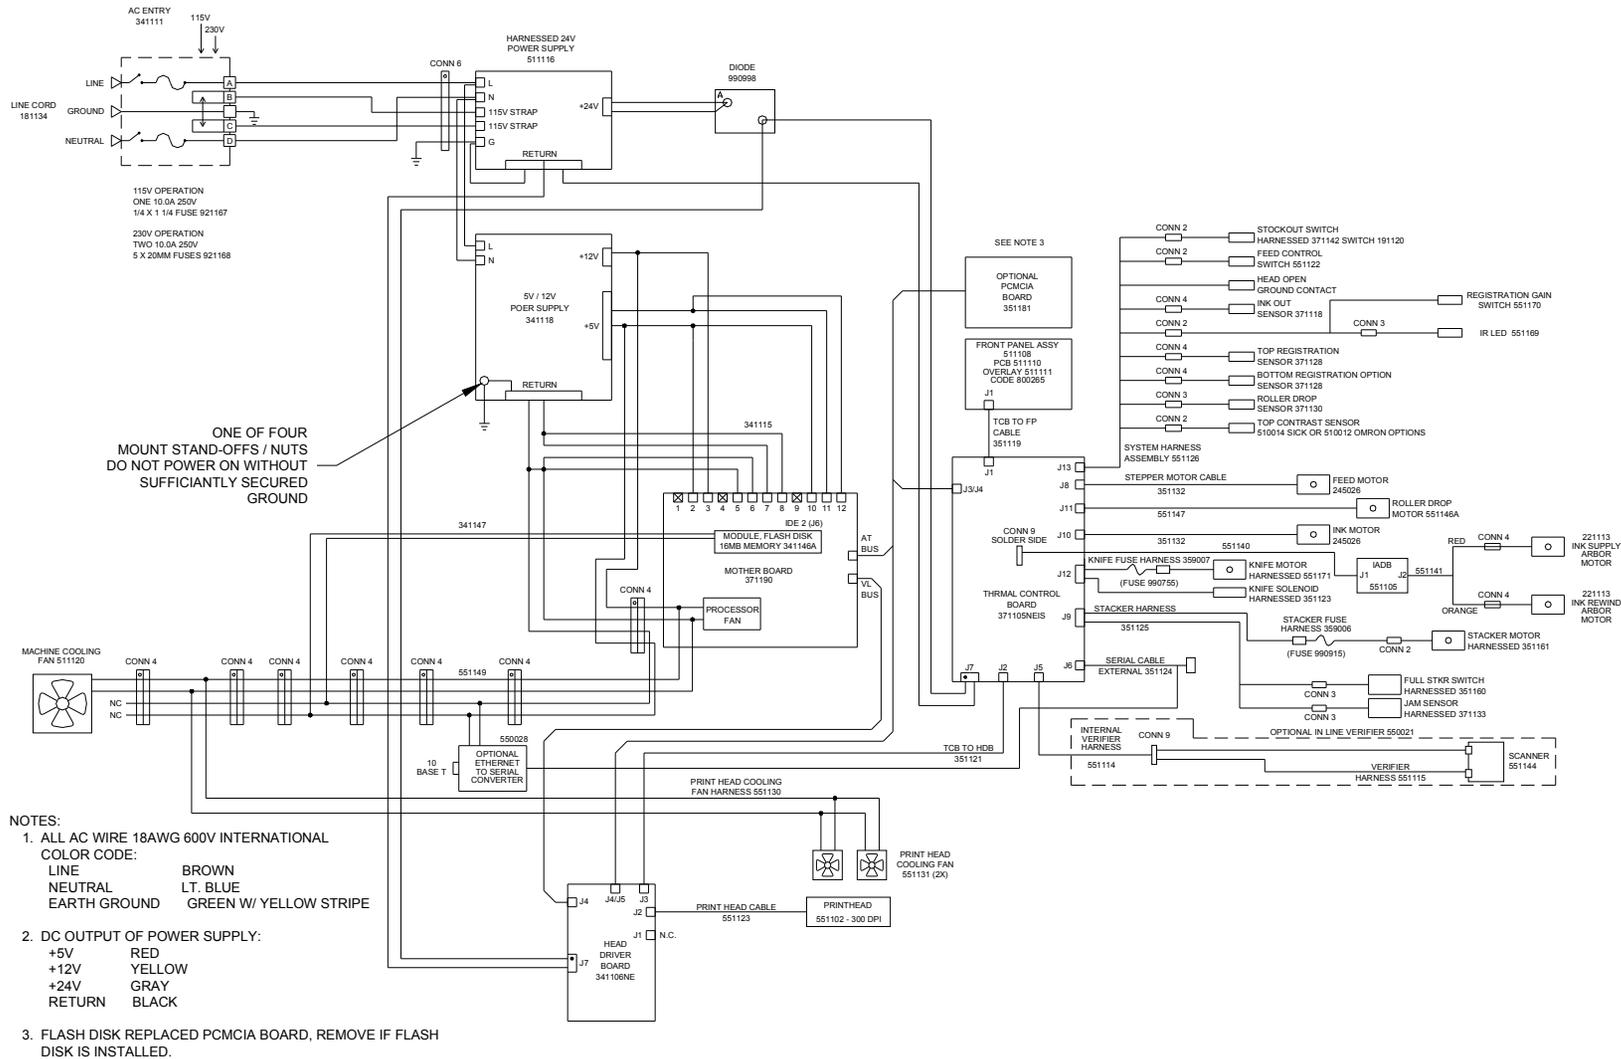


Motherboard Power Connectors

The power supply connector on any PC/XT or PC/AT compatible motherboard is made up of dual six-pin male connectors. Two female connectors from the power supply plug directly onto these male connectors. The following diagrams illustrate the proper method of attaching the connectors.

Ensure that all of the black wires are located next to each other in the center of the two connectors (as shown in the diagram below), and that the clamps on the backside of the connectors are secured along the PCB header. All pins should be covered.

Warning: Connecting the power supply incorrectly may cause irreversible (unwarranted) damage! Ensure that the power is turned off before connecting the power supply. Make certain that the 115 / 230VAC fuse drawer is in the correct position.

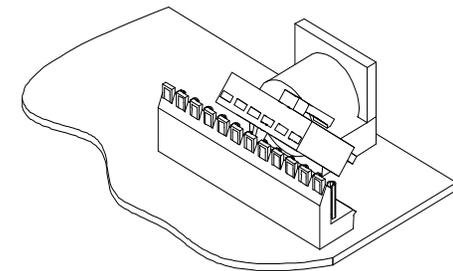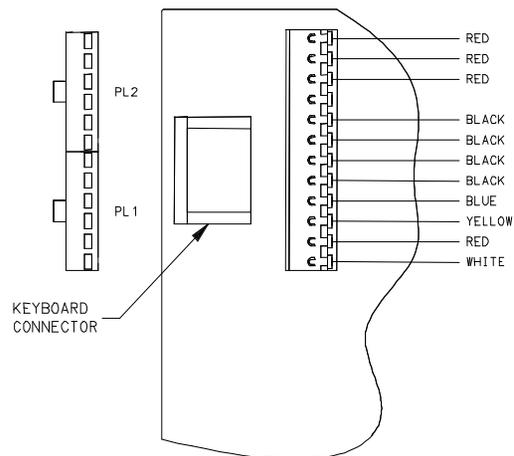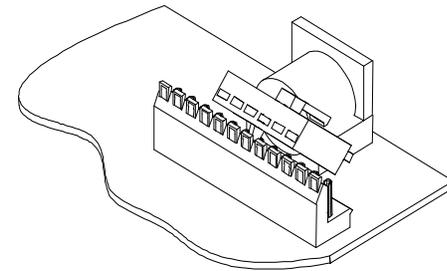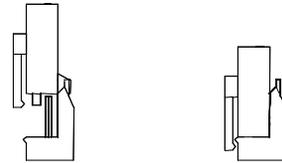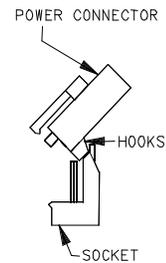


LEFT REAR CORNER OF MOTHER BOARD

Appendix B

Software Upgrade Chip Placement Positions


Head Driver Board P/N 341106NE

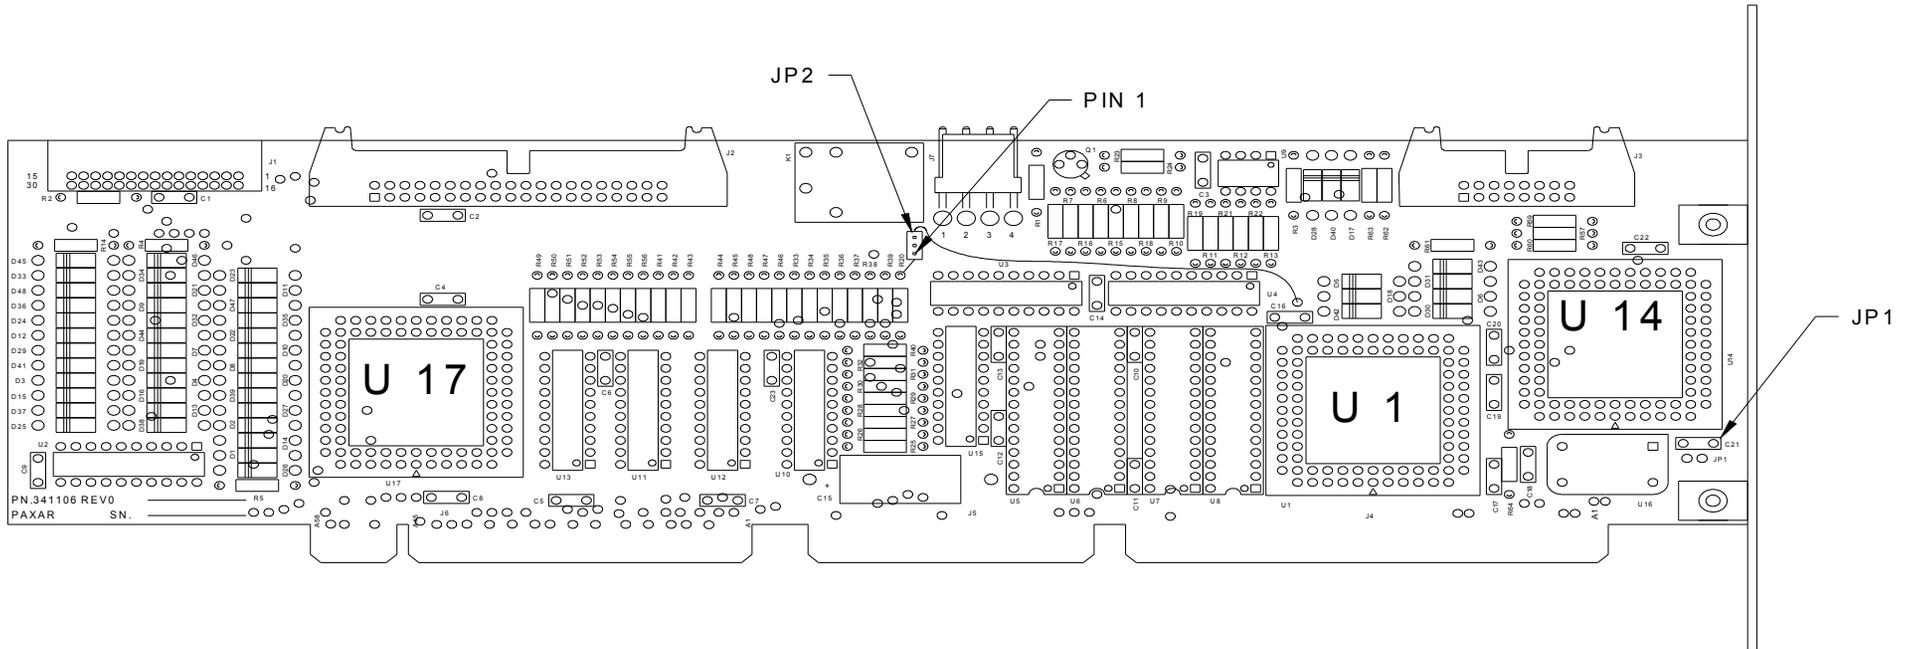

HEAD DRIVER BOARD. Upgradeable software I.C.'s include U1, U14, U17.
 PLCC CHIPS align angled corner of chip with angled corner of socket that is counter clockwise to the arrow.
 (Use chip removal tool P/N. 351156 for square I.C removal)

JUMPER	SETTING
JP1	On = 240DPI Off = 300 DPI
JP2	1 to 2


Thermal Control Board P/N 371105NE

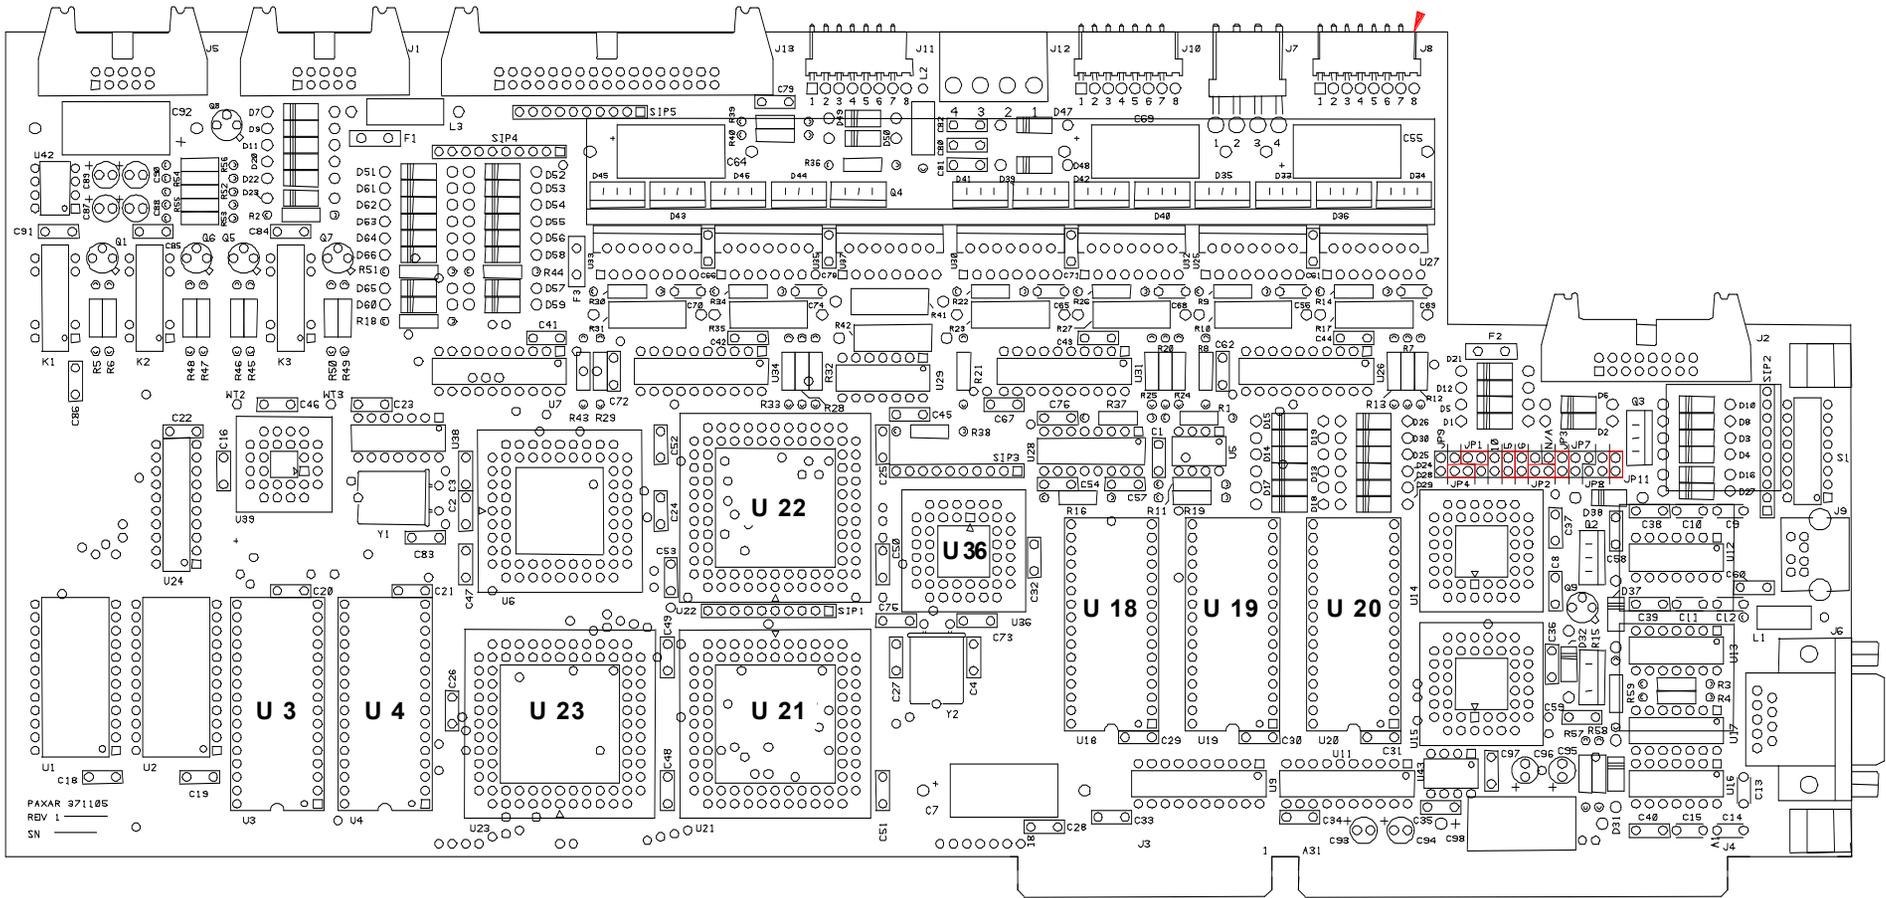

THERMAL CONTROL BOARD. Upgradeable software I.C.'s include U3, U4, U18 - U23, U36.
 PLCC CHIPS align angled corner of chip with angled corner of socket that is counter clockwise to the arrow.
 DIP CHIPS align notch on chip with the notch on the socket (U3 & U4 chips are four pins smaller than U3 & U4 sockets, position chips towards top of socket so that the unused socket pins are at the bottom closest to the notch.

(Use chip removal tool p/n. 351156 for square I.C.'s)

Front Panel Board P/N 511108

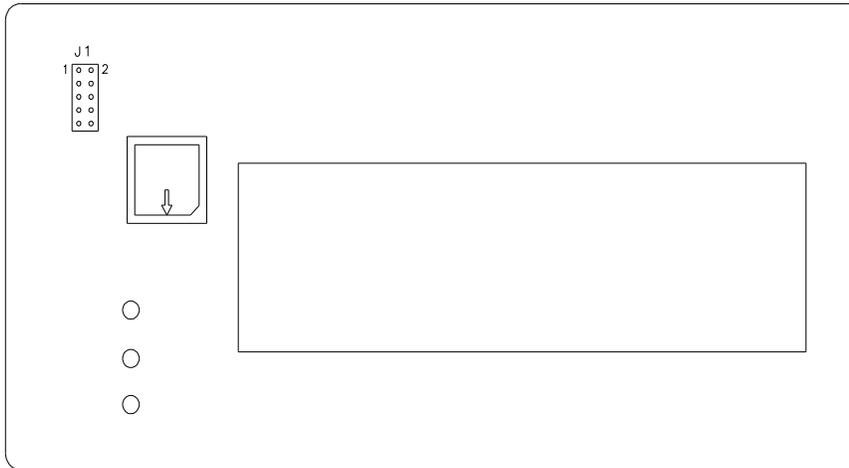

FRONT PANEL BOARD. Upgradeable software I.C.'s include U1.
PLCC CHIPS align angled corner of chip with angled corner of socket that is counter clockwise to the arrow.

(Use chip removal tool p/n. 351156 for square I.C.'s)

Front Panel Diagnostic Descriptions

Diagnostic Numbers	Descriptions
1	Front panel initialization
2	TCB Opsy's initialization
5	Attempting Serial Host Initialization
6	Initializing Verifier
7	Executing Protected Mode Imaging Code
8	Checking Flash Disk Module
9	Attempting to read in scalable fonts.
10	Initializing Font Scaler
11	Attempting to load code pages
12	Attempting to read in logos
13	Attempting to read in care symbols
14	Waiting for Machine Definition from TCB
15	Attempting to create test pattern
16	Attempting to create strobe tables
17	Attempting to read in formats
18	Protected Mode Imaging Code initialization complete
19	Serial Communications Activated
0	Power up complete

Appendix C

Ink and Stock Transfer Types

Transfer Type values associated with the XT commands.


Value	Transfer Type
201	Coated Tag Stock & GN1111
202	Tag Stock A & GN1111
203	Tag Stock B & GN1111
204	Tag Stock C & GN1111
205	Tag Stock D & GN1111

Appendix D

Knife MFG Guideline

Solenoid Trigger Setting

.047 ^{+0.000}
-0.020
FEELER GAUGE

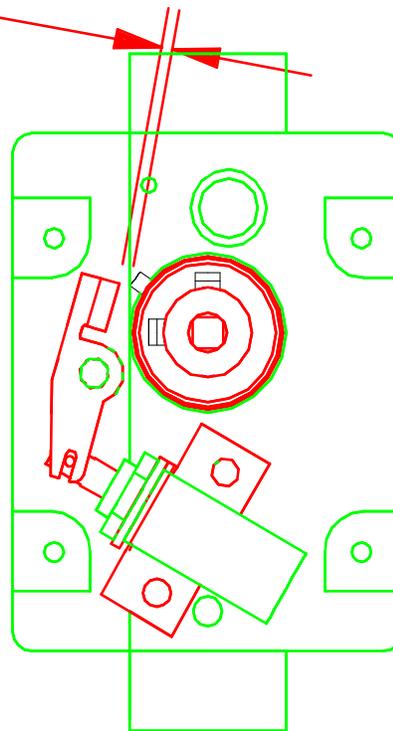


1. After the clutch and actuator is mounted to the knife, attach the solenoid assembly to the inside support using two 6-32 x 3/8 cap screws, flat washers, and lock washers. Make sure the plunger moves freely and does not bind. Motor and faceplate must be mounted also.
2. Check the gap between the actuator and the top of the pin on the clutch as shown in drawing. The plunger should be pushed in to make the measurement.


Other hints if there is still a problem:

- If the gap is greater than .047", an old solenoid bracket is being used. Replace (P/N 357003) or slot the bracket.
- If plunger binds, the solenoid is not parallel with the base of the bracket that mounts to the knife support, and / or the actuator slot is bottoming out on the roll pins that are on the plunger. Make adjustment or replace the bracket.


- Torsion Spring should be at an angle of $60\pm 2^\circ$. Lay the spring over the drawing below to see if the spring is made properly.

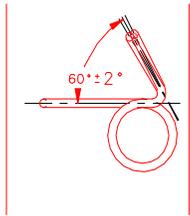


- Plunger pins should be centered on shaft. If either pin is loose **DO NOT** use the plunger. The pins should be checked before installing.

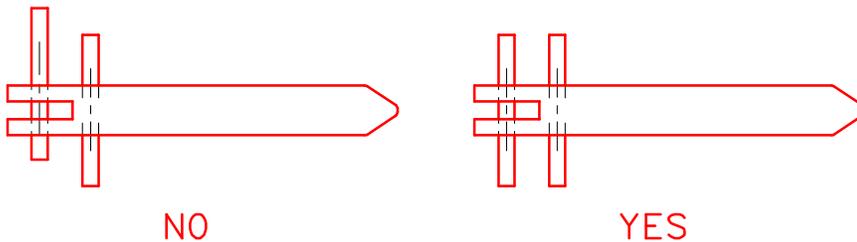

- (Rev 3) Replace both roll pins on all reworked assemblies.
- (Rev 4) Effective 3/3/97 a large nylon washer will be added **between the coil pin and the c-clip on the plunger**. To install, the c-clip has to be removed, then put the large washer on the plunger and push it down against the coil pin. While holding it in that location, re-install the c-clip. Now the Small nylon washer and spring can be put on the plunger and inserted into the solenoid.

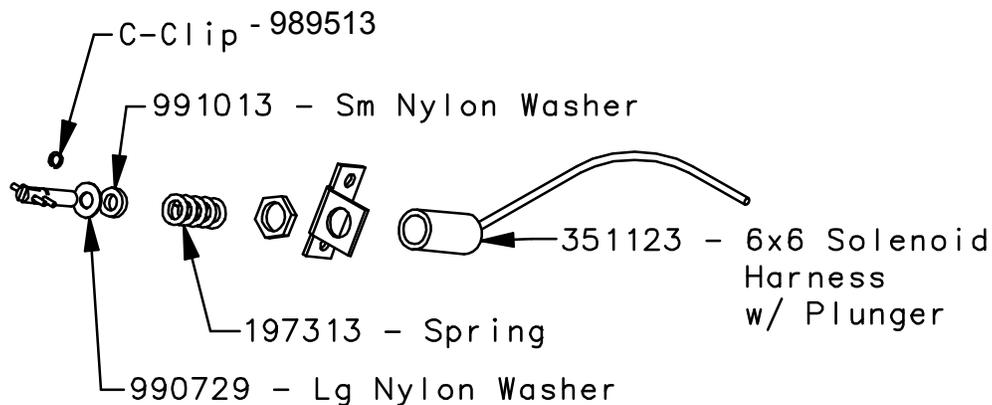

- There should be a .010-.020 gap (for roller clutch only) between the two clutch pieces.

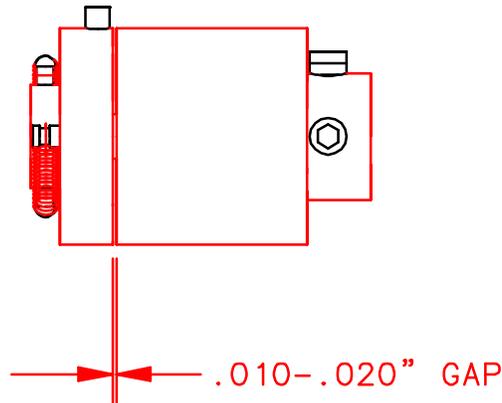

- (Test on the solenoid test box.) The knife must cut both fabric and card stock. The solenoid should operate on both the high and low settings.
- Excessive motor drag must be minimal at start / stop and while running. Replace or repair problem component. On old knife assemblies, there are bronze bushings in outer support. They may be causing a bind. Ream bushing and retest. (Do not ream if it is a roller bearing.)
- (Rev 1) Pre-load setting adjustment. While motor is running, not while cutting, loosen set screws on “Pac-man” and rotate the rotary blade clockwise, mark the stopping position on the “Pac-man”, rotate counterclockwise, mark the “Pac-man”, then rotate the blade to the middle of the two marks and tighten the set screws.
- (Rev 2) All new knife assemblies have a blue clutch. The clutch outer race bushing has an I.D. of .500 and the 2 extension springs are .012-dia wire.
- (Rev 2) The 2 extension springs on all rebuilt clutches must have the .009 Dia. wire springs replaced with .012 wire springs.
- (Rev 5) Replace Knife Actuator 357020, if it is worn or if there is a “bulge” at the 90-degree bend.
- (Rev 6) Changed feeler gauge tolerance from .047 MIN

Appendix E

Printhead Life Extension


Matching stock and ink widths

If you're running multiple media and multiple widths on your AVERY DENNISON machine, Great! You are taking advantage of one the most compelling features of our printers: multimedia capability. Our printers can also reduce the width of the ink to only that area being printed. However, we run into printhead problems when customers combine both these features.

The edge of the narrower stock not covered by the ink will gouge the printhead and cause dots to be out.


Here, the customer will have much shorter printhead life because of the edge of the narrower, uncovered stock.

WRONG!

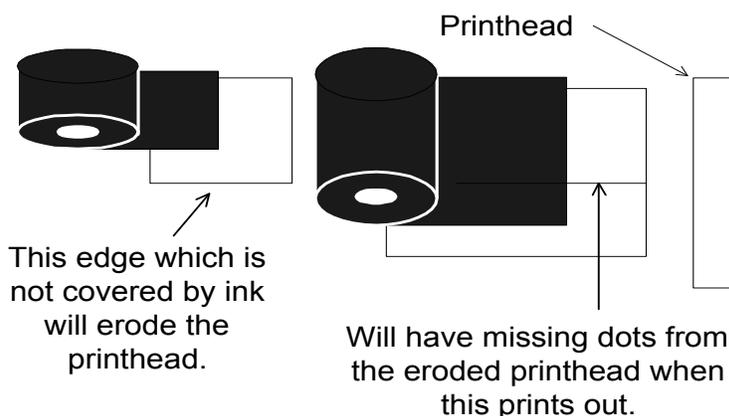

The solution is to make sure that the narrower stocks have at **least 1/8"** of ink coverage over the edge.

RIGHT!

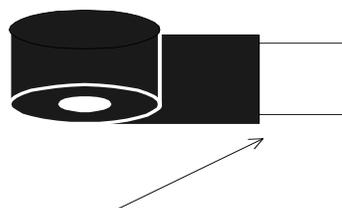

Printhead Fail Modes

Symptoms, Causes, Solutions

Symptom #1: A dot is leaving a line in the print direction. The dot appears to be dragging or failed on, sometimes in the print area, and sometimes not. If in a barcode, the verifier will halt the printer.

Cause: Paper dust or dirt on the printhead causing the ink to print without printhead firing. The dot is NOT failed on. The printhead is DIRTY.

If not addressed immediately: the line will go from black or gray to white and the dot will fail. The printhead will be damaged.



Solution: Immediately stop the printer and clean the printhead in the machine.


If problem continues: Remove the printhead and clean with hard pressure.

Symptom #2: Edges of barcode and text do not appear crisp and sharp.

Cause: Strobe is too high. Printhead is dirty.

Solution: Reduce front panel strobe one increment at a time until fuzzy printing goes away.

If problem continues: Clean the printhead as described below.

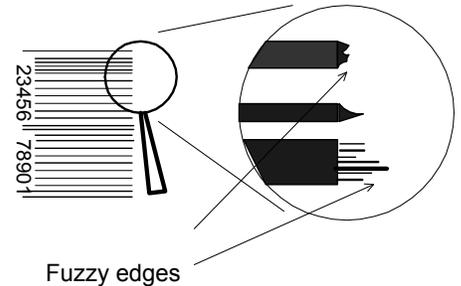

Symptom #3: While printing along fine early in the printheads life (< 300,000 inches), a dot suddenly appears missing. The verifier will halt the machine if the missing dot is in a barcode.

Cause: Most likely, the printhead failed from static.

Solution: Replace the printhead.

If problem continues: Check that the machine has all the static upgrades. Double-check the connections and wires. Check that the AC outlet supplying the printer has a true ground path. AVERY DENNISON printers remove static through the frame and out the ground leg on the AC power cord. If this path does not exist, it will build up in the printer.


Printhead Cleaning Procedure

Printhead performance and life are influenced by proper handling and cleaning.

- Dirt on the printhead that causes problems is often too small to see.
- Exercise care in handling printheads, as they are very susceptible to static. Use the wrist grounding strap and anti-static gloves when handling.
- It is OK to scrub the printhead HARD to clean it. Use rubbing alcohol and the “loop side” or “wool side” of Velcro, followed by drying with rough, brown paper towels.
- If the printhead doesn't work, take it out and clean it again.
- For maximum printhead life, clean the printhead after every roll change of ink or every 20,000 inches.


In Machine Cleaning Procedure

1. Stop the machine after the last batch has printed to avoid losing data.
2. Turn the machine off.
3. Open the printhead carriage assembly.
4. Soak a small amount of rubbing alcohol on a cotton swab and apply to the printhead.
5. Scrub the printhead several times with hard force using the “wool side” of Velcro.
6. Dry the printhead with a dry, brown paper towel.
7. Shut the printhead carriage assembly and resume printing.
8. If a problem continues, remove the printhead and clean it.

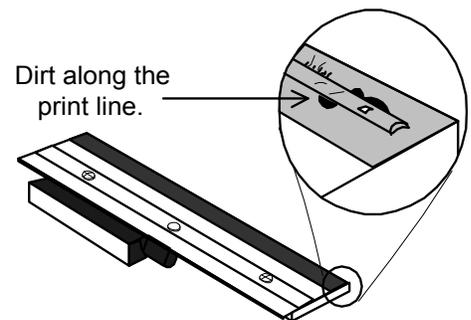

Printhead cleaning when removed from the printer

1. Remove the printhead.
2. Place the printhead upside down on the edge of a clean table with the connector pug over the edge of the table.
3. Soak a small amount of rubbing alcohol on a cotton swab and apply to the print line.
4. Scrub the printhead several times using HARD pressure with the “loop side” of Velcro.
5. Dry with a dry, brown paper towel.
6. Replace the printhead.

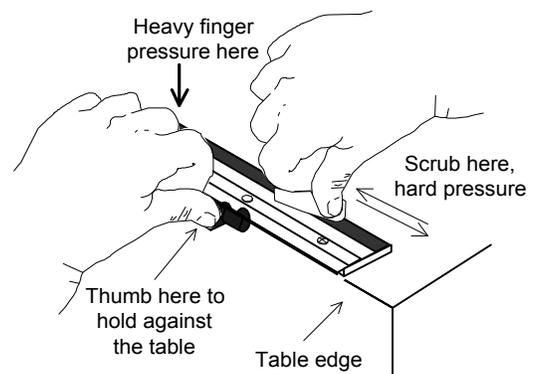

Printhead Installation and Removal Procedures

Printhead removal procedure


1. Attach the grounding strap to your wrist and the printer.
2. Turn the machine off.
3. Leaving the printhead shut, completely loosen the two mount screws but leave them loose in the holes.
4. Slowly open the printhead carriage assembly. Maneuver the printhead down and to the right, pulling the wire pack out.
5. Disconnect the wire pack and carefully remove the printhead.

Printhead installation procedure

1. Position the printhead loosely under the printhead carriage assembly.
2. Connect the wire pack.
3. Position the printhead in the printhead carriage assembly so that the alignment pegs match up and the printhead fits snugly.
4. Tighten the mount screws.


Static Checks for 686 / 686 HT Printers

1. **Stacker:** With an ohmmeter, check continuity between the main stacker roller, which has the belts on it, and the chassis ground. Chassis ground can be any screw near the serial cable. Check that these two important enhancements are functioning:

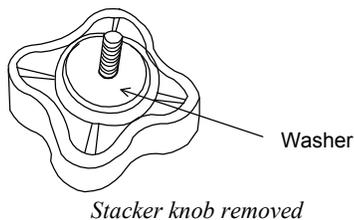


- a) Check the stacker-mounting knob has a large washer installed. Make sure to tighten the knob all the way.

2. **Ink arbors:** With an ohmmeter, check for continuity on the two ink arbors and three ink turn rollers. Place one lead of the ohmmeter on the arbor and the other on the chassis ground screw.

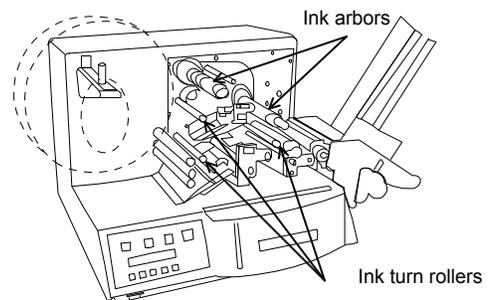

3. **Printhead Static Protections.** Check for proper installation.

- a) **Static Brush.** Make sure the brush is installed and just barely touches the ink. Too much dragging and they wear - too little contact and they don't dissipate the static.

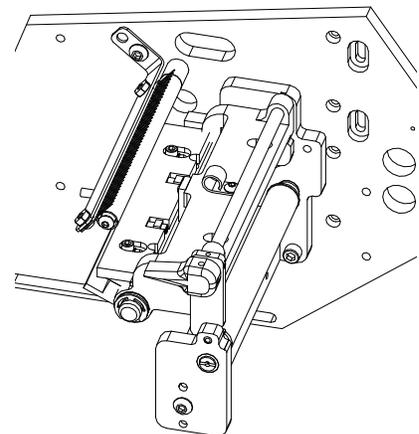


Print Quality Adjustment

1. **Tangent** is factory set and should not be adjusted. Head pressure is fixed without adjustment.
2. **Strobe** - Adjust strobe for print darkness and bar code scanability. Adjust one increment at a time.

Assembly Drawings

Unwind Assembly Drawing

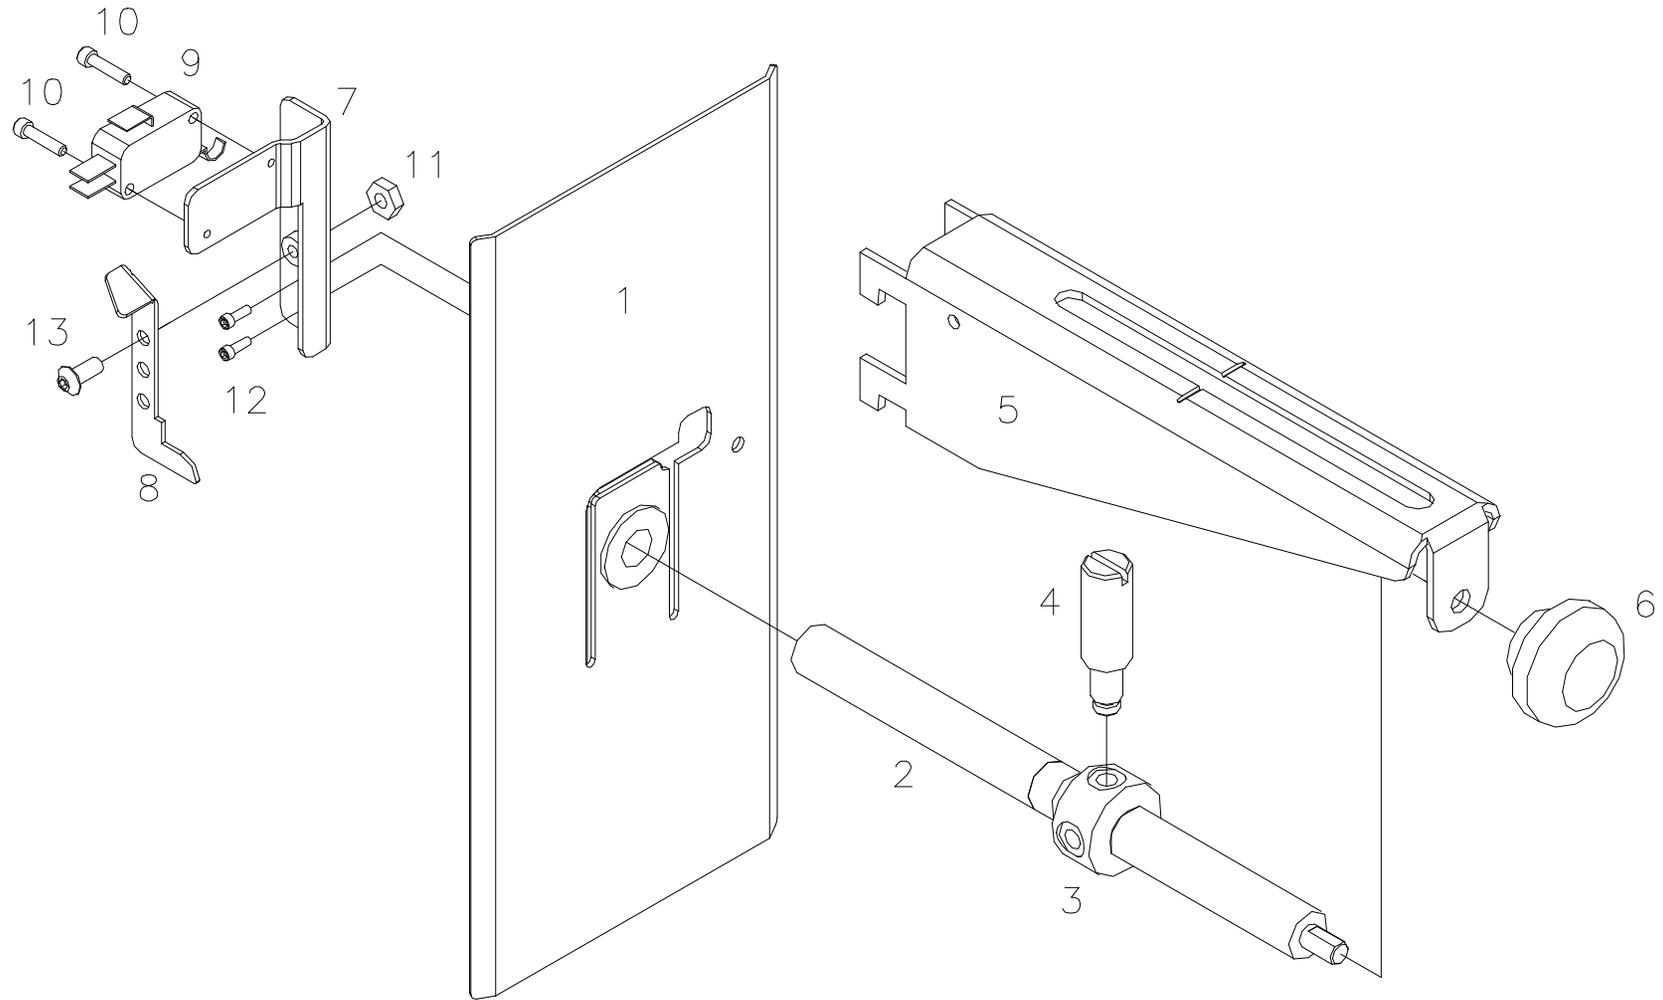


Unwind Parts List

Item	Part #	Description	Qty
1	373012	Web guide, Rear	1
2	373009	Lead screw, Tape unwind	1
3	373011	Adjuster, Outer web guide	1
4	373010	Rod, Web guide, Outer	1
5	353002	Bracket, Unwind	1
6	105023	Impression adj, Knob / SS Kit	1
7	373014	Bracket, Sensor mount	1
8	373013	Bracket, Stock out	1
9	191120	Micro switch	1
10	989973	4-40 x 1/2 Cap screw	2
11	990069	8-32 Hex nut	1
12	990000	2-56 x 1/4 Cap screw	2
13	990065	8-32 x 3/8 Button head screw	1
14	371142	Stock out switch harness (*ns)	1
15	990513	Small wire tie (*ns)	1

(*NS) = Not Shown


Unwind Turnbar Assembly Drawing

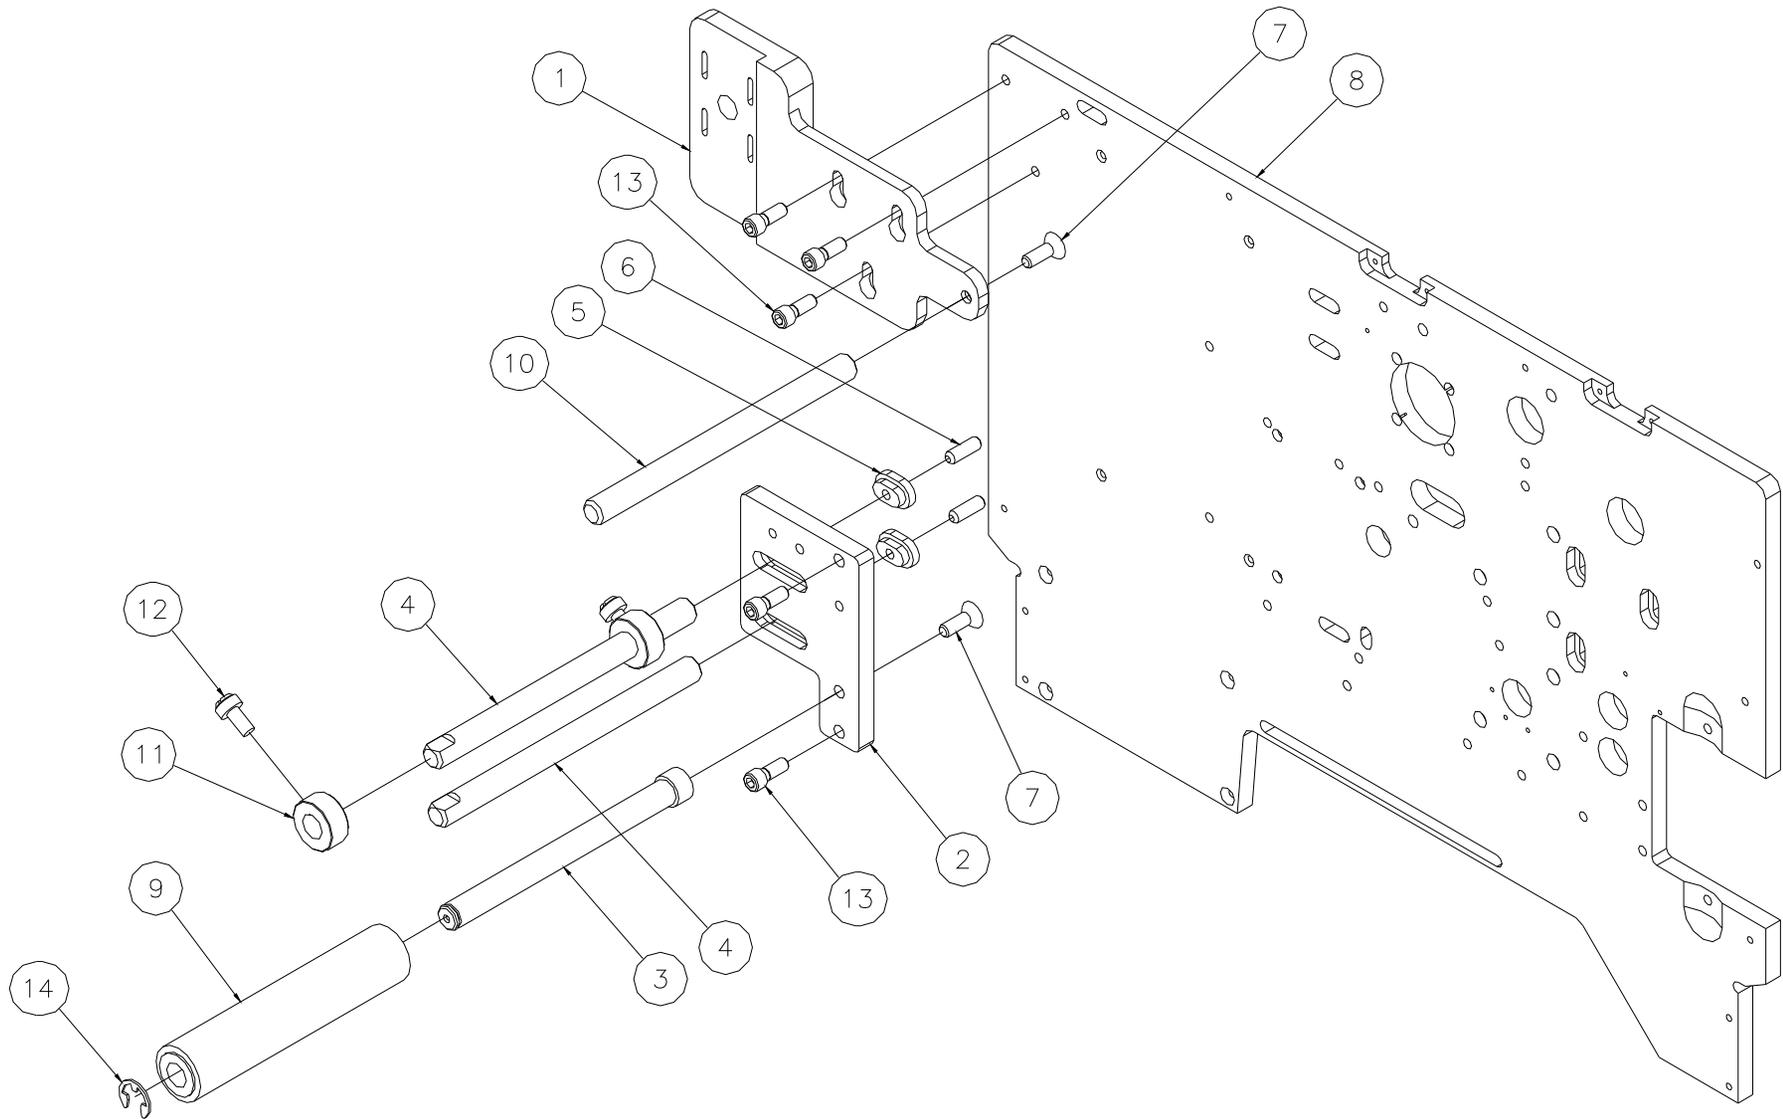

Unwind Turnbar Parts List

Item	Part #	Description	Qty
1	554014	Bracket, Unwind arm mount	1
2	554015	Bracket, Web roller mount	1
3	554017	Shaft, De-curler roller	1
4	554029	Web turn shaft	2
5	554016	Nut, Roller shaft lock	2
6	990138	1/4-20 x 3/4 Knurled cup point	2
7	990133	1/4-20 x 3/4 Flat head screw	2
8	551002	Frame, Upright 686, Ink save	1
9	514090	Assembly, Tape idler roller	1
10	194020	Web turn shaft	1
11	990374	Collar, 1/2	2
12	990484	1/4-20 x 1/2 Nylon slotted screw	2
13	990121	1/4-20 x 5/8 Cap screw	5
14	990328	E-ring, 1/2"	1

Contrast Sensor Assembly Drawing

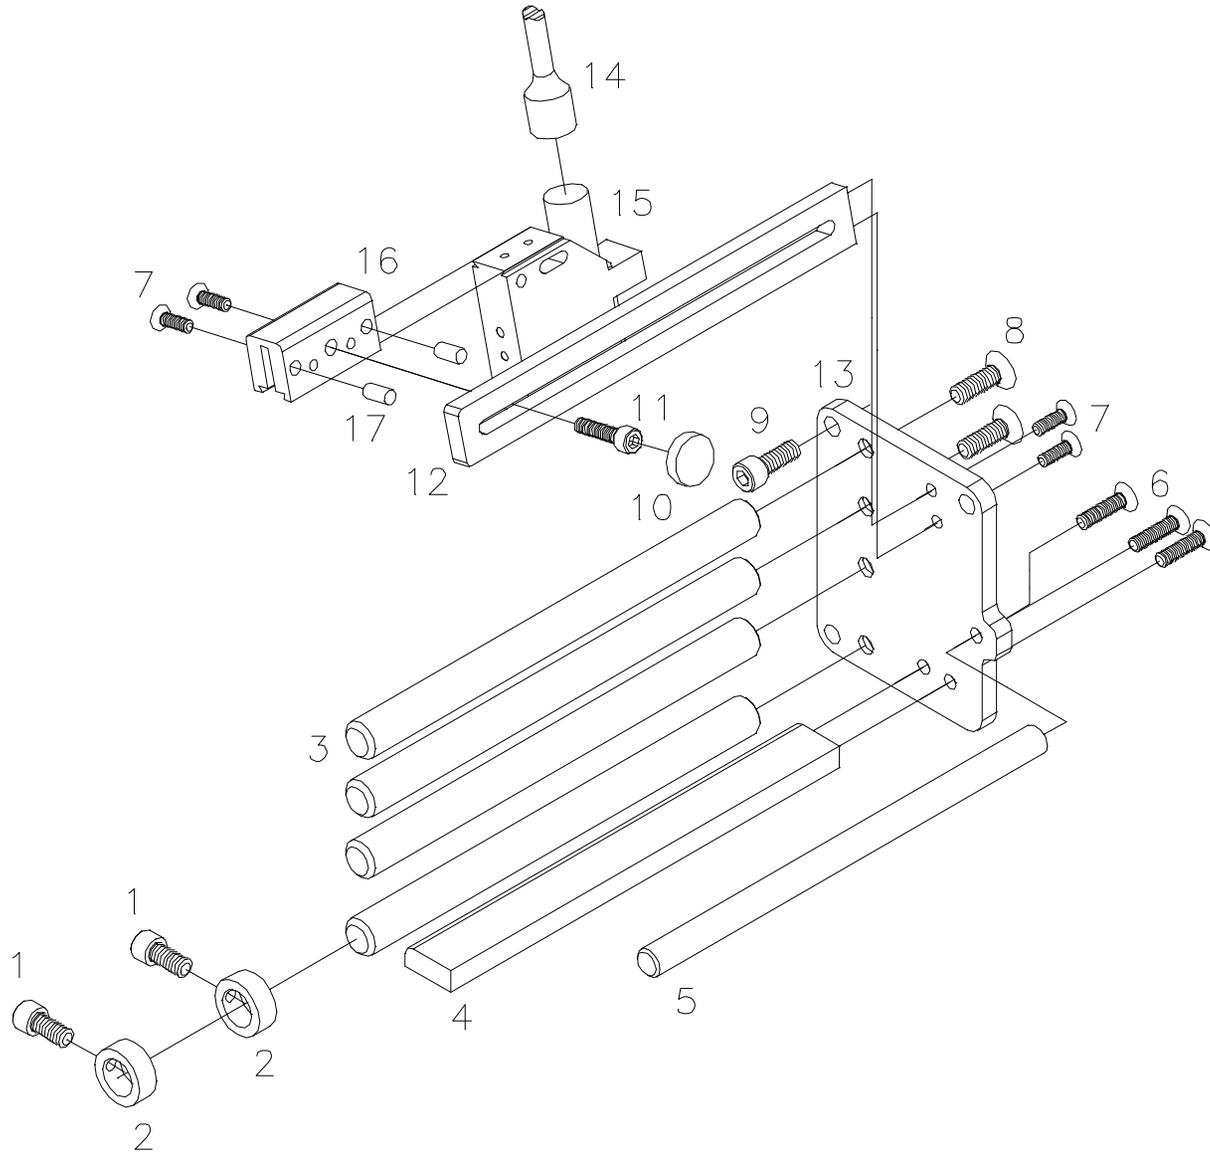


Contrast Sensor Parts List

Item	Part #	Description	Qty
1	990484	1/4-20 x 1/2" Slotted Nylon screw	2
2	990374	1/2" Collar	2
3	194020	Web turn shaft	4
4	514019	Bracket, Sensor guide	1
5	514017	Shaft, Ink turn bar	1
6	990111	10-32 x 3/4" Flat head screw	3
7	990056	8-32 x 1/2" Flat head screw	4
8	990133	1/4-20 x 3/4" Flat head screw	5
9	990121	1/4-20 x 5/8" Cap screw	3
10	990313	#10 Thumb screw knob	1

Item	Part #	Description	Qty
11	990083	10-32 x 3/4" Cap screw	1
12	514019	Bracket, Sensor mount	1
13	514016	Bracket, Sensor ass'y	1
14	511112	Cable, Contrast sensor	1
15	281140	Scanner, Contrast	1
16	514020	Sensor, Mount block	1
17	990268	3/16 x 1/2" Dowel pin	2
	514098	Can Be Ordered As An Assembly	

Web Guide / Sensor Assembly Drawing

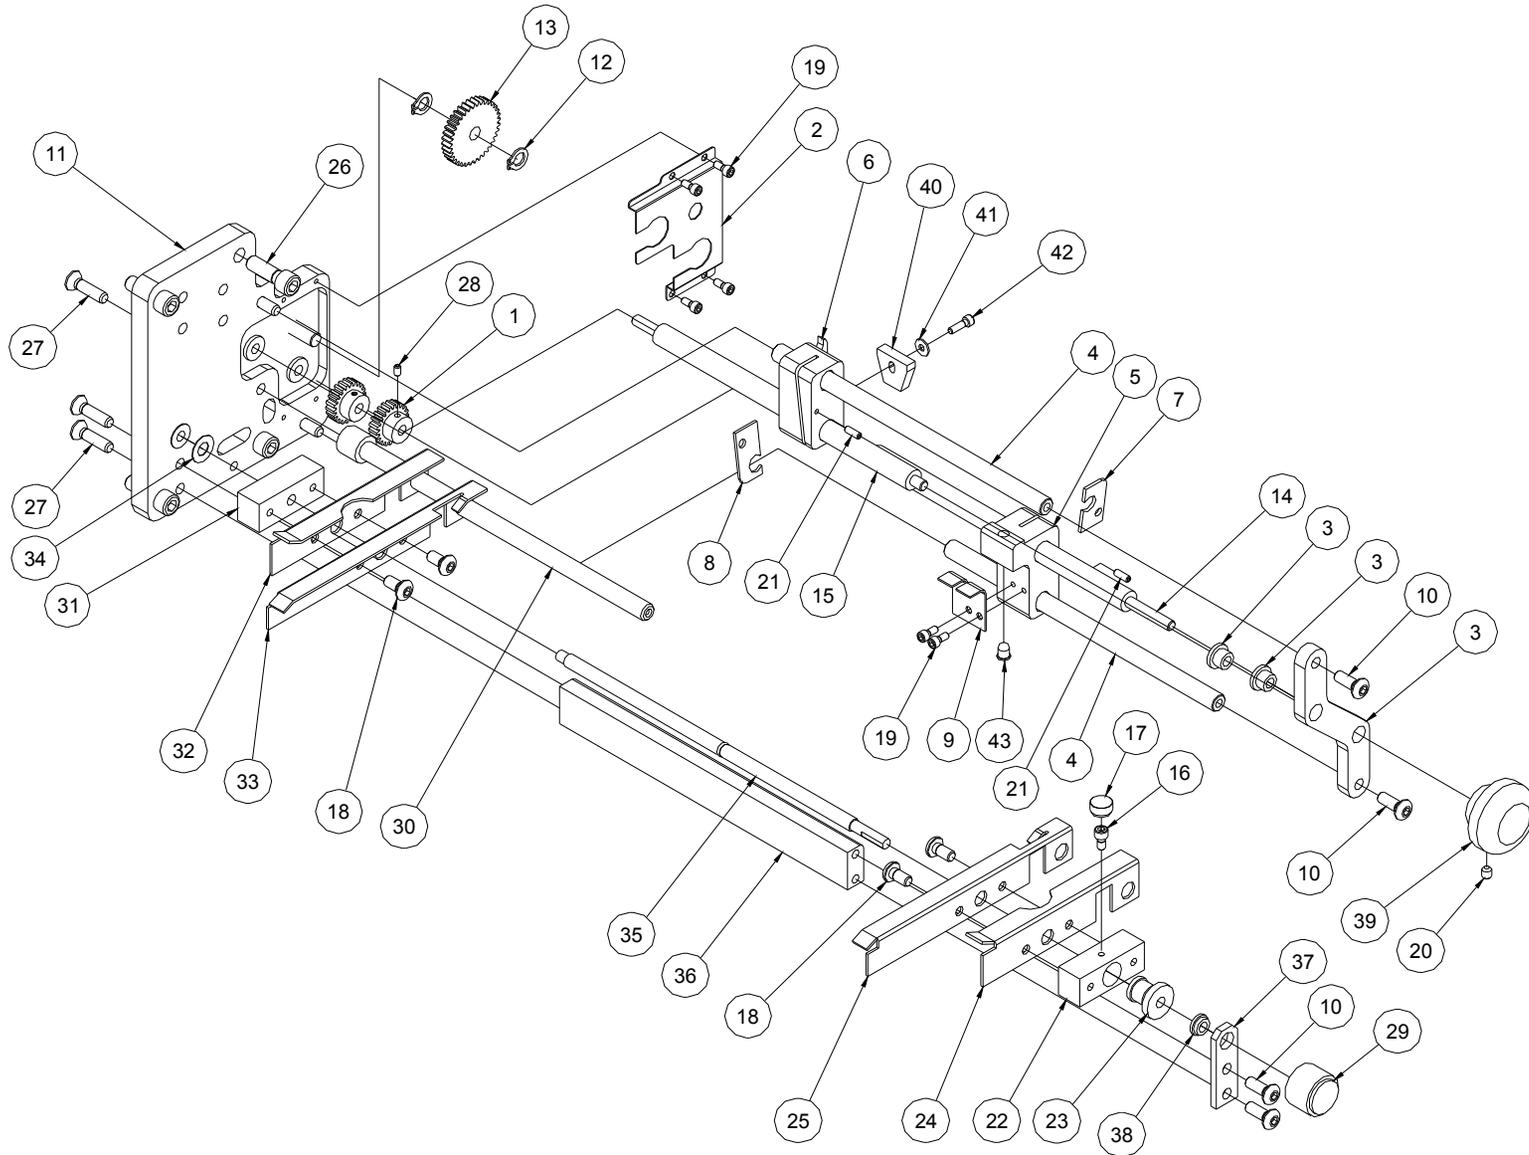


Web Guide / Sensor Parts List

Item	Part #	Description	Qty
1	554064	Drive, Sensor adjust gear	2
2	554057	Cover, Gear cluster	1
3	554088	Assembly, Bracket, Front plate	1
4	554051	Shaft, Sensor adjust	2
5	554053	Bracket, Mount, LED	1
6	554054	Bracket, Mount, Upper sensor	1
7	554055	Nut, Plastic, Lower	1
8	554056	Nut, Plastic, Upper	1
9	554061	Bracket, LED secure	1
10	990091	10-32 x 1/2 Button head screw	4
11	554089	Assembly, Bracket, Web guide	1
12	990262	Snap ring, 1/4"	2
13	554065A	Drive, Gear, Idler, Sensor adj alt	1
14	554058	Shaft, THD rod, Upper	1
15	554059	Shaft, THD rod, Lower	1
16	990015	6-32 x 1/4 Cap screw	1
17	990312	#6 Thumb screw knob	1
18	990090	10-32 x 3/8 Button head screw	4
19	990006	4-40 x 1/4 Cap screw	6
20	990058	8-32 x 1/4 Knurled cup point	1
21	990008	4-40 x 3/8 Knurled cup point	2
22	554006	Bracket, Web guide mount, Front	1

Item	Part #	Description	Qty
23	554005	Drive, Web guide adapter	1
24	554067	Bracket, Front (top) web guide	1
25	554069	Bracket, Front (bottom) web guide	1
26	990122	1/4-20 x 3/4 Cap screw	4
27	990111	10-32 x 3/4 Flat head screw	5
28	990007	4-40 x 1/8 Knurled cup point	2
29	196028	Adj knob / SS - Plain black	1
30	554009	Shaft, Web guide	1
31	554004	Bracket, Web guide mount	1
32	554066	Bracket, Back (top) web guide	1
33	554068	Bracket, Back (bottom) web guide	1
34	990274	Washer, 1/4" Belleville	1
35	554003	Shaft, Web guide adjust	1
36	554002	Bracket, Web adjust rod	1
37	554007	Bracket, Web guide support	1
38	999100	Bushing, FL 3/16 x 5/16 x 1/8	1
39	105023	K**Impression adj. Knob	1
40	371128	Top & bottom reflective sensor harness	1
41	990448	Washer, .125 x .313 x .031 FL	1
42	990424	4-40 x 3/8 Cap screw	1
43	551169	Sensor, IR LED wired	1


Drive Assembly Drawing

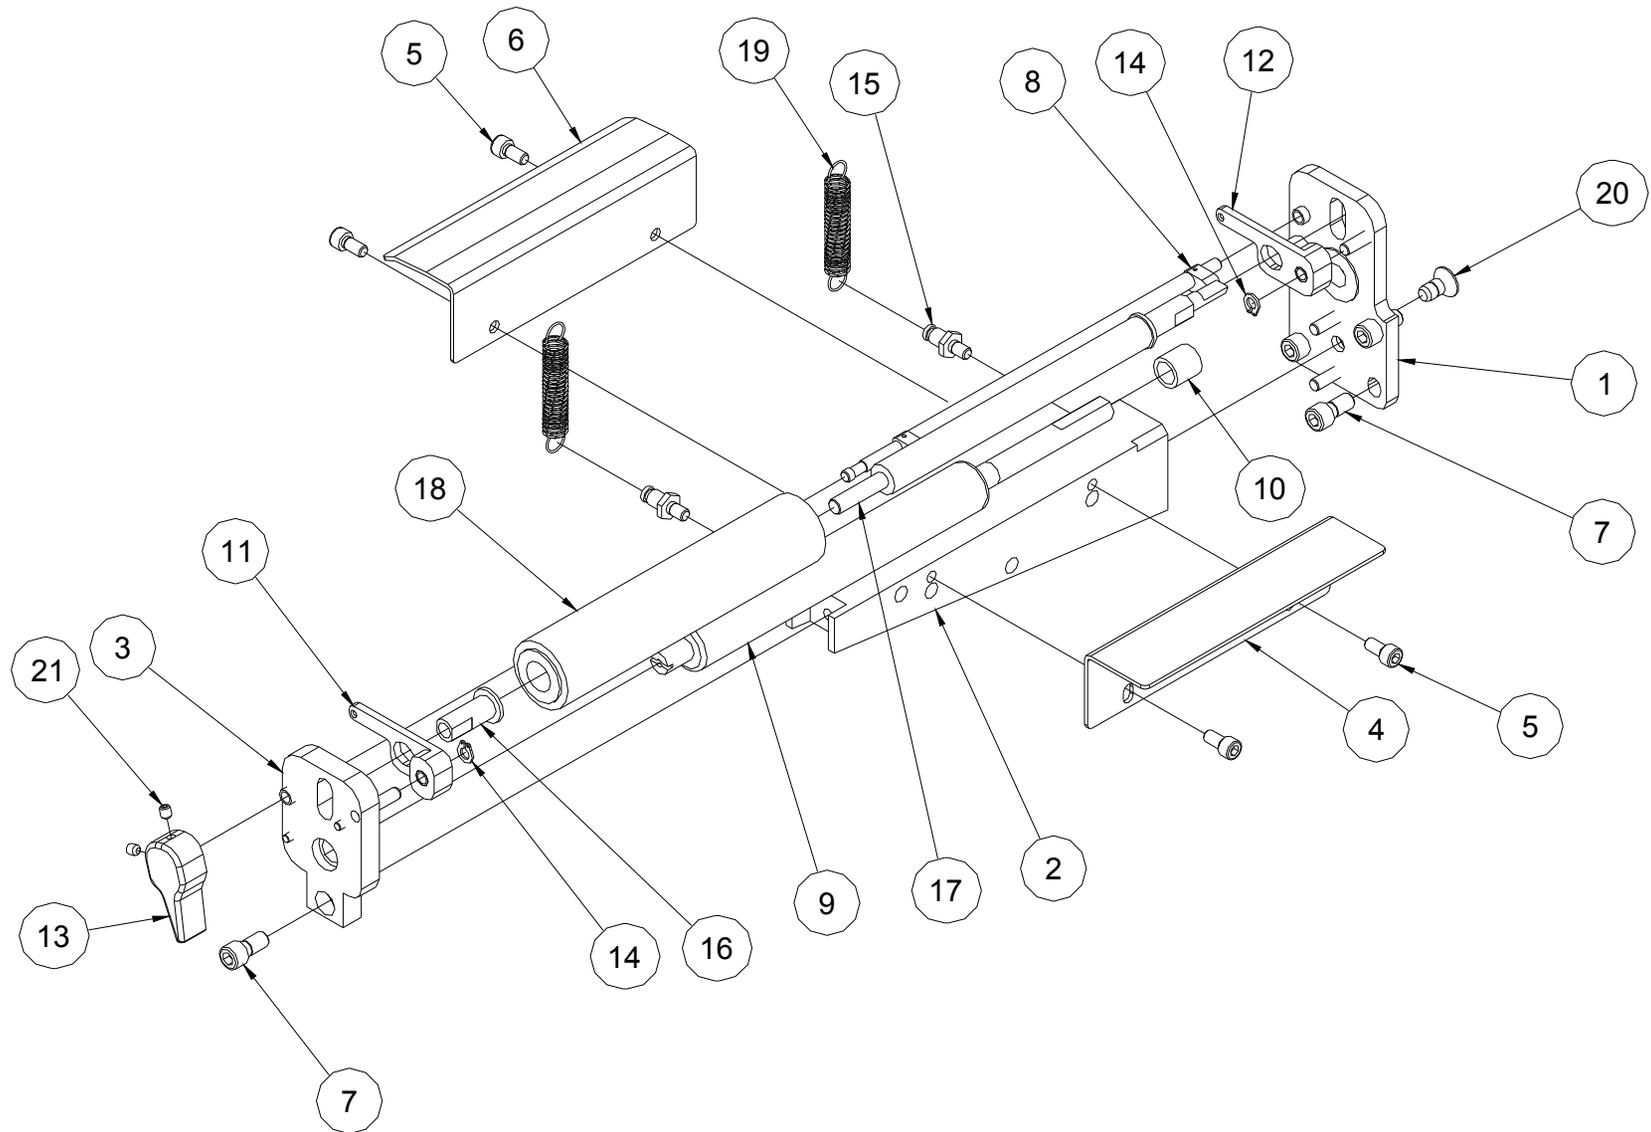

Drive Parts List

Item	Part #	Description	Qty
1	554099	Ass'y, Rear drive support	1
2	355018	Support, Knife / Drive / Print	1
3	554098	Ass'y, Front drive support	1
4	554042	Bracket, Right bridge blade	1
5	990080	10-32 x 3/8 Cap screw	4
6	554041	Bracket, Bridge plate (Web) center	1
7	990120	1/4-20 x 1/2 Cap screw	5
8	514094	Ass'y, Lift cam	1
9	354012	Roller, Grit	1
10	999146	Bushing, 3/8 x 1/2 x 1/2	1
11	514009K	Spring lever, Front	1
12	514010K	Spring lever, Rear	1
13	514012	Feed knob / SS	1
14	990261	Snap ring, 3/16	2
15	514003	Pin, Spring anchor	2
16	514002	Sleeve, Idler shaft	1
17	514001	Shaft, Idler roller	1
18	514090	Tape roller idler, Molded	1
19	991085	Extension spring	2
20	990416	1/4-20 x 1/2 Flat head screw	1
21	990058	8-32 x 1/4 Knurled cup point	2

Printhead Assembly Drawing

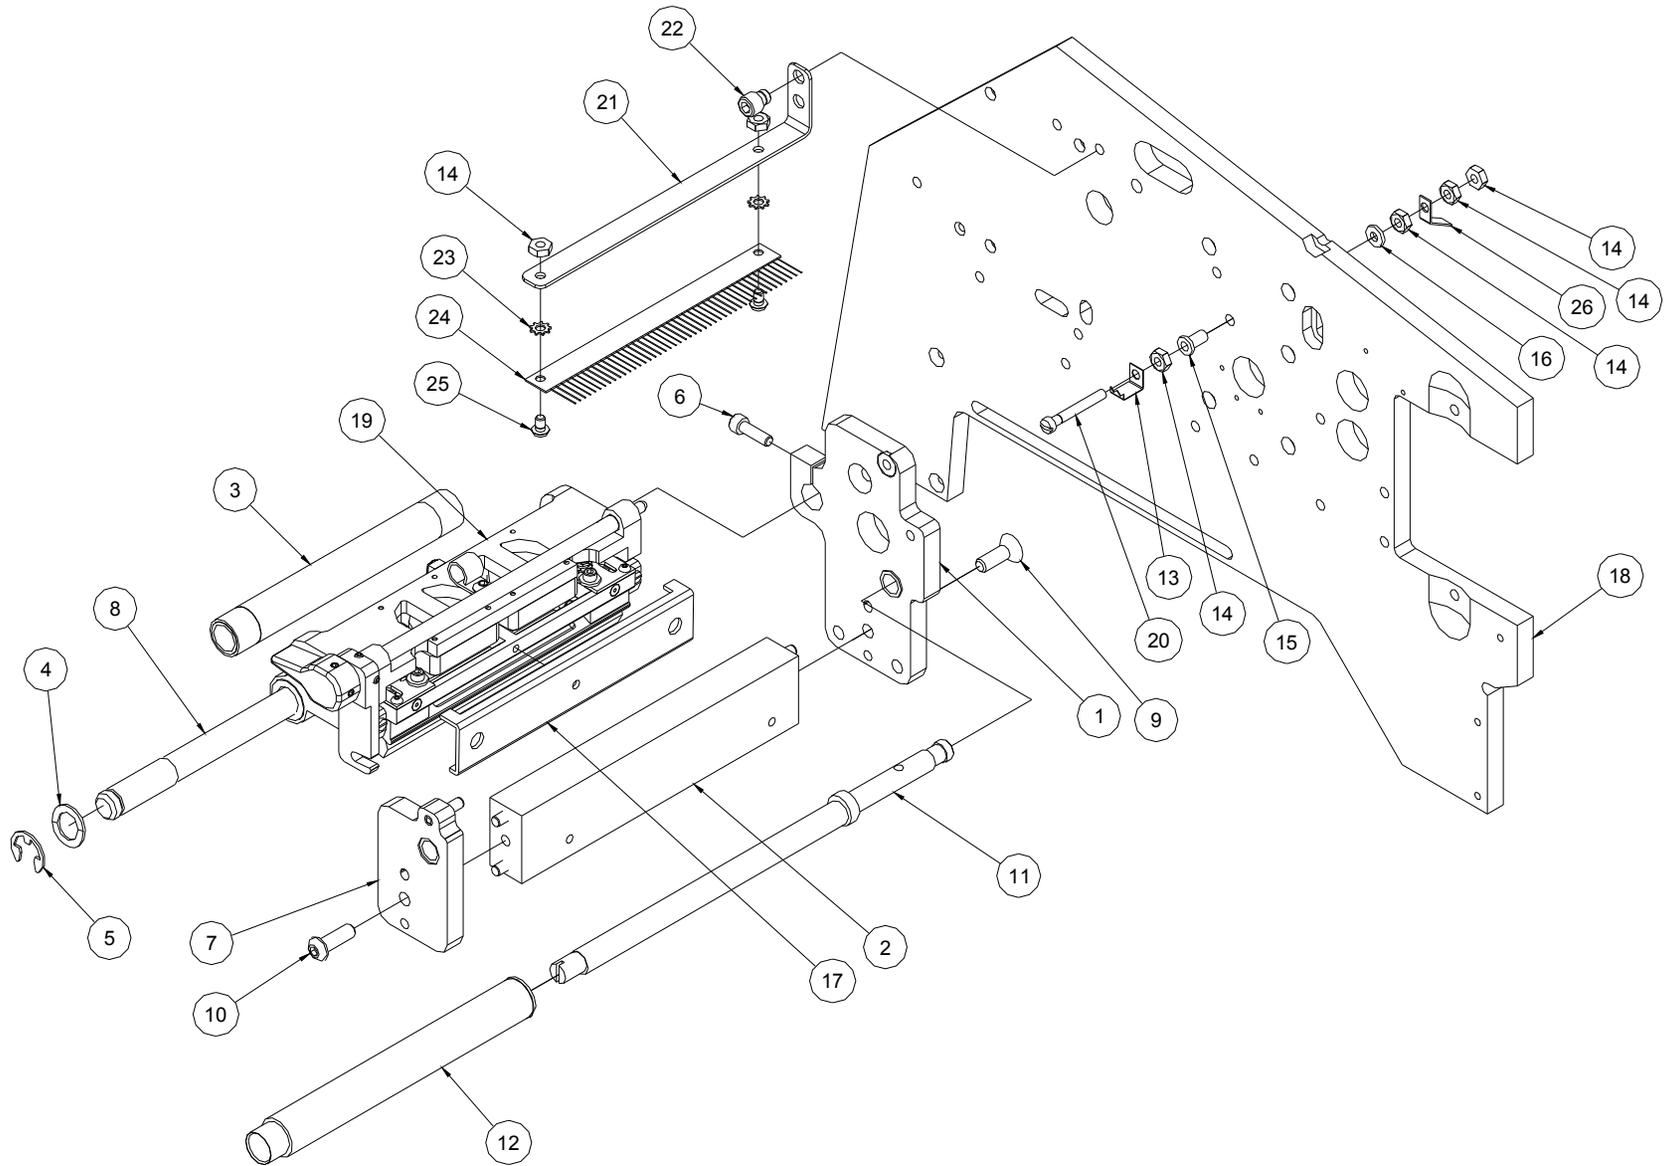


Printhead Parts List

Item	Part #	Description	Qty
1	555099	Ass'y, Rear support, Print head	1
2	375085	Ass'y, Support beam, Print head	1
3	376032	Ass'y, Ink turn roller	1
4	990497	Washer, 1/2 Wave	1
5	990328	E-ring, 1/2	1
6	990083	10-32 x 3/4 Cap screw	1
7	555098	Ass'y, Front support, Print head	1
8	375014	Shaft, Head mount	1
9	990133	1/4-20 x 3/4 Flat head screw	1
10	990135	1/4-20 x 3/4 Button head screw	1
11	555017	Shaft, Eccentric 686 ink save	1
12	355096	Ass'y, Print head roller	1
13	375057	Contact, Ground	1

Item	Part #	Description	Qty
14	990069	Nut #8	6
15	990500	Bushing, Nylon	1
16	990723	Washer#8, Nylon	1
17	555041	Bracket, Print head adjust	1
18	551001	Frame, Upright	1
19	555096K	Kit, Ass'y print head, 686 printer	1
20	990071	#8-32 x 1 1/4 FH machine screw	1
21	516001	Bracket, Static brush ink	1
22	990118	1/4-20 x 1/4 Cap screw	1
23	989978	Washer, #8 Star	2
24	355039	Static brush	1
25	990066	8-32 x 1/4 Button head screw	2
26	375019	Ring terminal, Male connector	1

Printhead Module Assembly Drawing

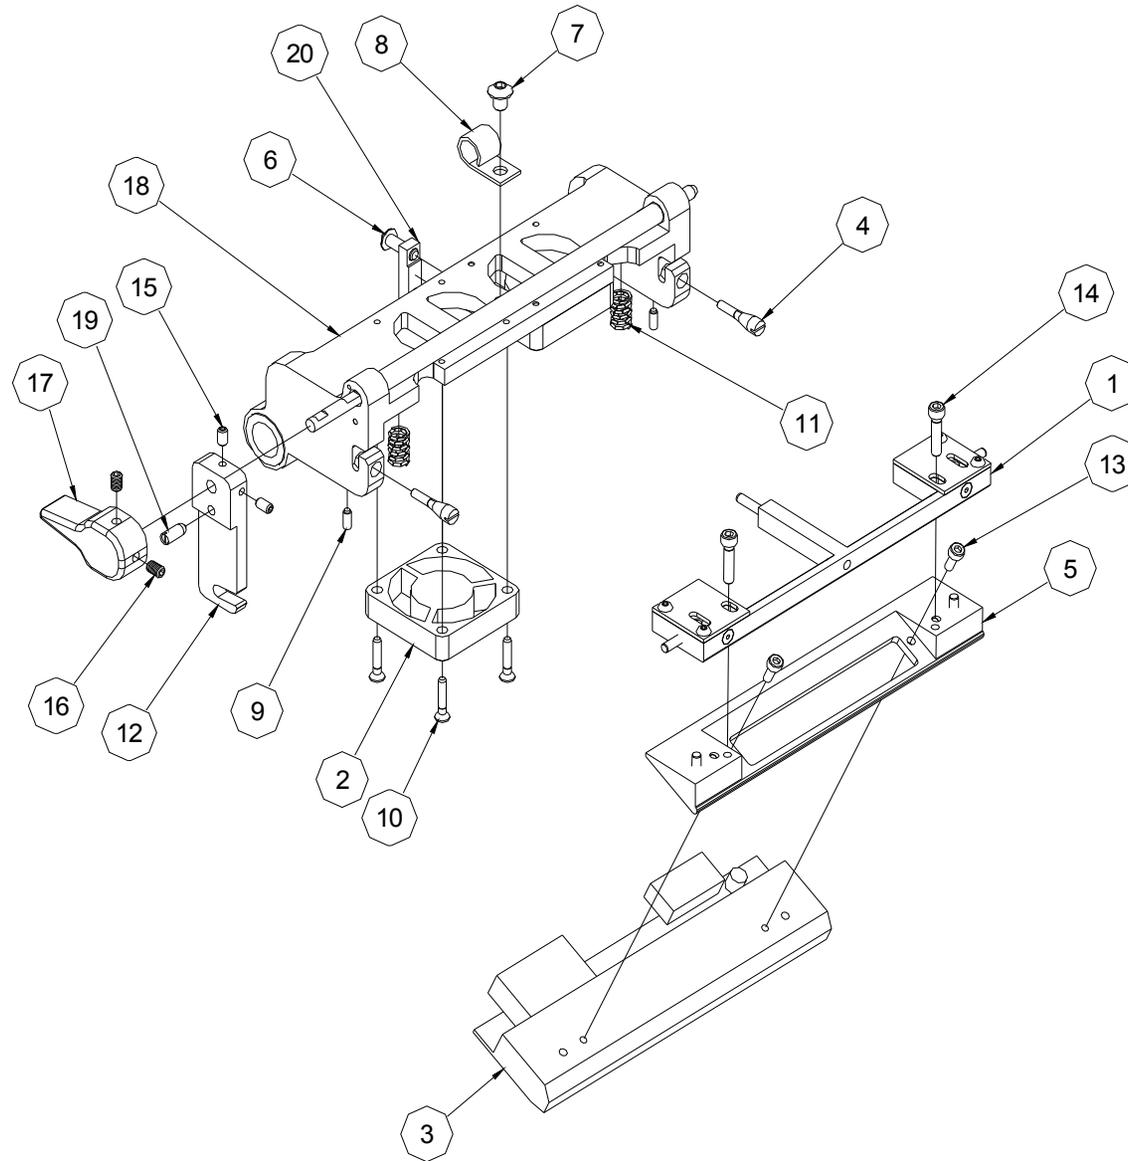


Printhead Module Parts List

Item	Part #	Description	Qty
1	555030	Ass'y, Print head adjust	1
2	551131	Fan, Print head, Harnessed	2
3	551102	Print head (For references)	1
4	555034	Screw, Adjust	2
5	555032	Assy. Print head mount	1
6	990073	8-32 x 1/2 B.H.C. Screw	1
7	990089	10-32 x 1/4 B.H.C. Screw	1
8	990919	Bracket, Cable mount	1
9	991329	4-40 x 1/4 Set screw w/ Nylon	2
10	991308	4-40 x 5/8 F.H.C. Screw	8

Item	Part #	Description	Qty
11	991331	Compression spring	2
12	555006	Bracket, Lock	1
13	991287	M3 x 8mm Cap screw	2
14	991333	6-32 x 5/8 S.H.C. Screw	2
15	990025	6-32 x 1/4 Set screw	2
16	990058	8-32 x 1/4 Set screw	2
17	514012	Knob, Head lift	1
18	555087	Ass'y, Print head holder, 686	1
19	999092	Stubby spring plunger	1
20	555014	Bracket, Rear head mount	1


Printhead Adjustment Assembly Drawing

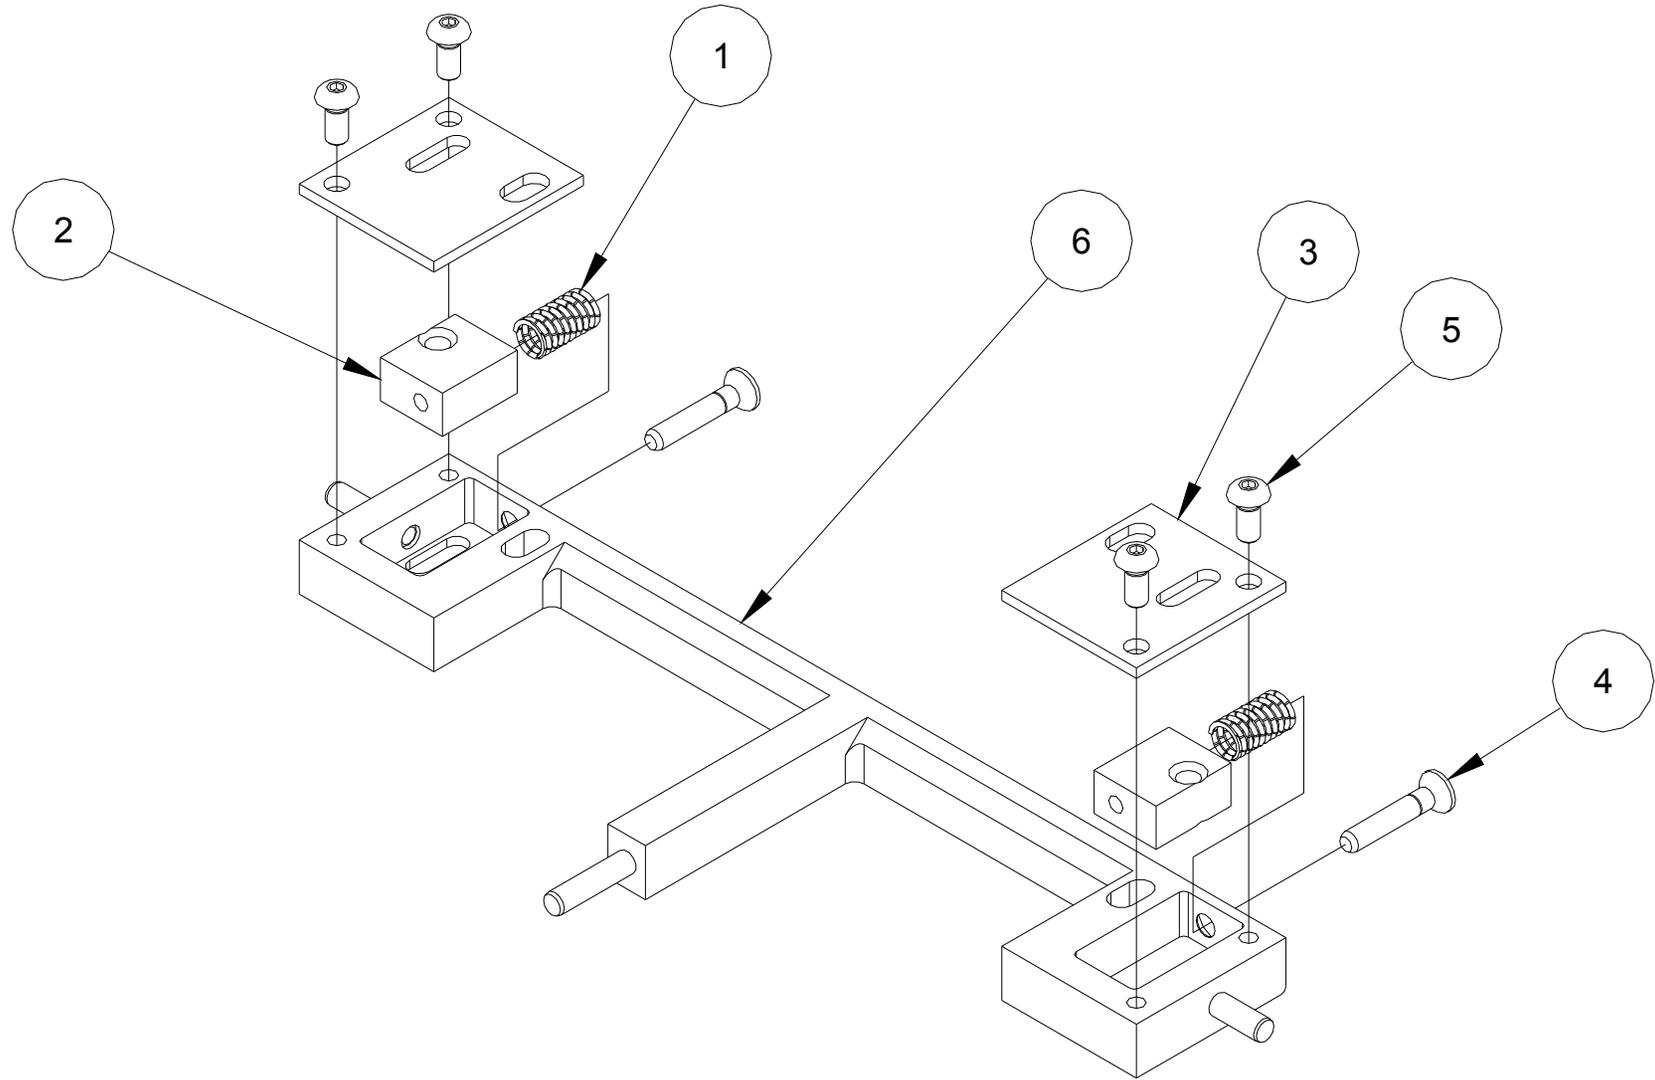

Printhead Adjustment Parts List

Item	Part #	Description	Qty
1	991217	Spring, Compression	2
2	555037	Block, Slide	2
3	555038	Cover, Plate	2
4	991326	4-40 x 3/4 Flat head screw	2
5	989983	4-40 x 1/4 Button head screw	4
6	555086	Ass'y, Bracket, Head adjust	1

Ink Drive 686HT Assembly

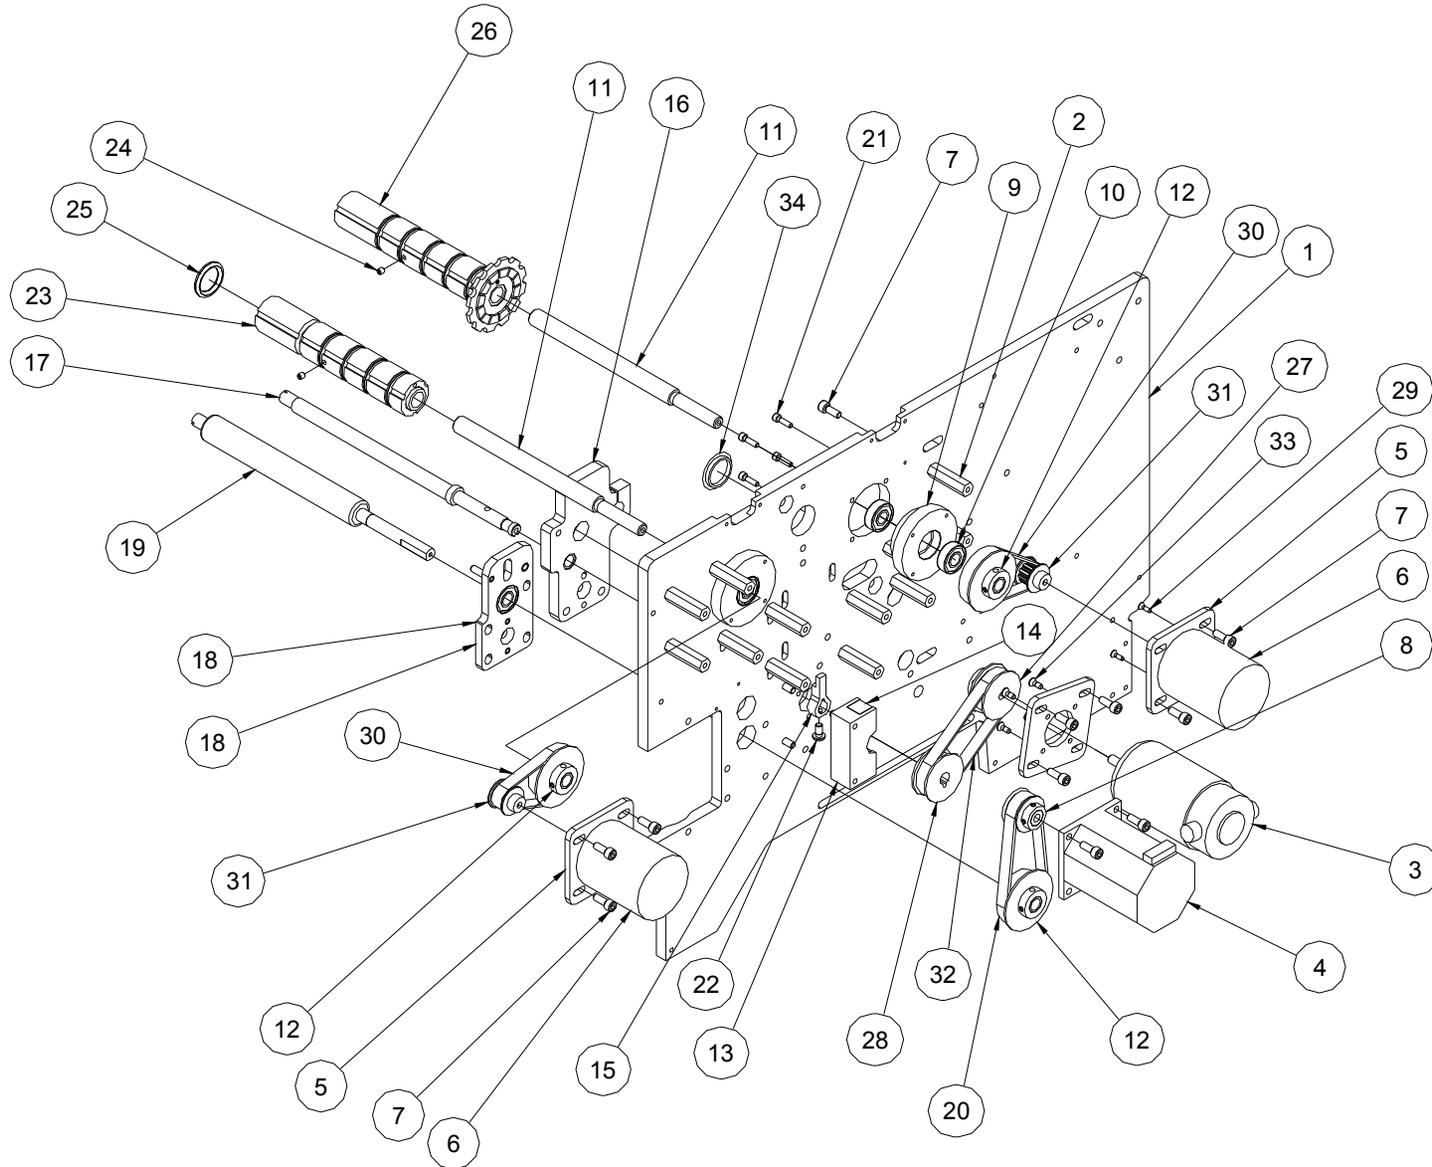


Ink Drive 686HT Parts List

Item	Part #	Description	Qty
1	551002	Frame, 686 Upright ink save	1
2	194023	Standoff, 1-3/8"	12
3	551146A	Motor, Ink save, Alt	1
4	245026	Stepper motor	1
5	554048	Bracket, Motor mount	3
6	221110	Motor, 24VDC 90ZIN 3100RPM	2
7	990081	10-32 x 1/2 Cap screw	26
8	284025	Pulley, 14T DFL 1/4 ID	1
9	554049	Housing, Bearing	2
10	999001	Bearing, R6FF	4
11	376035	Shaft, Unwind	2
12	356029	Pulley 26T 1/5P	3
13	555018	Print, Block, Eccentric stop	1
14	555020	Bumper, Sound barrier	2
15	555019	Bracket, Eccentric stop	1
16	555099	Ass'y, Rear support, Printhead	1
17	555017	Shaft, Eccentric 686 Ink save	1

Item	Part #	Description	Qty
18	554099	Ass'y, Rear support drive	1
19	354012	Roller, Grit (main drive)	1
20	991145	Drive, 48T Timing belt	1
21	990017	6-32 x 1/2 Cap screw	8
22	990090	10-32 x 3/8 Button head screw	1
23	556096	Ass'y, Ink arbor, Rewind	1
24	990058	8-32 x 1/4 Knurled cup point	2
25	990355	O-ring, 3/4	10
26	556095	Ass'y, Ink arbor, Unwind	1
27	991392	Pulley, 20T w/ Hub	1
28	555044	Pulley, 20T	1
29	989964	4-40 x 3/8 Flat head screw	8
30	991390	Timing belt, 37T	2
31	991391	Pulley, 10T	2
32	991393	Timing belt, 49T	1
33	990028	#6-32 x 3/8 F.H. Cap screw	4
34	991504	Hole plug, 15/16 ID	1

Ink Save Assembly

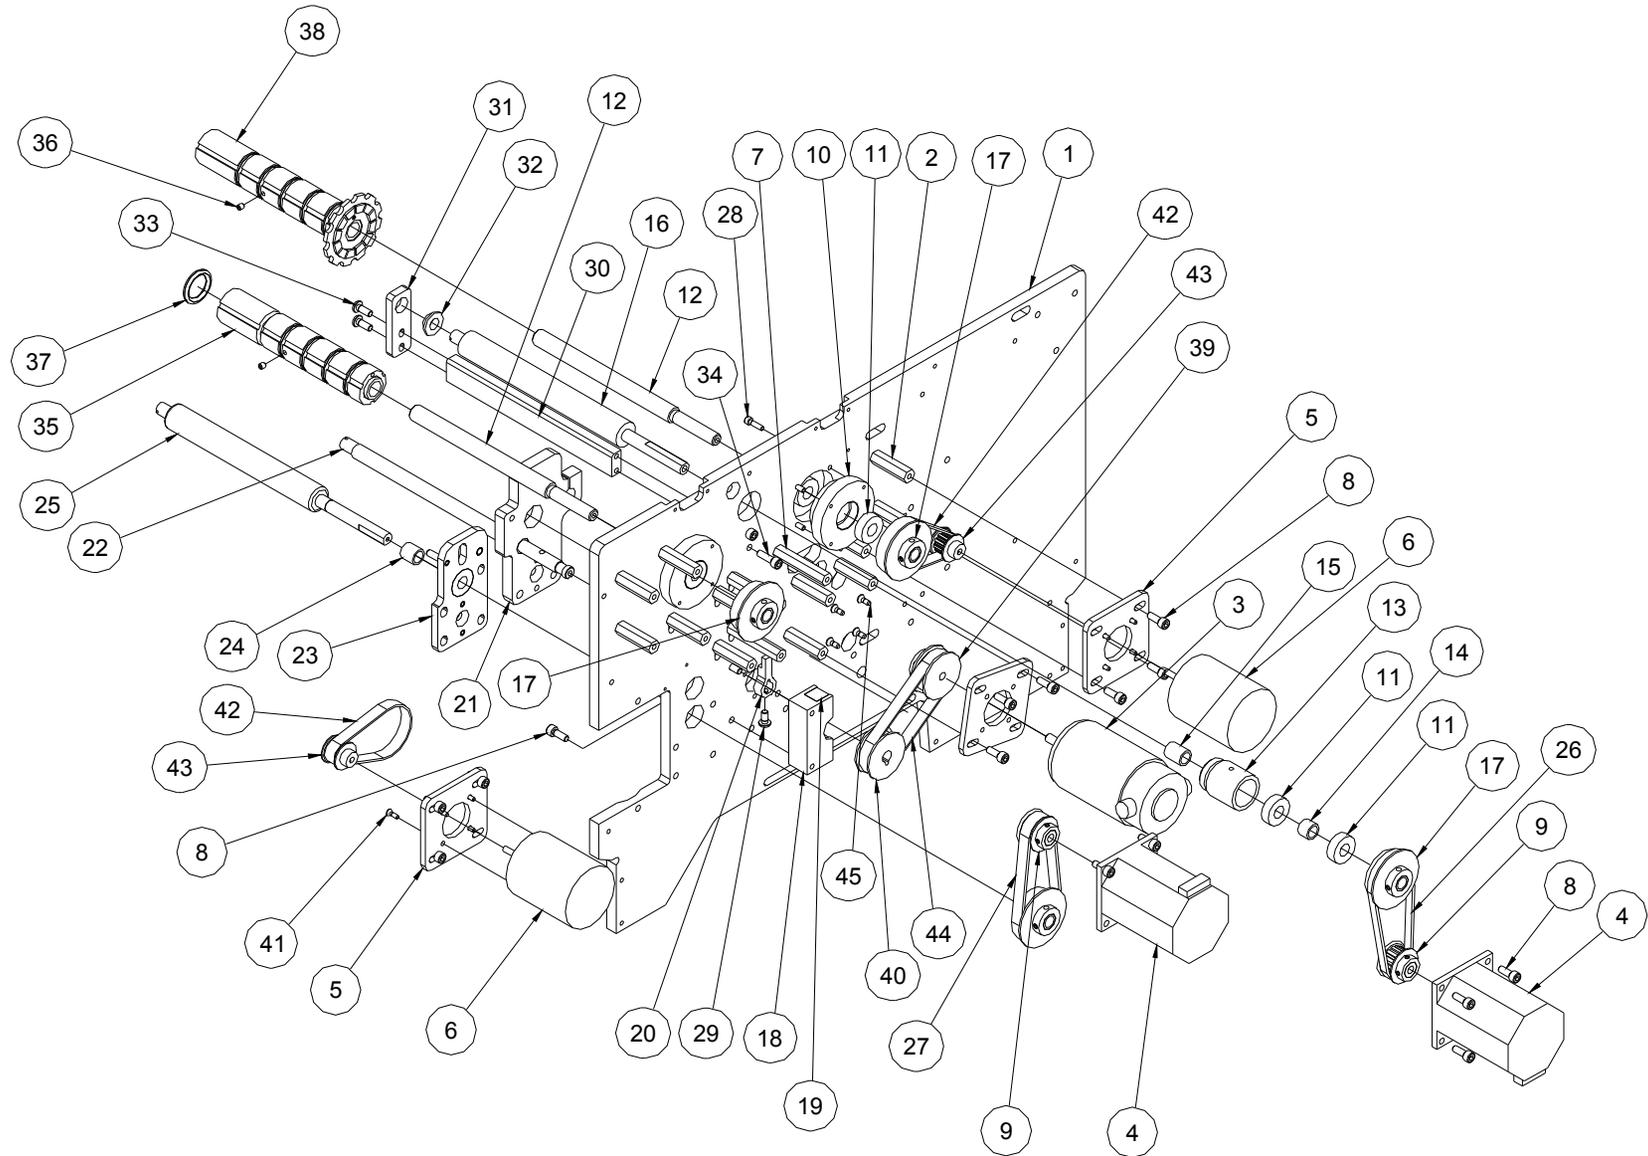


Ink Save Parts List

Item	Part #	Description	Qty
1	551002	Frame, 686 Upright ink save	1
2	194023	Standoff, 1-3/8"	12
3	551146A	Motor, Ink save, Alt	1
4	245026	Stepper motor	2
5	554048	Bracket, Motor mount	3
6	221113	Motor, 24VDC 90ZIN 3100RPM	2
7	991009	Standoff 2"	3
8	990081	10-32 x 1/2 Cap screw	32
9	284025	Pulley, 14T DFL 1/4 ID	2
10	554049	Housing, Bearing	2
11	999001	R6FF bearing	6
12	376035	Shaft, Unwind	2
13	556001	Housing, Bearing NS	1
14	999110	Bushing, 3/8 x 1/2 x 3/8	1
15	999061	Drive, 3/8 x 1/2 x 5/8 Bushing	1
16	556010	Roller, Molded (ink)	1
17	356029	Pulley 26T 1/5P	4
18	555018	Print, Block, Eccentric stop	1
19	555020	Bumper, Sound barrier	2
20	555019	Bracket, Eccentric stop	1
21	555099	Assembly, Rear support, Printhead	1
22	555017	Shaft, Eccentric 686 Ink save (see #46 for key)	1
23	554099	Assembly, Rear support drive	1

Item	Part #	Description	Qty
24	999146	Bushing, 3/8 x 1/2 x 1/2	1
25	354012	Roller, Grit (Main drive)	1
26	991238	Drive, Timing belt, Ink 52T	1
27	991145	Drive, 48T Timing belt	1
28	990017	6-32 x 1/2 Cap screw	8
29	990090	10-32 x 3/8 Button head screw	1
30	554002	Bracket, Web adjust rod	1
31	556003	Bracket, Bearing mount	1
32	999109	Bushing, 3/8 x 1/2 x 1/4 FLG	1
33	990019	10-32 x 1/2 Button head screw	2
34	990082	10-32 5/8 Cap screw	2
35	556096	Ass'y, Ink arbor, Rewind	1
36	990058	8-32 x 1/4 Knurled cup point	2
37	990355	O-ring, 3/4	10
38	556095	Assembly, Ink arbor, Unwind	1
39	991392	Pulley, 20T w/ Hub	1
40	555044	Pulley, 20T	1
41	989964	4-40 x 3/8 Flat head screw	8
42	991390	Timing belt, 37T	2
43	991391	Pulley, 10T	2
44	991393	Timing belt, 49T	1
45	990028	6-32 x 3/8 Flat head screw	4
46	555035	Key, Eccentric drive (not shown)	1


Ink Save PC Board Assembly

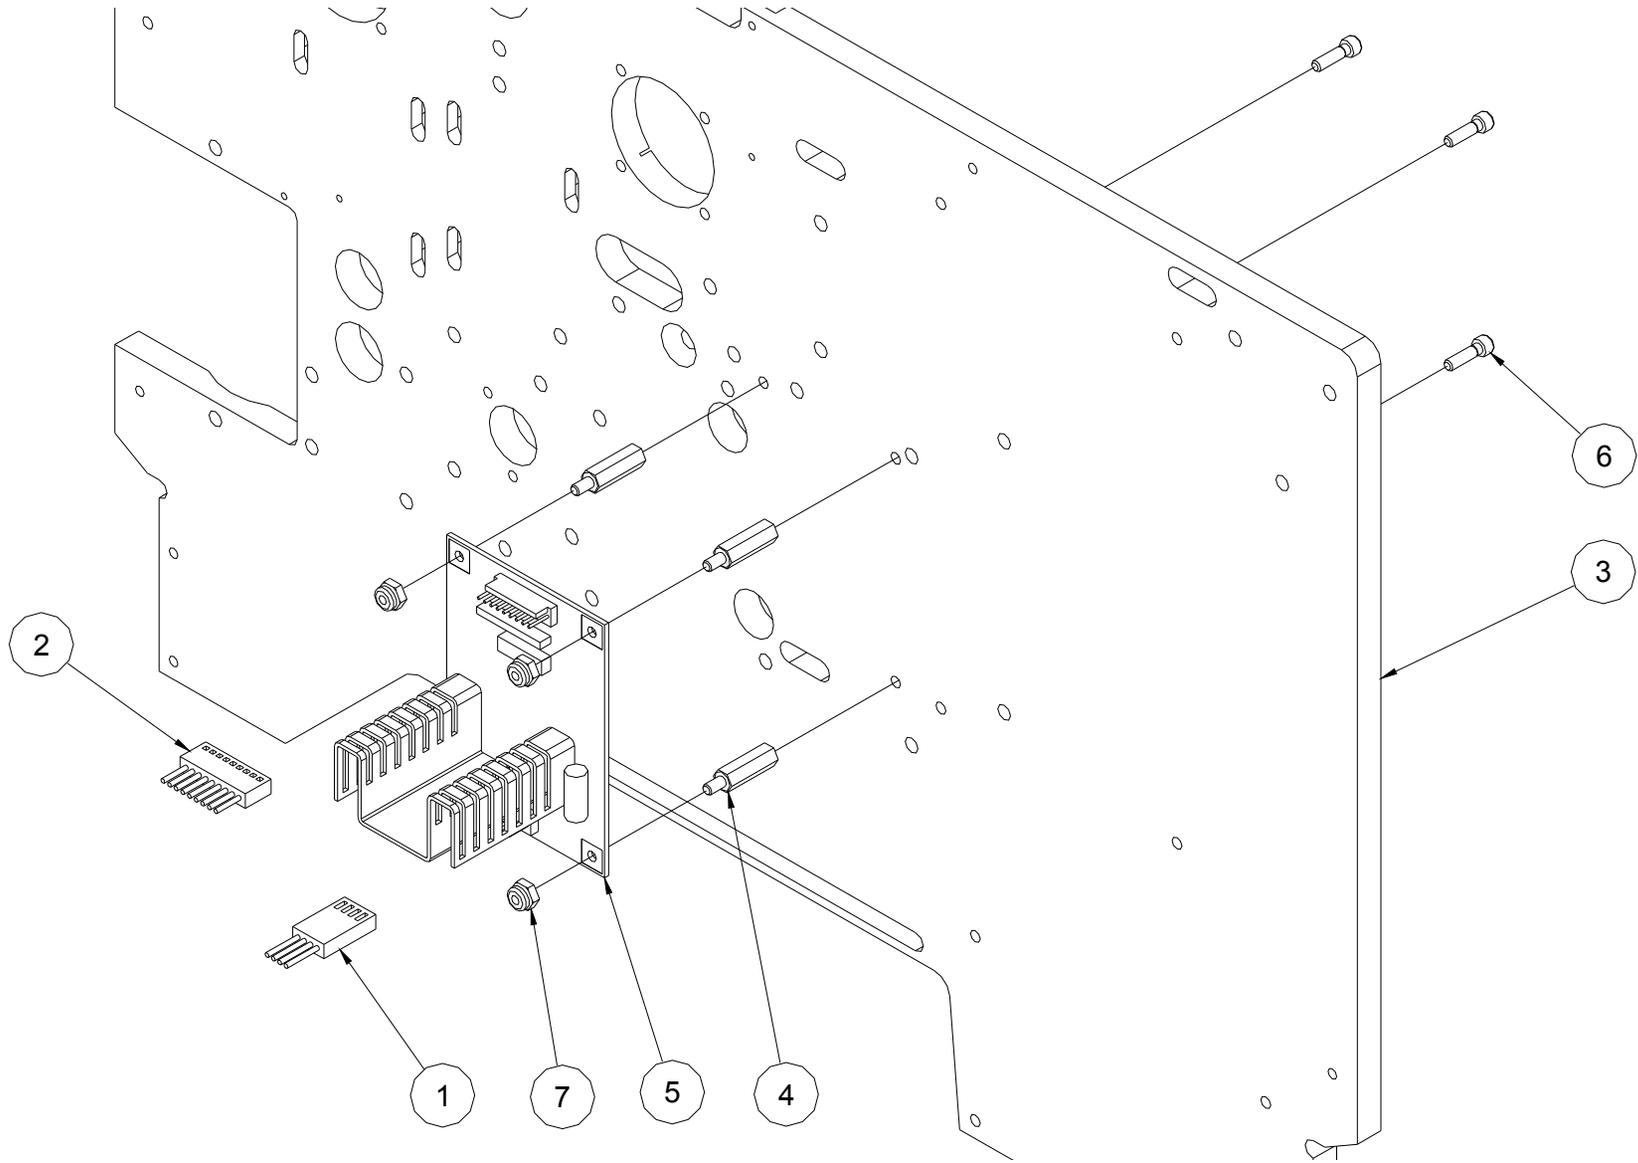

Ink Save PC Board Parts List

Item	Part #	Description	Qty
1	551141	Harness, IADB to arbor motors	1
2	551140	Harness, TCB to AID	1
3	551002	Frame, 686 Upright, Ink save	1
4	191104	Standoff, 3/4	3
5	551105	Pc board, IADB	1
6	990017	6-32 x 1/2 Cap screw	3
7	989987	Hex nut, 6-32 E-S	3


Timing Belt Threading Diagram

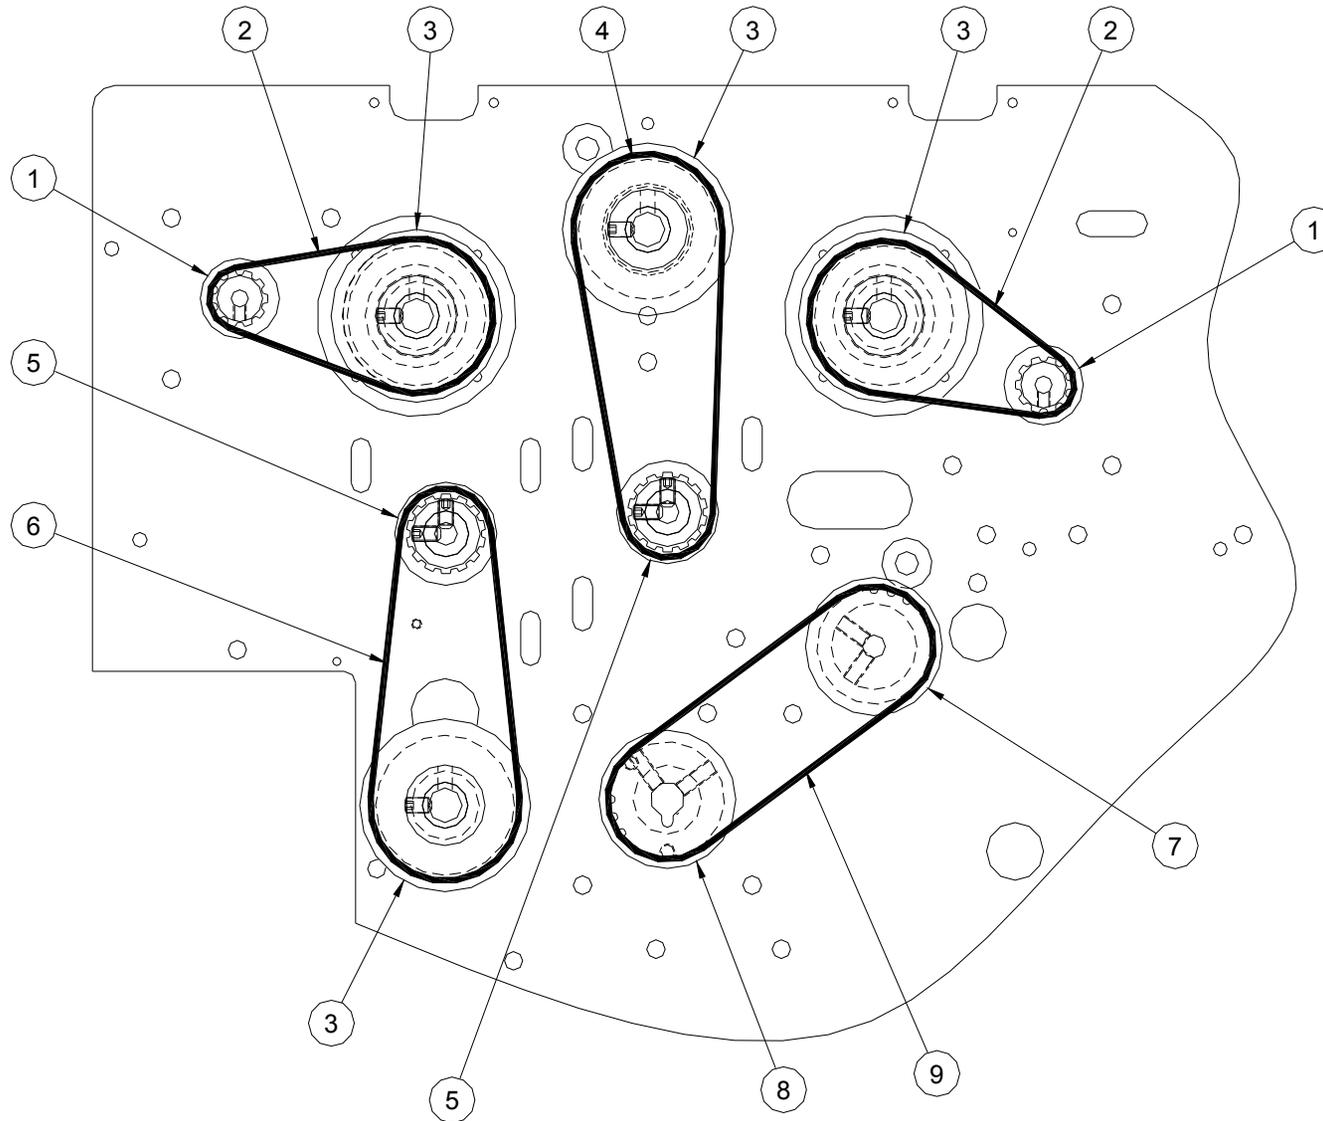

Timing Belt Parts List

Item	Part #	Description	Qty
1	991391	Pulley, 10T	2
2	991390	Timing belt, 37T	2
3	356029	Pulley, 26T 1/5P	4
4	991393	Timing belt, 49T	1
5	284025	Pulley, 14T DFL ¼ ID	2
6	991145	Drive, 48T Timing belt	1
7	991392	Pulley, 20T w/ Hub	1
8	555044	Pulley, 20T	1
9	991393	Timing belt, 49T	1


Timing Belt 686HT Threading Diagram

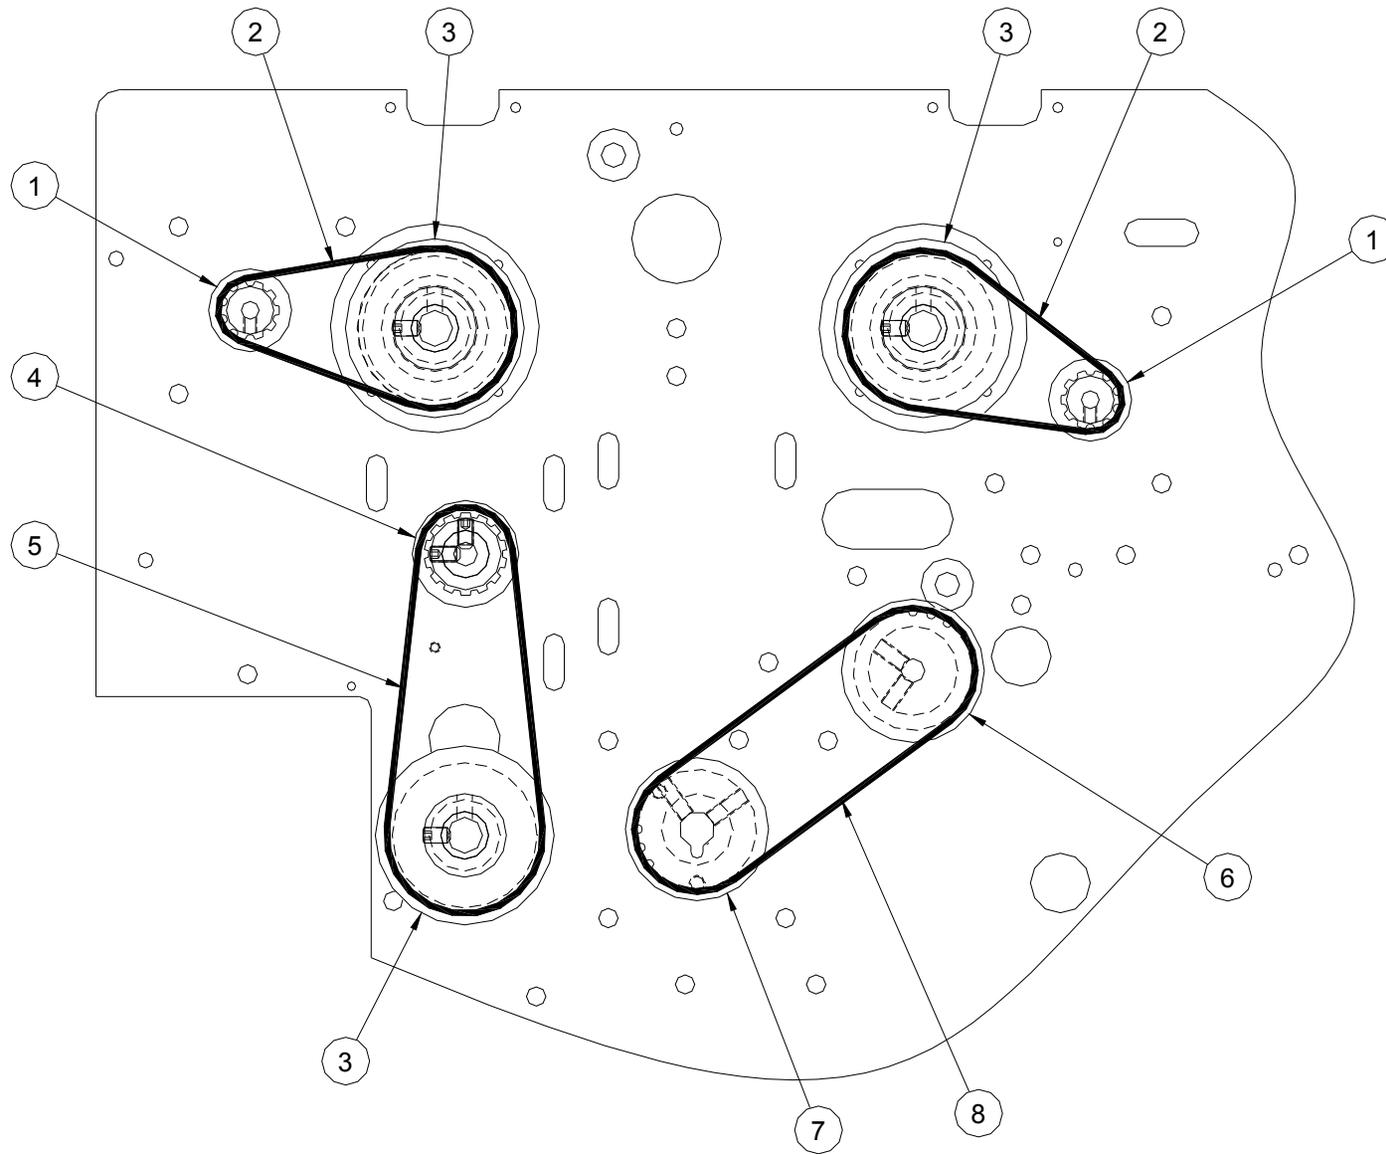

Timing Belt 686HT Parts List

Item	Part #	Description	Qty
1	991391	Pulley, 10T	2
2	991390	Timing belt, 37T	2
3	356029	Pulley, 26T 1/5P	3
4	284025	Pulley, 14T DFL ¼ ID	1
5	991145	Drive, 48T Timing belt	1
6	991392	Pulley, 20T w/ Hub	1
7	555044	Pulley, 20T	1
8	991393	Timing belt, 49T	1

Knife Assembly Drawing

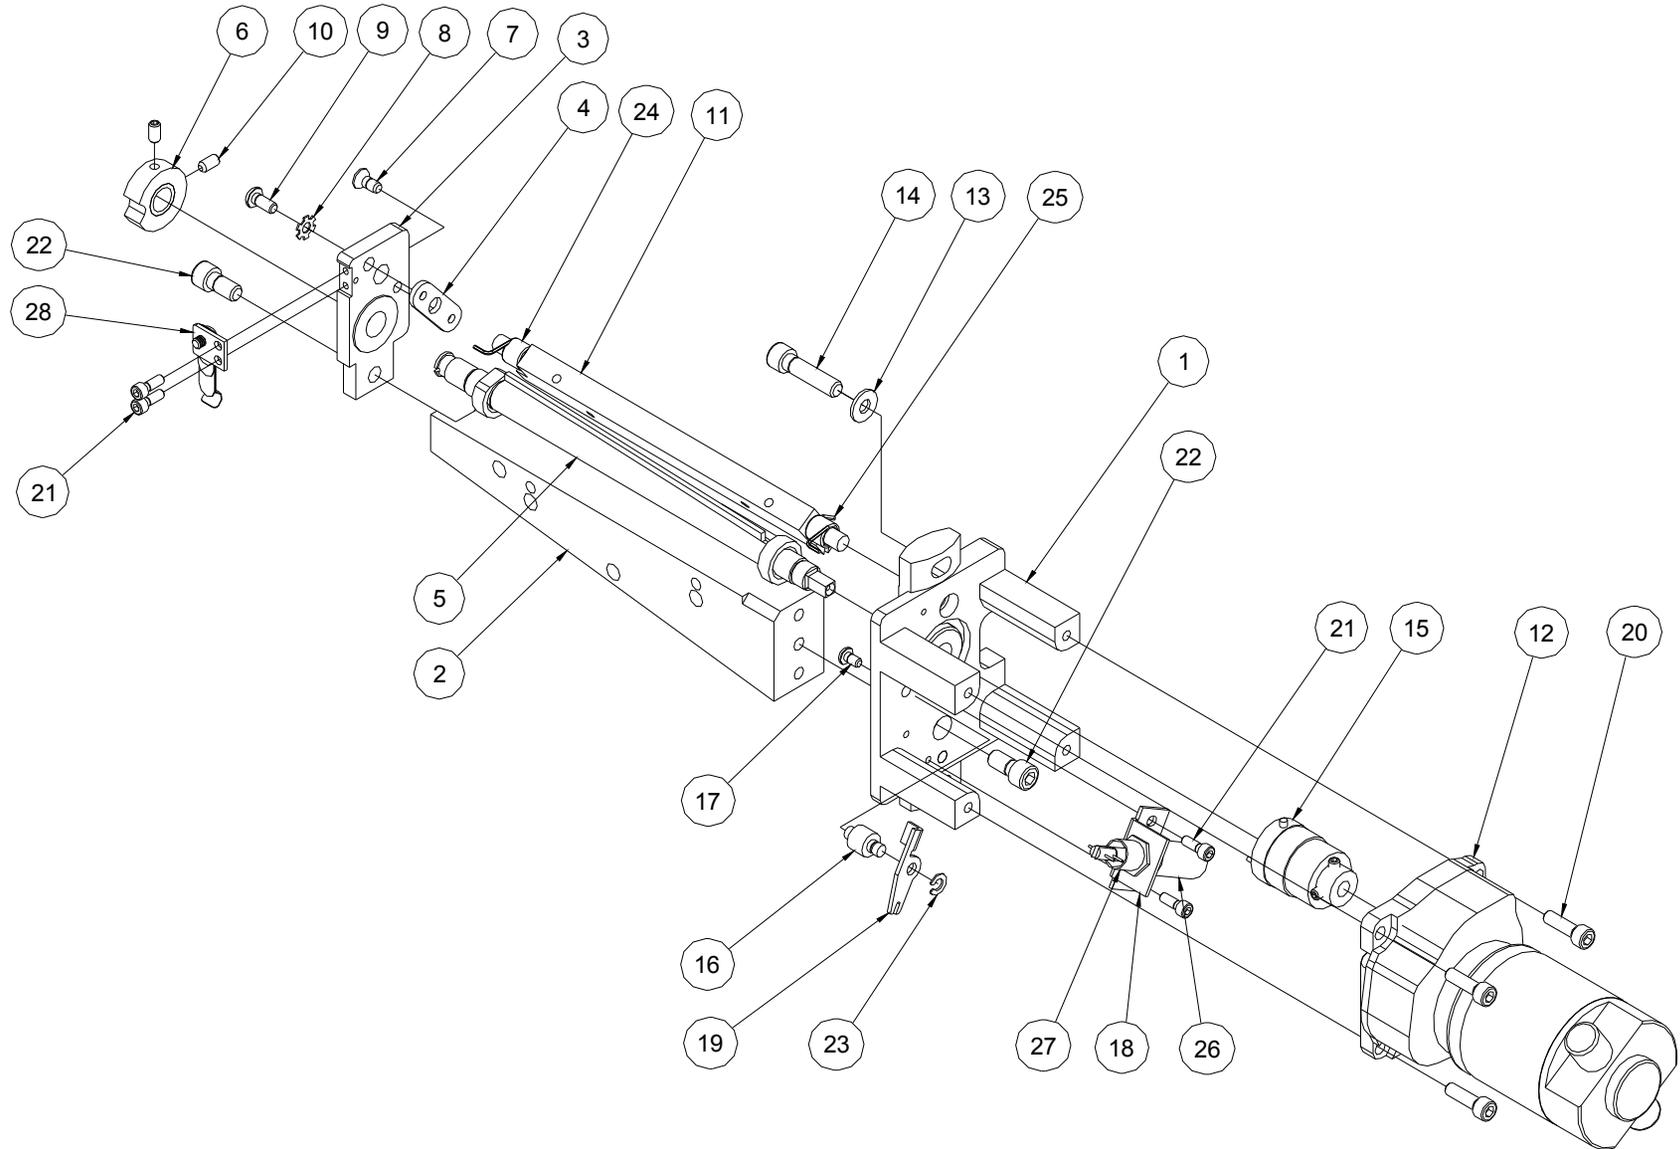


Knife Parts List

Item	Part #	Description	Qty
1	357091	Bracket, Inner knife assembly	1
2	355018	Support, Knife / Drive / Print	1
3	357092	Bracket, Outer knife ass'y	1
4	197308	Adjuster, Knife	1
5* ³	357094	Ass'y, Ground rotary	1
6* ²	197311	Cam, Knife homing	1
7	990055	8-32 x 3/8 Flat head screw	1
8	989978	Washer, #8 Star	1
9	990065	8-32 x 3/8 Button head screw	1
10* ²	991067	8-32 x 5/16 Knurled cup point	2
11* ³	357093	Knife, Stationary Ass'y	1
12	557090	Assembly, Knife motor, 1000 rpm	1
13	990102	Washer, #10 SAE	2
14	990123	1/4-20 x 1 Cap screw	2
15* ²	357019	Clutch, 6 roller, Sq drive	1
16	357016	Standoff, Solenoid arm	1

Item	Part #	Description	Qty
17* ³	990019	6-32 x 1/4 Button head screw	1
18* ^{1,2}	357003	Mount, Solenoid	1
19* ^{1,2}	357020	Actuator, Knife	1
20	990082	10-32 x 5/8 Cap screw	4
21* ¹	990016	6-32 x 3/8 Cap screw	4
22	990120	1/4-20 x 1/2 Cap screw	2
23* ^{1,2}	990325	Snap ring, 3/16 "e" ring	1
24* ³	197319	Torsion spring, Right	1
25* ³	357029	Torsion spring light, Back	1
26* ^{1,2}	351123	Knife solenoid, Harnessed	1
27* ^{1,2}	197317	Compression spring, Solenoid	1
28* ^{1,2}	357089	Ass'y, Cam spring	1
* 1	357096	6x6 Solenoid kit	
* 2	357097K	6x6 Knife Solenoid / Clutch kit	
* 3* ²	357098K	6x6 Solenoid / Clutch / Blade kit	

Stacker Assembly Drawing (Part 1)

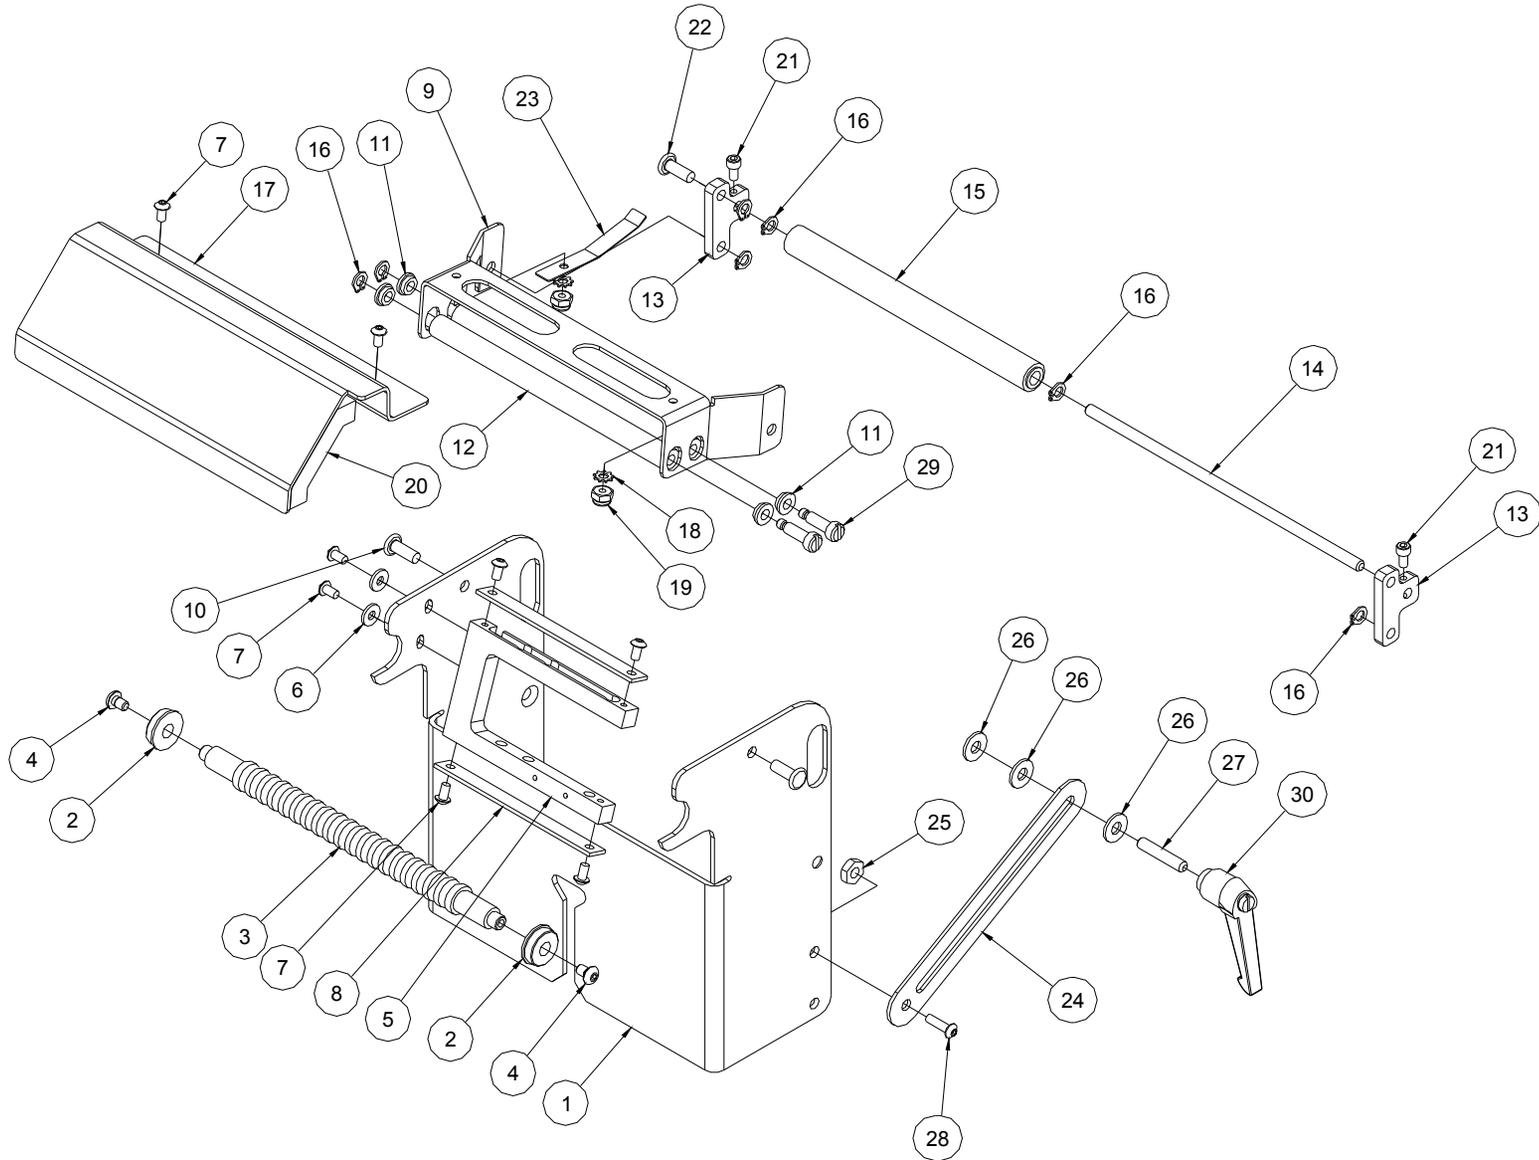


Stacker Parts List (Part 1)

Item	Part #	Description	Qty
1	558002	Bracket, Stacker support	1
2	999014	¼ X 5/8 Flange ball bearing	2
3	378055	Roller, Front idler	1
4	990066	8-32 x ¼ Button head screw	2
5	378064	Bracket, Jam sensor	1
6	990037	Washer, #6 SAE	2
7	990019	6-32 x ¼ Button head screw	8
8	378060	Bracket, Sensor guard strip	2
9	378054	Bracket, Roller mount	1
10	990403	Rivet, 3/16 x ½ Flat head	2
11	999100	Bushing, FL. 3/16 x 5/16 x 1/8	4
12	378050	Roller, Pressure	2
13	518002	Bracket, Roller mount	2
14	358016	Shaft, Roller	1
15	378048	Ass'y, Belt tension roller	1

Item	Part #	Description	Qty
16	990261	Snap ring, 3/16	7
17	551206	Bracket, Stacker, Sound barrier	1
18	989976	Washer, #6 Star	2
19	989987	6-32 E-S Nut	2
20	551212	Sound foam, Stacker	1
21	990015	6-32 x ¼ Cap screw	2
22	990404	Rivet, ¼ x ¾	1
23	518001	Bracket, Roller cup	1
24	378057	Bracket, Lock	1
25	990104	10-32 E-S Nut	1
26	990102	Washer, #10 SAE	3
27	989979	10-32 x 1 Knurled cup point	1
28	990091	10-32 x ½ Button head screw	1
29	990446	.188 x .50 x 8-32 Shoulder screw	2
30	144034	Feed lock knob	1

Stacker Assembly Drawing (Part 2)

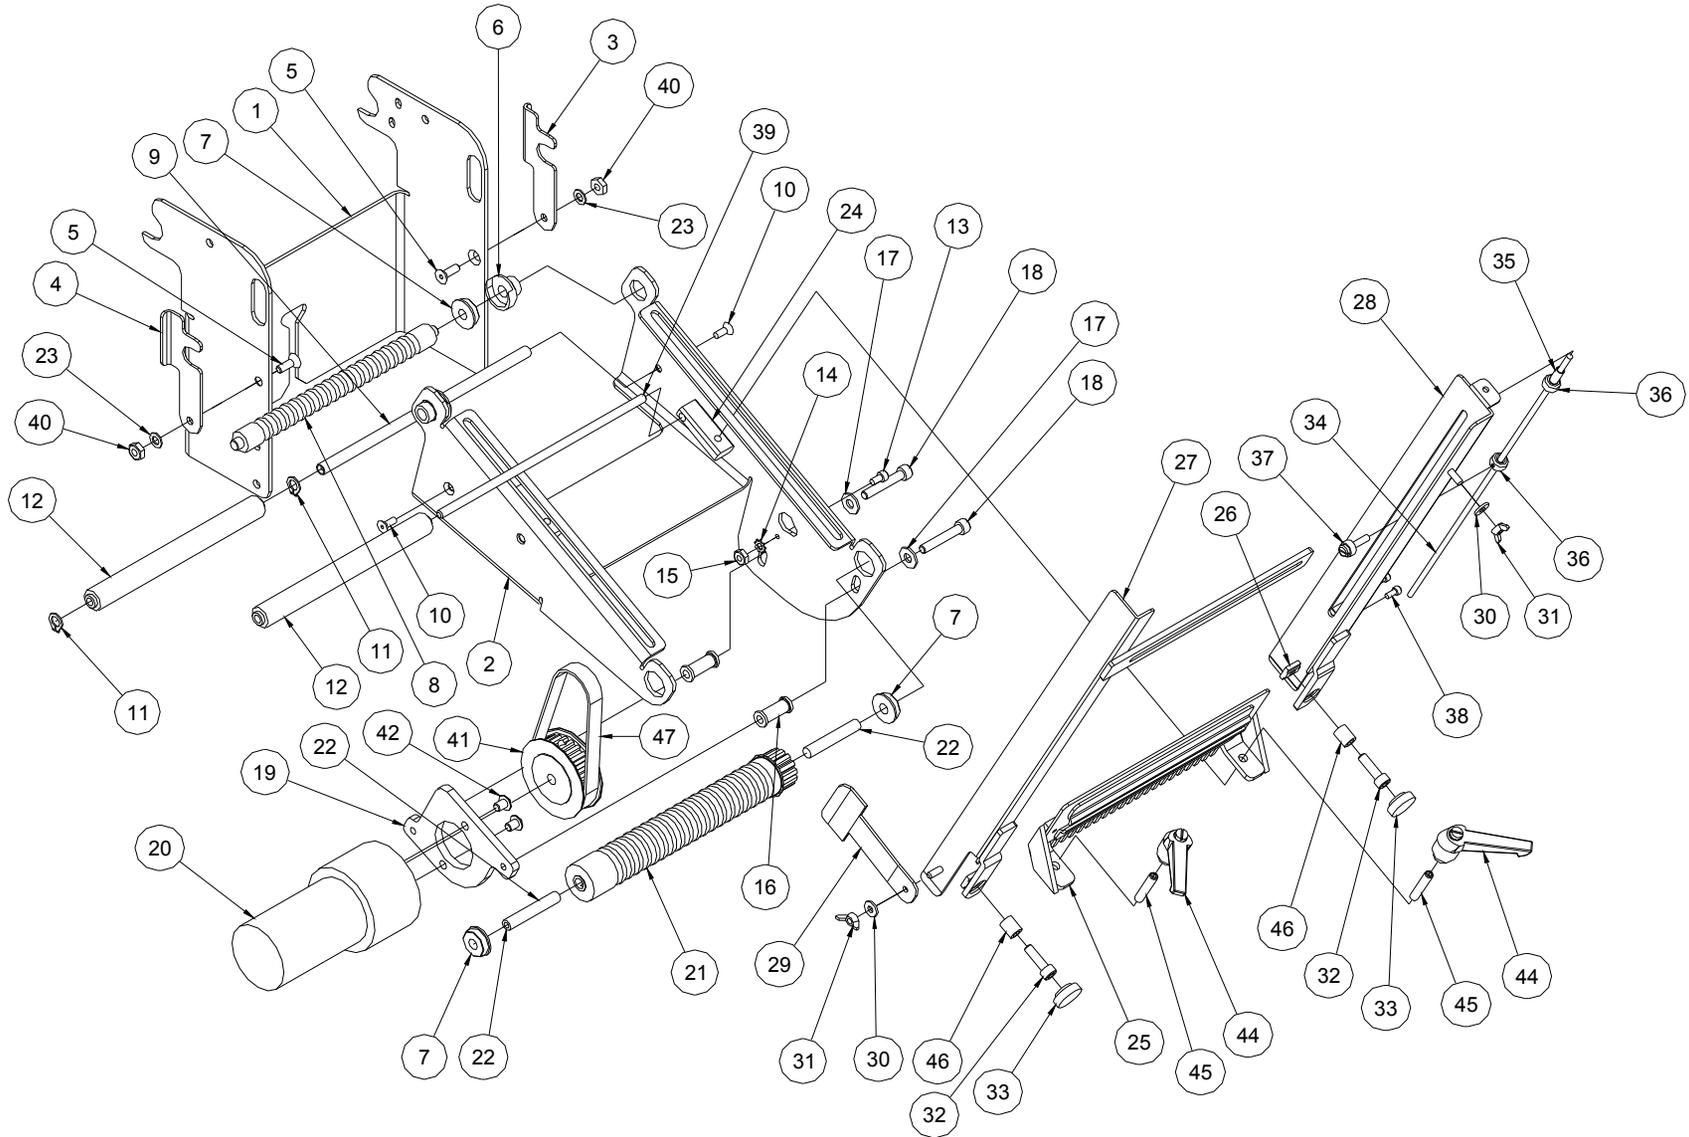


Stacker Parts List (Part 2)

Item	Part #	Description	Qty
1	558002	Stacker base	1
2	558001	Stacker support, 686	1
3	558007	Bracket, Roller lock, Rear	1
4	558006	Bracket, Roller lock, Front	1
5	990056	8-32 x 1/2 Flat head screw	2
6	558008	Bearing support, 686	2
7	999014	1/4 x 5/8 fl. Ball bearing (3/16l x 1/32w x 11/16 FL)	4
8	378056	Roller, Idler center	1
9	378052	Shaft, Tension roller	1
10	990028	6-32 x 3/8 Flat head screw	2
11	990262	Snap ring 1/4"	2
12	358094	Roller, Stacker support ass'y	2
13	990015	6-32 x 1/4 Cap screw	1
14	989976	#6 Star washer	1
15	990038	#6 Hex nut	1
16	558010	Standoff, Motor mount	2
17	990102	#10 SAE washer	2
18	990085	10-32 x 1 1/4 Cap screw	2
19	558005	Bracket, Motor mount	1
20	351161	Stacker motor, Harnessed	1
21	378097	Assembly, Stacker roller	1
22	348015	Shaft, Roller pin	2
23	990272	#8 Belleville washer	2
24	358015	Support, Roller	2

Item	Part #	Description	Qty
25	378061	Slide, Stacker rail	1
26	188008	#10 "T" Nut, Machined square	2
27	358007	Rail, Front stacker	1
28	378005	Rail, Rear stacker	1
29	358020	Support, Label side	1
30	990037	#6 SAE washer	2
31	990641	6-32 Wing nut	2
32	990082	10-32 x 3/8 Cap screw	2
33	990313	Thumb Screw knob, #10	2
34	358013	Trip rod	1
35	358017	Spring, Trip rod	1
36	990369	1/8" Collar	2
37	184002	Thumb screw lock, Web guide	1
38	990006	4-40 x 1/4 Cap screw	2
39	358016	Shaft, Roller	1
40	991157	8-32 ES Nut	2
41	558004	Pulley, Timing	1
42	990089	10-32 x 1/4 Button head screw	2
43	358021	O-ring (Not shown)	19
44	144034	Feed lock knob	2
45	989979	10-32 x 1 Knurled cup point	2
46	999095	3/16 x 5/16 x 3/8 Bushing	2
47	991153	Timing belt	1

(*NS) = Not Shown


Back Reflective Sensor Option Assembly Drawing

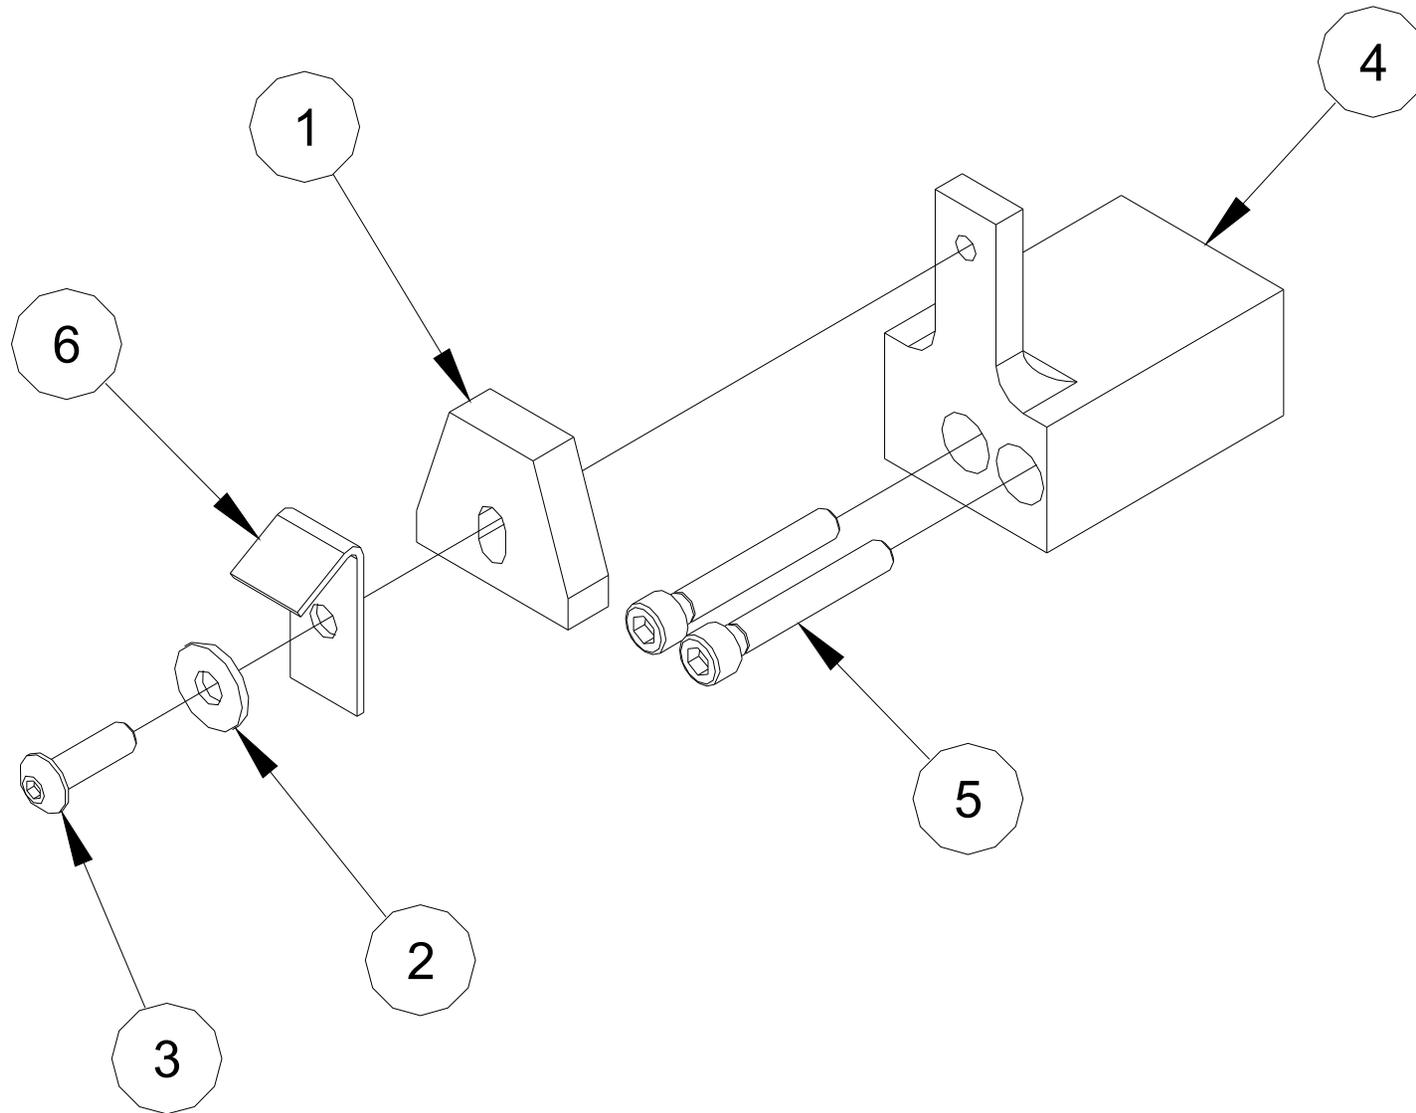

Back Reflective Sensor Option Parts List

Item	Part #	Description	Qty
1	371128	Top & bottom reflective sensor harness	1
2	990448	Washer, .125 x .313 x .031	1
3	989984	4-40 x 3/8 Button head screw	1
4	554060	Bracket, Sensor mount	1
5	990002	4-40 x 3/4 Cap screw	2
6	554062	Bracket, Sensor clearance	1
7	990513	Tie wrap, Small (not shown)	1

Cover Assembly Drawing

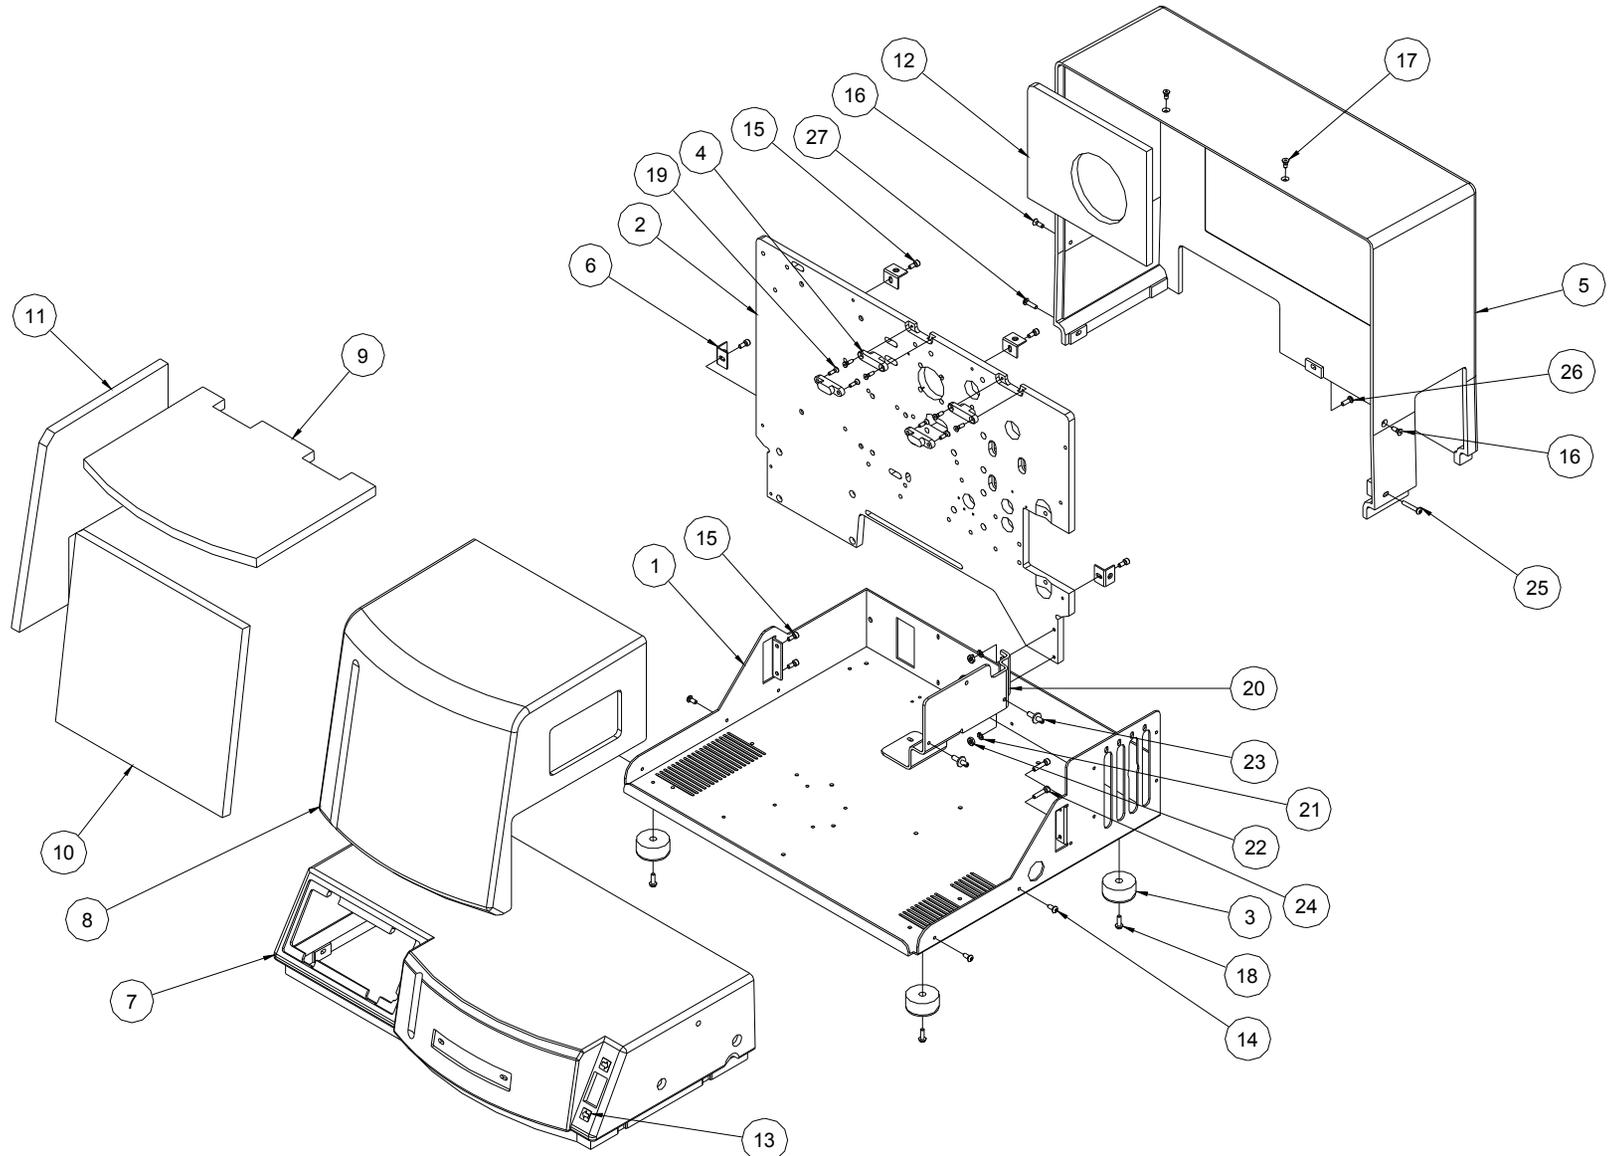

Cover Assembly Parts List

Item	Part #	Description	Qty
1	511203	Base plate	1
2	551001	Frame, Upright, 686	1
3	341210	Feet, 1 1/2 Dia. Rubber	4
4	341209	Hinge, 101 Invisible	2
5	511202	Back cover	1
6	511209	Bracket, Angle	4
7	551202	Cover, Front, 686	1
8	551201	Cover, Hinged, 686	1
9	551217	Top bubble cover insulation	1
10	551218	Front bubble cover insulation	1
11	551219	Side bubble cover insulation	1
12	511214	Cover, Sound foam	1
13	551215	Cover, Arrow sticker	2
14	990065	8-32 x 3/8 Button head screw	4

Item	Part #	Description	Qty
15	990051	8-32 x 3/8 Cap screw	6
16	990056	8-32 x 1/2 Flat head screw	2
17	990055	8-32 x 3/8 Flat head screw	2
18	991079	8-32 z 1/2 Thd forming screw	4
19	990023	6-32 x 1/2 flat head screw	8
20	351004	Bracket, Stacker mount	1
21	989978	Washer, #8 Star	2
22	990069	Hex nut, 8-32	2
23	378105	Pin, Stacker mount	2
24	990018	8-32 x 3/4 Cap screw	2
25	991402	8-32 x 1 Button head screw	1
26	990073	8-32 x 1/2 Button head screw	1
27	990044	8-32 x 5/8 Button head screw	1