

Acer Digital Photo Frame

User Guide

Copyright © 2008. Acer Incorporated.
All Rights Reserved.

Acer Digital Photo Frame User Guide
Original Issue: 10/2008

Changes may be made periodically to the information in this publication without obligation to notify any person of such revisions or changes. Such changes will be incorporated in new editions of this manual or supplementary documents and publications. This company makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims the implied warranties of merchantability or fitness for a particular purpose.

Record the model number, serial number, purchase date and place of purchase information in the space provided below. The serial number and model number are recorded on the label affixed to your computer. All correspondence concerning your unit should include the serial number, model number and purchase information.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronically, mechanically, by photocopy, recording or otherwise, without the prior written permission of Acer Incorporated.

Acer Digital Photo Frame User Guide

Model number: _____

Serial number: _____

Date of purchase: _____

Place of purchase: _____

Acer and the Acer logo are registered trademarks of Acer Incorporated. Other companies' product names or trademarks are used herein for identification purposes only and belong to their respective companies.

Special notes on your digital photo frame (DPF)

The following conditions are normal for the LCD screen and do not indicate a problem.

- Due to the nature of the fluorescent light, the screen may flicker during initial use. Turn off the power and then turn it on again to make sure the flicker disappears.
- You may find slightly uneven brightness on the screen depending on the desktop pattern you use.
- The LCD screen has 99.99% or more effective pixels. It may include blemishes of 0.01% or less, such as a missing pixel or a pixel lit all the time.
- Due to the nature of the LCD screen, an afterimage of the previous screen may remain after switching an image that has been displayed for hours. In this case, the screen slowly recovers when the image is changed or after the power has been switched off for a few hours.

Important information

Safety instructions

Read these instructions carefully. Keep this document for future reference. Follow all warnings and instructions marked on the product.

Cleaning your product

Please follow these guidelines when cleaning this product:

- Always unplug the digital photo frame before cleaning.
- Use a soft cloth to wipe the screen and the casing.

CAUTION for accessibility

Be sure that the power outlet you plug the power cord into is easily accessible and located as close to the equipment as possible. When you need to disconnect the power, unplug the power cord from the electrical outlet.

CAUTION when unplugging

Unplug the power cord before removing the power supply unit from the device.

CAUTION for memory card reader dummies

Your product shipped with plastic dummies installed in the memory card reader slots. Dummies protect unused slots from dust, metal objects, or other particles. Save the dummies for use when no memory cards are installed in the slots.

Warnings

- Do not use this product near water.
- Do not place this product on an unstable cart, stand or table. If the product falls, it could be seriously damaged.
- Slots and openings are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat register, or in a built-in installation unless proper ventilation is provided.
- Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind onto or into the product.
- To avoid damage of internal components and to prevent battery leakage, do not place the product on a vibrating surface.

Using electrical power

- This product should be operated from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
- Do not allow anything to rest on the power cord. Do not locate this product where people will walk on the cord.
- If an extension cord is used with this product, make sure that the total ampere rating of the equipment plugged into the extension cord does not exceed the extension cord ampere rating. Also, make sure that the total rating of all products plugged into the wall outlet does not exceed the fuse rating.
- Do not overload a power outlet, strip or receptacle by plugging in too many devices. The overall system load must not exceed 80% of the branch circuit rating. If power strips are used, the load should not exceed 80% of the power strip's input rating.
- In some regions, the AC adapter is equipped with a three-wire grounded plug. The plug only fits in a grounded power outlet. Make sure the power outlet is properly grounded before inserting the AC adapter plug. Do not insert the plug into a non-grounded power outlet. Contact your electrician for details.



.....

Warning! The grounding pin is a safety feature. Using a power outlet that is not properly grounded may result in electric shock and/or injury.



.....

Note: The grounding pin also provides good protection from unexpected noise produced by other nearby electrical devices that may interfere with the performance of this product.

Product servicing

Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to qualified service personnel.

Unplug this product from the wall outlet and refer servicing to qualified service personnel when:

- The power cord or plug is damaged, cut or frayed.
- Liquid was spilled into the product.
- The product was exposed to rain or water.
- The product has been dropped or the case has been damaged.
- The product exhibits a distinct change in performance, indicating a need for service.
- The product does not operate normally after following the operating instructions.



.....

Note: Adjust only those controls that are covered by the operating instructions, since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal condition.

Additional safety information

Your device may contain small parts. Keep them out of the reach of children.

IT equipment recycling information

Acer is strongly committed to environmental protection and views recycling, in the form of salvaging and disposal of used equipment, as one of the company's top priorities in minimizing the burden placed on the environment.

We at Acer are very conscious of the environmental effects of our business and strive to identify and implement the best working procedures to reduce the environmental impact of our products.

For more information and help when recycling, please go to this website:

<http://global.acer.com/about/sustainability32.htm>

Visit www.global.acer.com for further information on the features and benefits of our other products.

Disposal instructions

Do not throw this electronic device into the trash when discarding. To minimize pollution and ensure utmost protection of the global environment, please recycle. For more information on the Waste from Electrical and Electronics Equipment (WEEE) regulations, visit <http://global.acer.com/about/sustainability.htm>.



Mercury advisory

For projectors or electronic products containing an LCD/CRT monitor or display: lamp(s) inside this product contain mercury and must be recycled or disposed of according to local, state or federal laws. For more information, contact the Electronic Industries Alliance at www.eiae.org. For lamp-specific disposal information, check www.lamprecycle.org.



Special notes on your digital photo frame (DPF)	iii
Important information	iii
Safety instructions	iii
Cleaning your product	iii
CAUTION for accessibility	iii
CAUTION when unplugging	iii
CAUTION for memory card reader dummies	iv
Warnings	iv
Using electrical power	iv
Product servicing	v
Additional safety information	v
IT equipment recycling information	v
Disposal instructions	vi
Welcome	1
Check the package contents	1
Your digital photo frame tour	2
Front view	2
Back view	3
Bottom view	4
Setting up your digital photo frame	5
Connecting the AC power	5
Placing your digital photo frame	6
Turning the frame on	6
Enjoying your digital photo frame	7
General controls	7
Viewing images from the internal/external memory	8
Copy to memory	9
Connecting USB devices	10
Controls on the unit	11
Photo mode	12
Display layout	12
Delete	13
Rotate	13
Calendar and clock settings	13
System setup	14
Slideshow mode	15
Editing a slideshow	16
Slideshow setup	16
Error message indication	17
Specifications	18
Regulations and safety notices	19
FCC notice	19
LCD pixel statement	20

Contents

Welcome

Thank you for purchasing this Acer digital photo frame. This product has been designed and manufactured to the highest quality standards. To understand the functions and features of this product, please read this guide before using the product.

Check the package contents

Carefully open the box and ensure that you have the following items:

- Digital photo frame
- Warranty card
- Manual CD
- AC power adapter
- AC adapter plug converter x 2
- USB cable
- Quick Start Guide



Note: Available accessories may vary depending on sales region. Save the packing materials for future use. If any item is missing or damaged, contact your dealer.


Your digital photo frame tour

Front view

Your new Acer Digital Photo Frame uses a touchscreen to control functions. Touch the icon on the screen to activate the desired function. See "Controls on the unit" on page 11 for more details.




Note: After the digital photo frame is turned on, available functions show on the screen for a short time.

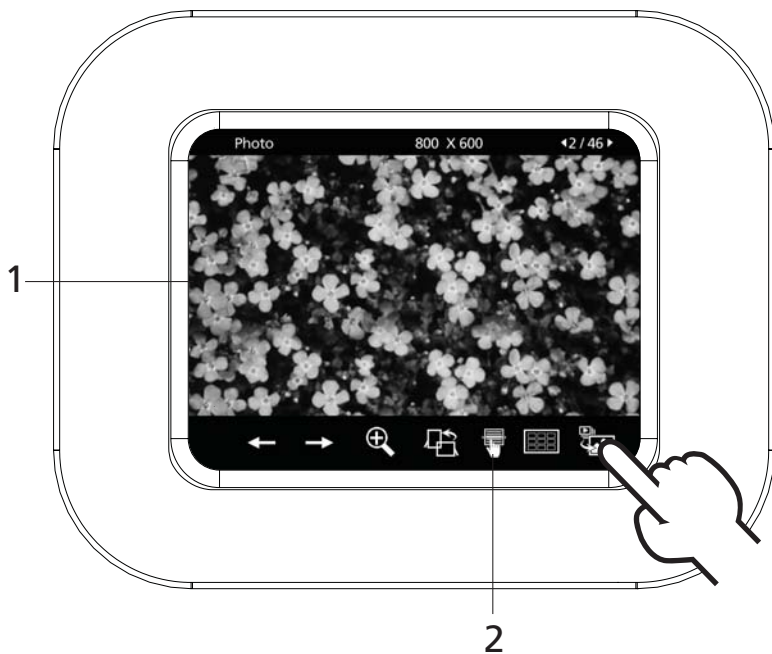


#	Item	Description
1	LCD screen	Displays photo content
2	Touch panel	Touch-sensitive icons control the corresponding function for each mode

Back view

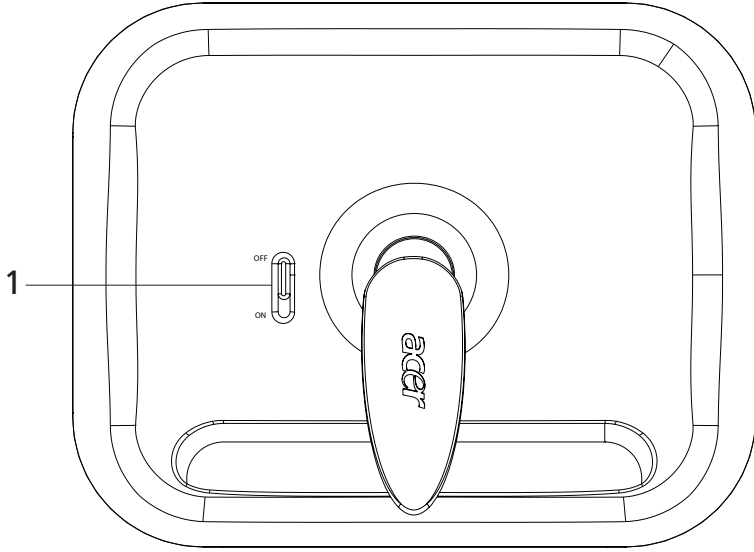

#	Item	Description
1	Power switch	Turns the DPF on and off

Bottom view

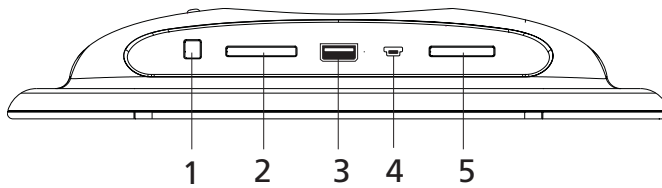

#	Item	Description
1	Power jack	Connects to an AC adapter
2	SD card reader	Accepts one Secure Digital (SD) Card Note: Push to remove/install the card
3	A-type USB 2.0 port	Connects to USB 2.0 devices (e.g., USB flash drive)
4	B-type mini USB 2.0 port	Connects to a PC via the USB cable
5	5-in-1 card reader	Accepts Secure Digital (SD), MultiMediaCard (MMC), Memory Stick (MS), Memory Stick Pro (MS PRO), and xD-Picture Card Note: Only one card can be inserted at any time




Note: Both the 5-in-1 and SD card slots support hot-swapping.

Setting up your digital photo frame

Connecting the AC power


Plug one end of the AC power adapter into the power jack on the back of the digital photo frame and the other end into a power outlet.

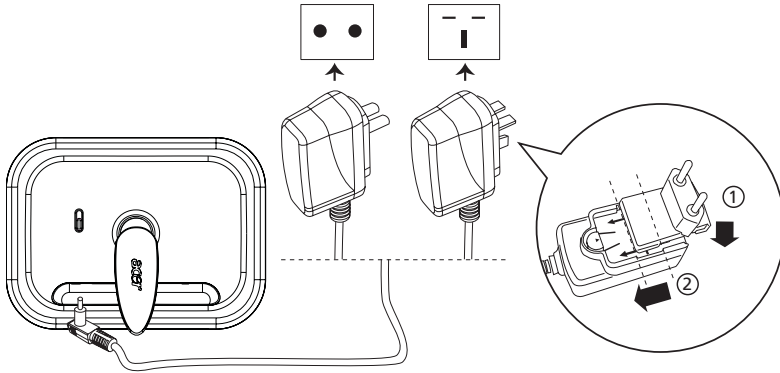

Note: Available plug type may vary depending on sales region.


Placing your digital photo frame

Rest the digital photo frame horizontally (recommended orientation) or vertically on a stable surface to enjoy your photos.

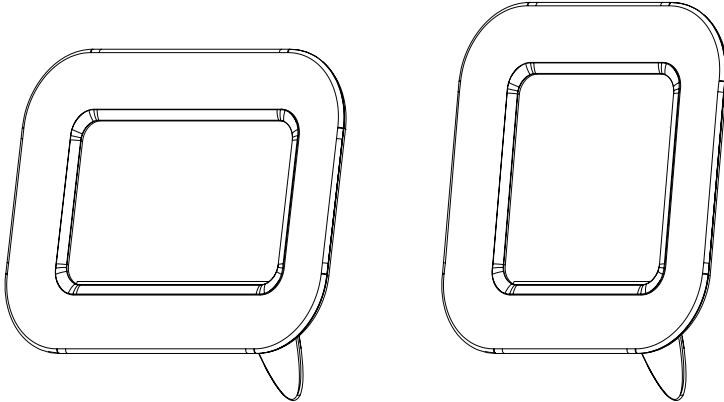

Turning the frame on

Sliding the power switch to **On** turns the frame on, while sliding the power switch to **Off** turns it off.

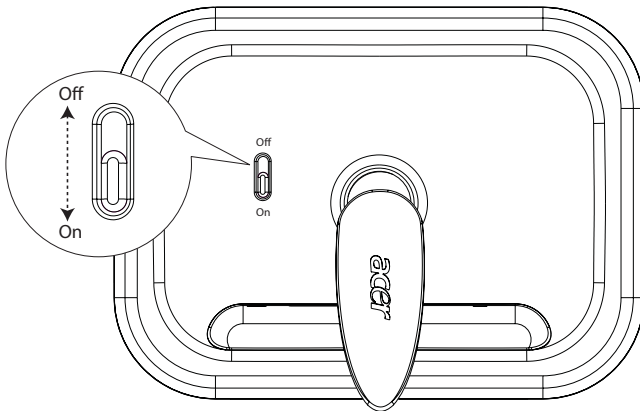

Enjoying your digital photo frame

The Acer digital photo frame is a photo player with an integrated calendar function. Use the touch panel to select the function you wish to enjoy. To turn on the calendar display, please see "Calendar and clock settings" on page 13 for more details.



















.....

If the control panel is unused for a while, the control icons will disappear automatically. To show on the control icons again, touch anywhere on the lower part of the screen. Available functions vary depending on the selected mode and/or UI.

General controls


The control icons appear at the bottom of the screen.

Icon	Item	Description
	Slideshow mode selection	Toggle from photo show to slideshow mode
	Photo show mode selection	Toggle from slideshow to photo show mode
	Thumbnail	Press to change to thumbnail mode
	Return	Back to previous menu
	Menu	Press to enter setting menu
	Cursor up	Move the cursor to the file above the current file
	Cursor down	Move the cursor to the file below the current file
	Cursor left	Move the cursor to the file to the left of the current file

Icon	Item	Description
	Cursor right	Move the cursor to the file to the right of the current file
	Move displayed area	Press the icon to move the part of the photo displayed when the photo is enlarged
	OK	Press to confirm the selection
	Select	Press to select or deselect an image
	Rotate	Rotate the photo from portrait to landscape, and back
		
	Zoom-in	Press to enlarge the photo on the screen
	Zoom-out	Press to shrink the photo on the screen

Viewing images from the internal/external memory

Your digital photo frame comes with demo images preloaded in the internal memory. On the back of the unit, there is a 5-in-1 card reader for SD/MS/MS PRO/MMC/xD cards, and a SD card slot for SD cards.

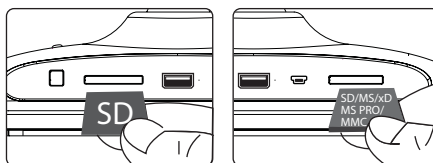

Note: While all images on a memory card will be automatically resized to fit the LCD screen, the original images on the memory card remain unaffected.








Both the 5-in-1 and SD card slots support hot-swapping.

If you insert a card into each slot, the frame will only show images stored on the second card inserted.

Copy to memory

If you insert a memory card into the memory card slot, the frame will enter thumbnail view mode and you can use the navigation controls and selection key to select the image(s).

If you want to copy images from the memory card to the internal memory, please do the following:

- 1 Press  to return to the previous menu.
- 2 Press  to enter the setup menu.
- 3 Press the up/down icon to select **Copy to Memory**.
- 4 Then press  to enter thumbnail view mode. Use the navigation controls and press  to select or deselect the images. A ticked thumbnail means the image is selected. An unticked thumbnail means the image is not selected.
- 5 After you finish selecting photos, press  to return to the previous menu. The frame will ask you to confirm the selection.
- 6 Press **OK** to start copying, or press  to return to the previous menu.
- 7 After the copy finishes, you can press  to return to the previous menu or select any other menu function.




Note: All copied images will be automatically resized to fit the screen. The file size of each copied image will be automatically reduced to save space in the internal memory. This will allow more images to be stored in the internal memory.

Connecting USB devices

The USB 2.0 port is a high-speed serial bus which allows you to connect USB peripherals (e.g., USB flash/hard disks) to copy/display images using the DPF. The USB ports support USB Mass Storage Class for both High Speed Device and High Speed Host functions.

This DPF supports one A-type USB and one B-type mini USB port; both with high-speed USB 2.0 data transfer at 480 Mbps

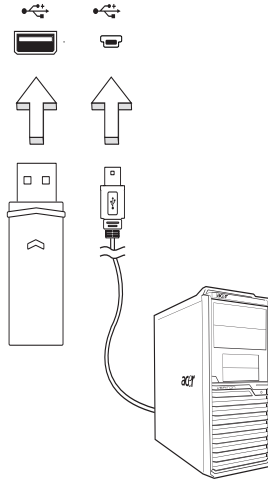



When you plug-in a USB device, like a USB flash drive, into the DPF's USB port the system will attempt to connect with the USB device.


If you use the A-type USB port, the DPF acts as a host to read USB storage devices. It is not compatible with other USB devices.



Use the B-type mini USB port to connect your DPF to your computer.

Controls on the unit

After you turn on the frame, you can choose sildeshow mode to scroll through the selected photos or single photo mode to show a single photo. You can press

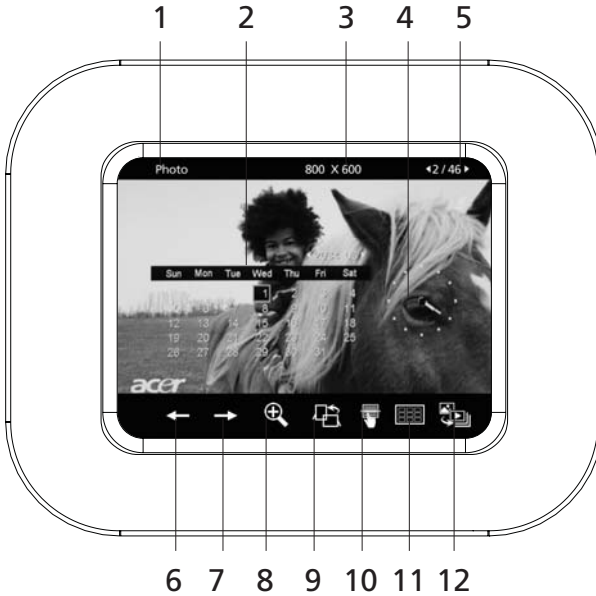 or  to toggle between the modes.



#	Icon	Item	Description
1		Current mode	Displays the current mode
2		Calendar	Shows the calendar (if enabled)
3		Resolution	Shows the photo resolution
4		Clock	Displays the current time if the clock is enabled
5		Current file number/total number of files	Shows current file and the total number of files
6		Previous file	Press to view the previous file
7		Next file	Press to view the next file


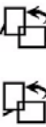







#	Icon	Item	Description
8		Zoom-in/Zoom-out	Press to enlarge or shrink the photo on the screen
9		Rotate vertically/ horizontally	Rotate photo from portrait to landscape, and back
10		Menu	Press to enter the Settings menu
11		Thumbnail	Press to change to thumbnail mode
12		Slideshow / Photo show	Press to toggle between slideshow and photo show modes







Photo mode

In photo mode, you can press the navigation controls to select the image you want to view. Or, you can press  to enter thumbnail view mode and use the navigation controls to select an image. Please press **OK** to confirm the selection and press  to return to the previous menu.




Display layout

- 1 Press  to enter the setup menu.
- 2 Press the up/down icon to select **Display Layouts**.
- 3 Then press the left/right icon to select the number of thumbnails to display. You can select 9-picture or 16-picture for thumbnail view mode.
- 4 You can press  to return to the previous menu or select any menu function.

Delete


- 1 Press  to enter the setup menu.
- 2 Press the up/down icon to select **Delete**.
- 3 Then press  to enter thumbnail view mode and use the navigation controls and press  to select or deselect the images. A ticked thumbnail means the image is selected. An unticked thumbnail means the image is not selected.
- 4 After you finish the selection, please press  to return to the previous menu. The frame will ask you to confirm the selection.
- 5 Press the **OK** to delete selected file(s), or press  to return to the previous menu.
- 6 After deleting the files, you can press  to return to the previous or select any menu function.





Rotate

- 1 Press  to enter the setup menu.
- 2 Press the up/down icon to select **Rotate**.
- 3 Then press left/right icon to rotate the selected image by the selected angle. The rotation angle will be automatically reset to zero after you move to another image.
- 4 You can press  to return to the previous menu or select any menu function.
- 5 Alternatively, you can touch the  icon to change a photo from landscape to portrait mode or back.




Calendar and clock settings

This DPF supports calendar and clock functions. To display the calendar and/or clock on the screen, you will need to do the following:


- 1 Press  to enter the setup menu.
- 2 Press the up/down icon to select **Calendar and Clock**.





- 3 Then press  to enter the **Calendar and Clock** setup menu, and use the up/down icon to select the function that you want to set. Press  to enter the function's submenu.
- 4 Please set the date and time when the first time you use this device. Press  to enter the **Date Time Setting** menu and use the left/right icons to move to different fields and use the up/down icons to adjust the date and time. Press  to confirm and return to the previous menu.
- 5 You can also use the navigation controls in this submenu to set:
 - a **Date Time Setting**
 - a **Display Clock**
 - b **Clock Type**
 - c **Display Digital Second**
 - d **Display Calendar**
 - e **Display Calendar Type**
 - f **Date Format**

System setup






- 1 In photo mode, press  to enter the setup menu.
- 2 Press the up/down icon to select **System Setup**.
- 3 Then press  to enter a submenu and use the navigation controls to set:
 - a **Brightness**
 - b **Language**
 - c **Auto Copy**
 - d **System Reset**
 - e **Format**
 - f **Firmware Version**
- 4 You can press  to return to the previous menu or select any menu function.

Auto copy

- 1 In photo mode, press  to enter the setup menu.
- 2 Press the up/down icon to select **System Setup**.




- 3 Then press  to enter the **System Setup** menu and use the navigation controls to select **Auto Copy** from this menu.
- 4 Then press  to enter the **Auto Copy** submenu. Press the left/right icons to make sure **On** shows on the screen. Press  to return to the previous menu.
- 5 After **Auto Copy** is turned on, when you insert a memory card into the DPF, a message asking you whether to use **Auto Copy** will appear.
- 6 Please press **OK** to confirm the selection and start copying image files from the memory card to the internal memory.
- 7 When the process is complete, remove the memory card.
- 8 Press  to return to the previous menu or select any menu function.

Format



 

- 1 In photo mode, press  to enter the setup menu.
- 2 Press the up/down icon to select **System Setup**.
- 3 Then press  to enter the **System Setup** menu and use the navigation controls to select **Format** from this menu.
- 4 Then press  to enter the **Format** submenu. All the files stored on the internal memory will be erased. Please press **OK** to confirm the selection or press  to return to the previous menu.
- 5 After format is finished, you can press  to return to the previous menu or select any menu function.

Slideshow mode




In slideshow mode, you can press the navigation controls to select the image you want to view, and the DPF will display all image files automatically starting from the selected image.

You can also press  to enter thumbnail view mode and use the navigation controls and press  to select or deselect the images. After you finish the selecting, please press  to return to the previous menu.

Editing a slideshow







- 1 In Slideshow mode, press  to enter the setup menu.
- 2 Press the up/down icon to select **Edit Slideshow**.
- 3 Then press  to go to thumbnail view mode and use the navigation controls and press  to select or deselect the images. A ticked thumbnail means the image is selected. An unticked thumbnail means the image is not selected.
- 4 After you finish the selection, please press  to return to the previous menu. The DPF will save your settings.

Slideshow setup

- 1 In Slideshow mode, press  to enter the setup menu.
- 2 Press the up/down icon to select **Slideshow Setup**.
- 3 Then press  to enter the required submenu and use the navigation controls to set:
 - a **Frequency**
 - b **Effect**
 - c **Order**
- 4 You can press  to return to the previous menu or select any menu function.

Error message indication

Below is the list of some error messages you might encounter when using this product. Possible solutions are also included.

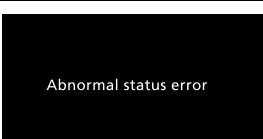Error message	Description
 <p>Disk full</p>	<p>The internal memory is full. Please remove some images files, so you can add new files.</p>
 <p>Invalid drive</p>	<p>The memory card may not be inserted properly. Please check the card and make sure it is inserted properly.</p>
 <p>Copy interrupt</p>	<p>You pressed the stop button, so the unit has stopped copying files.</p>
 <p>Decode fail</p>	<p>The file cannot be decoded correctly. Please ensure the file is compatible with the DPF. You also can contact your nearest service center for assistance.</p>
 <p>Abnormal status error</p>	<p>An unknown error occurred. Please ensure the file is compatible with the DPF. You can also contact your nearest service center for assistance.</p>
 <p>Not supported</p>	<p>The DPF does not support this file format. Please ensure the file is compatible with the DPF. You can also contact your nearest service center for assistance.</p>

Specifications

Item	Description
Display size	8" TFT LCD
Aspect ratio	4:3
Screen resolution	800 x 600
Internal memory	512 MB
Card readers	SD card 5-in-1 card reader (SD, MS, MS PRO, MMC, xD)
USB ports	A-type USB 2.0 B-type mini USB 2.0
Playback	Still image, thumbnails, slideshow
Supported formats	JPEG, BMP
Image viewing options	Rotate Delete Zoom in/out
Other features	Calendar and clock Automatic file copy Touch screen
Power supply	AC adapter: 100-240 V, 50/60 Hz Power requirement: 5 V, 1.5 A Power consumption: 7 W
Supported languages	English, French, German, Italian, Spanish, Dutch, Russian, Japanese, Traditional Chinese
Dimensions	258 x 206 x 74 mm (W x H x D)
Weight	810 g

Regulations and safety notices

FCC notice

This device has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Notice: Shielded cables

All connections to other computing devices must be made using shielded cables to maintain compliance with FCC regulations.

Notice: Peripheral devices

Only peripherals (input/output devices, terminals, printers, etc.) certified to comply with the Class B limits may be attached to this equipment. Operation with non-certified peripherals is likely to result in interference to radio and TV reception.

Caution

Changes or modifications not expressly approved by the manufacturer could void the user's authority, which is granted by the Federal Communications Commission, to operate this computer.

Operation conditions

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Notice: Canadian users

This Class B digital apparatus complies with Canadian ICES-003.

Remarque à l'intention des utilisateurs Canadiens

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Declaration of Conformity for EU countries

Acer hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Compliant with Russian regulatory certification



ME61

LCD pixel statement

The LCD unit is produced using high-precision manufacturing techniques. Nevertheless, some pixels may occasionally misfire or appear as black or red dots. This has no effect on the recorded image and does not constitute a malfunction.



Declaration of Conformity

We,

Acer Computer (Shanghai) Limited

3F, No. 168 Xizang Medium Road, Huangpu District,
Shanghai, China

Contact person: Mr. Easy Lai

Tel: 886-2-8691-3089 Fax: 886-2-8691-3000

Email: easy_lai@acer.com.tw

Hereby declare that:

Product: Digital Photo Frame

Trade Name: Acer

Model Number: AF318

SKU Number: AF318xxx ("x" = 0 ~ 9, a ~ z, or A ~ Z) or blank

Is compliant with the essential requirements and other relevant provisions of the following EC directives, and that all the necessary steps have been taken and are in force to assure that production units of the same product will continue to comply with the requirements.

EMC Directive 2004/108/EC as attested by conformity with the following harmonized standards:

- EN55022:1998 + A1:2000 + A2:2003, AS/NZS CISPR22:2002, Class B
- EN55024:1998 + A1:2001 + A2:2003
- EN61000-3-2:2000 + A2:2005, Class D
- EN61000-3-3:1995 + A1:2001

Low Voltage Directive 2006/95/EC as attested by conformity with the following harmonized standard:

- EN60950-1:2001 + A11:2004

RoHS Directive 2002/95/EC on the Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment.

Easy Lai

Easy Lai / Director

Acer Computer (Shanghai) Limited