

VIS 300/400 EN Setup Software

Operation Manual



Notice

The material contained in this manual consists of information that is proprietary to JAI PULNiX, Inc., and may only be used by the purchasers of the product. JAI PULNiX, Inc. makes no warranty for the use of its product and assumes no responsibility for any errors which may appear or for damages resulting from the use of the information contained herein. JAI PULNiX, Inc. reserves the right to make changes without notice.

Microsoft, Windows XP, Windows 2000, Windows 98, Windows NT, and Windows Explorer are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Warranty

For information about the warranty, please contact your factory representative.

Certifications

CE Compliance

The TS-9720/2030 cameras have been certified to conform to the requirements of Council Directive 89/336/EC for electromagnetic compatibility and to comply with the following European Standards:

Immunity:	EN 55024: 1998 + A1: 2001 + A2: 2003
Emissions:	EN 55022: 1998 + A1: 2000 + A2: 2003

All JAI PULNiX products bearing the CE mark have been declared to be in conformance with the applicable EEC Council Directives. However, certain factory-installed options or customer-requested modifications may compromise electromagnetic compatibility and affect CE compliance. Please note that the use of interconnect cables that are not properly grounded and shielded may affect CE compliance.

Contact JAI PULNiX Applications Engineering Department for further information regarding CE compliance.

FCC

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area may cause harmful interference, in which case the user will be required to correct the interference at his own expense.



WARNING

Changes or modifications to this unit not expressly approved by the party responsible for FCC compliance could void the user's authority to operate the equipment.

VIS 300/400 EN Setup Software JAI PULNiX, Inc. 625 River Oaks Parkway San Jose, CA 95134 Tel:(408) 383-0300 Tel:(800) 445-5444 Fax:(408) 383-0301 E-mail: imaging@jaipulnix.com www.jaipulnix.com

CAPULNIX[®] VIS 300/400 EN Setup Software

Table of Contents

1	Do	cument Overview			
2	Inst	stallation and Operation			
	2.1	Installation			
		2.1.1. System Requirements 3			
		2.1.2 Locating the Software 3			
	22	Login 3			
	2.2	Natural Adaptar Satur			
	2.3				
	2.4	Main Window			
		2.4.1 Properties that hold the configuration part			
		2.4.2 Video Window where the image tools are found			
		2.4.3 File Menu Bar			
		File=>Open Camera			
		File=>Open Camera List			
		File=>Save Camera List			
		File=>Exit			
		2.4.4 Tools Menu Bar			
		Tools=>User Administration			
		View Error Log			
		2.4.5 Help Menu Bar			
		About			
	2.5	Camera Properties			
		2.5.1 Camera Property Menus			
		File=>Import Settings from File to Camera			
		File=>Export Settings from Camera(s) to File(s)			
		File=>Page Setup			
		File=>Print Preview shows the print on the screen before printing9			
		File=>Print sends the print job to the printer10			
		File=>Exit exits the program10			
		2.5.2 Menu Bar Edit Commands			
		Edit=>Copy Settings from Camera10			
		Edit=>Paste Settings to Camera(s)10			
		2.5.3 Tree view			
		Context menus			
		=>Search for Cameras			
		=>Open Cameras			
		$2.5.4 \Rightarrow$ Advanced Settings Sub Menus			
		=>Advanced Settings=>Save/Restore Settings inside Camera(s)=>			
		Save Settings into Flash Memory			
		=>Advanced Settings=>Save/Restore Settings inside Camera(s)=>			
		Restore Settings from Flash Memory 13			
		=>Advanced Settings=>Export Settings from Camera(s) to File(s)13			
		=>Advanced Settings=>Import Settings from File to Camera			
		=>Advanced Settings=>Copy Settings from Camera			
		=>Advanced Settings=>Paste Settings to Camera(s)			
		=>Advanced Settings=>Update Firmware in Camera(s)			
		=>Advanced Settings=>Reboot Camera(s)			
		=>Advanced Settings=>Configure Storage Memory in Camera			
		=>Advanced Settings=>Telnet Camera(s)			
		=>Advanced Settings=>1 ime synch from PC to Camera			
		(temporary function)			

Page vi Appendix

	2.5.5	=>Refresh Properties (toggle function)	14
	2.5.6	Property grid	15
2.6	Vide	o Window	18
	2.6.1	Video Menu Menus	19
		File=>Open	19
		File=>Save As	19
		File=>Page Setup	19
		File=>Print Preview	19
		File=>Print	19
		File=>Exit	19
	2.6.2	Edit Menu Menus	20
		Edit=>Copy	20
		Edit=>Paste	20
	2.6.3	View Menu Menus	20
		View=>Full Size/Half Size/Quad Size	20
		View=>Roll Bar/Tilt Line/Focus Bar/Measuring Box	20
		View=>Image Properties	20
		View=>Use TCP/IP	21
		View=>Color Interpolate	21
		View=>Image Processing	21
	2.6.4	Capture Menu Menus	21
		Capture=>Capture Images (toggle function)	21
		Capture=>Capture folder	23
		Capture=>Select Image Encoder	23
		Capture=>Save Images in RAW format (toggle function)	23
	2.6.5	Tree view	23
		Context menus	23
		=>Search for cameras	24
		=>Open Camera	24
		=>Manual Exposure	24
		=>Laser Setup	24
		=>Image Processing	25
	2.6.6	Video Image	25
		Context menus	25
		=>Unselect Camera	26
		=>View Image Properties	26
		=>Manual Exposure	26
		=>Laser Setup	26
		=>Image Processing	26
		Zoom Video Image	27
	2.6.7	Toolbar	27
		Display Modes	27
		Setup Tools	28
		Trigger Modes	34
		Settings Dialog	35
	2.6.8	Status Bar	36
	2.6.9	Focus Bar Waveform	37
		File=>Save As	38
		File=>Page Setup	38
		File=>Print Preview	38
		File=>Print	38
	2.6.10) Edit=>Copy	39

PULNIX* VIS 300/400 EN Setup Software

	2.6.11 Image Properties Window	
	2.6.12 Mar	nual Exposure Window 42
	Shutter Value:	
	Gain Value:	
	VTop/VBottom Values:	
	2.6.13 Image Processing Window	
	2.6.14 Laser Setup Window	
	Laser Setup Wizard	
	2.7 Error Log Window	
	Context Menus	
3	Configuration	
	3.1 User administration	
	3.2 Firmware update	
	3.3 Configure Storage Memory	





VIS 300/400 EN Setup Software

List of Figures

FIGURE 1.	EN Setup Icon	3
FIGURE 2.	ENSetup Login	3
FIGURE 3.	EN Camera Setup Main Window.	4
FIGURE 4.	EN Camera File Menu Bar Options	5
FIGURE 5.	Open Camera IP Address Dialog Box	5
FIGURE 6.	Tools Menu	6
FIGURE 7.	About Command	6
FIGURE 8.	Camera Properties Window	7
FIGURE 9.	Camera Property File Menu	8
FIGURE 10.	Page Setup Dialog Box.	9
FIGURE 11.	A preview of the image being sent to the printer	9
FIGURE 12.	Edit Commands	.10
FIGURE 13.	Camera Property Tree View	.11
FIGURE 14.	Camera Properties Context Menu	.12
FIGURE 15.	Search for Cameras Message Box	.12
FIGURE 16.	Advanced Settings Sub-Menu	.13
FIGURE 17.	Camera Category Description	.15
FIGURE 18.	Property Grid Shows Value Description	.16
FIGURE 19.	Property Description in the Bottom of the Window	.17
FIGURE 20.	Editing the Value Field	.17
FIGURE 21.	Editing a Checked List	.17
FIGURE 22.	Editing the Value Field	.17
FIGURE 23.	The Video Window	.18
FIGURE 24.	Video Window File Menu Bar	.19
FIGURE 25.	Video Window Edit Menu Bar	.20
FIGURE 26.	Video Window File Menu Bar	.20
FIGURE 27.	Video Window Capture Menu Bar	.21
FIGURE 28.	Filename Example 1:	.21
FIGURE 29.	Filename Example 2:	.22
FIGURE 30.	Filename Example 3:	.22
FIGURE 31.	Select Encoder Menu	.23
FIGURE 32.	Video Window Tree View Menus	.24
FIGURE 33.	Video Window Context Menus	.26
FIGURE 34.	Tool Bar	.27
FIGURE 35.	Display Modes	.28
FIGURE 36.	Setup Tools Menu	.29
FIGURE 37.	Camera Roll Bar	.30
FIGURE 38.	Camera Tilt Line	.31
FIGURE 39.	Camera Focus Bar.	.32
FIGURE 40.	Measuring Box	.33
FIGURE 41.	Trigger Modes	.34
FIGURE 42.	Select Menus from the Content Window.	.34
FIGURE 43.	Video Window Settings Dialog Box	.36
FIGURE 44.	Status Bar displays the Pixel values	.36
FIGURE 45.	Focus Bar Waveform Screen	.37
FIGURE 46.	Focus Bar Waveform Menus	.38
FIGURE 47.	Waveform Screen Commands.	.39
FIGURE 48.	Image Properties Context Menu	.40
FIGURE 49.	Image Properties with the TCP/IP option selected	.41



Manual Exposure Window	42
Image Processing Context Menu	43
Vehicle Detector Settings	44
Laser Vehicle Collect Data button	45
Laser Setup Wizard Start screen	46
Laser Wizard data collection	47
Successful data collection	48
Wizard with Offset Values	48
Wizard Filter Size Dialog Box	49
Hysteresis Count	50
Trigger Output Polarity	50
Laser Setup Wizard Finish Window	51
Error Log Window	52
Close-up of an Error Log Context Menu	52
User Administration Window	53
User Credentials Dialog	53
Firmware Update	54
Firmware Update	54
Files Drop-down list	55
Internal Storage Settings	56
IP Address Conflict Window	58
Set New IP Address Window	59
	Manual Exposure Window Image Processing Context Menu Vehicle Detector Settings Laser Vehicle Collect Data button Laser Setup Wizard Start screen Laser Wizard data collection Successful data collection Wizard with Offset Values Wizard Filter Size Dialog Box Hysteresis Count Trigger Output Polarity Laser Setup Wizard Finish Window Error Log Window Close-up of an Error Log Context Menu User Administration Window User Credentials Dialog Firmware Update Files Drop-down list Internal Storage Settings IP Address Conflict Window





JAI PULNiX Intelligent Transportation Systems

Vehicle Imaging System 300 and 400

(VIS 300/400)

EN Setup Software

Operation Manual



1 Document Overview

This document describes the EN Setup program for the VIS CAM 300/400 Vehicle Imaging System. The functionality described in this document is based on released version 1.2.0 of ENSetup.

The EN Setup Program is used for configuring, adjusting and aligning the cameras as well as viewing and analyzing the images.

Tools are found for adjusting zoom and focus and aligning roll and tilt.

Images can be viewed, saved and printed. Images can be transferred to other applications.

The EN Setup program is used when installing and setting up the cameras. It can be used for maintenance monitoring and troubleshooting.

The EN Setup program is used together with the VIS CAM 300/400 Installation Manual where the practical installation details are found. In this manual is also found the actual parameters to be set up.

EN Camera details are found in the EN Camera documentation.

Terminology:

"EN Camera" is the JAI PULNIX TS(C)-9720EN and TS(C)-2030EN camera."PC" is the device on which the application is run."Primary mouse button" is the left button for right-hand mouse set-up."Secondary mouse button" is the right button for right-hand mouse set-up.

2 Installation and Operation

2.1 Installation

To install the program follow the EN Setup Install Shield Wizard. The install program adds a shortcut to the desktop and in the "Start->All Program" menu.

2.1.1 System Requirements

- Windows XP installed with Service Pack 2
- Microsoft .NET Framework 2.0

Note: Microsoft .NET Framework 2.0 installation is required prior to ENSetup software installation. The .NET Framework software is available on the fJAI software download site. Please visit www.jai.com. Click Traffic Solutions and select the SOFTWARE button on the left menu icons.

• The host PC must have at least a 1.8 GHz processor, and 512 MB of RAM

2.1.2 Locating the Software

You will need to install Microsoft .NET Framework 2.0 prior to ENSetup installation. See section 2.1.1. Go to www.jai.com. Click *Traffic Solutions* and select the *SOFTWARE* button on the left menu. Find the ENSetup software.

Double clicking on the EN Setup icon starts the application

FIGURE 1. EN Setup Icon



2.2 Login

The program is protected by a login screen that asks for the User name and Password.

FIGURE 2. ENSetup Login



At the first login the User name is default set to "Administrator" and the Password is "Password". This is filled in automatically only the first time. Please change the password or/and adds users.



The last User name is automatically filled in the next time the program is started.

Tip If the password is removed for the last selected user, then ENSetup will startup without displaying the Login Dialog. By holding the Shift key down during startup, the Login dialog will be forced to be displayed anyhow so the current user can be changed!

There are three user levels: Restricted user, Supervisor and Administrator. Adding users and user levels are described in section 3.1.

2.3 Network Adapter Setup

After successful login ENSetup automatically searches for cameras connected to all network adapters on the PC. If any IP-address problems are detected then a window will be displayed and it will be possible to correct these problems (see appendix B for a description on how to correct IP-address problems).

FIGURE 3. EN Camera Setup Main Window



Note: The EN detection process does not locate Cameras that are not part of the local subnet. Use the Open Camera, or Open Cameras option to connect to cameras outside of the local subnet. (See section 2.4.3 for more information.)

2.4 Main Window

The EN Camera Setup program has two sections:

2.4.1 Properties that hold the configuration part

2.4.2 Video Window where the image tools are found

Each section is selected by clicking the associated bar in the opening window shown in Figure 2.3.

Tip By holding the shift key down when Properties or Video Window is activated, the windows are opened in default size and position.

2.4.3 File Menu Bar

☆ E	N Carr	iera Setup	
File	<u>T</u> ools	<u>H</u> elp	
0	pen Car	nera	ideo Window
Open Camera List Save Camera List		J	
E	<u>k</u> it		

FIGURE 4. EN Camera File Menu Bar Options

2.4.3 (a) File=>Open Camera

This command opens a specific camera by specifying an IP-address. This option is useful if the camera is not on a local subnet and therefore not found automatically during a search (Section 2.3 on page 4). This will open an "Open Camera" dialog where the IP-address can be typed in.

FIGURE 5. Open Camera IP Address Dialog Box



2.4.3 (b) File=>Open Camera List

This command opens a list of IP-addresses. This option is useful, if the camera is not on a local subnet and therefore not found automatically during a search (Section 2.3 on page 4)

2.4.3 (c) File=>Save Camera List

This command saves the current list of cameras to a file that can be retrieved later.

2.4.3 (d) File=>Exit

The Exit command exits the program

2.4.4 Tools Menu Bar

Tools=>User Administration 2.4.4 (a)

The User Administration command updates the list of users (see section 3.1 for details)



FIGURE 6. Tools Menu



2.4.4 (b) View Error Log

The View Error Log command opens a new window where all errors and information messages from the cameras and ENSetup are shown (see section 2.5 for details)

2.4.5 Help Menu Bar

2.4.5 (a) About

The About command shows the program version and a link to an Internet site where the latest version of the program can be down loaded.

FIGURE 7. About Command

🛠 EN Cam	iera Setu	ıp 💶 🗖 🚺
<u>File Tools</u>	Help	
Propert	About	eo Window

2.5 Camera Properties

The Camera Properties window is shown in Figure 8 on page 7.

The left side of the window shows a tree view of the cameras found (see section 2.3).

The right side of the window shows a property-grid of the configuration parameters.

The window is closed by clicking the Windows Close button and opened using the Properties bar.

🛠 Camera Properties		
File Edit		
	1 - Network	
10.0.0.101 - 00-0C-DF-80-01-4B	MAC Address	00-0C-DE-80-01-48
	IP Address	10.0.0.101
10.0.0.108 - 00-0C-DF-80-00-C3	Factory Info	JAIPHINX Inc
	Model Name	CAM TS9720COL
	Device Version	Aug 5 2005
	User Information	Enter Lane Number
	Inter-packet Delay	10000
	Light Sensor A-side IP source	10.0.0.1
	Light Sensor A-side Port source	4000
	Light Sensor B-side IP source	10.0.0.1
	Light Sensor B-side Port source	4000
	Light Sensor A-side swap	Normal
	Light Sensor B-side swap	Normal
	Ethernet (EN) DATA_RDY Transmit.	FullFrame
	USER_DYNAMIC_DATA timeout.	0
	System CTL/ERROR IP destination	0.0.0.0
	System CTL/ERROR Port destination	1400
	Error Disable Mask	48
	NTP Client Control	255
	NTP-Server 1 IP-address	255.255.255.255
	NTP-Server 2 IP-address	255.255.255.255
	NTP-Server 3 IP-address	255.255.255.255
	NTP Max estimated Error	10000
	Real Time Clock	1. januar 1970 23:19:11
	EN's Static IP Address	10.0.0.101
	EN's Subnet Mask	255.255.255.0
	EN's Gateway	255.255.255.255
	Static/Dynamic IP Address Allocation	Static, use EN's Static IP address
	NTP estimated error (us)	0
	NTP Status	Unknown
	NTP Restart Count	0
	Camera Model	TSC9720EN
	2 - Ingger	
	Image Acquisition Image 1	FullFrame
	Image Acquisition Image 2	FullFrame
	External Frigger Source	TTL, Serial, Ethernet
	Trigger Edge Select	Hising
	Trigger Pre-eage Validation Count	10
	Trigger Fost-edge Validation CoUnt	. 0
	TRIG (DATA_ID_meanage to Trigger association time (After TRIG (DATA_ID_meanage to Trigger association time (Pet	
	THIGTORIA_TO message to trigger association time (Ben	JI 0
	MAC Address MAC Address of the camera This will be used for identification of the camera on the netwo	ork, since this address will be unique

FIGURE 8. Camera Properties Window



2.5.1 Camera Property Menus

Using the commands on the File menu the camera properties can be Imported or Exported from or to files, or printed out.

FIGURE 9. Camera Property File Menu

File	Edit			
Ir E:	Import Settings from File to Camera Export Settings from Camera(s) to File(s)			
P.	age Setyp			
Pi	Print Pre <u>v</u> iew			
<u> </u>	rint			
E	xit			

2.5.1 (a) File=>Import Settings from File to Camera

The Import Settings from File to Camera command opens a file-open dialog box for selecting the camera-settings file to import into the selected camera. This feature will set up all camera properties *including camera-specific settings like the static IP-address and User Information* so it will for instance be used for "Restoring" the settings from file to a new camera if the camera hardware has been replaced. If only the "System specific" settings need to be setup then please use the *Edit Copy Settings from Camera* and *Edit Paste Settings to Camera(s)* instead!

2.5.1 (b) File=>Export Settings from Camera(s) to File(s)

The Export Settings from Camera(s) to File(s) command opens a file-save dialog box for selecting the names of the camera-settings files to save. Default filenames will be generated automatically based on camera IP-address and date/time. This feature will "Backup" all camera properties *including camera-specific settings like the static IP-address and User Information* so it can be used for "Restoring" the settings from file to a new camera if the camera hardware has been replaced.

2.5.1 (c) File=>Page Setup

The Page Setup command opens a dialog box for selecting paper format.

FIGURE 10. Page Setup Dialog Box.

	A second status data for an
Paper Size: A4 Source: Au	to T
Orientation	Margins (millimeters)
• Portrait	Left: 10 <u>B</u> ight 10
1200 0	Top: 10 Bottom 10

2.5.1 (d) File=>Print Preview shows the print on the screen before printing

FIGURE 11. A preview of the image being sent to the printer.

🔜 Print preview				
5 p • 0 0	📟 🕮 📟 🗌	Close	Page 7	1 🛨
	Properties for Came	ra 10.0.0.100		
	La construir de la construir d			
		antilarmatican		



- 2.5.1 (e) File=>Print sends the print job to the printer
- 2.5.1 (f) *File=>Exit* exits the program.

2.5.2 Menu Bar Edit Commands

FIGURE 12. Edit Commands



2.5.2 (a) Edit=>Copy Settings from Camera

This command will copy the current settings from the selected camera into memory so it later on can be pasted into other cameras. This makes it very easy to copy system specific settings from one camera to many other cameras. These settings do not include camera-specific settings such as Static IP-address and User Information but only the system-specific information's.

2.5.2 (b) Edit=>Paste Settings to Camera(s)

This command will paste the previously copied system-specific settings to one or more cameras selected. This makes it very easy to copy system specific settings from one camera to many other cameras. These settings do not include camera-specific settings such as Static IP-address and User Information but only the system-specific information's.

2.5.3 Tree view

The cameras in the tree view are identified by their IP and MAC addresses. Color cameras are identified with the small "Rainbow" icon behind the camera icon.

The property-grid shows the properties for the camera selected. The camera is selected by clicking the primary mouse button on the camera icon or label.

More cameras can be selected at the same time by holding the Ctrl-key activated while clicking the primary mouse button while pointing on the cameras. When more cameras are selected the property-grid shows the properties that are equal for the cameras. Properties that are not equal are left blank.

Properties can also easily be set to the same value for more cameras this way.

🛠 Camera Properties		
File Edit		
	E 1 - Network	×
10.0.0.101 - 00-0C-DF-80-01-4B	MAC Address	
	ID Address	
	Eastern Jafa	
	Medel Name	JAIPOLINIA IRC.
10.0.0.65 - 00-0C-DF-80-00-00	Device Marie	Aug E 200E
_		Ady 5 2005
	User Information	
	Lieb Cause & side ID serves	
	Light Sensor A-side IP source	
	Light Sensor A-side Port source	
	Light Sensor B-side IP source	
	Light Sensor B-side Port source	Marriel
	Light Sensor A-side swap	Normal
	Light Sensor B-side swap	Normal
	Ethernet (EN) DATA_RDY Transmit.	FullFrame
	USER_DYNAMIC_DATA timeout.	
	System CTL/ERRUR IP destination	0.0.0
	System CTL/ERRUR Port destination	1400
	Error Disable Mask	48
	NTP Client Control	
	NTP-Server 1 IP-address	
	NTP-Server 2 IP-address	255.255.255.255
	NTP-Server 3 IP-address	255.255.255.255
	NTP Max estimated Error	10000
	Real Time Clock	
	EN's Static IP Address	
	EN's Subnet Mask	255.255.255.0
	EN's Gateway	255.255.255.255
	Static/Dynamic IP Address Allocation	Static, use EN's Static IP address
	NTP estimated error (us)	
	NTP Status	
	NTP Restart Count	0
	Camera Model	
	🗆 2 - Trigger	
	Image Acquisition Image 1	
	Image Acquisition Image 2	FullFrame
	External Trigger Source	
	Trigger Edge Select	
	Trigger Pre-edge Validation count	10
	Trigger Post-edge Validation count	10
	Trigger to TRIG/DATA_ID message association time (Af	iter 0
	TRIG/DATA_ID message to Trigger association time (Be	efon O
	Device Version Device Version	



2.5.3 (a) Context menus

Right-side clicking the mouse on the camera-tree side of the CAMERA PROPERTIES window activates the context menus.

The menu is shown in Figure 2.14 and applies for the camera(s) selected.

FIGURE 14. Camera Properties Context Menu

🛠 Camera Properties				
File Edit				
	10.0.0.101	- 00-0C-DF-80-01-48	1 - Network MAC Address	
	10.0.0.108	- 00-0C-DF-80-00-C3	IP Address Factory Info	
	10.0.0.65 -	Search for Camera Open Camera	as evice Version ser Information	
		Advanced Settings	s ight Sensor A-side IP source	
		Refresh Properties	s ight Sensor A-side Port source ight Sensor B-side IP source	
			Light Sensor B-side Port source	
			Light Sensor A-side swap	
			Light Sensor B-side swap	
			Ethernet (EN) DATA_RDY Transmit.	

2.5.3 (b) =>Search for Cameras

This command starts a new search for cameras on the local network. The message box below is shown when ENSetup opens the connections.

FIGURE 15. Search for Cameras Message Box



If any IP-address problems are detected then a window will be displayed and it will be possible to correct these problems (see appendix C for description on how to correct IP-address problems).

2.5.3 (c) =>Open Cameras

This command opens a specific camera by specifying an IP-address. This can be used, if the camera is not on a local subnet and therefore not found automatically during a search (Section 2.3 on page 4 or Section 2.4 on page 4).



2.5.4 => Advanced Settings Sub Menus

This command opens up a sub-menu with all available advanced settings.

FIGURE 16. Advanced Settings Sub-Menu

Search for Cameras Open Camera		
Advanced Settings 🔸	Save/Restore Settings inside Camera(s) 🕨	Save Settings into Flash Memory
Refresh Properties	Export Setting from Camera(s) to File(s) Import Settings from File to Camera	Restore Settings from Flash Memory
	Copy Settings from Camera Paste Settings to Camera(s)	
	Update Firmware in Camera(s) Reboot Camera(s)	
	Configure Storage Memory in Camera	
	Telnet Camera(s)	
	Timesynch from PC to Camera(s)	

2.5.4 (a) =>Advanced Settings=>Save/Restore Settings inside Camera(s)=>Save Settings into Flash Memory

This command saves the current setting in the camera as shown by EN Setup into the cameras flash memory. The camera will then start up with these settings next time it reboots.

2.5.4 (b) =>Advanced Settings=>Save/Restore Settings inside Camera(s)=>Restore Settings from Flash Memory

This command loads the settings from the cameras flash memory into the current setting of the camera. This can be used for restoring settings from last time it was saved in the camera and thereby ignoring changes that have been made since then.

2.5.4 (c) =>Advanced Settings=>Export Settings from Camera(s) to File(s)

This command opens a file-save dialog box for selecting the names of the camera-settings files to save. Default filenames will be generated automatically based on camera IP-address and date/time. This feature will "Backup" all camera properties **including camera-specific settings like the static IPaddress and User Information** so it can be used for "Restoring" the settings from file to a new camera if the camera hardware has been replaced.

2.5.4 (d) =>Advanced Settings=>Import Settings from File to Camera

This command opens a file-open dialog box for selecting the camera-settings file to import into the selected camera. This feature will setup all camera properties *including camera-specific settings like the static IP-address and User Information* so it will for instance be used for "Restoring" the settings from file to a new camera if the camera hardware has been replaced. If only the "System specific" settings

VIS 300/400 EN Setup Software

need to be setup then please use the Advanced Settings=>Copy Settings from Camera and Advanced Settings=>Paste Settings to Camera(s) instead!

2.5.4 (e) =>Advanced Settings=>Copy Settings from Camera

This command will copy the current settings from the selected camera into PC memory so it later on can be pasted into other cameras. This makes it very easy to copy system specific settings from one camera to many other cameras. These settings do not include camera-specific settings such as Static IP-address and User Information but only the system-specific information's.

2.5.4 (f) =>Advanced Settings=>Paste Settings to Camera(s)

This command will paste the previously copied system-specific settings to one or more cameras selected. This makes it very easy to copy system specific settings from one camera to many other cameras. These settings do not include camera-specific settings such as Static IP-address and User Information but only the system-specific information's.

2.5.4 (g) =>Advanced Settings=>Update Firmware in Camera(s)

This command opens a new dialog box for uploading firmware to the cameras. See Section 3.2 on page 54 for details.

2.5.4 (h) =>Advanced Settings=>Reboot Camera(s)

This command reboots the camera(s) selected

2.5.4 (i) =>Advanced Settings=>Configure Storage Memory in Camera

This command opens a new dialog box where the internal image queue settings can be modified. See section 3.3 for details.

2.5.4 (j) =>Advanced Settings=>Telnet Camera(s)

This command opens a new window with a telnet session for each selected camera.

2.5.4 (k) =>Advanced Settings=>Time synch from PC to Camera (temporary function)

This command sends the UTC-time from the PC's internal clock to the camera(s) selected.

2.5.5 =>Refresh Properties (toggle function)

This command reads the values from the camera(s) every second. Stops reading when toggled off or if a property value from the property list is selected.

2.5.6 Property grid

The listings in the property grid of the CAMERA PROPERTIES can be shown in alphabetic order or categorized in 9 categories as shown in Figure 17 on page 15.

Each category can be expanded by clicking on the "+" in front of the category number and compressed by activating the "-".

When a category is selected a description is shown in the bottom of the window.

FIGURE 17. Camera Category Description

Categorized listing	Alphabetiç listing
🛠 Camera Properties	
File	
10.0.0.100 - 00-0C-DF-80-00-28	
10.0.0.101 - 00-0C-DF-80-00-20	± <u>1-Network</u> ± 2-Trigger
10.0.0.102 - 00-0C-DF-80-00-21	
	5 - ADR Control
	1 7 - Noise filter
	8 - Version
	🗄 9-Status
	1 - Network
	Description



When a category is maximized the values are shown as in Figure 18 on page 16. Some values can be setup by the user and some are read-only (indicated by grey color text)

🛠 Camera	Properties		
File	riopernes		
File			
	10.0.0.100 - 00-0C-DF-80-00-2B		
		Device Version	May 19 2005
	10.0.0.101 - 00-0C-DF-80-00-20	User Information	Lane1
		Inter-packet Delay	0
	10.0.0.102 - 00-0C-DF-80-00-21	Light Sensor A-side IP source	10.0.50
		Light Sensor A-side Port source	4001
		Light Sensor B-side IP source	10.0.50
		Light Sensor B-side Port source	4001
		Ethernet (EN) DATA_RDY Transmit	FullFrame
		TRIG/DATA_ID_ACK & DATA_RDY IP destination	0.0.0.0
		TRIG/DATA_ID_ACK & DATA_RDY Port destination	1402
		System CTL/ERROR IP destination	0.0.0.0
		System CTL/ERROR Port destination	1400
		Error Disable Mask	None
		Real Time Clock	23. juni 2005 11:26:42
		EN's Static IP Address	10.0.0.100
		EN's Subnet Mask	255.255.255.0
		EN's Gateway	255.255.255.255
		Static/Dynamic IP Address Allocation	Static, use EN's Static IP address
		🛛 2-Trigger	
		Image Acquisition Image 1	FullFrame
		Image Acquisition Image 2	FullFrame
		External Trigger Source	TTL
		Trigger Edge Select	255
		Trigger Pre-edge Validation count	10
		Trigger Post-edge Validation count	10
		Trigger to TRIG/DATA_ID message association time (After Trig	0
		TDIC /DATA ID I- Times	lo 🔟
		Trigger Pre-edge Validation count Pre-trigger stable state in 0.1 milliseconds (ms) The Pre-Filter requires that the TTL trigger state just prior to the trigger edge be stable for a configurable time period before the trigger edge is accepted as a valid trigger. If the trigger state is not stable during the entire Pre time window, then the trigger edge is ignored, no image is captured by the EN, and an error message is sent to the LC (False Trigger error)	

FIGURE 18. Property Grid Shows Value Description

When a property is selected a description is shown in the bottom of the window (Figure 19 on page 17)

FIGURE 19. Property Description in the Bottom of the Window

L			
	Image Acquisition Image 1	FullFrame	
	Image Acquisition Image 2	FullFrame	
	External Trigger Source	TTL	
	Trigger Edge Select	255	
	Trigger Pre-edge Validation count	10	
	Trigger Post-edge Validation count	10	
	Trigger to TRIG/DATA_ID message association time (After Trig	0	-
	TRICIDATA ID	n	•
	Trigger Pre-edge Validation count		
	Pre-trigger stable state in 0.1 milliseconds (ms)		
	the Dre Eiller requires that the TTL trigger state just grier to the trigger adaptive state for a configurable time period before the		

The Pre Filter requires that the TTL trigger state just prior to the trigger edge be stable for a configurable time period before the trigger edge is accepted as a valid trigger. If the trigger state is not stable during the entire Pre time window, then the trigger edge is ignored, no image is captured by the EN, and an error message is sent to the LC (False Trigger error)

Editing the value field can be done via a drop list as shown in Figure 20 on page 17. Clicking the primary mouse button on the value field activates the drop list and the function can be chosen from the list.

FIGURE 20. Editing the Value Field

EIN S Galeway	200.200.200.200	
Static/Dynamic IP Address Allocation	Static, use EN's Static IP address	1
2 - Trigger	Static, use EN's Static IP address	
Image Acquisition Image 1	Dynamic, let the DHCP server assign	
Image Acquisition Image 2	Fuiriane	

The drop list can also be a checked drop list as shown in Figure 21 on page 17.

FIGURE 21. Editing a Checked List

Image Acquisition Image 2	ruiriane	
External Trigger Source	TTL, Ethernet	-
Trigger Edge Select	TTL Trigger	
Trigger Pre-edge Validation count	Serial Trigger	
Trigger Post-edge Validation count	✓ Ethernet Trigger	
Trigger to TRIG/DATA_ID message association time (After Trig		
TRIG/DATA_ID message to Trigger association time (Before Tr		
Source of TRIG/DATA_ID Number		
TRIO ID LTL ID		

The value field can be filled in by the user as shown for the IP Address in Figure 22 on page 17

FIGURE 22. Editing the Value Field

Inter-packet Delay	(U)	
Light Sensor A-side IP source	10.0.050	
Light Sensor A-side Port source	4001	



2.6 Video Window

The VIDEO WINDOW is shown in Figure 23 on page 18.

The left side of the window shows a tree-view of the cameras found (Section 2.3 on page 4 and Section 2.4 on page 4).

The right side of the window is the video image.

In the top of the window is a toolbar with commands and in the bottom of the window is a status line.

The window is closed by clicking the red X in the upper right corner and is opened again by clicking the *Video Window* bar in the *EN CAMERA SETUP* dialog box.



FIGURE 23. The Video Window



2.6.1 Video Menu Menus

FIGURE 24. Video Window File Menu Bar



2.6.1 (a) File=>Open...

This command opens a file in the VIDEO WINDOW. This can be used for analyzing saved images. The value for some of the image tags will be displayed on-screen when the files are opened.

TIP Using drag-and-drop from e.g. explorer can also open Images. It is possible to easily browse between the selected images using the arrow-keys or the mouse scroll button. It is further more possible to see the image properties of the images.

2.6.1 (b) File=>Save As...

This command saves the image shown in the VIDEO WINDOW to a file. The format of the image saved can be selected from a drop list (JPEG, TIFF, PNG, BMP and GIF)

2.6.1 (c) File=>Page Setup

This command opens a dialog box for setting up paper format (Figure 10 on page 9)

2.6.1 (d) File=>Print Preview

This command shows the print on the screen before printing. The video image and activated tools are printed.

2.6.1 (e) File=>Print...

This command prints out the VIDEO WINDOW and activated tools (see section 3.1) to the default printer.

2.6.1 (f) File=>Exit

This command exits the program



2.6.2 Edit Menu Menus

FIGURE 25. Video Window Edit Menu Bar

Eile	Edit	⊻iew	<u>C</u> apture
	⊆c	ру С	:rl+C
	Pa	aste Cl	rl+V

2.6.2 (a) Edit=>Copy

This command copies the image in the VIDEO WINDOW to the clipboard for pasting to other programs (Word, Paint etc.)

2.6.2 (b) Edit=>Paste

This command inserts the image from the clipboard to the VIDEO WINDOW

TIP Using drag-and-drop from e.g. explorer can also open Images.

2.6.3 View Menu Menus

FIGURE 26. Video Window File Menu Bar



2.6.3 (a) View=>Full Size/Half Size/Quad Size

This command selects the display mode. See Section 2.6.7 (a on page 27 for a full description.

2.6.3 (b) View=>Roll Bar/Tilt Line/Focus Bar/Measuring Box

This command selects the setup tools. See Section 2.6.7 (b on page 28 for a full description.

2.6.3 (c) View=>Image Properties

This command opens a new window that displays the image properties for the image displayed in the Video Window. See Section 2.6.11 on page 39 for a full description of the Image Properties Window.

2.6.3 (d) View=>Use TCP/IP

This command selects if the images are transferred from the camera to the ENSetup using both TCP/IP and UDP/IP (default on test channel) or only UDP/IP on the test channel. The images transferred using TCP/IP are "real" images identical to the ones any Lane Controller would receive. They are ONLY generated based on "real" triggers (TTL, Ethernet and RS-485) – NOT the images generated in the "Snap" and "Live" trigger modes! These images are tagged with all available information inside the EN-cameras opposed to the test channel images transferred using UDP/IP. These test channel images are ONLY tagged on the PC-side and will not contain information regarding the camera settings etc.

2.6.3 (e) View=>Color Interpolate

This command selects if the color interpolation will be performed on images from the Color ENcameras. If this is deselected the "raw" images will be displayed instead of color images.

2.6.3 (f) View=>Image Processing

This command opens a new window that displays the image processing tools for the image displayed in the Video Window. By using this Image Processing it is possible to adjust the Gamma-correction, Brightness, Contrast and Saturation on the displayed images. This will not change the images saved using ENSetup but the Image Processing can also be activated on the images printed out using the *File Print*...menu. See Section 2.6.13 on page 43 for a full description of the Image Processing Window.

2.6.4 Capture Menu Menus

FIGURE 27. Video Window Capture Menu Bar



2.6.4 (a) Capture=>Capture Images (toggle function)

This command starts or stops saving images to the hard disk.

Be careful: This can generate a lot of data to the hard disk. The images are tagged with the IP-Address and the UTC time from when the image was taken plus the type of image.

FIGURE 28. Filename Example 1:



Explanation:

- 1. Camera IP address: 10.0.0.101
- 2. Image capture date: May 31, 2006



- 3. Timestamp (UTC) 10:56:34.897
- 4. TST (test) image captured from the "test-channel" (UDP transfer between camera and PC)
- 5. JPEG compressed image

Note: The image tags are generated inside ENSetup!

FIGURE 29. Filename Example 2:

1 2 3 4 5 6 10.0.0.101_2006-05-31_10-56-34-897_2_ORG.JPG

Explanation:

- 1. IP address of the camera: 10.0.0.101
- 2. Date image was captured: May 31st, 2006
- 3. Timestamp (UTC) 10:56:34.897
- 4. Second image in sequence
- 5. "ORG" (original but converted) image captured from the camera (TCP transfer between camera and PC). The image tags are generated inside the camera and therefore contain information such as error status, Light Sensor readings, exposure settings, NTP status and other important data from the time of the image capture inside the camera. When images are saved the selected Image Encoder will be used. So if the camera for instance generates TIFF images, then ENSetup is capable of saving the images in for instance JPEG format.
- 6. JPEG compressed image

FIGURE 30. Filename Example 3:

1 2 3 4 5 6 10.0.0.101_2006-05-31_10-56-34-897_1_RAW.TIF

Explanation:

- 1. IP address of the camera: 10.0.0.101
- 2. Date image was captured: May 31st, 2006
- **3.** Timestamp (UTC) 10:56:34.897
- 4. First image in sequence
- 5. RAW image captured from the camera (TCP transfer between camera and PC). The image tags are generated inside the camera and therefore contain information such as error status, Light Sensor readings, exposure settings, NTP status and other important data from the time of the image capture inside the camera.
- 6. Uncompressed TIFF image (directly transferred from the camera)

Note: Images received from the camera using TCP/IP are saved directly without any modifications!

The Caption of the Video Window will flash every second with the text *Video Window – Capturing Images!* as long as the Image Capture is active.

2.6.4 (b) Capture=>Capture folder ...

This command selects the folder to where the captured images are saved

2.6.4 (c) Capture=>Select Image Encoder

This command selects which encoder to be used when captured images are saved. The format of the image saved can be selected from a popup window drop list (Built in JPEG, TIFF, PNG, BMP and GIF).

FIGURE 31. Select Encoder Menu

🛠 Select Encoder	X
Built-in JPEG Codec 🐱	ОК
Built-in BMP Codec Built-in JPEG Codec Built-in GIF Codec	Cancel
Built-in TIFF Codec Built-in PNG Codec	

2.6.4 (d) Capture=>Save Images in RAW format (toggle function)

This command selects if the images received from the camera using TCP/IP should be saved directly without any modifications. When this option is enabled, the View Use TCP/IP option will be automatically enabled too (see description of the View menu above).

2.6.5 Tree view

The cameras in the tree view are identified only by their IP addresses.

The Video Window shows the image from the camera selected.

2.6.5 (a) Context menus

Clicking the secondary mouse button on the camera-tree side of the VIDEO WINDOW activates the context menu. See Figure 32 on page 24.





FIGURE 32. Video Window Tree View Menus

2.6.5 (b) =>Search for cameras

This command starts a new search for cameras on the local network.

The OPENING NEW CAMERAS message box (see Figure 15 on page 12) is shown while searching for cameras

If any IP-address problems are detected then a window will be displayed and it will be possible to correct these problems (see appendix B for a description on how to correct IP-address problems).

2.6.5 (c) =>Open Camera

This command opens a specific camera by specifying an IP-address. This can be used, if the camera is not on a local subnet and therefore not found automatically during a search (search: see Section 2.3 on page 4 or Section 2.4 on page 4). This will open an *Open Camera* dialog where the IP-address can be typed in (see Section 2.3 on page 4).

2.6.5 (d) =>Manual Exposure

This command opens a new window where the Camera Exposure (Shutter, Gain, Pedestal, VTop/ VBottom and Gamma) can be controlled manually. See Section 2.6.12 on page 42 for a full description of the Manual Exposure Window. This is typically used when adjusting the cameras in low light conditions during installation/adjustment at the roadside in the night.

2.6.5 (e) =>Laser Setup

This command opens a new window where a serially connected Laser Trigger can be Setup. See Section 2.6.14 on page 43 for a full description of the Laser Setup Window. This is typically used when adjusting and testing the internal trigger setting of the Laser Trigger.

2.6.5 (f) =>Image Processing

This command opens a new window that displays the image processing tools for the image displayed in the Video Window. Using this Image Processing it is possible to adjust the Gamma-correction, Brightness, Contrast and Saturation on the displayed images. This will not change the images saved using ENSetup but the Image Processing can also be activated on the images printed out using the File Print...menu. See Section 2.6.13 on page 43 for a full description of the Image Processing Window.

2.6.6 Video Image

This is the area where the actual images are displayed. The video image shows the images sent from the cameras labeled with IP Address and UTC time in the upper left corner.

Tip A frame-counter can be displayed/hidden by pressing <u>CTRL+F</u> when the video image is in focus.

2.6.6 (a) Context menus

Right-side clicking the mouse on the Video Image side of the VIDEO WINDOW activates the context menu. See Figure 14 on page 12.









2.6.6 (b) =>Unselect Camera

This command clears the current camera selection and blanks the Video Image display.

2.6.6 (c) =>View Image Properties

This command opens a new window that displays the image properties for the image displayed in the Video Window. SeeSection 2.6.11 on page 39 for a full description of the Image Properties Window.

2.6.6 (d) =>Manual Exposure

This command opens a new window where the Camera Exposure (Shutter, Gain, Pedestal, VTop/ VBottom and Gamma) can be controlled manually. See Section 2.6.12 on page 42 for a full description of the Manual Exposure Window. This is typically used when adjusting the cameras in low light conditions during installation/adjustment at the roadside in the night.

2.6.6 (e) =>Laser Setup

This command opens a new window where a serially connected Laser Trigger can be Setup. See Section 2.6.14 on page 43 for a full description of the Laser Setup Window. This is typically used when adjusting and testing the internal trigger setting of the Laser Trigger.

2.6.6 (f) =>Image Processing

This command opens a new window that displays the image processing tools for the image displayed in the Video Window. Using this Image Processing it is possible to adjust the Gamma-correction, Brightness, Contrast and Saturation on the displayed images. This will not change the images saved using ENSetup but the Image Processing can also be activated on the images printed out using the *File Print*...menu. See Section 2.6.13 on page 43 for a full description of the Image Processing Window.
2.6.6 (g) Zoom Video Image

It is possible to zoom in on the images displayed by dragging an area using the middle mouse-button or Alt-key plus primary mouse button. To maintain the aspect-ratio of the original image the Ctrl-key on the keyboard has to be depressed during the dragging of the zoom-area. If the Shift-key is depressed instead during the dragging of the zoom-area the zoom area will be a square box.

It is possible to continue zooming in the already zoomed image!

To get back to the original image simply click the middle mouse-button or <u>Alt-key</u> plus primary mouse button once inside the video image area.

Tip The numeric keyboard (in the small section beside the main keyboard) can be used to zoom as well! By pressing the + and - buttons the zoom level will be changed. By pressing the 1- to 9-keys the area will be moved around in the direction of the key. The 7-key will for instance move the area up and to the left. By pressing the 5-key the zoom will be canceled and the original image will be displayed again. To increase the zoom and move operations press and hold the Shift-key. If you press and hold the Ctrl key combined with one of the numeric keys, the zoom and location shifting become faster.

2.6.7 Toolbar

The toolbar is located in top of the VIDEO WINDOW and has buttons for selecting

- Display modes •
- Setup tools
- Trigger modes .
- Settings

FIGURE 34. Tool Bar



Display Modes 2.6.7 (a)

There are three display modes for the video image selectable from the left side of the tool-bar (see Figure 34):

- Full Size: maximum resolution (768 x 484 for 9720EN and 1920 x 512 for 2030EN) •
- Half Size: Half images from up to two cameras simultaneously (384 x 484 for 9720EN and 960 x • 512 for 2030EN)
- Quad Size: Quarto images from up to four cameras simultaneously (384 x 242 for 9720EN and 960 • x 256 for 2030EN)





The various display modes remember the trigger modes that was selected when they were displayed. If Live was selected for a camera in Full Size view, Last was selected in Half Size and Snap was selected for Quad Size, the same trigger modes are active when the various display modes are selected. (Trigger modes see Section 2.6.7 (c on page 34)

In Half Size and Quad Size display modes the active half or quarter of the video image (cameo) is indicated by a red dot in upper left corner. The active part is selected by clicking the mouse on the part.

The signal to be displayed in the active part of the image window is selected by clicking on the camera in the camera tree in the left side of the Video Window.

- The video image is blue If no camera has been selected to be displayed.
- The video image is also blue if an image has not been received from the selected camera.

The cameras can also be "dragged and dropped" from the tree-view to any of the view positions to select the camera.

2.6.7 (b) Setup Tools

The setup tools are activated and deactivated by toggling the function in the toolbar. Each tool inserts lines or a box in the image easing the alignment and adjustment of the camera.



FIGURE 36. Setup Tools Menu

The setup tools can be configured using the <u>Settings Dialog</u>, see section 2.4.3.9.

Roll Bar

The Roll Bar is used when adjusting the camera "roll". A horizontal line with a small vertical center line is inserted as shown in Figure 37 on page 30. This must e.g. be in line with the bumper on the car.

The line can be positioned vertically by pointing the mouse on the line and holding the left-side button down and then move it to the wanted position. The line is only moved vertically - the center marking stays in the center of the line.

The line can also be positioned by dragging a box around a part of the line using the mouse while holding the primary mouse button down. The line will then change color and the up and down arrows can then be used for positioning the line.

See VISCAM 300 Manual for details regarding camera adjustment.



🖉 Video Window 🔚 🔚
The jdf Caphure
FulSize Unit ze Huntfize BulBai Ultime Locuster Mensiong Dox Freeze Sinep ive Unit At and DW Linger Depinger Sichings
🗃 10.10. :
T E Line Row - 277 Rol Bar Row - 242 Fools Bar Row - 216 Meesurino Box Pool(257, 2071) Wildth - 53. Height - 19 Micuse Pool(315, 60) - 255

Tilt Line

FICUDE 27 Comora Poll Bar

The *Tilt Line* inserts a horizontal line with two vertical zoom-markers. The camera zoom is adjusted until the license plate is displayed with the same width as the distance between the markers.

The line can be positioned vertically using the mouse or arrows as described for the <u>Roll Bar</u> and the zoom markers can be positioned anywhere along the line.

See VISCAM 300 Manual for details regarding camera adjustment.







Focus Bar

The *Focus Bar* is a horizontal line with same length as the distance between the Focus Marks on the Tilt Line. The line can be positioned as described under Roll Bar.

When the *Focus Bar* is activated a FOCUS BAR WAVEFORM window is opened showing the pixel values along the Focus Bar. This is used for focus adjusting the camera.

See VISCAM 300 Manual for details regarding camera adjustment.

The FOCUS BAR WAVEFORM window is described in details in Section 2.6.9 on page 37

FIGURE 39. Camera Focus Bar.



Measuring Box

The Measuring Box is used to measure the dimension of e.g. the license plate. The box position, height and width are shown in the status bar in the bottom of the image.

The size of the box can be adjusted by dragging the corner markings of the box using the mouse and dragging the center marks on the box sides can change the position.

Dragging a box around the measuring box with the mouse or clicking on the box line can select the box. The box color will then change.

The box can then be moved using arrow-up and arrow-down keys. The height of the box can be adjusted holding the shift-key down and using arrow-up (bigger height) and arrow-down keys (lower height) and the width can be adjusted using the shift-key and arrow-left (bigger width) and arrow-right (smaller width).



FIGURE 40. Measuring Box



2.6.7 (c) Trigger Modes

Trigger modes can be selected using the Tool bar as shown in Figure 41 or by right-side clicking the mouse in the image window activating the context menu as shown in Figure 42

FIGURE 41. Trigger Modes



Via the context menu the camera can furthermore be unselected.

FIGURE 42. Select Menus from the Content Window

📌 Video	Window						
<u>F</u> ile <u>E</u> dit	⊻iew <u>C</u> a	pture					
Full Size	LR Half Size	Uuad Size	Roll Bar	:: Tilt Line	[Foc	🖂 cus Bar	205 Measuring Box
-	10.0.0.	101 100	കദത്ത തെ Video	0054044		৯.০চন Free	ze
10.0.0.108		108	Unselect Camera		Snap Live Video		
		1	View Image Properties	Get One Trigger			
			Manual Exp Laser Setu Image Proc	posure p cessing		Get / • Get l	All Triggers .ast Image

Available trigger modes are:

- 1. Freeze No more images is transmitted (disable trigger)
- 2. *Snap* One image is transferred
- 3. *Live_* Images are transferred as fast as the camera can transmit and the PC can receive
- 4. *One* The current image is deleted and when the next hardware triggered image is received it will be shown
- 5. *All* The current image will be deleted and all subsequent hardware triggered images will be shown
- 6. *Last* The last hardware triggered image in the camera will be shown and internal trigger mode will then change to <u>All</u>

The default trigger mode is *Last* and the latest UTC labelled image can always be transferred from the camera.

It is possible to generate "hardware" triggers via the Ethernet by activating *Eth Trig* in the Tool bar or Rep Trig (toggle functions).

Eth Trig generates one Ethernet trigger pulse and Rep Trig default generates one trigger pulse every second. If *Rep Trig* is selected and then *Eth Trig*, one final trigger pulse will be generated and the repetitive trigger will be stopped. The speed of the Repetitive Trigger can be adjusted using the Video Window Settings dialog described in Section 2.6.7 (d on page 35.

2.6.7 (d) Settings Dialog

The VIDEO WINDOW SETTINGS is activated from the Settings in the Tools Bar and holds the property page for configuration of tools in the Tools Bar and titles in the Image Window.

The setup can be saved using the Save as Custom button and retrieved using the Load Custom button.

The factory settings can be loaded using the Load Factory button.

Changes made are applied via the Apply and Exit button.

If changes are not to be applied clicking the cross in the upper right corner leaves the dialog box.





X	Video Window Settings			
⊡	1 - Tools			
	Focus bar Horizontal	True 🔽		
	Focus bar row	167		
Ð	MeasuringBox Position	281; 156		
Ð	MeasuringBox Size	130; 40		
	Plate width	130		
	Roll bar row	242		
	Tilt line row	482		
	Zoom marker column	304		
⊡	2 - Line style			
	Line color	255; 0; 0		
	Line width	1		
⊡	3 - Text			
	Show text	True		
Ð	Text Font	Microsoft Sans Serif; 8,25pt		
	4 - Trigger			
	Repetitive Triggers per Second	2,5		
	5 - Image Processing			
	Brightness	0		
	Contrast	0		
	Gamma (Midtones)	1		
	Print Using Image Adjust	False		
	Saturation	0		
Focus bar Horizontal Focus bar horizontal or Vertical				
[Load Custom Save as Custom	Load Factory Apply and Exit		

FIGURE 43. Video Window Settings Dialog Box

2.6.8 Status Bar

The Status Bar shows tool values. The actual pixel values will be displayed in the status bar when the mouse cursor is placed over the image. If it is a Color camera each of the RGB values will be displayed.

FIGURE 44. Status Bar displays the Pixel values

```
Tilt Line Row = 482 | Roll Bar Row = 242 | Focus Bar Row = 167 | Measuring Box Pos (281, 156); Width = 130, Height = 40 | Mouse Pos (487, 231) = 230
```

The VIDEO WINDOW SETTINGS dialog is opened when clicking the mouse inside the Status Bar.



2.6.9 Focus Bar Waveform

The FOCUS BAR WAVEFORM window is opened when the *Focus Bar* is selected in the Toolbar. It can be used for adjusting the camera focus or analyzing images.



FIGURE 45. Focus Bar Waveform Screen

The actual pixel values along the focus bar are shown in the graph.

If the focus bar is positioned across the license plate (see Figure 39 on page 32) the pixel values will reflect the grey levels of the characters and the spacing.

A high pixel level belongs to a white image element and a low pixel value belongs to a black image element.

When the amplitude of the graph is at a maximum then the camera is focused correctly.

The "White Level Cursor" and the "Black Level Cursor" can manually be dragged and positioned using the mouse and the according levels are shown in the status bar in the button of the window. These are marked Black Cur and White Cur. The distance between the two cursors is listed after Diff.

The two white dashed lines indicate the average level of the white pixels (the upper) and the average level of the black pixels (the lower). These two levels are updated dynamically and are used for calculating a relative focus value that is shown in the red column in the left side. The maximum relative focus value obtained will be displayed as shown in Figure 45 on page 37 as a Max Level indicator line. Double clicking the primary mouse button inside the column will reset the max level indicator.



The column height can vary between 0 and 100%.

FIGURE 46. Focus Bar Waveform Menus



2.6.9 (a) File=>Save As

This command saves the graph to a file. The format of the image saved can be selected from a drop list (JPEG, TIFF, PNG, BMP and GIF)

2.6.9 (b) File=>Page Setup

This command opens a dialog box for setting up paper format (see Figure 10 on page 9)

2.6.9 (c) File=>Print Preview

This command shows the print on the screen before printing.

2.6.9 (d) File=>Print...

This command prints out the graph and the status line information to the default printer



FIGURE 47. Waveform Screen Commands.

2.6.10 Edit=>Copy

This command copies the Graph to the clipboard for pasting to other programs (Word, Paint etc.)

2.6.11 Image Properties Window

All images displayed and captured using ENSetup contains a number of image properties embedded inside each image. All these image properties are placed in the image files as EXIF-tags.

To view the image tags associated with the selected image displayed in the Video Window simply select the View Image Properties menu in the Video Window or the View Image Properties context menu in the Video Window. This opens a new window that displays the image properties for the image displayed in the Video Window. The contents will be update for every new image.

The amount of data available varies depending on the ENSetup settings selected.

The default image format used by ENSetup on the "test-channel" only contains the raw pixel data and additional timestamp information. The rest of the information is generated in ENSetup and NOT in the camera (ImageDescription="ENSetup Generated").

See Figure 48 on page 40 for an example of the test channel image information.



FIGURE 48. Image Properties Context Menu

X	Image Properties	
⊡	Date and Time	
	DateTime	2006:05:23 14:48:49
	DateTimeOriginal	2006:05:23 14:48:49
	SubsecTime	919
	SubsecTimeOriginal	919
⊡	EXIF Version Tags	
	ExifVersion	48; 50; 50; 48
⊡	Image Data Structure	
	ImageWidth	768
	ImageLength	484
	BitsPerSample	8
	Compression	No Compression
	PhotometricInterpretation	Grayscale (BlackIsZero)
	StripOffsets	180
	SamplesPerPixel	1
	StripByteCounts	371712
	XResolution	72
	YResolution	72
	PlanarConfiguration	Chunky
	ResolutionUnit	Inch
⊡	Information	
	ImageDescription	ENSetup Generated
	Manufacturer	JAIPULNX Inc.
	Model	CAM_TS9720BW
	Software	ENSetup version: 1.1.14.19459; EN_API2.dll version 1.1.0.6
	Copyright	Copyright 2005 JAIPULNIX Inc.
	ImageUniqueID	MAC=00-0C-DF-80-00-C3; IP=10.0.0.108; User Info=unit 108
ln Si	nageWidth nows size of image.	

If the "Use TCP/IP" option is selected (see Section 2.6.3 (d on page 21) the ENSetup will request images from the camera using the TCP/IP LC-protocol.

X	Image Properties	
	Date and Time	
	DateTime	2006:05:24 08:24:38
	DateTimeOriginal	2006:05:24 08:24:38
	SubsecTime	431
	SubsecTimeOriginal	431
Ξ	EXIF Version Tags	
	ExifVersion	0: 0: 0: 0
⊡	Image Data Structure	
	ImageWidth	768
	ImageLength	484
	BitsPerSample	8
	Compression	- No Compression
	PhotometricInterpretation	Grauscale (BlackIsZero)
	StrinOffsets	1020
	SamplesPerPivel	1
	StripButeCounts	371712
	XBesolution	72
	VBesolution	72
	PlanarConfiguration	rz Chusku
	Planarconingulation Resolution I lait	Inch
	Information	Inch
	Internation	D-stalD-00000514
	Manufacturer	
	Madul	JAIFOLNIS IIIC. TO 0700EN
	Model Cathuran	13-3720EN ADD. 00031041, DIT. 00031040, DDV/ 00031340, DCL 05133740, DAT. 05003540
	Sonware	AFF=060310A1; BIT=060216A0; DHV=060312A0; 031=031227A0; FA1=030623A0
	Copyright Jaco and Jacoura ID	Copyright 2005 (AFFOLINK Inc.
_		MAL=00 0C DF 80 00 C3 IF=10.0.0.108 Osefinfo=unit 108
	TIS Camera Lags	Maria
	EINStatus	None
	ImageLHL32	UXDF80ZA8Z
	LSSIdeA	264
	LSSIdeB	125
	CDSGam	34
	AsyncShutterMode	4
	vBottom	19
	vlop	255
	NightLight	Un
	ExposureNumber	First Exposure
	Imagel ype	LIFF Image
	EstimatedNTPError	44
	NTPStatus	PLL
	ModelType	TS9/20EN
	LaserVehicleLength	830
	LaserMinimumRange	406
	LaserVehicleHeight	287
Ir	nageWidth	

FIGURE 49. Image Properties with the TCP/IP option selected

Shows size of image.



The image tags are generated inside the camera and therefore contain information such as status, Light Sensor readings, exposure settings, NTP status and other important data from the time of the image capture inside the camera. All ITS-specific information is placed in the "ITS Camera Tags" category.

2.6.12 Manual Exposure Window

Normally camera parameters are optimally controlled by the light sensor, and it is not necessary to manipulate them manually. However, during installation and adjustment of the cameras at nighttime it is often necessary to manually adjust the shutter and gain values of the cameras in order to make the camera sensitive enough to produce usable images. This will temporarily disable the Light Sensor exposure control (ADR) inside the camera and force the camera to use manual exposure values instead.

Do not change these parameters, unless you know exactly what you want to do. To use the Manual Exposure simply select the =>**Manual Exposure** context menu in the Video Window. This opens a new window that enables direct control of the camera.

FIGURE 50. Manual Exposure Window

🛠 Camera	10.0.0.	108' M	lanua	l Vio	deo A	djust	ment		×
- Shutter Va	alue (015) -								
2									
- Gain Value	e [0255]								
43 ᅌ]	1 1 1 1						
	255]			1 1 1					
244 🔹	-								
⊂VBottom [0)255]			1 1 1					
42 🚖		1							
				1 1 1					
🗹 Gamma	•			_					_
Restore	Sa Sa	ve in Ca	amera					Exit	

Each parameter can either be selected using the spin-buttons to the left or by moving the individual slider-controls.

2.6.12 (a) Shutter Value:

The Shutter Value setting directly controls the exposure-time used by the camera. Please refer to TS(C)-97WEN and TS(C)-2030EN Operation Manual for corresponding exposure time.

2.6.12 (b) Gain Value:

The Gain Value setting directly control the gain applied to images captured by the CCD-sensor. The signal-to-noise ratio will be increased by lowering the gain and thereby produce images with less noise.

2.6.12 (c) VTop/VBottom Values:

The VTop and VBottom values control the reference voltages used during the digitization of the pixel values from the CCD-sensor. By controlling these two values it is possible to "optimize" the image capture to get the optimal full "digital resolution" for a certain range of the analog signal level.

2.6.13 Image Processing Window

In order to enhance the display of images on the PC-screen it is possible in ENSetup to change the Gamma Correction value (mid-tones) and/or the Brightness and Contrast of the images. This will not change the contents of the images captured on the PC but only change the visual appearance on the PC.

The context menu =>Image Processing opens a new window that displays the image processing tools. Using this Image Processing it is possible to adjust the Gamma-correction, Brightness, Contrast and Saturation on the displayed images. This will not change the images saved using ENSetup but the Image Processing can also be activated on the images printed out using the *File=>Print...*menu.

FIGURE 51. Image Processing Context Menu



2.6.14 Laser Setup Window

If a Laser Vehicle Detector is connected to the camera it will be possible to setup the laser settings using a Laser Vehicle Detector Settings window.





FIGURE 52. Vehicle Detector Settings

In the Property Grid control all values can be manually changed. It will initially contain the settings read directly from the laser. To transfer any new settings to the laser, simply press the *Apply* button.

The laser has got a built in Laser Pointer LED that can be used for aligning the laser detector. It will be switched on when the check-mark is set. It will automatically be switched off when the Laser Vehicle Detector Settings window is closed.

The Laser Setup dialog will be used to setup the Laser Vehicle Detector connected to the camera. To analyze the current setting press the Collect Data button. This will start a data collection and display the result in the graph. When a car triggers the laser then a new image will be collected by the camera and the data collection will be terminated automatically. The new image will be displayed in the preview area. If the camera and the PC are time-synchronized then a trigger-line will be displayed on the graph indicating the trigger position.



FIGURE 53. Laser Vehicle Collect Data button



2.6.14 (a) Laser Setup Wizard

The easiest way to configure a laser vehicle detector is to use the Laser Setup Wizard. This guides you through a series of steps that will help determine the correct setup values for the laser based on actual distance measurements.

FIGURE 54. Laser Setup Wizard Start screen



Start the Wizard by pressing Next button.



🔜 Laser Setup Wizard	
Data Collection Perform data collection from the laser. The col measurements of the distance to the_ground C	llected data has to be ONLY! No vehicles allowed!
Data Collection	
Start	Stop
	Back Next > Cancel

Data collection will start automatically but needs to be stopped by the user by pressing the <u>Stop</u> button. The whole idea with the data collection is to sample enough data in order to calculate the average distance to the road. If the variation of the collected data is too big the data will be discarded and a new data collection needs to be started. This will be the case if a vehicle drives past the laser during the data collection period.

If the data collection is OK then the result of the measurements will be displayed. Press Next to continue.



FIGURE 56. Successful data collection

🔜 Laser Setup Wizard	
Data Collection Perform data collection from the laser. The collected data has to be measurements of the distance to the ground ONLY! No vehicles allowe	d!
Data Collection Start Stop	
Data Collection Count = 54 Average distance measured = 1005,44cm Minimum distance measured = 1004cm Maximum distance measured = 1007cm	
< <u>B</u> ack <u>N</u> ext >	Cancel

It is now possible to specify two offset values directly. These offset values will be used to calculate the trigger ranges used by the laser. The offset values can also be estimated if the distance from the laser down to the ground is known and the normal bumper height can be determined. Then both offset values will be calculated by the Wizard.

FIGURE 57. Wizard with Offset Values

🖶 Laser Setup Wizard			
Enter offset values In order to determin the appropriate Data Range' values you need to spe	values for the 'Trig ecify the offset fron	gger Range' and 'No n the ground.	NEL
Offset Values Specify offset values Trigger Offset (cm) No Data Offset (cm) Laser Height over ground (cm) Bumper Height over ground (cm) Calculate Offsets	80 90 475 40		
	< <u>B</u> ack	<u>N</u> ext >	Cancel

Press Next after the offset values are determined.

Next specify the Filter Size used by the laser when it generates range measurements. The higher the value the smoother the range data will be. But on the other hand the higher the value the longer delay will be introduced (this will result in bigger variations in the trigger line - depending on the vehicle speed!)

Recommended values for the Filter Size are around 3-5.

FIGURE 58. Wizard Filter Size Dialog Box

🔡 Laser Setup Wizard 📃 🗖 🔀
Specify Filter Size The 'Filter Size' controls the smoothness of the range data generated by the laser
The range measured is the average obtained from a rolling filter of N samples. Whatever valid ranges are in the filter at any given time are averaged to produce the range. The valid range is [115] Filter Size 15
< <u>B</u> ack <u>N</u> ext > Cancel



Next specify the Hysteresis Count used by the laser. In order for the laser to generate the trigger it will require this amount of consecutive samples to be within trigger range. This will help the laser to filter out any noise for instance from raindrops.

FIGURE 59. Hysteresis Count

🔜 Laser Setup Wizard	
Specify Hysteresis Count The 'Hysteresis Count' controls the robustness of the trigger generation	MIL
The transitions from TTL low to high (and vice versa) are to occur only after N consecutive samples in a row agree that the level should be changed. The v [1255] Hysteresis Count 10	J alid range is
< <u>B</u> ack <u>N</u> ext >	Cancel

Next specify the Trigger Output Polarity used by the laser.

FIGURE 60. Trigger Output Polarity

🔜 Laser Setup Wizard	
Specify the Trigger Output Polarity The 'Trigger Polarity' control the polarity of the binary trigger output	XU2L
The transitions from TTL low to high (and vice versa) are to occur only after f consecutive samples in a row agree that the level should be changed. The v [1255] Trigger Polarity Normally Low	। alid range is
< <u>B</u> ack <u>N</u> ext >	Cancel

The results generated by the laser will be displayed. Press Next to finish the Wizard.

🖶 Laser Setup Wizard 📃 🗖 🔀					
Resulting Laser Settings These are the values calculated based on the collected data and the specified offset values					
Estimated Laser Vehicle De	tector Settings				
Trigger Range (cm):	925				
No Data Range (cm):	915				
Filter Size:	15				
Hysteresis Count:	10				
Trigger Polarity:	Normally Low				
	< <u>B</u> ack <u>N</u> ext>	Cancel			

Click the OK button.

FIGURE 61. Laser Setup Wizard Finish Window

🔜 Laser Setup Wizard	
210	Finish
	The Laser Settings has now been succesfully calculated, and will automatically be updated on the Laser Settings Dialog.
	< Back Next > OK



2.7 Error Log Window

The ERROR LOG window is activated from the EN CAMERA SETUP windows Tools menu.

The list has information's from the cameras (or ENSetup). IP-Addresses, UTC-time and log-level are listed.

The Error Log will be updated all the time – even when it is not displayed. The contents of the Error Log will only include all the logged items from when ENSetup was started. All Error Log items will be saved to the PCs hard disk though.

FIGURE 62. Error Log Window

🛠 Erro	🖉 Error Log						
Index	Time	Log Level	Camera Name	Text			
12	23-06-2005 11:20:47:221	0	10.0.0.102	Error Cleared: FTP Server Error: Unable to open the FTP link. Check User name, password or rights			
11	23-06-2005 11:20:28:324	0	10.0.0.102	Error Present: FTP Server Error: Unable to open the FTP link. Check User name, password or rights			
10	23-06-2005 11:20:06:807	0	10.0.0.101	Error Cleared: FTP Server Error: Unable to open the FTP link. Check User name, password or rights			
9	23-06-2005 11:20:06:627	0	10.0.0.101	One time Error: FTP Fail: Destination Server is down			
8	23-06-2005 11:20:04:705	0	10.0.0.101	One time Error: FTP Fail: Destination Server is down			
7	23-06-2005 11:20:02:955	0	10.0.0.101	One time Error: FTP Fail: Destination Server is down			
6	23-06-2005 11:20:01:364	0	10.0.0.101	One time Error: FTP Fail: Destination Server is down			
5	23-06-2005 11:20:01:363	0	10.0.0.101	Error Present: FTP Server Error: Unable to open the FTP link. Check User name, password or rights			
4	23-06-2005 11:20:01:361	0	10.0.0.101	Error Cleared: FTP Server Error: Unable to open the FTP link. Check User name, password or rights			
3	23-06-2005 11:19:58:996	0	10.0.0.101	Error Present: FTP Server Error: Unable to open the FTP link. Check User name, password or rights			
2	23-06-2005 11:19:18:475	0	10.0.0.100	Error Cleared: Light Sensor 2 Serial Communication Error: No LS data received in the last 10 seconds			
1	23-06-2005 11:19:09:451	0	10.0.0.100	Error Present: Light Sensor 2 Serial Communication Error: No LS data received in the last 10 seconds			
0	23-06-2005 11:18:21:648	0		ENSetup version: 1.0.2000.18550 starting on GLOS-KIC-XP			

2.7.0 (a) Context Menus

Right-clicking the mouse on the ERROR LOG WINDOW (see Figure 62 on page 52) activates the context menu.

FIGURE 63. Close-up of an Error Log Context Menu

Level	Camera Name	Text
	Clear	API2.dll description: EN-camera interf ed EN_API2.dll version 1.1.0.5
	Open Logfile	etup version: 1.1.15.24825 starting o

=>Clear clears the Error Log list.

=>**Open Logfile** opens the logfile using the default text editor in Windows.

3 Configuration

3.1 User administration

The User Administration menu is found in the EN CAMERA SETUP tools menu (see Figure 6 on page 6). This will open the User Administration Window.

FIGURE 64. User Administration Window

🛠 User Administration	
User name	User Level
Administrator	Administrator
Add Delete	Edit Exit

- 1. There are three user levels: Restricted user, Supervisor and Administrator
- 2. Only users on "Administrator" level can enter this dialog via the menu.
- 3. All users information's are saved on the hard disk after being encrypted using 64-bit DES encryption.
- 4. The User Administration dialog can:
- Add new users
- Delete existing users (except Administrator)
- Modify existing users password and user level

To add a new user, simply press the <u>Add</u> button. This will display a new Edit User Credentials Windows.

FIGURE 65. User Credentials Dialog

🛠 Edit User Credentials 🛛 💈					
User name:		ОК			
Password:		Cancel			
User Level:	Restricted User 💌	Carleer			

Type in a new User Name and Password and select the required User Level from the Drop-Down list.

To Delete an existing user, simply select the user from the list and press the <u>Delete</u> button.

To Edit an existing user, simply select the user from the list and press the Edit button.



3.2 Firmware update

It is possible to update the firmware inside the cameras via the context menu described in Section 2.5.4 (g on page 14.

One or more cameras can be updated simultaneously by selecting the cameras in the camera tree-view in the left side of the Camera Properties Window.

This will open the Firmware Update Windows seen in Figure 3.3

FIGURE 66. Firmware Update



To update the firmware, click on the *Update Firmware* button. This will open a file selection window where the firmware file can be selected.

The default file type selected is a "Firmware pack file" type (compressed zip-file) containing a set of all firmware files released together. If the "Firmware pack file" type is selected then all the firmware files will be automatically updated if necessary (based on the version information included in the files).

FIGURE 67. Firmware Update

Select firmware file 🛛 🔹 💽							
Look <u>i</u> n:	🗀 EN Firmware	~	G	🔊 B	• 🖽 🤊		
My Recent Documents Desktop	Uts9720en_RevL_M	Files/Folders in Zip file: 7 xc2s200e_060216a0.bit 69-1198_LC_to_EN_IDs.pdf en_060310a1.app h8cpu_050825a0.pat libdrv_060312a0.drv ReadMe.txt vmlinuz_051227a0.osi					

The firmware pack contains the following files:

- 1. EN ApplicationThe part of the camera software that handles the logic for the EN camera. This file has extension ".APP"
- 2. OS ImageThe Linux Operating System image. This file has extension ".OSI"
- **3.** FPGA Bit-fileFPGA firmware that handles the image capture and logic. This file has extension ".BIT"

- 4. Library/DriverLow Level Firmware used by the EN Application to communicate with the hardware. This file has extension ".DRV"
- Camera module The Camera Module firmware. This file has extension ".PAT" for TS-9720 and 5. ".2030" for TS-2030 EN.
- 6. DocumentationA revision history for the firmware is found in the file "ReadMe.txt". The Lane Controller communication protocol is described in the "xxx_LC_to_EN_IDx.pdf" file.

Individual firmware file types are selected using the "Files of type:" drop-down list. This makes it possible to update single firmware part instead of the whole firmware package.

FIGURE 68. Files Drop-down list

Files of type:	Firmware pack files (*.zip)	*
	Firmware pack files (*.zip)	
	EN Application firmware files (*.app) FPGA firmware files (*.bit)	
	OS firmware files (*.osi)	
	H8 firmware files (*.pat)	
	All files (*.*)	

It is possible to force the firmware files to be updated regardless of the version information. This is done by checking the "Force update of firmware in cameras" option before starting the firmware update.

To automatically reboot the cameras after successful update, simply check the "Automatically reboot cameras" option before starting the firmware update.

WARNING: If incompatible firmware files are uploaded into the camera, the camera might not be able to start up after reboot! In order to avoid this problem only use the "Firmware pack file" option to update a complete set of released firmware files.



3.3 Configure Storage Memory

The internal image storage memory can be individually configured for each camera.

The different image types are placed inside separate queues and a fixed maximum image size is defined for each image type.

FIGURE 69. Internal Storage Settings

Image Storage Settings				
Fotal Memory Size Required = 95027 Image Queue Selection Full Frame Images (TIFF) Odd/Even Fields JPEG Images License Plate ROI Vehicle Fingerprint LPR	20 t	ytes 1 - Settings Max Image Size Max Images To Store Overflow Action 2 - Info Changes Total Queue Size	372736 20 0 verwriteOldest False 7454720	
Allocate Memory !	M M T	l ax Image Size aximum Image Size (1~4Mb) in by he EN camera will allocate this amo	ites. ount to all the images in the queue. If the image is larger than	

It is possible to configure the following parameters for each queue:

Max Image Size:Maximum number of bytes allocated to hold a single image of the selected type.

Max Images to Store: Queue depth for the selected type.

Overflow Action:Specify what happens when the number of images has been exceeded. The possible actions are: "Stop Acquiring" or "Overwrite Oldest".

If the memory configuration has been changed then the Allocate Memory ! button will be enabled.

Appendix A: PC Minimum Specifications

Software:

- Windows XP Service Pack 2 •
- Dot NET framework 2.0 •

Hardware:

- At least 1.8 GHz CPU speed (P4 3GHz stationary PC or Centrino 1.6GHz laptop)
- 512 MB RAM
- Preferable Gigabit LAN support ٠
- Monitor resolution minimum 1024x768 •
- Monitor with high luminous intensity (if the monitor is to be used outdoor) •





Appendix B: Resolving IP-address problems

When the automatic device discovery searches for cameras on the networks, there are two basic IPaddress problems that can be detected by the ENSetup during Device Discovery:

- 1. IP-address Collision: One or more cameras have got the same IP-address on the LAN network. This will make it impossible to communicate with both cameras.
- 2. Unreachable Camera: One or more cameras are configured to be used on a different IP sub-net. The combination of IP-address and subnet-mask makes it impossible for the camera to communicate with the PC running ENSetup.

The ENSetup will detect the above two problems and the following window will be displayed before ENSetup can continue.

FIGURE 70. IP Address Conflict Window

🛠 IP Address Conflict or Unreachable Cameras Found!							
MAC Address	IP Address	Subnet Mask	Default Gateway	Problem description			
Unreachable Ca	ameras						
00-0C-DF-80-01-4B	192.168.0.99	255.255.255.0	0.0.0.0	The Camera is unreachable on the network! The IP Address needs to			
IP Address Colli	sion						
00-0C-DF-80-00-C3 00-0C-DF-80-00-D1	10.0.0.108 10.0.0.108	255.255.255.0 255.255.255.0	0.0.0.0 0.0.0.0	IP Address Collision! One or more Cameras has got the same IP Address IP Address Collision! One or more Cameras has got the same IP Address			
Set IP Address]			E xit			

The way to resolve these IP-address problems is to change the static IP-address of the cameras that is wrong. The IP-address has to be changed in the cameras to make the IP-addresses unique for all cameras. The cameras also need to be placed on the correct subnet or else the PC will not be able to communicate with the cameras.

To resolve the problems, select the camera to change and press the *Set IP Address* button. This will open a new window where the IP-address can be typed in.

FIGURE 71. Set New IP Address Window



Тір Double-click the camera in the list that you want to set a new IP address - this will automatically open the IP-address window!



Page 60 Configuration

EXPULNIX[•] VIS 300/400 EN Setup Software





Imaging Products

JAI PULNiX, Inc. T 625 River Oaks Parkway T San Jose, CA 95134 F

Tel: 408-383-0300 Tel: 800-445-5444 Fax: 408-383-0301

Email: imaging@jaipulnix.com

www.jaipulnix.com