

Miele

HONEYCOMB CARE



Operating instructions for condenser tumble dryer T 4452 C

To avoid the risk of accidents or damage to the machine it is **essential** to read these operating instructions before it is installed or used for the first time.



M.-Nr. 06 067 770

Caring for the environment

Disposal of the packing material

The transport and protective packing has been selected from materials which are environmentally friendly for disposal and can normally be recycled.


Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation!

Rather than just throwing these materials away, please ensure they are offered for recycling.

Disposal of your old machine

Old machines contain materials which can be reclaimed or recycled. Please contact your dealer, your local waste collection centre or scrap merchant about potential recycling schemes.

Ensure that the machine presents no danger to children while being stored for disposal.

 Before throwing an old machine away unplug it and render the plug useless. Cut off the cable directly behind the machine to prevent misuse. This should be done by a competent person.

Energy saving tips

- Make sure that your laundry is thoroughly spun before drying.

The higher the spin, the greater the savings that can be made in energy and time during drying.

- Load according to the optimum amount of laundry recommended for the programme being used (see Programme chart).

Underloading is uneconomical. Overloading gives a poorer quality of drying and may cause unnecessary creasing.

- To save energy and time:
 - Make sure the room in which the dryer is located is well ventilated.
 - Make sure the fluff filters are clean before using the dryer.

Caring for the environment	2
Disposal of the packing material	2
Disposal of your old machine	2
Energy saving tips	2
Warning and Safety instructions	6
Operating the tumble dryer	9
Control panel	9
Features	10
Notes on laundry care	11
Wash care symbols	11
Tips on drying	11
How to dry correctly	12
Brief instructions	12
Extras	16
Short.	16
Low temperature	16
Anti-crease.	16
Delay start	17
Programme chart	18
Changing the programme sequence	21
Changing a programme while it is running	21
To cancel a programme.	21
To interrupt a programme	21
Adding or removing laundry after a programme has started	21
Electronic system lock	22

Contents

Cleaning and care	23
Emptying the condensed water container	23
Cleaning the fluff filters	24
Cleaning them whilst dry	24
Cleaning them with water	25
Cleaning the tumble dryer	25
Cleaning the condenser unit	26
Removing the condenser unit	26
Checking the condenser unit	27
Cleaning the condenser unit	27
Replacing the condenser unit	28
Problem solving guide	29
General problems	29
Check and fault indicator lights	32
Check/fault messages in the display	34
To change the interior drum lamp	35
After Sales service	36
Future updates (PC)	36
Optional accessories	36
Installation	37
Front view	37
Installation site	38
Transporting the machine to its installation site	38
Building under a continuous worktop / in a row of kitchen units	38
Replacing the lid	38
Aligning the machine	39
Room in which the dryer is located	39
Washer - dryer stack	39
Before moving the machine again (e.g. when moving house)	39
External condensed water outlet	40
Pulling out the drain hose	40
Connection to a sink drain outlet	41
If you no longer wish to use an external condensed water outlet	41

- Electrical connection** 42
 - Electrical connection U.K. 42
- Consumption data** 44
- Technical data** 45
- Programmable functions** 48
 - Cottons drying level 48
 - Minimum iron drying level 49
 - Memory 50
 - Extending the cooling down time 51
 - Airways indicator 52
 - Keypad tones. 53

Warning and Safety instructions

To avoid the risk of accidents and damage to the machine please read these instructions carefully before using it for the first time. They contain important information on its safety, use and maintenance. Keep these operating instructions in a safe place and ensure that new users are familiar with the content. Pass them on to any future owner of the machine.

Correct use

The tumble dryer is only intended for drying fabrics which have been washed in a water solution, marked on the manufacturer's wash care label as being suitable for tumble drying. "Dry Cleaning Kits" for freshening up garments in a tumble dryer are increasingly available on the market. If using, do so at your own risk and follow the instructions provided on the packaging. Any other applications may be dangerous. The manufacturer is not liable for damage resulting from improper use or operation.

This machine is not a toy! To avoid the risk of injury, do not allow children to play on or near it, or to play with the controls. Supervise its use by the elderly or infirm.

Technical safety

Before setting up the machine check it for any externally visible damage. Do not install or use a damaged machine.

Before connecting the machine, ensure that the connection data on the data plate (fusing, voltage and frequency) matches the mains electricity supply. If in any doubt, consult a qualified electrician.

The electrical safety of this machine can only be guaranteed when continuity is complete between the machine and an effective earthing system which complies with local and national regulations. It is most important that this basic safety requirement is regularly tested, and where there is any doubt the household wiring system should be inspected by a qualified electrician. The manufacturer cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).

Do not connect the machine to the mains electricity supply by an extension lead. Extension leads do not guarantee the required safety of the machine (e.g. danger or overheating).

The machine is built in accordance with current safety requirements. Unauthorised repairs could result in unforeseen dangers for the user, for which the manufacturer cannot accept liability. Repairs should only be undertaken by a Miele approved technician.

Ensure current is not supplied to the machine while maintenance or repair work is being carried out.

Faulty components must only be exchanged for Miele original spare parts. Only when these parts are fitted can the safety standards of the machine be guaranteed.

Warning and Safety instructions

■ If the connection cable is faulty it must only be replaced by a Miele approved service technician to protect the user from danger.

■ In the event of a fault or for cleaning purposes, the machine is only completely isolated from the electricity supply when:

- it is switched off at the wall socket and the plug is withdrawn, or
- it is switched off at the mains, or
- the mains fuse is withdrawn.

Operation

■ This equipment is not designed for maritime use or for use in mobile installations such as caravans, aircraft etc. However it may be suitable for such usage subject to a risk assessment of the installation being carried out by a suitably qualified engineer.

■ The dryer must not be used without the fluff filters in place or if the fluff filters are damaged in any way.

■ The fluff filters must be thoroughly dried after cleaning. If they are still damp or wet when replaced there is a risk of faults occurring when the machine is used.

■ The dryer must not be used without the condenser unit in place.

■ Do not install the machine in a room where the temperature may drop down to or below freezing. At very cold temperatures the machine may be difficult to start.

There is a risk of damage if the

condensed water is allowed to freeze in the pump, hoses and / or condensed water container.

■ If the water is drained externally through the drain hose instead of being collected in the condensed water container, make sure the drain hose is securely attached if you hang it in a sink or basin to avoid the hose slipping and the water causing damage.

■ Condensed water is not drinking water. It can cause health problems in both people and animals.

■ Always keep the area around the machine free of dust and fluff. Dust drawn into the machine can, over time, cause blockages in the condenser unit.

Warning and Safety instructions

■ Always close the door after use.
This way you will avoid the danger of:

- children climbing onto or into the dryer or hiding things in it.
- pets or other small animals climbing into it.

■ Do not let anyone sit or lean on the door, as this can cause the machine to tip up.

■ There is danger of fire with fabrics which:

- contain a large proportion of rubber, foam rubber or rubber like materials.
- have been treated with inflammable cleaning agents.
- have been splashed with hair lacquer, hair spray, nail varnish remover or similar substances.
- contain padding or fillings (e.g. pillows, jackets). If these were damaged the filling could leak out with the risk of igniting in the dryer.
- are soiled with oil or grease.


In countries where there are areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the machine and its surroundings in a clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the machine guarantee.

Using accessories

■ Accessory parts may only be fitted when expressly approved by Miele. If other parts are used, guarantee, performance and product liability claims may be invalidated.

■ The manufacturer cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions.

Control panel

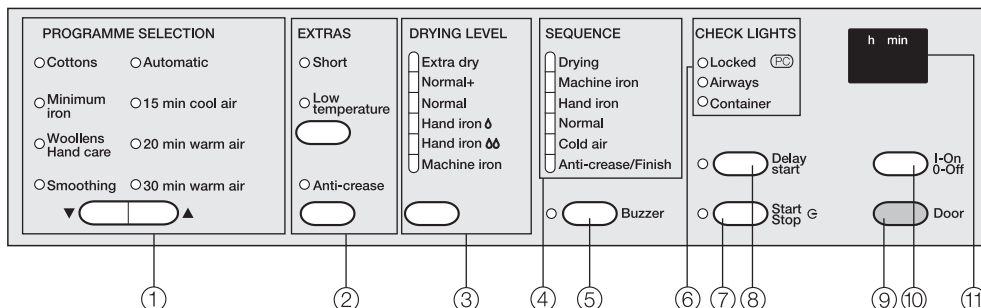

① **PROGRAMME buttons ▼▲**

with indicator lights.
For selecting a drying programme.

② **EXTRAS buttons**

with indicator lights.
Various Extras (options) can be added to the drying programmes.

③ **DRYING LEVEL button**

with indicator lights.
For selecting the drying level.

④ **DRYING SEQUENCE indicator lights**

Show which stage the programme is at.

⑤ **Buzzer button**

An audible tone sounds at the end of the programme.

⑥ **CHECK lights**

These indicator lights have various functions. See Problem solving guide.

⑦ **Start/Stop button G**

For starting the programme selected and cancelling a programme once it has started.

The indicator light flashes while a programme is being selected and then is on constantly when the programme has started.

Pressing this button while drying is in progress will cancel the programme.

⑧ **Delay start button**

You can delay the start of a programme (by up to 24 hours). The indicator light flashes while the delay start time is being selected, and is on constantly after it has begun.

⑨ **Door button**

Pressing this button will open the door even if the machine is switched off at the mains.

⑩ **I-On/0-Off button**

For switching the dryer on and off.

⑪ **Display h min**

The display fulfills several functions. See next page for details.

Operating the tumble dryer

Features

Display

The display shows:

- the programme duration (time remaining);
- the delay start time;
- check messages;
- programmable functions.

Estimated time remaining

The electronics calculate the drying time a few seconds after the programme has started. During this calculation period, bars will flash in the display (==...-==... ==...). The estimated drying time will then appear in the display. Please be aware that it is only an estimate!

The following factors all affect the estimated time remaining: Residual moisture content after spinning; type of fabric; size of load; room temperature; fluctuations in power supply.

The electronics continually assess conditions in the machine and adjust the estimated time remaining for a more accurate reading. Because of this the time displayed can alter during the course of a programme.

If the time remaining stops counting down shortly before the end of the programme and bars start flashing in the display, this is not a fault.

The drying programme is a little longer than was originally indicated.

Buttons and check lights

The relevant indicator light comes on each time a button is pressed.

PC / Optical interface

The indicator or check light marked PC is explained in "After Sales Service".

Drum lighting

If the dryer is switched on, the drum lighting will come on when the door is opened. It will go out after a short while if the door is left open to save energy.

Electronic system lock


This can be used to lock the electronics to prevent the dryer being used without your knowledge.

Programmable functions


The programmable functions allow you to change standard settings.

Wash care symbols

Before drying check the drying symbol on the wash care label. If there are no symbols dry at your own risk.

 Dry at normal temperature


 Dry at a low temperature

 Do not tumble dry

     Linens/Cottons

- Cottons, linens and minimum iron items should be dried using the appropriate programme for the degree of dryness required.

    Minimum iron/Delicates

- For delicates and fabrics with the following wash care label  you should also select the *Low temperature* extra.

Tips on drying

Never overload the drum. Do not exceed the maximum recommended loads given in the "Programme chart". Overloading can cause unnecessary wear and tear to the laundry, give a disappointing drying result and cause more creasing.

Do not put soaking wet items into the tumble dryer. Spin them thoroughly after washing using the appropriate spin speed.

be partially dried using the *Woollens hand care* programme.

- Down-filled garments have linings which may shrink, depending on the quality of the item. They can be partially dried using the *Smoothing* programme.
- Pure linen should only be machine dried if specified as suitable by the manufacturer on the wash care label, as the surface of the fabric may otherwise become rough. These garments can be partially dried using the *Smoothing* programme.
- Loopknit garments (e.g. T-shirts and underwear) tend to shrink depending on their quality. Therefore: to prevent further shrinkage do not over-dry these textiles. When purchasing these garments it is advisable to take their shrinkage properties into account.
- Minimum iron fabrics and 100% cotton shirts or blouses tend to crease more, the larger the load, particularly when the weave of the fabric is very fine.
Reduce the load or use the *Minimum iron - Hand iron* programme.
- Starched laundry can be dried in the tumble dryer. To achieve the usual finish, double the amount of starch should be used.
- New dark coloured garments should be dried separately from light coloured garments to avoid the danger of colours running.

- Woollens and wool blends tend to become matted and shrink if dried in a tumble dryer. They can, however,

How to dry correctly


Brief instructions

The headings numbered (1, 2, 3 ...) show the operating sequence and can be used as a brief guide to using your machine.

1 Sort the laundry

To ensure even drying results sort washed laundry according to:

- ... the drying level required
- ... the type of fibre or weave
- ... size
- ... the moisture content after spinning.

 Make sure that objects e.g. detergent dispensing balls have been removed from the laundry. They could melt, and cause damage to the dryer or the laundry.

- Check seams and stitching to ensure that padding and linings are intact.
- Fasten duvet covers and pillow cases to prevent small items from being trapped inside them.
- Fasten zips, hooks and eyes etc.
- Tie fabric belts and apron strings.
- Sew in or remove underwiring from bras.

2 Turn on the tumble dryer

- Switch the dryer on by pressing the *I-On/0-Off* button in.


The tumble dryer may be switched on after loading, saving energy as the light will not come on.

3 Load the tumble dryer

- Press the *door* button to open the door.
- Load the laundry loosely into the drum.

Do not overload the drum. See the "Programme chart" for recommended loads for each programme. Overloading can cause unnecessary wear and tear to the laundry and give a disappointing drying result.

- Before closing the door make sure the fluff filter is correctly positioned in the door.

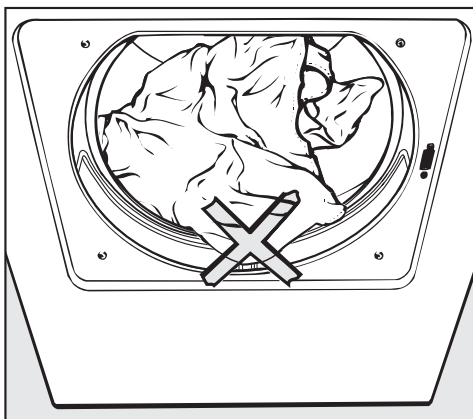

Check the laundry is right inside the drum so that it cannot get trapped or damaged when the door is shut.

- Shut the door either with a gentle swing, or lean against it and push it shut.

4 Select a programme

PROGRAMME SELECTION

☐ Cottons ☐ Automatic

☐ Minimum iron ☐ 15 min cool air

☐ Woollens Hand care ☐ 20 min warm air

☐ Smoothing ☐ 30 min warm air

- Press the ▼ or ▲ buttons repeatedly until the indicator light for the programme you want lights up.
- Extras and drying level indicator lights may also come on (Memory function).
- The duration of the programme selected will depend on the residual moisture of the laundry, fabric type and the load size. This may mean that each new programme will vary in duration.

The *Warm air and Cool air* programme times are fixed.

Selecting Extras

Switching on / off

EXTRAS

☐ Short

☐ Low temperature

☐ Anti-crease

- Each press of the top button selects or deselects either the Short or Low temperature Extra.
- Pressing the lower button selects or deselects Anti-crease.


Indicator light on = Extra is selected

How to dry correctly

Selecting a drying level

You can select a drying level for the *Cottons*, *Minimum iron* and *Automatic* programmes.

You cannot select a drying level for the other programmes. If you have selected one of these other programmes, please proceed to "Selecting the buzzer".

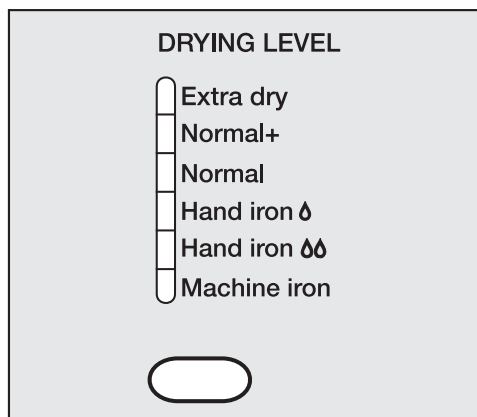

- Press the DRYING LEVEL button repeatedly until the indicator light for the drying level you want comes on.

Any of the drying levels can be selected for the *Cottons* programme. A more limited range is available when using the *Minimum iron* and *Automatic* programmes.

Selecting the buzzer

A buzzer sounds (at intervals for a maximum of 1 hr) to let you know the programme has finished.

- Press the *Buzzer* button.
Indicator light on = *Buzzer* selected

The buzzer will always sound when there is a fault, even if the buzzer has been switched off.

You can change the volume of the buzzer.

Before you begin, first ensure that:

- the dryer is switched on
- the door is closed.
- you have selected a programme

1. If the *Buzzer* indicator light is on: press the *Buzzer* button so that the indicator light goes out.
2. Press the *Buzzer* button (*the buzzer indicator light must be on*), until the desired volume / pitch is achieved. Then release the button.

Selecting delay start

- The start of a programme can be delayed by up to 24 hours.

5 Start the programme

- Press the *Start/Stop* button.
- The indicator light for the *Start/Stop* button will then change from flashing to being on constantly.
- A few seconds later, the programme time remaining will appear in the display.
- The SEQUENCE indicator light for the drying stage reached will come on.

Memory function (for Programme selection)

The electronics will store in memory the drying level and any Extras selected for the current drying programme.

The next time you chose that programme the indicator lights for these settings will come on. You can accept these or change them by pressing a button.

The memory function is deactivated if the programme is cancelled. If the buzzer has been selected, this selection will be saved automatically, whether or not the memory function has been activated.

Before the end of a programme

There is a cooling down phase (Cool air) at the end of the drying sequence. The programme will not finish until the cooling down phase has been completed.

There is no cooling down phase at the end of the following programmes:

Woollens handcare, Smoothing.

At the end of a programme

The indicator light *Anti-crease / Finish* comes on. The indicator light for the drying stage reached (depending on the programme selected) will also come on.

 will appear in the display.

6 Remove the laundry


- Press the *Door* button.
- Open the door.
- Remove the laundry.

Make sure that the drum is empty. If items are left in the dryer, they could be damaged by overdrying when the dryer is next used.

- Switch the dryer off by pressing the *I-On/O-Off* button.
- Clean the fluff filters.
- Close the door.
- Empty the condensed water container (where there is no external drainage of the water).
- The condenser unit should be checked and cleaned on a regular basis.

Extras

Not all the Extras are suitable for selecting with every programme.

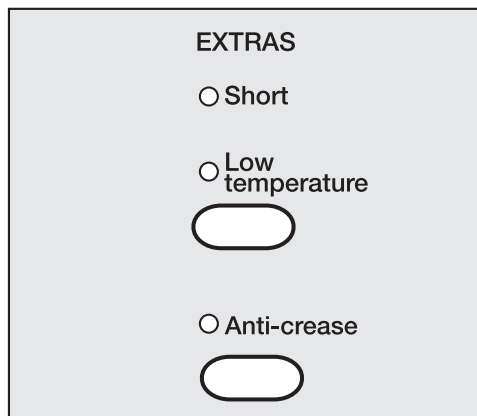

- After you have selected a programme, you can press the appropriate Extra button to select or deselect it.
- Each press of the top button selects the Extras in the following order:


Short

For drying fabrics which can withstand higher temperatures. Do not use on minimum iron or delicate fabrics.

- The programme duration is shorter.

Low temperature

For drying delicate fabrics at a lower temperature.

- For all delicate or minimum iron fabrics with the  symbol on the care label (e.g. acrylic garments).
- The programme duration is longer.

Anti-crease

Helps prevent creasing, if laundry is not normally removed immediately after the end of a programme.

- The drum will turn at intervals for up to an hour.

To switch on Delay start

The start of a programme can be delayed by up to 24 hours (24h).

After selecting a programme:

- Press the *Delay start* button repeatedly until the time you require appears in the display in h mins.
- The *Delay start* indicator light will flash.
- Times of:
 - up to 10h are selected in 30 minute steps
 - more than 10h in 1hour steps
- If you keep the *Delay start* button pressed in, the time will continue to increase up to 24h.

To begin Delay start

- Press the *Start/Stop* button.
- The Delay start time will begin to count down and the *Delay start* indicator light will come on.

The display shows times of:

- more than 10h counting down by the hour
- less than 10h counting down in minutes

The drum will turn briefly after 1 hour to help prevent creasing.

Laundry can be added at any time during the delay period. To do this, first switch the dryer off and open the door. Then: Close the door and switch the dryer back on again.

To alter Delay start

- Press the *Start/Stop* button.
- The Delay start time will be interrupted.

- Press the *Delay start* button repeatedly until the time you require appears in the display in h mins.
- Press the *Start/Stop* button.

The Delay start time will start counting down from the beginning again.

To cancel Delay start

- Press the *Delay start* button when 24h is showing in the display.

If the Delay start time has already begun to count down:

- Press the *Start/Stop* button.
- Press the *Delay start* button until 24h appears.
- Press the *Delay start* button when 24h is showing in the display.

Programme chart

Cottons Extra dry		Max. load: 5 kg*
Fabric type	Multi-layered fabrics, which would not be thoroughly dried using the <i>Normal+</i> programme.	
Notes	Do not dry jersey fabrics in the <i>Extra dry</i> programme as they have a tendency to shrink.	
Extras	Short or Low temperature, Anti-crease	
Cottons Normal +		Max. load: 5 kg*
Fabric type	Single and multi-layered fabrics, e.g. mixed load of cotton fabrics such as towelling, jerseywear, underwear.	
Extras	Short or Low temperature, Anti-crease	
Cottons Normal **		Max. load: 5 kg*
Fabric type	Load of similar cotton items, e.g. underwear, flannelette bed linen, towelling.	
Notes	If laundry is still too damp, then finish drying using the Warm air programme and use the <i>Normal+</i> programme next time.	
Extras	Short or Low temperature, Anti-crease	
Cottons Hand iron 🔥		Max. load: 5 kg*
Fabric type	Cottons and linen fabrics, e.g. table linen, bedlinen, starched laundry etc.	
Extras	Short or Low temperature, Anti-crease	
Cottons Hand iron 🔥🔥 **		Max. load: 5 kg*
Fabric type	Cottons and linen fabrics, e.g. table linen, bedlinen, starched laundry etc.	
Notes	If laundry is still too damp, then select <i>Hand iron 🔥</i> in the future.	
Extras	Short or Low temperature, Anti-crease	
Cottons Machine iron		Max. load: 5 kg*
Fabric type	Cotton and linen fabrics, including starched laundry for machine ironing.	
Notes	To prevent laundry from drying out it should be rolled up until you are ready for ironing.	
Extras	Short or Low temperature, Anti-crease	

* Weight of dry laundry

** Note for test institutes:

Use this programme without Extras when testing according to EN 61121 Standard.

Programme chart



Minimum iron Normal +		Max. load: 2.5 kg*
Fabric type	Minimum iron items made of synthetic or blended fabrics which are not dried adequately in the <i>Normal</i> programme (e.g. pullovers, dresses, trousers).	
Notes	Spin minimum iron fabrics for at least 30 seconds in the washing machine before drying.	
Extras	Short or Low temperature, Anti-crease	
Minimum iron Normal **		Max. load: 2.5 kg*
Fabric type	Minimum iron shirts, blouses, skirts, table cloths etc. made of mixed fibres, e.g. cottons / synthetics. Minimum iron cottons.	
Notes	Spin minimum iron fabrics for at least 30 seconds in the washing machine before drying.	
Extras	Short or Low temperature, Anti-crease	
Minimum iron - Hand iron Δ		Max. load: 2.5 kg*
Fabric type	Minimum iron blended fabrics such as cottons / synthetics e.g. shirts, blouses, skirts and table cloths which are still to be hand ironed.	
Notes	<ul style="list-style-type: none"> – Spin minimum iron fabrics for at least 30 seconds in the washing machine before drying. For extra special care of delicate fabrics and to reduce creasing even more, reduce the load to 1 kg*. – Items are dried with very little creasing, depending on fabric type and amount of load. 	
Extras	Short or Low temperature, Anti-crease	
Woollens handcare		Max. load: 2 kg*
Fabric type	Woollen fabrics	
Notes	<ul style="list-style-type: none"> – To refresh and fluff up woollen garments quickly. Woollen fabrics are not dried completely by this programme. – Remove garments immediately at the end of the programme. Do not repeat. 	

* Weight of dry laundry

** Note for test institutes:

Use this programme without Extras when testing according to EN 61121 Standard.

Programme chart

Smoothing		Max. load: 2.5 kg*
Fabric type	<ul style="list-style-type: none"> – Cottons and linen fabrics. – Minimum iron items made of mixed fibres, e.g. cottons / synthetics, such as cotton trousers, jackets, shirts. 	
Notes	<ul style="list-style-type: none"> – Smooths out creasing caused during the spin cycle in the washing machine. – Fabrics are not completely dried in this programme. Remove garments immediately at the end of the programme and place on a line or hangers to dry. 	
Extras	Anti-crease	
Automatic Normal+ / Normal / Hand iron 		Max. load: 3 kg*
Fabric type	Mixed load of cotton and minimum iron fabrics.	
Notes	Select <i>Hand iron </i> for garments which are still to be hand ironed.	
Extras	Anti-crease	
Cool air		Max. load: 5 kg*
Fabric type	Any item which only needs airing.	
Extras	Anti-crease	
Warm air		Max. load: 5 kg*
Fabric type	<ul style="list-style-type: none"> – Multi-layered fabrics whose layers have different drying characteristics such as jackets, pillows. – For drying individual items, e.g. bath towels, bathing costumes, tea-towels. 	
Extras	Low temperature, Anti-crease	
Notes	Do not select the longest drying time to start with. Check the items as you are drying them to find the optimum time.	

* Weight of dry laundry

Changing the programme sequence

Changing a programme while it is running

You cannot change to another programme once a programme has started (this prevents unintentional alterations). However, you can still select or deselect the buzzer and anti-crease.

You will need to cancel the current programme before you can select a new one.

To cancel a programme

- Press the *Start/Stop* button.

The *Start/Stop* indicator will then start flashing instead of being on constantly. The flashing indicates that a new programme can be selected.

- Select a different programme by pressing the ▼ or ▲ buttons.
- Select any Extras required.
- Select a drying level (only for programmes with drying levels).

To continue drying

- Press the *Start/Stop* button.

To interrupt a programme

- Switch the dryer off with the *I-On/O-Off* button.


To continue drying

- Switch the dryer back on with the *I-On/O-Off* button.

The programme will continue, as long as the cooling down phase has not been reached.

Adding or removing laundry after a programme has started

- Press the *Door* button.
- Open the door.

 Do not touch the back of the drum when adding or removing items. The drum could be very hot - danger of burning.

- Add or remove items.
- Close the door.

To continue drying

- Press the *Start/Stop* button.

The programme will continue, as long as the cooling down phase has not been reached.

The time left shown in the display may now vary from the actual drying time.

Electronic system lock

The system lock prevents your machine being used without your knowledge.

It can be activated if wished.

The dryer's electronics are locked. The dryer can still be switched on but a programme cannot be started. The *locked* indicator light will flash if an attempt is made to start a programme.

The door is not locked and can be opened at any time.

To activate the lock

Before you begin, first ensure that:

- The tumble dryer is switched off.
- The door is closed.

❶ Press the *Anti-crease* and DRYING LEVEL buttons at the same time and hold them pressed in until you reach step ❷ below.

❷ Press the *I-On/O-Off* button in.

❸ Press the *Short/Low temperature* button three times.

❹ Then release the *Anti-crease* and DRYING LEVEL buttons.

The *Locked* indicator light will flash.

The electronics have now been locked.

❺ Switch the dryer off with the *I-On / O-Off* button.

To deactivate the lock

Before you begin, first ensure that:

- The tumble dryer is switched off.
- The door is closed.

❶ Press the *Anti-crease* and DRYING LEVEL buttons at the same time and hold them pressed in until you reach step ❷ below.

❷ Press the *I-On/O-Off* button in.

❸ Press the *Short/Low temperature* button three times.

❹ Then release the *Anti-crease* and DRYING LEVEL buttons.

The *Locked* indicator light will go out.

The electronics are no longer locked.


❺ You can now use the dryer or switch it off with the *I-On/O-Off* button.

Emptying the condensed water container


The condensed water will be collected in the condensed water container unless the appliance has been fitted with a drain hose (see installation).

The condensed water container should be emptied after every drying programme or as soon as the *Empty out container* indicator light comes on.

The drying programme will be interrupted if the maximum level of the condensed water container is reached. The *Empty out container* light will come on and the buzzer will sound.

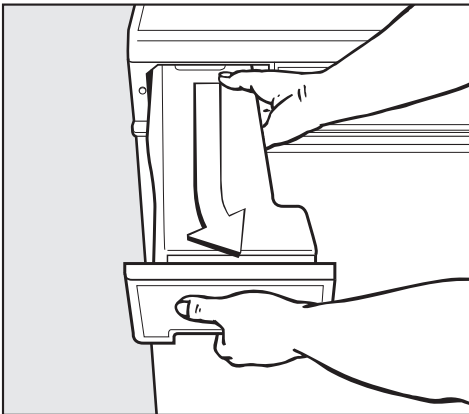

- Holding the container firmly in both hands, as shown, pull it out slightly towards the right-hand side.
- Hold the container in a horizontal position when carrying it.

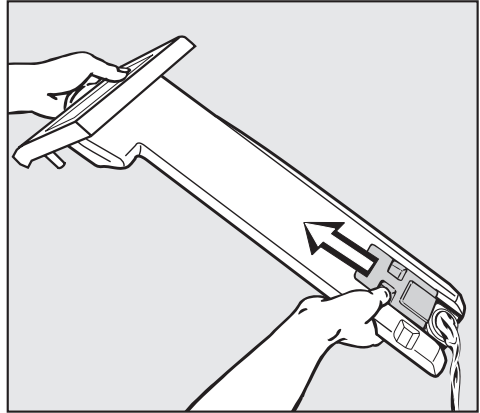

- Open the shutter and empty out the water.
- To replace the container, hold it at a slight angle (as when removing it) and push it in gently until you feel it click into position.
- Switch off the dryer before starting the next programme. When you switch the dryer back on the *Empty out container* indicator light will have gone out.

Condensed water should not be consumed. It could lead to health problems for people and animals.


Condensed water can be put to household use (e.g. used in a steam iron or humidifier). To ensure that any residual particles of fluff in the condensed water are removed before use, pass it through a fine sieve or paper filter first.

Cleaning and care


Cleaning the fluff filters

The fluff which is created by the drying process is collected by the fluff filters in the door and the door opening. Clean the filters after **each** drying programme.

Cleaning them whilst dry

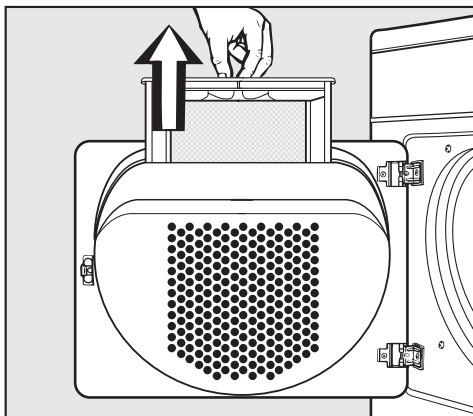

- Open the door and pull the fluff filter out of the door as illustrated.

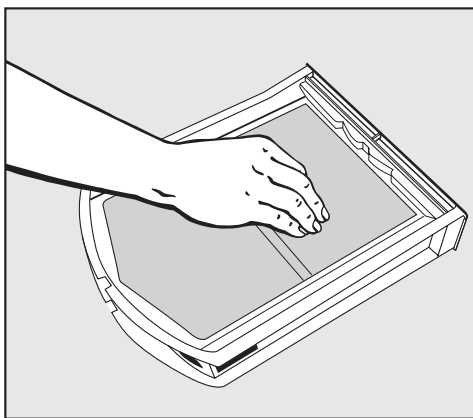


- Use your fingers to remove the fluff from the surface of the filter.

- Remove any fluff from the hollow part of the door holder. A cleaning brush is available as an optional extra from your Miele dealer or the Miele Spare Parts Department.

Tip: You can also use a vacuum cleaner.

- Once clean, push the filter back into the door holder until it clicks into position. Ensure it is facing the correct way.

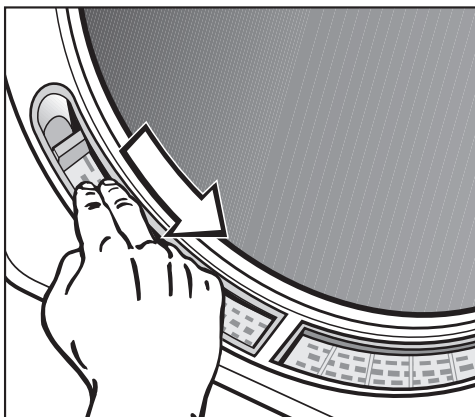


- Use your fingers to remove the fluff from the two fluff filters in the door opening.
- Close the door.


Cleaning them with water

If there is a great deal of compacted fluff on any of the filters, they can be removed and cleaned under hot running water.

- To remove the fluff filter from the door holder see previous page.

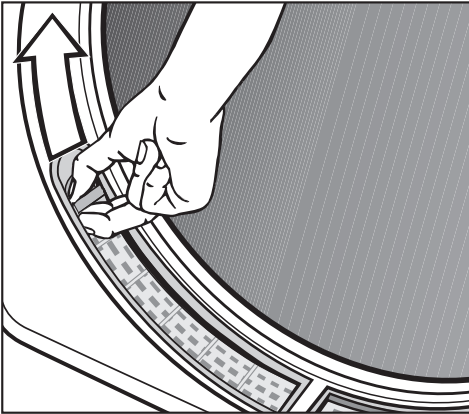

- To remove the filters in the door opening, grip the holder and push upwards in the direction of the arrow to remove it.
- Rinse the filters under hot, running water.
- Then shake the filters until no more water droplets are visible.
- Dry the filters thoroughly with care.

 Do not replace them if they are damp or wet. Damp or wet filters could cause operational faults.

- Push the large filter back into the door holder until it clicks into position. Ensure it is facing the correct way.

- Place the filters back in the door opening (the left and right filters are identical) with the finger holders facing upwards. See illustration.

Cleaning the tumble dryer

Disconnect the machine from the mains electricity supply.

- Clean the housing and control panel with a slightly damp cloth and a mild detergent or soapy water.
- The drum and other stainless steel parts can be cleaned with a suitable proprietary stainless steel cleaner following the manufacturer's instructions.

Do not use solvents, abrasive cleaners, glass cleaners or all-purpose cleaners. These could damage plastic surfaces and other parts. The machine must never be hosed down.

- Dry all parts with a soft cloth.
- A microfibre E-Cloth is available from the Miele UK Spare Parts Department which is suitable for cleaning surfaces such as stainless steel, glass, plastic and chrome without the use of chemicals. It can be washed 300 times.

Cleaning and care

Cleaning the condenser unit


Detergent residue, hair and fine fluff from the dryer can get through the fluff filters and block the condenser unit.

Dust from the room in which the dryer is installed can also get into the condenser unit and cause a blockage.


Check the condenser unit at least twice a year. If the dryer is used frequently then clean the condenser unit after approx. 100 drying cycles.

Removing the condenser unit


- Open the service panel by pressing the two lower corners at the same time (see illustration). The hooks at the side will prevent the panel from falling off.

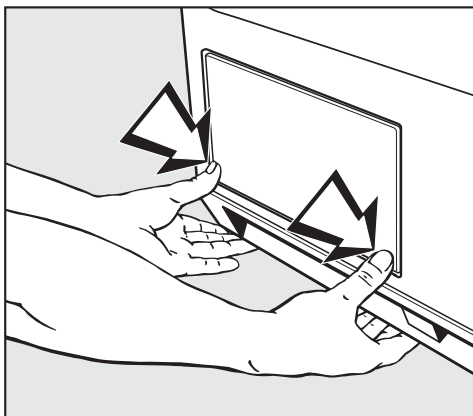


- Now the remove the panel by pulling it diagonally upwards.
- Then place it to one side.

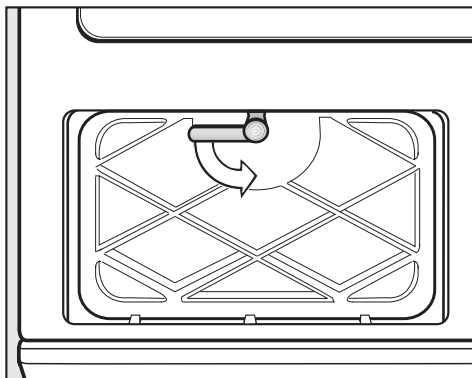

- Turn the lever on the inner cover downwards to the vertical position.
- Pull the cover forwards
- Then remove it by pulling it diagonally upwards.

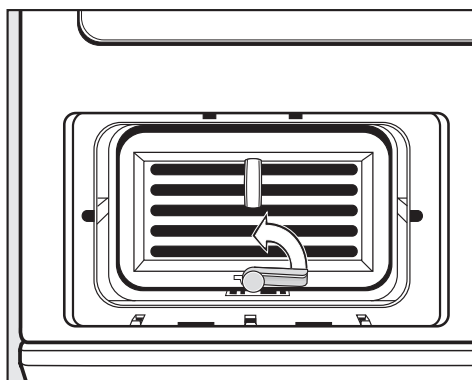


- Turn the lever on the condenser unit to the vertical position.

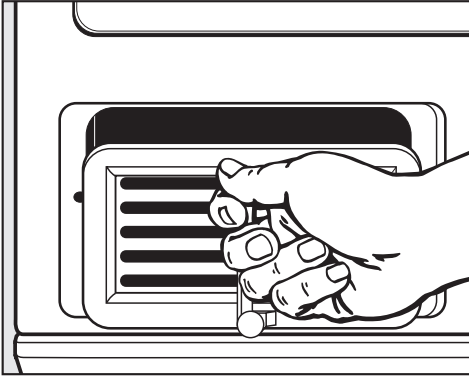

- Pull the condenser unit out of its housing by the handle.

Checking the condenser unit

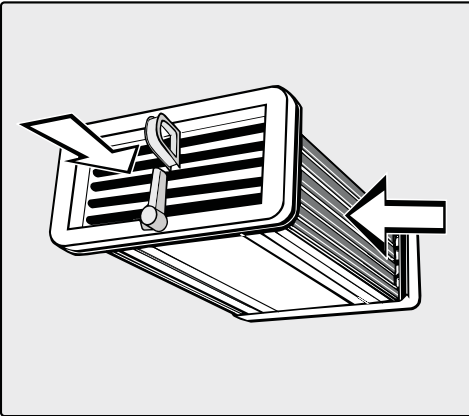

- Hold the condenser unit up to the light **as shown**.
- Check to see if there is any fluff inside it.
The arrows in the illustration above indicate where to look.

If you cannot see any fluff:


- Replace the condenser unit (see following page).

If you can see some fluff:

- Clean the condenser unit as described below.

Cleaning the condenser unit

- When rinsing the condenser unit, make sure you position it as shown in the next two illustrations.

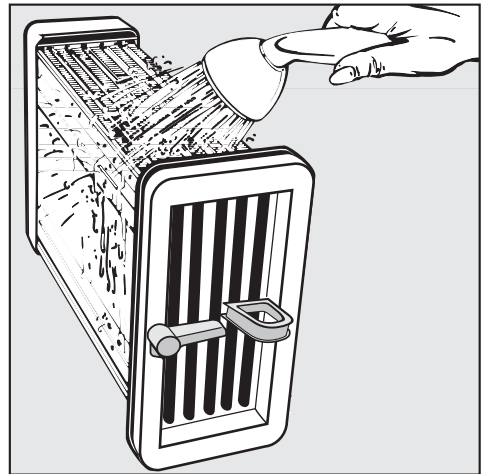

- Use a shower head or similar to rinse the unit out **as shown**.

Cleaning and care



- Then flush the unit through from the front.
- Check the condenser unit again for any visible fluff and if necessary flush it through again until it has all gone.
- Remove any soiling still visible inside the housing unit.
- Also make sure the rubber seals are clean.

The rubber seals must not be removed and must be free of kinks.
- Shake any excess water out of the unit until no more water droplets are visible.

Replacing the condenser unit

- With the handle facing upwards, push the condenser unit back into position in its housing.
- Turn the lever down to the horizontal position, making sure that the hook on the lever clicks into the groove.


When replacing the inner cover after cleaning, ensure that the rubber seal fits correctly into the groove.

- Replace the cover making sure the hooks locate correctly. Hold it at an angle and push it gently downwards.
- Then turn the lever upwards into the horizontal position to lock the cover.
- Replace the service panel and press the upper edge until it clicks into position.

It is important to ensure that both the condenser unit and the cover are correctly positioned and locked. Otherwise water may leak from the machine.

Problem solving guide

With the help of the following notes minor faults in the performance of the machine, some of which may result from incorrect operation, can be put right without contacting the Service Department.

 Repair work to electrical equipment should only be carried out by a suitably qualified person in accordance with local and national safety regulations. Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

General problems

Problem	Possible cause	Remedy
The tumble dryer fails to start when switched on.	No obvious cause.	<ul style="list-style-type: none">– Have you followed the switch-on procedure correctly (see “How to dry correctly”)?– Is the plug correctly inserted in the socket and switched on?– Is the door closed properly?– Has the fuse or circuit breaker tripped?
Items made of synthetic fibres are charged with static electricity after drying.	Synthetic fibres tend to attract static charge.	Static charge can be reduced by adding a fabric conditioner to the final rinse in the washing machine or a fabric conditioner sheet to the load in the dryer.

Problem solving guide

Problem	Possible cause	Remedy
There is a build up of fluff.	Fluff is principally the result of friction when garments are being worn and washed. Machine drying hardly causes any fluff to form and has been established by research institutes to have no effect on the lifetime of fabric.	Fluff is collected by the fluff filters and can be easily removed (see "Cleaning and Care").
The laundry is not sufficiently dry.	The load consisted of different fabrics.	<ul style="list-style-type: none">– Finish drying using "Timed drying - Warm air".– Select a more suitable drying programme next time (see "Programme chart").
There are water droplets at the upper edge of the drum aperture.	A double filter system with dual insulation prevents fluff from being deposited in the condenser unit. This insulation can lead to a build-up of condensation.	Laundry being removed from the machine may come into contact with these water droplets, but they will dry off in a matter of minutes.

Problem solving guide

Problem	Possible cause	Remedy
The drying process goes on too long or even switches off.	Important: Before attempting to remedy one of the following causes, switch the dryer off and switch on again to start the programme again.	
	Ventilation to and from the dryer may be insufficient (e.g because it is installed in a small room). This has caused the temperature in the room to rise sharply.	Open a door or window while the machine is in operation for increased air flow.
	The fluff filters are clogged up with fluff or were still wet when they were replaced.	<ul style="list-style-type: none"> – Remove any fluff. – The fluff filters must be completely dry.
	The laundry has not been spun sufficiently.	Make sure that your laundry is thoroughly spun at highest spin speed for the type of fabric.
	The tumble dryer has been overloaded.	Do not exceed the maximum load for the programme selected.
	Metallic components, e.g. zips have prevented the dryer from registering the correct moisture level in the laundry.	<ul style="list-style-type: none"> – Close zips and fasten any hooks next time. <p>If the problem occurs again, dry garments with long zips using "Timed drying - Warm air".</p>
	Detergent residues, hair and fine fibres can block up the condenser unit.	Check the condenser unit from time to time and clean it if necessary (see "Cleaning and Care").
	The vents below the door are blocked.	Remove any objects that are blocking the vents.

Problem solving guide

Problem	Possible cause	Remedy
The condenser unit service panel will not shut.	The inner cover of the condenser unit has not been locked properly and/or the condenser unit has not been positioned correctly.	<ul style="list-style-type: none"> – Ensure that the condenser unit is positioned correctly and lock the cover. – Check the rubber seals.
Water leaks from the machine after the condenser unit has been cleaned.	Fluff has collected at the bottom of the condenser unit housing.	<ul style="list-style-type: none"> – Use a cloth to remove any fluff from the inside of the condenser unit housing.
The interior drum lighting does not come on.	The lighting switches off automatically (to save energy).	Switch the dryer off and then on again.
	The lamp needs changing.	Change the lamp as described at the end of this section.

Check and fault indicator lights

Problem	Possible cause	Remedy
The <i>Locked</i> indicator light flashes when the appliance is switched on and the programme cannot be started.	The system lock is activated.	If you wish to use the dryer, the system lock must be deactivated (see "Electronic system lock").

Problem solving guide

Problem	Possible cause	Remedy
The <i>Clean out airways</i> indicator light comes on.	This indicator light comes on to warn you that the dryer is not working efficiently.	
	The fluff filters may be blocked.	Remove any fluff (see "Cleaning and care").
	Detergent residues, hair and fine fibres can block up the condenser unit.	Check the condenser unit from time to time and clean it if necessary (see "Cleaning and Care").
		The indicator light will go out when you open the door. You can also deactivate the indicator lights (see "Programmable functions").
The programme has been stopped. The <i>Clean out airways</i> indicator light is flashing.	Possible causes and remedies are described above in (The <i>Clean out airways</i> lamp comes on).	
	No obvious cause.	<ul style="list-style-type: none"> – Switch the dryer off and then on again. – Then start the programme again. <p>If the programme stops again and the fault message reappears there is a fault. Contact the Miele Service Department.</p>
The <i>Empty out container</i> indicator light comes on.	The condensed water container is full or there is kink in the drain hose.	<ul style="list-style-type: none"> – Empty out the condensed water container. – Check the drain hose. – Switch the dryer off and then on again.

Problem solving guide

Problem	Possible cause	Remedy
The programme has been interrupted. The <i>Anti-crease/Finish</i> light has come on and the buzzer is sounding.	This is not a fault. The electronic unit has recognised that there is no laundry in the drum and cancelled the programme. Drying individual garments or items which are already dry can also cause the programme to stop.	Use the Timed drying - Warm air programme to dry individual items. Before changing a programme: Open and close the drum door.
The programme has been interrupted. The indicator light for <i>Hand iron</i> or <i>Machine iron</i> is flashing, and the buzzer is sounding.	No obvious cause.	<ul style="list-style-type: none"> – Switch the dryer off and then on again. – Then start the programme again. <p>If the programme stops again and the fault message reappears there is a fault. Contact the Miele Service Department.</p>

Check/fault messages in the display


Problem	Possible cause	Remedy
The following appears in the display after the programme has started ===...-==... ==... .	The electronics are in the process of calculating the drying time and require a few seconds longer.	This is not a fault.
Shortly before the end of the programme, the count down of the time left to run is halted and bars start flashing but the dryer continues to dry.	This might be because: <ul style="list-style-type: none"> – items of laundry may have rolled up together. – the types of fabrics being dried may take different times to dry. – The fluff filter may be blocked. – The temperature in the room may have changed. 	The drying process is not yet complete. The programme needs more time than the electronics calculated at the start of the programme. The time count down is suspended until the drying level selected has been reached.

To change the interior drum lamp

- Open the door.

Before changing the lamp, disconnect the machine from the mains power supply.

You will find the interior lamp cover at the top of the drum aperture.

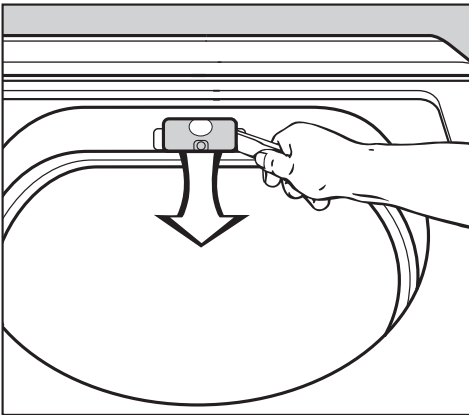

- Insert the opener under the side edge of the cover as illustrated.
- Turn your wrist to make the cover open downwards.

The temperature resistant lamp should only be ordered from your Miele dealer or the Miele Spare Parts Department.

The lamp must not exceed the maximum wattage quoted on the data plate and on the lamp cover.

- Replace the lamp.

- To close the flap push it upwards and press it on the left and right until you hear it click into position.


The cover must be fixed securely, as otherwise moisture may seep in and cause a short circuit.

After Sales service

In the event of any faults which you cannot remedy yourself, or if the machine is under guarantee, please contact

- your Miele dealer or
- the Miele Service Department (see back cover for contact details).

When contacting your dealer or the the Service Department, please quote the model and serial number of your machine, both of which are shown on the data plate situated on the right hand side below the drum aperture.

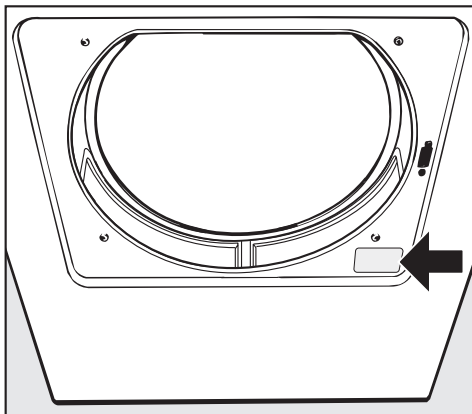

Future updates (PC)


The indicator or check light marked **PC** on the fascia panel is the interface used by the Miele service technicians during service work for testing purposes and for updating the machine's programme data.

Optional accessories

Optional accessories for these dryers are available from your Miele Dealer or from the Miele Spare Parts Department.


Please note that telephone calls may be monitored and recorded to improve our service.

Front view

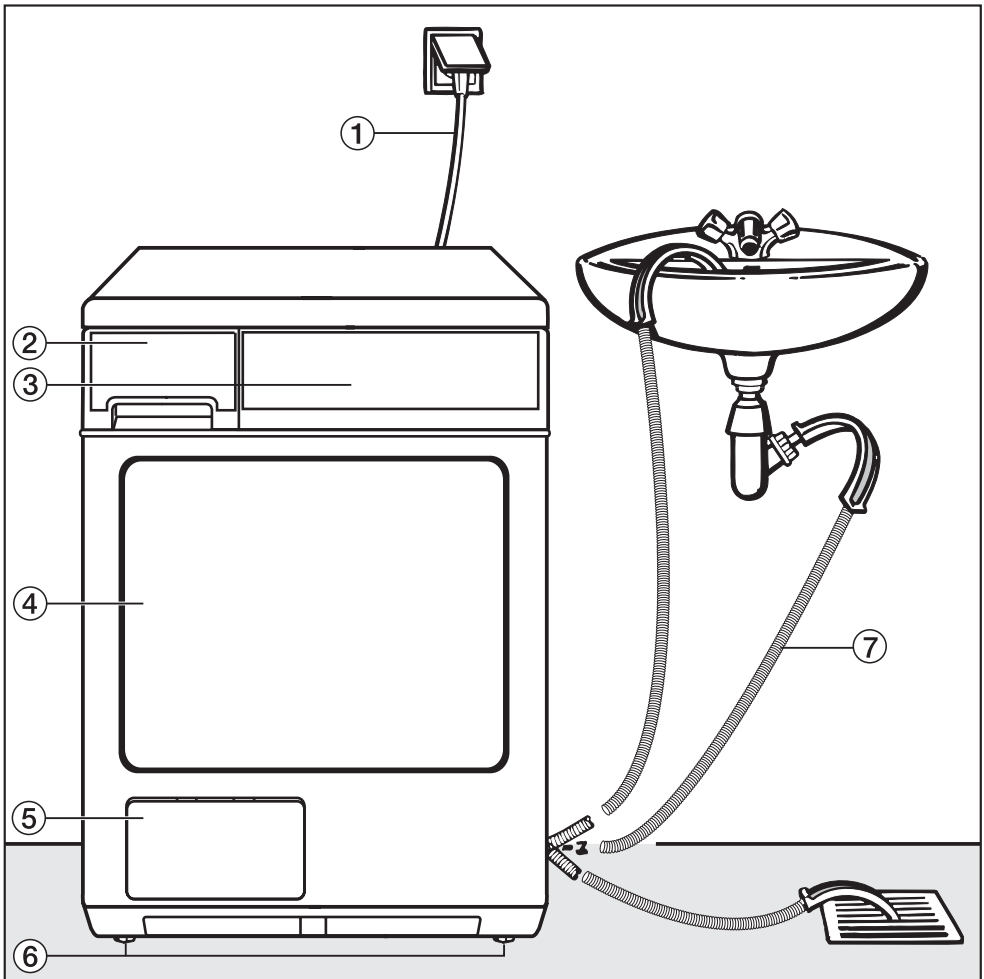

Installation

Installation site

 Make sure the dryer door can be opened without hindrance after installation.

Transporting the machine to its installation site

When moving the machine you can hold it by the lid where it protrudes to the rear of the dryer.

To manoeuvre the dryer out of its packing case to its installation site you will also need to hold it by the front feet.

Building under a continuous worktop / in a row of kitchen units

The dryer should not be installed next to a refrigerator or freezer. The warm air expelled from the rear of the dryer would increase the temperature around the refrigerator's/freezer's heat exchanger causing the compressor to run continuously.

If it is not possible to install the dryer anywhere else, then the refrigerator/freezer must be sealed off from the dryer.

A **building under kit*** is required which must be fitted by a suitably qualified person.

The machine lid is replaced by a coverplate. It is essential that the coverplate is fitted to ensure electrical safety.

- When installing under a 900/910 mm high worktop a spacer kit* is required.
- The electrical socket must be located in an accessible position near the machine.

* Available as an optional accessory from your Miele dealer or the Miele Spare Parts Department.

The building under kit is supplied with its own installation instructions.


N.B. When built under running times may be longer.

If you wish to push your machine under a worktop and there is space to do this **without removing the lid**, the building under kit is not necessary. Otherwise the building under kit is essential.


Replacing the lid

If the lid has been removed in order to fit a cover plate, ensure that, if the lid is replaced, it fits securely into the rear holders. Otherwise, it is not properly secure for transport.


Aligning the machine

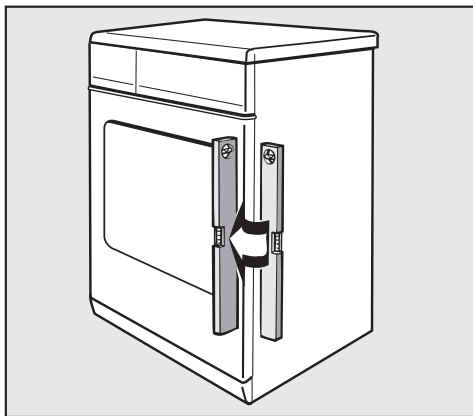

The machine must be perfectly level to ensure safe and proper operation.

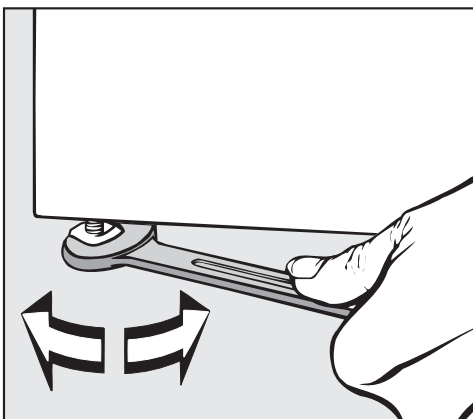

- The screw feet can be adjusted to compensate for any unevenness in the floor.

 The ventilation gaps in the plinth must not be covered over as this would prevent a sufficient intake of air.

Room in which the dryer is located

Air taken in for use in the drying process will be warm when it is expelled from the rear of the dryer. This expelled air heats up the air in the room. It is therefore very important to ensure that the room is adequately ventilated, particularly if the dryer is located in a small room. Otherwise running times and energy consumption could be increased.

Washer - dryer stack

The tumble dryer can also be combined with a Miele washing machine in a washer-dryer stack. To do this the appropriate stacking kit* (WTV) to match your washing machine is required.

* Available as an optional accessory from your Miele dealer or the Miele Spare Parts Department.

Stacking kits must be fitted by a suitably qualified fitter.

Before moving the machine again (e.g. when moving house)

After each use a small quantity of condensed water will collect in the area around the pump. This water can run out if the machine is tipped up when it is being moved. It is a good idea to run the *Cool air* programme for approximately 1 minute before moving the machine. Any remaining condensed water will then be fed into the condensed water container or out through the drain hose.

Installation

External condensed water outlet

When drying is in progress, condensed water is pumped into the condensed water container through the drain hose at the back of the dryer. The condensed water can also be drained off directly if the machine is installed near a sink, drain outlet etc. so that the condensed water container does not have to be emptied.


The drain hose (approx. 2 m long) is stored in the dryer. It must be pulled out of the dryer to its full extent if condensed water is to be drained externally.

Maximum delivery head: 1 m.

If it is not long enough, an extension hose is available as an optional accessory through your dealer or from the Miele Spare Parts Dept.


Pulling out the drain hose

From the back of the dryer at the top:

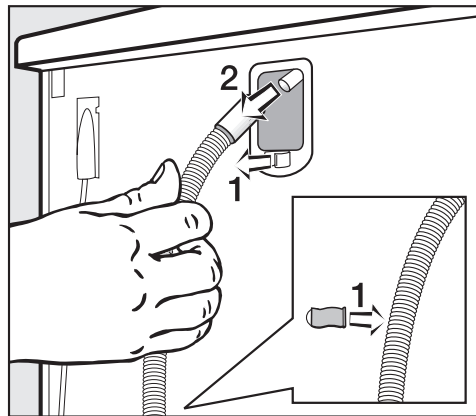

- Unclip the drain hose (1).
- Then pull it off holder (2).

From the back of the dryer at the bottom:

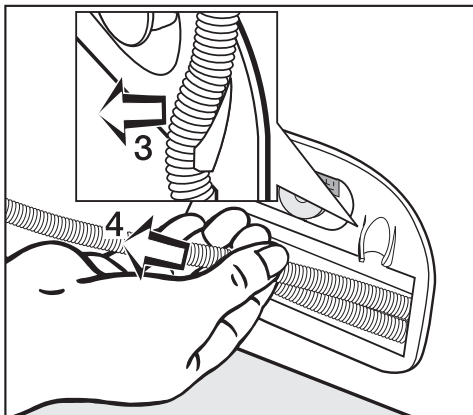

- Unclip the drain hose from holder (3).
- Then pull the drain hose **completely out of the dryer towards the left (4)** (See illustration).


⚠ Important: do not let the drain hose become kinked as this could damage it.

⚠ If you want to drain the water off into a sink you will need to secure the hose carefully, e.g. by tying it to a tap to make sure it cannot slip during use. Otherwise there is a risk of overflowing water which could cause damage.


Use the bow-shaped guide to prevent the drain hose from becoming kinked (see "Front view" illustration).

Connection to a sink drain outlet

The drain hose can be connected directly to a sink drain outlet.

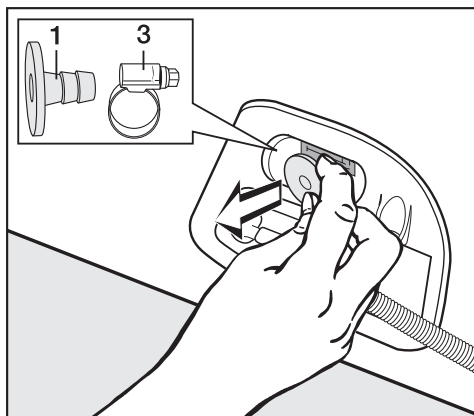

- Remove the following from the back of the dryer at the bottom:
Adapter **1** and hose clip **3** behind it.

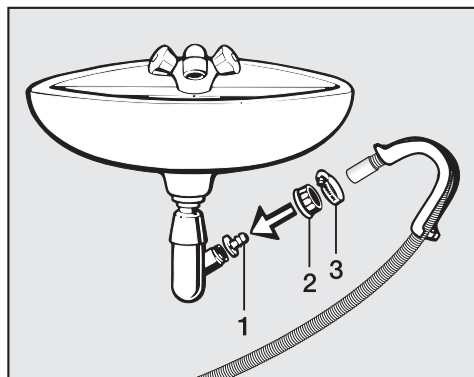

- Fit adapter **1** to the sink drain outlet using nut **2**.

If this nut has a flat disc sealing it you should take the disc out first.

Important: if this nut has a washer or seal in it this must not be removed!

- Attach the end of the hose to adapter **1**.
- Use a screwdriver to tighten hose clip **3** up close to the nut.

If you no longer wish to use an external condensed water outlet

⚠ Do not push the drain hose back into the dryer. Doing this could cause it to become kinked and damaged in the dryer.

- Loop the drain hose up.
- Use a suitable cable tie to secure the looped hose to the back of the dryer, or simply lay the looped hose behind the dryer.
- Attach the open end of the drain hose back onto the holder at the back of the dryer at the top (see holder **2** in "Pulling out the drain hose").

Electrical connection

Electrical connection U.K.

All electrical work should be carried out only by a suitably qualified and competent person, in strict accordance with national and local safety regulations.

Ensure power is not supplied to the machine while installation work is being carried out.

The machine is supplied with a mains cable with moulded plug for connection to a 230-240V mains supply. **The voltage, rated load and fuse rating are given on the data plate.** Please ensure these match the household mains supply.

Connection should be made via a fused plug and suitable switched socket which is easily accessible after installation.

For extra safety it is advisable to install a residual current device (RCD), with a trip current of 30 mA (in accordance with DIN VDE 0664, VDE 0100, section 739).

Do not connect via an extension lead.

Important

The wires in the mains lead are coloured in accordance with the following code:

Green/yellow = earth

Blue = neutral

Brown = live

Electrical connection U.K. Non-rewireable plugs BS 1363


If this machine is fitted with a non-rewireable plug and the socket outlets are not suitable for the plug supplied or if the existing plug needs to be replaced by a new one, the old plug will need to be cut off and an appropriate plug fitted. The fuse carrier and the fuse should be removed from the old plug and disposed of.

The plug cut from the cable should then be disposed of and on no account be inserted into any socket elsewhere in the house (electric shock hazard).

The fuse cover must be refitted when changing the fuse, and if the fuse cover is lost, the plug must not be used until a suitable replacement is obtained. The colour of the correct replacement cover is that of the coloured insert in the base of the plug, or the colour that is embossed in words on the base of the plug (as applicable to the design of plug fitted).

Replacement fuses should be ASTA approved to BS 1362 and have the correct rating. Replacement fuses and fuse covers may be purchased from your local electrical supplier.

If the colours of the wires in the mains lead of this machine do not correspond with the coloured markings identifying the terminals of your plug, proceed as follows:

- The wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol  or coloured green, or green and yellow.
- The wire which is coloured blue must be connected to the terminal in the plug which is marked with the letter N or coloured black.
- The wire which is coloured brown must be connected to the terminal in the plug which is marked with the letter L or coloured red.

**WARNING: THIS APPLIANCE
MUST BE EARTHED**

Consumption data

Programme	Final spin speed in a washing machine	Energy	Time
<i>EN 61121 test programme:</i>			
Cottons Normal Max. load 5 kg	800 rpm (70 % residual moisture)	3.40 kWh	89 mins
Cottons Hand iron ΔΔ Max. load 5 kg	800 rpm (70 % residual moisture)	2.70 kWh	74 mins
Minimum iron Normal Max. load 2.5 kg	1000 rpm (50 % residual moisture)	1.25 kWh	38 mins
Cottons Extra dry Max. load 5 kg	1200 rpm	3.25 kWh	84 mins
	1400 rpm	3.10 kWh	81 mins
	1600 rpm	2.85 kWh	74 mins
	1800 rpm	2.80 kWh	73 mins
Cottons Normal + Max. load 5 kg	1200 rpm	2.80 kWh	75 mins
	1400 rpm	2.65 kWh	71 mins
	1600 rpm	2.40 kWh	65 mins
	1800 rpm	2.35 kWh	64 mins
Cottons Normal Max. load 5 kg	1200 rpm	2.65 kWh	72 mins
	1400 rpm	2.55 kWh	68 mins
	1600 rpm	2.25 kWh	62 mins
	1800 rpm	2.20 kWh	61 mins
Cottons Hand iron Δ Max. load 5 kg	1200 rpm	2.20 kWh	62 mins
	1400 rpm	2.05 kWh	59 mins
	1600 rpm	1.80 kWh	52 mins
	1800 rpm	1.75 kWh	51 mins
Cottons Hand iron ΔΔ Max. load 5 kg	1200 rpm	2.00 kWh	57 mins
	1400 rpm	1.85 kWh	53 mins
	1600 rpm	1.60 kWh	47 mins
	1800 rpm	1.55 kWh	47 mins
Cottons Machine iron Max. load 5 kg	1200 rpm	1.60 kWh	44 mins
	1400 rpm	1.45 kWh	37 mins
	1600 rpm	1.20 kWh	36 mins
	1800 rpm	1.15 kWh	37 mins
Minimum iron - Hand iron Δ Max. load 2.5 kg	1000 rpm	1.10 kWh	35 mins
Automatic Normal Max. load 3 kg	900 rpm	1.90 kWh	55 mins
Woollens handcare Max. load 2 kg	-	0.20 kWh	4 mins
Smoothing Max. load 2.5 kg	-	0.30 kWh	9 mins

All data established in accordance with EN 61121

Before testing in accordance with EN 61121, dry a 3 kg load of cotton laundry with 70% residual moisture as per the above standard using the Cottons Normal programme without selecting any Extra options.

Consumption data can vary from the nominal values given above depending on the size of the load, types of textiles, residual moisture levels after spinning, fluctuations in the electricity supply and any Extra options selected.

Technical data

Height	85 cm (adjustable +0.7/- 0.7 cm)
Height without lid	82 cm
Width	59.5 cm
Depth	58 cm
Depth with door open	106 cm
Weight	54 kg
Drum volume	100 litres
Maximum capacity	5 kg dry weight
Capacity of condensed water container	approx. 3.5 litres
Length of connection cable	1.60 m
Maximum delivery head	1 m
Maximum drain hose length	3 m
Voltage	see data plate
Rated load	see data plate
Fuse rating	see data plate
Lamp wattage	see data plate
Energy consumption	see "Consumption data"
Test certificates awarded	Radio/TV suppressed, VDE

Programmable functions for changing standard settings

Programmable functions

Cottons drying level

If you want the laundry to be drier you can reduce the residual moisture level for the Cottons programmes.

- The programme duration will increase and the laundry will be drier.
- The machine is delivered with the residual moisture level set at normal.

Follow steps ❶ to ❷ to programme and store in memory.

Before you begin, first ensure that:

- The tumble dryer is switched off.
- The door is closed.

- ❶ Press the *Start/Stop* button and keep it pressed in whilst carrying out steps ❷-❸.
- ❷ Press the *I-On/O-Off* button in.
- ❸ Wait until the *Start/Stop* indicator light comes on . . .
- ❹ . . . and then release the *Start/Stop* button.
- ❺ Press the *Buzzer* button once.
 - The *Buzzer* indicator light will flash briefly on and off twice.
 - *P* and *U* will flash alternately in the display (factory default setting).
- ❻ Press the *Start/Stop* button repeatedly until
 - *P* and *1* **appear in the display** (the *Drying* indicator light will also flash):
Residual moisture level - drier
 - *P* and *U* **appear in the display**:
Residual moisture level - normal
(factory default setting)
- ❼ Switch the machine off with the *I-On/O-Off* button.

The setting you have selected is now stored in memory. To change the setting repeat steps ❶ to ❷.

Minimum iron drying level

If you want the laundry to be drier you can reduce the residual moisture level for the Minimum iron programmes.

- The programme duration will increase and the laundry will be drier.
- The machine is delivered with the residual moisture level set at normal.

Follow steps ❶ to ❷ to programme and store in memory.

Before you begin, first ensure that:

- The tumble dryer is switched off.
- The door is closed.

- ❶ Press the *Start/Stop* button and keep it pressed in whilst carrying out steps ❷-❸.
- ❷ Press the *I-On/O-Off* button in.
- ❸ Wait until the *Start/Stop* indicator light comes on . . .
- ❹ . . . and then release the *Start/Stop* button.
- ❺ Press the *Buzzer* button twice.
 - The *Buzzer* indicator light will briefly flash on and off three times.
 - *P* and *U* will flash alternately in the display (factory default setting).
- ❻ Press the *Start/Stop* button repeatedly until
 - *P* and *1* **appear in the display** (the *Drying* indicator light will also flash):
Residual moisture level - drier
 - *P* and *U* **appear in the display**:
Residual moisture level - normal
(factory default setting)
- ❼ Switch the machine off with the *I-On/O-Off* button.

The setting you have selected is now stored in memory. To change the setting repeat steps ❶ to ❷.

Programmable functions

Memory

The electronics will memorise the drying level and any Extras selected for the current drying programme.

The Memory function

- is activated when the machine is delivered. It can be deactivated if wished.
- does not work if a programme is cancelled or if Delay start has been selected.

Follow steps ❶ to ❷ to programme and store in memory.

Before you begin, first ensure that:

- The tumble dryer is switched off.
- The door is closed.

- ❶ Press the *Start/Stop* button and keep it pressed in whilst carrying out steps ❷-❸.
- ❷ Press the *I-On/O-Off* button in.
- ❸ Wait until the *Start/Stop* indicator light comes on . . .
- ❹ . . . and then release the *Start/Stop* button.
- ❺ Press the *Buzzer* button three times.
 - The *Buzzer* indicator light will briefly flash on and off six times.
 - *P* and *I* will flash alternately in the display (factory default setting).
- ❻ Press the *Start/Stop* button repeatedly until
 - ***P* and *I* appear in the display:**
Memory function off
 - ***P* and *I* appear in the display** (the *Drying* indicator light will also flash):
Memory function on
(factory default setting)
- ❼ Switch the machine off with the *I-On/O-Off* button.

The setting you have selected is now stored in memory. To change the setting repeat steps ❶ to ❷.

Extending the cooling down time

The Cooling down phase which takes place at the end of a programme can be lengthened if required. This makes the garments easier to handle.

The function for extending the Cooling down phase

- is deactivated when the machine is delivered. It can be activated if wished.
- is only programmable on the *Cottons* and *Minimum iron* programmes.

Follow steps ❶ to ❷ to programme and store in memory.

Before you begin, first ensure that:

- The tumble dryer is switched off.
- The door is closed.

- ❶ Press the *Start/Stop* button and keep it pressed in whilst carrying out steps ❷-❸.
- ❷ Press the *I-On/O-Off* button in.
- ❸ Wait until the *Start/Stop* indicator light comes on . . .
- ❹ . . . and then release the *Start/Stop* button.
- ❺ Press the *Buzzer* button four times.
 - The *Buzzer* indicator light will briefly flash on and off seven times.
 - *P* and *U* will flash alternately in the display (factory default setting).
- ❻ Press the *Start/Stop* button repeatedly until
 - *P* and **1** **appear in the display** (the *Drying* indicator light will also flash on and off once):
Cooling down phase -
5 minutes longer
 - *P* and **2** **appear in the display** (the *Drying* indicator light will also flash on and off twice):
Cooling down phase -
10 minutes longer
 - *P* and *U* **appear in the display**:
Cooling down phase - normal
(factory default setting)
- ❼ Switch the machine off with the *I-On/O-Off* button.

The setting you have selected is now stored in memory. To change the setting repeat steps ❶ to ❷.

Programmable functions

Airways indicator

The *Clean out airways* indicator light can be deactivated.

The *Clean out airways* indicator light

- is activated when the machine is delivered. The light is a reminder to clean the fluff filters and to check and clean the condenser unit, if necessary. (see "Problem solving guide").
- should only be deactivated if you are certain that the fluff filters will be cleaned after every drying programme and that the condenser unit will be checked and cleaned, regularly.

Follow steps ❶ to ❷ to programme and store in memory.

Before you begin, first ensure that:

- The tumble dryer is switched off.
- The door is closed.

- ❶ Press the *Start/Stop* button and keep it pressed in whilst carrying out steps ❷-❸.
- ❷ Press the *I-On/O-Off* button in.
- ❸ Wait until the *Start/Stop* indicator light comes on . . .
- ❹ . . . and then release the *Start/Stop* button.
- ❺ Press the *Buzzer* button five times.
 - The *Buzzer* indicator light will slowly flash on and off once.
 - *P* and *!* will flash alternately in the display (factory default setting).
- ❻ Press the *Start/Stop* button repeatedly until
 - *P* and *!* **appear in the display:**
Clean out airways indicator light deactivated
 - *P* and *!* **appear in the display** (the *Drying* indicator light will also flash):
Clean out airways indicator light activated
(factory default setting)
- ❼ Switch the machine off with the *I-On/O-Off* button.

The setting you have selected is now stored in memory. To change the setting repeat steps ❶ to ❷.

Keypad tones

An audible tone sounds each time a button is pressed.

The machine is delivered with the keypad tone switched off. It can be switched on if wished.

Follow steps ❶ to ❷ to programme and store in memory.

Before you begin, first ensure that:

- The tumble dryer is switched off.
- The door is closed.

- ❶ Press the *Start/Stop* button and keep it pressed in whilst carrying out steps ❷-❸.
- ❷ Press the *I-On/O-Off* button in.
- ❸ Wait until the *Start/Stop* indicator light comes on . . .
- ❹ . . . and then release the *Start/Stop* button.
- ❺ Press the *Buzzer* button six times.
 - The *Buzzer* indicator light will flash on and off slowly once and will then flash on and off quickly once.
 - *P* and *U* will flash alternately in the display (factory default setting).
- ❻ Press the *Start/Stop* button repeatedly until
 - ***P* and *!* appear in the display** (the *Drying* indicator light will also flash):
Key pad tone switched on
 - ***P* and *U* appear in the display:**
Key pad tone off
(factory default setting)
- ❼ Switch the machine off with the *I-On/O-Off* button.

The setting you have selected is now stored in memory. To change the setting repeat steps ❶ to ❷.

**United Kingdom:**

Miele Co. Ltd.
Fairacres, Marcham Road
Abingdon, Oxon, OX14 1TW
tel. Abingdon (01235) 554455
Service Office: (01235) 554466
fax (01235) 554477
Internet: www.miele.co.uk

Ireland:

Miele Ireland Ltd.
Broomhill Road, Tallaght, Dublin 24
Tel: (01) 46 10 710, Fax: (01) 46 10 797
Email: info@miele.ie
Internet: <http://www.miele.ie>

Australia:

Miele Australia Pty. Ltd.
A.C.N. 005635398
1 Gilbert Park Drive
Knoxfield, VIC 3180
Telephone: (03) 9764 7100
Fax: (03) 9764 7129
Internet: www.miele.com.au

Distributor New Zealand:

Steelfort Engineering Company. Ltd.
500 Rangitikei Street
Palmerston North, Priv. Bag 11045, NZ
Telephone: (06) 350 1350
Fax: (06) 356 1507

South Africa:

Miele (Pty) Ltd
63 Peter Place
Bryanston 2194
P.O. Box 69434
Bryanston 2021
Tel.: (011) 548 1900
Telefax (011) 548 1935
Internet: www.miele.co.za
E-mail: info@miele.co.za

Singapore:

Miele Southeast Asia
Miele Pte. Ltd.
163 Penang Road
04 - 02/03 Winsland House II
Singapore 238463
Tel : +65-67351191
Fax: +65-67351161
Email: mielesea@miele.com.sg

Hong Kong:

Miele (Hong Kong) Limited
AIA Plaza, Room 401, 4th Floor
18 Hysan Avenue
Causeway Bay
Hong Kong
Tel.: (852) 2610 1331
Fax: (852) 2610 1013
E-mail: mielehk@netvigator.com