


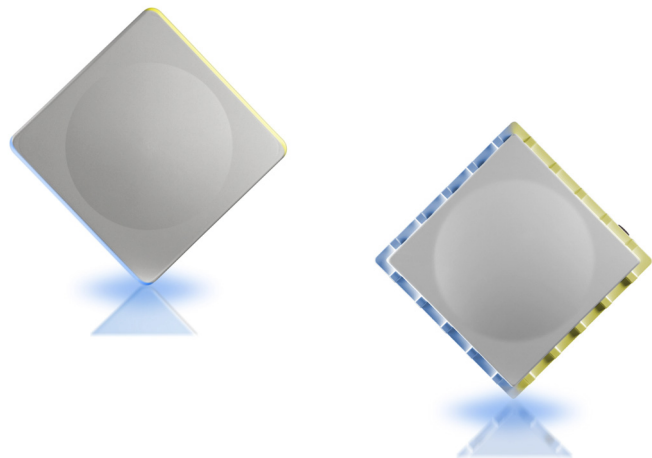

Antenna Installation Guide

Tsunami MP.11 Family Antenna Installation Guide



Copyright

© 2007 Proxim Wireless Corporation. All rights reserved. Covered by one or more of the following U.S. patents: 5,231,634; 5,875,179; 6,006,090; 5,809,060; 6,075,812; 5,077,753. This guide and the software described in it are copyrighted with all rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form by any means without the written permission of Proxim Wireless Corporation.

Trademarks

Proxim is a registered trademark, and Tsunami and the Proxim logo are trademarks, of Proxim Wireless Corporation. All other trademarks mentioned herein are the property of their respective owners.

Contents

1	Introduction	5
	Who Should Use This Guide	5
	Safety Precautions	7
	Finding Additional Information	8
	Installing Radio Hardware	8
	Configuration and Management	8
	Safety and Regulatory Information	8
	Hardware Specifications	8
	Additional Files on Your Product CD	8
	Other Sources of Information	8
2	Preparing for Installation	9
	Installation Precautions	9
	Installation Process Overview	10
	Indoor-Mounted Radio Hardware and Cable Overview	11
	Indoor Radio Hardware	11
	Indoor Radio Cable Setup for an External Antenna	11
	Outdoor-Mounted Radio Hardware and Cable Overview	14
	Outdoor Radio Hardware	14
	Outdoor Radio Cable Setup for External Antenna	14
	Power Injector for Outdoor Units	15
	Additional Information for All Models	16
	Surge Arrestor	16
	Ethernet Cable	16
3	Installing the Link	17
	Required Materials	17
	Determining Optimal Antenna Placement	19
	Mounting the Antenna	22
	Antenna Mast Requirements	22
	Connecting the Antenna Cable	23
	Sealing the Cable Connectors	24
	Grounding the Antenna	25
	Aligning the Antenna	26
	Audible Antenna Alignment	26
	Antenna Alignment using the CLI	27
	Antenna Alignment using Link Test	27
	Antenna Polarization	27
	Antenna Cable Routing	28

4	Determining Range and Clearance	29
	Determining the Outdoor Range	29
	Maximum Range	29
	Clearance Factor	29
	Calculations	32
	Calculating Link Budget	32
5	Proxim Technical Services and Support	36
	Obtaining Technical Services and Support	36
	Support Options	37
	Proxim eService Web Site Support	37
	Telephone Support	37
	ServPak Support	37

Introduction

This *Antenna Installation Guide* explains how to install and set up an outdoor antenna with Tsunami MP.11 hardware. The following products are covered in this guide:

- 5054 (MP.11a)
- 954-R
- 2454-R
- 4954-R
- 5054-R
- 5054-R-LR

This guide discusses link budget, range, and obstruction clearance; it does not explain how to erect antenna masts, or how to install a safety grounding system. These prerequisites must be in place before installing the directional antenna.

See the *Tsunami MP.11 Recommended Antennas* guide for a list of and specifications for antennas you can use with Tsunami MP.11 hardware.

See the following sections:

- [Who Should Use This Guide](#)
- [Safety Precautions](#)
- [Finding Additional Information](#)

Who Should Use This Guide

The installation of outdoor wireless links requires technical expertise. You should undertake this installation only if you meet the following prerequisites:

- You are a trained installation technician with experience mounting outdoor antennas and surge arrestors.
- You have experience installing and configuring the network components, such as the radio hardware.
- You understand, or have a working knowledge of, installation procedures for network operating systems using Microsoft Windows.

WARNINGS:

- ***Antenna installation must be provided by a suitably trained professional installation technician or by a qualified antenna installation service. Installation is not to be attempted by someone not trained or experienced in this type of work.***
- ***The site prerequisites must be checked by a person familiar with the applicable electrical code and with other regulations governing this type of installation within the country of use.***
- ***The outdoor antennas to be used with these products are intended for mounting on an antenna tower, on a roof, or on the side of a building.***

As radio regulations differ between the various worldwide countries, it may be that not all of the outdoor solutions described in this manual are allowed in the country in which you plan to install this equipment.

Local radio regulations or legislation may impose restrictions on the use of specific combinations of:

- Low-loss antenna cables and outdoor antennas
- Radio channels selected at the radios that are connected to specific outdoor antennas

NOTE: A basic rule for selecting a combination of cables and antennas is that no combination is allowed unless explicitly approved in this Antenna Installation Guide. Therefore, always use Tsunami MP.11 Recommended Antennas in combination with the [Determining Range and Clearance](#) chapter to select the correct type of antenna equipment and to inform your antenna installer and LAN administrator about the impact of regulatory constraints on their job or activities.

IMPORTANT!

At all times, it is the customer's responsibility to ensure that an outdoor antenna installation complies with local radio regulations. If you are not certain about the regulations that apply in your country, consult your local Proxim Wireless Corporation sales office. The customer must verify that:

- The antenna installer is aware of these regulations
- The correct cable type and surge arrestor have been used, according to the instructions described in this document

Proxim Wireless Corporation and its resellers or distributors are not liable for any damage or violation of government regulations that may arise from failing to comply with these guidelines.

Safety Precautions

Read this section carefully before beginning the installation. All of the following requirements should be satisfied prior to starting installation of your outdoor antennas.

DANGER!

Outdoor antennas and antenna cables are electrical conductors. Transients or electrostatic discharges that may occur at the antenna (such as a lightning strike during thunderstorms) may damage your electronic equipment and cause personal injury or death to persons touching the exposed metal connectors of the equipment if not installed properly.

When installing, disconnecting, or replacing one of the cabling components, ensure at all times that each of the exposed metal connectors of the antenna cabling system are grounded locally during the work.

Do not install this antenna where there is any possibility of contact with high-voltage arc-over from power cables or service drops to buildings. The antenna, supporting mast, or tower must not be close to any power lines during installation or removal, or in the event part of the system should accidentally fail. This includes the installation process. Apply a Danger label to a plainly visible area of the antenna support structure.

Do not climb rooftops in wet or windy conditions, during a thunderstorm, or when the area at which the equipment is to be installed is covered with ice or snow.

Do not touch antennas, surge arrestors, or antenna cables during a thunderstorm.

Install antennas at a safe distance from power lines or telephone lines. The safe distance should be at least twice the height of the antenna mast plus the height of the antenna.

Mount antennas in such a manner as to minimize the potential for human contact during normal operation. To avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 20 cm (8 inches) during normal operation.

Verify that the low-loss antenna cable that is to connect the antenna with the surge arrestor, or the Ethernet cable that is to connect to the surge arrestor, is at least 1 m (3 ft.) away from any high voltage or high current cable.

Check whether the antenna mast and its guy wires or wall bracket are positioned correctly and secured properly to the roof or walls. This should also include the confirmation that structure attachments are weatherproof.

Check whether the grounding system for the antenna mast, the Tsunami MP.16 equipment hardware, and the surge arrestor have been installed. The grounding system must comply with the requirements as described in [Grounding the Antenna](#) and local electrical code requirements.

Always consult a qualified electrician if you are in doubt as to whether the antenna mast, the surge arrestor, and the hardware are properly grounded.

The antenna cable between the antenna and the surge arrestor must be grounded at all times. If the cable is disconnected at one end for some reason (for example, to replace the surge arrestor), you must ensure that the exposed metal connector of the cable is grounded locally during the work.

Finding Additional Information

Installing Radio Hardware

Antennas typically are used in combination with Tsunami MP.11 radio units. The hardware installation of these radios is described in the User Guide included with each product.

Configuration and Management

Configuration and management of outdoor radios is accomplished with management tools that come with the systems. Some examples of management tools are:

- Web-based (HTTP) management
- Command Line Interface via Telnet or serial connection
- Wireless network manager

Safety and Regulatory Information

Consult the *Safety and Regulatory Compliance Information* guide on the installation CD that comes with your product.

Hardware Specifications

Hardware and radio frequency specifications for the radio units are described in your radio's *Installation and Management* manual. Hardware specifications for the outdoor antennas are listed in the *Tsunami MP.11 Recommended Antennas* guide. Both of these documents are found on the product CD.

Additional Files on Your Product CD

All installation CDs that come with your Proxim products include a **Release Notes** file in the **Doc** subdirectory. This file contains information about the software version and drivers. You are advised to print and read the **Release Notes** file prior to installing your Proxim products, as it may contain information that was not available when this document was printed.

Other Sources of Information

You can download all Tsunami MP.11 documentation from the Proxim Support website: <http://support.proxim.com>. Visit the website regularly for the latest available information, documentation, software updates, and other Proxim news.

2

Preparing for Installation

See the following sections:

- [Installation Precautions](#)
- [Installation Process Overview](#)
- [Indoor-Mounted Radio Hardware and Cable Overview](#)
 - [Indoor Radio Hardware](#)
 - [Indoor Radio Cable Setup for an External Antenna](#)
- [Outdoor-Mounted Radio Hardware and Cable Overview](#)
 - [Outdoor Radio Hardware](#)
 - [Outdoor Radio Cable Setup for External Antenna](#)
 - [Power Injector for Outdoor Units](#)
- [Additional Information for All Models](#)
 - [Surge Arrestor](#)
 - [Ethernet Cable](#)

Installation Precautions

For ease of installation, and to ensure your own safety during installation, note the following:

- Review the [Safety Precautions](#) provided in the [Introduction](#) chapter.
- Review all requirements outlined in this chapter.
- Familiarize yourself with the antenna and the antenna- and radio-specific mounting instructions prior to climbing any roof or ladder.
- Verify that you have arranged all safety measures for outdoor installation or rooftop installation.
- Test all equipment before beginning the actual rooftop installation to determine whether all required equipment and items are available and functioning properly. To verify the equipment prior to installation, you may first need to follow the guidelines as described in the documentation that comes with the radio unit.
- Install the grounding system for the antenna mast, radio hardware, and surge arrestor before connecting the cable from the radio to the surge arrestor. This protects your system against lightning strikes during installation.

Installation Process Overview

The installation process can be summarized in the following steps:

1. Verify that the support structure for the antenna and radio has been connected to the grounding system. If this is not the case, connect it properly.
2. Mount the antenna to the support structure, following the guidelines as described for your antenna's documentation. When mounting multiple antennas on a single mast, use the following methods to minimize the influence of cross-talk interference between the antennas:
 - Place your antennas as far apart as possible.
 - Alternate the mounting of directional antennas for vertical and horizontal polarization.
3. Connect the antenna cable to the antenna.
4. Route the antenna cable to the surge arrestor that has been installed near the ingress point.
5. Connect the antenna/Ethernet cable to the surge arrestor.
6. Attach the surge arrestor to the N-type female bulkhead connector.
7. Run the Link Test diagnostics of the management tools that come with the radio unit to aim the antenna and verify optimal placement.

NOTE: You can also use the unit's *Antenna Alignment utilities*. See [Aligning the Antenna](#).

8. Once the antenna is correctly positioned, and you have verified the installation works properly, secure all cables and use weatherproofing tape to seal all outdoor connectors.

NOTE: When you must remove or relocate the antenna, follow the [Installation Precautions](#) and [Safety Precautions](#) given in this guide, and follow the steps listed above in exactly the reverse order.

Indoor-Mounted Radio Hardware and Cable Overview

Indoor Radio Hardware

Model 5054, 5012-SUI, and 5054-SUI radios are intended for indoor mounting and operation. For these indoor radios, the antenna cable is connected to the connector pigtail extending from the radio.

The following types of radio devices are used for setting up a wireless link with the 5054, 5012-SUI, and 5054-SUI:

- Tsunami MP.11 5054 (MP.11a) Base Station Unit (BSU)
- Tsunami MP.11 5054 (MP.11a) Subscriber Unit (SU)
- Tsunami MP.11 5054 (MP.11a) Residential Subscriber Unit (RSU)
- Tsunami MP.11 5012-SUI Subscriber Unit (SU)
- Tsunami MP.11 5054-SUI Subscriber Unit (SU)

Indoor Radio Cable Setup for an External Antenna

The following items are required on each end of the wireless link:

- A Base Station on one end and a Subscriber Unit on the other end.
- A surge arrestor to protect your sensitive equipment from static discharge and transients (optional, but highly recommended).
- N-type female-female converter connector (optional, needed only if a surge arrestor is not used, or if an additional antenna cable is required when a surge arrestor is used, see next bullet).
- A low-loss antenna cable to connect the indoor radio unit to the surge arrestor (optional, only if the radio unit is not mounted close to where the cable coming from the antenna enters the building, which is the place where the surge arrestor must be mounted).
- A low-loss antenna cable to connect the surge arrestor to the outdoor antenna (if surge arrestor is used), or the unit to the antenna (if surge arrestor is not used).
- External antennas (one at each end).
- A grounding system, as described in [Grounding the Antenna](#).

When the unit is not mounted close to where the antenna cable enters the building (where the surge arrestor must be mounted), an additional cable between the unit and the surge arrestor is required, plus a female-female converter connector. If the unit is mounted close to the surge arrestor, the unit can be connected directly to the surge arrestor.


Proxim strongly recommends to use a surge arrestor to protect your sensitive equipment from static discharge and transients. An exception to this rule is when the antenna is installed in an indoor location. This installation does not require the use of a surge arrestor. The antenna can be connected directly to the radio unit via a cable and a female-female converter connector.

All cabling components of the antenna system come with standard-N type connectors. Note that the gender of the connector is not determined by the connector's thread, but by its center pin. A solid center pin = male; a hollow center pin = female.

The following sections describe all the possible combinations of cabling components. The 5012-SUI/5054-SUI is pictured.


- [Indoor Radio Cable Setup without a Surge Arrestor](#)
- [Indoor Radio Cable Setup with a Surge Arrestor Close to the Unit](#)
- [Indoor Radio Cable Setup with a Surge Arrestor Not Close to the Unit](#)

Indoor Radio Cable Setup without a Surge Arrestor

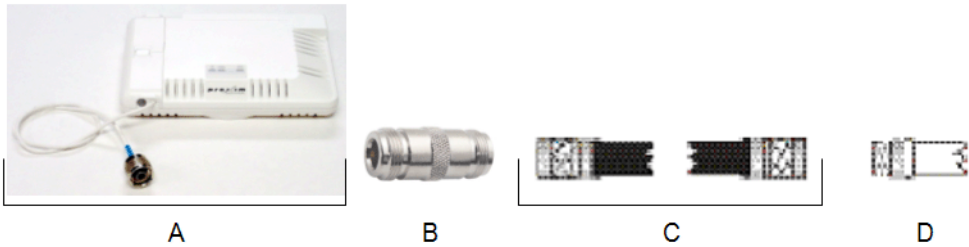


Cabling Component	N-Type Connector
A Radio unit with pigtail	Standard-N male
B Converter connector	Standard-N female on both ends
C Low-loss cable	Standard-N male on both ends
D Antenna	Standard-N female

Indoor Radio Cable Setup with a Surge Arrestor Close to the Unit

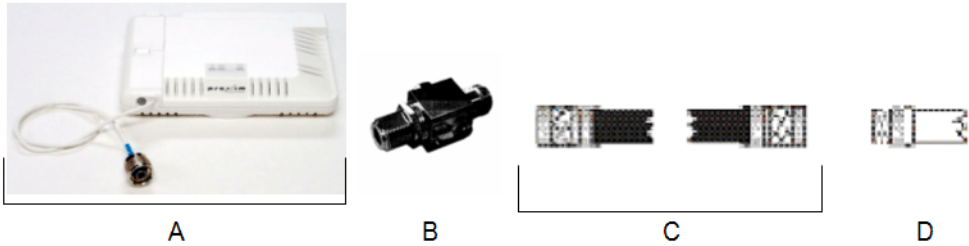

Cabling Component	N-Type Connector
A Radio unit with pigtail	Standard-N male
B Surge arrestor	Standard-N female on both ends
C Low-loss cable	Standard-N male on both ends
D Antenna	Standard-N female

Indoor Radio Cable Setup with a Surge Arrestor Not Close to the Unit

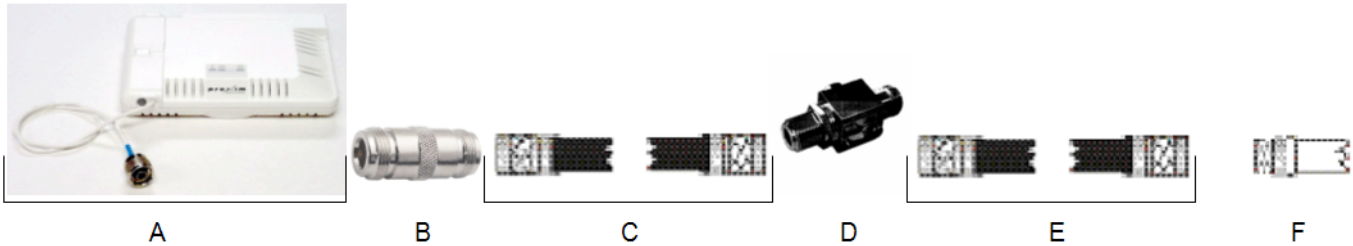

Cabling Component	N-Type Connector
A Radio unit with pigtail	Standard-N male
B Converter connector	Standard-N female on both ends
C Low-loss cable	Standard-N male on both ends
D Surge arrestor	Standard-N female on both ends
E Low-loss cable	Standard-N male on both ends
F Antenna	Standard-N female

Indoor Radio Cabling Precautions

Note that prior to mounting the radio unit, you are advised to carefully calculate:

- The distance between the intended location of your unit and the location of the antenna mast
- The height of the antenna on the mast

If the low-loss antenna cable for the unit is not long enough to cover this distance, you either can select another cable length from the Proxim's low-loss cable offering, or select another location that satisfies the requirements previously listed to mount your unit. The radio unit can be placed anywhere, as long as Ethernet cable length allows. Because the length of the antenna cable can affect the actual range of your outdoor antenna installation, Proxim recommends selecting another location or using a different radio model.

WARNING: You must not change the length of the low-loss antenna cable used with the radio unit to a length shorter than allowed by the radio's certifications. Shortening the cable voids the Proxim Wireless Corporation warranty and can conflict with radio certifications or approvals.

CAUTION: The radio hardware, the surge arrestor, and the antenna mast must be connected to the same grounding system.

Outdoor-Mounted Radio Hardware and Cable Overview

Outdoor Radio Hardware

The MP.11 954-R, 2454-R, 5054-R, 5054-R-LR, and 4954-R Base Station Units and Subscriber Units are intended for outdoor mounting and operation. Outdoor units are referred to collectively as MP.11-R units.

To make optimal use of the units, you must find a suitable location for the hardware. The radio range largely depends upon the position of the antenna. Because of this Proxim recommends you do a site survey.

The following three types of radio devices are used for setting up a wireless link:

- Tsunami MP.11-R Base Station Unit (BSU) with external antenna connector
- Tsunami MP.11-R Subscriber Unit (SU) with external antenna connector
- Tsunami MP.11-R Subscriber Unit (SU) with integrated antenna for outdoor use

Outdoor Radio Cable Setup for External Antenna

The following items are required on each end of the wireless link:

- A Base Station or a Subscriber Station
- A low-loss antenna cable to connect the radio unit to the external antenna (for units using an external antenna connector only).


NOTE: Proxim recommends an LMR-600 cable (2 meters), available from Proxim Wireless Corporation.

- A surge arrestor for the CAT5 Ethernet cable that connects the power supply to the radio.
- Outdoor antenna (for use with units equipped with an external connector only).
- A grounding system, as described in [Grounding the Antenna](#).

When the BSU and SU are equipped with external antenna connectors, the radios are connected through the RF cable to an external antenna. The recommended RF cable length is two meters. This is not needed for the SU with the integrated antenna. The Ethernet cable is connected from the radio to the Ethernet surge arrestor. The surge arrestor is located on the outside of the building (with proper grounding) very near to the point where the cables enter the building. An outdoor rated CAT5 Ethernet cable should be used.

CAUTION: The Tsunami MP.11-R hardware, the surge arrestor, and the antenna mast must be connected to the same grounding system as prescribed by local electrical codes.

The following is an overview of the cable setup for the outdoor antenna.

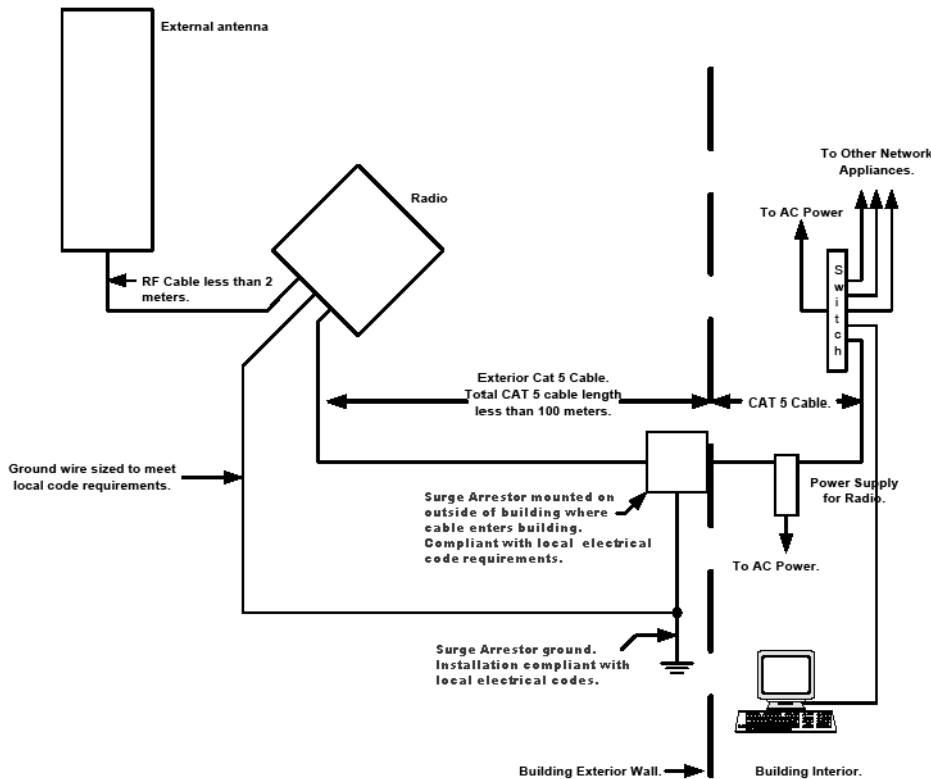

Power Injector for Outdoor Units

The power injector is designed for indoor mounting and operation. In addition to supplying power to the radio unit there is a data output connection on the power supply. The ideal location must satisfy the following requirements:

- The location provides a connection to a grounding type AC wall outlet (100-240 VAC), using the standard power cord supplied with the unit.
- The location must allow for easy disconnection of the power supply from the AC wall outlet.
- The location provides a connection to the network backbone through an Ethernet CAT5 cable that is connected to a hub, bridge, or directly into a patch panel or to a computer through a null modem cable.
- The ideal location has a temperature of 0–55° C and a maximum relative humidity (non-condensing) of 95%.

Additional Information for All Models

Surge Arrestor

The surge arrestor is an indispensable part of your outdoor radio installation. It protects your sensitive electronic equipment from transients or electrostatic discharges at the antenna.

For optimal protection, the surge arrestor must be installed at a location that is very near to where the CAT5 Ethernet cable enters inside the structure. This location should allow proper grounding complying with local electrical code requirements.

Ethernet Cable

The antenna cable must be connected from the antenna through the surge arrestor to the antenna connector of the unit.

To plan the route of the antenna cable for an indoor unit (5054), consider the following:

- Does the cable route require drilling through a wall or ceiling?
- Do you have a building plan of the desired location showing other cabling routes such as electricity, telephone or networking?
- Does the type of building materials require special drilling tools?

The cable should not be installed into tight positions, as bending or applying excessive force to the connectors can damage the antenna cable. Always allow the cable to bend naturally around corners. The recommended bend radius is at least 100 mm (4 in) or more for the low-loss cable of 10 mm (0.4 in) and 15 mm (0.6 in) diameter.

CAUTION:

- ***The cable must be secured along the complete distance between attachment points. No part of the antenna cable should be allowed to hang free. This is particularly important for outdoor cable parts.***
- ***The antenna cable and cable connectors are not designed to withstand excessive force:***
 - ***Do not use the connectors as 'cable grips' to pull cable through raceways or conduits.***
 - ***Do not use the cable connector to support the weight of the cable during or after installation.***
 - ***Do not use any tool to tighten the connectors.***
- ***Always seal the connectors using weatherproofing tape.***
- ***Avoid any water or moisture entering the cable as that impacts the performance of the wireless link.***
- ***Prior to sealing the outdoor connectors and permanently securing the cable to the wall with cable ties and wall hooks, verify whether the installation and all components functions properly.***

3

Installing the Link

See the following sections:

- [Required Materials](#)
- [Determining Optimal Antenna Placement](#)
- [Mounting the Antenna](#)
 - [Antenna Mast Requirements](#)
- [Connecting the Antenna Cable](#)
- [Sealing the Cable Connectors](#)
- [Grounding the Antenna](#)
- [Aligning the Antenna](#)
 - [Audible Antenna Alignment](#)
 - [Antenna Alignment using the CLI](#)
 - [Antenna Alignment using Link Test](#)
 - [Antenna Polarization](#)
 - [Antenna Cable Routing](#)

Required Materials

The outdoor installation of the link requires the following:

- An antenna or unit with an integrated antenna
- A low-loss antenna cable (for units with external antennas only)

NOTE: Proxim recommends an LMR-600 cable (2 meters), available from Proxim Wireless Corporation.

- Antenna mast or wall bracket for the antenna/unit
- A grounding system that meets the local electrical code requirements
- Waterproofing of all connections (see [Sealing the Cable Connectors](#))

DANGER!

For your own safety, the antenna mast and the grounding system should be installed only by experienced installation professionals who are familiar with local building, safety, and electrical codes in the country of use.

IMPORTANT!

Before climbing the roof to begin installation, check whether you have all the required components to set up an outdoor wireless link. For each side of the link, you will need:

- Radio unit with integrated antenna; OR radio unit with external antenna connector, external antenna, and antenna-to-radio connection cable(s)
- Tools and material to mount the antenna
- Tape or wraps to attach the antenna cable, for example, to the mast
- Ethernet cable with waterproof cap
- Proper tools to allow system installation
- Radio, antenna, and antenna support grounding material that meets local electrical requirements

Determining Optimal Antenna Placement

To achieve maximum performance of your wireless outdoor link, the outdoor antenna must have clear line-of-sight to the antenna of the other unit. Although the radio signal can work well without line-of-sight in urban environments in which the signal is transported by reflection rather than being direct, the best results are achieved in line-of-sight conditions.

Line-of-sight is defined as:

- No obstacles in the direct path between the antennas (antenna beam)
- No obstacles within a defined zone around the antenna beam

You should be aware that the shape of an antenna beam is not straight and narrow like a laser beam. The antenna beam contains a bulged area known as Fresnel Zone.

The 1st Fresnel zone is an imaginary boundary line offset along the direct signal path. This boundary is defined as the point where, if a signal were reflected between the two antennas, it would travel a distance exactly one-half wavelength longer than the direct-path signal. Each succeeding Fresnel zone boundary adds an additional half-wavelength to the reflected path distance between the antennas.

Signals reflected from any even-numbered Fresnel zone result in signal cancellation; those from odd-numbered Fresnel zones add to the direct path signal.


The exact shape and width of the Fresnel Zone is determined by the path length and frequency of the radio signal. The width as distance from the direct antenna beam is approximately 6.8 m in the middle of the wireless link for a distance of 6 Km and a frequency of 3.5 GHz. This width is also the required clearance of the antenna beam from obstacles in its path, to avoid loss of radio signal.

When any significant part of this zone is obstructed, a portion of the radio energy is lost, resulting in reduced performance. Reduced performance can also occur when obstacles close to the antenna beam cause signal reflections or noise that interfere with the radio signal.

For optimal performance, you must ensure that the type and placement of the antennas leave sufficient clearance of the Fresnel Zone at the maximum width of the bulge, which is typically at the mid-point between the antennas. See [Determining the Outdoor Range](#).

The following figure shows some typical examples of obstacles you must avoid for the directional antenna to operate effectively:

- a. Neighboring buildings
- b. Trees or other obstructions
- c. Power lines

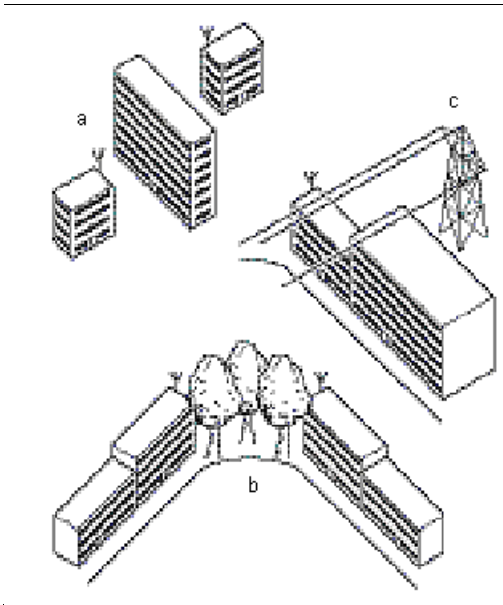

To minimize the influence of obstacles, signal interference, or reflections, note the following guidelines:

- Mount the antenna as high as possible above the *ground* to allow maximum clearance:
 - In open areas, *ground* is the actual surface of the earth.
 - In dense urban areas, *ground* is to be interpreted as the height of the highest obstacle in the signal path between the two antenna sites.
- Avoid trees in the signal path to avoid signal absorption due to seasonal changes (leaves or ice).
- Install the antenna at least 2 m (6 ft.) away from all other antennas.

Other situations in which reflections of the radio signal may cause interference are environments in which large reflecting surfaces exist in parallel or partly perpendicular to the antenna beam.

Environments with large reflective surfaces include:

- Mirror-glass buildings
- Crowded parking lots
- Water surface or moist earth and moist vegetation
- Above ground power and telephone lines

NOTE: *The use of reflective surfaces can be used to improve a link, especially if the direct line-of-sight is impaired or absent.*

Weather conditions such as rain or snow usually do not have much impact on the performance of your Proxim product, provided you have sealed all cable connectors with weatherproofing tape.

Seasonal influence on signal propagation can occur in the following situations:

- A marginal communications quality in late fall (with no leaves on the trees in the signal path) might fail in the summer when leaves are present.
- In winter, a wireless link can fail when the antenna is exposed to ice buildup or when the antenna elements are covered with snow.

Radio paths over water or extremely flat ground may require optimization of antenna height at one end. This is due to in-phase or out-of-phase reflections. Adjustment of antenna height by 1 to 3 meters may move the signal from a null to a peak.

Long distance links may be obstructed by earth curvature, so the antenna height requirements must not only take the height of obstructions and Fresnel Zone into account, but also earth bulge. The earth bulge is approximately 5 m (16.4 ft.) at a link distance of 16 Km (10 mi.).

In these cases, consult your supplier to take appropriate steps to maintain or optimize wireless link performance.

Mounting the Antenna

NOTE: As the mounting procedures for the various antennas differ from one another, consult the documentation you received from the manufacturer for mounting procedures.

Proxim offers multiple antennas to set up a wireless link. See the *Tsunami MP.11 Recommended Antennas* guide.

When mounting multiple antennas on a single mast, use the following methods to minimize the influence of cross-talk interference between the antennas:

- Place your antennas as far apart as possible
- Alternate the mounting of directional antennas for vertical and horizontal polarization

There are two frequently used methods to erect an antenna mast:

- **Tripod Mount:** The tripod mount is used primarily on peaked and flat roofs. The antenna mast must be secured to the roof using three or four guy wires equally spaced around the mast. When the height of the antenna mast is more than 3 meters (10 ft.), you should use at least three guy wires for each 3-meter (10-foot) section of the mast.
- **Wall (Side) Mount:** A wall (side) mount allows for mounting an antenna (mast) on the side of a building or on the side of an elevator penthouse. This provides a convenient mounting location when the roof overhang is not excessive or when the location is high enough to provide a clear line-of-sight.

In most situations mounting an antenna directly to the wall does not let you align the antenna properly with the corresponding antenna at the opposite end of your wireless link. As poor alignment typically results in poor performance, Proxim recommends always mounting the antennas to a mast.

Antenna Mast Requirements

To accommodate the antennas, the antenna mast must satisfy the following requirements:

- The construction of the mast must consist of sturdy, weatherproof, and non-corrosive material (for example, galvanized or stainless steel construction pipe).
- Typical diameter of the mast should be between 35 mm (1.4 in) and 41 mm (1.6 in). Depending upon the type of antenna you intend to install, other diameters also may be possible.
- The height of the antenna mast must be sufficient to allow the antenna to be installed at least 1.5 m (5 ft.) above the peak of the roof. If the roof is of metal, the height of the antenna should be at least 3 m (10 ft.) above the roof.
- The mast or wall bracket must be free from any substance that may prevent a good electrical connection with the antenna (for example, paint).

Connecting the Antenna Cable

Once the antenna is properly mounted, you can connect the antenna to the radio.

1. Connect the antenna cable to the antenna.
2. Secure the antenna cable to the mast so that the cable connectors do not support the full weight of the cable.
3. Connect the opposite end of the antenna cable to the radio.

CAUTION: *To avoid damage to the antenna cable and connectors, do not use tools to tighten the cable connectors.*

4. Prior to securing the cable along its complete length, run the Link Test diagnostics of the management tools that come with the unit to analyze wireless performance and optimal placement of the outdoor antenna. Use of this tool is described in the documentation that comes with the radio unit and also can be downloaded from the Proxim support website at <http://support.proxim.com>.
5. If required, adjust the direction of the antenna.
6. Once the installation has been fully tested, tighten the nuts of the antenna to lock the antenna into its position.

CAUTION: *Avoid over-tightening of the connector, and the nuts and screws used to mount the antenna, to prevent damage to your antenna and radio hardware.*

7. Secure the cable along its complete length with cable ties or electrical tape to relieve strain on the antenna connector properly. No part of any cable should be allowed to hang free. This is especially important for those parts that are routed outside the building.
8. Proceed as described in the next section to weatherproof all outdoor connectors.

Sealing the Cable Connectors

Most problems associated with wireless outdoor installations are related to degrading performance due to corrosion of the antenna cable and cable connectors. To avoid this type of problem, you must always seal the cable connectors that are located outdoors using weatherproofing tape.

You are advised to seal the connectors only after you have verified optimal alignment of the antennas using the Link Test as described in the documentation that comes with the radio unit. Doing so lets you adjust antenna placement and cable routing without removing the tape.

To weatherproof the connectors:

1. Prepare the cable and connectors so that they are dry and free from dust, dirt and grease.
2. Attach the tip of the weatherproofing tape to the cable just above the connector. Holding the tape in its position, stretch the tape and wind it half-overlapped around the cable and connectors to form a void-free joint. The degree of stretch may vary in different sections of the joint, as long as the overlaps accomplish a void-free application.
3. To protect the weatherproofing stretch tape from the effects of Ultra-Violet (UV) radiation (for example, from direct sunlight), protect the joint with two half-overlapped layers of any vinyl plastic electrical tape. Alternatively, apply silicone sealer to protect the weatherproofing tape from sunlight, rain and other weather conditions.

Grounding the Antenna

Direct grounding of the antenna mast, radio hardware, and surge arrestor is extremely important.

NOTE: *A safety grounding system is necessary to protect your radio hardware from lightning strikes and the build-up of static electricity.*

WARNINGS:

- The antenna mast, radio hardware, and surge arrestor must be connected to the same ground, using an equi-potential bonding conductor.
- A good electrical connection should be made to one or more ground rods, using at least a 10AWG ground wire and non-corrosive hardware.
- The grounding system must comply with the safety standards that apply in your country. Always check with a qualified electrician if you are in doubt whether your radio hardware installation is properly grounded.

Aligning the Antenna

Antenna alignment is a process to physically align the antennas of both units to have the best possible radio link established between them. The antenna alignment process usually is performed during installation and after major repairs. The following methods are available to help you align the antenna:

- [Audible Antenna Alignment](#)
- [Antenna Alignment using the CLI](#)
- [Antenna Alignment using Link Test](#)

Alternatively, consult a professional Antenna Installation Service to optimize the antenna alignment.

Audible Antenna Alignment


MP.11-R models (954-R, 2454-R, 5054-R, 5054-R-LR, and 4954-R) have an audible antenna alignment tool that can be activated by plugging in the supplied serial dongle (supplied with every Base Station) or by issuing the CLI command for antenna alignment. The CLI command causes both audible and numerical feedback as the CLI shows the running SNR values twice a second.

NOTE: Model 5054 has the SNR value output on the CLI but not the audible output (see [Antenna Alignment using the CLI](#)).

The output from the beeper for antenna alignment consists of short beeps with a variable interval. The interval changes with the SNR level to assist in correctly aligning the antenna. An increase in signal level is indicated by a shorter interval between beeps; a reduction in signal level results in beeps further apart.

To allow for precise antenna alignment, small changes in SNR result in large changes in the beep period. The alignment process averages the SNR, which is represented by an average length beep. When a higher SNR is received, the beep period is made shorter, dependent upon the difference to the average. A lower SNR results in a longer period between beeps.

The first five steps are represented by a large change and all following steps are a small change. This acts as if a magnifying glass is centered around the average SNR and the values next to the average are significantly different.

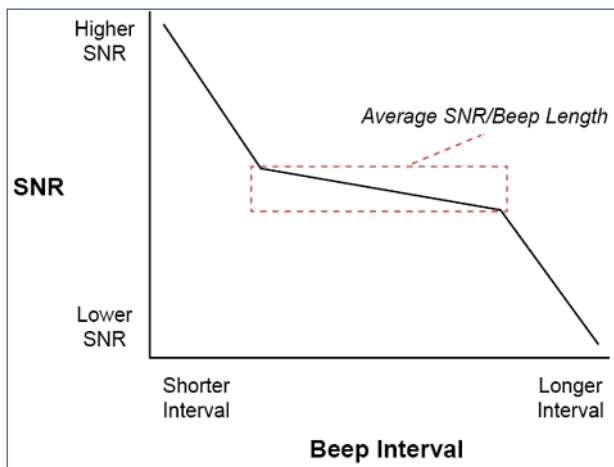

When the antenna is aimed, the beep can easily be heard if the SNR is rising (shorter period, higher frequency) or falling (longer period). When the position of the antenna has been changed, the SNR averaging settles at the new value and the beeping returns to the average length so the antenna can again be aimed towards rising SNR.

Aiming is complete if moving in any direction results in a falling SNR value, which can be heard as longer periods between beeps.

NOTE:

- *Antenna alignment for the Base Station is useful only for a point-to-point link.*
- *The range of the average SNR is limited to values from 0 to 48. Anything over 48 is capped at 48.*
- *AAD is automatically disabled 30 minutes after it is enabled to remove the load of extra messages on the wireless interface. The default telnet timeout is 900 seconds (15 minutes). If AAD must run for the entire 30 minutes, change the default telnet timeout value greater than 30 minutes (greater than 1800 seconds). This restriction is for telnet connections only and not for the serial interface. The serial interface never times out.*

Antenna Alignment using the CLI


Use the following commands to align the antenna using the CLI:

- **set aad enable local**
Enables display of the local SNR. Local SNR is the SNR measured by the receiver at the near end.
- **set aad enable remote**
Enables display of the remote SNR. Remote SNR is the SNR as measured by the receiver at the far end.
- **set aad enable average**
Enables display of the average SNR. The average SNR is the average of the local and remote SNR.
- **set aad disable**
Disables Antenna Alignment Display (Ctrl-C also disables AAD).

Antenna Alignment using Link Test

On MP.11-R units, use the **Link Test** option of the management tools that come with the radio unit to analyze the radio link quality. The Link Test option lets you display the radio signal strength in relation to the noise in the signal path. If required, you can interactively optimize the antenna alignment with the Link Test, by making small modifications in the antenna orientation.

The Link Test provides SNR, Signal, and Noise information, as shown below. Link Test stops when you close the **Link Test** page.

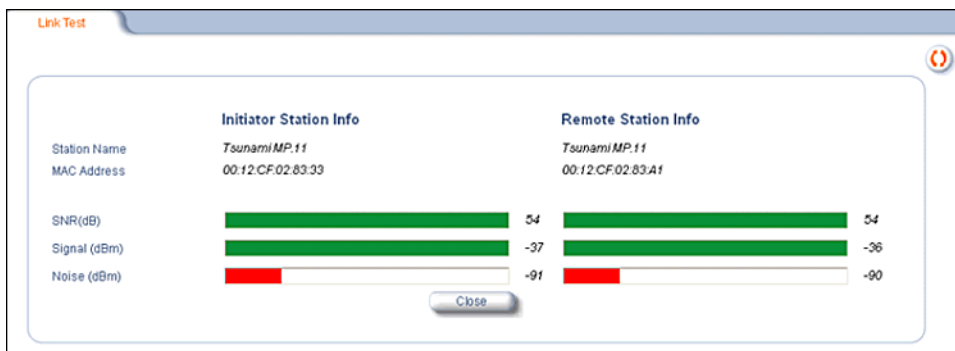

Antenna Polarization

Outdoor antennas are standard-mounted for vertical polarization.

In some cases, you might consider mounting the antenna for horizontal polarization; for example, to minimize the influence of cross-talk between antennas when:

- You plan to mount multiple directional antennas to the same mast.
- Your wireless link receives interference from a vertically polarized neighboring installation.

NOTE: For optimal wireless link performance, you must always verify that the antenna polarization on both ends of the wireless link is the same.

Antenna Cable Routing

The antenna cable must be routed and fixed in such a way that installation technicians have a clear passage area.

All connectors that are located outdoors must have a weatherproof seal. You are advised to seal connectors only after you have completed the final radio test.

Determining Range and Clearance

See the following sections:

- [Determining the Outdoor Range](#)
 - [Maximum Range](#)
 - [Clearance Factor](#)
- [Calculations](#)
 - [Calculating Link Budget](#)

Determining the Outdoor Range

The range of your outdoor antenna installation is closely related to a number of different factors. To let you determine the range of the antenna system in your situation, use the following formula:

$$\text{Range} = \text{Maximum Range} \times \text{Clearance Factor}$$

where:

- **Maximum Range** is the theoretical maximum that can be achieved under optimal circumstances using the available Tsunami MP.16 products according to their specifications and in compliance with local radio regulations.
- **Clearance Factor** is a correction value (in percentage) that should be used in case the signal path of your wireless link does not provide the minimum clearance as listed in the Maximum Range table (see [Clearance Factor](#)).

NOTE: You also can use a calculation sheet provided by Proxim to generate an estimate of link distance and reliability.

Maximum Range

The maximum range of your system is based upon:

- The type of outdoor antenna equipment
- The data speed of the wireless link
- The clearance of the signal path (see [Clearance Factor](#))
- The values in this section are based upon calculations that assume optimal radio conditions. They do not represent a guarantee that the same maximum distance can be achieved at your location. Differences in performance figures can result from:
 - Incorrect alignment of antennas (see [Aligning the Antenna](#))
 - Polarization mismatch of the antennas
 - Sources of interference or unexpected reflections in the signal path that affect the communications quality (see [Determining Optimal Antenna Placement](#))
 - Severe weather conditions such as heavy rain or snow fall, or strong winds
 - Unexpected obstacles in the link path
 - Seasonal influences such as leaves on trees, or icing on the antennas

Clearance Factor

For optimal performance of your outdoor wireless link, the signal path between the BSU and SU must provide sufficient clearance.


NOTE: An outdoor wireless link that lacks sufficient clearance will suffer from poor performance, which is typically perceived as slow network response times. Although your radio equipment automatically retransmits every lost

Determining the Outdoor Range

data frame due to an out-of-range situation or frame collision, the larger the number of retransmissions, the lower the throughput efficiency of your wireless link.

This section explains how to determine the clearance that applies in your environment and (if applicable) the effect of insufficient clearance on the range of your outdoor wireless link.

If any significant part of the antenna beam is obstructed, a portion of the radio energy is lost, which can affect the performance of your wireless link in terms of maximum range and transmit rate.

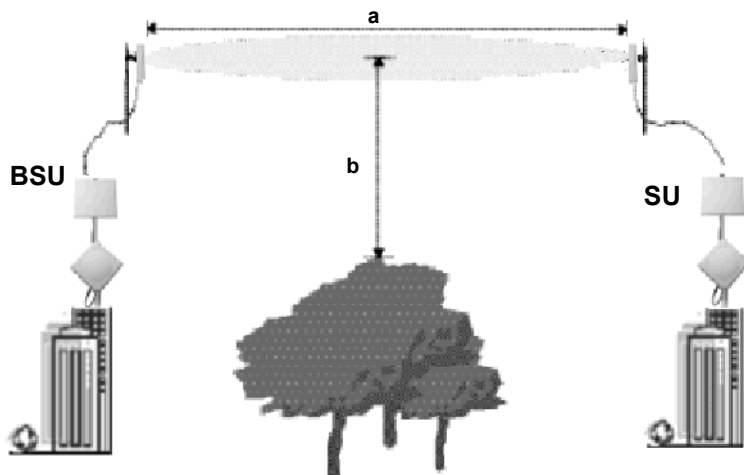

In the figure above, you see two variables that determine the shape of the antenna beam, also referred to as Fresnel Zone:

- The distance between the antennas (a)
- The clearance required for optimal performance (b), where clearance should be interpreted as:
 - Vertical clearance above the ground and the highest buildings or objects in the signal path
 - Horizontal clearance from neighboring buildings and objects in the signal path

For optimal range and throughput performance, you must ensure that your antenna installation provides maximum clearance in both horizontal and vertical direction.

Clearance should be interpreted as follows:

- In open areas without obstacles in the signal path, clearance is measured as height above the surface of the earth. For example, if the antenna is mounted on the roof, this height includes the height of the building plus the height of the mast above the rooftop.
- In areas with obstacles in the signal path between the two antennas, clearance should be measured as height above the highest obstacle in the signal path.
- In dense urban areas, the clearance should be measured as height above the highest rooftop or any other obstacles in the signal path between the two antennas.


For situations in which local authorities, the proprietor of the premises, or other factors do not let you set up an antenna mast that lets you meet the listed clearance requirements, you may be unable to achieve a full line-of-sight clearance. At the same time, however, when the distance that your wireless outdoor installation must cover is less than the listed maximum range, you may not need full clearance.

To determine the effect of insufficient signal path clearance, you must determine the Clearance Factor as described below, and calculate its effect on the range for your antenna installation using the formula described in [Determining the Outdoor Range](#).

- If the clearance for your antenna installation is equal to or better than the minimum clearance requirement, the Clearance Factor for your installation is 100%.

- If your actual clearance is less than the minimum clearance, use the diagram depicted in the following figure to determine the actual range that applies in your situation.

NOTE: The Clearance Factor Diagram should be used as a rule-of-thumb for estimating the probable range in case the clearance requirements are not fully met. In real life, you will also find it almost impossible to achieve maximum range due to interference from other radio products.

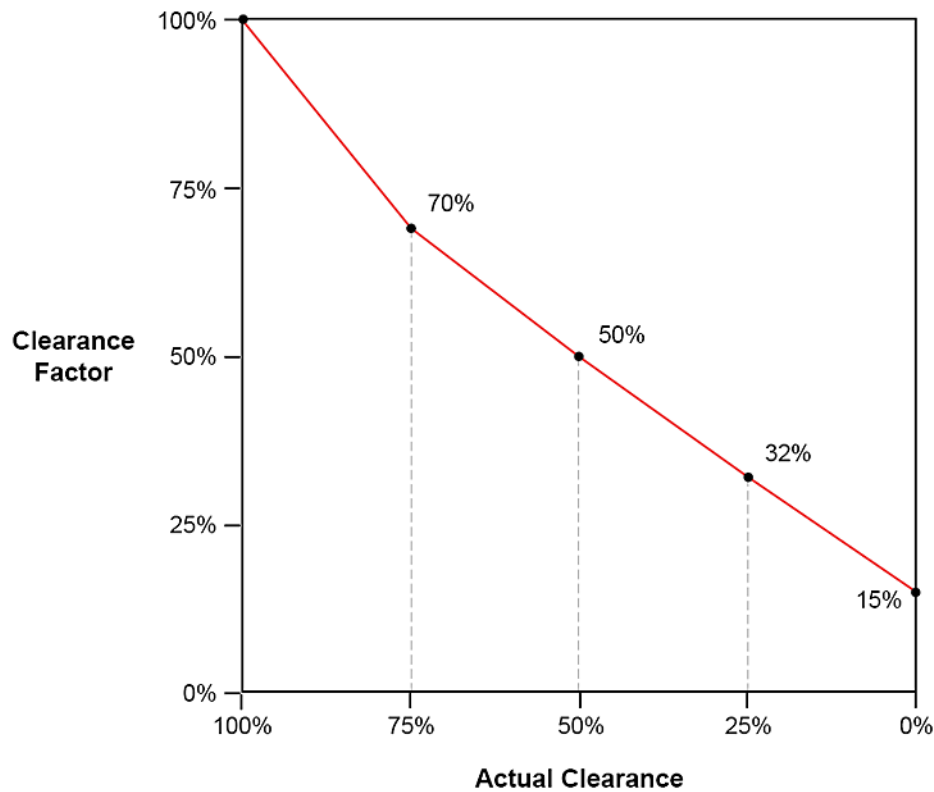

Calculations

Availability of the microwave path is a prediction of the percent of time that the link operates. In the absence of direct interference, availability is affected by the following:

- Path length
- Fade margin
- Frequency
- Terrain (smooth, average, mountainous)
- Climate (dry, temperate, humid)

Depending upon the type of information carried over the link and the overall network design redundancy, you may want to design for a specific availability rate. For example, if the data or voice traffic carried by the radio is critical, the link can be designed for a very high availability rate (for example, 99.999% or 5.3 minutes of predicted outage per year).

Availability can be improved by increasing the fade margin either by making the path shorter or by using the higher gain antennas in conjunction with lower loss antenna cable (using a higher quality antenna cable, shortening the length, or both).

Calculating Link Budget

Use the calculator provided on the [Proxim Wireless Web site](#) to calculate link budget. Use the following formula to estimate the received signal level (RSL):


$$RSL \text{ (dBm)} = P_{out} - L_1 + G_1 + G_2 - L_2 - L_p$$

where:

- P_{out} is the transmitter output power (in dBm)
- L_1 is the total loss of all transmission elements between the antenna and the RF Unit on one side of the link (in dB)
- G_1 is the gain of the antenna on one side of the link (in dB)
- G_2 is the gain of the antenna on the opposite side of the link (in dB)
- L_2 is the total loss of all transmission elements between the antenna and the RF Unit on the opposite side of the link (in dB)
- L_p is the Path loss, defined by: $L_p \text{ (dB)} = 96.6 + 20 \log_{10} F + 20 \log_{10} D$
where:
 - F is the Frequency of the radio system in GHz (3.5 GHz)
 - D is the Distance of the path in miles

NOTE: This formula is available on a calculation sheet provided by Proxim to generate an estimate of link distance and reliability.

See the following figure for a visual representation of the elements of this equation.

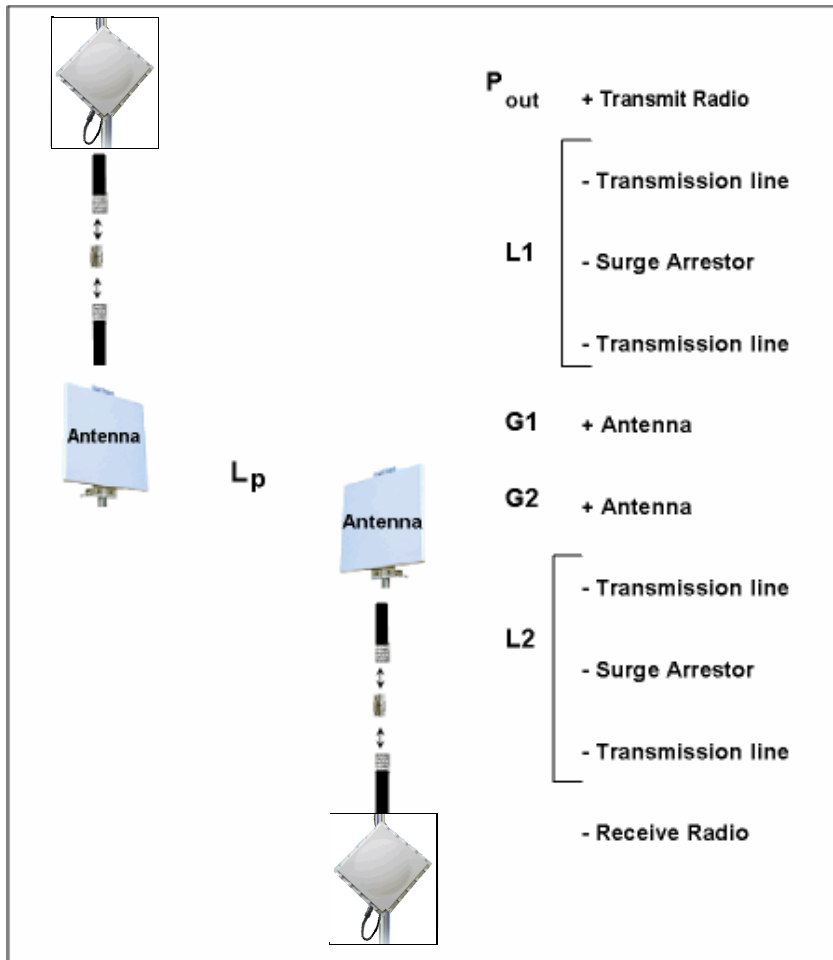

Procedure

1. Start with the transmit power and the number of the channel to be used in dBm. Subtract the total loss of all transmission elements between the antenna and the radio on one side of the link (dB).
2. Add the dBi of the antenna you will be using. The total is the **EIRP** (equivalent isotropically radiated power).
3. Determine your link budget from the [Distance and Link Budget](#) table.
4. Add the gain of the antenna on the second side of the link.
5. Subtract the total loss of all transmission elements between the antenna and the radio on the second side of the link. The result is the **Received Signal Level** (RSL).
6. From the Receiver Sensitivity tables in your radio's *Installation and Management Manual's* "Technical Specifications" appendix, find the dBm value for the data rate used for the link.
7. Subtract this value from the Received Signal Level; this is the **Fade Margin**.

NOTES:

- The RSL must be higher than the Receiver Sensitivity plus the fade margin for a good link. The amount of Fade Margin indicates the reliability of the link; the more Fade Margin, the more reliable the link.
- The path loss must be smaller than the link budget minus the minimum required fade margin. The maximum ranges cause the path loss plus the fade margin to be the same as the link budget.

The results of this link budget calculation are very important for determining any potential problems during installation. If you have calculated the expected RSL, you can verify that it has been achieved during installation and troubleshooting, if necessary.

In the USA and Canada, this model radio can be installed with any gain directional antennas, as there is no Effective Isotropic Radiated Power (EIRP) limit for the application of these systems for fixed point-to-point applications in the 5.8 GHz frequency band. In other bands and in other countries, EIRP limits may apply.

In the case of EIRP limits, use the lesser of either $(P_{out} - L_1 + G_1)$ or the EIRP limit within the previous equation. You should check this calculation in both directions to assure legal application. An EIRP limit is the maximum RF energy that can be transmitted, as measured at the transmitting antenna, and is usually determined by government regulations.

Proxim's recommendation is to keep at least 60-70% of the first Fresnel zone free. If the clearance is lower than this percentage, the *link budget* and achieved *fade margin* are affected. Clearances more than 100% of the Fresnel zone can cause reflections that are 180 degrees out of phase and can cancel out the signal. The Fresnel zone works in both the horizontal and vertical paths.

Tables for output levels can be found in the "Technical Specifications" appendix in your radio's *Installation and Management* manual.

Table 4-1 Examples of Minimum Antenna Cable Loss

Frequency Band	Antenna Gain	TPC Setting	Minimum Cable Loss for Data up to 24 Mbps*	EIRP	Deployment
5.25-5.35 GHz	10	0	0	28.5	USA
5.25-5.35 GHz	17	-6	0	29.5	USA
5.25-5.35 GHz	23	-10	1.5	30	USA
5.25-5.35 GHz	31	-10	9.5	30	USA
5.725-5.85 GHz	10	0	0	28.5	USA, PtMP
5.725-5.85 GHz	17	0	0	35.5	USA, PtMP
5.725-5.85 GHz	23	-6	0	35.5	USA, PtMP
5.725-5.85 GHz	31	-10	3.5	36	USA, PtMP
5.725-5.85 GHz	10	0	0	28.5	USA, PtP
5.725-5.85 GHz	17	0	0	35.5	USA, PtP
5.725-5.85 GHz	23	0	0	41.5	USA, PtP
5.725-5.85 GHz	31	0	0	49.5	USA, PtP
5.47-5.725 GHz	10	0	0	28.5	ETSI
5.47-5.725 GHz	17	-6	0	29.5	ETSI
5.47-5.725 GHz	23	-10	1.5	30	ETSI
5.47-5.725 GHz	31	-10	9.5	30	ETSI

* Note that higher data rates use lower output power, so less cable loss is required to meet the maximum EIRP limit.

Table 4-2 Distance and Link Budget

Reference Frequency: 5600 MHz Center Frequency for Europe								
Link Budget (dB)	Distance (m)	Fresnel Zone (m)	Link Budget (dB)	Distance (m)	Fresnel Zone (m)	Link Budget (dB)	Distance (m)	Fresnel Zone (m)
61	4.8	0.3	91	151	1.4	121	4.8	8.0
62	5.4	0.3	92	170	1.5	122	5.4	8.5
63	6.0	0.3	93	190	1.6	123	6.0	9.0
64	6.8	0.3	94	214	1.7	124	6.8	9.5
65	7.6	0.3	95	240	1.8	125	7.6	10.1
66	8.5	0.3	96	269	1.9	126	8.5	10.7
67	9.5	0.4	97	302	2.0	127	9.5	11.3
68	11	0.4	98	339	2.1	128	10.7	12.0
69	12	0.4	99	380	2.3	129	12.0	12.7
70	13	0.4	100	426	2.4	130	13.5	13.4
71	15	0.5	101	478	2.5	131	15.1	14.2
72	17	0.5	102	537	2.7	132	17.0	15.1
73	19	0.5	103	602	2.8	133	19.0	16.0
74	21	0.5	104	676	3.0	134	21.4	16.9
75	24	0.6	105	758	3.2	135	24.0	17.9
76	27	0.6	106	850	3.4	136	26.9	19.0
77	30	0.6	107	954	3.6	137	30.2	20.1
78	34	0.7	108	1071	3.8	138	33.9	21.3
79	38	0.7	109	1201	4.0	139	38.0	22.6
80	43	0.8	110	1348	4.2	140	42.6	23.9
81	48	0.8	111	1512	4.5	141	47.8	25.3
82	54	0.8	112	1697	4.8	142	53.7	26.8
83	60	0.9	113	1904	5.0	143	60.2	28.4
84	68	1.0	114	2136	5.3	144	67.6	30.1
85	76	1.0	115	2397	5.7	145	75.8	31.9
86	85	1.1	116	2689	6.0	146	85.0	33.7
87	95	1.1	117	3018	6.4	147	95.4	35.7
88	107	1.2	118	3386	6.7	148	107.1	37.9
89	120	1.3	119	3799	7.1	149	120.1	40.1
90	135	1.3	120	4263	7.6	150	134.8	42.5

NOTE: The distance is based upon the assumption that 60% of the 1st Fresnel is clear.

5

Proxim Technical Services and Support

See the following sections:

- [Obtaining Technical Services and Support](#)
- [Support Options](#)
 - [Proxim eService Web Site Support](#)
 - [Telephone Support](#)
 - [ServPak Support](#)

Obtaining Technical Services and Support

If you are having trouble utilizing your Proxim product, please review the User Guide and the additional documentation provided with your product.

If you require additional support and would like to use Proxim's free Technical Service to help resolve your issue, please be ready to provide the following information before you contact Proxim's Technical Services:

- Product information
 - Part number of suspected faulty unit
 - Serial number of suspected faulty unit
- Trouble/error information:
 - Trouble/symptom being experienced
 - Activities completed to confirm fault
 - Network information (what kind of network are you using?)
 - Circumstances that preceded or led up to the error
 - Message or alarms viewed
 - Steps taken to reproduce the problem
- Servpak information (if a Servpak customer):
 - Servpak account number
- Registration information:
 - If the product is not registered, date when you purchased the product
 - If the product is not registered, location where you purchased the product

NOTE: If you would like to register your product now, visit the Proxim eService Web Site at <http://support.proxim.com> and click on **New Product Registration**.

Support Options

Proxim eService Web Site Support

The Proxim eService Web site is available 7x24x365 at <http://support.proxim.com>.

On the Proxim eService Web Site, you can access the following services:

- **New Product Registration:** Register your product for free support.
- **Open a Ticket or RMA:** Open a ticket or RMA and receive an immediate reply.
- **Search Knowledgebase:** Locate white papers, software upgrades, and technical information.
- **ServPak (Service Packages):** Receive Advanced Replacement, Extended Warranty, 7x24x365 Technical Support, Priority Queuing, and On-Site Support.
- **Your Stuff:** Track status of your tickets or RMAs and receive product update notifications.
- **Provide Feedback:** Submit suggestions or other types of feedback.
- **Customer Survey:** Submit an On-Line Customer Survey response.
- **Repair Tune-Up:** Have your existing Proxim equipment inspected, tested, and upgraded to current S/W and H/W revisions, and extend your warranty for another year.

Telephone Support

Contact technical support via telephone as follows:

- **Domestic:** 866-674-6626
- **International:** +1-408-542-5390

Hours of Operation

- **North America:** 8 a.m. to 5 p.m. PST, Monday through Friday
- **EMEA:** 8 a.m. to 5 p.m. GMT, Monday through Friday

ServPak Support

Proxim understands that service and support requirements vary from customer to customer. It is our mission to offer service and support options that go above-and-beyond normal warranties to allow you the flexibility to provide the quality of service that your networks demand.

In recognition of these varying requirements we have developed a support program called ServPak. ServPak is a program of Enhanced Service Options that can be purchased individually or in combinations to meet your needs.

- **Advanced Replacement:** This service offers customers an advance replacement of refurbished or new hardware. (Available in the U.S., Canada, and select countries. Please inquire with your authorized Proxim distributor for availability in your country.)
- **Extended Warranty:** This service provides unlimited repair of your Proxim hardware for the life of the service contract.
- **7x24x365 Technical Support:** This service provides unlimited, direct access to Proxim's world-class technical support 24 hours a day, 7 days a week, 365 days a year.
- **Priority Queuing:** This service allows your product issue to be routed to the next available Customer Service Engineer.

To purchase ServPak support services, please contact your authorized Proxim distributor. To receive more information or for questions on any of the available ServPak support options, please call Proxim Support at +1-408-542-5390 or send an email to servpak@proxim.com.