

User Manual

DSL1000EW(L)

4-Port Ethernet Wireless Router

© Copyright 2009 All rights reserved.

No part of this document may be reproduced, republished, or retransmitted in any form or by any means whatsoever, whether electronically or mechanically, including, but not limited to, by way of photocopying, recording, information recording, or through retrieval systems without the express written permission. We reserve the right to revise this document at any time without the obligation to notify any person and/or entity. All other company or product names mentioned are used for identification purposes only and may be trademarks of their respective owners.

LIMITATION OF LIABILITY AND DAMAGES

THE PRODUCT AND THE SOFTWARES WITHIN ARE PROVIDED "AS IS," BASIS. THE MANUFACTURER AND MANUFACTURER'S RESELLERS (COLLECTIVELY REFERRED TO AS "THE SELLERS") DISCLAIM ALL WARRANTIES, EXPRESS, IMPLIED OR STATUTORY, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR ANY WARRANTIES ARISING FROM COURSE OF DEALING, COURSE OF PERFORMANCE, OR USAGE OF TRADE. IN NO EVENT WILL THE SELLERS BE LIABLE FOR DAMAGES OR LOSS, INCLUDING BUT NOT LIMITED TO DIRECT, INDIRECT, SPECIAL WILLFUL, PUNITIVE, INCIDENTAL, EXEMPLARY, OR CONSEQUENTIAL, DAMAGES, DAMAGES FOR LOSS OF BUSINESS PROFITS, OR DAMAGES FOR LOSS OF BUSINESS OF ANY CUSTOMER OR ANY THIRD PARTY ARISING OUT OF THE USE OR THE INABILITY TO USE THE PRODUCT OR THE SOFTWARES, INCLUDING BUT NOT LIMITED TO THOSE RESULTING FROM DEFECTS IN THE PRODUCT OR SOFTWARE OR DOCUMENTATION, OR LOSS OR INACCURACY OF DATA OF ANY KIND, WHETHER BASED ON CONTRACT, TORT OR ANY OTHER LEGAL THEORY, EVEN IF THE PARTIES HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE ENTIRE RISK AS TO THE RESULTS AND PERFORMANCE OF THE PRODUCT OR ITS SOFTWARE IS ASSUMED BY CUSTOMER. BECAUSE SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO THE PARTIES. IN NO EVENT WILL THE SELLERS' TOTAL CUMULATIVE LIABILITY OF EACH AND EVERY KIND IN RELATION TO THE PRODUCT OR ITS SOFTWARE EXCEED THE AMOUNT PAID BY CUSTOMER FOR THE PRODUCT.

Contents

About the Router	6
Main Features	7
Requirements	10
Package Contents	10
Device Design	11
Getting Started	13
Planning Your Network	14
Remove or Disable Conflicts	15
Internet Sharing, Proxy, and Security Applications	15
Configuring TCP/IP Settings	16
Configuring Internet Properties	16
Removing Proxy Settings	17
Removing Temporary Internet Files	17
Setup the Device	18
Connecting to the Internet	19
Connecting Via Quick Setup	19
Connecting Wireless Devices	20
About the Web User Interface	21
Accessing the Web User Interface	21
Menus	21
Basic	22
Home	22
Quick Setup	22
Advanced	24
Device Info	24
Summary	24
WAN	24
Statistics	25
Route	26
ARP	26
DHCP	26

Advanced Setup	27
New Connection	27
LAN (Local Area Network)	28
NAT	29
Port Triggering	30
DMZ Host	31
Security	32
IP Filtering	32
Parental Control	35
Quality of Service	37
Queue Config	37
QoS Classification	38
Routing	39
Default Gateway	39
Static Route	39
RIP	40
DNS	41
DNS Server	41
Dynamic DNS	42
DSL	45
DNS Proxy Configuration	45
LAN Ports	45
IPSec	45
Certificate	45
Interface Grouping	45
Wireless	47
Basic	47
Security	48
MAC Filter	49
Advanced	49
Station Info	50
Diagnostics	51
Management	52
Settings	52

Backup	52
Update	52
Restore Default	52
System Log	52
TR-069 Client	53
Internet Time	53
Access Control.....	53
Passwords	53
Update Software.....	54
Reboot.....	54
FCC Notice	56

About the Router

Your router offers an easy way of integrating your computer and other network devices into a single network. Here are some of the benefits you can obtain from using the router in your home or office:

Integrated Modem Feature Your router is an ideal solution for high speed Internet connectivity. It is capable of handling the fastest data transfer speed from your Internet provider and sharing this within your local network devices.

Top Notch Security Your router utilizes built-in firewall security to block service attacks. For added flexibility, it can be modified to allow specific applications to pass through while blocking intrusive threats at the same time.

Intuitive User Interface Applying changes on the router settings can be done easily using a Web browser. The router uses a simplified user interface that allows you to apply the configurations you want for the various features of the router.

Your router will serve as the central figure in establishing your local area network (LAN) by using a combination of hardware and software. The hardware includes the cables, wireless access points, and Ethernet ports that create the path to connect your devices. The software part includes the applications that manage the flow of information in these devices.

You can complete the basic installation and Internet connection within 8 minutes. Some more time is needed if you intend to utilize more advanced functions but it can be worth it. Advanced features like port forwarding will help you create your own web server to store your Web site, Dynamic DNS allows you to access your network from the Internet, and remote access enables you to configure your router settings from different locations.

Once installation is complete, it will be much more easier for you to enjoy voice communication, high speed Internet, and data/audio/video sharing within your network.

Main Features

ADSL Support

- ANSI T1.413 issue 2, ITU-T G.992.1 (G.dmt) and G.992.2 (G.lite) compliant
- G.992.3 (ADSL2), G.992.5 (ADSL2+), RE-ADSL Ready
- ATM Layer with Traffic shaping QoS Support (UBR, CBR, VBR-rt, VBR-nrt)
- AAL ATM Attributes - AAL5
- Multiple PVC up to 8 support
- Spectral compatibility with POTS
- F4 & F5 OAM Loopback/Send and Receive
- Annex A, Annex B, Annex M Support
- TR048 and TR067 compliant
- PVC support

Encapsulation Support

- RFC2684 Bridge and Routed LLC and VC Mux support
- RFC2364 PPPoA Client support
- RFC2516 PPPoE Client support
- RFC2225/RFC1577 Classical IP Support
- Transparent Bridge Support
- PAP/CHAP/MS-CHAP for Password Authentication Support

Network Support

- Static IP, Dynamic RIP v1/v2 routing support
- IP/TCP/UDP/ICMP/ARP Application Support
- Network Address Translation (NAT)
- PVC to VLAN Mapping
- Port Forwarding/Triggering
- Easy setup of Port Forwarding rules for popular Games/Application
- NAT Application Level Gateway for popular applications
- DHCP Server/Relay/client
- DNS Relay Agent
- DMZ support
- SIP ALG (Application Layer Gateway) support

- Multiple Sessions IP Sec and PPTP/L2TP VPN pass through support
- PPP Always on
- PPP Dial on Demand with configurable timeout
- Universal Plug and Play Support
- DDNS (Dynamic DNS) Support
- IGMP Proxy Support (IGMP v1 and v2)
- SNTP Support
- QoS Support (DSCP, TOS), including Diffserv, IEEE802.1p - Priority bit, IEEE802.1q - VLAN triggering
- PPP/DHCP Auto Detection (Future release)
- TR-069 Compliant

WLAN Support

- Wireless on Motherboard (WOMBO)
- IEEE 802.11, 802.11b and 802.11g compliant
- Supports 802.11b, 802.11g simultaneously
- Transmit output power up to 20dBm (standard)
- Conforms to Wireless Ethernet Compatibility Alliance (WECA) Wireless Fidelity (Wi-Fi[™]) Standard
- Support seamless WLAN roaming
- Frequency Band:
 - 2412 MHz - 2462 MHz (North America/FCC)
 - 2412 MHz - 2472 MHz (ETSI/Europe)
 - 2412 MHz - 2484 MHz (Japan)
 - 2457 MHz - 2472 MHz (France)
 - 2457 MHz - 2462 MHz (Spain)
- Support Direct Sequence Spread Spectrum (DSSS) technology
- Modulation: OFDM with BPSK, QPSK, 16QAM, 64QAM, DBPSK, DQPSK, CCK
- Wireless Media Access Protocol- CSMA/CA with ACK
- 64/128 WEP Encryption
- WPA/WPA2 Support
- MAC filtering Support
- Dynamic Rate Scaling from 54, 48, 36, 24, 12, 11, 9, 6, 5.5, 2, 1 Mb/s
- Operating Range of up to 300 feet (Open Air)

Management Support

- Web Based HTTP management GUI
- Web Based Firmware Upgrade (Local)
- Soft Factory Reset Button via Web GUI
- Diagnostic Test (DSL, OAM (ADSL), Network (ADSL), Ping Test)
- TR068 - WAN Access
- Telnet with CLI (Read and Write) configuration
- Syslog Support
- Firmware upgradeable for future feature enhancement
- Quick firmware upgrade button (depopulation option)
- TR-069 Compliant
- SNMP v1 and v2
- SSH Support

Security Support

- NAT for basic Firewall support
- Packet Filtering Firewall Support
- Stateful Packet Inspection Support
- Protection against Denial of Service attacks
- Password Authentication to Modem
- URL filtering/ Parental Control (Option)
- Real-Time Attack and Alert Logs (Option)

Requirements

Your computer must meet the following minimum requirements.

- Any operating system can be used
- Internet Explorer 4.0 or Netscape Navigator 3.02
- 233MHz processor
- Ethernet network adapter
- An active DSL Internet account
- CD-ROM Drive (optional)


Package Contents

Package contents are listed below. For any missing items, please contact your dealer immediately.

Product contents vary for different models.

- Router
- Ethernet cable
- Telephone cable
- POTS Splitter (Optional)
- 12V 1A DC Power Adapter
- Easy Start Guide
- Resource CD

Device Design

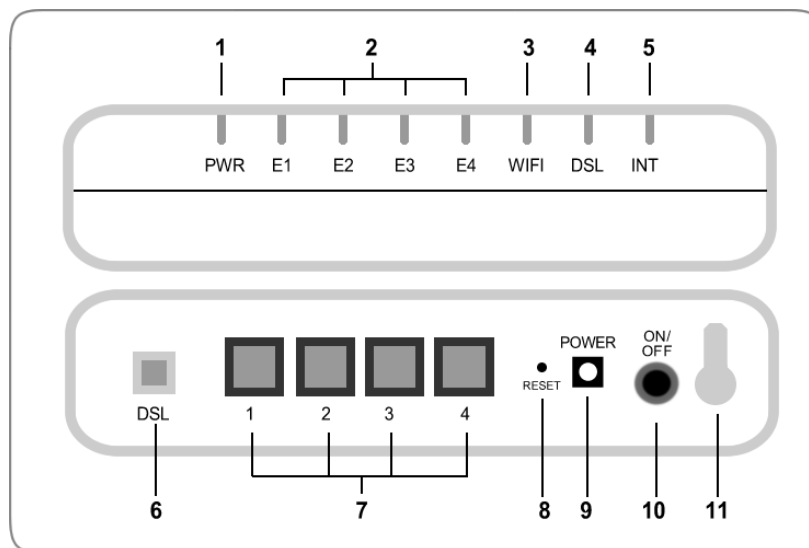


	Label	Action	Description
1	POWER	Off	No power is supplied to the device
		Steady green light	Connected to an AC power supply
		Steady red light	Error on the device
2	ETHERNET 1-4	Off	No Ethernet connection
		Steady green light	Connected to an Ethernet port
		Blinking green light	Transmitting/Receiving data
3	WIFI	Off	Access point is disabled
		Steady green light	Access point is enabled
		Blinking green light	Transmitting/Receiving data
4	DSL	Off	No DSL signal
		Blinking green light	Establishing DSL signal
		Steady green light	DSL signal is established
5	INTERNET	Off	No Internet connection
		Steady green light	Connected to the Internet
		Blinking green light	Transmitting/Receiving data

		Steady red light	Cannot establish Internet connection
6	DSL		Connecting the telephone cable
7	ETHERNET 1-4		Connecting with computers/devices through Ethernet cable
8	RESET		Resetting the device. Press for 10 seconds to reset.
9	POWER (12V 1A DC)		Connecting with the 12V 1A DC power adapter
10	ON/OFF		Switching the device on/off
11	Antenna		Sending/receiving wireless signals


Getting Started

Setting up the device is easy. The flowchart below provides an outline of the steps needed to complete the installation. Brief descriptions appear beside each step. Detailed instructions are provided in the subsequent pages.

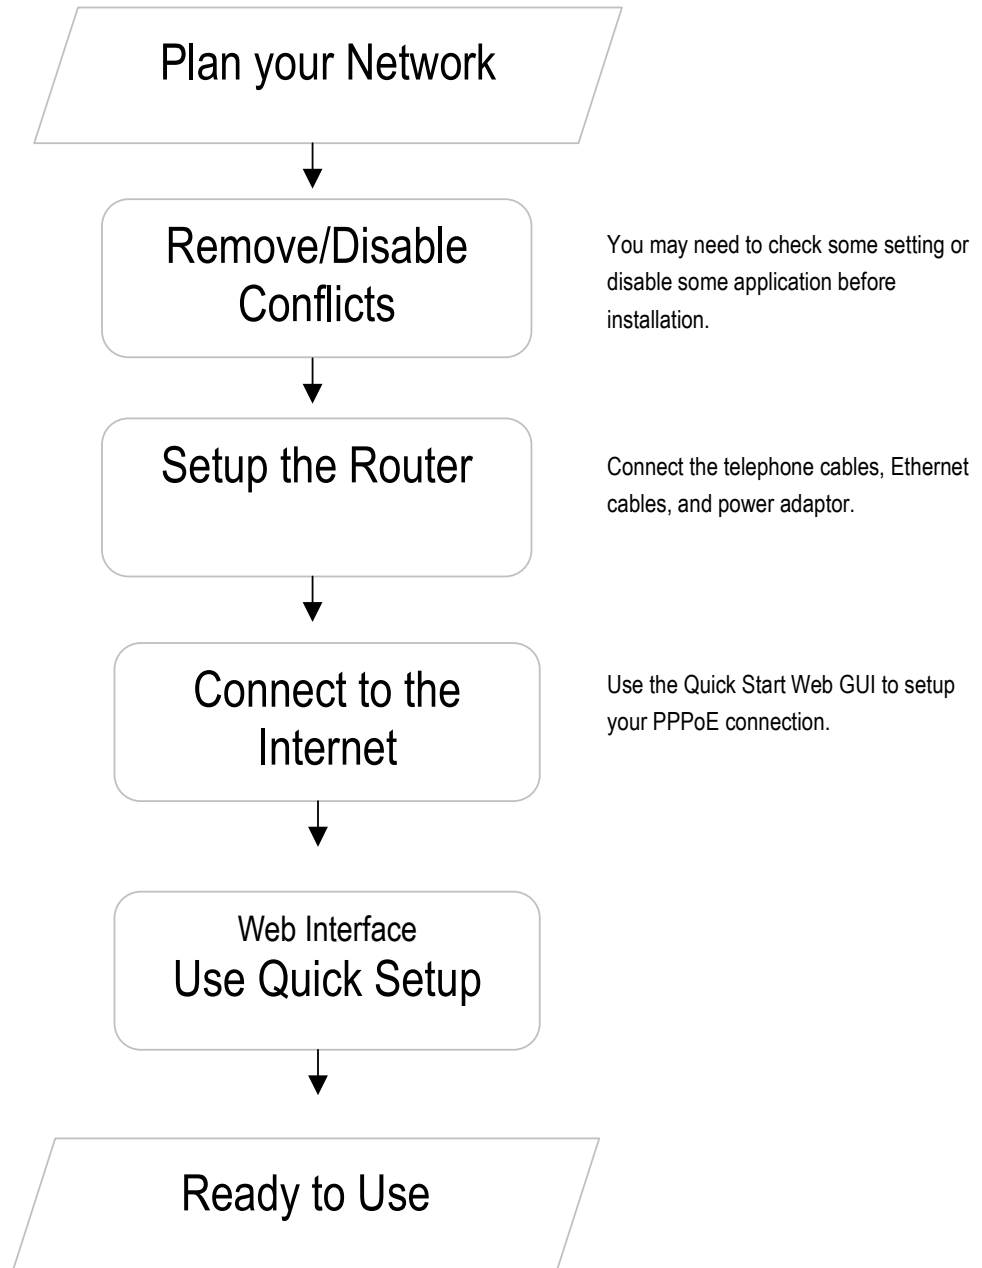

Planning Your Network

Before moving ahead to setup your network, it is a good idea to draw out a network diagram to help identify your network devices and plan out how to connect these devices. The illustration below is an example of a network diagram.

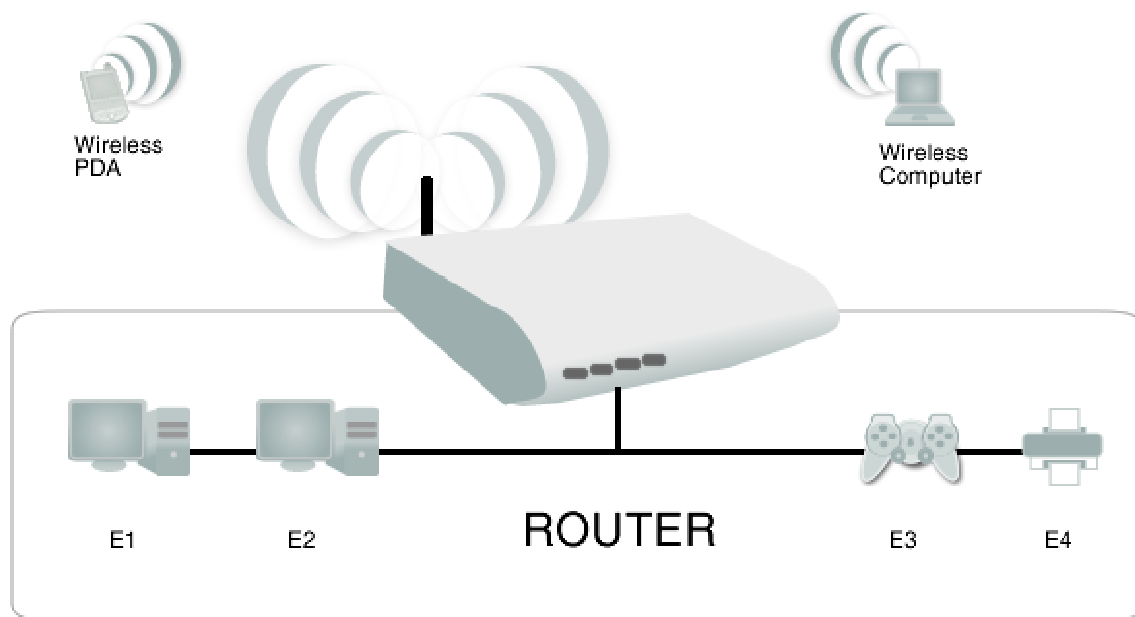

To create a network diagram:

- For wireless devices, identify the wireless devices you want to include in the network
- For wired devices, identify which router port you want to use for each device.

Remove or Disable Conflicts

To make sure the router installation moves on smoothly, you need to remove or disable conflicts that may interfere the installation. Probable conflicts may include:

- Internet sharing applications
- Proxy software
- Security software
- TCP/IP settings
- Internet properties
- Temporary Internet files

Internet Sharing, Proxy, and Security Applications

Internet sharing, proxy software, and firewall applications may interfere with the router installation. These should be removed or disabled before start the installation.

If you have any of the following or similar applications installed on your computer, remove or disable them according to the manufacturer's instructions.

Internet Sharing Applications	Proxy Software	Security Software
Microsoft Internet Sharing	WinGate	Symantec
	WinProxy	Zone Alarm

Configuring TCP/IP Settings

Check if your computer uses the default TCP/IP settings.

To check the TCP/IP properties:

1. Select Start > Run. This opens the Run dialog box.
2. Enter control ncpa.cpl and then click OK. This opens the Network Connections in your computer.
3. Right-click LAN and then select Properties. This opens the Local Area Connection Properties dialog box.
4. Select Internet Protocol (TCP/IP) and then click Properties. This opens the Internet Protocol (TCP/IP) dialog box.
5. Select Obtain an IP address automatically.
6. Click OK to close the Internet Protocol (TCP/IP) dialog box.
7. Click OK to close the Local Area Connection Properties dialog box.

Configuring Internet Properties

To set the Internet Properties:

1. Select Start > Run. This opens the Run dialog box.
2. Enter control inetcpl.cpl and then click OK. This opens Internet Properties.
3. Click Connections tab.
4. In the Dial-up and Virtual Private Network settings pane, select Never dial a connection.
5. Click OK to close Internet Properties.

Removing Proxy Settings

To remove proxy settings:

1. Select Start > Run. This opens the Run dialog box.
2. Enter control and then click OK. This opens Control Panel.
3. Double-click Internet Options. This opens Internet Options.
4. Click on the Connections tab.
5. Click to open the LAN Settings button.
6. Make sure that Automatically detect settings is CHECKED and Use a proxy server for your LAN is UNCHECKED.
7. Click OK to close Internet Properties.

Removing Temporary Internet Files


Temporary Internet files are files from Web sites that are stored in your computer. Delete these files to clean the cache and remove footprints left by the Web pages you visited.

To remove temporary Internet files:

8. Select Start > Run. This opens the Run dialog box.
9. Enter control and then click OK. This opens Control Panel.
10. Double-click Internet Options. This opens Internet Options.
11. In the Temporary Internet Files pane, click Delete Cookies.
12. Click Delete Files.
13. Click OK to close Internet Properties.

Setup the Device

When installing the router, find an area where there are enough electrical outlets for the router, the main computer, and your other computer devices.

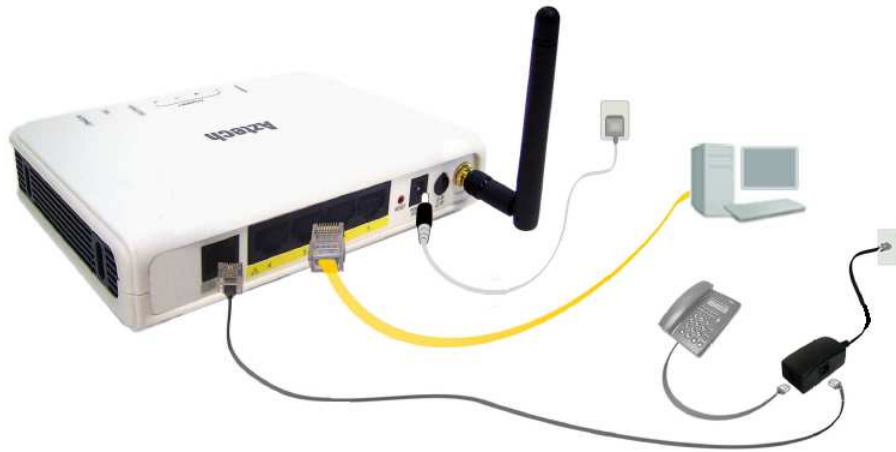

To setup the router:

1. Connect the POTS Splitter into the telephone jack.
2. Use a telephone cable to connect to the router's DSL port and the POTS Splitter's modem port.

POTS Splitter

Your phone line carries with it both phone calls and Internet signals. When you are using the Internet, the connection produces high-pitched tones that can affect your voice calls when using the phone. Installing a Plain Old Telephone Service (POTS) splitter separates the two signals and eliminates the noise.

To setup a telephone on the POTS Splitter:

Plug one end of the telephone cable from the POTS Splitter's **TEL** port and then plug the other end into the telephone.

3. Plug one end of the Ethernet cable from any of the router's four **ETHERNET** ports and then plug the other end into the Ethernet port in your computer.
4. Connect the power adapter from the router's 12V 1A DC port into the electrical outlet.
5. Press the "ON" button at the back of the router to turn on the power.

Connecting to the Internet

You can use the Web Interface to setup your Internet connection.

Connecting Via Quick Setup

To connect to the Internet via the Web Interface:

1. Open your browser.
2. Enter 192.168.1.1 and then press Enter.
3. Enter the User name and Password, and then click OK. The default User name and Password is *admin*.
4. Select Quickstart.

The screenshot shows the Aztech Quickstart web interface. On the left is a navigation menu with options: Basic, Home, Quickstart (selected), Advance, Device Info, Advanced Setup, Wireless, Diagnostics, and Management. The main content area is titled 'Quickstart' and contains several configuration sections:


- Protocol:** PPPoE (selected), Encapsulation Mode: LLC/SNAP-BRIDGING (selected)
- PVC Settings:** VPI: [0-255] 0, VCI: [32-65535] 35
- PPP Settings:** PPP Username: user, PPP Password: ****
- LAN Configuration:** IP Address: 192.168.1.1, Subnet Mask: 255.255.255.0, ☐ Disable DHCP Server, ☒ Enable DHCP Server, Start IP Address: 192.168.1.2, End IP Address: 192.168.1.254
- Wireless Settings:** Enable Wireless: ☒. Enter the wireless network name (also known as SSID): Aztech, SSID: [Aztech], Wireless Channel: 6 (selected), Network Authentication: Open (selected)
- WEP Encryption:** Enabled (selected), Encryption Strength: 64-bit (selected), Current Network Key: 1 (selected). Network Key 1: aaabcccc00ee, Network Key 2: aaabcccc00ee, Network Key 3: aaabcccc00ee, Network Key 4: aaabcccc00ee.

At the bottom, there is a 'Save/Apply' button and a note: 'Save - Saves configuration data.'

5. Enter the connection settings
 - a. Select a Protocol and Encapsulation Mode (PPPoE - LLC is commonly used unless specific otherwise by your Internet Provider)
 - b. Enter PVC Settings (Please check with your Internet Provider for the correct VCI/VPI)
 - c. Enter the PPP Username and Password (Enter your Internet Username and Password provided by your Internet Provider in the PPP Username and Password field)
6. Click Save/Apply.

Connecting Wireless Devices

After you setup the device settings through the main computer, you can connect other devices with wireless capabilities. Wireless devices relieve you from the task of laying out cables and allow you to use the Internet connection from your router.

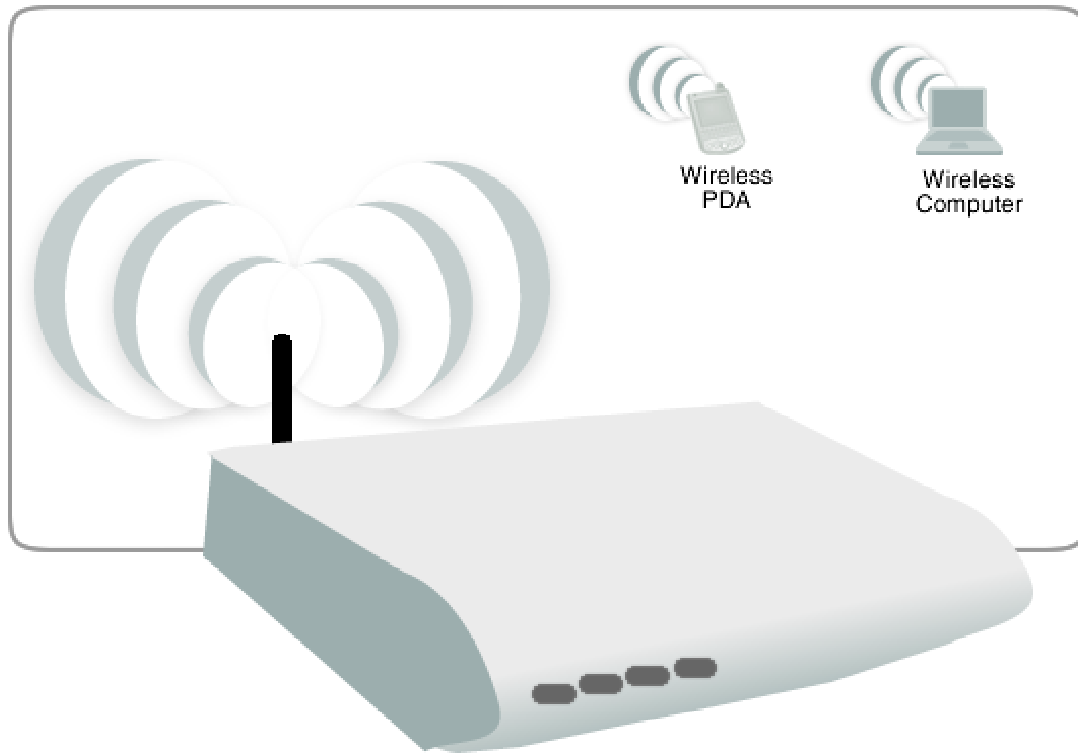

To the connect with wireless devices:

1. Turn on your wireless device.
2. Open the software you use to detect a wireless connection. This opens a window to ask for the connection settings.
3. Enter the connection settings. These settings are defined in your router during setup. For more details about wireless connections, please refer to Wireless Menu.

About the Web User Interface

The Web User Interface is used to configure the router settings.

Accessing the Web User Interface

To access the Web User Interface:

1. Open your browser.
2. Enter 192.168.1.1 and then press Enter.
3. Enter the User name and Password, and then click OK.



Default Username and Password is *admin*.

Menus

The Web User Interface includes the following menus:

- Basic
- Advanced

Basic

Home

Displays the summary and provides an overview of the operating parameters used in your device.

Aztech

Basic>Home

Connection Information		Device Information	
Upstream (Kbps) :		Model Number :	DSL1000EW(L)
Downstream (Kbps) :		Firmware Version :	212.2.1
Connection Type :	PPPoE	Firmware Build :	002
Username :	user	Base MAC Address :	00:30:0A:80:7A:E7
IP Address :		Board ID :	96338W
Default Gateway :	ppp0	Software Version :	091012_2144-
Primary DNS Server :		4.02L03.Azp8025c1.d21j2	
Secondary DNS Server :		Bootloader (CFE) Version :	1.0.37-102.9
Internet Status :	Connecting	Wireless Driver Version :	5.10.85.0.cpe4.402.4

Local Network Information		Wireless Network Information	
Management LAN IP :	192.168.1.1	Wireless Network Name :	Aztech
DHCP Status :	Enabled	Wireless Security Type :	WEP-Open
DHCP Range :	192.168.1.2 - 192.168.1.254	WEP Encryption :	enabled

Quick Setup

Quick Setup is a fast and easy way to establish an Internet connection.

Aztech

Quickstart

Protocols: **PPPoE** Encapsulation Mode: **LLC/SNAP-BRIDGING**

PVC Settings
 VPI: [0-255] [0] VCI: [32-65535] [35]

PPP Settings
 PPP Username:
 PPP Password:

LAN Configuration
 IP Address:
 Subnet Mask:
☐ Disable DHCP Server
☒ Enable DHCP Server
 Start IP Address:
 End IP Address:

Wireless Settings
 Enable Wireless ☒
 Enter the wireless network name (also known as SSID):
 SSID:
 Wireless Channel:
 Network Authentication:

WEP Encryption
 Enabled ☒
 Encryption Strength:
 Current Network Key:
 Network Key 1:
 Network Key 2:
 Network Key 3:
 Network Key 4:
 Enter 13 ASCII characters or 26 hexadecimal digits for 128-bit encryption keys
 Enter 5 ASCII characters or 10 hexadecimal digits for 64-bit encryption keys

Save - Saves configuration data.

To use Quick Setup:


1. Open your browser.
2. Enter 192.168.1.1 and then press Enter.
3. Enter the User name and Password, and then click OK. The default User name and Password is *admin*.
4. Select Quick Setup.
5. Enter the connection settings
 - a. Select a Protocol
 - b. Select an Encapsulation Mode
 - c. Enter the PPP Username and Password
 - d. Enter PVC Settings
 - e. Check Enable Wireless
 - f. Enter an SSID
6. Click Save/Reboot.

The router will save your settings and reboot. It will connect to the Internet after the reboot. When the connection is established, the Internet LED on the router lights or blinks green.

Advanced

Advanced Setup provides configuration options for other router functions.

Device Info

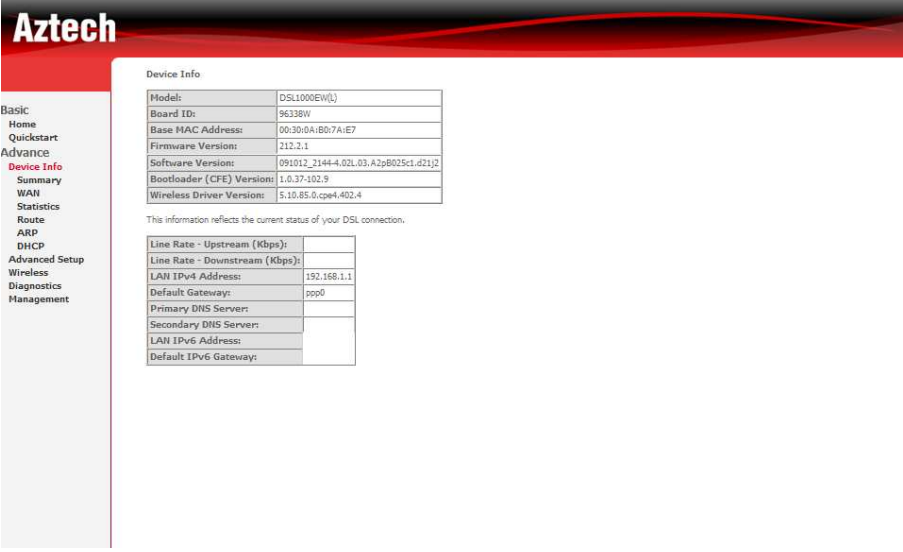

Aztech

Device Info

Model:	DSL1000EW(L)
Board ID:	96338W
Base MAC Address:	00:30:0A:8B:7A:E7
Firmware Version:	212.2.1
Software Version:	091012_2144.4.02L.03.A2p8025c1.d21j2
Bootloader (CFE) Version:	1.0.37-102.9
Wireless Driver Version:	5.10.85.0.cpe4.402.4

This information reflects the current status of your DSL connection.

Line Rate - Upstream (Kbps):	
Line Rate - Downstream (Kbps):	
LAN IPv4 Address:	192.168.1.1
Default Gateway:	ppp0
Primary DNS Server:	
Secondary DNS Server:	
LAN IPv6 Address:	
Default IPv6 Gateway:	

Summary

Summary provides an overview of the operating parameters used in your device.

To view Summary:

1. Select Device Info.
2. Click Summary.

WAN

WAN displays a summary of the WAN connection settings.

To view WAN:

1. Select Device Info.
2. Click WAN.

Statistics

Statistical information is provided and displayed by LAN, WAN, ATM, and ADSL.

LAN

LAN displays a statistical summary of the data transaction for each interface.

To view LAN statistics:

1. Select Device Info.
2. Click Statistics > LAN.

WAN

LAN displays a statistical summary of the data transaction for each connection.

To view LAN statistics:

1. Select Device Info.
2. Click Statistics > WAN.

ATM

Asynchronous Transfer Mode (ATM) displays a statistical summary of the data transaction for the ATM interface.

To view ATM statistics:

1. Select Device Info.
2. Click Statistics > ATM.

ADSL

ADSL displays a statistical summary of the ADSL connection.

To view ADSL statistics:

1. Select Device Info.
2. Click Statistics > ADSL.

Route

Route displays the routing rules implemented in the router.

To view Route:

1. Select Device Info.
2. Click Router.

ARP

Address Resolution Protocol (ARP) displays the HW address of each IP device.

To view ARP:

1. Select Device Info.
2. Click ARP.

DHCP

DHSCP displays all the DHCP clients connected to the router.


To view DHCP:

1. Select Device Info.
2. Click DHCP.

Advanced Setup

New Connection

New Connection allows you to add, edit, or remove WAN service configurations.

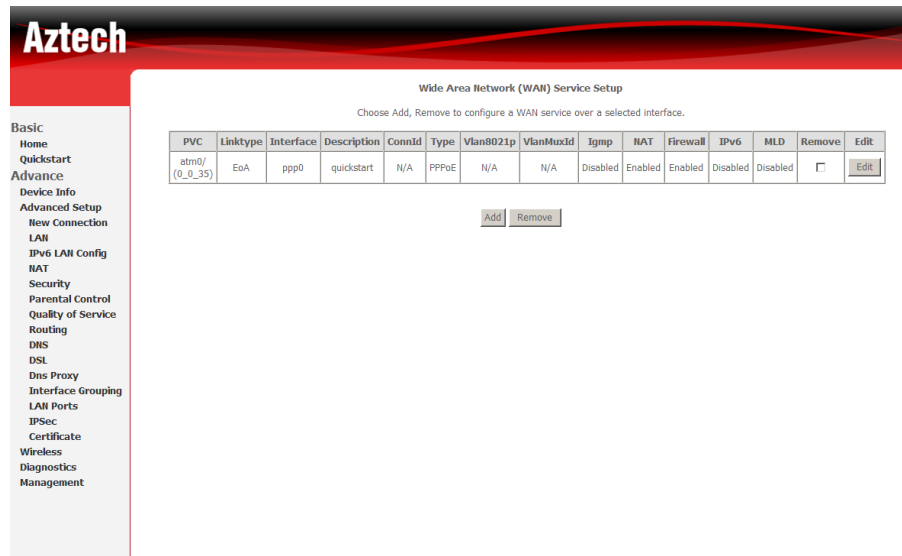

To create a new WAN interface configuration:

1. Select Advanced Setup.
2. Click New Connection.
3. Click the Add button.
4. Enter the WAN interface settings:
 - a. Enter the ATM PVC Configuration, QoS Setting, and then click Next.
 - b. Enter the WAN service configuration, and then click Next.
 - c. Enter the PPP settings, and then click Next.
5. Review the summary of your new connection, and click the Apply/Save button.

LAN (Local Area Network)

LAN allows you to modify the settings for your local network.

Aztech

Local Area Network (LAN) Setup

Configure the DSL Router IP Address and Subnet Mask for LAN interface. GroupName: Default

IP Address:

Subnet Mask:

☐ Enable IGMP Snooping

☐ Enable LAN side firewall

☐ Disable DHCP Server

☒ Enable DHCP Server

Start IP Address:

End IP Address:

Leased Time (hour):

Static IP Lease List: (A maximum 32 entries can be configured)

MAC Address	IP Address	Remove
-------------	------------	--------

☐ Configure the second IP Address and Subnet Mask for LAN interface

To create a new WAN interface configuration:


1. Select Advanced Setup.
2. Click LAN.
3. Enter the LAN settings:
 - a. Enter the IP Address and Subnet Mask you want to specify for your router.
 - b. Enter the DHCP Server information you want to specify for your LAN.
4. Click the Apply/Save button.

NAT

The routers NAT features include Virtual Servers, Port Triggering, and DMZ Host.

Virtual Servers


Virtual Server allows you to direct incoming traffic from the Internet to a specific computer in your local network. A maximum 32 entries can be configured.

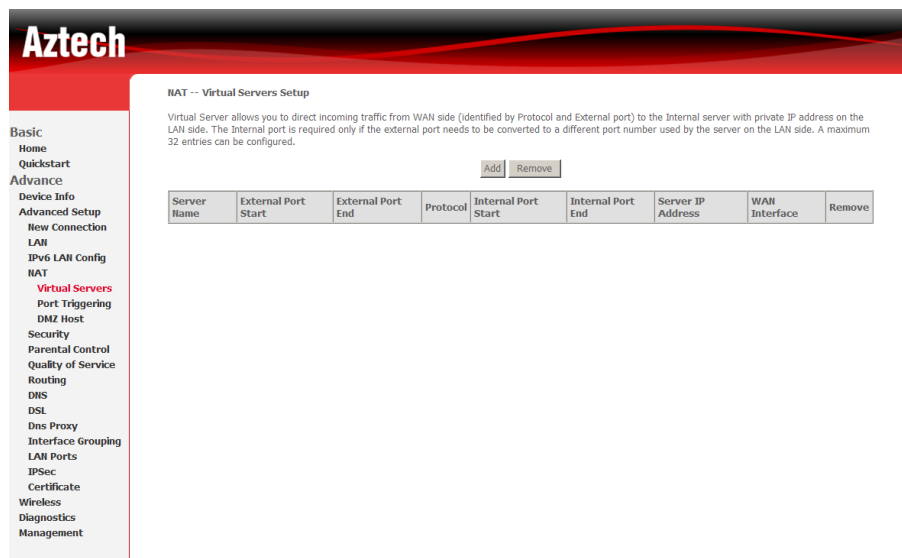

Click Add to create a Virtual Server.

As an example, to setup a web server on a computer using 192.168.1.88 as its IP Address, select HTTP as Service and enter 192.168.1.88 as the Server IP Address. Otherwise if the service you want to setup is not available from the Select a Service drop-down list, you can define your own Virtual Server.

Some applications require that the specific ports in the router's firewall be opened for access by the remote parties. A maximum of 32 entries can be configured.

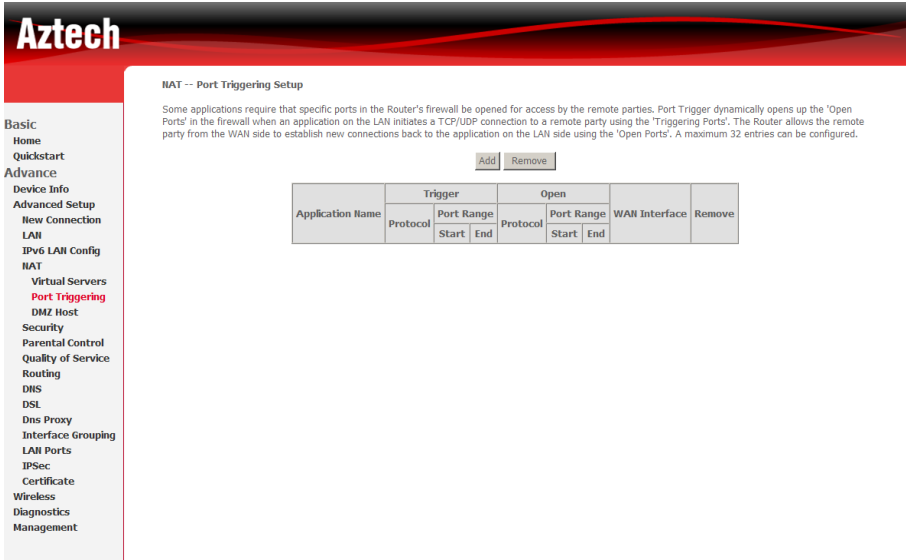


For instance, an application uses port 25 for requests and port 113 for replies. If a computer on the LAN connects to port 25 on a remote server hosting this application, using Port Triggering on the router, incoming connections to port 113 (from the remote server) could be redirected to the PC which initiated the request.

DMZ Host

If a computer is assigned as a DMZ Host, it will receive all the data from the Internet that do not belong to the list of applications configured as a Virtual Server. Enter the LAN IP address of the PC you wish to set as DMZ Host in the DMZ Host IP Address. If you need to disable the DMZ Host, just clear the DMZ Host IP Address field, and then click Save/Apply.

Note: DMZ exposes your computer to the Internet and will be vulnerable to malicious attacks.

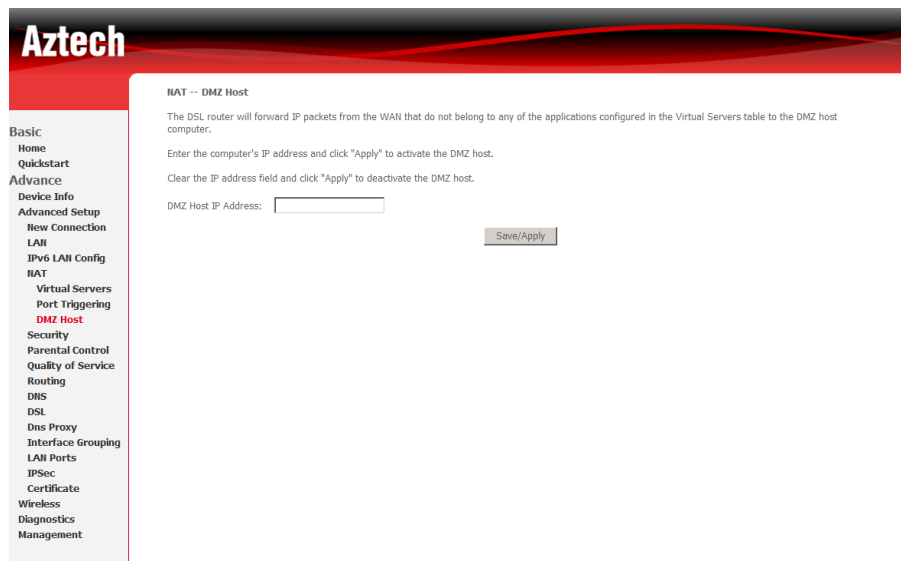

The screenshot shows the Aztech router's web interface. The top header is red with the 'Aztech' logo. A left sidebar contains a navigation menu with categories: Basic, Home, Quickstart, Advance, Device Info, Advanced Setup, New Connection, LAN, IPv6 LAN Config, NAT, Virtual Servers, Port Triggering, DMZ Host (highlighted in red), Security, Parental Control, Quality of Service, Routing, DNS, DSL, DNS Proxy, Interface Grouping, LAN Ports, IPSec, Certificate, Wireless, Diagnostics, and Management. The main content area is titled 'NAT -- DMZ Host'. It contains the following text: 'The DSL router will forward IP packets from the WAN that do not belong to any of the applications configured in the Virtual Servers table to the DMZ host computer.', 'Enter the computer's IP address and click "Apply" to activate the DMZ host.', and 'Clear the IP address field and click "Apply" to deactivate the DMZ host.' Below this text is a text input field labeled 'DMZ Host IP Address:' and a 'Save/Apply' button.

Security

IP Filtering

The router supports IP Filtering, which allows you to easily set up rules to control incoming and outgoing Internet traffic. The router provides two types of IP filtering: Outgoing IP Filtering and Incoming IP Filtering.

Outgoing IP Filtering

By default, the router allows all outgoing Internet traffic from the LAN but by setting up Outgoing IP Filtering rules, you can block some users and/or applications from accessing the Internet.

To create a new outgoing IP filter, click Add. The Add IP Filter-Outgoing page will be displayed.

Aztech

Add IP Filter -- Outgoing

The screen allows you to create a filter rule to identify outgoing IP traffic by specifying a new filter name and at least one condition below. All of the specified conditions in this filter rule must be satisfied for the rule to take effect. Click 'Apply/Save' to save and activate the filter.

Filter Name:

Protocol:

Source IP address:

Source Subnet Mask:

Source Port (port or port:port):

Destination IP address:

Destination Subnet Mask:

Destination Port (port or port:port):

Key in the following parameters:

Filter Name Key in the name of the filter rule.

Protocol Select the IP protocol to block.

Source IP Address/Subnet Mask Enter the IP address of the PC on the LAN to block.

Source Port Enter the port number used by the application to block.

Destination IP Address/Subnet Mask Enter the IP address of the remote server to which connection should be blocked.

Destination Port Enter the destination port number used by the application to block.

Click Save/Apply to take effect the settings. The new rule will then be displayed in the Outgoing IP Filtering table list.

To delete the rule, click Remove checkbox next to the selected rule, and click Remove.

Incoming IP Filtering

By default, when NAT is enabled, all incoming IP traffic from WAN is blocked except for responses to requests from the LAN. However, some incoming traffic from the Internet can be accepted by setting up Incoming IP Filtering rules.

To create a new incoming IP filter, click Add. The Add IP Filter-Incoming page will be displayed.

Aztech

Add IP Filter -- Incoming

The screen allows you to create a filter rule to identify incoming IP traffic by specifying a new filter name and at least one condition below. All of the specified conditions in this filter rule must be satisfied for the rule to take effect. Click 'Apply/Save' to save and activate the filter.

Filter Name:

Protocol:

Source IP address:

Source Subnet Mask:

Source Port (port or port:port):

Destination IP address:

Destination Subnet Mask:

Destination Port (port or port:port):

WAN Interfaces (Configured in Routing mode and with firewall enabled) and LAN Interfaces
Select one or more WAN/LAN interfaces displayed below to apply this rule.

☒ Select All
☒ quickstart/ppp0
☒ br0/br0

Basic
 Home
 Quickstart
 Advance
 Device Info
 Advanced Setup
 New Connection
 LAN
 IPv6 LAN Config
 NAT
 Security
 IP Filtering
 Outgoing
 Incoming
 Parental Control
 Quality of Service
 Routing
 DNS
 DSL
 Dns Proxy
 Interface Grouping
 LAN Ports
 IPSec
 Certificate
 Wireless
 Diagnostics
 Management

Key in the following parameters:

Filter Name Key in the name of the filter rule.

Protocol Select the IP protocol to allow.

Source IP Address/Subnet Mask Enter the IP address of the remote server from which to allow connection.

Source Port Enter the port number used by the application to allow.

Destination IP Address/Subnet Mask Enter the IP address of the PC on the LAN to which connection is allowed.

Destination Port Enter the destination port number used by the application to allow.

Click Save/Apply to take effect the settings. The new rule will then be displayed in the Incoming IP Filtering table list.

To delete the rule, click Remove checkbox next to the selected rule, and click Remove.

Parental Control

Parental Control allows you to apply router access restrictions among LAN devices within specific times in a day. A maximum of 16 restriction rules can be created.

To add restrictions, go to Time Restriction and click the Add button. This opens the Access Time Restriction page. Key in the necessary information and click the Apply/Save button.

To delete a restriction, click Remove checkbox next to the selected restriction, and click Remove.

Aztech

Access Time Restriction

This page adds time of day restriction to a special LAN device connected to the Router. The "Browser's MAC Address" automatically displays the MAC address of the LAN device where the browser is running. To restrict other LAN device, click the "Other MAC Address" button and enter the MAC address of the other LAN device. To find out the MAC address of a Windows based PC, go to command window and type "ipconfig /all".

User Name

☒ Browser's MAC Address

☐ Other MAC Address

Days of the week: ☒ Mon ☒ Tue ☒ Wed ☒ Thu ☒ Fri ☒ Sat ☒ Sun

Click to select: ☐ ☐ ☐ ☐ ☐ ☐ ☐

Start Blocking Time (hh:mm)

End Blocking Time (hh:mm)

Key in the following parameters:

User Name Enter a descriptive name for the restriction.

Browser's MAC Address or Other MAC Address Enter the device MAC Address.

Days of the week Click to select the days on which to apply the restriction.

Start Blocking Time (hh:mm) Enter the time when the restriction will be enabled (00:00 to 23:59).

End Blocking Time (hh:mm) Enter the time when the restriction will be disabled (00:00 to 23:59).

To add a URL Filter, go to URL Restriction and click the Add button. This opens the URL Filter page. Choose URL list type and click the Add button.

Aztech

Parental Control --> URL Filter Add

Enter the URL address and port number then click "Apply/Save" to add the entry to the URL filter.

URL Address:

Port Number: (Default 80 will be applied if leave blank.)

Apply/Save

Basic
Home
Quickstart

Advance
Device Info
Advanced Setup
New Connection
LAN
IPv6 LAN Config
NAT
Security
Parental Control
Time Restriction
Url Filter
Quality of Service
Routing
DNS
DSL
Dns Proxy
Interface Grouping
LAN Ports
IPSec
Certificate
Wireless
Diagnostics
Management

Key in the following parameters:

URL Address Enter the URL address of the website you want to add to your list.

Port Number Port number that your web browser will use to access the URL.


NOTE:

Include: URL entered on this list cannot be accessed while all other websites are accessible.

Exclude: URL entered on this list can be accessed while all other websites are not.

Quality of Service

QoS gives you the capability to specify the level of quality to be provided for specific applications. By default, QoS is not enabled.

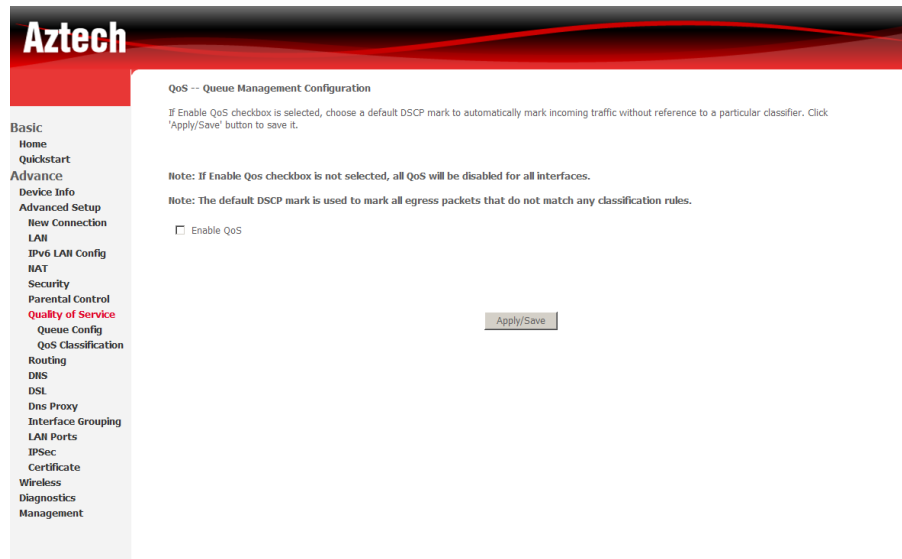

Queue Config

The screen allows you to configure a QoS queue entry and assign it to a specific network interface. Each of the queues can be configured for a specific precedence. The queue entry configured here will be used by the classifier to place ingress packets appropriately.

Note: Lower integer values for precedence imply higher priority for this queue relative to others Click 'Apply/Save' to save and activate the queue.

Click Add to create a QoS Queue Configuration.

QoS Classification

You can add or remove QoS Classification rules.

The screen creates a traffic class rule to classify the upstream traffic, assign queue which defines the precedence and the interface and optionally overwrite the IP header DSCP byte. A rule consists of a class name and at least one condition below. All of the specified conditions in this classification rule must be satisfied for the rule to take effect. Click 'Save/Apply' to save and activate the rule.

Click Add to create a Network Traffic Class Rule.

Aztech

Add Network Traffic Class Rule

The screen creates a traffic class rule to classify the upstream traffic, assign queue which defines the precedence and the interface and optionally overwrite the IP header DSCP byte. A rule consists of a class name and at least one condition below. All of the specified conditions in this classification rule must be satisfied for the rule to take effect. Click 'Save/Apply' to save and activate the rule.

Basic
Home
Quickstart
Advance
Device Info
Advanced Setup
New Connection
LAN
IPv6 LAN Config
NAT
Security
Parental Control
Quality of Service
Queue Config
QoS Classification
Routing
DNS
DSL
Dns Proxy
Interface Grouping
LAN Ports
IPSec
Certificate
Wireless
Diagnostics
Management

Traffic Class Name:

Rule Order:

Rule Status:

Specify Classification Criteria
A blank criterion indicates it is not used for classification.

Class Interface:

Ether Type:

Source MAC Address:

Source MAC Mask:

Destination MAC Address:

Destination MAC Mask:

Specify Classification Results
Must select a classification queue. A blank mark or tag value means no change.

Assign Classification Queue:

Mark Differentiated Service Code Point (DSCP):


Mark 802.1p priority:

Tag VLAN ID [0-4094]:

Routing

Default Gateway

The Enable Automatic Assigned Default Gateway checkbox is ticked by default. The router will accept the first received Default Gateway assignment from one of the PPPoA, PPPoE or MER/DHCP enabled PVC(s).

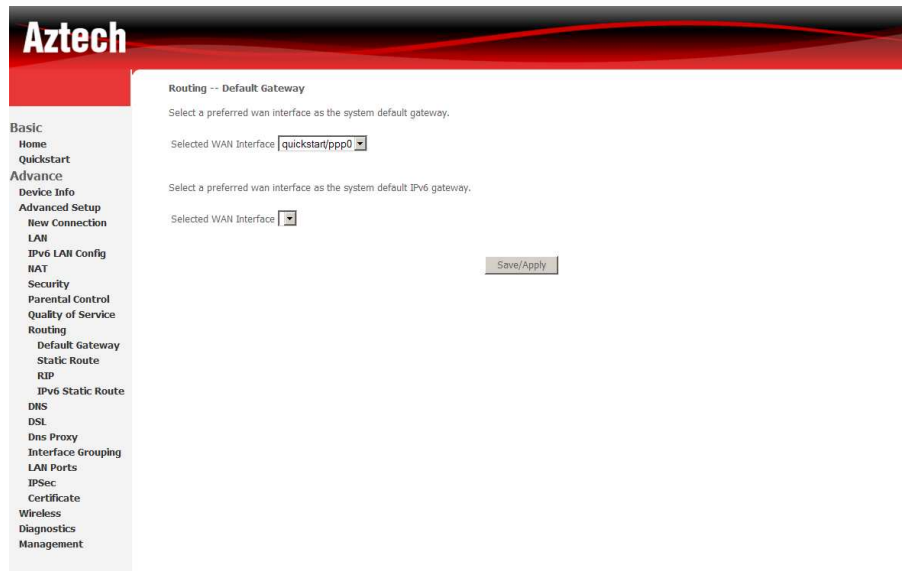

Static Route

If your LAN consists of multiple subnets and you want to manually define the data transmitting paths, Static Route is to be used.

To create a new Static Route, click Add. The Routing-Static Route Add page will show up.

Aztech

Routing -- Static Route Add

Enter the destination network address, subnet mask, gateway AND/OR available WAN interface then click "Apply/Save" to add the entry to the routing table.

Destination Network Address:

Subnet Mask:

Use Interface:

Use Gateway IP Address:

The key settings for adding a new Static Route are explained:

Destination Network Address Enter the network address to which the data packets are to be sent.

Subnet Mask Enter the subnet mask for this destination.

Use Gateway IP Address If you wish to use a specific gateway to reach the destination network, select this checkbox and then enter the IP address of the gateway.

Use Interface If you wish to use a particular WAN interface, select the checkbox and select the interface.

Click Save/Apply to take effect the settings.

To delete the entry from the routing table list, click its corresponding Remove button.

RIP

NOTE: RIP CANNOT BE CONFIGURED on the WAN interface that has NAT enabled (such as PPPoE).

To activate RIP for the WAN Interface, select the desired RIP version and operation and place a check in the 'Enabled' checkbox. To stop RIP on the WAN Interface, uncheck the 'Enabled' checkbox. Click the 'Apply/Save' button to star/stop RIP and save the configuration.

DNS

DNS Server

DNS (Domain Name System) is an Internet service that translates domain names into IP addresses. Because domain names are alphabetic, they are easier to remember. However, the Internet is based on IP addresses. Therefore, each time you type a domain name, a DNS service must translate the name into the corresponding IP address. For example, the domain name `www.example.com` might translate to `198.105.232.4`. The DNS system consists of a network of DNS servers. If one DNS server does not know how to translate a particular domain name, it asks another one and so on until the correct IP address is returned.

If you select the Enable Automatic Assigned DNS checkbox, the router will receive and use the DNS Server assigned by your ISP.

To use your preferred DNS servers, disable the Enable Automatic Assigned DNS checkbox and key in the IP address of your Primary DSN server. Adding a Secondary DNS server is optional.

Aztech

DNS Server Configuration

Select the configured WAN interface for DNS server information OR enter the static DNS server IP Addresses for single PVC with IPoA, static IPoE protocol.

☒ Obtain DNS info from a WAN interface:

WAN Interface selected:

☐ Use the following Static DNS IP address:

Primary DNS server:

Secondary DNS server:

Basic
Home
Quickstart
Advance
Device Info
Advanced Setup
New Connection
LAN
IPv6 LAN Config
NAT
Security
Parental Control
Quality of Service
Routing
DNS
DNS Server
Dynamic DNS
DSL
Dns Proxy
Interface Grouping
LAN Ports
IPSec
Certificate
Wireless
Diagnostics
Management

Dynamic DNS

The router offers a Dynamic Domain Name System (DDNS) feature. DDNS lets you assign a fixed host and domain name to a dynamic Internet IP Address. It is useful when you are hosting your own website, FTP server, or other server behind the router.

Before using this feature, you need to sign up for DDNS service providers. The router supports these popular Dynamic DNS service providers:

- www.dyndns.org
- www.tzo.com

Click Add to create a Dynamic DNS setting.

Dynamic DNS

The Dynamic DNS service allows you to alias a dynamic IP address to a static hostname in any of the many domains, allowing your DSL router to be more easily accessed from various locations on the Internet.

Choose Add or Remove to configure Dynamic DNS.

Hostname	Username	Service	Interface	Remove
<div><div>Add</div><div>Remove</div></div>				

Using DynDNS.org

The screenshot shows the Aztech router's web interface. The left sidebar contains a navigation menu with the following items: Basic, Home, Quickstart, Advance, Device Info, Advanced Setup, New Connection, LAN, IPv6 LAN Config, NAT, Security, Parental Control, Quality of Service, Routing, DNS, DNS Server, Dynamic DNS, DSL, Dns Proxy, Interface Grouping, LAN Ports, IPSec, Certificate, Wireless, Diagnostics, and Management. The main content area is titled 'Add Dynamic DNS' and includes the following text: 'This page allows you to add a Dynamic DNS address from DynDNS.org or TZO.' Below this text are four configuration sections: 'D-DNS provider' with a dropdown menu set to 'DynDNS.org'; 'Hostname' with a text input field; 'Interface' with a dropdown menu set to 'quickstart/ppp0'; and 'DynDNS Settings' with 'Username' and 'Password' text input fields. An 'Apply/Save' button is located at the bottom right of the configuration area.

Key in the following parameters:

D-DNS provider Select DynDNS.org.

Hostname Enter the hostname.

Interface Select an interface.

DynDNS Settings Enter your dyndns.org Username and password.

Using TZO

The screenshot shows the Aztech web interface. On the left is a navigation menu with categories: Basic (Home, Quickstart), Advance (Device Info, Advanced Setup, New Connection, LAN, IPv6 LAN Config, NAT, Security, Parental Control, Quality of Service, Routing, DNS, DNS Server, Dynamic DNS, DSL, Dns Proxy, Interface Grouping, LAN Ports, IPSec, Certificate, Wireless, Diagnostics, Management). The main content area is titled 'Add Dynamic DNS'. It includes a sub-header 'This page allows you to add a Dynamic DNS address from DynDNS.org or TZO.' and four configuration sections: 'D-DNS provider' with a dropdown menu set to 'TZO'; 'Hostname' with a text input field; 'Interface' with a dropdown menu set to 'quickstart/ppp0'; and 'TZO Settings' with 'Email' and 'Key' text input fields. An 'Apply/Save' button is located at the bottom right of the form.

Key in the following parameters:

D-DNS provider Select TZO.

Hostname Enter the hostname.

Interface Select an interface.

TZO Settings Enter your TZO e-mail and key.

DSL

The DSL page allows you to select the modulation, the phone line pair and the capability.

DNS Proxy Configuration

The DNS Proxy Configuration page allows you to enable and specify a DNS proxy name.

LAN Ports

LAN Ports allow you to enable/disable the virtual LAN ports feature on your router.

IPSec

Your router supports the authentication and encryption of data packets.


Certificate

Certificates are used to verify the identity of you and your peers. You can either create or import a Certificate Request.

Interface Grouping

Interface Grouping allows you to create groups composed of the various interfaces available in your router.

Interface Grouping supports multiple ports to PVC and bridging groups. Each group will perform as an independent network. To support this feature, you must create mapping groups with appropriate LAN and WAN interfaces using the Add button. The Remove button will remove the grouping and add the ungrouped interfaces to the Default group. Only the default group has IP interface.

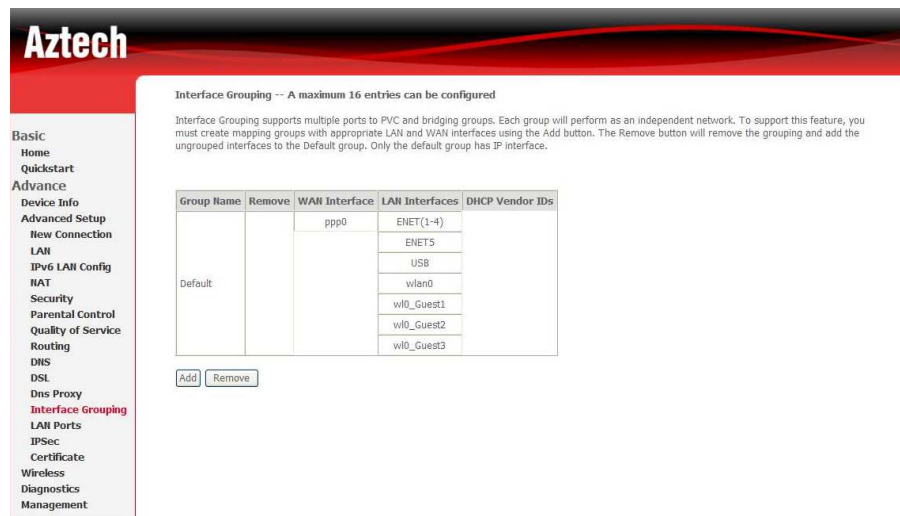**To create a new interface group:**


1. Enter the Group name and the group name must be unique and select either 2. (dynamic) or 3. (static) below:
2. If you like to automatically add LAN clients to a WAN Interface in the new group add the DHCP vendor ID string. By configuring a DHCP vendor ID string any DHCP client request with the specified vendor ID (DHCP option 60) will be denied an IP address from the local DHCP server.
3. Select interfaces from the available interface list and add it to the grouped interface list using the arrow buttons to create the required mapping of the ports. Note that these clients may obtain public IP addresses
4. Click Save/Apply button to make the changes effective immediately

IMPORTANT: If a vendor ID is configured for a specific client device please REBOOT the client device attached to the modem to allow it to obtain an appropriate IP address.

Wireless

Basic

The Wireless Basic page allows you to enable the wireless network and configure its basic settings.

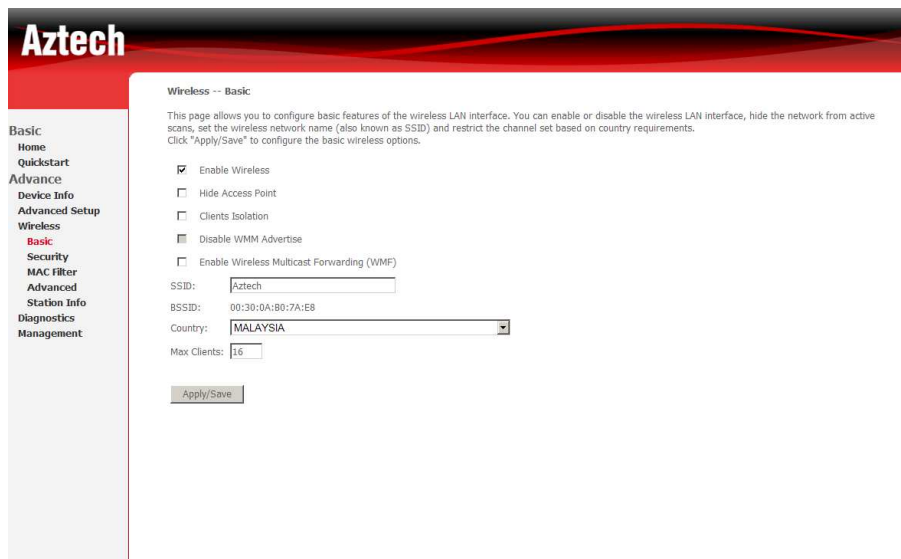


The screenshot shows the Aztech Wireless Basic configuration page. The left sidebar contains a navigation menu with the following items: Basic, Home, Quickstart, Advance, Device Info, Advanced Setup, Wireless (highlighted in red), Security, MAC Filter, Advanced, Station Info, Diagnostics, and Management. The main content area is titled "Wireless -- Basic" and includes a descriptive paragraph: "This page allows you to configure basic features of the wireless LAN interface. You can enable or disable the wireless LAN interface, hide the network from active scans, set the wireless network name (also known as SSID) and restrict the channel set based on country requirements. Click 'Apply/Save' to configure the basic wireless options." Below this text are several configuration options: "Enable Wireless" (checked), "Hide Access Point" (unchecked), "Clients Isolation" (unchecked), "Disable WMM Advertise" (checked), and "Enable Wireless Multicast Forwarding (WMF)" (unchecked). There are also input fields for "SSID" (containing "Aztech"), "BSSID" (containing "00:30:0A:B0:7A:E8"), "Country" (a dropdown menu showing "MALAYSIA"), and "Max Clients" (a text box containing "16"). An "Apply/Save" button is located at the bottom of the configuration area.

To configure basic wireless settings:

1. Click Wireless.
2. Select Basic.
3. Select Enable Wireless.
4. Select Hide Access Point if you do not want the SSID to be seen.
5. Enter preferred SSID.
6. Select a country.
7. Click Save/Apply.

Security

The router supports all the popular wireless security protocols.

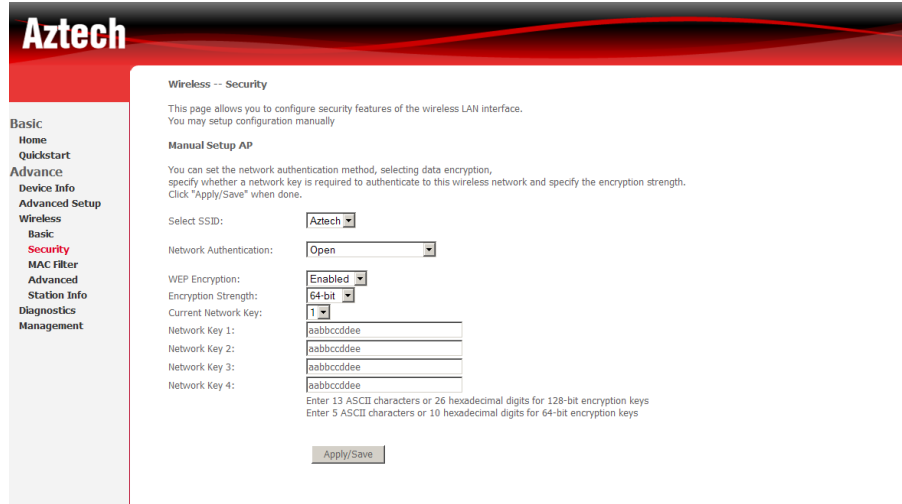

Aztech

Wireless -- Security

This page allows you to configure security features of the wireless LAN interface.
You may setup configuration manually

Manual Setup AP

You can set the network authentication method, selecting data encryption, specify whether a network key is required to authenticate to this wireless network and specify the encryption strength. Click "Apply/Save" when done.

Select SSID:

Network Authentication:

WEP Encryption:

Encryption Strength:

Current Network Key:

Network Key 1:

Network Key 2:

Network Key 3:

Network Key 4:

Enter 13 ASCII characters or 26 hexadecimal digits for 128-bit encryption keys
Enter 5 ASCII characters or 10 hexadecimal digits for 64-bit encryption keys

These include:

- Open
- Shared
- WPA-PSK
- WPA2-PSK
- Mixed WPA2/WPA - PSK

Open

Open means your wireless network does not require a security key to connect.

MAC Filter

MAC Filter allows you to add or remove the MAC Address of devices that will be allowed or denied access to the wireless network.

Click Add to add a MAC Address.

The screenshot shows the Aztech web interface for the 'Wireless -- MAC Filter' section. On the left is a navigation menu with options: Basic, Home, Quickstart, Advance, Device Info, Advanced Setup, Wireless, Basic, Security, MAC Filter (highlighted), Advanced, Station Info, Diagnostics, and Management. The main content area is titled 'Wireless -- MAC Filter' and contains the instruction: 'Enter the MAC address and click "Apply/Save" to add the MAC address to the wireless MAC address filters.' Below this is a text input field labeled 'MAC Address:' and an 'Apply/Save' button.


Advanced

Advanced Wireless allows you to configure detailed wireless settings.

The screenshot shows the Aztech web interface for the 'Wireless -- Advanced' section. The left navigation menu is identical to the previous page, with 'Advanced' highlighted under the 'Wireless' category. The main content area is titled 'Wireless -- Advanced' and includes a descriptive paragraph: 'This page allows you to configure advanced features of the wireless LAN interface. You can select a particular channel on which to operate, force the transmission rate to a particular speed, set the fragmentation threshold, set the RTS threshold, set the wakeup interval for clients in power-save mode, set the beacon interval for the access point, set XPress mode and set whether short or long preambles are used. Click "Apply/Save" to configure the advanced wireless options.' Below the text are various configuration fields: Band (2.4GHz), Channel (6, with 'Current: 6' next to it), Auto Channel Timer (min) (0), 54g Rate (Auto), Multicast Rate (Auto), Basic Rate (Default), Fragmentation Threshold (2346), RTS Threshold (2347), DTM Interval (1), Beacon Interval (100), Global Max Clients (16), XPress Technology (Disabled), 54g Mode (54g Auto), 54g Protection (Auto), Preamble Type (long), and Transmit Power (100%). An 'Apply/Save' button is located at the bottom right of the configuration area.

Station Info

Station Info scans wireless stations and displays their status.

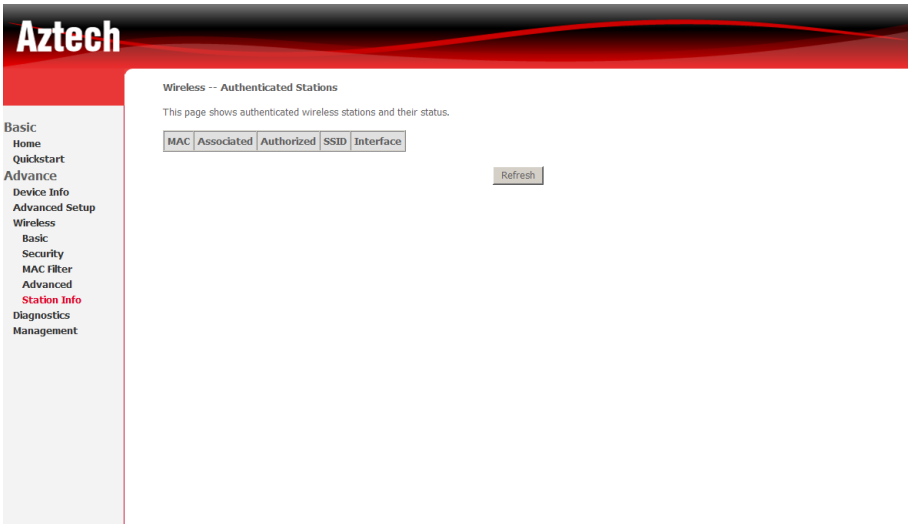

Diagnostics

The router has a diagnostic feature to test your DSL connection. You can use the diagnostic menu to perform the following test functions from the router.

- Testing the connection to your local network
- Testing the connection to your DSL service provider.
- Testing the connection to your Internet service provider.

Aztech

quickstart Diagnostics

Your modem is capable of testing your DSL connection. The individual tests are listed below. If a test displays a fail status, click "Rerun Diagnostic Tests" at the bottom of this page to make sure the fail status is consistent. If the test continues to fail, click "Help" and follow the troubleshooting procedures.

Test the connection to your local network

Test your eth0 Connection:	PASS	Help
Test your eth1 Connection:	PASS	Help
Test your USB Connection:	PASS	Help
Test your Wireless Connection:	PASS	Help

Test the connection to your DSL service provider

Test xDSL Synchronization:	PASS	Help
Test ATM OAM F5 segment ping:	PASS	Help
Test ATM OAM F5 end-to-end ping:	PASS	Help

Test the connection to your Internet service provider

Test PPP server connection:	PASS	Help
Test authentication with ISP:	PASS	Help
Test the assigned IP address:	PASS	Help
Ping default gateway:	PASS	Help
Ping primary Domain Name Server:	PASS	Help

Test Test With OAM F4

Management

Settings

When it comes to managing the settings that you have executed to the router, you can choose to:

- Backup the settings as a configuration file stored onto your PC
- Update the current settings from a previously saved configuration file
- Erase the current settings and restore the default factory values

Backup

To backup the settings as a configuration file saved on your PC, click Backup Settings.

Select the folder where you want to save the file and key in the file name under which you want to save the settings.

Update

To import a previously saved configuration file from your PC and update the settings of your router, click Browse to locate the binary (.BIN or .IMG) upgrade file. Then click Update Settings.

Restore Default

To restore your router to its factory default settings, click Restore Default Settings. When prompted, click OK.

Upon clicking OK, you will be prompted to follow the instruction as shown below.

System Log

This feature provides you a comprehensive list of log entries reporting events which you have configured for viewing.

To view the log, click View System Log.

TR-069 Client

As a TR-069 capable router, the Internet service provider can remotely update the settings of the device.

Internet Time

Enable Internet Time to automatically synchronize your time with a time server.

Access Control

This feature enables you manage the user access rights for remote access management based on the Services being used, IP addresses and Passwords.

Passwords

When you configure the router through an Internet browser, the system requires you to enter your user name and password to validate your access permission. By default, the Username is set to "admin" and the Password to "admin".

The user name "admin" has unrestricted access to change and view configuration of your DSL Router.

The user name "support" is used to allow an ISP technician to access your DSL Router for maintenance and to run diagnostics.

The user name "user" can access the DSL Router, view configuration settings and statistics, as well as, update the router's software.

Use the fields to enter up to 16 characters and click "Apply" to change or create passwords.

Note: Password cannot contain a space.

Update Software

The router's software is stored in the FLASH memory and can be upgraded as new software is released. Click Browse to locate the software file and then click Update Software.

To update the router's firmware:

1. Obtain an updated software image file from your ISP.
2. Enter the path to the image file location in the box below or click the "Browse" button to locate the image file.
3. Click the "Update Software" button once to upload the new image file.

NOTE: The update process takes about 2 minutes to complete, and your DSL Router will reboot.

Reboot

This feature allows the router to enable new network configuration to take effect or to clear problems with the modem router's network connection.

Safety Precautions

- Do not open, service, or change any component.
- Only qualified technical specialists are allowed to service the equipment.
- Observe safety precautions to avoid electric shock
- Check voltage before connecting to the power supply. Connecting to the wrong voltage will damage the equipment.

FCC Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or television technician for help.

Modifications

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Aztech could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Exposure Information to Radio Frequency Energy

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.