

VS
SASSOON

FORMEN



**TURBO POWER PRECISE 8 IN 1 TITANIUM
FACIAL & BODY GROOMING SYSTEM**

Model VS7183A

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety instructions should always be followed, including the following:

Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

DANGER: Unplug unit when not in use. All appliances are electrically live even when switched off.

WARNING: This appliance must not be taken into a bathroom.



- Do not immerse in water or other liquids.
- Do not use in the bath, or near basins or other vessels containing water.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Take care to avoid contact between the moving blades of the unit and the skin, paying particular attention to the face, neck and hands.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- **IMPORTANT:** Always unplug the appliance when not in use or before cleaning. Do not leave unattended when plugged in or switched on. Do not place on any heat sensitive surface and always allow to cool before storing away.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.

- Do not use the appliance with damaged or broken attachment combs or with any teeth missing from the blades, as injury may occur.
- Use this appliance only for its intended use as described within this instruction booklet.
- This appliance is not intended for commercial use.
- Never drop or insert any object into any opening.
- Ensure appliance is switched off before plugging it into the power outlet.
- Do not place appliance on any surface while it is operating.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Keep the cord away from heated surfaces.
- Do not use this appliance if the supply cord is damaged. In the event of damage, discontinue use immediately and contact your dealer for instructions on returning it for examination or exchange.
- After use do not wrap the cord around the appliance as in time this may cause the cord to fracture. Coil cord loosely by the side of the appliance in storage.
- Always ensure that the voltage to be used corresponds to the voltage marked on the unit.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.

<p>TURBO POWER PRECISE 8 IN 1 TITANIUM FACIAL & BODY GROOMING SYSTEM</p>

Thank you for purchasing the VS For Men Turbo Power Precise 8 in 1 Titanium Facial & Body Grooming System, a professional, rechargeable trimmer with titanium blade technology for all over trimming and grooming.

FEATURES AND ACCESSORIES

1. Rechargeable trimmer with 4 interchangeable attachments
2. Precision Trimmer blade for grooming facial hair, sideburns & neckline
3. 5 position adjustable comb guide for the precision trimmer provides 2mm to 10mm cutting lengths
4. Jawline blending comb attachment for the precision trimmer is ideal for grooming facial hair
5. Body groomer blade for trimming and shaping all body zones
6. 2 comb guide attachments (5mm and 10mm) for the body groomer blade for trimming body hair
7. Tramliner blade for precision detailing and creating hair/facial hair effects
8. Hypoallergenic foil shaver attachment achieves a close shave for smooth skin
9. Taper Control switch (on the rear of the handle) for precision cut adjustment
10. Turbo boost button provides 15% extra cutting power
11. Beard and moustache comb
12. Recharging/storage stand
13. Cleaning brush
14. Lubricating oil



INSTRUCTIONS FOR USE

CHARGING THE TRIMMER (FOR CORDLESS OPERATION)

IMPORTANT: Before using the appliance for the first time, charge for a full 16 hour continuous charge. Maximum battery capacity will only be reached after 3 charging and discharging cycles. After the 3 cycles, the trimmer must still be charged for 16 hours. In order to maintain optimum capacity of the rechargeable batteries, every 3 months the trimmer should be recharged for 16 hours.

The charging cord can be placed into the charging stand (as assembled) or removed and placed directly into the base of the trimmer.

1. Plug the transformer into a 230/240V power supply.
2. Place the appliance onto the charging stand or plug the adaptor directly into the base of the trimmer, ensuring that the appliance is switched off. The charging light will illuminate when the adaptor is correctly inserted into the trimmer and connected to the mains power supply.
3. A 16 hour full charge will provide 30 minutes usage time.

INSERTING THE ADAPTOR CORD INTO THE STAND

1. Remove the trimmer from the stand.
2. Hold the stand upside down.
3. Insert the adaptor plug into the hole on the base of the stand and push firmly into position.
4. Route the cord through the back of the base of the stand.
5. Place a thumb on the hinged back cover and push the cover over the adaptor plug to secure the cord.

CHANGING THE HEADS

1. Before changing the heads, ensure the trimmer is switched off.
2. To remove a head, hold the handle of the appliance with one hand, hold the head with the other hand and pull the head back and away from the handle.
3. To attach a head (See fig.1), adjust taper control to the lowest position, ensure the base of the head is seated in the handle & click into position.

Fig. 1

USING THE BLADE HEADS AND COMB GUIDES

Precision Trimmer Blade Head & 5 position Comb Guide

This blade is ideal for grooming facial hair.

1. Ensure the trimmer is switched off.
2. Attach the Precision Trimmer head.
3. Slide the comb guide onto the front of the trimmer head until the guide can be pushed no further.
4. The comb guide will be set to the shortest of the five cutting lengths.
5. To adjust the cutting length, push and click the guide forward to the required position.
6. To remove the comb guide, push the guide forward and off the Precision Trimmer head.



Jawline Blending Comb:

This attachment will help you to achieve a neat, finished trim under your chin.

1. Ensure the trimmer is switched off.
2. Attach the Precision Trimmer head.
3. Slide the comb over the trimmer head, pull down over the base of the head and click into position.
4. To remove the comb, push the base of the guide upward and away from the Precision Trimmer head.

For best results hold the trimmer in an upright position and begin trimming under your jawline, using short, even strokes.

Body Groomer Blade Head and Comb Guides:

This blade is ideal for trimmer body hair and can also (with comb guide attachments) be used for hair trimming.

1. Ensure the trimmer is switched off.
2. Attach the Body Groomer Blade head.
3. Slide the comb over the trimmer head, pull down over the base of the head and click into position.
4. To remove the comb guide, push the base of the guide upward and away from the Body Groomer Blade.

Tramliner Blade Head:

This blade is used for creating accurate detailing, edge lines and designer tramlines in hair and facial hair.

Foil Shaver Attachment:

This attachment is used for shaving facial and body hair close to the skin and is ideal for trimming facial hair in hard to reach areas, particularly around the ears and nape of the neck. The hypoallergenic foil shaver will leave the skin feeling smooth and refreshed, with reduced irritation. The attachment can be used wet or dry with shaving aids such as foam or gel to achieve a cleaner shave.

1. Ensure the trimmer is switched off.
2. Attach the Foil Shaver attachment and ensure it clicks into place.
3. Move the foil shaver over the skin, applying minimal pressure only, as this allows the hairs to be shaved much more quickly and cleanly. Do not press.
4. Shave with and against the hair growth, whichever is more comfortable, as most men have hair growing in various directions.
5. Tilt the shaver up and down for best shaving results.
6. Rinse the shaver regularly whilst shaving, keeping the appliance running whilst rinsing the head for faster cleaning. NB: Always inspect the shaving foils for signs of damage. Never shave with a damaged foil, as this may cause injury.

TURBO BOOST FEATURE

This product is equipped with a turbo boost button. When activated, this will provide 15% more cutting power. This is especially useful for cutting through thicker hair.

TAPER CONTROL

- The taper control with 3-position switch (on the rear of the handle) enables fine cut adjustment for precision trimming.
- The taper control eliminates the need in some situations for an attachment comb because it lets you gradually adjust the closeness of the cut.
 1. To increase the cutting length, push the switch down.
 2. To reduce the cutting length, push the switch up.

NOTE: The taper control function can only be used with the Precision Trimmer and Body Groomer heads.

BEST CUTTING PERFORMANCE

1. Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged.
2. Ensure the heads are free from hair etc (refer to Cleaning & Maintenance section for further information).
3. Ensure the trimmer is sufficiently charged.
4. Use on clean, dry hair that has been combed until tangle-free.

TRIMMING

To trim:

1. Attach a comb guide as required. If using more than one cutting length, start with the longest length first.
2. Adjust the taper control as required.
3. Switch the trimmer on.
4. Hold the trimmer with the teeth of the trimmer pointing upwards, yet flat against the skin.
5. Move the trimmer upward and outward through the hair, against the direction of hair growth.
6. The trimmer will work most efficiently when cutting through hair at its own speed. Never force the trimmer.

7. For increased trimming performance, press & hold the turbo boost button.
8. For accurate tramlines & detailed effects, attach the tramliner head.
9. Never switch the appliance off whilst in the hair.

To outline:

1. Do not attach a comb guide.
2. Hold the trimmer upside down, yet flat against the skin.
3. Move the trimmer gently downward.
4. Having defined the outline, hold the trimmer with the teeth pointing upwards, yet flat against the skin and move the trimmer upward against the direction of hair growth. This will trim the unwanted hair adjacent to the outline.

CLEANING AND MAINTENANCE

To maintain optimum performance, the appliance should be cleaned after each use:

1. Remove the comb guide after use. Rinse comb guide under running water and dry thoroughly before storage or use.
2. Remove the trimmer head after use. The heads are removable for easy cleaning. Use cleaning brush to brush and blow away any remaining hair before storage.
3. Do not disassemble the blades.
4. When the appliance is used regularly, there is no need to oil the blades. However, if the appliance will not be used for a prolonged period of time, it is advised to oil the blades, to provide the best cutting performance. To oil the blades, switch the trimmer on and hold it so that the blades are pointed downwards. Spread one drop of oil across the blades, then turn the trimmer off & wipe away excess oil with a soft cloth.
Do not over oil blades.
Never attempt to oil the motor bearings/shaft.
5. For optimum performance of the foil shaver attachment, simply position the attachment under warm running water and rinse, to remove any excess hair and debris. It is suggested to leave

the trimmer switched on to better clean the attachment. Always ensure that the attachment is dry before use.

BATTERY DISPOSAL

The appliance contains Nickel Cadmium batteries. The Nickel Cadmium batteries must be recycled or disposed of properly. To protect the environment, the appliance must be disposed of safely at the end of its useful life. Please take the appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.



NiCad

For more information about the recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service.

LIMITED TWO YEAR WARRANTY

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for twenty four months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please fill in and return the Warranty Registration as instructed.

Vidal Sassoon and related logos are trademarks of The Procter & Gamble Company used under licence by Conair



©2009 Conair Corporation USA

Conair Australia Pty Ltd, Suites 20 & 21,
7 Narabang Way, Belrose NSW 2085.

Australia Customer Service Hotline (Australia): 1800 650 263

Customer Service e-mail: aus_info@conair.com

Conair New Zealand Limited, PO BOX 251159, Pakuranga, Auckland 1706
New Zealand

Customer Service Hotline (New Zealand): 0800 266 247