 




MODEL: E399

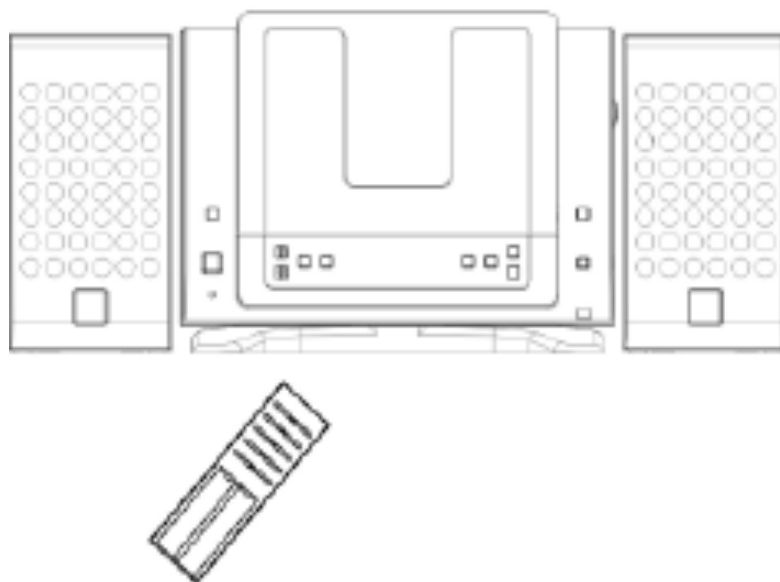

COMPACT CD SYSTEM
AM /FM STEREO & AUX INPUT
INSTRUCTION MANUAL

SAFETY INSTRUCTIONS

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



CAUTION

 
- ☐ Read all of these instructions.
 - ☐ Save these Instructions for later use.
 - ☐ Follow all Warnings and Instructions marked on the audio equipment.
 - ☐ Where the main plug is used as the disconnect device, the disconnect device should be easily accessible.
- 1) **Cleaning** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
 - 2) **Attachments** - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
 - 3) **Water and Moisture** - Do not immerse into water. Do not use this product near water: for example, near a bathtub, washbowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.
 - 4) **Accessories** - Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
 - 5) **Product and cart** combination should be moved with care. Quick stops, excessive force, and an uneven surface may cause the product and cart combination to overturn.



- 6) **Ventilation** - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should be never blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer instructions have been followed.
- 7) **Power source** - This product should be operated using only from the type of power source

indicated on the marking label. For products intended to operate from battery power, or other sources, refer to the operating instructions.

- 8) **Grounding or Polarization** - This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other does). This plug will fit into the power outlet only one-way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarize plug.
- 9) **Power Cord & Protection** - Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
- 10) **Lightning** - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
- 11) **Overloading** - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in risk of fire or electric shock.
- 12) **Object and Liquids** - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- 13) **Servicing** – This unit contains no user serviceable parts. Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- 14) **Damage Requiring Service** - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) When the power-supply cord or plug is damaged.
 - b) If the liquid has been spilled, or objects have fallen into the product.
 - c) If the product has been exposed to rain or water.
 - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e) If the product has been dropped or damaged in any way.
 - f) When the product exhibits a distinct change in performance, this indicates a need for service.
- 15) **Replacement Parts** – This unit contains no serviceable parts. Only a licensed service technician should perform service of any kind. Unauthorized service or parts replacement can result in fire, electric shock, or other hazards.
- 16) **Heat** - the product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

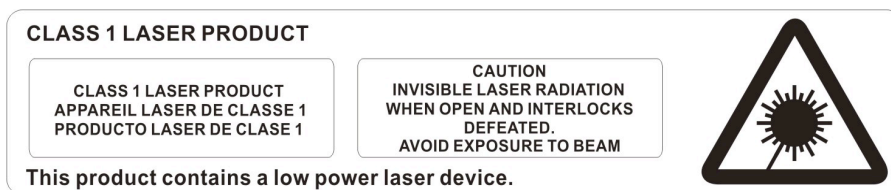

Follow the advice below for safe and appropriate operations.

ON PROTECTION AGAINST LASER ENERGY EXPOSURE

- ☐ The laser beam used in this compact disc player is harmful to the eyes; do not attempt to disassemble the casing.
 - ☐ STOP operation immediately if any liquid or solid object should fall into the cabinet.
 - ☐ Do not put anything in the safety slot, if you do, the laser diode will be ON when the CD door is still open.
-

PLACEMENT

- ☐ Do not use the unit in places that are extremely hot, cold, dusty or humid.
- ☐ Place the unit on a flat and even surface.
- ☐ Do not restrict the air-flow of the unit by placing it in a place with poor ventilation, by covering it with a cloth or by placing it on a carpet

CONDENSATION

- ☐ When left in a heated room where it is warm and damp, water droplets or condensation may form inside the unit.
- ☐ When there is condensation inside the unit; the unit may not function normally.
- ☐ Let the unit stand for 1 to 2 hours before turning the power on, or gradually heat the room up and dry the unit before use.

 
Should any trouble occur, remove the power source and refer servicing to qualified personnel

STORAGE

- ☐ If the unit is not to be used for a long period, make sure that all power sources are disconnected from the unit, remove all batteries from the battery compartment, and unplug the AC-DC adaptor from the wall outlet. Make it a practice to remove the AC-DC adaptor by grasping the main body and not by pulling the cord.

MAIN UNIT

LOCATION OF CONTROLS

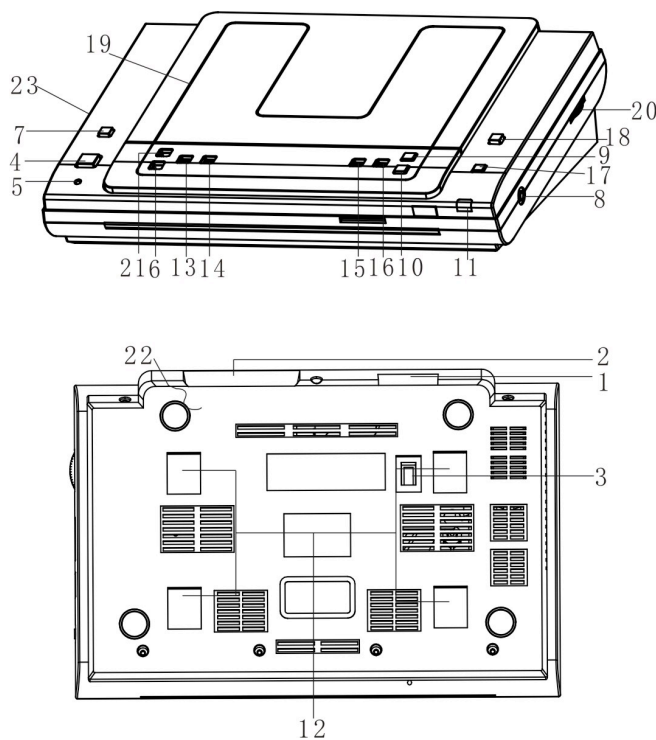

MAIN UNIT

1. AC CORD
2. SPEAKER JACKS
3. VOLTAGE SELECTION
4. POWER BUTTON
5. POWER ON INDICATOR
6. FUNCTION SWITCH (CD/AUX/RADIO)
7. BASS BOOST ON/OFF SWITCH
8. HEADPHONE JACK
9. VOLUME+ BUTTON
10. VOLUME- BUTTON
11. REMOTE RECEIVER
12. MOUNTING HOLE
23. AUX-IN JACK



CD SECTION

13. PLAY/PAUSE BUTTON ►||
14. STOP BUTTON ■
15. SKIP - FAST REV BUTTON I◀◀
16. SEARCH - FAST FWD BUTTON ►►I
17. MEMORY BUTTON
18. CD COVER OPEN/LOCK
19. CD COVER

RADIO SECTION

20. TUNING UP/DOWN KNOB
21. BAND SWITCH (AM/FM/FM ST.)
22. FM ANTENNA LEAD

  REMOTE CONTROL

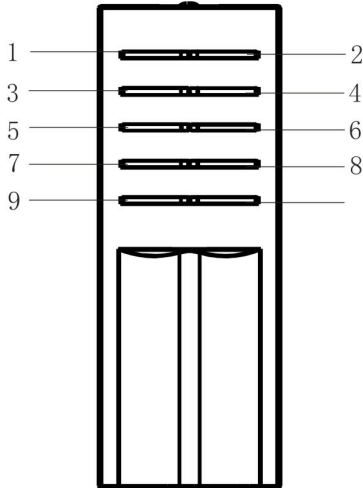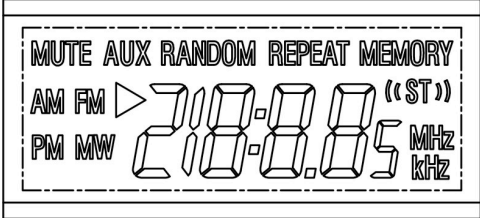
Function key description	LCD DISPLAY
	

1. **POWER** - Turn on and off the unit.
2. **MUTE** - Activate/Deactivate the audio mute.
3. **PLAY/PAUSE** - In CD mode, press once to start playing, press again to pause playback temporarily.
4. **STOP** ■ - STOP the playing status in play mode.
5. **REPEAT/RANDOM** - Play desired tracks repeatedly and randomly.
6. **PROGRAM** - To program the desired tracks.
7. **SKIP - FAST REV.** ◀◀ - Press and release to SKIP backward to the desired track.
8. **SEARCH - FAST FWD** ▶▶ - Press and release to SEARCH forward to the desired track.
9. **VOLUME-** - Decrease the VOLUME level.
10. **VOLUME+** - Increase the VOLUME level.



PLACING BATTERIES INTO THE REMOTE CONTROL

1. Press down on the compartment cover and slide the cover off to open the compartment.
2. Place two ("AA") batteries (not included) in the remote control according to the polarity markings ("+" and "-") inside the compartment and on the batteries.
3. Place the cover over the compartment, press down lightly, and push it upward until it snaps on.

 
MOUNTING AND BASE OPTIONS

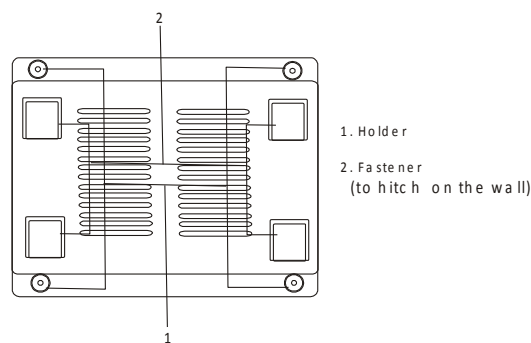

SPEAKERS

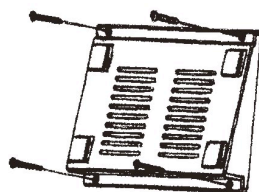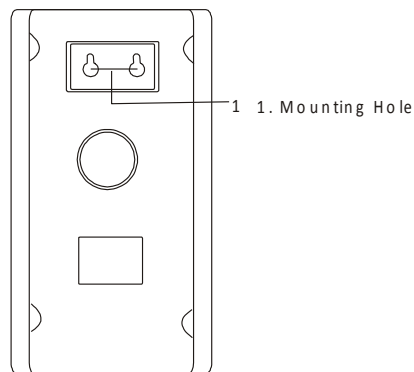  

 Hit the pedestal on the wall with $\Phi 3$ screw (such as $\Phi 3 \times 12BA$) X 4 as follow photo, do not may wrong the bearing,so you can hitch your main unit on the wall if you need.

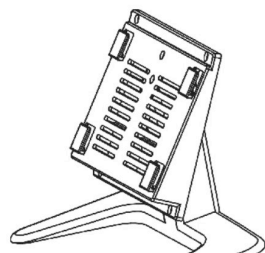

Pedestal with Mounting Plate

RADIO OPERATION

1. Set the function switch to **Radio**

FM

Select FM on the band selector switch. Turn the TUNING knob to select the station. The FM stereo indicator light will show a stereo broadcast is being received.

FM STEREO RECEPTION

For reception of a FM stereo broadcast station, set the AM/FM/FM ST. switch to FM ST. position. The FM ST. indicator on the LCD display will light up when a FM STEREO broadcast is being received.

AM

Select AM on band selector switch. Turn the TUNING knob to select the station. This set has a built-in AM antenna. It may be necessary to change the position of the unit for the best AM signal strength.

DISPLAY AND CLOCK ADJUSTMENT

When the clock function is outlined, the display will show the clock.

Adjusting the clock

1. Press the **PROGRAM** button to adjust clock when clock display.
 2. Press **SKIP** or **SEARCH** button to choose 12H or 24H.
 3. Press **PROGRAM** button to keep the selection of 12H or /24H and then go to the next clock adjustment mode.
 4. Press **SKIP** or **SEARCH** button to select the hour data.
 5. Repeat steps 3 and 4 to select the minute data.
 6. Press **PROGRAM** to set the clock.
-

CD OPERATION

1. Plug in the AC power plug.
2. Set the function switch to CD position.
3. Press **POWER** button to turn on the unit.
4. Open the CD cover by pressing the CD cover button.
5. Insert a CD disc in the CD compartment with the label side up.
6. Close the CD cover by gently pressing CD cover securely until it clicks.
7. ADJUSTING THE SOUND
Press the **VOLUME +/-** button to set the sound level.
For increased bass at all volume levels, switch the **BASS BOOST** on to boost the low frequency sound.
8. Press **PLAY/PAUSE** button to pause temporarily.
Press **PLAY/PAUSE** button during playback to pause temporarily.
Press **PLAY/PAUSE** button to resume playback from the point playback is interrupted.
9. Press and release the **SKIP** button or **SEARCH** button to search backward or forward to the desired track.
10. Press and hold the **SKIP** button or **SEARCH** button to search backward or forward to the desired point of the playback or track.
11. Press the **STOP** button to stop playing.
12. In the STOP mode, press the **PROG** button to start the memory function and "P01" will display. After a few seconds the "P01" will turn to "00" and then you can start to select the desired track number using the **SKIP** or **SEARCH** buttons. After selecting each track, press the **PROG** button to store the track into memory. Repeat this operation to memorize up to 20 tracks. Press **SKIP** button to start playing the tracks in order programmed. To cancel memorized tracks, press **STOP** button and open the CD cover by pressing the **CD** cover button.
13. Press **REPEAT/RANDOM** button to repeat function. Press **REPEAT/RANDOM** button once to repeat the same track only, and the "REPEAT" display will light up and flash. Press the **REPEAT/RANDOM** button twice to repeat all, and the "REPEAT" display will light up and not flash. To cancel repeat play, press the **REPEAT/RANDOM** button twice until the repeat indicator disappears.
14. Press **REPEAT/RANDOM** button to select random mode until RANDOM appear. All the tracks on the loaded CD will be played in random order. Playback will STOP automatically when all tracks have been played. To cancel random play, press the **REPEAT/RANDOM** button until RANDOM disappears.

AUX FUNCTION

 
Auxiliary mode allows you to play any audio device (e.g. MP3, Cassette player etc) through this unit using a 3.5mm to 3.5mm stereo audio cable

1. Use a 3.5mm male-to-male cable to connect the lineout or headphone out jack of an audio device to the AUX input jack.
2. Set the function button to the “**AUX**” mode.
3. Start playback on the external audio device.

To avoid distortion, do not set the VOLUME on the external audio device to a very high level.

CARE AND MAINTENANCE

1. Clean your unit with a damp (never wet) cloth. Solvent or detergent should never be used.
2. Avoid leaving your unit in direct sunlight or in hot, humid or dusty places.
3. Keep your unit away from heating appliances and sources of electrical noise.
4. Such as fluorescent lamps or motors. If dropouts or interruptions occur in the music during play, or if the disc fails to play at all. Its bottom surface may require cleaning. Before playing, wipe the disc from the center outwards with a good soft cleaning cloth.

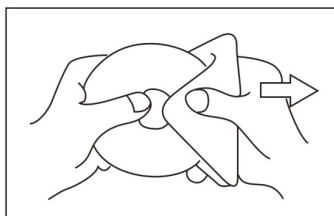

TROUBLESHOOTING

In case of trouble with the unit, please take the time to look through this chart and see if you can solve the problem yourself before you call your dealer

GENERAL Problems

No power

Check the connection to the AC power supply.

No sound from speakers.

Check the connection to the speakers.

Adjust the VOLUME.

Select proper source.

Pull out the headphones plug from PHONES jack.

If muting is on, press the MUTING button.

The sound is noisy.

The unit is too close to a TV set or similar appliances. Install the unit apart from them, or turn them off.

REMOTE CONTROL Problems

Remote control does not work.

If the batteries are exhausted, change the batteries.

Use remote control unit within the range and point at the front panel.

Clear obstacles between the remote control unit and the Player.

If a fluorescent light is near the unit, turn it off.

TUNER Problems

Cannot listen to any station, or signal is too weak.

Tune in the station properly.

If a TV is near the unit, turn it off.

Re-orient the antenna until reception improves.

The broadcast is stereo and the sound is monaural.

Press the FM MODE button.

CD PLAYER Problems

Cannot play.

Load a disc with label side facing you.

If the disc is dirty, clean the Surface of the disc.

One track is played repeatedly.

Press the REPEAT button to cancel the repeat mode.

Disc skips.

Place the unit on a stable place to avoid vibration and shock.

If the disc is dirty, clean the Surface of the disc.

Do not use scratched, damaged or warped discs.

SPECIFICATIONS

CD player

Pickup..... 3-beam pick-up
Frequency Response.....100Hz ~ 16 KHz

Tuner

FM frequency range..... 88-108MHz
AM frequency range.....530-1710 KHz
Antennas FM pigtail antenna
Built-in AM antenna

General

Output power.....2.2 W x 2
Design and specifications are subject to change without notice.
Photos and illustrations may differ slightly from production models.



LIMITED 90-DAY WARRANTY

We warrant this product to be free from defects in material and workmanship under normal use for a ninety-day period from the original date of purchase from an authorized ETEC dealer. We will repair or replace the unit free of charge should it become defective under this warranty, providing you, the original purchaser, submit proof of purchase (sales slip) along with the unit and all accessories.

During the ninety-day period from the original purchase date, we will service or exchange the unit at no charge. To obtain warranty service or replacement within the ninety-day warranty period, please return the product and all accessories to the original place of purchase.

For technical support, the ETEC Technical Support Center is available 24-hours a day, 7-days a week for technical assistance or troubleshooting. To contact us by phone, please call 1-800-936-1168.

This warranty does not cover any product which has been subject to damage due to an act of nature, misuse, neglect, accident, abuse, commercial use, or modification of, or to, any part of the product, including the antenna. Damage to any external media such as DVD, CD, and/or USB or other memory devices are not covered nor is the cost incurred in shipping the unit for warranty repair. Under no circumstances shall ETEC USA be liable for any loss (direct, indirect, incidental, foreseen, unforeseen, special or consequential) or for any damage arising out of, or in connection with, the use of this product.

UNDER NO CIRCUMSTANCES WILL ETEC USA BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES.

This warranty does not cover re-manufactured units, or product sold 'As Is'

This warranty is valid only to the original purchaser of the Product in the United States, Canada, and Mexico and grants specific legal rights.

