
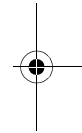






Cat. No. 22-801
OWNER'S MANUAL

Please read before using this equipment.

**35-Range Auto-Ranging
Digital Multimeter**

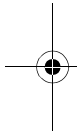

RadioShack®

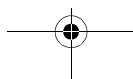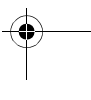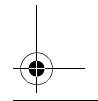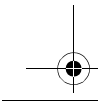

FEATURES

Your RadioShack 35-Range Auto-Ranging Digital Multimeter is a portable, compact multimeter that is ideal for field, lab, shop, bench, and home applications. The meter measures DC and AC current up to 10 A, voltage up to 1000V DC and 750V AC, resistance up to 40 M Ω , and capacitance from 4 nF–40 μ F. Its 3³/₄-digit digital display means it can display up to 3,999 units.

Important:

- Completely read this manual before you use the meter.
- If you are not familiar with multimeters and testing procedures, we suggest you read the book *Using Your Meter* (RadioShack Cat. No. 62-2039, not supplied) before you use this meter.

Here are some features that make your new multimeter a real pro:

Auto-Ranging with Manual-Ranging Override — automatically selects a range when you measure voltage, resistance, capacitance, or current. You can also manually set the range when measuring values you know are within a certain range.

Data Hold Function — the meter holds the displayed value, so you can see the reading even after you disconnect the probes.

High-Speed Sampling — ensures quick, reliable measurements.

© 1999 Tandy Corporation.
All Rights Reserved.

RadioShack is a registered trademark used by Tandy Corporation.

Auto Power Off — the meter helps conserve battery power by sounding a beep then turning off if you do not change any settings for 5 minutes.

UL Listed — your meter has passed the stringent safety tests required by Underwriters Laboratories.

Note: The UL mark does not indicate that this product has been evaluated by Underwriters Laboratories for the accuracy of its readings.

Latest IC and Display Technology — ensure reliability, accuracy, stability, and ease of operation.

Zero Function — lets you set the display to zero or to a reference point you select, then measure voltage, current, resistance, or capacitance around that reference.

Overload and Transient Protection — helps protect the meter from overvoltage in most ranges.

Continuity Buzzer Function — lets you quickly hear if there is continuity in a cable or between two points.

Diode Check Function — lets you safely check semiconductors for open, shorted, or normal junctions.

Auto-Polarity Operation — protects your meter and gives valid measurements even when you connect the leads in reverse polarity.

Low-Battery Indicator — so you can quickly see when you need to replace the batteries.

Protective Rubber Boot — protects the meter from damage and lets you hang the meter on a wall.

Note: Your multimeter requires one 9V battery (not supplied).

CONTENTS

A Word About Safety	6
Special Panel Markings	9
Specifications	10
Preparation	15
Installing a Battery	15
Connecting the Test Leads	18
Using the Stand	19
Using the Rubber Boot	19
About Ranging	20
Using the Meter	21
Manually Setting the Range	24
Holding a Measurement	24
Zeroing the Meter/Using Relative Measurement	25
Automatic/Manual Power Off	28
Disabling Automatic Power Off	28
Making Measurements	29
Measuring DC/AC Voltage	29
Measuring AC Voltage Riding on a DC Source Bias	30
Measuring Three-Phase AC Voltage	32
Measuring Current	33
Measuring Resistance	35
Measuring Capacitance	37
Checking Continuity	38
Checking Diodes	39
Checking Diode Polarity	40
Care and Maintenance	41
Cleaning	42
Replacing the Fuse	42
	5

A WORD ABOUT SAFETY

We have taken every precaution in designing this meter to ensure that it is as safe as we can make it. But safe operation depends on you, the operator. We recommend that you follow these simple safety rules:

- Never apply voltages to the meter that exceed the limits given in the specifications. Never apply more than 1000V DC or 750V RMS AC between the input jacks and ground.
- Use extreme caution when working with voltages above 100V. Always disconnect power from the circuit you are measuring before you connect test leads to high-voltage points.
- Never connect the test leads to a source of voltage when you select the diode check, resistance measurement, capacitance measurement, or continuity functions, or any of the current measurement functions.
- Always discharge any capacitors of the circuit under test before you attach test leads.
- Always turn off power and disconnect the test leads from the circuit you are testing before you replace the meter's batteries or fuse.
- Never operate the meter unless its back cover is in place and fully closed.
- This equipment is rated for installation category II (maximum 3600 VA).
- Because many AC/DC sets have a potentially hot chassis, be sure the top of your workbench and the floor underneath it are made of non-conductive materials.

This meter is fully calibrated and tested. Under normal use, no further adjustment should be necessary except as noted in this Owner's Manual. If the meter requires repair, do not try to adjust it yourself. Take it to your local RadioShack store.



 



WARNINGS:

- USE EXTREME CAUTION IN THE USE OF THIS DEVICE. IMPROPER USE OF THIS DEVICE CAN RESULT IN INJURY OR DEATH. FOLLOW ALL SAFEGUARDS SUGGESTED IN THIS OWNER'S MANUAL IN ADDITION TO NORMAL SAFETY PRECAUTIONS IN DEALING WITH ELECTRICAL CIRCUITS. DO NOT USE THIS DEVICE IF YOU ARE UNFAMILIAR WITH ELECTRICAL CIRCUITS AND TESTING PROCEDURES.
- NEVER TRY TO PROBE WITH BOTH TEST LEADS AT THE SAME TIME OR HOLD BOTH TEST LEADS IN ONE HAND.
- USE EXTREME CARE WHILE USING THE METER TO MEASURE CURRENT AND VOLTAGE IN COMMERCIAL ELECTRICAL PANELS. UNLIKE A HOME AC OUTLET, A COMMERCIAL ELECTRICAL PANEL HAS TREMENDOUS CURRENT SURGE POTENTIAL. THIS IS ESPECIALLY TRUE FOR THREE-PHASE INDUSTRIAL ELECTRICAL PANELS. A SMALL SPARK FROM ONE OF THESE PANELS CAN CAUSE A PLASMA EXPLOSION AND FIRE THAT CAN SEVERELY BURN YOU. DO NOT HOLD THE METER WHILE USING IT.

-
- ALWAYS WEAR PROTECTIVE LEATHER GLOVES, A FACE SHIELD, AND FIREPROOF ARM AND UPPER BODY PROTECTION WHILE USING THE METER TO MEASURE CURRENT AND VOLTAGE IN COMMERCIAL ELECTRICAL PANELS.
 - IF THIS EQUIPMENT IS USED IN A MANNER NOT SPECIFIED BY THE MANUFACTURER, THE PROTECTION PROVIDED BY THE EQUIPMENT MAY BE IMPAIRED.
 - TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.
 - FOR INDOOR USE ONLY.

SPECIAL PANEL MARKINGS

For your safety, we have added special markings to the meter's panel to remind you of the measurement limitations.

10 A MAX UNFUSED	The maximum current that you can measure at this terminal is 10 amps. Caution: This terminal is not fuse-protected.
500V MAX 	To avoid electrical shock or instrument damage, do not connect the common input terminal (-COM jack) to any source that exceeds 500 volts with respect to earth/ground.
	Caution: Risk of electric shock! Refer to the complete operating instructions.
1000V  750V  MAX	The maximum voltage that this meter can measure is 1000V DC or 750V AC.
	Caution: Be extra careful when making high-voltage measurements; DO NOT TOUCH TERMINALS OR PROBE ENDS.
	The meter is protected by double insulation.
CAT II	This equipment is rated for installation category II (max. 3600 VA).

SPECIFICATIONS

DC VOLTS (MAX MEASUREMENT: 1000V)

400 mV	±2.5% of full scale, ±2 in last digit
4–40–400 V	±2.0% of full scale, ±2 in last digit
1000 V	±20 V, ±2 in last digit

AC VOLTS (MAX MEASUREMENT: 750 V at 50–100Hz)

(AC Average Response, RMS Calibrated, DC Coupled)

400 mV	±3.5% of full scale, ±3 in last digit
4–40 V	±3.0% of full scale, ±3 in last digit
400 V	±3.0% of full scale, ±3 in last digit
750 V	±30 V, ±3 in last digit

DC CURRENT (MAX MEASUREMENT: 10 A)

400 μ A/40 mA	±2.5% of full scale, ±2 in last digit
4mA/400 mA	±2.0% of full scale, ±2 in last digit
4A	±2.5% of full scale, ±5 in last digit
10 A	±2.0% of full scale, ±5 in last digit

Note: Based on measurement within 30 seconds after 10 A input.

AC CURRENT (MAX MEASUREMENT: 10A AT 60 HZ)

(AVERAGE RESPONSE, RMS CALIBRATED, DC COUPLED)

400 μ A/40mA	$\pm 3.5\%$ of full scale, ± 3 in last digit
4 mA/400mA	$\pm 3.0\%$ of full scale, ± 3 in last digit
4A	$\pm 3.5\%$ of full scale, ± 3 in last digit
10 A	$\pm 3.0\%$ of full scale, ± 3 in last digit

Note: Based on measurement within 30 seconds after 10A input.

RESISTANCE

400 Ω /4/40/400 K Ω	$\pm 2.0\%$ of full scale, ± 3 in last digit
4 M Ω	$\pm 3.5\%$ of full scale, ± 3 in last digit
40 M Ω	$\pm 4.0\%$ of full scale, ± 3 in last digit

CAPACITANCE

4/40/400nF/4 μ F	$\pm 3.0\%$ of full scale, ± 3 in last digit
40 μ F	$\pm 4.0\%$ of full scale, ± 3 in last digit

Overrange Indication **O.F** (overflow) or **OL** (overload)

Caution: When **O.F** appears, it indicates that the measurement exceeds the range for the current setting. When **OL** appears, it indicates that the measurement exceeds the absolute maximum reading. Exceeding the maximum limits of the DC 1000V, AC 750 V, and DC/AC 10 A ranges can damage the meter and cause the meter to not show an overrange indication.

Operating Temperature 41 to 104°F (5 to 40°C)

Storage Temperature -4 to 140°F (-20 to 60°C)

Humidity Max. relative humidity 80% for temperature up to 31°C, decreasing linearity to 50% relative humidity at 40°C

Power Source One 9V battery

Battery Life (at 5 Min. Use Per Day) About 100 days

Battery Measurement Frequency Every time operational mode is changed

Pollution Degree 2

Conversions Per Second:

Min. 2

Max. 9

Max. Common Mode Voltage 500 V DC or 500 V RMS AC

Normal Mode Rejection Ratio > 60 dB at 60 Hz

Sleep Mode Timing 5 ±1.5 Minutes

Range Up Detect Value Overflow (>3999 Counts)

Range Down Detect Value 380 Counts

Dimensions (HWD) 7 × 3¹/₇ × 1⁷/₁₀ Inches
(178 × 80 × 43 mm)

Weight (without batteries) Approx. 10.6 oz (300 g)
Included Accessories Test leads
Extra 500 mA 250V Ceramic Fuse
(such as Littelfuse® 216.500)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

PREPARATION

INSTALLING A BATTERY

Your meter requires one 9 volt rectangular battery for power. For the best performance and longest life, we recommend a RadioShack alkaline battery.


Warnings:

- To avoid electrical shock, disconnect both of the meter's test leads from any equipment before you install or remove the meter's battery.
- Do not operate your meter until the battery is properly installed and the back cover is in place and secured.


Cautions:

- Use only a fresh battery of the required size and recommended type.
- Do not press **RANGE**, **SELECT**, or **HOLD/ZERO** while installing a battery.
- While the back cover is removed, do not touch any of the components inside the meter other than as noted in this Owner's Manual. Doing so might damage the meter or change its calibration.


Note: If the rubber boot has been attached to the meter, remove it before continuing (see "Using the Rubber Boot" on Page 19).

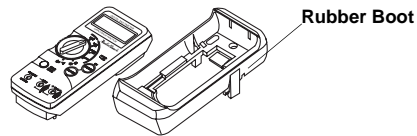

1. Turn off the meter if it is not already off (see "Automatic/Manual Power Off" on Page 28), then disconnect the test leads if they are connected.
2. Lift the stand on the back of the meter, then use a Phillips screwdriver to loosen the screw in the meter's back cover and lift off the cover.

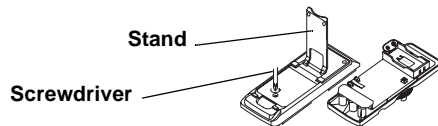


3. Snap one terminal of a fresh 9 volt battery onto one of the terminals in the battery compartment, then snap the other battery terminal onto the other battery compartment terminal.

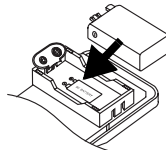

Caution: Connecting the battery to both of the battery terminals at the same time might cause the meter to lock up.

Note: If the meter automatically turns on, continue with Step 4. If the meter does not automatically turn on, press **SELECT**. If the meter still does not turn on, press **RESET** on the circuit board. The meter turns on.

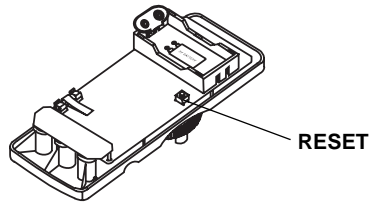

4. Replace the cover and secure it with the screw.

When **BATT** appears on the right side of the display, replace the battery.



Warning: Dispose of old batteries promptly and properly.

Cautions:


- Always remove an old or weak battery. Batteries can leak chemicals that can destroy electronic parts.
- If you are not going to use the meter for a few weeks, remove the battery.

CONNECTING THE TEST LEADS

The test leads supplied with your meter are rated for 1000 volts. Use only test leads of the same rating with the meter. You can order replacement leads from your local RadioShack store.

WARNING: ALTHOUGH THE TEST LEADS ARE RATED FOR 1000 VOLTS, THE MAXIMUM RATING OF THIS METER IS 1000 VOLTS DC/750 VOLTS RMS AC. DO NOT TRY TO MEASURE ANY VOLTAGE GREATER THAN 1000 VOLTS DC/750 VOLTS RMS AC.

Plug the black test lead's right-angled end into the meter's – **COM** (common) jack, then plug the red test lead's right-angled end into the **+V.mA.Ω** jack.

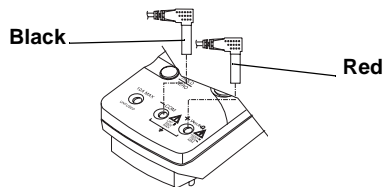

Caution: If the current in the circuit you are measuring is in the 10A DC/AC range or you do not know the amount of current in the circuit (see "Measuring Current" on Page 33), plug the red test lead's right-angled end into the **10A MAX** jack instead of the **+V.mA.Ω** jack, to help prevent damage to the meter.


USING THE STAND

The fold-out stand on the back of the meter lets you place the meter upright on a flat surface (as shown here) for easier viewing.




USING THE RUBBER BOOT

The rubber boot supplied with the meter helps protect the meter from damage. Simply slide the meter into the boot.

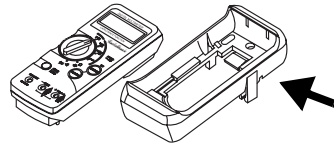

Use the clips on the back of the boot to store the test leads while you are not using them. The keyhole on the back of the boot lets you hang the meter on a wall.

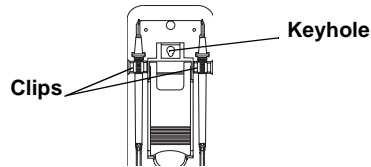

ABOUT RANGING

Your meter sets itself to its automatic ranging mode each time you turn it on. In this mode, the meter automatically selects the next higher or lower range (if available) when the measurement causes the display to *overflow* (the meter tries to display 4000 or more units) or *underflow* (the meter tries to display 380 or fewer units).

If a voltage or current measurement exceeds 4000 units, the meter might display **O.F** (overflow) then automatically select the next higher range (if available). For example, **3.200** appears when the meter measures a 3.2 V DC voltage. Then, if the voltage is increased to 4.1 volts, the meter might display **O.F** then change the range to the 40-volt range. (The tables on Pages 22 and 23 show what the meter displays when set to its different ranges).

If a voltage or current measurement falls below 380 units, the meter might display **UF** (underflow) then automatically select the next lower range (if available). For example, **4.50** appears when the meter measures a 4.5 V DC voltage. Then if the voltage is decreased to 3.799 volts, the meter might display **UF** then change the range to the next lower range.

Notes:

- You can also manually set the meter's range (see "Manually Setting the Range" on Page 24).
- Since the meter switches ranges quickly, you might not actually see **O.F** or **UF** on the display.


USING THE METER

For the most accurate readings, the temperature should be between 65°F and 83°F (18°C and 28°C), with a maximum of 80% relative humidity.

Before you use your meter for the first time, follow these steps to familiarize yourself with its operation.

Warning: Always turn off power to the circuit you are about to measure before you probe the test leads into high-voltage points.

Caution: Be sure to select the correct function before you touch the test leads to the circuit or component to be tested.

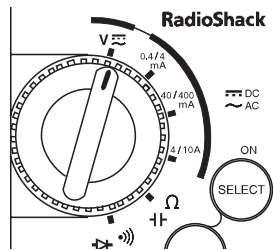

1. Press **ON/SELECT** to turn on the meter if it is not already on. **HELLO** flashes and:
 - if the selector is set to **V**, **0.4/4 mA**, **40/400 mA**, or **4/10A**, the meter sets itself to its DC/auto test mode
 - if the selector is set to **Ω**, **C**, or **L** appears
 - if the selector is set to **→**, **OPEN** appears
2. Set the selector to **V**.

3. Repeatedly press **RANGE** to set the meter to manual ranging so you can view the different measurement ranges. **AUTO** disappears and the decimal point shifts each time you press **RANGE**. See "Manually Setting the Range" on Page 24.

4. Turn the selector to change between the meter's functions and familiarize yourself with the displays.

Your meter automatically sets itself to the range that gives the best reading. The unit of measure that appears on the display shows you the range that the meter is currently set to. For example, **mV** appears in the 400 mV range and **V** appears in the 400 V range. Also, note the position of the decimal. For example, if **.000 V** appears, the meter is set to measure less than 4 volts. If **0000 V** appears, the meter is set to measure up to 1000 volts.

Read the range in volts, ohms, or amps as indicated by the position of the decimal point.

Range	Display
400 mV	ddd.d mV
4 V	d.ddd V
40 V	dd.dd V
400 V	ddd.d V
1000V DC	dddd V
750V RMS AC	ddd V
40 mA	dd.dd mA

Range	Display
400 mA	ddd.d mA
400 ohms	ddd.d Ω
4 KΩ	d.ddd κΩ
40 KΩ	dd.dd κΩ
400 KΩ	ddd.d κΩ
4 MΩ	d.ddd MΩ
4V (Fixed Range)	d.ddd V

Note: The display might show a phantom reading in some DC and AC voltage ranges when the test leads are not connected to a circuit. This is normal. The high input sensitivity produces a “wandering” effect. When you connect the test leads to a circuit, a real measurement appears.

5. Connect the test leads to the circuit you want to measure. To measure different circuits, see “Making Measurements” on Page 29.

Cautions:

- If **O.F** (overflow) appears, the value you are measuring exceeds the range for the setting you selected. This is normal when you measure resistance or a diode, or do not have the leads connected to a component. If you are measuring voltage or current when **O.F** appears, however, immediately disconnect the probes from the circuit.

- If **OL** (overload) appears, the value you are measuring exceeds the meter's maximum range. Immediately disconnect the probes from the circuit.

MANUALLY SETTING THE RANGE

When you measure voltages, resistance, or capacitance, your meter is preset to automatically select a measuring range. When you measure current, the meter is preset to automatically select a range within the limits of the selector's setting. While this feature is convenient, it might be faster to manually set the range when measuring values that you know are within a certain range.

To switch to manual range control, press **RANGE**. **AUTO** disappears and the meter holds the range at its current setting. To change the range, repeatedly press **RANGE**.

To reselect automatic range control, press **SELECT**. **AUTO** appears and the meter automatically selects the range that gives the best reading.

HOLDING A MEASUREMENT

Press **HOLD/ZERO** to hold all indications on the display. **DH** (display hold) appears and the meter holds the measured value on the display even if you remove the probes from the circuit.

Note: You cannot change the selected range while the meter is holding a measurement.

To cancel hold, press **HOLD/ZERO** again or set the selector to another setting. **DH** disappears.

ZEROING THE METER/USING RELATIVE MEASUREMENT

You can set the meter to have it not show an unwanted value that might appear as a result of internal or other factors, called *zeroing*. For example, the meter always shows a small value when you set the selector to Ω to measure capacitance, even when you have not connected the test leads to a component. (This happens because the meter measures its own internal capacitance, which is normal). If you zero the meter, it does not display this value when you measure a component.

You can also set the meter to a baseline reference value called *relative measurement*. For example, if you are measuring resistors with a 100 ohm rating and you want to see the resistor's tolerance (the actual value in ohms above or below the resistor's rating), you can set the meter to a baseline reference value of 100 ohms so it displays only the resistor's tolerance.

Caution: Your meter has a circuit to protect the resistance range from over-voltage. However, to prevent accidentally exceeding the protection circuit's rating and to ensure a correct measurement, never connect the test leads to a source of voltage while the selector is set to Ω , 0.4/4 mA, 40/400 mA, or 4/10A. This could damage the meter or the circuit being tested.

Note: To use the zero feature in higher ranges, manually select the range before you short the leads together.

Follow these steps to zero the meter or use relative measurement.

1. Set the selector to any setting except $\nabla \cdot \cdot \cdot$.
2. Touch the test leads together (if you are zeroing the meter) or connect the test leads to the component whose measurement you want to use as a reference value (if you are using relative measurement).

Note: Do not short the test leads together in Steps 2 and 3 if you are measuring capacitance.

3. While touching the test leads together or while the test leads are connected to a component, hold down **HOLD/ZERO** until **DH** appears and the value on the display stops changing. Then hold down **SELECT** until **REL** appears and **AUTO** and **DH** disappear.

The meter automatically subtracts the value on the display from the next measurement you make.

4. Use the meter to make a measurement.


Notes:

- If the reference value you measured in Step 2 is greater than the value of the measurement you made in Step 4, the meter shows a negative value. This is not a malfunction.
- You must zero the meter or set a new reference value each time you change the range or mode.
- The meter automatically sets itself to manual ranging when you use this function.
- **o.F** appears as usual if you measure values outside of the meter's currently set range.
- You cannot zero the meter to an out-of-range value.
- If you are using the meter to take a relative measurement, repeat Steps 2–3 to set the reference value to the current input value.
- The meter displays values greater than 4000 counts as long as the range used is not an overflow range. (A count is the smallest unit of measure that the meter can measure). For example, if you store -3.5 volts as a reference, then measure $+3.5$ volts, the meter might display 7.0 volts.

To reset zeroing or a relative measurement, press **SELECT** or **RANGE** to change the current range or set the selector to another setting.

AUTOMATIC/MANUAL POWER OFF

Your meter conserves power by automatically turning off about 5 minutes after the last time you changed settings (even if you are making measurements). **OFF** appears and the meter beeps as it turns itself off.



To turn the meter back on after it automatically turns off, press any button (**SELECT**, **RANGE**, or **HOLD/ZERO**).

To manually turn off the meter before it turns itself off, make sure the selector is *not* set to $\rightarrow \bullet \rightarrow$, then press **HOLD/ZERO**. **DH** appears. Then hold down **RANGE** until **OFF** appears. When you release **RANGE**, the meter beeps then turns off.

Disabling Automatic Power Off

To set the meter so it does not turn off automatically, make sure the meter is turned off. Then hold down **RANGE** and **SELECT** at the same time until the meter turns on and **PLoc** (power-lock) appears.

To turn off the meter and reset it so it automatically turns off the next time you turn it on, follow these steps.

1. Press **HOLD/ZERO**. **DH** appears.
2. Hold down **RANGE** until **OFF** appears, then release **RANGE**. The meter beeps then turns off.
3. Press any key to turn on the meter.


 

MAKING MEASUREMENTS

MEASURING DC/AC VOLTAGE


Warnings:


- Never clamp a test lead to a hot wire (usually red, black, or blue in AC wiring circuits). If one lead is clamped to a hot wire and you touch the meter's other probe, you could receive an electric shock.
- The maximum input limit for voltage measurement is 1000V DC or 750V AC (RMS). To avoid electrical shock and damage to the meter, never try to measure a DC voltage above 1000 volts or an AC voltage above 750 volts RMS.

Follow these steps to measure AC or DC voltage.

1. Set the selector to **V** .
2. Hold down **SELECT** to set the meter to measure AC voltage ( appears on the left side of the display) or DC voltage ( disappears).
3. Touch the test leads to the circuit you want to test. If the meter is set to automatic range control, the meter automatically moves to the range that gives the best reading.

If you set the meter to use manual range control (see Step 3 under "Using the Meter" on Page 21), repeatedly press **RANGE** to change the range (if necessary).

When you measure AC voltages,  appears on the left side of the display and **V** or **mV** appear on the right side.

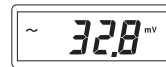

When you measure DC voltages, \sim does not appear on the left side of the display.

Note: In the 400 V and 400 mV ranges, the decimal point appears in the same position (one place to the left). To distinguish between the two ranges, mV appears in the 400 mV range, and V appears in the 400 V range.



MEASURING AC VOLTAGE RIDING ON A DC SOURCE BIAS




To measure AC voltage superimposed on a DC voltage source bias while ignoring the DC voltage, you must first measure the AC and DC voltages separately, then compute the peak voltage using this formula:

$$\text{Peak voltage} = \text{DC voltage} + \text{AC voltage}/0.707$$

Warning: To avoid injury or damage to your meter, never try to measure an AC voltage that is riding on a DC source bias where the peak AC voltage exceeds 750V with respect to earth ground.

Follow these steps to measure an AC voltage superimposed on a DC voltage source bias.

1. Press **SELECT** to turn on the meter if it is not already on.

-
2. Set the selector to **V** .
 3. Hold down **SELECT** to set the meter to measure DC voltage ( disappears).
 4. Touch the test leads to the circuit you want to test and note the reading. The display shows the DC voltage.
 5. Disconnect the test leads from the circuit.
 6. Remove power from the circuit under test and discharge all capacitors.
 7. Hold down **SELECT** to set the meter to measure AC voltage ( appears).
 8. Connect a 0.1 microfarad/1000V capacitor in series with the positive terminal of the voltage source and the red test lead.
 9. Connect the black test lead to ground, then connect power to the circuit you want to measure and note the reading. The display shows the AC voltage.
- Warning:** To avoid electric shock, never touch the circuit and test terminals while testing.
10. When you finish measuring the AC voltage, disconnect the power from the circuit under test then disconnect the capacitor you connected in Step 8.

Measuring Three-Phase AC Voltage

We designed this meter primarily to measure household AC voltages. If you want to measure 3-phase, line-to-line voltages, please note the following:

- Because of the dangers inherent in measuring three-phase circuits, we strongly recommend you do not use this meter for such applications.
- The actual voltage can be greater than the circuit's rated line-to-ground voltage.

Most 3-phase power circuits are rated by their *line-to-line* voltage. This voltage is higher than the line (or phase) to ground voltage. To determine if a line-to-line 3-phase voltage exceeds the rating of this meter, multiply the rated line-to-ground voltage by 1.732 (the square root of 3). For example, if the rated line-to-ground voltage is 640 volts, the line-to-line voltage is $640 \times 1.732 = 1108 \text{ V AC}$.

Warning: This voltage exceeds the meter's rating. Therefore, you should not connect the meter to this circuit or to any equipment connected to the circuit. Doing so could present a dangerous shock hazard to you, and could also damage the meter.

MEASURING CURRENT

To measure AC or DC current, you must break the circuit and connect the test leads to two circuit connection points. The connection must be in series with the circuit under test.

Warning: The meter's internal components might become dangerously hot if you measure current in the 10 A DC/AC range. Make measurements within 30 seconds after you connect the meter to the circuit and allow the meter to cool for 15 minutes between measurements.

Cautions:

- Never connect the test leads across a voltage source. Doing so can damage the meter or the circuit under test. The maximum input limit for AC/DC current measurement is 10 A.
 - If you do not know the amount of current in the circuit you are measuring, always set the selector to **4/10 A** and connect the red test lead to the **10A MAX** jack.
1. Set the selector to **0.4/4 mA**, **40/400 mA**, or **4/10A**.
 2. Hold down **SELECT** to set the meter to measure AC current (⎓ appears) or DC current (⎓ disappears).
 3. Remove power from the circuit under test and discharge all capacitors.
 4. Plug the black test lead into the **-COM** jack and the red test lead into the appropriate jack.

5. Connect the meter's test leads in series with the circuit.
6. Apply power and read the current.
7. If the measurement is less than 400 mA, the red test lead is connected to **10A MAX**, and the selector is set to **4/10A**:
 - a. Remove power from the circuit
 - b. Move the red test lead to the **+V.mA.Ω** jack
 - c. Set the selector to **40/400 mA**
 - d. Reapply power to the circuit.

Otherwise, if the measurement is less than 4 mA, the red test lead is connected to the **+V.mA.Ω** jack, and the selector is set to **40/400 mA**:

- a. Remove power from the circuit
- b. Set the selector to **0.4/4 mA**
- c. Reapply power to the circuit.

If the measured current's polarity is negative, **■■■** appears before the value.

Notes:

- If your measurement exceeds the currently selected range, **O.F** appears until the measured voltage or current is reduced to a value below the currently selected range. If your measurement exceeds the absolute maximum reading and the selector is set to **4/10A**, **OL** appears until the measured voltage or current is reduced to a value below the absolute maximum reading.

- The 0.4/4 mA and 40/400 mA ranges are fuse-protected. If the meter does not show a reading in these ranges, check the fuse (see "Replacing the Fuse" on Page 42).

MEASURING RESISTANCE

The resistance measuring circuit in your meter compares the voltage gained through a known resistance (internal) with the voltage developed across an unknown resistance.

Warning: Be sure the circuit under test has all power removed and any associated capacitors are fully discharged before you make a resistance measurement.

Caution: Your meter has a circuit to protect the resistance range from over-voltage. However, to prevent accidentally exceeding the protection circuit's rating and to ensure a correct measurement, never connect the test leads to a source of voltage while the selector is set to Ω .

Follow these steps to measure resistance.

1. Remove all power from the circuit under test and discharge all capacitors.
2. Set the selector to Ω .

Caution: Never connect the test leads to a source of voltage while the selector is set to Ω .

3. Hold down **SELECT** to set the meter to measure resistance. Ω , $k\Omega$, or $M\Omega$ appears.

Note: With no resistance connected across the test leads (meaning resistance is infinite), **O.F** appears when you set the meter to measure resistance. This is normal.

4. Touch the test leads across the circuit you want to measure, or remove one of the leads of the component you want to measure from its circuit and touch the test leads across the component. If the meter is set to automatic range control, it automatically moves to the proper range.

If you selected manual range control, repeatedly press **RANGE** to change the range (if necessary).

Notes:

- If you are measuring resistance of about 1 M Ω or more, the display might take a few seconds to stabilize. This is normal.
- As with the voltage range, use the measuring units that appear on the display to determine the current resistance range. If only Ω appears, the values of the measurements are in ohms. If **k** and Ω appear, the meter is measuring kilohms (1 kilohm = 1000 Ω). If **M** and Ω appear, the meter is measuring megohms (1 megohm = 1,000,000 Ω).

Hint: If you want to accurately measure a very small resistance, you can view the resistance of the meter's test leads and fuse, then subtract that resistance from the measured value. To measure the meter's internal resistance, simply touch the ends of the test leads together. The meter selects the 400 Ω scale and displays its internal resistance. You can also use the meter's zero feature to do this (see "Zeroing the Meter/Using Relative Measurement" on Page 25).

MEASURING CAPACITANCE

The capacitance measuring circuit in your meter charges a connected capacitor to a specific voltage level, then discharges the capacitor to a lower voltage. The meter measures the amount of time it takes to discharge the capacitor.

1. Remove all power from the circuit under test and discharge all capacitors.
2. Set the selector to $\text{F} \Omega$.
3. Hold down **SELECT** to set the meter to measure capacitance. nF or μF (a capacitance range) appears on the right side of the display.
4. Attach the red test lead to the positive side of the capacitor and attach the black test lead to the negative side of the capacitor. Or, remove one of the leads of the capacitor you want to measure from its circuit and connect the test leads to the capacitor.

Note: Electrolytic capacitors have positive and negative terminals. Be sure to connect each test lead to the correct terminal to match the polarity of these capacitors.

5. Read the measured value on the display.

Notes:

- The voltage applied across electrolytic capacitors will affect their measured values. That is, a measurement taken with a low voltage will be different and lower than that taken with a voltage that approaches the capacitor's voltage rating.

Since this meter cannot use high voltage to set the electrolyte, it cannot measure the absolute value of capacitance.

- Low value capacitors might match or be close to the actual input capacitance of your meter. To measure low capacitance values, use the meter's zero feature to adjust the meter for the meter's own capacitance (see "Zeroing the Meter/Using Relative Measurement" on Page 25).
- The accuracy of capacitance measurement depends on the measurement method and also differs with different types of capacitors. The readings as shown on the meter's display are consistent to $\pm 3\%$ percent and ± 3 digits. However, the meter's measurement is for reference only.

CHECKING CONTINUITY

You can use the meter to check for shorted or open electrical circuits.

1. Remove all power from the circuit under test and discharge all capacitors.
2. Set the selector to $\rightarrow \bullet \cdot \cdot \cdot$.
3. Hold down **SELECT** until $\bullet \cdot \cdot \cdot$ appears on the left side of the display.
4. Touch the test leads across the circuit you want to measure. **SHrt** appears and the buzzer sounds if the circuit resistance is less than about 50 ohms (meaning the circuit is continuous or shorted). **OPEn** appears and the meter's buzzer does not sound if the circuit resistance is greater than about 50 ohms (meaning the circuit is not continuous).

CHECKING DIODES

This procedure lets you check diodes, transistors, and other semiconductors for opens, shorts, and normal operation. It also lets you determine the forward voltage and polarity for diodes. (This is handy when you need to match a diode.) You can also check LEDs using this procedure.

Caution: Do not connect the test leads to a source of voltage with the selector set to $\rightarrow \nabla \cdot \cdot \cdot \rangle$). This could damage the meter or the circuit being tested.

1. Remove all power from the circuit under test and discharge all capacitors.
2. Set the selector to $\rightarrow \nabla \cdot \cdot \cdot \rangle$.
3. Hold down **SELECT** until $\rightarrow \nabla$ appears.
4. Connect the test leads to the device you want to check, or remove one of the leads of the component you want to measure from its circuit and connect the test leads to the component.
5. Reverse the test leads and note the second reading.


If one reading shows a value and the other is overrange (**O.F** appears) the device is good. If **O.F** appears during both readings, the device is open. If both values are very small or zero, the device is shorted.

Notes:

- When you test a silicon-type semiconductor, the values might vary depending on the temperature.
- The values that appear during a diode check show the actual forward voltage (max. 2.0V). If the voltage exceeds 2.0V, o.∞ appears. This means the diode check cannot be made using this meter.

Checking Diode Polarity

Many diodes have a stripe or mark on one side. The marked side of the diode indicates the diode's *cathode* or negative (-) side. The other side is the anode or positive (+) side.

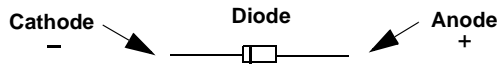

If a diode is not marked, you can use your meter to check the diode's polarity. As you follow the steps under "Checking Diodes" on Page 39, connect the red test lead to one side, connect the black test lead to the other side, then measure and note the voltage. Then reverse the test leads and measure and note the second reading. The side of the diode where the meter shows a higher voltage using the red test lead is the anode (+) side.

CARE AND MAINTENANCE

Your RadioShack 35-Range Auto-Ranging Digital Multimeter is an example of superior design and craftsmanship. The following suggestions will help you care for your meter so it will serve you for years.



Keep the meter dry. If it gets wet, wipe it dry immediately. Liquids might contain minerals that can corrode the electronic circuits.



Use and store the meter only in normal temperature environments. Temperature extremes can shorten the life of electronic devices, damage batteries, and distort or melt plastic parts.



Keep the meter away from dust and dirt, which can cause premature wear of parts.



Handle the meter gently and carefully. Dropping it can damage circuit boards and cases and can cause the meter to work improperly.



Use only a fresh battery of the required size and recommended type. Batteries can leak chemicals that damage your meter's electronic parts.



Wipe the meter with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the meter.

Modifying or tampering with the meter's internal components can cause a malfunction and might invalidate its warranty. If your meter is not performing as it should, take it to your local RadioShack store for assistance.

CLEANING


To keep the meter looking new, occasionally wipe it with a cloth slightly dampened with water. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the meter.

Warnings:

- Do not let any water drip inside the meter while cleaning it.
- Make sure that the meter is completely dry before using it.

REPLACING THE FUSE

If the meter does not work, you might need to replace the fuse with the spare fuse we have included with your meter. The spare fuse is next to the battery compartment.

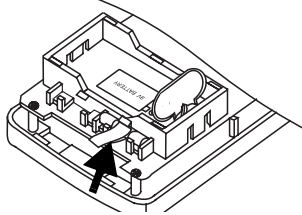

The fuse is a 500 mA, 250V ceramic fuse (such as Littelfuse® 216.500).


Caution: Do not use a fuse with ratings other than those specified here. Doing so might damage your meter.

Follow these steps to replace the fuse.


1. Turn the meter off if it is not already off (see "Automatic/Manual Power Off" on Page 28), then disconnect the test leads if they are connected.



Warning: To avoid electric shock, you must disconnect the test leads before you remove the back cover.

2. Lift the stand on the back of the meter. Then use a Phillips screwdriver to loosen the screw in the back cover and lift off the cover.

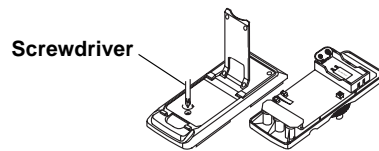






3. To remove the fuse, gently pull the red ribbon holding it. The fuse pops out.

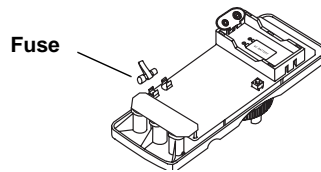

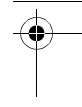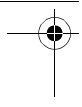




4. If the fuse is blown, discard it and save the ribbon (to use with the next spare fuse you store in the compartment). Then remove the spare fuse and the ribbon holding it from beside the battery compartment and insert it into the fuse holder.
5. Replace the back cover and secure it with the screw.







Warning: Do not operate your meter until the back cover is in place and secured.




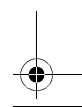
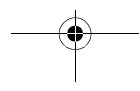
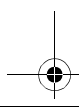
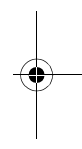
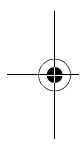




NOTES

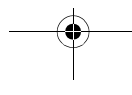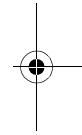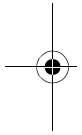

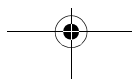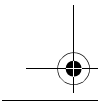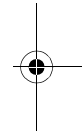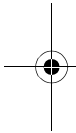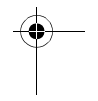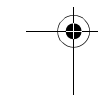

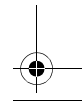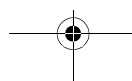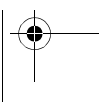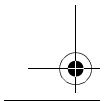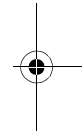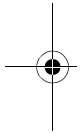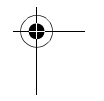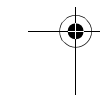

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

04/99

12A99

811082200A
Printed in China