


# SHARP®

COLOUR TELEVISION

MODEL

**CX51HF3**

■ OPERATION MANUAL ■

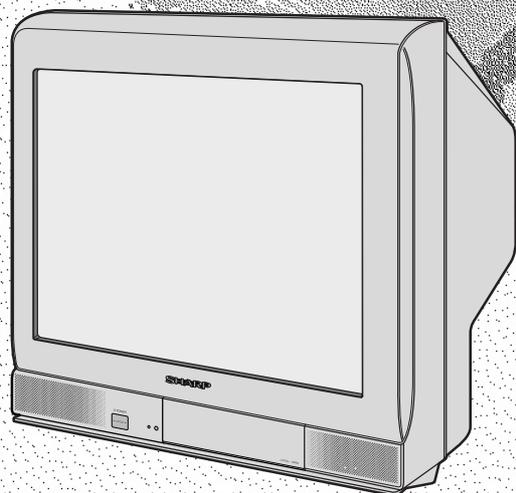


Please read this operation manual carefully before using the colour television.

# Contents

 <b>Preparation</b>	
Accessories .....	2
Easy setup .....	3
Safety precautions .....	4
Part names .....	6
Installing batteries in the remote control unit .....	6
 <b>Watching TV</b>	
Watching a TV programme .....	8
Operating the TV buttons .....	9
 <b>Useful features</b>	
Channel/Timer display .....	10
Mute .....	10
Channel recall .....	11
TV/Video selection .....	11
 <b>Selecting menu items</b>	
Selecting a menu item .....	12
 <b>Settings and adjustments</b>	
On-screen display language selection .....	13
Manual channel tuning .....	14
Auto channel tuning .....	15
Channel setting .....	16
Picture adjustment .....	17
Blue screen .....	18
Off timer .....	19
On timer .....	20
Reminder on-screen timer .....	21
 <b>Connections</b>	
Connecting to an antenna .....	22
Connecting to an antenna via a VCR .....	22
Connecting to video equipment .....	23
 <b>Troubleshooting</b>	
Troubleshooting .....	24
 <b>Specifications</b>	
Specifications .....	25


## Dear SHARP Customer

Thank you for buying SHARP's Colour Television. We hope you will have many years of enjoyment from this television set. To ensure proper operation, please read this manual carefully, and keep it in a safe place for future reference.

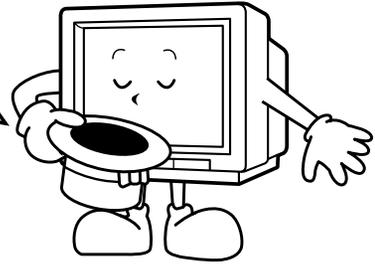


## Accessories

The following accessories are included with this television.

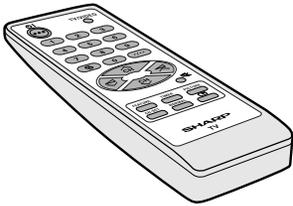

Remote control

 

Size-AA batteries



Operation manual




# Easy setup

To use your TV set, perform the easy setup procedure below.

The  mark indicates the page numbers with more detailed information.


**1**

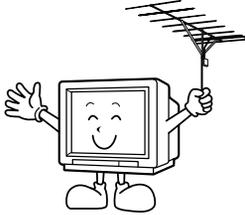

## Connect the antenna.

- See  to connect the antenna.


**2**

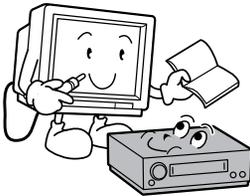

## Connect any video equipment.

- See  ,  to connect video equipment.
- See the operation manual of your video equipment when connecting to the TV set.

**3**

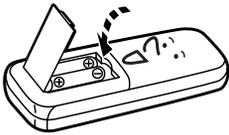

## Insert the batteries into the remote control.

- Use the two batteries included with the TV.
- See  .


**4**



## Insert the AC plug to the power outlet.

- If you will not use the TV set for a considerable length of time, as a safety precaution, unplug the cord from the outlet.

**5**

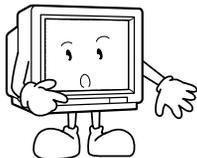


## Tune the channels.

- Use the buttons on the TV.
- See  ,  .




# Safety precautions

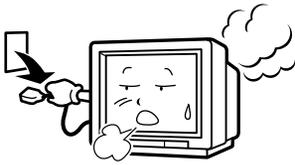


## Damage

Turn off the power and unplug the power cord from the wall outlet immediately if the TV set begins to make any unusual noises or gives off smoke or an unusual smell. Then call your dealer for service.

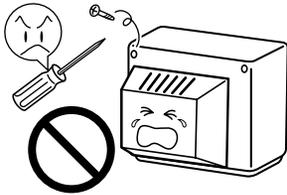

## Servicing

To reduce the risk of electric shock, do not remove the back of the cabinet. This TV set contains dangerous voltage.

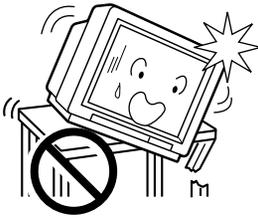

## Unstable surface and shocks

Do not place this TV set on an unstable cart, stand, shelf, or table. The TV set may fall, causing serious injury to a child or adult, and serious damage to the set.

Sharp recommends securing the TV set to a stable surface or wall to prevent the set from falling due to sudden shocks or impact.




## Water

To prevent fire or electrical shock, do not place the TV set near a bathroom, swimming pool or other area where it may become wet.



## Moisture

To prevent electrical shock, do not use the TV set in an excessively damp place.

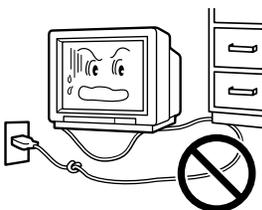

## Power-cord protection

To prevent electrical shock, do not subject the AC power cord to damage by bending or twisting it, or by placing heavy items on top of it and do not place the AC power cord under the TV set. If the AC power cord becomes damaged, unplug it from the wall outlet immediately and call your dealer for service.

## Safety precautions



### Liquid entry

Do not place a flower vase or anything else containing liquid on the TV set, as liquid spilt on the TV set can cause electrical shock or failure.




### Object entry

Never insert or drop any metallic or inflammable objects into the ventilation openings of the TV set, as this can cause fire, electrical shock, or electrical failure.



### Ventilation

Do not place this TV set in a confined area, such as on a bookshelf or in a built-in case. Leave adequate space behind the TV for proper ventilation.

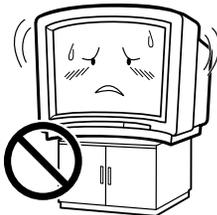

### TV Set position

Do place the TV set onto an even stand, table or track which size is bigger than the TV set. If the TV set is put onto a smaller size or uneven stand, table or track may cause the TV cabinet distort. Do not put or insert anything between TV set and the stand, table or track.



### Uneven surface and excessive force

Television equipment and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the equipment and cart combination to overturn.



### Fire prevention

To prevent fire, never place any type of candle or naked flames on the top or near the TV set.




# Part names

The  mark indicates the page numbers with more detailed information.

## Remote control

### Infrared transmitter window


Aim this window at the infrared sensor window on your TV set.

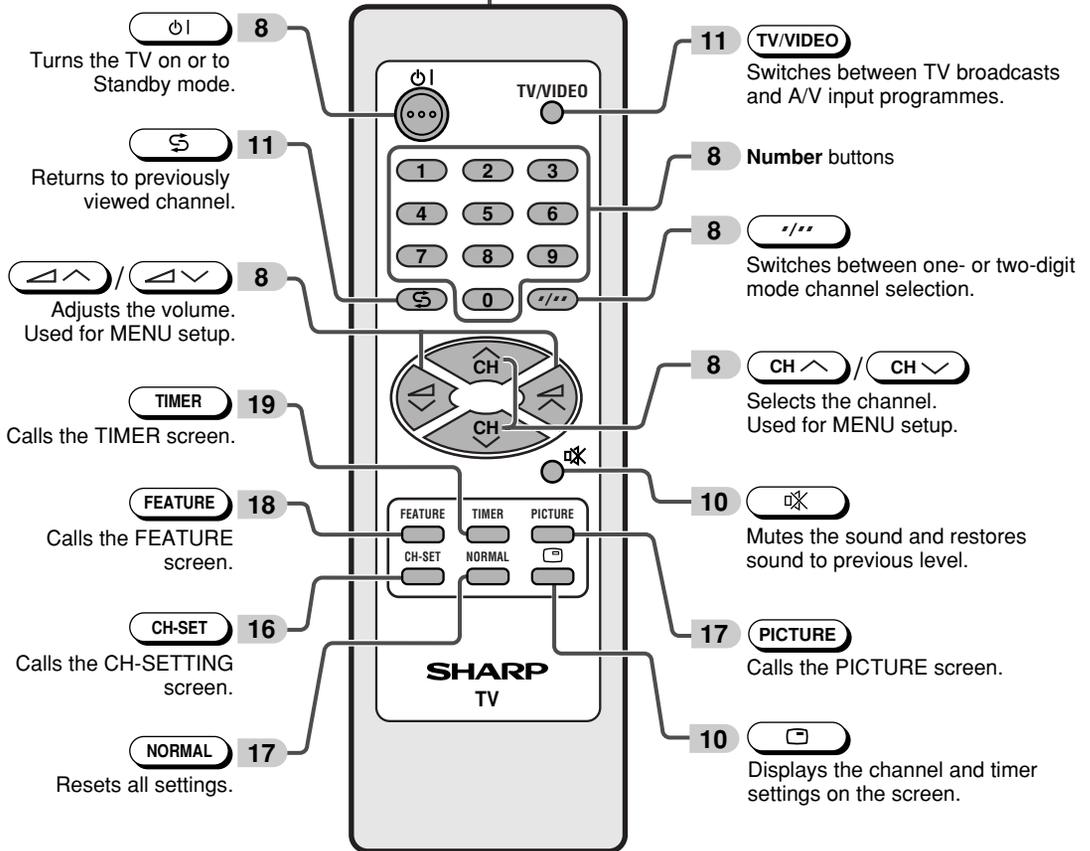

## Installing batteries in the remote control unit


**1**

With your thumbnail, pull up at the slit to open the battery cover.

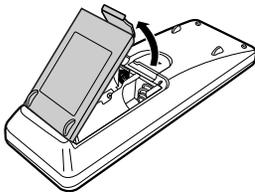


**2**

Insert two batteries (size AA).

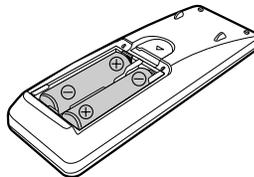

**3**

Replace the battery cover.

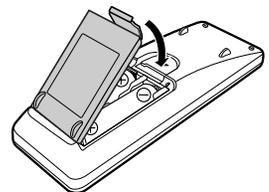


### NOTE

- Be sure to match the battery ⊕/⊖ terminals with the ⊕/⊖ marks inside the compartment.
- Remove the batteries if weak or if the unit is not in use for long periods.
- Do not mix old and new batteries.
- Incorrect installation of the batteries may damage the remote control.

## Part names


### TV set

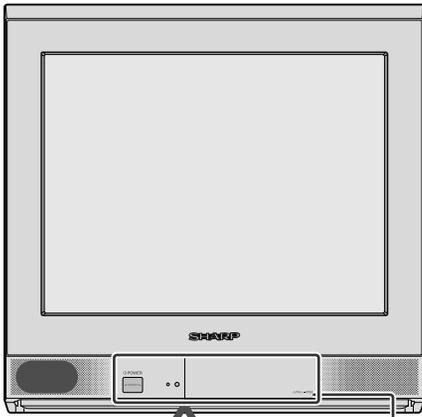

Door


#### To open the door

 Using the projection located under the "PULL-OPEN" indication, pull and lift the door open.




#### To close the door

 Using the projection, lower the door until closed.




#### Caution:

- When opening or closing the door, do not insert your fingers into the gap between the door and front panel. This may result in an injury.

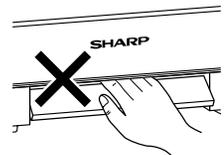

### Bottom

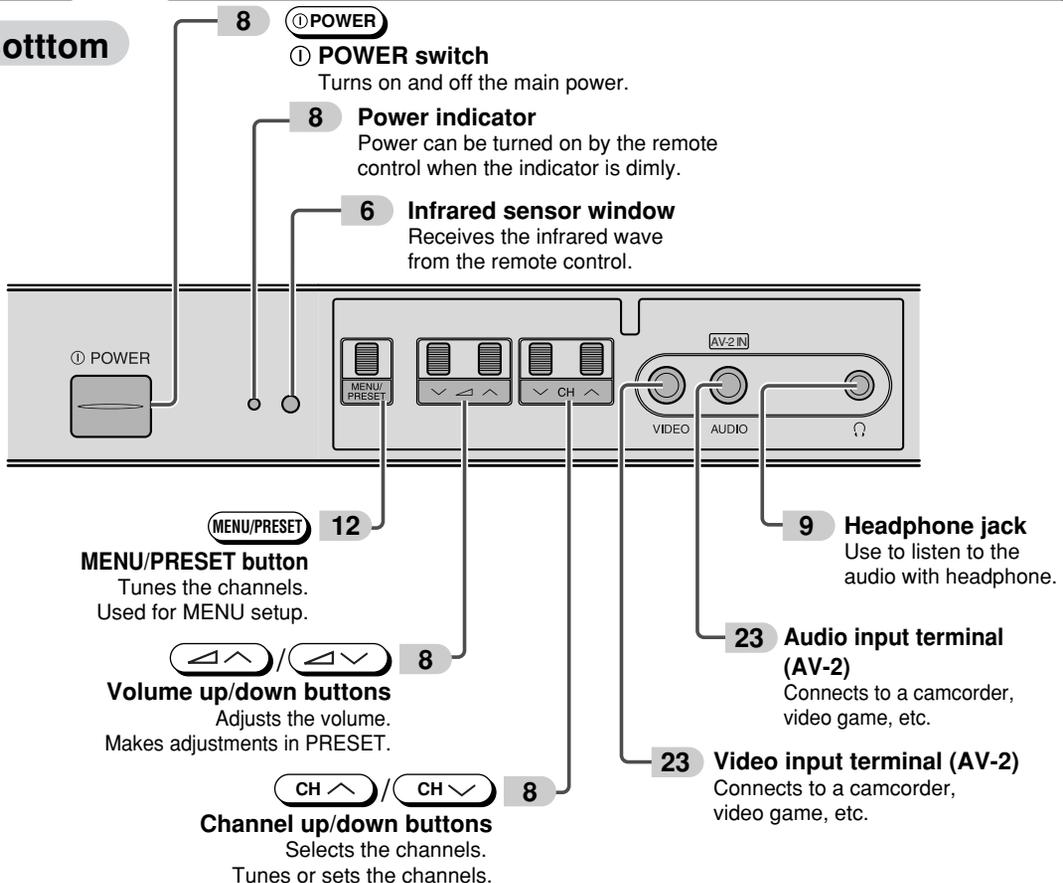


**NOTE** • When using headphone, see **9**.





# Watching TV

## TV Set

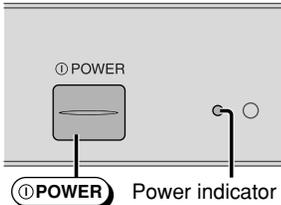

## Behind the door

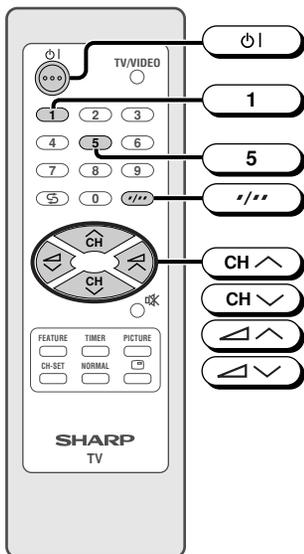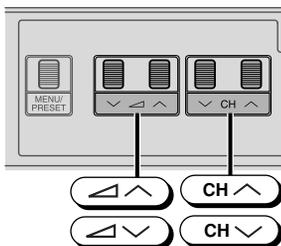

## Watching a TV programme

### Simple operations for watching a TV programme

#### 1 Turn on power.

- When the power indicator is off, press **POWER**.
- When the power indicator lights up dimly, press **⏻** on the remote control. The power indicator changes to bright and a picture appears.


#### 2 Select channel.

With **CH ^** / **CH v**

- Press **CH ^** and channels change as shown below.  
1 → 2 → ... → 98 → 99 → AV1 → AV2 → 0 → 1 → 2 ...
- Press **CH v** and channels change as shown below.  
1 → 0 → AV2 → AV1 → 99 → 98 → ... → 2 → 1 → 0 ...

With the number buttons (on remote control)

- To select a one-digit channel, such as 5, press **5**.  
If "5-" is indicated, press **\*/\*\*** to select one-digit input, and then press **5** again.
- To select a two-digit channel, such as 15, press **\*/\*\*** to select the two-digit input. Press **1**, and then press **5**.

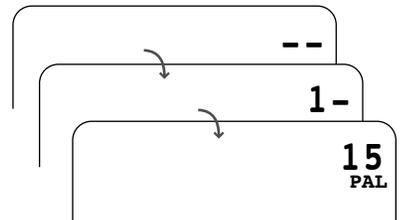

#### 3 Adjust volume using **▲** / **▼**.

- The number of oval blocks "█" indicates the volume level.  
The volume bar disappears approximately three seconds after the volume has been adjusted.




- NOTE**
- When the power indicator lights up dimly, either **CH ^** / **CH v** on the TV can be pressed to turn on the power.
  - The channel number is displayed in green for channels tuned by auto tuning and displayed in yellow for channels tuned using fine tuning.
  - When the power indicator lights up dimly, the TV is in Standby mode and power is still supplied to the TV. If you will not watch TV for a while, turn off the main power by pressing **POWER** on the TV set. Also, if you will not be at home for a considerable length of time, unplug the cord from the outlet.
  - The AV1 and AV2 input channels cannot be selected using **CH ^** / **CH v** on the remote control. Use **TV/VIDEO** to select these channel.
  - Channels that have been skipped cannot be selected by **CH ^** / **CH v**. See **16**.
  - The on-screen displays in this manual may differ from their actual appearance.

## Operating the TV buttons

### Simple operation of the TV set


#### Behind the door

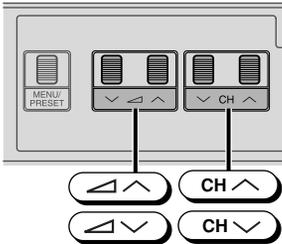

Using  / 

Press  to increase volume.

Press  to decrease volume.

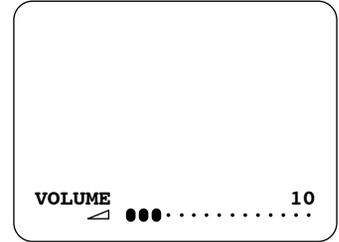


Using  / 

Press  to increase channel number.

Press  to decrease channel number.



#### Behind the door

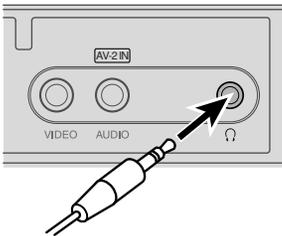

### Using headphone

Insert headphone plug into headphone jack to listen to audio with headphone.

- The audio from the speakers is turned off.

#### NOTE


- Select an appropriate volume so as not to injure your hearing.
- To avoid injuring your hearing, do not put on the headphone before plugging them into the headphone jack and before the power is turned on.
- The proper impedance for the headphone is 32 ohms.
- Remove the headphone plug from the jack when not using the headphone.



# Useful features


## Channel/Timer display

Displays the current channel number, the timer, and other settings on the screen.

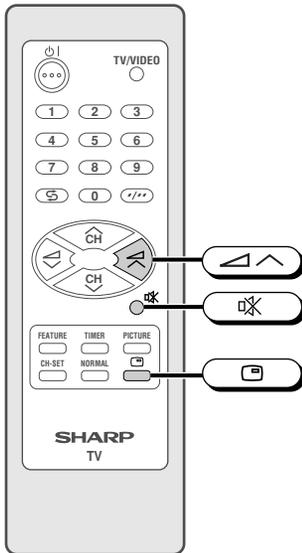

**1** Press

- The time remaining on the Off timer, On timer, and Reminder appears on the screen.
- When no timer is set, the channel number and colour system appear on the screen. Press again to clear these current settings display on the screen.

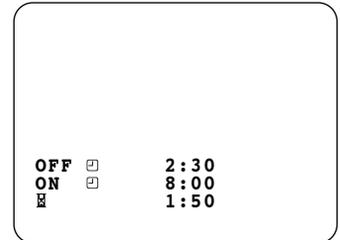

**2** Press again.

- The channel number and colour system appear on the screen.



**3** Press once again.

- The display disappears.

## Mute

Silences the sound.

**1** Press

- “” appears on the screen, and the sound is silenced.



**2** Press again.

- The volume returns to its previous level.



**NOTE** • Mute will be cancelled if the is pressed at any time.

### Channel recall



Switches back to the channel you were watching just before the current channel.

Press **↩**.

- The channel previously viewed returns to the screen.

**Example:**


After switching from channel 5 to channel 7, **↩** is pressed, the channel will change to channel 5. Press **↩** again to return to channel 7.

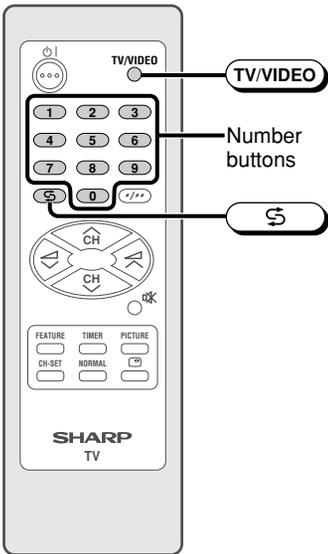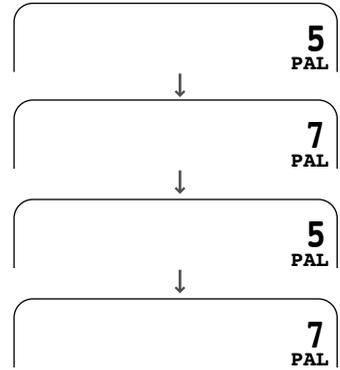

### TV/Video selection

Switches between TV broadcasts and AV input programmes.

Each time you press the **TV/VIDEO**, the input switches between AV1, AV2 and TV programme.

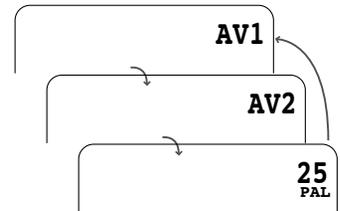




# Selecting menu items

This TV set allows you to adjust the picture and sound, and set the channels and other features using the On-screen display with the remote control or from the TV set. Select the desired menu item by following the steps below and then refer to the indicated page for details.

## Behind the door

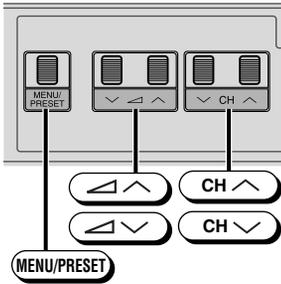

## Selecting a menu item

**1** Press **MENU/PRESET** on the TV set to call MENU screen.

```
MENU
◆PICTURE
FEATURE
TIMER
CH-SETTING
```

**2** Press **CH ^** / **CH v** to select desired menu item.  
• The selected item is highlighted in yellow.

```
MENU
PICTURE
FEATURE
◆TIMER
CH-SETTING
```

**3** Press **△** / **▽** to enter.

```
TIMER
◆OFF □ ---:--
ON □ ---:--
POSITION
VOLUME ---:--
H
```

**4** Press **MENU/PRESET** on the TV set until normal screen appears.

**MENU**

```
◆PICTURE
FEATURE
TIMER
CH-SETTING

vCH^: SELECT
vCHv: ENTER
```

**PICTURE menu..... 17**

```
PICTURE
◆CONTRAST          60
COLOUR             0
BRIGHTNESS         0
TINT                0
SHARPNESS           0
WHITE TEMP         ◆-----◆
vCH^: SELECT
vCHv: ADJUST
```

**FEATURE menu..... 18**

```
FEATURE
◆BLUE BACK        OFF
vCHv: ADJUST
```

**TIMER menu..... 19 - 21**

```
TIMER
◆OFF □ ---:--
ON □ ---:--
POSITION
VOLUME ---:--
H
vCH^: SELECT
vCHv: ADJUST
```

**CH-SETTING menu..... 16**

```
CH-SETTING
◆POSITION          CH27
COLOUR            AUTO
SKIP              OFF
FINE              168.25MHz
vCH^: SELECT
vCHv: ADJUST
```

Operating guide

### NOTE

- If you press **MENU/PRESET** on the TV set for more than two seconds, the LANGUAGE mode screen will appear instead of the MENU screen. To display the MENU screen, press **MENU/PRESET** until the normal screen appears, then press the button again.
- The procedures for setting and selecting the menu items on the following pages are described using the buttons on the remote control. These procedures can also be performed using the corresponding buttons on the TV set.




# Settings and adjustments

## On-screen display language selection

The on-screen display language can be set to English, Chinese, French, Malay or Arabic.

### Behind the door

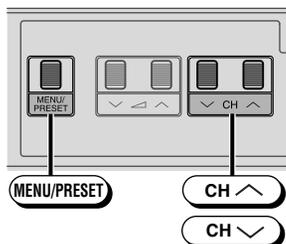


### TV set

- 1** Press **MENU/PRESET** on the TV set for more than two seconds.

- The language select mode appear.

- 2** Press **CH ^** / **CH v** to select desired language.


 
- Pressing **MENU/PRESET** changes the screen as shown below.



- 3** Press **MENU/PRESET** on the TV set until normal screen appears.

◆ENGLISH  
中文  
FRANCAIS  
BAHASA MELAYU  
العربية

## Behind the door

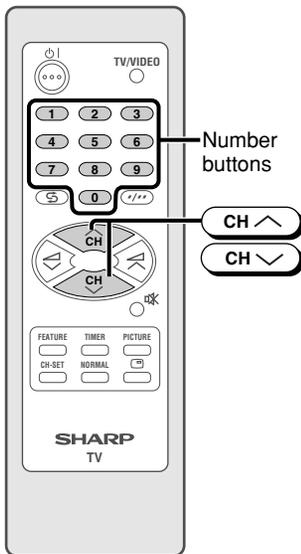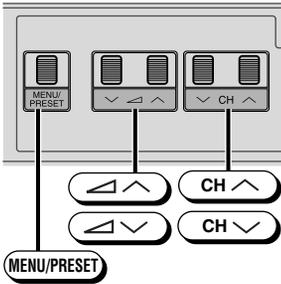

## Manual channel tuning

Enables manual channel tuning to a desired TV station (e.g. tuning the TV to a VCR, tuning in an additional TV station).

**NOTE:** This TV is already tuned into 2, 7, 9, 10 and 28.

- 1 Press **MENU/PRESET** on the TV set for more than two seconds.

- The language select mode appear.

◆ENGLISH  
 中文  
 FRANÇAIS  
 BAHASA MELAYU  
 العربية

- 2 Press **MENU/PRESET** on the TV set twice to display MANUAL mode screen.

- Pressing **MENU/PRESET** changes the screen as shown below.

→ Language → AUTO → MANUAL  
 ← Normal screen ←

MANUAL  
 VHF 1  
 48.25MHz

- 3 Press **CH** / **CH** or number buttons to select channel position.

- 4 Press **CH** / **CH** on TV set to locate channel you wish to preset to current channel position.

- Search is initiated and when a TV signal is received during the search, the search stops.

MANUAL  
 VHF 5  
 107.50MHz

Channel position


- 5 Repeat steps 3 and 4 above, to preset channel positions for other broadcasts.

- 6 Press **MENU/PRESET** on the TV set again to display normal screen.



## Channel setting

Enables individual channel setting.

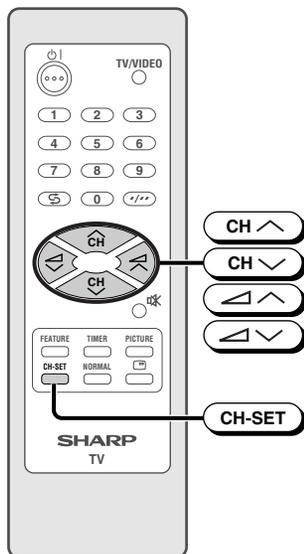

- 1** Press **CH-SET** to call **CH-SETTING** screen.
- 2** Press **CH ^** / **CH v** to select desired setting.
- 3** Each time you press **^** / **v**, setting for individual items changes as follows:

```

CH-SETTING
◆POSITION      CH27
COLOUR         AUTO
SKIP           OFF
FINE           168.25MHz

vCH^: SELECT
v^v: ADJUST
    
```

- **POSITION**  
The channel position changes to the higher or lower number.
- **COLOUR**  
AUTO ↔ PAL
- **SKIP**  
ON ↔ OFF  
Channel numbers with a "■" mark on the left are set to SKIP. To turn off SKIP, press the number buttons to select the desired channel and then set "SKIP" to "OFF".
- **FINE**  
The frequency changes to allow fine tuning.

- 4** Press **CH-SET** to return to **normal screen**.

- When you select AV1 or AV2 for the channel position, the CH-SETTING screen changes as shown on the right and the colour mode changes in the following order:

```

CH-SETTING
◆POSITION      AV1
COLOUR         AUTO


vCH^: SELECT
v^v: ADJUST
    
```

→ AUTO ↔ PAL ↔ N443 ↔ N358 ←

### NOTE

- Switching COLOUR system:  
Set the system to "AUTO" for normal TV reception. The AUTO mode automatically detects the receiving signal system and changes the reception system of the TV set. When the picture is not stable, switching to an appropriate system may improve the picture quality.
- In a weak reception area, or under bad reception conditions, you can change the frequency by fine tuning.
- When using FINE, the channel number changes from green to yellow.
- To return the channel to its original frequency setting, follow the manual channel tuning procedure.  
See **14**.

## Picture adjustment

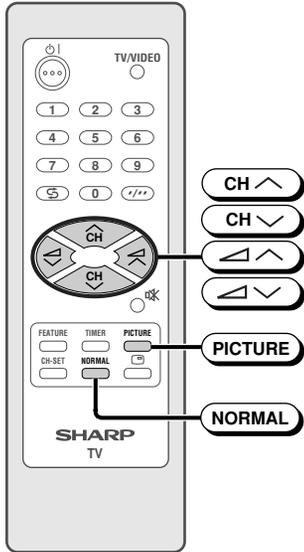


**1** Press **PICTURE** to call PICTURE screen.

**2** Press **CH** / **CH** to select adjustment items.

**3** Adjust using / .

- Wait for approximately three seconds to return to PICTURE screen.

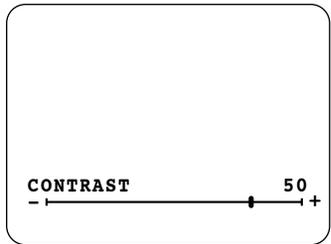

**4** Repeat steps 2 and 3 above to adjust other items.

**5** Press **PICTURE** to return to normal screen.

- Pressing **NORMAL** while a PICTURE selection is displayed, only the selected mode is reset to the standard (factory-setting) position.
- Pressing **NORMAL** while a PICTURE screen is displayed will reset all the items of PICTURE screen to the standard (factory-setting) position.


The following table lists the adjustment items shown in the PICTURE screen and how they change as you press / .

Selected item	Press	Press
CONTRAST	To decrease contrast 	To increase contrast 
COLOUR	For less colour intensity 	For more colour intensity 
BRIGHTNESS	For less brightness 	For more brightness 
TINT*	To move tint toward red 	To move tint toward green 
SHARPNESS	For less sharpness 	For more sharpness 
WHITE TEMP	To more reddish background 	To more bluish background 


\*: TINT can only be selected and adjusted when receiving NTSC broadcasts. (AV only)

## Blue screen

Automatically turns the screen blue if a broadcast signal is not received.

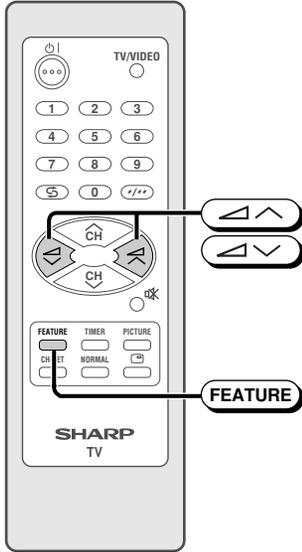

- 1** Press **FEATURE** to call FEATURE screen.
- 2** Press **▲** / **▼** to select "BLUE BACK" to "ON" or "OFF".
- 3** Press **FEATURE** to return to normal screen.

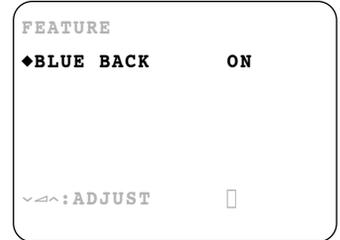

When BLUE BACK is set to "ON"

No signal



after 5 seconds

Blue screen



after 15 minutes

TV off



Standby mode

(Indicator)




Power indicator lights up dimly

### NOTE

- Poor reception due to weak signals and too much noise may activate BLUE BACK, despite the presence of a broadcast signal. To continue watching TV under these conditions, switch "BLUE BACK" to "OFF".
- When Off timer is set, the OFF TIMER setting has priority over BLUE BACK.


## Off timer

Automatically turns power off after a set length of time has passed.

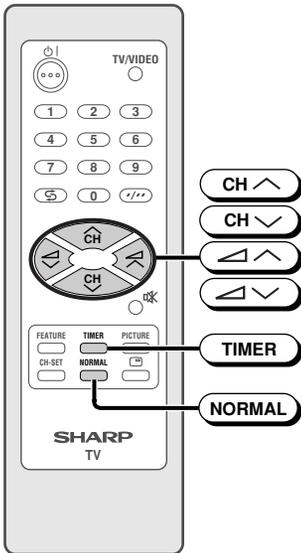


**1** Press **TIMER** to call **TIMER** screen.

**2** Press **CH** / **CH** to select "OFF".

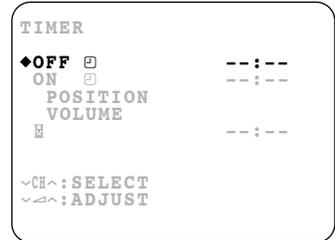


**3** Press **CH** / **CH** to set time for TV to turn off.

- Maximum time that can be preset is 12 hours and 50 minutes.
- As soon as the time is entered, the timer starts to count down.

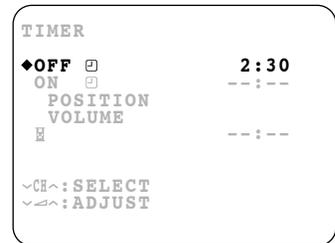

**4** Press **TIMER** to return to normal screen.


- Five minutes before the preset length of time expires (in the example, after two hours and 25 minutes), the remaining time appears on the screen for several seconds.
- A flashing display of the remaining time appears during the last few seconds.
- When the preset length of time has passed, the TV set enters the Standby mode.

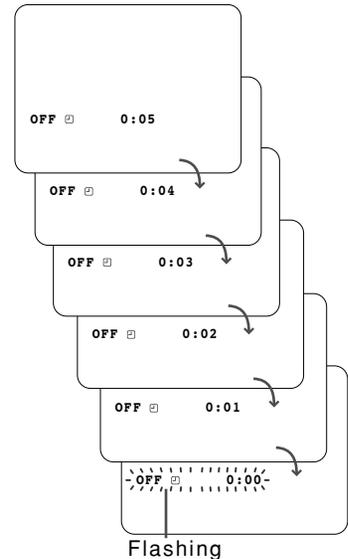


- NOTE**
- To cancel the timer setting, press **NORMAL** when "◆" is displayed on the left of "OFF □" so as to set the timer to "---:--".
  - The timer can be set in ten-minute intervals.
  - The Off timer is cancelled if the power is turned off or set to the Standby mode using **POWER** on the remote control or **POWER** on the TV set, or if the power is otherwise interrupted.

## On timer

Automatically turns power on after a set length of time has passed.

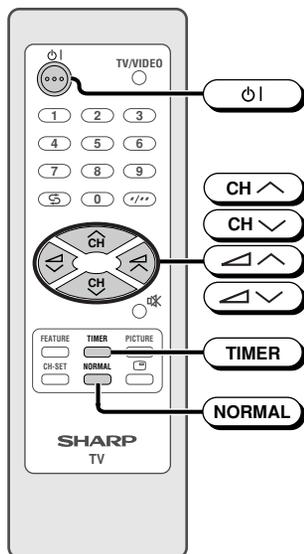


### TV Set

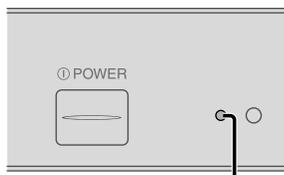


Power indicator (Flashing)


- 1** Press **TIMER** to call **TIMER** screen.
- 2** Press **CH ^** / **CH v** to select "**ON**".
- 3** Press **Left ^** / **Left v** to set time for TV to turn on.
  - Maximum time that can be preset is 12 hours and 50 minutes.
  - As soon as the time is entered, the timer starts to count down.

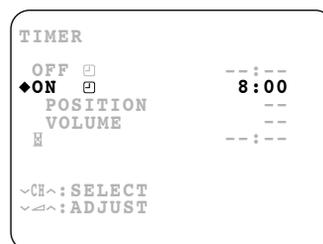

- 4** Press **CH ^** / **CH v** to select "**POSITION**".
- 5** Press **Left ^** / **Left v** to set the channel.

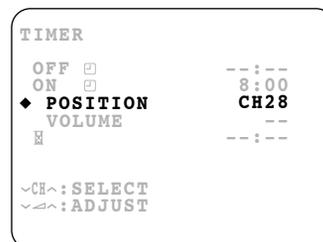

- 6** Press **CH ^** / **CH v** to select "**VOLUME**".
- 7** Press **Left ^** / **Left v** to set volume.
- 8** Press **TIMER** to return to normal screen.
- 9** Press **Power** to put TV set into Standby mode.

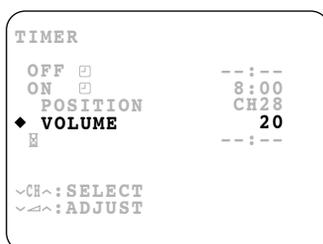


- Power indicator will flash to indicate On Timer is set.
- When the preset length of time (in the above example, eight hours) has passed, the power turns on and a picture appears on the screen.
- The On Timer speaker volume gradually increases from zero to the preset volume.

- NOTE**
- To cancel the timer setting, press **NORMAL** when "◆" is displayed on the left of "ON" so as to set the timer to "- - -".
  - The timer can be set in ten-minute intervals.
  - The On Timer is cancelled if the power is turned off using **Power** on the TV set.
  - If the TV set is turned on by the On Timer, then the TV set will be automatically turned off in two hours if no buttons are pressed on the TV set or remote control.


## Reminder on-screen timer

Lets you know when a preset length of time has passed by displaying a countdown timer on the screen. This is useful for timer cooking while you watch TV.

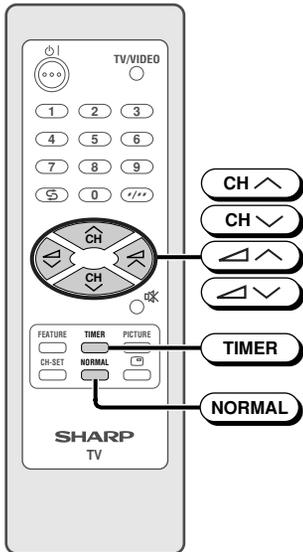


**1** Press **TIMER** to call **TIMER** screen.

**2** Press **CH** / **CH** to select “**◆**”.

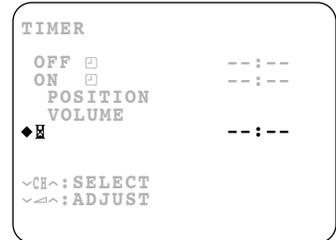


**3** Press **CH** / **CH** to set time.

- Maximum time that can be preset is 12 hours and 50 minutes.
- The right example shows that the Reminder will be activated after one hour 50 minutes.

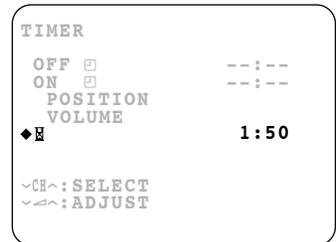

**4** Press **TIMER** to return to normal screen.

- Five minutes before the preset length of time expires (in the example, after one hour and 45 minutes) and each minute thereafter, the remaining time appears on the screen for several seconds.
- When the preset length of time has passed, “**◆** 0:00” flashes in red.

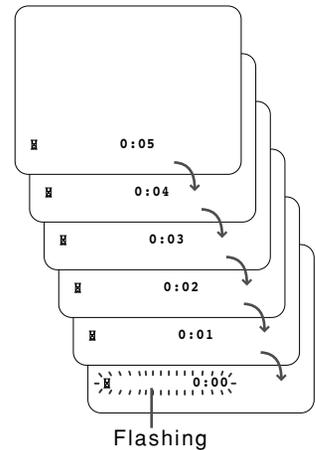

**NOTE**

- This function also works in the Standby mode. Power is automatically turned on five minutes before the preset length of time expires. The TV set automatically returns to the Standby mode approximately 1 minute after the timer expired if no buttons are pressed on the TV set or remote control.
- The Reminder is cancelled if **POWER** on the TV set is pressed or if the power is otherwise interrupted.
- The timer can be set in ten-minute intervals.
- To cancel the timer setting, press **NORMAL** when “**◆**” is displayed on the left of “**◆**” so as to set the timer to “---:--”.



# Connections

## Connecting to an antenna


To enjoy a clearer picture, use an outdoor antenna. The following is a brief explanation of the types of connections that are used for coaxial and feeder cables.



If your outdoor antenna uses a 75-ohm coaxial cable with a standard DIN45325 plug (IEC 169-2), plug it into the antenna jack at the rear of the set.




If your outdoor antenna uses a 300-ohm twin-lead flat feeder, connect a 300-ohm to 75-ohm impedance converter and plug it into the antenna jack at the rear of the set.

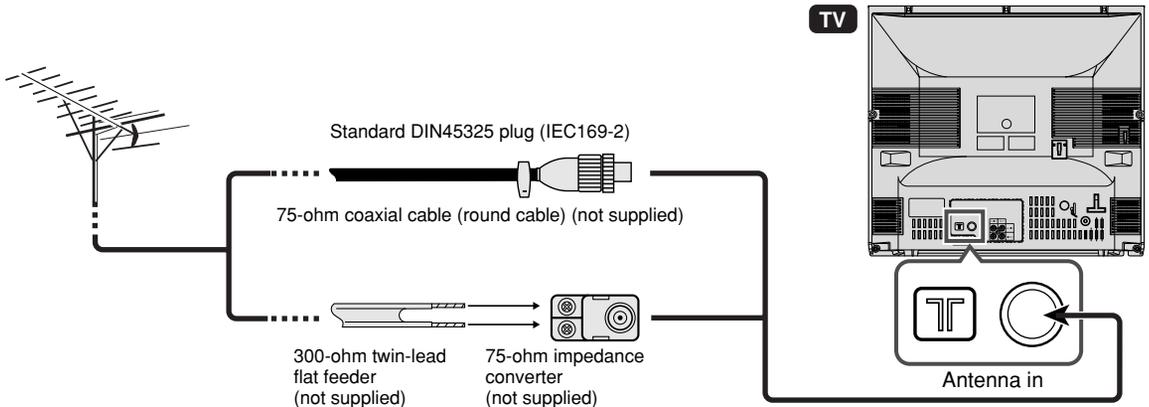

## Connecting to an antenna via a VCR

You can also connect the TV set to the tuner on a VCR using the connection shown below.

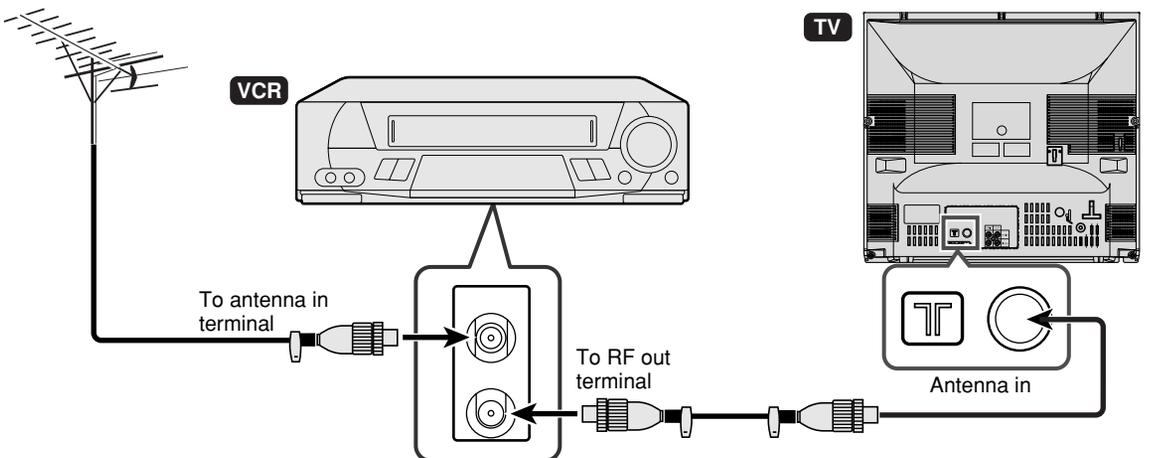

### NOTE


- When using the RF terminal connection, set the TV to channel zero to make initial adjustments for the VCR.
- Turn off the power on the TV set and the VCR being connected before making the above connections. Be sure the cord plugs are fully inserted in the connection terminals.
- See the operation manual of your VCR for connection details.

## Connections


### Connecting to video equipment

Enjoy playback from a video disc player, VCR or other video equipment by connecting them to this TV set using the Audio/Video in terminals.

Example use of front terminals

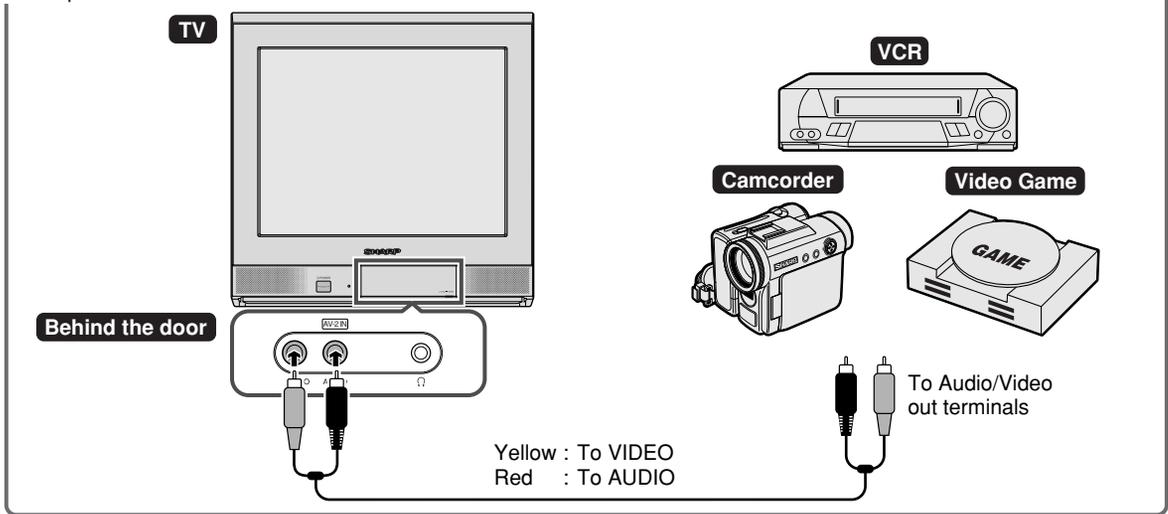

Example use of rear terminals

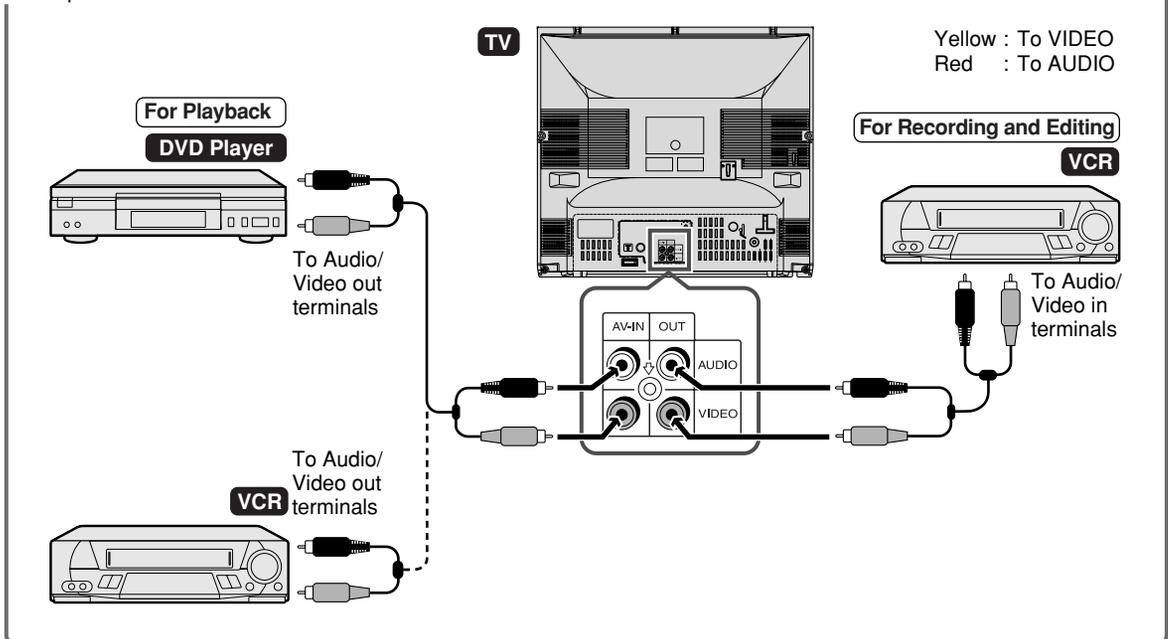

#### NOTE

- Turn off the power on the TV set and the VCR being connected before making the above connections. Be sure the cord plugs are fully inserted in the connection terminals.
- The audiovisual cords required to connect the TV set with video equipment may differ from those shown in the above diagram. See the operation manual of your video equipment for connection details.
- The above recording and editing connections are for intended solely for personal use and not for the illegal copying of audiovisual material protected by copyright laws.



# Troubleshooting

The following problems do not always indicate a hardware failure. Therefore, please use the troubleshooting guide below before calling for repair service.

If, after following the guide none of the remedies work, unplug the TV set and call for service.

Quick Service Check List	Problems												
	Remote control does not work.	Bars on screen	Picture distorted.	Picture rolls vertically.	No colour	Poor reception on some channels	Picture weak.	Picture lines or streaks	Picture ghosting	Picture blurred.	Sound OK, picture poor.	Picture OK, sound poor.	No picture or sound
Possible Causes/Remedies													
Try a new channel to check for possible station trouble.			●	●	●	●	●	●	●	●	●	●	●
TV not plugged in. Outlet power OFF.	●												●
① <b>POWER</b> switch of TV not ON.	●												●
Antenna not connected to terminal at the back of the TV set.					●	●	●		●		●		●
If outside antenna is used, check for broken wires.		●	●	●	●	●	●	●	●	●	●		●
Check for local interference.		●		●		●		●	●		●	●	
Turn OFF using the ① <b>POWER</b> switch, then turn ON again after a minute.	●												●
Adjust COLOUR control.					●		●				●		
Check batteries in the remote control.	●												
Try fine tuning to correct.			●		●		●			●	●		
Contrast setting in picture mode might be all the way to the minus side. Press the <b>NORMAL</b> button on the remote control to correct.											●		●
Increase the volume.												●	●

**NOTE** • This unit is equipped with a microprocessor. Its performance could be adversely affected by external electrical noise or interference. If this should happen, unplug the unit and plug it in again after a few minutes.



# Specifications

<b>MODEL</b>		CX51HF3
Receiving System		
TV Broadcasts/ VCR Playback		PAL-B/G
VCR Playback (Using Video-in terminals)		PAL 60 Hz NTSC 3.58 MHz NTSC 4.43 MHz
Laserdisc Player Playback (Using RF-in terminals)		PAL 5.5 MHz/60 Hz
Reception Channels		
PAL-B/G	VHF	AU0-AU12 ch, NZ1-NZ11 ch, E2-E12 ch
	UHF	E21-E69 ch
CATV		S1-S20 ch, S21-S41 ch (Hyper)
Receiving Frequency		44.25 MHz – 863.25 MHz
Channel Tuning		100-Channel Electronic Tuner with Full Auto Tuning System
Picture Tube		51 cm Flat CRT
Terminals		Audio/video input × 2 (Front × 1, Rear × 1), Audio/video output × 1 (Rear) Headphone jack (Front × 1)
Sound Output		3 W (RMS) × 1
Power Source		Rated AC 220 – 240V, 50 Hz
Power Consumption		90 W
Dimensions		502 (W) × 487 (H) × 481.5 (D) mm
Weight		21.5 kg (Approx.)

**NOTE**

- Design and specifications are subject to change without notice.
- Receiving system: These receiving systems, encompassing all currently available technology, include those with planned broadcast, videotape and laserdisc hardware and software.
- Reception channels: Some examples of the main receivable channels are shown above.

# Notes

# SHARP®

## WARRANTY

*Consumer Electronic Products*

### Congratulations on Your Purchase!

This Sharp product is warranted against faults in materials and manufacture for a period of twelve (12) months from the date of original purchase.

If service is required during the warranty period, please contact your nearest Sharp Approved Service Centre. These repairs would be carried out at no charge to the owner, subject to the conditions specified herein.

The owner is responsible for any transportation and insurance costs if the product has to be returned for repair.

This warranty does not extend to accessories or defects or injuries caused by or resulting from causes not attributable to faulty parts or the manufacture of the product, including but not limited to, defect or injury caused by or resulting from misuse, abuse, neglect, accidental damage, improper voltage, liquid spillage, vermin infestation, software, or any alterations made to the product which are not authorised by Sharp.

Please retain your sales documentation, as this should be produced to validate a warranty claim.

This warranty is in addition to and in no way limits, varies or excludes any express and implied rights and remedies under any relevant legislation in the country of sale.

#### IMPORTANT

#### DO NOT RETURN THIS DOCUMENT TO SHARP

For your reference, please enter the particulars of your purchase below and retain, with your purchase documentation.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

Date of Purchase \_\_\_\_\_

Retailer \_\_\_\_\_

FOR LOCATION ENQUIRIES WITHIN

### AUSTRALIA

REGARDING YOUR LOCAL

**SHARP APPROVED SERVICE CENTRE**

VISIT OUR WEBSITE AT

**[www.sharp.net.au](http://www.sharp.net.au)**

OR CALL SHARP CUSTOMER CARE

**1 300 135 022**

(LOCAL CALL COST APPLY WITHIN AUSTRALIA)

SHARP CORPORATION OF AUSTRALIA PTY. LIMITED

ABN 40 003 039 405  
1 Huntingwood Drive  
Huntingwood NSW 2148

FOR LOCATION ENQUIRIES WITHIN

### NEW ZEALAND

REGARDING YOUR LOCAL

**SHARP APPROVED SERVICE CENTRE**

VISIT OUR WEBSITE AT

**[www.sharp.net.nz](http://www.sharp.net.nz)**

CONTACT YOUR SELLING DEALER/RETAILER

OR CALL

**SHARP CUSTOMER SERVICES**

TELEPHONE: 09 573 0111

FACSIMILE: 09 573 0113

SHARP CORPORATION OF NEW ZEALAND LIMITED

59 Hugo Johnston Drive  
Penrose, Auckland

**IMPORTANT NOTICE: This warranty applies only to products sold in Australia & New Zealand**

# SHARP®

## SHARP CORPORATION

Printed in Malaysia  
TINS-B610WJZZ  
04P12-MSF