

Samsung

(S G H - T 1 0 5 G S e r i e s)

M O B I L E P H O N E

User Manual

**Please read this manual before operating your
phone, and keep it for future reference.**



Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Samsung Telecommunications America (STA), LLC

Headquarters:Customer Care Center:

1301 E. Lookout Drive1000 Klein Rd.

Richardson, TX 75082Plano, TX 75074

Toll Free Tel: 1.888.987.HELP (4357)

Internet Address: <http://www.samsungusa.com>

© 2009 Samsung Telecommunications America, LLC is a registered trademark of Samsung Electronics America, Inc. and its related entities.

Do you have questions about your Samsung Mobile Phone?

For 24 hour information and assistance, we offer a new FAQ/ARS System (Automated Response System) at:

www.samsungtelecom.com/support

GH68-25121A

Printed in China

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437; U.S. Pat. 5,953,541; U.S. Pat. 6,011,554 and other patents pending.

Open Source Software

Some software components of this product incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit:

<http://www.samsungnetwork.com/Home/opensource>

SAR Information

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards that were developed by independent scientific organizations through periodic evaluation of scientific studies.

The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless phones employs a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6 W/kg. The highest SAR values for this model phone were Head: 1.07 W/kg, and Body: 0.80 W/kg.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

Table of Contents

Section 1: Getting Started	3
SIM Card Information	3
Activating Your Phone	3
Charging the Battery	6
Turning the Phone On or Off	7
Setting Up Your Voice Mail	8
Text Conventions	8
Section 2: Understanding Your Phone	9
Features of Your Phone	9
Front View of Your Phone	9
Main Display Layout	11
Selecting Functions and Options	15
Section 3: Call Functions	18
Making a Call	18
Making a Call from your Contact List	19
Answering a Call	20
Recent Calls	20
Call Time	24
Options During a Call	24
Silent Mode	29
Section 4: Menu Navigation	30
Menu Navigation	30
Section 5: Messaging	32
Creating and Sending New Messages	32
Viewing New Received Messages	33
Using Message Options	33
Inbox	35
Sentbox	35
Outbox	35

Drafts	35
Using Message Templates	35
Deleting Messages	36
Messaging Settings	36
Section 6: Understanding Your Contact List	38
Using Contacts	38
Contact List Entry Options	39
Adding a New Contact	39
Favorites List	40
Own Numbers	40
Managing Contacts Entries	40
Section 7: Changing Your Settings	41
Profile	41
Display	42
Time & Date	42
Phone	42
Security	43
Call	44
Applications	45
Memory	45
Master reset	46

Section 1: Getting Started

This section describes the first steps to operating your phone.

SIM Card Information

When you subscribe to cellular network services, you receive a plug-in Subscriber Identity Module (SIM) card loaded with your subscription details, such as your PIN, and available optional services.


Activating Your Phone

Activating your phone requires several things: inserting the SIM card, charging the battery, and turning the phone on.

- ▶ If necessary, power-off the phone by pressing and holding  until the power-off image is displayed.

Removing the Battery

1. Press the back cover down from the top back of the phone (1) while pressing in on the cover release near the bottom (2). Lift up and remove the back cover from the phone.

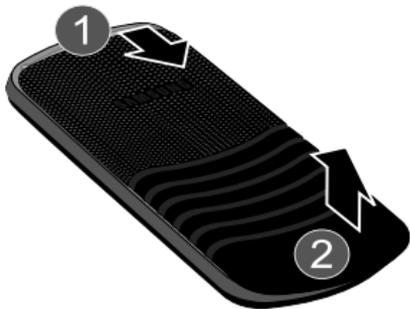

2. Lift the battery up (1) and away from the phone (2).



Installing and Removing the SIM Card

Important! The plug-in SIM card and its contacts can be easily damaged by scratches or bending. Use caution when inserting or removing the SIM, and keep all SIM cards out of reach of children.

1. Remove the back cover and battery.
2. With the gold contacts facing down, slide the SIM card completely into the socket with the notched end oriented as shown.



3. To remove the SIM, slide it gently out of the socket.



Note: The angled corner of the SIM should be inserted as shown in the diagram on the phone. The correct SIM orientation is necessary for your phone to recognize the SIM.

Replacing the Battery

1. To reinstall the battery, with the battery cover open, align the battery contacts with the pins in the battery compartment in the phone (1).
2. Press the battery down until it clicks into place (2). Make sure that the battery is properly installed and not obstructing the SIM card before replacing the cover.



3. With the battery in position in the phone, align the back cover on the phone (1) and slide gently upward (2) until the cover clicks into place.



Note: The battery must be properly installed before charging the battery or switching on the phone.

Charging the Battery


Your phone is powered by a rechargeable Li-ion battery. Use the wall charger to charge the battery, and use only Samsung approved batteries and chargers.

Note: You must fully charge the battery before using your phone for the first time. A fully discharged battery requires up to 4 hours of charge time.

Note: For connection to an electrical supply outside of the U.S., you must use an adaptor properly configured for the power outlet. Using the wrong adaptor can damage your phone and void your warranty.

Note: If the battery level becomes too low, the phone automatically turns off. Recharge your battery.

1. Plug the connector of the wall charger jack into the port on the side of the phone.

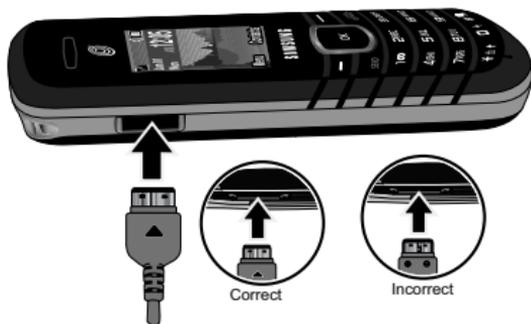

Note: This illustration shows both the correct method and the incorrect method for connecting the charger. If you connect the charger incorrectly, you risk damaging the accessory port and voiding the phone warranty.

2. Plug the adaptor into a standard AC wall outlet.
3. When the phone is completely charged (🔋), unplug the charger from the power outlet.
4. Remove the adaptor from the phone by gently pulling the connector out.

Important! The battery charging function may stop if you are on a call while charging your battery.

Note: Do not remove the battery from the phone during charging. You must unplug the adaptor from the phone before removing the battery to avoid damage.

Turning the Phone On or Off

1. Press and hold the **SEND** key or the **END** key until the phone power-on screen displays.

Note: Do not turn on the phone when mobile phone use is prohibited.

2. If the phone asks, enter a password and press the **OK** soft key or the  key. (For further details, see “Change password” on page 44.)

The Idle screen displays while the phone searches for your network. The signal strength bars show adequate signal after a network is found.

Note: The display language is preset to Automatic at the factory. To change the language, use the Language menu. For more information, see Phone settings on page 43.

3. When you wish to switch off the phone, press and hold the  key.

Setting Up Your Voice Mail

- ▶ In Idle mode, press and hold the  key. When connected, follow the voice prompts from the voice mail center.

Text Conventions

The following terms and icons appear in this manual to describe the steps and procedures for using your phone:

highlight Use the Navigation key () to move a highlighting effect onto a menu item or screen item of interest.

select After “highlighting” a menu item or screen item, press the  key to launch, access, or save a highlighted menu item or screen field of interest.

→ Used in place of “select” in long “drill down” procedure steps.

Example: “...Settings → Phone → Language...”

Section 2: Understanding Your Phone

This section outlines some key features of your phone. It also displays the screen and the icons that are displayed when the phone is in use.

Features of Your Phone

Your phone is lightweight, easy-to-use and offers many significant features. The following list outlines a few of the features included in your phone:

- User friendly, menu-driven access to features and options
- Featured applications provide alarms, calendar, calculator, converter, timer, stopwatch, and world time.
- Speakerphone capability

Front View of Your Phone

The following illustrations show the main elements of your phone:



Keys

The following list correlates to the front view illustrations.

1. **Earpiece:** Used to listen to audio.
2. **Left soft key:** In the Idle screen, press the **Menu (left)** soft key  to access your **Main menu**. The left soft key allows you to select the function indicated by the screen text on the bottom left of the display. For more information about soft keys, see *“Selecting Functions and Options”* on page 15.
3. **Navigation key:** Allows you to scroll through menus, to adjust the volume during a call, to access Create message and Messages folders and to change you sound profile.
4. **Send key:** Allows you to place or receive a call. In standby mode, press the key once to access the Recent Call log. If you press and hold the key down, you will initiate the most recent call from the Recent Call log.
5. **Keypad Lock:** Allows you to quickly lock your keypad. To unlock, press the **Unlock** soft key and press and hold the  key.
6. **Microphone:** Allows the other callers to hear you when you are speaking.
7. **Space/Silent key:** Allows you to enter a space when entering text. Press and hold to toggle between Normal and Silent modes.
8. **Keypad:** Allows you to enter numbers, letters, and characters.
9. **Power On/Off/Menu Exit key:** Ends a call or exits a program. Press and hold this key for a few seconds to power your phone On or Off. While in the main menu, it returns the phone to standby mode and cancels your input. When you receive an incoming call, press to reject call.

- 10. Right Soft key:** In the Idle screen, press the **Contacts (right)** soft key  to open your **Contact list**. When in menu mode, the right soft key  function is **Back**.
- 11. Display:** Allows you to see when you have an incoming call or message. It also displays date, time, network type, signal strength, and battery power icons, and any icons associated with alerts or alarms.

Main Display Layout

The display has 3 areas:



Icons



Shows the received signal strength. The greater number of bars indicates a stronger signal.



Appears when you receive a new text message.



Appears when you receive a new voicemail message.



Appears when you set an alarm on your phone.



Appears when a call is in progress.



Appears when there is no network coverage available. When you are out of the service area, you cannot make or receive voice calls.



Shows the level of your battery. The more bars you see, the more power you have remaining.

Note: The default Profile is Normal. The profile is editable, and the displayed icons may vary according to the settings. To edit Profile settings, press **Menu** → **Settings** → **Profiles**.



Appears when the **Normal** Profile (default) is active. Press and hold the Space key  to toggle between Normal mode and Silent mode. You can edit these Normal profile settings.



Appears when the **Silent** Profile is set. In Silent mode, your phone displays information, but the speaker is muted and the phone vibrates to alert you. You can edit these Silent profile settings.



Appears when the Profile is set to **Driving**. In Driving mode, the speaker is active and launches the currently selected ringtone or melody when the associated notification is activated. This icon is accompanied on screen by the Audio icon. You can edit these Driving profile settings.



Appears when the **Meeting** Profile is set. In Meeting mode, you can change the settings for the following options: Call alert type, Message alert type, Keypad tone and Volume.



Appears when the Profile is set to **Outdoor**. In this case, the speaker is active, the volume settings are raised to their highest levels, any currently active ringtones or melodies are activated, and the phone's vibrate feature is activated. You can edit these Outdoor profile settings.



Appears when the Profile is set to **Offline**.

In Offline mode, you can edit the settings for the Keypad tone: Beep, Xylophone or Mute and adjust the Volume up or down for the Keypad tone and the Alert tone.



Appears when the Profile is set to **My profile 1**.

Use the My profile 1 to create a unique profile by setting the following options: Call alert type, Call ringtone, Message alert type, Message alert tone, Keypad tone and Volume.



Appears when the Profile is set to **My profile 2**.

Use the My profile 2 to create a unique profile by setting the following options: Call alert type, Call ringtone, Message alert type, Message alert tone, Keypad tone and Volume.

Backlight

A backlight illuminates the display and the keypad when you press any key. It turns off when no keys are pressed within a given period of time, and/or dims the light, depending on the settings in the **Settings → Display → Light** menu.

Selecting Functions and Options

Your phone offers a set of functions that can be customized for your use. These functions are arranged in menus and sub-menus, accessed using the two soft keys. Each menu and sub-menu allows you to view and alter the settings of a particular function.

In some functions, you may be asked for a password or PIN. Enter the code and press the **OK** key.

When you access a list of options, your phone highlights the currently active option. If there are only two options, such as **On/Off** or **Enable/Disable**, your phone highlights the option that is not currently active, so that you can select it directly.

Selecting Options

To view the various functions and options available and to select the one you want:

- Press the appropriate soft key.
- To select the function displayed or the option highlighted, press the **Select** soft key or the **OK** key.
- To view the next function or highlight the next option on a list, press the **Down** Navigation key.
- To move back to the previous function or option on a list, press the **Up** Navigation key.
- To move back up one level in the menu structure, press the **Back** soft key.
- To exit the menu structure without changing the settings, press the **END** key.

Soft Keys

The roles of the left and right soft keys vary depending on the function you are currently using. The active function for each soft key is shown at the bottom of the display above each key.

Left Soft Key

Some functions of the left soft key are as follows.

- In the Idle screen, press the **Menu (left)** soft key  to open the Menu screen.
- When in a menu mode, the left soft key  function is **Select**.

Right Soft Key

Some functions of the right soft key are as follows.

- In the Idle screen, press the **Contacts (right)** soft key  to open the **Contact list** screen.
- When in a menu mode, the right soft key  function is **Back**.

End Key

The **End** key  is used to turn on/off your phone, disconnect calls, and return to the standby mode.

- Press and hold the End key to turn on/off your phone.
- Briefly press  once to disconnect a call.
- Press  to return to standby mode from any menu.


Send Key

The **Send** key  is used to power-on your device, answer calls, dial calls, and to recall the last number(s) dialed, received, or missed.

- Press and hold  to power-on your device.
- Press  once to answer calls.
- Enter a number and briefly press  to make a call.
- Briefly press  in standby mode to display a list of recent calls to and from your phone.
- Press  twice in standby mode to call the most recent number.
- Press  to pick up a waiting call.

Navigation Key

Use the directional keys on the Navigation key to browse menus, sub menus, and lists. Press the **Up** or **Down** Navigation keys when jumping to highlighted links on the web. The **Up** or **Down** Navigation keys also adjust the Ring volume in the Idle screen and, in a call, they allow you to adjust the earpiece volume. The **Right** and **Left** Navigation keys provide a shortcut to launch applications from the Idle screen.

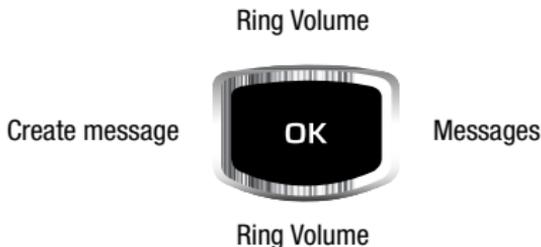

Section 3: Call Functions

This section describes how to make or answer a call. It also includes the features and functionality associated with making or answering a call.

Making a Call

In Idle mode, enter the area code and phone number, and press the **SEND** key.

Note: When you activate the Auto Redial option in the Voice Calls menu, the phone will automatically redial up to 10 times when the person does not answer the call or is already on the phone. For more information about Voice Calls, see page 44.

Making an International Call

1. Press and hold **□ +**. The **+** character appears.
2. Enter the country code, area code, and phone number, then press **SEND**.

Correcting an Entered Number

Use the following steps to correct a mis-typed entry when dialing.

1. After entering a number
 - To clear the last digit displayed, press the **Clear** soft key.
 - To clear another digit in the number, press the **Left** or **Right** Navigation key until the cursor is immediately to the right of the digit to be cleared. Press the **Clear** soft key.
 - To enter a missing digit press the **Left** or **Right** Navigation key until the cursor is in position and enter the digit.
2. Press **END** to return to the Idle screen.

Ending a Call

When you want to finish your call, briefly press **END**.

Manual Pause Dialing

When you call automated systems, you are often required to enter a password or account number. Instead of manually entering the numbers each time, you can dial the numbers along with special characters called pauses.

To manually call a number with pause(s) without storing it in your Contact List:

1. In Idle mode, enter a phone number.
2. Press and hold the  key to add a two-second pause. The letter **P** appears where the pause is set.
3. Continue to enter numbers, if desired.

Tip: You can create pauses longer than two seconds by entering multiple pauses.

Redialing the Last Number

All incoming, outgoing and missed calls are listed in the **Recent Calls** Menu. If the number or caller is listed in your Address Book, the associated name displays.

To access the **Recent Calls** menu:

1. From the Idle Screen, press **Menu** → **Call records** → **Recent calls**.

Tip: You can quickly access your Recent Calls by pressing .

2. Use the Navigation keys to scroll through the Recent Calls options. Choose from **Recent Calls**, **Missed Calls**, **Received Calls** and **Dialed Calls**.
3. Highlight the number you want, then press  to dial the number.

Making a Call from your Contact List

You can store phone numbers that you use regularly on the SIM card or in the phone's memory. These entries are collectively called the **Contact list**.

Once you have stored a number in the **Contact list**, you can dial it by pressing a few keys by storing the contact in your Favorites.

For further details about the **Contact list** feature, see “*Finding an Contacts list Entry*” on page 38.

Answering a Call

When a call is received the phone rings and displays the caller’s phone number, or name if stored in the Contact list.

1. From the Idle Screen press .

If you wish to activate the **Anykey answer** option, press **Menu → Settings → Call → All calls → Answering mode**. When you activate the Anykey answer option, you can press any key to answer a call except  and the **Reject** soft key.

Note: To reject an incoming call, press the **Reject** soft key.

2. End the call by pressing .

Note: You can answer a call while using the Address Book or menu features. After ending the call, the phone returns to the function screen you were using.

Recent Calls

The phone stores the numbers of the calls you have Missed, Received or Dialed in the Recent Calls menu. You can quickly access this menu from the Idle screen by pressing the  key. If the number or caller is listed in your Address Book, the associated name displays. Press the **Right** or **Left** Navigation key to review your Missed, Received or Dialed calls in the Recent Calls menu.

Viewing All Calls

From the **Call records** menu, select the **Recent calls** option. All calls made, received, and missed are listed. Press the **Options** soft key in any of these lists for the following options:

- **View:** allows you to view the call details.
- **Call:** allows you to call the number you are viewing.
- **Send message:** allows you to send a message to the caller associated with this call record.
- **Delete:** allows you to delete the call record you are viewing.
- **Delete all:** allows you to delete all call records.
- **Save:** allows you to create a new contact from this call record.
- **View contact details:** allows you to view the call details.
- **Copy to dialing screen:** allows you to copy the call record number to your dialing screen.
- **Add to reject list:** allows you to add the sending number to your Reject List, where incoming calls are sent direct to voice mail.
- **Call manager:** provides information about Call duration for Last call, Dialed calls, Received calls or All calls. You can choose the option to reset the information in one of the these categories or in all of them.

Viewing Missed Calls

The number of calls you have missed is displayed on the Idle screen.

To view the number details:

1. Press the **View** soft key. The most recently missed call is displayed.

Note: If there is a voicemail sent by the same number, associated icons are displayed and can then be selected.

2. To scroll through the list of missed calls, press the **Up** or **Down** Navigation key.
3. To move to another call type, press the **Left** or **Right** Navigation key.

Viewing the Details of a Missed Calls

To view the details of a selected missed call, use the following steps:

1. Press the **View** soft key. A list of the most recently missed calls is displayed.
2. Select the desired missed call.
3. Press the **Options** soft key, then select **View**.

Calling Back a Missed Call

To call back a missed call number:

1. Press the **View** soft key. A list of the most recently missed calls is displayed.
2. Highlight the desired missed call.
3. Press the **Options** soft key, then select **Call**.

- Or -

4. Highlight the number and press the **SEND** key.

Saving a Missed Call to your Address Book

To save the missed call entry to your address book, use the following steps:

1. Press the **View** soft key. A list of the most recently missed calls is displayed.
2. Select the desired missed call.

Note: You may see different choices depending upon the settings for your “Save New Contacts to” option.

3. Press the **Options** soft key, then select **Save** and follow prompts to add caller to Contact list.

For further details about the **Contact list** feature, see “Adding a New Contact” on page 39.

Sending a Message to a Missed Call

To send a text message or attachment to a missed call entry:

1. Immediately after missing a call, press the **View** soft key. A list of missed calls is displayed with the most recently missed call highlighted. Highlight the number of the missed call you wish to send a message.
2. Press the **Options** soft key, then select **Send Message**. The Create Message screen displays. Create your text message. For more information, refer to “*Creating and Sending New Messages*” on page 32.
3. When you are ready to send your message, press **Options → Send** to send your message to the selected number.
4. In the Recipient List, you can press the **Options → Send** to send a message to the caller or press **Options → Add recipients** to enter additional recipients from your contacts or from other recent recipients. You can also save to drafts or cancel your message.
5. To send you message, press the **Options → Send**. Your display returns to your Recent Calls list.

Deleting a Missed Call

To delete a missed call entry:

1. Immediately after missing a call, press the **View** soft key.
2. Press the **Options** soft key, then select **Delete**. The call log is deleted immediately.

Note: You can press the  key at any time to exit the **Missed Call** feature.

Call Time

1. From the Idle screen, press the **Menu** → **Call records** → **Call manager** → **Call duration** to see the following options:
 - **Last call**: shows the length of time for the last call.
 - **Dialed calls**: shows the total length of time for dialed calls.
 - **Received calls**: shows the total length of time for received calls.
 - **All calls**: shows the total length of time for all calls.
2. Press the Options soft key to choose from the following options:
 - **Reset**: allows you to reset the call duration for the selected call record and return to the Call duration screen.
 - **Reset all**: allows you to reset the call duration for all call records. When you select **Reset all**, a prompt displays, “**Are you sure?**” Select the **Yes** soft key to reset or the **No** soft key to cancel. Then you are returned to the Call duration screen.

Options During a Call

Your phone provides a number of control functions that you can use during a call.

Adjusting the Call Volume

Adjust the earpiece volume during a call by pressing the **Up** and **Down** Navigation keys. Press the **Up** Navigation key to increase the volume level and press the **Down** Navigation key to decrease the volume level.

Putting a Call on Hold

You can place the current call on hold whenever you want. You can also make another call while you have a call in progress if your network supports this service.

To put a call on hold:

1. While on a call, press the **Hold** soft key to place your call on hold.
2. You can later reactivate this call whenever you want by pressing the **Retrieve** soft key.

Making a new call while you have a call in progress

1. While on a call, press the **Hold** soft key.
2. Enter the new phone number you wish to dial or look it up in the Contact list.
3. Press  to dial the second number.
- or -
4. Press the **Options** soft key, then select **New Call**. Enter the number to call or search in your Contact list or Favorites. Press  to dial the second number. Once connected, both calls are displayed on the screen.

Note: The caller currently on hold appears greyed-out onscreen.

Switching between the two calls

1. Press the **Swap** soft key. The current call (caller #2) is placed on hold and the previous call on hold (caller #1) is then reactivated so that you can continue conversing with that person.
2. Press  to end the currently active call.

Multiple calls

If you are in a call, you can place the active call on hold by selecting the **New Call** option above and either dialing another number or answering another incoming call. Once the second call has been activated, the following options are available.

- **Swap:** Places the active call on hold and then re-activates the call on hold.
- **Join:** Joins all of the calls you have established with your phone (both active and on hold) into a multi-party call.
- **Transfer:** Allows you to transfer an call to another number.

Note: You must contact your Service Provider regarding the availability of the Join option and the Transfer option.

When you want to finish, end each call normally by pressing the  key.

Ending a specific call

1. Place the call you wish to end on hold.
2. Press the **Options** soft key, then select **End → Held call**.
3. Press the **Select** soft key to end the call on hold.
4. Press  to end the last remaining call.

In-Call Options

During a call, press the **OK** key to turn the Speaker **On** or **Off**.

Press the **Options** soft key to access the following:

- **Speaker on/off:** turns your microphone on and off.
- **Mute/Unmute:** allows you to mute and unmute your phone.
- **Mute keys/Send keys:** silences/mutes the key tones when on the call. To turn this feature off (unmute the keypad), return to this option and select **Send keys**.
- **New call:** Places the current call on hold and then allows you to enter and dial another number or access your Contact List.
- **Contacts:** allows you to access your Contact list.
- **Create contact:** allows you to create a new contact using the number of the current call.
- **Update existing:** allows you to update an existing contact with the current number.
- **Send DTMF:** Sends DTMF (Dual Tone Multi-Frequency) tones to the contacts you have selected. These DTMF tones are sent as a group. The DTMF tones are the tones used in phones for tone dialling, sounding when you press the number keys. This option is helpful for entering a password or an account number when you call an automated system, like a banking service.

- **Message:** allows you to create a message or to access messages in these folders: Inbox, Sentbox, Outbox and Drafts.
- **End call:** allows you to end the active call.

Using the Speakerphone During an Active Call

While in an active call, it is possible to enable the speakerphone feature.

1. Dial the number and press **SEND**.
2. Once the call is answered, press **OK** to activate the speakerphone.

Muting or Sending Keypad Tones

These options allow you to turn the key tones off or on. If the **Mute keys** option is selected, it allows you to press keys without hearing key tones during a call.

Note: To communicate with answering machines or computerized telephone systems, the Send Keypad Tone option must be selected.

Switching off the Microphone (Mute)

During a call, you can temporarily switch your phone microphone off so that the other person cannot hear you.

- ▶ Press the **Options** soft key, then press **Mute/Unmute**. The **Mute** option is then replaced with **Unmute**.

Searching for a Number in Address Book

You can search for a number from the Address Book during a call.

1. Press the **Options** soft key, then select **Contacts → Contact list**.
2. Highlight the Contact List entry.
- or -

Enter the first few letters of the contact into the Search field to highlight the closest match.

3. Press **Options** → **View** or **OK** to view your selected contact.

For further details about the **Address Book** feature, see “*Finding an Contacts list Entry*” on page 38.

Call Waiting

The Call Waiting feature alerts you of an incoming call while you have a call in progress, if this service is supported by the network.

To activate the Call waiting feature, press **Menu** → **Settings** → **Call** → **Voice calls** → **Call waiting** and select **Option** → **Activate**.

To answer a call while you have a call in progress:

1. While on a call, press **SEND** or press the **Accept** soft key to answer a new incoming call. The first call is automatically put on hold when you answer the new incoming call.
2. To switch between the two calls, press the **Swap** soft key. Swap places the current call on hold and then activates the previous call.

To end a call on hold:

1. Press the **Options** soft key, then select **End** → **Held call**. You can continue with the remaining call.
2. Press **END** to end the current active call.

3-Way Calling (Multi-Party Calling)

The 3-Way or Multi-Party feature allows you to answer a series of incoming calls and place them on hold. If this service is supported by the network, all calls can be joined together. You are notified of an incoming call by a call waiting tone.

Note: The **Join** option combines all of the calls you have established with your phone (both active and on hold). **Swap** places the current call on hold and then activates the previous call.

1. Press  to answer the first incoming call.
2. Press  to answer the next incoming call. The first call is automatically put on hold.
3. Join the first two callers by pressing the **Options** soft key, then selecting **Join**. **Join** combines your current set of callers into a single multi-party call, both active and on hold.
4. Press  to end the call.

Silent Mode

Silent mode is convenient when you wish to stop the phone from making a sound, in a theater, for example.

In **Idle** mode, press and hold  until the phone vibrates, the “Silent profile on” message appears on screen. The Silent mode icon  is displayed on the screen. For more information, refer to “*Profile*” on page 41.

In Silent mode, your phone speakers are muted. An incoming call causes the phone to vibrate and light up, depending on the settings of the **Silent** Phone Settings feature.

To exit and reactivate the previous sound settings, press and hold  again until the previous Sound Profile is restored. The Silent mode icon is no longer displayed.

Section 4: Menu Navigation

This section explains the menu navigation for your phone. It also includes an overview of all the available menus associated with your phone. Some menu options are controlled by the SIM provided by your service provider.

Menu Navigation

Menus and sub-menus can be accessed by scrolling through them using the Navigation keys or by using the shortcut keys.

Accessing a Menu Function by Scrolling

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Scroll using the Navigation keys to reach a main menu, **Settings**, for example. Press the **Select** soft key or the **OK** key to enter the menu.
3. If the menu contains sub-menus, **Profiles**, for example, you can access them by first highlighting the option and then by pressing the **Select** soft key or the **OK** key. If the menu you have selected contains further options, repeat this step.
4. To scroll through these menus, press either the **Up** or **Down** Navigation key or the **Volume** key (located on the left side of your phone). Press the **Select** soft key, or the **OK** key to make your selection.
5. To return to the previous menu level, press the **Back** soft key.
6. To exit the menu without changing the settings, press the **END** key.

Using Shortcuts

Numbered menu items, such as menus, sub-menus, and options can be quickly accessed by using their shortcut numbers. In Menu mode, Main Menu can be accessed by pressing the number keys (1 to 9) corresponding to their location on the screen.

Example: Accessing the Language menu.

1. Press the **Menu** soft key.
2. Press the  key for **Settings**.
3. Press the  key for **Phone**
4. Press the  key for **Language**.

Section 5: Messaging

This section describes how to send or receive text messages. It also includes the features and functionality associated with messaging.

Creating and Sending New Messages

1. In Idle mode, press **Menu** → **Messages** → **Create Message**. The Create Message screen displays with a field to enter your recipient.

Tip: To quickly access the **Create Message** screen, press **Left** Navigation key.

2. Enter the number for the recipient in the field provided, or press the **Options** soft key, then press **Add recipients** to choose from your **Contact list** or from your **Recent recipients** list.
3. While composing your message text, you can press the **Options** soft key to choose from the following options:
 - **Add recipients:** allows you to add recipients from your Contact list and from your Recent recipients.
 - **Add symbol:** allows you to enter symbols in your message.
 - **Add text:** allows you to enter text from your text templates or to attach a name card to your message.
 - **Writing options:** allows you to set the text Input method: T9Abc, T9ABC, T9abc, Abc, ABC, abc, Numeric or Symbols; and to select the Writing language: English or Español.
 - **Save in Drafts:** allows you to save your message to your Drafts folder.
 - **Sending options:** allows you to keep a copy of your message. The following options may be available according to your service provider: Reply path, Request delivery, Keep a copy, Validity period and Maximum.
 - **Exit:** allows you to Exit without saving or to Exit and Save your message in Drafts.

4. When you have finished composing your message, press **Options** → **Send** to send the message to the selected recipients.

Viewing New Received Messages

1. In Idle mode, new messages are indicated by icons and a **New Messages** pop-up.

The following icons indicate the message type.



- indicates a new Voicemail message.



- indicates a new Text message

2. Press the **View** soft key or the **OK** key. The **Messaging – Inbox** screen displays and lists information about the incoming messages.

Note: If you exit from this **View** screen, you will need to navigate to your **Inbox (Menu** → **Messages** → **Inbox)**, the **Recent Calls** screen, or you will need to dial your Voicemail contact to access your messages.

3. Use the navigation keys to highlight a message you wish to view, then press the **OK** key. The selected message appears in the display.
4. To scroll through the message (if additional text pages have been added), press the **Up** or **Down** key.
5. When you have finished, press the **END** key.

Using Message Options

Message options at the Inbox level differ according to the message type, what you have done with the message, and whether you are viewing the message.

► While viewing the list of messages in the Inbox, you can highlight a message and press the **Options** soft key to access the following message options:

- **View:** allows you to view your message.
- **Reply:** allows you to compose and send a reply to the message.
- **Forward:** allows you to forward the message.
- **Delete:** deletes the message you selected.
- **Delete multiple:** allows you to delete multiple selected messages or all messages.
- **Add to contact:** allows you to add the caller to your contacts.
- **Block by address:** allows you to block messages from this address. You can create a list of up to 10 addresses.
- **Move to Phone/Move to SIM:** allows you to transfer your message to your phone memory or to your SIM.
- **List by:** allows you to sort your list by Read/Unread, Date, Sender, Types, Subject or Size.
- **Protection on/off:** prevents/allows deletion of this message.

► While viewing a selected message, you can press the **Options** soft key to access the following message options:

- **Reply:** allows you to compose and send a reply to the message.
- **Forward:** allows you to forward the message.
- **Delete:** deletes the message you are currently viewing.
- **Add to Phonebook:** allows you to add to an existing contact or create a new contact.
- **Cut address:** allows you to paste this message address into a send field or into a new contact field.
- **Block by address:** allows you to block messages from this address. You can create a list of up to 10 addresses.
- **Move to phone/Move to SIM:** If a message is stored in the SIM card, it is saved to the phone's memory. If a message is stored in the phone's memory, it is then saved to the SIM card.
- **Protection on/off:** prevents/allows deletion of this message.

Inbox

The Inbox message box stores copies of messages you received.

Sentbox

The Sentbox message box stores copies of messages you sent.

Outbox

The Outbox message box stores copies of outgoing messages, both those sent successfully and those that failed. The recipients' phone numbers or names display in the outbox, if this information is available in your Address Book.

Drafts

The Drafts message box stores unsent messages that you want to edit or send at a later time.

Using Message Templates

Your phone has Text and Multimedia message templates that you can retrieve and apply when creating a message. You can change the applied template as needed before sending a message.

1. In Idle mode, press the **Menu** soft key, then select **Messages → Templates**. The Text Templates display.
2. Highlight a current template message and press the **Options** soft key to access the following options:
 - **Send Message**: allows you to create and send a message using the selected template.
 - **Edit**: allows you to change the currently selected template.
 - **Delete**: deletes the currently selected template.
3. When you have finished, press  .

Deleting Messages

When your phone's memory is full, an error message displays and you cannot receive any new messages. Use the **Delete** option to erase obsolete messages, freeing memory for new messages.

You can delete the messages in each message folder(s) individually or all at one time. You can also delete all of your messages at one time.

Deleted Individual or Multiple Messages

1. In Idle mode, press the **Menu** soft key, then select **Messages**.
2. Select a message folder (**Inbox**, **Sentbox**, **Outbox** or **Drafts**). A list of messages in the folder appears in the display.
3. To delete an individual message, highlight that message.
4. Press the **Options** soft key, then select **Delete**. The following options appear in the display:
 - **Delete**: deletes this message, provided it is unlocked.
 - **Delete multiple**: allows you to select multiple messages to delete or to specify delete all messages.Select the desired option.
5. At the "**Delete?**" prompt, press either the **Yes** soft key to confirm the deletion or the **No** soft key to cancel.

Messaging Settings

You can set up various options for using messaging services.

1. In Idle mode, press **Menu** → **Messages** → **Settings**.
2. Select the type of message settings that you want to change.
 - **Text Messages**
 - **Voice mail number**

3. Press the **Select** soft key or the **OK** key.

Text Message

The following options are available:

- **Sending options:** allows you to keep a copy of your sent messages.
- **Block number:** allows you to create a block number list.

Voice Mail

The following options are available:

- **Connect to voice server:** connects you to your voice server.
- **Voice server number:** stores the number used for access to the phone's remote voicemail.

Section 6: Understanding Your Contact List

This section allows you to manage your Contacts by storing their names and numbers in your Contact list.

Using Contacts

Dialing a Number from the Contact list

Once you have stored phone numbers in the Contact list, you can dial them easily by highlighting the number you wish to call and selecting **Options** → **Call**.

Note: You can access your Contacts from the Idle screen by pressing the **Contacts** soft key.

Finding an Contacts list Entry

You can store phone numbers and their corresponding names onto your SIM card.

1. In Idle mode, press the **Menu** soft key, then select **Contacts** → **Contact list**.
2. Enter the first few letters of the name.

The Contacts entries are then listed, starting with the first entry matching your input.

3. To select a different entry, press the **Up** or **Down** Navigation key until the entry you want is highlighted.
4. Once you have found the entry, press **SEND** to dial the number, or press the **Options** soft key to access the Contact list entry options.

Contact List Entry Options

While in the Contact list with any of the default entries highlighted, press the **Options** soft key to use access the following options:

- **View:** provides you with details about that contact entry. Press the **Back** soft key to return to the Contact list.
- **Call:** allows you to call a currently selected entry.
- **Send message:** allows you to send a text message to the selected entry.
- **Create contact:** allows you to add a new entry to either your Phone or SIM card.
- **Delete:** allows you to delete the selected contact entry from a target location such as the Phone and/or SIM card.
- **Delete all:** allows you to delete All, Phone entries or SIM entries.
- **Edit:** allows you to edit the contact information.
- **Writing options:** allows you to select the Input method and the Writing language.
- **Copy to:** allows you to copy all or a selection to your Phone/SIM.

Adding a New Contact

In the Idle screen, enter the number you wish to call and press **Options → Create contact**. Select the type of number, Mobile, Home, Fax or Other and at the prompt enter the name of the contact in the Name field.

Also, you can create a new contact from the Idle screen by pressing **Menu → Contacts → Create contact**. Enter the Name and number in the fields provided.

Favorites List

You can assign up to 8-Favorites entries and then dial them easily whenever you want, simply by pressing and holding the associated numeric key.

You can set up Favorites entries by going to **Menu → Contacts → Favorites** and selecting an Empty position in your Favorites list. Highlight that Empty position and press the **Add** soft key. Scroll to the contact you wish to assign to that Favorites position. To quickly call that contact from the Idle screen, press and hold the number assigned in the Favorites list.

Own Numbers

The Own Numbers menu selection stores the number assigned to the SIM in your phone.

- ▶ From the Idle screen, press **Menu → Contacts → Own numbers**.

Note: You can change the number assigned to your SIM that displays in the Own Numbers menu, but entering another number prevents you from making or receiving calls on the handset. You may also add other names and numbers into your phone for easy referral.

Managing Contacts Entries

You can View contacts from your Phone and SIM, from your Phone only or from your SIM only. You can save, copy and delete Phone and SIM entries on your phone and delete all.

- ▶ In Idle mode, press the **Menu** soft key, then select **Contacts → Management**.

Section 7: Changing Your Settings

This section includes tips on how to use some of your phone features, as well as how to change and customize the display settings, call handling, security settings, and other settings associated with your phone.

Profile

You can customize various sound profiles for your phone by changing the sound settings.

1. In Idle mode, press the **Menu** soft key and select **Settings** → **Profile**.
2. Highlight one of the following sound profiles:
 - **Normal:** The Normal profile allows you to customize your alerts.
 - **Silent:** The Silent profile causes the speaker to be muted and the phone only vibrates or displays information on its LCD.
 - **Driving:** The Driving profile keeps the speaker active and will launch the currently selected ringtone or melody when the associated notification is activated.
 - **Meeting:** The Meeting profile mutes the alerts.
 - **Outdoor:** The Outdoor profile keeps the speaker active, the volume settings are raised to their highest levels, any currently active ringtones or melodies are activated, and the vibrate feature is activated. This Outdoor icon displays.
 - **Offline:** The Offline profile allows you to select a keypad tone: Beep, Xylophone or Mute and to set the Volume for the Keypad tone and the Alert tone.
 - **My profile 1:** The My profile 1 setting allows you to set the Call alert type, Call ringtone, Message alert type, Message alert tone, Keypad tone and Volume.
 - **My profile 2:** The My profile 2 setting allows you to set the Call alert type, Call ringtone, Message alert type, Message alert tone, Keypad tone and Volume.

3. Press the **Options** soft key to Save or Edit the highlighted profile.
4. To Edit your setting, press the **Change** soft key to make a new selection.
5. Press the **Save** soft key when you are finished.

Display

In this menu, you can change various settings for the display: Wallpaper, My theme, Power saving mode or Light.

- ▶ In Idle mode, press the **Menu** soft key and select **Settings → Display**.
- **Wallpaper:** allows you to make a selection from the default wallpapers or to have them randomly displayed.
- **My Theme:** allows you to choose your theme from the following options: Ocean, Skyline, Emerald, Samsung theme or Plum. Highlight your selection and press **Save** to select and save.
- **Power saving mode:** allows you to turn **ON** or **OFF** the Power saving mode. Highlight your selection and press **OK** to save.
- **Light:** allows you to adjust LCD Brightness, LCD Contrast, Backlight time and Keypad light. Use the Navigation keys to highlight you selection. Press the Select soft key to save your selection.

Time & Date

This menu allows you to change the format for the current time and date display.

- ▶ In Idle mode, press the **Menu** soft key and select **Settings → Time and Date**.

Phone

The Phone settings menu allows you to set the language option for your phone to Automatic, English or Español and to turn on or off the Keypad auto-lock feature.

- ▶ In Idle mode, press **Menu → Settings → Phone**.

Note: When the Keypad auto-lock feature is on, your phone automatically locks your keypad when the phone has been idle for a while. To unlock your phone, press the Unlock soft key, then press OK.

The following options are available. Use the **Down** Navigation key to scroll to and set options:

- **Language:** allows you to select a display language. Press the **Save** soft key to save your new selection. Options include:
 - **Automatic:** the language is automatically selected according to the language of the SIM card used.
 - **English:** the selected phone language is changed to English.
 - **Español:** the selected phone language is changed to Spanish.
- **Keypad auto-lock:** allows you to turn **ON** or **OFF** this feature.

Security

Security enables you to restrict the use of your phone by the others and to restrict the types of calls. Various codes and passwords are used to protect the features of your phone. The following options are available. Use the **Up** or **Down** Navigation key to scroll to and set options.

- **Phone lock:** when enabled, the phone is locked and you must enter the 4- to 8-digit phone password each time the phone is switched on. To change the phone password, see Change password on page 44. Once the correct password has been entered, you can use the phone until you switch it off. The following options are available:
 - **Off:** you are not asked to enter the phone password when you switch on the phone.
 - **On:** you are required to enter the phone password when you switch on the phone.
- **SIM lock:** when enabled, your phone only works with the current SIM. You must enter the lock code to unlock the SIM so you can use a different SIM card. Once you have entered the lock code, you are asked to confirm your password. Reenter your password and press the OK soft key.

Note: This lock code is typically the last four digits of the current phone number or it can be obtained from an AT&T customer service representative.

- **PIN lock:** when enabled, you must enter your PIN each time you switch on the phone. Consequently, any person who does not have your PIN cannot use your phone without your approval. The following options are available:
 - **Off:** the phone connects directly to the network when you switch it on.
 - **On:** you must enter the PIN each time the phone is switched on.
-

Note: Before disabling the PIN lock feature, you must enter your PIN. You can obtain your PIN from your customer service representative.

- **Privacy lock:** using this option you can lock All of the applications or any of the following applications: Call log, Contacts or Messages. Press the Save soft key to save your selections. Once you have locked the contents, you must enter the phone password to access the associated menus.
-

Note: The first time you access the password screen, you are prompted to create a password.

- **Change password:** allows you to change your password to a new one. You must enter the current password before you can specify a new one. Once you have entered a new password, you are asked to confirm it by entering it again.
- **Change PIN code:** allows you to change your current PIN, provided the PIN check feature is enabled. You must enter the current PIN before you can specify a new one.

Call

The Call menu allows you to set up these options for All calls and for Voice calls.

- **All calls:** allows you to set up options for Show my number, Auto reject, Answering mode, Call status tones and Alerts on call.
- **Voice calls:** allows you to set up options for Call barring (if available), Call waiting and Auto redial.

Applications

The Applications menu allows you to choose how your phone dials and receives calls in these settings menus: Message and Contacts.

- **Message:** allows you to set up options for Text messages, Broadcast messages and to connect to your Voice mail number.
 - **Text messages:** allows you to set up options for Sending options and for Block number.
 - **Voice mail number:** allows you to connect to the voice server and to view your voice server number.
- **Contact:** allows you to view your Favorites, to select save options for Phone or SIM and to view your Own numbers.
 - **Favorites:** allows you to view your Favorites list.
 - **Save new contacts to:** allows you to choose how your contacts are saved: to your phone or to your SIM or to be prompted each time.
 - **Own numbers:** allows you to view the number assigned to the SIM in your phone.

Note: You can change the number assigned to your SIM that displays in the Own Numbers menu, but entering another number prevents you from making or receiving calls on the handset. You may also add other names and numbers into your phone for easy referral.

Memory

The Memory menu allows you to clear your phone memory and to view the memory status.

- ▶ In Idle mode, press the **Menu** soft key and select **Settings → Memory** to choose from the menu options.
- **Clear phone memory:** allows you to specify All, Messages or Contacts.
- **Memory status:** allows you to view the memory status of the contacts and messages on your Phone and the contacts and messages on your SIM.

Master reset

The Master reset menu allows you to reset the only the settings you designate or to reset all the settings.

- ▶ In Idle mode, press the **Menu** soft key and select **Settings** → **Master reset** to choose from the menu options.
- **Reset settings:** allows you to reset All or any combination of the following settings: Profiles, Display, Time and date or Phone.
- **Master reset:** allows you to perform a master reset of your phone when you see this prompt: Master reset will restart phone. Reset settings? Press the **OK** soft key to confirm.