

11Mbps Wireless LAN Card

Quick Installation Guide

802.11b USB Adapter

This *Quick Installation Guide* only provides you with the basic instructions. For more detailed information, please refer to the *Manual* file on the provided CD.

* All other product names and trademarks in this document are trademarks of their respective companies.

1 System Requirements

To use the Wireless LAN Card, your computer must meet the following minimum requirements:

- Windows 98(SE)/Me/2000/XP
- 32 MB of RAM, additional memory recommended
- Standard USB port
- UL listed I.T.E. computers.

2 Software and Hardware Installation

Caution: Do not connect the Wireless LAN Card device to your computer before installing its software. If this happens, the Windows PnP function will detect the Wireless LAN Card and issue a dialog box requesting its driver. Click Cancel to quit the wizard and unplug the Wireless LAN Card.

1. Close all Windows programs that are running.
2. Insert the provided Software Utility CD into your CD-ROM drive and select **Utility&Driver**. Or, run **Setup.exe** from **D:\Utility&Driver** folder of the Software Utility CD where **D** is the drive letter. When the welcome screen pops up, click **Next**.
3. When the **License Agreement** screen appears, click **Yes**.
4. Select **Typical** and click **Next**. The program will auto-process the software installation.
5. Later, a screen will pop up asking you to insert your wireless card into the USB port of your computer. Please do as the dialog request.
6. Subject to your Windows OS, the following situation may occur:

For Windows 98(SE)

- a. The **Add New Hardware Wizard** screen will pop up. Click **Next**.
- b. Select **Search for the best driver for your device**. Click **Next**.
- c. *By default, in the search screen, Windows will be able to find the path where the driver is located. Click **Next** to continue.*
- d. *Windows will find the location of the driver. Click **Next** to continue.*
- e. You will be prompted for Windows 98 CD. Click **OK**. Then enter the path to your Windows 98(SE) CD (if Windows 98 CD files are not in your host computer, remove the Software Utility CD and insert the Windows 98 CD into your CD-ROM at this step) and click **OK**.
- f. Click **Finish**. If prompted to restart your computer. Click **No**.

For Windows 2000

If you are prompted with the **Digital Signature not Found** alarm message, just click **Yes** to continue with the installation.

For Windows XP

- a. Upon hardware detection, Windows OS will pop up a dialog requesting for driver. Select **Install the software automatically** and click **Next**.
 - b. If Windows logo compatibility message appears, click **Continue Anyway** to proceed with the installation.
 - c. Click **Finish**.
7. Click **Finish** to complete the installation.

3 Using the Wireless LAN Monitor Utility

After software and hardware installation, the **Wireless LAN Monitor Utility** should be launched automatically with its icon located on the system tray. Double-clicking the tray icon will pop up the **Wireless LAN Monitor Utility** screen.

The **Wireless LAN Monitor Utility** comes with these tabs: **Status**, **Statistics**, **Site Survey**, **Encryption**, **Advanced**, **Profiles** and **Info** as described below.

Note: For Windows XP users, if you want to disable the Windows XP **Wireless Zero Configuration Utility** and have your device managed by the **Wireless LAN Monitor Utility**, please refer to the section 4.

Status

The configuration parameters of current profile are displayed. You can click **Change** to make the setting items configurable, change the settings and then click **Submit** to save your changes. The following describes the basic settings for Ad-Hoc and Infrastructure mode connection. If you need to set the WEP settings, refer to the description of **Encryption** tab.

Connecting to Other Wireless LAN Cards (Ad-Hoc Mode)

To connecting to other Wireless LAN Card equipped computers to form a wireless network, make the configurations as below:

Operating Mode	Select Ad-Hoc .
Channel	Select the channel number that you want to use. Note that the available channels are different according to your geographic location. Make sure to select the legal frequency channels allowed in your regulatory domain. <ul style="list-style-type: none">▶ 1-11 channels for US, Canada (FCC)▶ 1-14 channels for Japan (TELEC)▶ 1-13 channels for Europe (ETSI)▶ 10-13 channels for France
SSID	Type the Service Set ID (SSID) of the Wireless LAN group. A network name is mandatory for Ad Hoc mode. All wireless clients must use the same SSID in order to communicate with each other.
Tx Rate	Select the transmit rate to use. If Auto is selected, the wireless adapter will adaptively adjust its data rate from 11 Mbps to 5.5, 2 or 1 Mbps as the signal strength warrants.
Radio	Select On to enable the radio signal.

After finishing required settings, click **Submit** and the Wireless LAN Card will scan the specified channel to make connection.

Connecting to Access Points (Infrastructure Mode)

To connect to a wired/wireless network through an Access Point, make the configurations as below:

Operating Mode	Select Infrastructure .
SSID	In the SSID field, type the SSID of the Access Point you are going to connect to. The wireless client must use the same SSID as the Access Point in order to communicate with other computers via the Access Point.
Tx Rate	Select the transmit rate to use. If Auto is selected, the wireless adapter will adaptively adjust its data rate from 11 Mbps to 5.5, 2 or 1 Mbps as the signal strength warrants.
Int. Roaming	Select whether to enable the roaming feature.
Radio	Select On to enable the radio signal.

After finishing required settings, click **Submit** and the Wireless LAN Card will start to make connection.

Checking Link Quality (Infrastructure Mode Only)

The **Status** field displays the information about the status of the current communication. If connected, it shows the BSSID of the Access Point to which the card is associated. **Signal Strength** and **Link Quality** allow you to check the current connection status.

Statistics

The **Statistics** tab allows you to view the available statistic information, including the **Data Packets**, **Management Packets** and **Rejected Packets**. **Tx** indicates data transmitted whereas **Rx** indicates data received. Optionally you can click the **Reset** button to reset the statistic counters to zero.

Site Survey

In any of the two modes, this feature allows you to scan all the channels to find out all the available Access Points and wireless stations (Ad-Hoc mode) within the range of your card. With each Access Point or wireless station listed, these information are provided: the BSSID and SSID of the Access Point/wireless station, the signal strength, the channel, the encryption and the BSS mode.

In order to update this list, click the **Re-scan** button. If you want to associate with any of the Access Point/stations listed, double-click on your choice and the system will take you back to the **Status** tab showing you the parameters of the connection newly established.

Encryption

In any of the two modes, this option allows you to set up encryption parameters. Note that your encryption settings must match those used by the Access Points/wireless stations (Ad-Hoc mode) with which you want to associate.

First, either enable (by selecting **64 Bit** or **128 Bit**) or disable encryption from the **Encryption** field. If encryption is enabled, enter your WEP keys in **HEX** or **ASCII** format. Note that if you use HEX format, only digits 0-9 and letters A-F, a-f are valid.

The four keys, including the one selected as **WEB Key to use**, are used to decrypt the data you receive. In the **WEP Key to use** box, select one of the four keys to encrypt the data you are going to transmit.

In the **WEP Mode** list, select **Mandatory** or **Optional** as required.

Finally, you can select whether to use **Open System**, **Shared Key** or **Auto** as the authentication type. Your authentication type must be the same as those on the Access Point/wireless station (Ad-Hoc mode) with which you want to associate.

To enable the settings, click the **Submit** button.

Advanced

In any of the two modes, this option allows you to change advanced configuration settings, including **Preamble Type**, **Fragmentation Threshold**, **RTS/CTS Threshold** and **Power Save**.

The **Preamble Type** allows selecting **Short** to communicate with other 802.11b devices that support short preamble to boost the throughput. Make sure to use the appropriate preamble type according to your network environment.

Both **Fragmentation** and **RTS/CTS** thresholds are disabled by default. To change the parameters, move the slide bar with your mouse and then use the right and left arrow keys of your keyboard to select an exact number in bytes.

In the **Power Save** check box, select whether to enable power saving feature as required.

Profiles

The **Profiles** feature allows you to create multiple profiles to reflect specific WLAN settings for each place you may roam. You can easily retrieve the required profile from the **Current Profile** drop-down list. Selecting a profile from the **Existing profiles** list displays the corresponding parameters on the bottom of this tab. To create a new profile, click **New** and then enter the name for the profile. If you need to customize the settings for certain profile, you must select the profile from the **Current Profile** drop-down list, go to the **Status** tab and then click **Change** to change the settings.

Info

This option displays the basic information about the device, including the Driver, Firmware, Application version and MAC address of your Wireless LAN Card.

4 Using Windows XP Wireless Zero Configuration Utility

Windows XP provides built-in **Wireless Zero Configuration Utility** for wireless configuration and monitor. When it is active, it will override the management of the **Wireless LAN Monitor Utility**. In this situation, when you open the **Wireless LAN Monitor Utility**, you are only allowed to view the statistics and version information. Configuration fields and buttons are dimmed.

If you want to disable **Wireless Zero Configuration Utility** and have your Wireless LAN Card managed by the manufacturer's **Wireless LAN Monitor Utility**,

1. Double-click the Windows XP wireless tray icon and then click **Advanced** (or **Properties**) > **Wireless Networks**.
2. On the **Wireless Networks** tab, uncheck the **Use Windows to configure my wireless network settings** box and click **OK**.

The following describes the essential instructions on using Windows XP wireless utility to get your wireless network established. For more information please refer to Windows XP on-line help.

Connecting to an Access Point or Wireless LAN Card

Double-clicking the network connection icon to open the **Connect to Wireless Network** window. You will see all the Access Points or Wireless LAN Cards (Ad-Hoc mode) that are available in the air.

Select the Access Point or Wireless LAN Card that you want to connect to. Enter the WEP key in **Network Key** field, if necessary, and click **Connect**. Then you will join its network.

Viewing Wireless Connection Status

After you successfully connect to the target Access Point or Wireless LAN Card, double-click the wireless icon on the system tray again. The **Wireless Network Connection Status** window displays the general data of the current connection, such as Status, Duration, Speed, Signal Strength, etc.

Configuring Your Wireless Properties

In the **Wireless Network Connection Status** window, click **Properties** to open the **Wireless Network Connection Properties** window. The following describes each tab of the properties window to help you do more settings of the Wireless LAN Card.

General

This tab allows you to specify the network methods to be used with your Wireless LAN Card. The network policy depends on your wireless network. For TCP/IP protocol, you should configure its properties as instructed by your network administrator.

Wireless Networks

Under **Available networks** section, you can also see all the Access Points and Wireless LAN Cards (Ad-Hoc mode) available in the air. Clicking **Refresh** will update the list of Access Points and Wireless LAN Cards (Ad-Hoc mode).

Under **Preferred networks** section, you can add any wireless networks that you wish to connect to. To do this, just click **Add** and enter necessary network setting in **Wireless Network Properties** window and then click **OK**.

Authentication

The most important setting for the Wireless LAN Card is to disable **Enable network access control using IEEE802.1X** to ensure successful connection between your Wireless LAN Card and Access Point or other wireless client (Ad-Hoc mode). You must disable this function for any reason. Otherwise, there may be some problems happening during connection. For other settings, we recommend you keep the default settings to minimize the problems during connection.

5 Technical support

Email: support@airlinkplus.com

Web: www.airlinkplus.com