




Extron® Electronics

INTERFACING, SWITCHING AND DISTRIBUTION

User's Guide

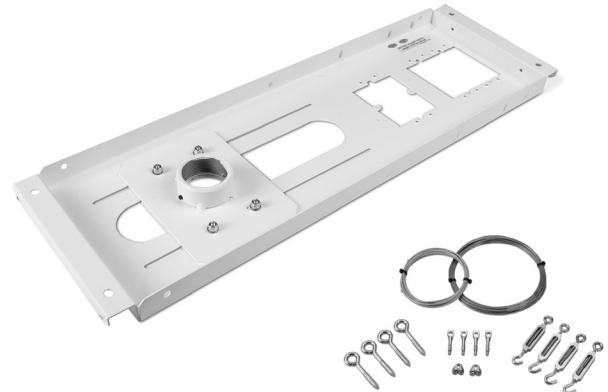

PCM 240

Projector Ceiling Mount

68-1180-01
Rev. C
07 06



Extron Electronics, USA
1230 South Lewis Street
Anaheim, CA 92805
USA
714.491.1500
Fax 714.491.1517

Extron Electronics, Europe
Beeldschermweg 6C
3821 AH Amersfoort
The Netherlands
+31.33.453.4040
Fax +31.33.453.4050

Extron Electronics, Asia
135 Joo Seng Road, #04-01
PM Industrial Building
Singapore 368363
+65.6383.4400
Fax +65.6383.4664

Extron Electronics, Japan
Kyodo Building
16 Ichibancho
Chiyoda-ku, Tokyo 102-0082 Japan
+81.3.3511.7655
Fax +81.3.3511.7656

Precautions

Safety Instructions • English



This symbol is intended to alert the user of important operating and maintenance (servicing) instructions in the literature provided with the equipment.



This symbol is intended to alert the user of the presence of uninsulated dangerous voltage within the product's enclosure that may present a risk of electric shock.

Caution

Read Instructions • Read and understand all safety and operating instructions before using the equipment.

Retain Instructions • The safety instructions should be kept for future reference.

Follow Warnings • Follow all warnings and instructions marked on the equipment or in the user information.

Avoid Attachments • Do not use tools or attachments that are not recommended by the equipment manufacturer because they may be hazardous.

Consignes de Sécurité • Français

Ce symbole sert à avertir l'utilisateur que la documentation fournie avec le matériel contient des instructions importantes concernant l'exploitation et la maintenance (réparation).



Ce symbole sert à avertir l'utilisateur de la présence dans le boîtier de l'appareil de tensions dangereuses non isolées posant des risques d'électrocution.

Attention

Lire les instructions • Prendre connaissance de toutes les consignes de sécurité et d'exploitation avant d'utiliser le matériel.

Conserver les instructions • Ranger les consignes de sécurité afin de pouvoir les consulter à l'avenir.

Respecter les avertissements • Observer tous les avertissements et consignes marqués sur le matériel ou présentés dans la documentation utilisateur.

éviter les pièces de fixation • Ne pas utiliser de pièces de fixation ni d'outils non recommandés par le fabricant du matériel car cela risquerait de poser certains dangers.

Sicherheitsanleitungen • Deutsch

Dieses Symbol soll dem Benutzer in der im Lieferumfang enthaltenen Dokumentation besonders wichtige Hinweise zur Bedienung und Wartung (Instandhaltung) geben.



Dieses Symbol soll den Benutzer darauf aufmerksam machen, daß im Inneren des Gehäuses dieses Produktes gefährliche Spannungen, die nicht isoliert sind und die einen elektrischen Schock verursachen können, herrschten.

Achtung

Lesen der Anweisungen • Bevor Sie das Gerät zum ersten Mal verwenden, sollten Sie alle Sicherheits- und Bedienungsanleitungen genau durchlesen und verstehen.

Aufbewahren der Anleitungen • Die Hinweise zur elektrischen Sicherheit des Produktes sollen Sie aufbewahren, damit Sie im Bedarfsfall darauf zurückgreifen können.

Befolgen der Warnhinweise • Befolgen Sie alle Warnhinweise und Anleitungen auf dem Gerät oder in der Benutzerdokumentation.

Keine Zusatzerze • Verwenden Sie keine Werkzeuge oder Zusatzerze, die nicht ausdrücklich vom Hersteller empfohlen wurden, da diese eine Gefahrenquelle darstellen können.

Instrucciones de seguridad • Español

Este símbolo se utiliza para advertir al usuario sobre instrucciones importantes de operación y mantenimiento (o cambio de partes) que se desean destacar en el contenido de la documentación suministrada con los equipos.



Este símbolo se utiliza para advertir al usuario sobre la presencia de elementos con voltaje peligroso sin protección aislante, que puedan confronarse dentro de la caja o alojamiento del producto, y que puedan representar riesgo de electrocución.

Precaucion

Leer las instrucciones • Leer y analizar todas las instrucciones de operación y seguridad, antes de usar el equipo.

Consever las instrucciones • Conservar las instrucciones de seguridad para futura consulta.

Obedecer las advertencias • Todas las advertencias e instrucciones marcadas en el equipo o en la documentación del usuario, deben ser obedecidas.

Evitar el uso de accesorios • No usar herramientas o accesorios que no sean específicamente recomendados por el fabricante, ya que podrían implicar riesgos.

Precautions

安全须知 • 中文



这个符号提示用户该设备用户手册中的操作和维护说明。



这个符号警告用户该设备机壳内暴露的危险电压，有触电危险。

注意

阅读说明书 • 用户使用该设备前必须阅读并理解有安全和使用说明。

保存说明书 • 用户应保存安全说明书以备将来使用。遵守警告 • 用户应遵守产品和用户指南上的所有安全和操作说明。

避免追加 • 不要使用该产品厂商没有推荐的工具或追加设备，以避免危险。

警告

电源 • 该设备只能使用产品上标明的电源。设备必用有地线供电系统供电。第三条线（地线）是安设施，不能不用或跳过。

拔掉电源 • 为安全地从设备拔掉电源，请拔掉所有设备后或桌面电源的电源线，或任何接到市电系统的电源线。

电源线保护 • 妥善布线，避免被踩踏，或重物挤压。

维护 • 所有维修必须由认证的维修人员进行。设备没有用户可以更换的零件。为避免出现触电危险不要自己试图打开设备盖子维修该设备。

通风孔 • 有些设备机壳上有通风槽或孔，它们是用来防止机内敏感元件过热。不要用任何东西挡住通风孔。

锂电池 • 不正确的更换电池会有爆炸的危险。必须使与厂家推荐的相同或相近型号的电池。按照生产厂家的建议处理废弃电池。

Warning

Power sources • This equipment should be operated only from the power source indicated on the product. This equipment is intended to be used with a main power system with a grounded (neutral) conductor. The third (grounding) pin is a safety feature, do not attempt to bypass or disable it.

Power disconnection • To remove power from the equipment safely, remove all power cords from the rear of the equipment or the desktop power module (if detachable), or route the power source cord (wall plug).

Power cord protection • Power cords should be protected so that they are not likely to be stepped on or pinched by items placed upon or against them.

Servicing • Refer all servicing to qualified service personnel. There are no user-serviceable parts inside. To prevent the risk of shock, do not attempt to service this equipment yourself because opening or removing covers may expose you to dangerous voltage or other hazards.

Slots and openings • If the equipment has slots or holes in the enclosure, these are provided to prevent overheating of sensitive components inside. These openings must never be blocked by other objects.

Lithium battery • There is a danger of explosion if battery is incorrectly replaced. Replace it only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

Avertissement

Alimentations • Ne faire fonctionner ce matériel qu'avec la source d'alimentation indiquée sur l'appareil. Ce matériel doit être utilisé avec un système d'alimentation principale comportant un fil de terre (neutral). Le troisième contact de terre à la terre constitue un dispositif de sécurité et ne peut pas être sauté ou désactivé.

Désconnexion de l'alimentation • Pour mettre le matériel hors tension sans danger, déconnectez tous les cordons d'alimentation de l'arrière de l'appareil ou du module d'alimentation de bureau (s'il est amovible) ou encore de la prise secteur.

Protection du condon d'alimentation • Acheminer les cordons d'alimentation de manière à ce que personne ne risque de marcher dessus et à ce qu'ils ne soient pas écrasés ou pinçés par des objets.

Réparation-maintenance • Faire exécuter toutes les interventions de réparation-maintenance par technicien qualifié. Aucun des éléments internes ne peut être réparé par l'utilisateur. Afin d'éviter tout danger d'électrocution, l'utilisateur doit pas essayer de procéder lui-même à ces opérations car l'ouverture ou le retrait des couvercles risquent de l'exposer à de hautes tensions et autres dangers.

Fentes et ouvertures • Si le boîtier de l'appareil comporte des fentes ou des orifices, ceux-ci servent à éviter la surchauffe des composantes sensibles de surchauffer. Ces ouvertures ne doivent jamais être bouchées par des objets.

Lithium Batterie • Il a danger d'explosion s'il y a remplacement incorrect de la batterie. Remplacer uniquement avec une batterie du même type ou d'un type équivalent recommandé par le constructeur. Mettre au rebut les batteries usagées conformément aux instructions du fabricant.

Vorsicht

Stromquellen • Dieses Gerät sollte nur über die auf dem Produkt angegebene Stromquelle betrieben werden. Dieses Gerät ist für eine Verwendung mit einer Hauptstromversorgung mit einem geründeten Kontakt und einer konizierten. Der dritte Kontakt ist für einen Erdanschluß und stellt eine Sicherheitsfunktion dar. Diese sollte nicht umgangen oder ausser Betrieb gesetzt werden.

Stromabtrennung • Um das Gerät sicher vom Netz zu trennen, sollten Sie alle Netzkabel aus der Rückseite des Gerätes, aus der externen Stromversorgung (falls dies möglich ist) oder aus der Wandsteckdose ziehen.

Schutz des Netzkabels • Netzkabel sollten stets so verlegt werden, daß sie nicht im Weg liegen und niemand darauf treten kann oder Objekte darauf- oder unmittelbar dagegen gestellt werden können.

Wartung • Alle Wartungsmaßnahmen sollten nur von qualifiziertem Servicepersonal durchgeführt werden. Die internen Komponenten des Gerätes sind wartungsfrei. Zur Vermeidung eines elektrischen Schocks versuchen Sie in keinem Fall, dieses Gerät selbst öffnen, da beim Entfernen der Abdeckungen die Gefahr eines elektrischen Schlags und/oder anderer Gefahren bestehen.

Schlüsse und Öffnungen • Wenn das Gerät Schlitze oder Löcher im Gehäuse aufweist, diese dienen zur Vermeidung der Überhitzung der internen Bauteile. Im Inneren dieser Öffnungen dürfen niemals von warmen Objekten blockiert werden.

Lithium-Batterie • Explosionsgefahr, falls die Batterie nicht richtig ersetzt wird. Ersetzen Sie verbrauchte Batterien nur durch den gleichen oder einen vergleichbaren Batterietyp, der auch vom Hersteller empfohlen wird. Entsorgen Sie verbrauchte Batterien bitte gemäß den Herstellerauflagen.

Advertencia

Alimentación eléctrica • Este equipo debe conectarse únicamente a la fuente/tipo de alimentación eléctrica indicada en el mismo. La alimentación eléctrica de este equipo debe provenir de un sistema de distribución general con conductor neutro a tierra. La tercera pata (puesta a tierra) es una medida de seguridad, no puenteártela ni eliminarla.

Desconexión de alimentación eléctrica • Para desconectar con seguridad la alimentación eléctrica al equipo, desenchufar todos los cables de alimentación en el panel trasero del equipo, o desenchufar el módulo de alimentación (si fuera independiente), o desenchufar el cable del receptáculo de la pared.

Protección de los cables de alimentación • Los cables de alimentación eléctrica se deben instalar en lugares donde no sean pisados ni apretados por objetos que se puedan apoyar sobre ellos.

Reparaciones/mantenimiento • Solicitar siempre los servicios técnicos de personal calificado. No hay partes a las que el usuario deba acceder. Para evitar riesgos de electrocución no intentar personalmente la reparación/mantenimiento de este equipo, ya que al abrir o extraer las tapas puede quedar expuesto a voltajes peligrosos u otros riesgos.

Ranuras y aberturas • Si el equipo posee ranuras o orificios en su caja / alojamiento, es para evitar el sobrecalentamiento de componentes internos sensibles. Estas aberturas nunca se deben obstruir con otros objetos.

Batería de litio • Existe riesgo de explosión si esta batería se coloca en la posición incorrecta. Cambiar esta batería únicamente con el mismo tipo (o su equivalente) recomendado por el fabricante. Descharcar las baterías usadas siguiendo las instrucciones del fabricante.

Table of Contents

Introduction

About this manual	2
About the PCM 240	2
Features	3
Optional accessories	3

Installing the PCM 240

Preparing the ceiling	4
Installing the projector ceiling mount	5
Securing the mounting plate to the structural ceiling	6
Attaching the tie wire	8
Threaded rod installation	9
Attaching the safety cable	9
Attaching the projector mounting pole	10
Attaching Extron devices and electrical boxes	10

Specifications, Part Numbers and Dimensions

General specifications	11
PCM 240 kit contents	11
Optional accessories - part numbers	12
Dimensions	13

This page was deliberately left blank

All trademarks mentioned in this manual are the properties of their respective owners.

68-1180-01
Rev. C
07 06

Introduction

About this Manual

This manual discusses how to safely install and use the Extron PCM 240 Projector Ceiling Mount.

About the PCM 240 projector ceiling mount

The Extron PCM 240 Projector Ceiling Mount is a versatile ceiling plate for installation in classrooms or boardrooms with 2' x 2' or 2' x 4' T-bar style suspended ceiling. The PCM 240 should be secured to the structural ceiling, above the suspended ceiling tiles, using turnbuckles and tie wire. Once secured in place, it is easily fixed to the suspended ceiling T-bar with the supplied screws. When properly installed, it can hold up to 50 pounds (23 kgs) of A/V equipment. The projector mounting pole is easily installed in the threaded pipe adapter mounted on a sliding plate, allowing horizontal adjustment for correct alignment. The PCM 240 includes mounting holes for Extron 3" deep, $\frac{1}{4}$ rack wide devices (e.g. MPA 122), and has two openings for Raco (catalog #8471) or UL junction box insertion, providing integral power access points, video connection, or simple cable pass-throughs.

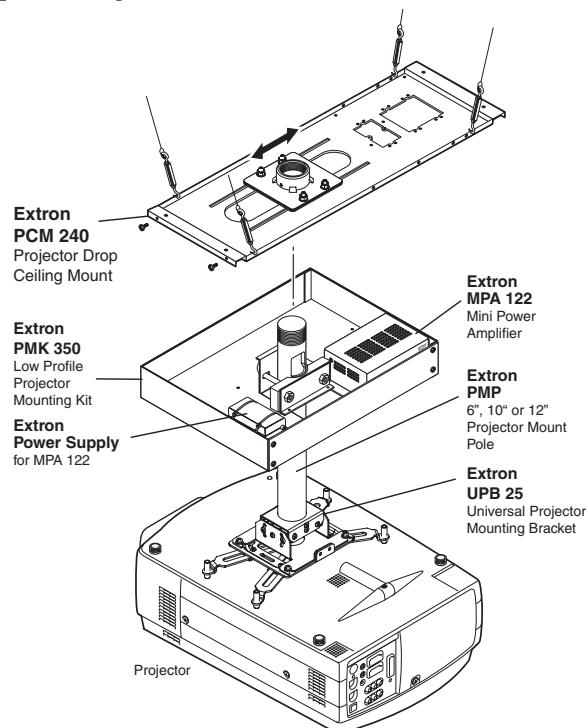


Figure 1 — Typical application of PCM 240

Features

- Projector mount for suspended ceilings with 2' x 2' or 2' x 4' tile grids
- Provides time- and cost-effective integration of projectors in small boardrooms and classrooms
- Includes knockout openings for two (one 1-gang and one 2-gang) junction boxes or for use as cable pass-throughs.
- One 1.5" threaded pipe adapter is provided for mounting a projector mounting pole.
- Adjustable mounting pole adapter plate for correct alignment.
- Holds up to 50 pounds (23 kgs) of A/V equipment and 3" deep, $\frac{1}{4}$ rack devices when correctly installed
- Three methods of suspension: ceiling anchors, turnbuckles and tie wire (60 foot supplied) to structural ceiling (concrete or wood joists); turnbuckle and tie wire looped over ceiling trusses; or threaded rod (not supplied)

Optional accessories

Optional equipment to complement the PCM 240 includes:

- **PMK 350 Low Profile Projector Mounting Kit** — The Extron PMK 350 securely mounts several quarter rack width products, or multiple products and a power supply to a projector ceiling mounting pole. It uses only 2" (5 cm) between the projector and the ceiling to conveniently and securely enclose the products out of sight above the display device.
- **PMP Series Projector Mounting Poles** — Available in fixed lengths of 4" (10 cm), 6" (15 cm), 10" (25 cm), and 12" (30 cm), PMP Projector Mounting Poles are used with the PCM 240 and UPB 25 to create individualized installations. Each pole includes a cutout, which provides convenient cable access.
- **UPB 25 Universal Projector Mounting Bracket** — The Extron UPB 25 universal projector mount is compatible with nearly every projector having a weight of up to 25 pounds (11 kg). It features independent adjustment of roll (± 4 degrees of horizontal tilt), pitch (± 25 degrees of vertical angle) and yaw (360 degrees of rotation on a pole mount, or 10 degrees when mounted flush to the ceiling) for precise control of each axis and exact alignment of the projector. Locking mechanisms maintain the original positioning settings when servicing requires the projector and attached arm assembly to be removed from the mounting assembly.

Installation

Installing the PCM 240

Before starting, check that all the parts received match the supplied parts list (see "PCM 240 kit contents" table, page 10).

Preparing the ceiling

WARNING

The PCM 240 must not be supported by the suspended ceiling itself. It must be secured to and suspended from the structural ceiling above.

WARNING

Check the structural ceiling to ensure that it can handle a load four times the weight of the final setup.

NOTE

Refer to local building standards and codes to verify that the installation will meet all the regulatory requirements.

Identify the location for projector placement. Remove the ceiling tiles adjacent to the tile where the projector will be mounted. This will allow easy and safe access while installing the projector mount.

Inspect the structural ceiling where the projector mount will be installed to ensure there are no cracks or weaknesses that could jeopardize the completed installation. Select the correct installation hardware from those supplied. Hardware for each of three methods of hanging and securing the PCM 240 is supplied:

- Turnbuckles and tie wire tied to concrete anchors for concrete structures
- Turnbuckles and tie wire tied to eye screws for joists
- Turnbuckles and tie wire wrapped around wooden trusses.

Alternatively, threaded rods (not supplied) may be used to secure the mount to the ceiling structure. Safety cable is provided to hold the mount up in the event that any tie wire or rods become loose or detached as a result of an earthquake or accident.

Installing the projector ceiling mount

1. Screw the four T-bar securing screws loosely into the ends of the mounting plate (see figure 2).

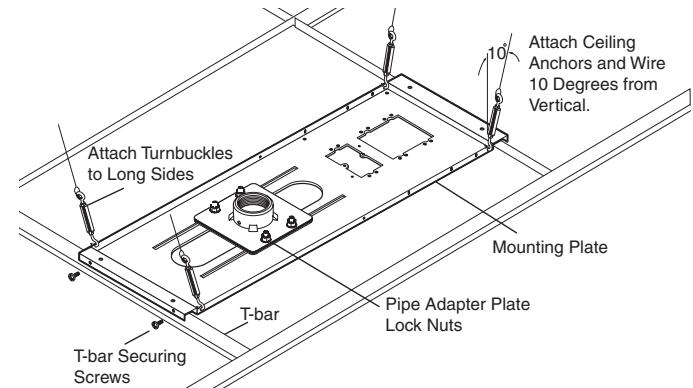


Figure 2 — Installing the PCM 240

2. Place the mounting plate over the selected ceiling tile and lower onto the T-bar. Adjust to the position desired and lightly tighten the T-bar securing screws to the frame.
3. Adjust the sliding pipe adapter plate to the precise position for the mounting pole, and tighten down the locking nuts.
4. Using the hole in the pipe adapter plate as a guide, mark the ceiling tile where the mounting pole will pass through it. If electrical boxes are also to be installed, mark the ceiling tile where the cut-outs will be.
5. Loosen the T-bar securing screws and remove the mounting plate.
6. Remove the tile, and carefully cut out the marked area(s).
7. Replace the ceiling tile.

NOTE

Be sure to place the ceiling tile back in the same T-bar square, with the same orientation as it had originally. Failure to do so will result in misalignment of the projector.

8. Attach any 3" deep, 1/4 rack devices or electrical boxes required onto the mounting plate. Depending on the situation, this may be easier to do after the plate is fully installed.

CAUTION

Using flex conduit is recommended when installing any power wiring.

Installation, cont'd

WARNING

For safety, all wiring of the electrical boxes and accessories should be completed after the plate is fully installed and secure.

9. Place the mounting plate back over T-bar rails, so that the hole in the tile aligns with the pipe adapter plate. If necessary, loosen the lock nuts on the pipe adapter plate and readjust the plate to align over the hole. If you wish to fit the anti-vibration pads, follow step 10 below. If not, just tighten down the lock nuts and proceed to step 13.

NOTE

DO NOT rest, or lean on the mounting plate or suspended ceiling grid when attaching turnbuckles, tie wire, or drilling into ceiling.

10. To mount the four optional self adhesive anti-vibration pads, completely unscrew the lock nuts on the adapter plate, and remove the top section only.
11. Peel and attach the pads to the **underside** of the adapter plate, one near each corner (see figure 3).

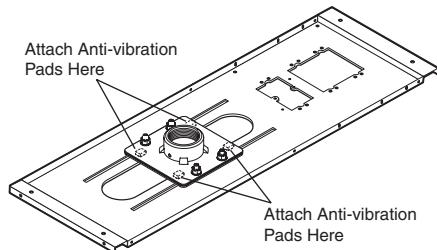


Figure 3 — Attach anti-vibration pads under adapter plate

12. Replace top adapter plate and secure in place with locking nuts.
13. Attach the four turnbuckles to the long sides of the mounting plate, one near each corner (see figure 2).

Securing the mounting plate to the structural ceiling

Follow the steps below, according to the structural ceiling type, and preferred method.

Concrete ceilings

1. Mark and drill four holes, at least $1\frac{1}{2}$ " (38 mm) deep, into the ceiling, using a $\frac{1}{4}$ " (6 mm) diameter carbide tipped drill bit.

NOTE

These holes should not be drilled directly above where the turnbuckles attach, but offset about 10 degrees out from vertical (see figure 2).

2. Tap the concrete anchors into the drilled holes, until the head is seated against the ceiling material.
3. Using the claw on the hammer or a pair of pliers, pull down firmly on each of the anchors. This will set and secure the anchors in place.

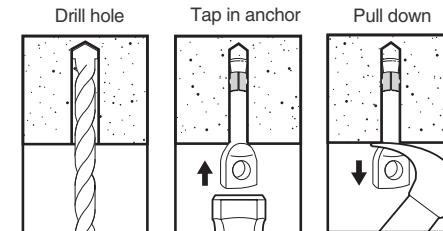


Figure 4 — Installation sequence for concrete ceiling anchors

Wooden ceiling joists

1. Mark and drill four holes, approximately $1\frac{1}{4}$ " (32 mm) deep into the ceiling joists, using a $5/16$ " (8 mm) diameter drill bit.
2. Screw in the eye screws until they are secure.

NOTE

The eye screws should not be screwed in directly above where the turnbuckles attach but offset about 10 degrees out from vertical (see figure 2).

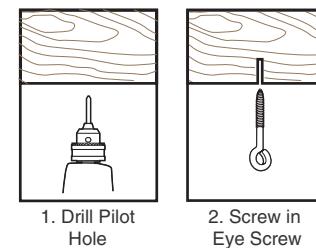


Figure 5 — Installation sequence for wood joist screws

Truss ceilings

Follow the steps in "Attaching the tie wire" section on page 8.

NOTE

The point in the ceiling at which the wire is to be attached should not be directly above where the turnbuckles attach, but offset about 10 degrees out from vertical.

Installation, cont'd

Attaching the tie wire

1. Cut four equal lengths of wire, sufficient to be terminated at both ends (at ceiling and turnbuckles) with at least five loops around itself.
2. Loop the wire through the anchors, eye screws, or over the truss, and twist the wire around itself at least five times.

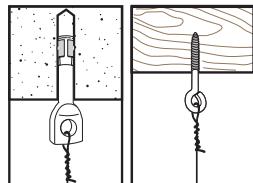


Figure 6 — Anchor and screw tie wire fastening

- NOTE** The final loop should be tightly bent and secured to the wire to avoid untwisting under stress.
3. Loop the wire through the turnbuckles, twisting the wire around itself at least five times to secure it.
 4. Using a wrench, adjust the turnbuckles to take up slack, and to level the ceiling plate so it just rests on the grid. The four support wires should be taut, and should take the full weight of the completed installation.
 5. Tighten the T-bar securing screws fully.

Threaded rod installation

If threaded rods (not supplied) are to be used instead of the supplied tie wire to secure the plate to the ceiling, insert the threaded rods through the holes at the ends of plate. Secure with washers and nuts. Adjust the length as needed to ensure the plate remains level and so it just rests on the T-bar. The rods should take the full weight of the completed installation.

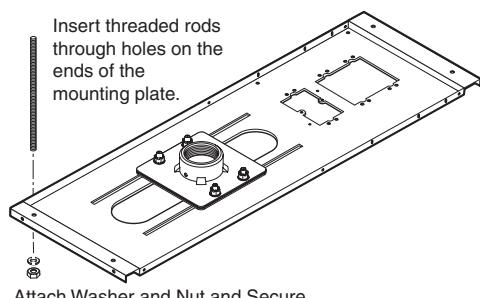


Figure 7 — Installing threaded rods on the PCM 240

Attaching the safety cable

As an added precaution, the supplied safety cable must be installed. This will help hold the mount up in the event that any of the tie wires, or threaded rods come loose or detach during an earthquake or accident.

To install the safety cable, follow the steps below:

1. When the projector ceiling mounting plate is attached to the structural ceiling and rests on the T-bar, find and mark a point directly above the plate's center.

CAUTION

DO NOT rest, or lean on the plate or suspended ceiling grid during installation of safety cable, or during installation and wiring of electrical boxes, accessories and projector.

2. At the marked location, drill a hole and install a ceiling anchor or eye screw, following the steps in "Securing the mounting plate to the structural ceiling" on page 6.
3. Pass the safety cable through the anchor and attach it with even lengths to the center holes on either side of the plate. Secure using the cable clamps.

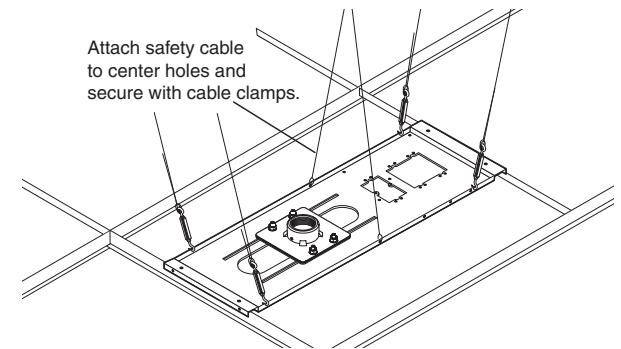


Figure 8 — Attach safety cable to the ceiling and the PCM 240

NOTE

As more items are installed (electrical boxes, projector, and pole etc.), the tie wire and safety cable may become stretched or may loosen under the combined weight. Upon completion of the entire installation, and periodically afterwards, carefully check the cable clamps, safety cable, tie wire, and ceiling anchors to ensure they are properly secured and are taking the full weight of the installation.

Installation, cont'd

Attaching a projector mounting pole

The PCM 240 comes with a threaded pipe adapter installed in the adapter plate. This allows for an Extron PMP projector mounting pole (supplied separately) to be fitted.

To fit the mounting pole do the following:

1. Screw the pole into the adapter.
2. Secure the pole in place with the locking screw on the pipe adapter/adapter plate assembly. Cabling for the projector may be accessed through the convenient cut-out in the PMP pole.

Other optional accessories may also be installed at this point. These include Extron's PMK 350, a low profile two product mounting kit, and the UPB 25, a Universal Projector Mounting Bracket suitable for most projectors weighing up to 25 pounds. See page 3 for more details. Follow the installation instructions supplied with the accessory.

WARNING *The combined weight of the installation MUST NOT exceed a maximum of 50 pounds (23 kgs).*

Attaching Extron devices and electrical boxes

The PCM 240 comes with two cutout holes where a RACO box (#8471), an MK box, or standard UL electrical boxes can be inserted. Mounting holes for Extron 3" deep, 1/4 rack wide devices are also included (see figure 9 for all location). Follow any mounting instructions supplied with the devices or boxes.

CAUTION *Using flex conduit is recommended when installing any power wiring*

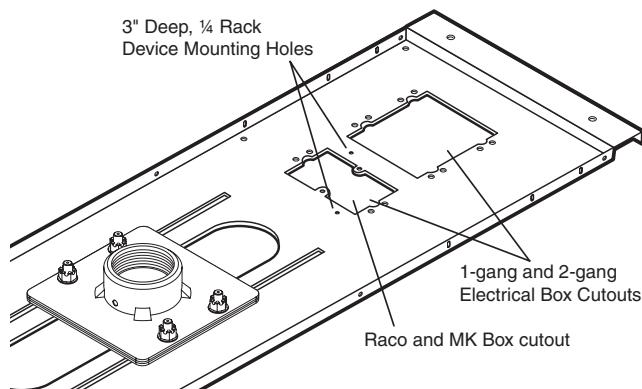


Figure 9 — Locations for device and electrical box installation on the PCM 240

Specifications, Part #'s and Dimensions

General

Rack mount	No, but ceiling mount
Enclosure type	14 gauge steel/powder coated white
Plate dimensions	25.8" L x 8.0" W x 1.2" D 65.5 cm L x 20.3 cm W x 2.9 cm D
Shipping weight	9 lbs (4.1 kg)
Vibration.....	ISTA 1A in carton (International Safe Transit Association)
Warranty	3 years parts and labor

Parts and accessories

PCM 240 kit contents

Item	Quantity
Projector Mounting Platform	1
Pipe adapter	1
Pipe adapter plate	1
Turnbuckles	4
Anchors, for concrete ceiling (4) and safety cable (1)	5
Eye screws, for wood joists (4) and safety cable (1)	5
Tie wire, 60 ft	1
Safety cable, 15 ft	1
Cable clamps, for safety cable	2
Locking screws, for T-bar (4)	4
Anti-vibration adhesive pads	4
Installation manual	1

See page 12 for Optional accessories

Specifications, Part #'s and Dimensions, cont'd

Optional accessories

Item	Part #
PMP 4, Projector Mounting Pole, 4" Black	60-511-02
PMP 4, Projector Mounting Pole, 4" White	60-511-03
PMP 6, Projector Mounting Pole, 6" Black	60-511-12
PMP 6, Projector Mounting Pole, 6" White	60-511-13
PMP 10, Projector Mounting Pole, 10" Black	60-511-22
PMP 10, Projector Mounting Pole, 10" White	60-511-23
PMP 12, Projector Mounting Pole, 12" Black	60-511-32
PMP 12, Projector Mounting Pole, 12" White	60-511-33
PMK 350, Projector Mounting Kit, black	70-563-02
PMK 350, Projector Mounting Kit, white	70-563-03
UPB 25, Universal Projector Bracket, Black	70-773-02
UPB 25, Universal Projector Bracket, White	60-773-02

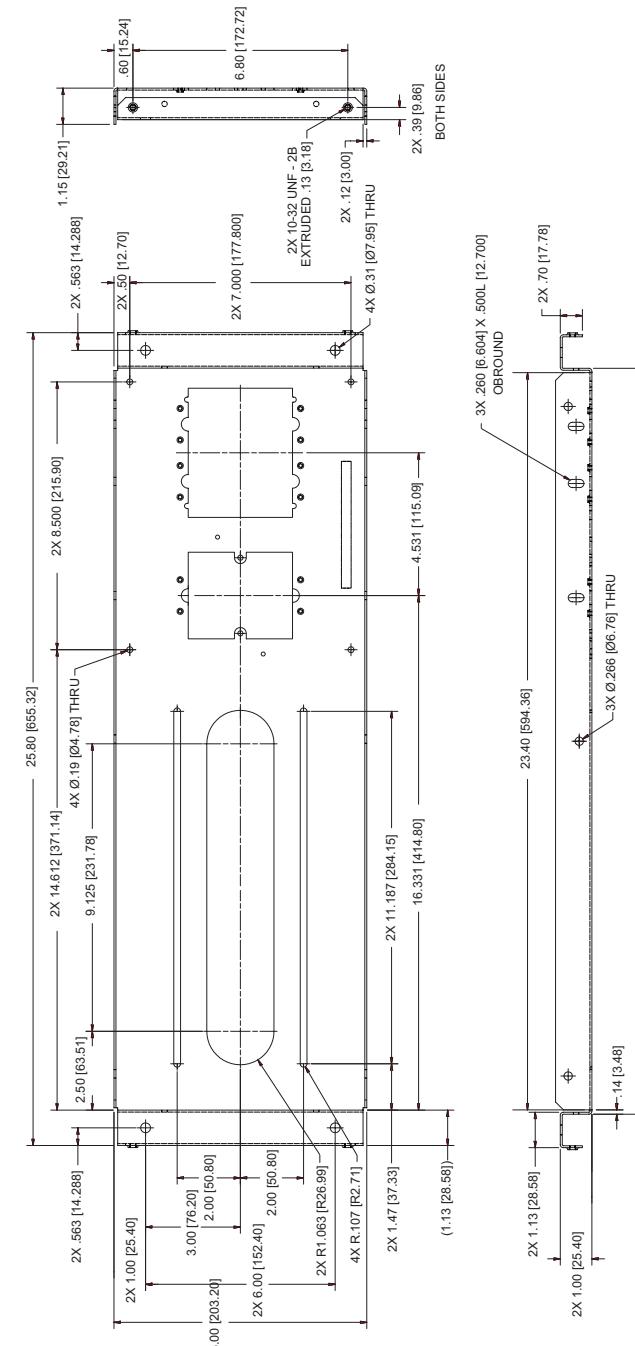


Figure 10 — Dimensions of the PCM 240

NOTE Dimensions are given in inches [millimeters]

Extron's Warranty

Extron Electronics warrants this product against defects in materials and workmanship for a period of three years from the date of purchase. In the event of malfunction during the warranty period attributable directly to faulty workmanship and/or materials, Extron Electronics will, at its option, repair or replace said products or components, to whatever extent it shall deem necessary to restore said product to proper operating condition, provided that it is returned within the warranty period, with proof of purchase and description of malfunction to:

**USA, Canada, South America,
and Central America:**

Extron Electronics
1001 East Ball Road
Anaheim, CA 92805, USA

Europe, Africa, and the Middle East:

Extron Electronics, Europe
Beeldschermweg 6C
3821 AH Amersfoort
The Netherlands

Asia:

Extron Electronics, Asia
135 Joo Seng Road, #04-01
PM Industrial Bldg.
Singapore 368363

Japan:

Extron Electronics, Japan
Kyodo Building,
16 Ichibancho
Chiyoda-ku, Tokyo 102-0082
Japan

This Limited Warranty does not apply if the fault has been caused by misuse, improper handling care, electrical or mechanical abuse, abnormal operating conditions or non-Extron authorized modification to the product.

If it has been determined that the product is defective, please call Extron and ask for an Applications Engineer at (714) 491-1500 (USA), 31.33.453.4040 (Europe), 65.6383.4400 (Asia), or 81.3.3511.7655 (Japan) to receive an RA# (Return Authorization number). This will begin the repair process as quickly as possible.

Units must be returned insured, with shipping charges prepaid. If not insured, you assume the risk of loss or damage during shipment. Returned units must include the serial number and a description of the problem, as well as the name of the person to contact in case there are any questions.

Extron Electronics makes no further warranties either expressed or implied with respect to the product and its quality, performance, merchantability, or fitness for any particular use. In no event will Extron Electronics be liable for direct, indirect, or consequential damages resulting from any defect in this product even if Extron Electronics has been advised of such damage.

Please note that laws vary from state to state and country to country, and that some provisions of this warranty may not apply to you.

This page was deliberately left blank