

Executive Alarm Clock

Neverlate™



american innovative™

Neverlate Executive™ Alarm Clock

Model No. NL7DEX-US, Instructions for Use

Product Registration

Please visit American Innovative on the web at www.americaninnovative.com/register/ to register your new purchase.

american innovative™

IMPORTANT SAFEGUARDS, PLEASE READ FIRST!

CAUTION: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CAUTION: TO PREVENT ELECTRICAL SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

ATTENTION: POUR ÉVITER LES CHOCS ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). THERE ARE NO USER-SERVICEABLE PARTS INSIDE. PLEASE REFER ANY SERVICING TO QUALIFIED SERVICE PERSONNEL.

AVERTISSEMENT: RISQUE DE CHOC ÉLECTRIQUE – NE PAS OUVRIR



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

IMPORTANT SAFETY INSTRUCTIONS

For your protection, please read these safety instructions completely before operating this product. All operating and use instructions should be followed. All warnings printed on the device and in the operating instructions should be adhered to. Please keep this manual for future reference.

Water & Moisture

Do not use this device near water. For example, do not use this device near a bathtub, wash bowl, kitchen sink or laundry tub. Do not use this device in a wet basement, near a swimming pool or near any other source of water. Do not place water-filled vessels on this device.

Heat & Open Flame

Do not place this device near any heat sources such as radiators, stoves, amplifiers or other devices that produce heat. Do not place an open flame on or near this device.

Ventilation

The openings in the cabinet of this device are designed to provide necessary ventilation for the product's internal components and to protect it from overheating. Ensure that these openings remain free of obstructions. Do not situate this device on a bed, sofa, rug, or similar surface that may block ventilation openings. This product should not be placed in a built-in installation, such as a bookcase or rack, unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

Power Source

This product should be connected to a power supply only of the type marked on the outside of the unit. If you are not sure of the type of power supply to your home, please consult your product dealer or local power company. Where the main plug is used as the disconnect device, the disconnect device shall remain readily operable. Please refer to the operating instructions regarding use and replacement of the backup battery.

Grounding or Polarization

Precaution should be taken not to defeat the safety purpose of grounding or polarization. This product is equipped with a polarized AC power cord plug (one blade is wider than the other). This plug is designed to fit into the power outlet in only one way. If you are unable to fully insert the plug into the power outlet, try reversing it. If the plug should still fail to fit, use a different outlet or contact a certified electrician to have a suitable outlet installed.

Overloading

Do not overload wall outlets, extension cords, etc. beyond their rated capacity.

When Not In Use

Unplug the unit from the wall when not using for prolonged periods of time. When removing the power cord from the wall, always grasp the plug; do not pull the cord itself.

Power Cord Protection

Power cords should be routed so that they are not likely to be walked on or pinched by items placed on or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

Lightning

If the unit is not plugged into an appropriately rated surge protector, unplug the unit from the wall in the event of a lightning storm in order to protect it from powerline surges. Unplug the unit if it is to be unused for a long period of time.

Object & Liquid Entry

Never insert objects of any kind into this product, through ventilation openings, as these objects may touch dangerous voltage points or create a short circuit that could result in a fire or electric shock. Never spill liquid of any kind on or into the device.

Cleaning

Unplug the unit from the wall before cleaning. Use a soft, damp cloth to wipe down the unit. Do not use liquid, aerosol or abrasive cleaners.

Servicing & Safety Checks

Do not attempt to service the unit yourself as opening or removing covers may expose you to dangerous voltage or other hazards. All servicing should be referred to qualified personnel. Servicing is required when the unit does not operate properly or has been damaged in any way, including but not limited to power supply/cord damage, damage as a result of exposure to moisture, and damage resulting from impact. Upon completion of any service or repairs to this product, ask the service technician to perform routine safety checks.

Damage Requiring Service

This product should be fixed by qualified service personnel under the following conditions:

1. When the power supply, cord or plug has been damaged.
2. If liquid has been spilled, or objects have fallen into the unit.
3. If the unit is exposed to rain or water.
4. If the product does not operate normally when following the operating instructions.
5. If the unit has been dropped or damaged in any way.
6. When the product exhibits a distinct change in performance.

Replacement Parts

In the event that replacement parts are required, ensure that the service technician uses parts specified by the manufacturer or those deemed to be equivalent. Unauthorized substitutions may result in fire, electric shock, or other hazards.

WARNING: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

FCC INFORMATION

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to the equipment that are not expressly approved by the responsible party for compliance could void the user's authority to operate the equipment.

ABOUT AMERICAN INNOVATIVE™

American Innovative was founded to pursue the development of innovative new products that should exist, but don't. "Products that make sense." is our motto and the execution of this philosophy can be seen throughout the company's product line. Careful attention to the needs of the user and a keen eye for industrial design and user interface engineering are the secrets of American Innovative's success. To learn more about American Innovative please visit us on the web at www.americaninnovative.com.

SERVICE CONTACT INFORMATION

Please check <http://www.americaninnovative.com/contact/> for the most up-to-date contact information and for details regarding product servicing and/or warranty claims. An RMA (Return Merchandise Authorization) number is required for any product returned to AI.

American Innovative, LLC


Attn: RMA# (*note: RMA # must be requested online*)
398 Columbus Avenue, Suite 321
Boston, MA 02116 USA

p. (617) 395-7831


w. <http://www.americaninnovative.com/contact/>

Table of Contents

Setup	9
<i>Setting the Time & Date</i>	9
<i>Battery Backup (optional)</i>	9
Using the Radio and Station Presets	10
<i>Basic Operation</i>	10
<i>Storing Station Presets</i>	10
<i>Recalling Station Presets</i>	10
Understanding the Neverlate's Alarm Features	11
<i>Daily Alarm Bank</i>	11
<i>7-day Alarm Banks</i>	11
<i>Which Alarm Bank(s) Should I (or We) Use?</i>	11
Setting Alarms	12
<i>Customizing the Wake Buzzer Ringtone or Station Preset</i>	12
<i>Setting the Alarm Wake Volume</i>	12
Using the Nap and Sleep Timers	13
<i>Using the Nap Timer</i>	13
<i>Using the Sleep Timer</i>	13
Setting User Preferences	14
Advanced Features	15
<i>Alarm Skip</i>	15
<i>"One Time" Alarm Adjust (BETA Feature)</i>	15
Using Inputs & Outputs	16
<i>Auxiliary (AUX) Input</i>	16
<i>Headphone (Line-Out) Output</i>	16
<i>Powered USB Port (No Data)</i>	16
Other Products from American Innovative	17
<i>Onaroo by American Innovative – Smart Products for Children and Their Parents</i>	17
<i>American Innovative – Specialty Timers and Clocks</i>	17

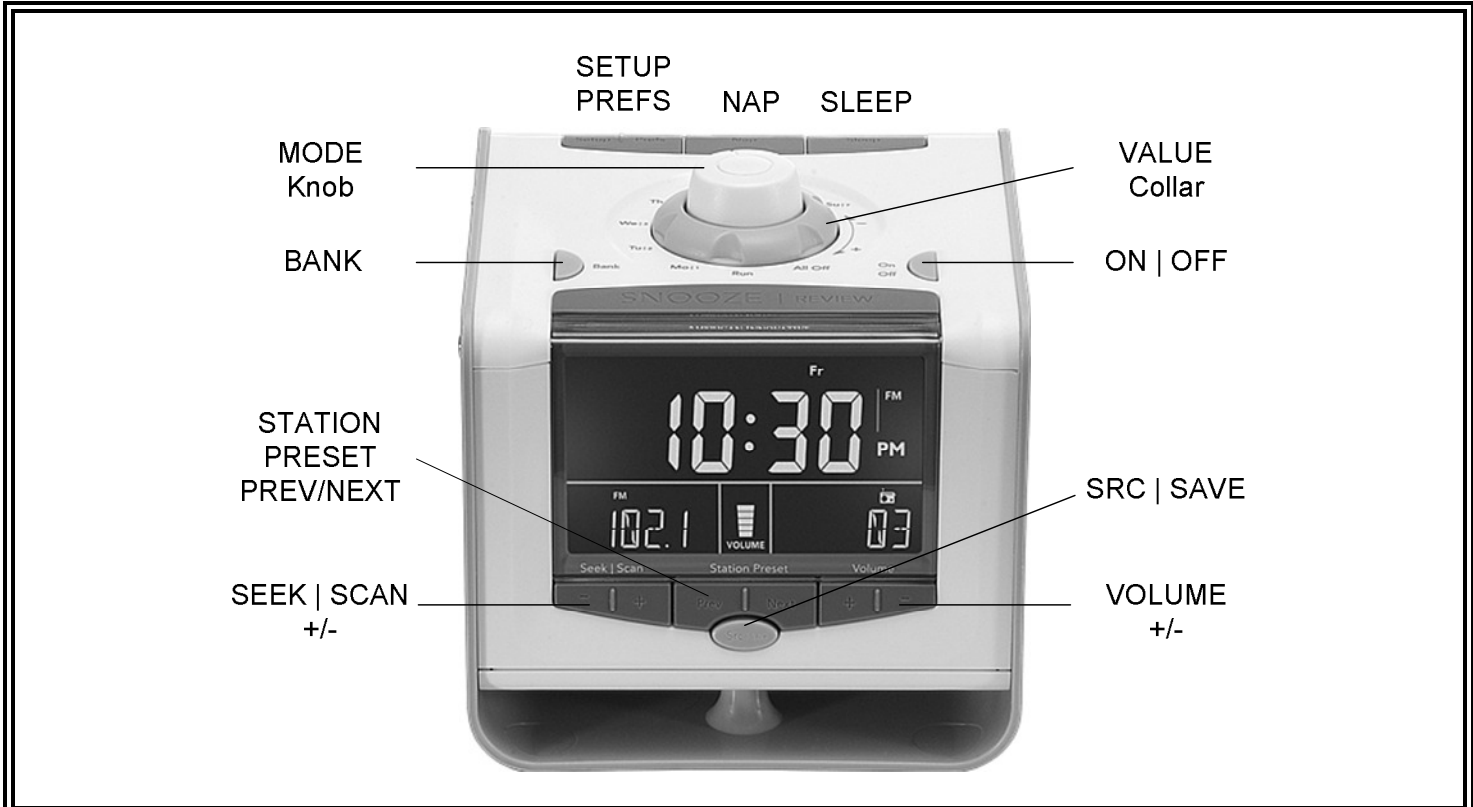

Main Display

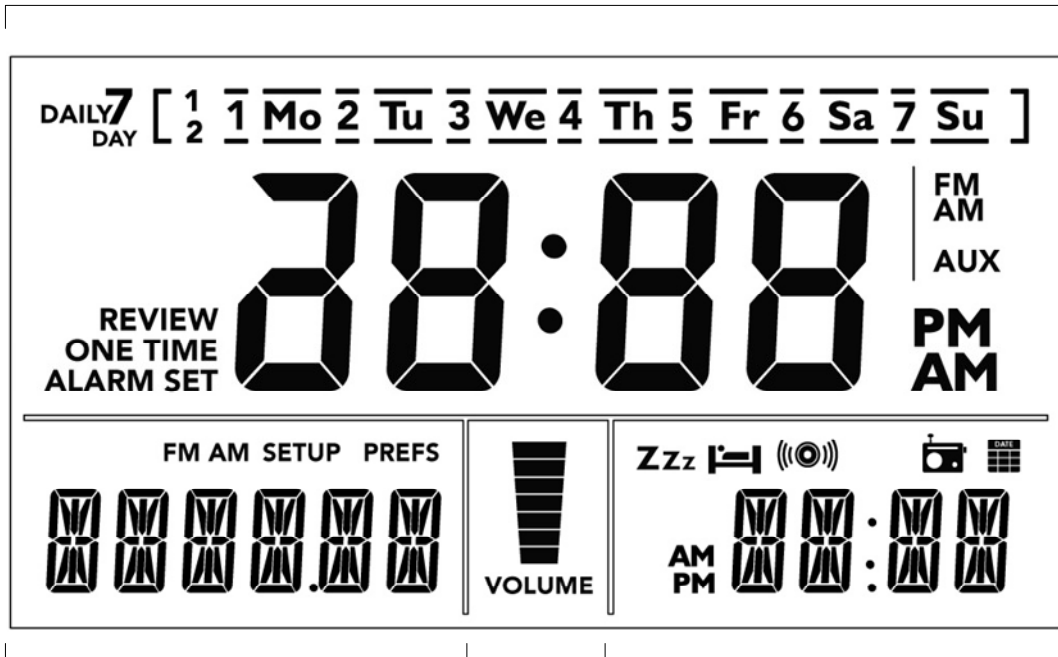

Radio Sub-Display

Information Sub-Display

Setup

Setting the Time & Date

The first time you plug in your Neverlate, use the *Setup Sequence* to input the current time and date:

1. Ensure that the MODE knob is in either the "Run" or "All Off" position. Press and hold the SETUP key for two (2) seconds to initiate the *Setup Sequence*.
2. Twist the VALUE collar or use the SEEK | SCAN +/- keys to adjust the value of each parameter.
3. Press the SETUP key between steps and to complete the procedure.



Step Name	Description
T-FORM	Time Format (12/24 HR) <i>Select 12- or 24-hour clock format.</i>
TIME	Current Time <i>Enter the current time. Note: The SRC SAVE key may be used to toggle between AM and PM.</i>
D-FORM	Date Format (MM.DD or DD.MM) <i>Select Month.Day or Day.Month date format.</i>
MONTH	Month (1 – 12) <i>Enter the numeric month.</i>
DAY	Day (1 – 31) <i>Enter the day.</i>
YEAR	Year (2000 – 2099) <i>Enter the year.</i>

Battery Backup (optional)

Your Neverlate uses one CR2032 button cell battery to retain its memory. Install the battery with the positive side (+) facing out. In the event of a power outage the LCD display is not illuminated but the time, alarm settings and other preferences will be retained until the power is restored.

WARNING: *Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.*

TIP: The STATION PRESET PREV/NEXT keys may be used to step back and forth between steps.

TIP: Exit the *Setup Sequence* at any time by pressing the ON | OFF key.

TIP: The *Setup Sequence* exits automatically after sixty (60) seconds of inactivity.

TIP: This feature is also convenient should you wish to relocate your Neverlate from one room to another.

TIP: The CR2032 button cell battery is available for purchase at your local drug or electronics store.

Using the Radio and Station Presets

The Neverlate Executive contains a high-quality FM/AM digital tuner and can store up to twenty (20) station presets.

Basic Operation

Turn the radio on or off using the ON | OFF key. Note that the radio cannot be toggled on or off while the MODE knob is in any of the alarm set positions.

Use the SRC | SAVE key to cycle the audio source between FM, AM and AUX (See **Using Inputs & Outputs** on page 16 for more information on using the auxiliary audio input).

Use the VOLUME +/- keys to adjust the digital volume control.

Use the SEEK | SCAN +/- keys to adjust the radio frequency. Press and hold these keys for one (1) second to scan to the next strong station automatically.

Storing Station Presets

Your Neverlate can store up to 20 station presets. To store a station preset:

1. Locate the station you would like to store.
2. Press and hold the SRC | SAVE key for two (2) seconds. *The next available station preset location flashes in the display.*



3. If desired, change the preset location using the STATION PRESET PREV/NEXT keys.
4. Press the SRC | SAVE key to lock in the new station preset. *The station preset location stops flashing.*

NOTE: If the location selected has been stored previously, it will be overwritten.

Recalling Station Presets

Use the STATION PRESET PREV/NEXT keys to step through the presets that you have already stored. Empty station preset locations are not recalled.

TIP: The FM antenna is integrated into the power cord. If you are having trouble receiving FM broadcasts, try reorienting the position of the cord.

TIP: The radio volume is independent of the alarm wake volume. See **Setting the Alarm Wake Volume** on page 12.

TIP: The Neverlate does not utilize the concept of an "AM Bank" or "FM Bank" of presets. Any station from either band can be stored in any preset location.

TIP: To remove a station preset from a previously stored location, press and hold the SNOOZE key for two (2) seconds while that station preset is displayed.

Understanding the Neverlate's Alarm Features

The Neverlate Executive contains three "banks" of alarms: One "Daily" alarm bank (alarms sound every day) and two "7-day" alarm banks (day-specific alarms sound on a weekly schedule).

Daily Alarm Bank

DAILY [1 2 3 4 5 6 7]

Up to seven Daily alarms may be set.

The Daily alarm bank works just like any other alarm clock you may be familiar with. Any Daily alarms that are set (as many as seven) sound every day at the appointed time. This is similar to a standard "dual alarm clock" except there are seven. Daily alarms do not correlate to the days of the week – they will go off at the appointed time every single day.

7-day Alarm Banks

7_{DAY} [¹ Mo Tu We Th Fr Sa Su]

7-day Alarm bank #1. i.e. "His".

7_{DAY} [² Mo Tu We Th Fr Sa Su]

7-day Alarm bank #2. i.e. "Hers".

Each 7-day alarm bank is a set of seven alarms – one for each day of the week. A different wake time may be set for each day of the week.

Which Alarm Bank(s) Should I (or We) Use?

I'm just one person and I get up at the same time each day ...

Use the Daily bank: Set Daily-1 to the time you get up each morning.

We're two people and we each get up at the same time each day, but my spouse/partner gets up before I do ...

Use the Daily bank: Set any Daily alarm (i.e. Daily-1) to the time you wake and another Daily alarm (i.e. Daily-2) to the time your spouse/partner wakes.

I'm just one person and I have a varied morning wake schedule ...

Use one of the 7-day banks: Input your schedule accordingly.

We're two people with two different morning wake schedules ...

Use both 7-day banks simultaneously: Input your weekly schedule into one 7-day bank and your spouse or partner's weekly schedule into the other.

TIP: The Daily alarm bank is useful for other purposes besides waking. For example, if you take medication four times a day, set any four daily alarms for those times.

TIP: When programming alarms, a specific alarm may be set (alarm time visible on the display) but then made "inactive" so it does not sound (--:-- visible on the display). This effectively stores an alarm time for later use and it may be easily toggled on and off. Please see **Setting Alarms** step #3 on the next page.

TIP: Although common use cases are described at left, any combination of alarms from different banks may be utilized to suit your specific wake and/or reminder needs. In other words, all three alarm banks are designed to be used simultaneously, if desired.

Setting Alarms

In this manual, the term “active” is used to describe alarms that will sound and “inactive” is used to describe alarms that are disabled. Regardless of the alarm bank(s) used, all alarms are set in the same manner:

1. Position the inner MODE knob to any one of the seven (7) alarm set positions. The words **ALARM SET** appear.
2. Use the **BANK** key to toggle the alarm bank between:

DAILY [, **7** [¹ , and **7** [² **DAY**

3. Press the **ON | OFF** key to toggle the active state of the alarm you are setting. Active alarms display horizontal bars, as shown in these examples:

1 Tu Tu

NOTE: All alarms are inactive until set the first time.

4. Adjust the wake time using the **VALUE** collar.
5. Reposition the **MODE** knob to another alarm set position and repeat the process for any/all alarms that you would like to activate.
6. When finished, position the **MODE** knob to “Run” (active alarms sound) or “All Off” (no alarms sound).

NOTE: In **RUN** mode, press the **SNOOZE | REVIEW** key to review the details of the next upcoming alarm.

Customizing the Wake Buzzer Ringtone or Station Preset

Any alarm you set may be assigned its own buzzer ringtone or radio station preset. By default, all active alarms are assigned buzzer ringtone 01. To change this:

1. Use the **SRC | SAVE** key to select whether you would like to wake to a buzzer ringtone or radio preset.
2. Use the **STATION PRESET PREV/NEXT** keys to change the buzzer ringtone or radio station preset number.

Setting the Alarm Wake Volume

The alarm volume is independent of the master volume control. This feature is useful if you like to play the radio softly in the evening but require a louder volume to arise in the morning. Change the alarm volume *from any alarm set position* by using the **VOLUME +/-** keys.

TIP: By default, all alarms are inactive until set the first time.

TIP: Moving the **VALUE** collar will also automatically activate an alarm that is currently inactive.

TIP: Use the **ALL OFF** position if you plan to be away on vacation. When you return, simply position the **MODE** knob back to **RUN** and all of your usual alarm settings will be resumed.

TIP: The alarm set interval (default: 5 mins) and the review duration may be customized. See **Setting User Preferences** on page 14.

TIP: This customizable feature allows, for example, you and your spouse to wake up to different radio stations.

TIP: The alarm volume is global to all alarm settings.

Using the Nap and Sleep Timers

Using the Nap Timer

The nap timer provides an easy way to take a power nap without having to disrupt any of your other alarm settings. To use the nap timer:

1. Press the NAP key. *If the radio is on, it turns off automatically. The nap icon and the current nap duration (default: 0:20 mins) appear in the display.*

Zzz

A digital display showing the time 0:20 in a large, black, sans-serif font.

2. If desired, adjust the nap timer duration using the VALUE collar. By default, the nap timer duration adjusts in 5-minute increments up to 2:00 hours.
3. *The nap timer starts automatically and counts down until it reaches 0:00 at which point it sounds.*

Cancel the nap timer mid-operation by pressing the NAP key or the ON | OFF key at any time.

Using the Sleep Timer

The purpose of the sleep timer is to turn the radio off automatically if you tend to fall asleep at night with the radio on. To use the sleep timer:

1. Press the SLEEP key. *If the radio is off, it turns on automatically. The sleep icon and the current sleep duration (default: 1:00 hour) appear in the display.*

A small icon representing a bed with a pillow, used as a sleep timer indicator.A digital display showing the time 1:00 in a large, black, sans-serif font.

2. If desired, adjust the sleep timer duration using the VALUE collar. By default, the sleep timer duration adjusts in 5-minute increments up to 2:00 hours.
3. *The sleep timer starts automatically and counts down until it reaches 0:00 at which point the radio turns off.*

Cancel the sleep timer mid-operation by pressing the SLEEP key or the ON | OFF key at any time.

TIP: The Neverlate automatically remembers the last nap and sleep timer values entered for the next time.

TIP: The buzzer ringtone or station preset that the nap timer sounds to may be customized using the PREFS key. See **Setting User Preferences** on page 14.

TIP: The ALMINT setting under PREFS also affects the nap and sleep timer intervals.

TIP: When using the sleep timer the radio station can still be adjusted. Presets may be recalled the same as usual.

Setting User Preferences

Advanced users may wish to customize one or more aspects of the way their Neverlate behaves:

1. Press and hold the PREFS key for two (2) seconds to initiate the *Preferences Sequence*.
2. Twist the VALUE collar or use the SEEK | SCAN +/- keys to adjust the value of each parameter.
3. Press the PREFS key between steps and to complete the procedure.

Step Name	Description
SNZLEN	Snooze Duration (0:01 – 0:30 mins) <i>Select the duration that the Neverlate snoozes for.</i>
SNZTYP	Snooze Type (NORM, DESC or OFF) <i>Select the behavior of the snooze function:</i> <i><u>Normal</u>: The alarm sounds again after SNZLEN minutes. Repeatable indefinitely.</i> <i><u>Descending</u>: Each time the Neverlate is "snoozed" the snooze duration is halved.</i> <i><u>Off</u>: The Snooze key does not respond.</i>
GRAD	Gradual Wake (ON or OFF) <i><u>On</u>: Audible alarms start quietly and slowly raise in volume until the full alarm volume is reached.</i> <i><u>Off</u>: Disabled.</i>
ALMINT	Alarm Adj. Interval (0:01, 0:05, 0:10 or 0:15) <i>Select the alarm adjustment interval – the number of minutes that each "click" of the VALUE collar represents when inputting alarm, sleep and nap settings.</i>
GLOW	Backlight Level (OFF, LOW, MED, HIGH) <i>Select the brightness level of the backlight at steady state. The backlight temporarily illuminates HIGH for 15 seconds any time a control is touched.</i>
REVLEN	Alarm Review Duration (0:00 – 0:15 secs) <i>Select the duration that the "Alarm Review" feature is displayed for. Select 0:00 to disable this feature.</i>
ALMLEN	Audible Alarm Duration (0:01 min – 2:00 hrs) <i>Select the duration that audible alarms sound for before shutting off automatically.</i>
NAPTON	Nap Buzzer Ringtone or Radio Station Preset <i>Select how the nap timer sounds. Use the SRC SAVE key to toggle between buzzer ringtone or station preset. Use the VALUE collar to choose the preset number.</i>

TIP: The STATION PRESET PREV/NEXT keys may be used to step back and forth between steps.

TIP: Exit the *Preferences Sequence* at any time by pressing the ON | OFF key.

Advanced Features

Alarm Skip

The alarm skip feature is provided as a convenience for individuals who tend to wake up before their alarm sounds in the morning. To easily skip the next upcoming alarm just once:

1. Press and hold the ON | OFF key for two (2) seconds. *The word "SKIP" appears in the display. The upcoming alarm does not sound.*
2. Once the appointed alarm time is reached, the word "SKIP" disappears and that alarm is enabled for the next time.

NOTE: Once enabled, the alarm skip feature may be cancelled at any time by tapping the ON | OFF key. *The word "SKIP" disappears and the skip feature is cancelled.*

"One Time" Alarm Adjust (BETA Feature)

The purpose of this feature is simple - if there is a one-time variation in your morning routine the "One Time" alarm adjust may be used to temporarily alter the wake time of the next, upcoming alarm. After it sounds, the temporarily adjusted alarm reverts back to its ordinary setting. To make a "One Time" adjustment:

1. Press the SNOOZE | REVIEW key to invoke the "alarm review" feature. The next upcoming alarm is displayed.
2. While review is active, adjust the displayed alarm time using the value collar. The words ONE TIME appear in the display to indicate that the "One Time" alarm adjust feature is active.

NOTE: Once enabled, the "One Time" alarm adjust may be cancelled at any time by tapping the ON | OFF key. *The word "ONE TIME" disappears and the "One Time" feature is cancelled.*

TIP: Turning the MODE knob to "ALL OFF" also cancels the alarm skip feature.

Using Inputs & Outputs

The rear panel of the Neverlate contains three jacks.

Auxiliary (AUX) Input

The AUX jack is used to play an MP3 player or any other low-powered external audio source through the internal speaker:

1. Plug your audio source into the AUX jack.
2. Use the SRC | SAVE key to toggle the input source to AUX.

| **AUX**

3. Press play on your external audio device.

NOTE: The sleep timer will work in conjunction with an external audio source. When the sleep timer expires the Neverlate shuts off and the external audio source will no longer be heard. However, the Neverlate is unable to automatically power down an external device. Use your external device's timed shutoff function to ensure that its batteries are not depleted overnight.

Headphone (Line-Out) Output

Listen to the Neverlate without disturbing your spouse or partner by using a pair of headphones with a standard 1/8" stereo male connector.

Alternatively, connect an external, powered speaker to the Neverlate using the same jack.

Powered USB Port (No Data)

Use the Neverlate's USB port to power some external USB devices such as a laptop-type lamp or fan.



TIP: Use a dual-sided (male-male) 1/8" audio cable (not included) to make the connection between most low-powered audio devices and your Neverlate.



Other Products from American Innovative

Please visit us on the web at www.americaninnovative.com.

Onaroo by American Innovative – Smart Products for Children and Their Parents



Teach Me Time!
Talking Alarm Clock & Night-Light



OK to Wake!
Alarm Clock & Night-Light



OK to Wake! Owl With Night-Light & Music




Personal Baby Assistant (PBA)

American Innovative – Specialty Timers and Clocks



Chef's Quad-Timer
Professional

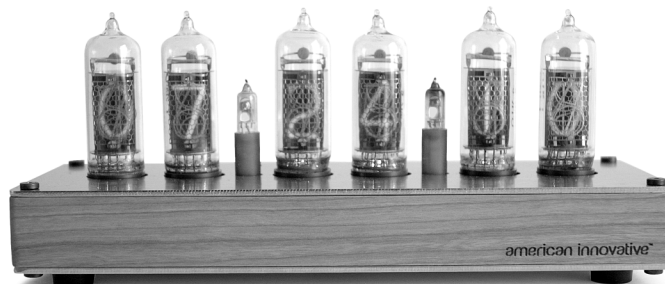

American Innovative
Limited Edition Nixie Clock

American Innovative, LLC * Limited Warranty

Coverage

American Innovative, LLC warrants this product against defects in original material and workmanship for a period of ninety (90) days, under normal use and conditions.

Non-Coverage

This warranty does not cover customer instruction, installation, set up or signal reception problems. This warranty does not cover cosmetic damage or damage resulting from acts of God, accident, misuse, abuse, negligence, commercial application (or rental), or modification (including the antenna). This warranty does not cover damage due to improper operation or maintenance, connection to an improper voltage supply, or attempted repair by anyone other than American Innovative, LLC or American Innovative, LLC authorized service facilities. This warranty does not cover products sold "as is" or "with all faults". This warranty is valid only in the United States and is invalid if the product serial number has been altered or removed.

Making a Warranty Claim

Please check <http://www.americaninnovative.com/contact/> for the latest information pertaining to warranty claims. At the company's discretion, American Innovative will repair or replace the defective unit. Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the unit is within the warranty period must be presented to obtain warranty service.

Other Information

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESSED WARRANTY AS PROVIDED ABOVE, BEGINNING WITH THE ORIGINAL DATE OF PURCHASE. NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED, SHALL APPLY TO THE PRODUCT THEREAFTER. WE MAKE NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE OR USE.

THE EXTENT OF OUR LIABILITY UNDER THIS LIMITED WARRANTY IS THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND IN NO EVENT WILL OUR LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER. UNDER NO CIRCUMSTANCES WILL WE BE LIABLE FOR ANY LOSS, DIRECT, INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT.

Applicability of State Law

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, BUT YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES OR EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGE, SO THESE RESTRICTIONS MAY NOT APPLY TO YOU.

american innovative™

american innovative™