

MMX WIRELESS OPTICAL MOBILE MINI MOUSE USER MANUAL

MODEL 176811




MANHATTAN

MAN-176811-UM-0907-03

Thank you for purchasing the MANHATTAN® MMX Wireless Optical Mobile Mini Mouse, Model 176811.

The easy-to-follow instructions in this user manual help make installation of the mouse quick and simple, so you'll also soon be enjoying the benefits of these features:

- 27 MHz technology offers wireless freedom with effective range up to 1.5 m (5 ft.)
- 256 ID codes prevent interference from other RF wireless devices
- Auto power management and detachable cable help maintain battery levels — recharges while in use for uninterrupted operation
- On-board storage compartment protects USB receiver from loss and damage
- Compact size, ambidextrous shape and no-slip texture provide a secure and comfortable grip
- Low-friction base smoothly glides over work surfaces
- Plug and Play installation — Windows compatible
- Lifetime Warranty

Package Contents

- USB Wireless Optical Mouse with Receiver
- 2 AAA batteries and retractable cable reel
- User manual and carrying bag

FCC Statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception — which can be determined by turning the equipment off and then back on — the user

 
is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your MANHATTAN dealer or an experienced radio/TV technician for help.

INSTALLATION

Built-In Mini Receiver

Press the Receiver Out button and the mini receiver will pop out of the back of the mouse. Re-insert the receiver and the mouse/transmitter power will automatically be turned off.

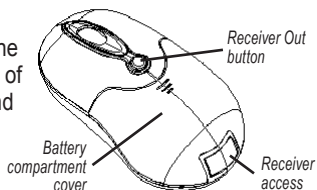


Batteries

Press down on the battery compartment cover just behind the Receiver Out button (as shown above) and slide the cover back to access the compartment. Insert the two included AAA batteries, matching the polarity indicators on the inside of the compartment. Replace the cover, sliding it forward till it clicks in place.

OPERATION

ID Setup for Wireless Operation

 With the mouse positioned near the receiver, use a hard, narrow object (such as a pin or a straightened paper clip) to press both ID buttons: first on the receiver; then, within 10 seconds, on the underside of the mouse. Hold each button in for a full second. The receiver light will flash rapidly for a few seconds, then remain lit, indicating that the connection between the receiver and the mouse has been made and the mouse is ready for wireless operation.

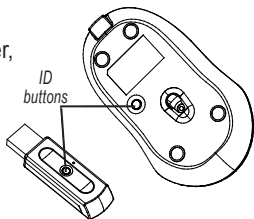


Wired Operation

Where the use of wireless devices is restricted; or when the mouse is low on power — the mouse can be operated as a wired device. With the retractable cable connected to the front of the mouse, connect the other end to the computer. If only a PS/2 port is available, an adapter can be used.

Remember to place the receiver back in the mouse so you don't lose it.

Battery Charging

 While using the mouse, if the red Low Battery LED flashes, re-charge or change the batteries. To re-charge, connect the mouse to the computer with a USB cable. The mouse can be used while the batteries charge; a full charge requires 8-10 hours. To stop charging, unplug the cable. **NOTE:** The actual charging time depends on the degree of the discharge.

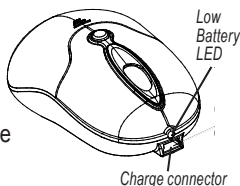

Operating Tips

- Operate the mouse within 1.5 m (5 ft.) of the receiver.
- Place the mouse on a white or light-colored surface for optimal performance. Remove the batteries if the mouse will not be used for an extended period of time or if you transport the device outdoors.
- The mouse automatically enters a sleep mode after a period of inactivity to save power. Press any key or scroll to wake it.
- To disconnect power to the mouse, press and hold the ID button on the underside of the mouse for 3 seconds. To restore power to the mouse, press the ID button again.
- If the Low Battery LED on the receiver flashes when the mouse is moved, change or re-charge the batteries immediately.
- The optical mouse will not work freely on a smooth desk, glass or any reflective surface or 3D mouse pad.
- Remember to store the receiver in the mouse when it's not being used.

SPECIFICATIONS

Standards and Certifications

- USB 1.1, FCC, CE, WEEE

General

- USB 1.1 receiver
- RF 27 MHz with 256 IDs
- Recharge time: 8-10 hours to fully charge
- Mouse: optical, 800 dpi resolution
- Automatic power save/power off mode
- LED indicator: Activity
- Controls: right and left mouse with scroll wheel
- Material: ABS plastic
- Compatible with Windows 2000/XP/Vista

Dimensions

- Mouse: optical, 800 dpi; 9.5 x 5.4 x 3.5 cm (3.75 x 2.125 x 1.4 in.); 76.5 g (2.7 oz.)
- USB receiver: 27 MHz (256 IDs); 5.5 x 1.5 x 1 cm (2.2 x 0.6 x 0.4 in.); 5.7 g (0.2 oz.)
- USB retractable cable: A-type male to mini-B-type male, 76 cm (30 in.)

Environmental

- Operational temperature: 0 – 45°C
- Storage temperature: -40 – 45°C
- Working humidity: <85%
- Electrical: 5 V <30 mA



MANHATTANTM

BRINGING COMPUTERS TO LIFE

MANHATTAN[®] offers a complete line
of PC Components, Peripherals, Cables and Accessories.
Ask your local computer dealer for more information
or visit us online at
www.manhattan-products.com

Copyright © MANHATTAN

All products mentioned are trademarks or registered trademarks of their respective owners.