



**Owner's manual & Installation manual**  
**Mode d'emploi et manuel d'installation**  
**Manual de instrucciones y de instalación**

**FZ502**



**Bluetooth® USB/MP3/WMA DIGITAL MEDIA RECEIVER**  
**LECTEUR MÉDIA NUMÉRIQUE Bluetooth® USB/MP3/WMA**  
**RECEPTOR DE MEDIOS DIGITALES Bluetooth® USB/MP3/WMA**

## **CLARION PRODUCT REGISTRATION INFORMATION**

For USA and Canada only  
[www.clarion.com](http://www.clarion.com)

Dear Customer:

Congratulations on your purchase of a Clarion mobile electronic products. We are confident that you'll enjoy your Clarion experience.

There are many benefits to registering your product. We invite you to visit our website at [www.clarion.com](http://www.clarion.com) to register your Clarion product.

We have made product registration simple with our easy to use website. The registration form is short and easy to complete. Once you're registered, we can keep you informed of important product information.

Register at [www.clarion.com](http://www.clarion.com) - it's easy to keep your Clarion product up to date.

## **INFORMATIONS DE L'ENREGISTREMENT DE PRODUITS CLARION**

Pour les États Unis et le Canada seulement  
[www.clarion.com](http://www.clarion.com)

Cher client:

Nous vous remercions d'avoir acheté ce produit électronique mobile Clarion. Nous sommes confiants que vous apprécierez votre expérience Clarion.

Il y a beaucoup d'avantage à enregistrer votre produits. Nous vous invitons à visiter notre site Web [www.clarion.com](http://www.clarion.com) pour enregistrer votre produit Clarion.

Nous avons facilité la tâche d'enregistrement de produit simple et facile grâce à notre site Web. Le formulaire d'enregistrement est court et facile à compléter. Lorsque vous êtes enregistrer, nous pouvons vous tenir informé des informations important de produits.

Enregistrer à [www.clarion.com](http://www.clarion.com) - c'est facile de mettre à jour votre produit Clarion.

## **INFORMACIÓN DEL REGISTRO DE PRODUCTO DE CLARION**

Para USA y Canada nomas  
[www.clarion.com](http://www.clarion.com)

Querido Cliente:

Felicitaciones por su compra de producto electrónico móvil de Clarion. Estamos seguros que usted gozará de su experiencia con el producto de Clarion.

Hay muchas ventajas al registrar su producto. Le invitamos a que visite nuestro sitio en internet [www.clarion.com](http://www.clarion.com) para registrar su producto de Clarion.

Hemos hecho el registro de producto fácil en nuestro sitio. La forma de registro es corta y fácil de completar. Una vez que lo registre, podremos proporcionarle la información de su producto.

Regístrese en [www.clarion.com](http://www.clarion.com) - es fácil mantener su producto de Clarion actualizado.

## **Contents**

Thank you for purchasing this **Clarion** product.

- Please fully read this owner's manual before operating this equipment.
- Check the contents of the enclosed warranty card and store it in a safe place with this manual.


<b>1. FEATURES</b>	<b>2</b>
Expanding Systems	2
<b>2. PRECAUTIONS</b>	<b>2</b>
Front Panel / Generalities	3
USB Port	3
<b>3. CONTROLS</b>	<b>3</b>
Operational Panel	3
Names of Button	3
Remote Control (RCX003)	4
Notes of remote control using	4
<b>4. OPERATIONS</b>	<b>4</b>
Basic Operations	4
System Setup	5
Audio Setup	6
Radio Operations	6
SiriusXM Satellite Radio Operations	7
HD Radio Operations	8
iTunes® Tagging	9
USB Operations	10
iPod & iPhone Operations	10
Bluetooth Operations	12
AUX Operations	13
<b>5. TROUBLE SHOOTING</b>	<b>13</b>
<b>6. ERROR DISPLAYS</b>	<b>14</b>
<b>7. SPECIFICATIONS</b>	<b>14</b>
<b>8. INSTALLATION / WIRE CONNECTION GUIDE</b>	<b>15</b>

# 1. FEATURES

- **Built-in Parrot Bluetooth® Handsfree (HFP) and Audio Streaming (A2DP & AVRCP)**
- **Compatible with iPod® / iPhone® with Pandora® internet radio App**
- **SiriusXM-Ready™ and HD Radio Ready™ with iTunes® Tagging**



## Expanding Systems

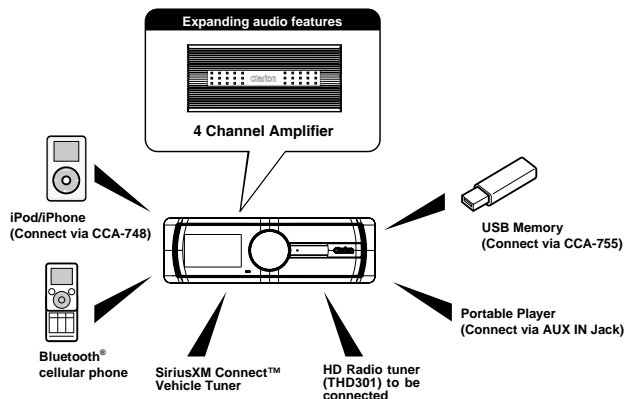

### Note:

- The items listed outside of the frames are the commercial products generally sold.
- CCA-748 and CCA-755: Sold by separately.

# 2. PRECAUTIONS

## ⚠ WARNING

For your safety, the driver should not operate the controls while driving. Also, while driving, keep the volume to a level at which external sounds can be heard.

1. If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit.
2. Do not open the case, disassemble the unit, or lubricate the rotating parts.
3. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, users, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio reception, which can be determined by turning the equipment off and on, the user is encouraged to consult the dealer or an experienced radio technician for help.
4. "Made for iPod," and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance. iPhone, iPod and iTunes are trademarks of Apple Inc., registered in the U.S. and other countries.
5. The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Clarion Co., Ltd. is under license. Other trademarks and trade names are those of their respective owners.
6. Pandora, the Pandora logo and other Pandora marks are trademarks or registered trademarks of Pandora Media, Inc. or its subsidiaries worldwide. "If you have any issues with the Pandora application on your mobile phone, please direct them to [pandora-support@pandora.com](mailto:pandora-support@pandora.com)."
7. SiriusXM and all related marks and logos are trademarks of SiriusXM Radio, Inc. All rights reserved.
8. HD Radio™, HD Radio Ready™, and the HD Radio Ready logo are proprietary trademarks of iBiquity Digital Corporation.

**INFORMATION FOR USERS:**

Changes or modifications to this product unapproved by the manufacturer will void the warranty and will violate FCC approval.

 
**Front Panel / Generalities**

For a longer service life, be sure to read the following cautions.

- Do not allow any liquids on the set from drinks, umbrellas, etc. Doing so may damage the internal circuitry.
- Do not disassemble or modify the set in any way. Doing so may result in damage.
- Do not let cigarettes burn the display. Doing so may damage or deform the body.
- If a problem should occur, have the set inspected at your store of purchase.

**Cleaning the body**

- Use a soft, dry cloth and gently wipe off the dirt.
- For tough dirt, apply some neutral detergent diluted in water to a soft cloth, wipe off the dirt gently, then wipe again with a dry cloth.
- Do not use benzene, thinner, car cleaner, etc., as these substances may damage the body or cause the paint to peel. Also, leaving rubber or plastic products in contact with the body for long periods of time may cause stains.


**USB Port**

- The USB memory stick may stick out when inserted, so it may cause danger during driving. When connect USB memory stick to the main unit, please use a USB extension cable (CCA-755).
- The USB memory sticks must be recognized as "USB mass storage class" to work properly. Some models may not operate correctly.

**When the memorized data is lost or damaged by any chance, Clarion shall not be liable for any damage.**

When using a USB memory stick, we recommend that you backup your data stored on it before using a personal computer etc.

- Data files may be broken when using USB memory sticks in the following situation: When disconnecting the USB memory stick or turning the power off during reading data. When affected static electricity or electric noise. Connect/disconnect the USB memory stick when it is not accessed.
- Connecting with the computer is not covered.

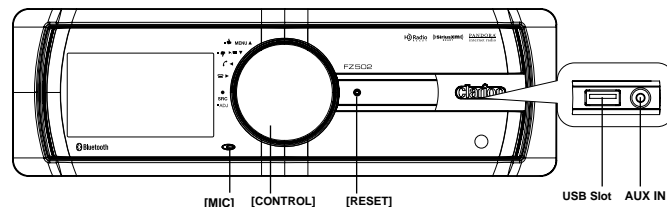**3. CONTROLS****Operational Panel****Names of Button****[CONTROL] Knob**

- Power on (press)
- Power off (long press -> rotate and select "POWER OFF" -> press)
- Adjust volume level (rotate)
- Toggle the audio source (press)
- Preset channel select (up/down)
- ADJUST** mode (long press -> rotate and select "ADJUST" -> press)

- BT mode** – Terminate call (right) / Dial (press) / Answer (left) / Transfer call (left) / Redial (up -> press)
- RADIO** mode – Select tuner band (up -> long press) / Station select / Station search
- HD RADIO** mode – SUB channels select.
- SiriusXM** mode – Direct search
- AUX** mode – No function.
- USB** mode – Search function
- iPod** mode – iPod menu
- PANDORA** mode – Station select

**[ MIC ] Hole**

- Internal microphone

## Remote Control (RCX003)

### [SRC/⏮] Button

- Toggle the audio source
- Power on (short press) / off (long press)

### [⏮, ⏭] Buttons

- Preset station up / down
- Previous / next track
- Search (long press)

### [SCN/PS/AS] Button

- Scan play / Preset scan
- Auto memory store (long press)
- SiriusXM mode – Channel scan (in current category) / Preset scan (long press)

### [BAND/TOP] Button

- MP3/WMA mode – Top play (long press)
- HD RADIO mode – Select tuner band
- SiriusXM mode – Select tuner band, quit Replay(Replay mode) / Select category(long press)
- PANDORA mode – Skip song

### [▲, ▼] Buttons

- Volume up / down

### [▶/II] Button

- Play / Pause
- SiriusXM mode – Replay mode

### [ISR] Button

- Recall ISR station stored in memory
- Store current station in ISR memory (long press)
- HD Radio mode – iTunes Tagging (When connected with HD Radio tuner and displayed "DIGITAL" indicator and "TAG" indicator on display.)
- SiriusXM mode – iTunes Tagging (When connected with SiriusXM Vehicle Tuner and displayed "TAG" on display)

### [DISP] Button

- Display switch

### [RDM] Button

- Random play
- SiriusXM mode – Tune to alerted station

### [RPT] Button

- Repeat play
- SiriusXM mode – Add Artist Alert / Add Song Alert (long press)
- PANDORA mode – Bookmark song / Artist (long press)

### [MUTE] Button


- Mute the volume

### [1–6] Buttons

- [1] Button: Preset station 1.
  - PANDORA mode – Create new station
- [2] Button: Preset station 2.
- [3] Button: Preset station 3.
- [4] Button: Preset station 4.
- [5] Button: Preset station 5.
  - PANDORA mode – Thumbs down
- [6] Button: Preset station 6.
  - PANDORA mode – Thumbs up

### [SOUND] Button

- Sound effect setting

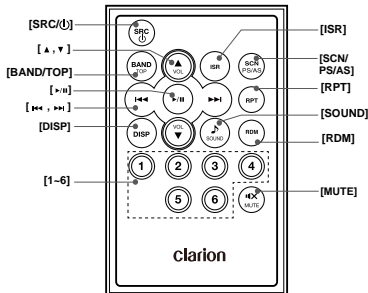

## Notes of remote control using

### Replacing the lithium battery of remote control unit.

When the range of the operation of the card remote control becomes short or no functions while operating. Replace the battery with a new lithium battery. Make sure the battery polarity replacement is correct.

- Pull out the battery holder while pressing the stopper.
- Insert the button-type battery with the stamped(+) mark facing upward.  
Insert the battery holder into the remote control.



## 4. OPERATIONS

### Basic Operations

#### Note:

- Refer to the diagrams in "3. CONTROLS" when reading this chapter.

#### CAUTION

When the unit is turned on, starting and stopping the engine with its volume raised to the maximum level may harm your hearings.

Be careful about adjusting the volume.

#### Power on / off

##### Notes:

- Start the engine before using this unit.
  - Be careful about using this unit for a long time without running the engine. If you drain the car's battery too far, you may not be able to start the engine and this can reduce the service life of the battery.
- Start the engine. The power button / knob illumination on the unit will light up.



Engine ON position

- Press the [CONTROL] knob on the front panel or [SRC / ⏮] button on the remote control to turn on the power under standby mode. The unit goes back to the last status after power on.
- Press and hold the [CONTROL] knob (center long press) on the front panel, and rotate the [CONTROL] knob choose POWER OFF, then press the [CONTROL] knob on the front panel to turn off the power.  
Or press and hold [SRC / ⏮] button on remote control to turn off the power.

#### Mute

Press the [MUTE] button on the remote control to mute the volume from the unit.

#### Note:

Doing the operation above again or adjusting volume will release muting.

#### Volume adjustment

Turn the [CONTROL] knob on the front panel.

The adjustable range of volume is 0 to 40.

#### CAUTION

While driving, keep the volume level at which external sounds can be heard.

#### Playing source selection

Press [CONTROL] knob on the front panel repeatedly to choose desired playing source.

#### Note:

- Playing source selection means selecting work mode, such as RADIO mode and AUX mode, etc.

 
#### Display system time

Press the [DISP] button on the remote control to switch the display information, system time and playing source.

#### RESET

##### Note:

\* When the [RESET] button is pressed, frequencies of radio stations, titles, etc. stored in memory are cleared. You entered "CODE" is not cleared.



## System Setup

At all mode, press and hold **[CONTROL]** knob (center long press), and rotate the **[CONTROL]** knob choose **ADJUST**, then press the **[CONTROL]** knob to enter system setup. Press **[CONTROL]** knob (left / right) to select options, rotate the **[CONTROL]** knob to adjust.

### PCH MEMO (RADIO/HD RADIO/SIRIUSXM mode)

Rotate the **[CONTROL]** knob to choose PCH 1 / PCH 2 / PCH 3 / PCH 4 / PCH 5 or PCH 6, press and hold **[CONTROL]** knob (center long press) to store it in the memory.

### CLOCK

Press the **[CONTROL]** knob (right) to choose minute, and rotate the **[CONTROL]** knob to set minute.

Press the **[CONTROL]** knob (left) to choose hour, and rotate the **[CONTROL]** knob to set hour.

Then long press **[CONTROL]** knob (center) to confirm the time setting.

### DX/LO (RADIO mode)

Rotate the **[CONTROL]** knob to choose radio local or distant at **RADIO** mode.

- **LO:** Only stations with strong signal can be received.
- **DX:** Stations with strong and weak signals can be received.

### SELECT (BT mode)

This "SELECT" menu is intended to automatically paired by selecting a mobile phone was stored.

This unit can store three mobile phones. The mobile phone will be stored in paired order to the unit. The mobile phone can be stored up to three. The fourth mobile phone can not be stored. If you want to store a fourth mobile phone, please delete unwanted mobile phone from "DELETE" menu.

1. Rotate the **[CONTROL]** knob to choose the pair mobile phone name from the pairing list.
2. Press and hold the **[CONTROL]** knob to confirm.

### DELETE (BT mode)

1. Rotate the **[CONTROL]** knob to choose the paired mobile phone name from the pairing list.
2. Press and hold the **[CONTROL]** knob to confirm.

### DISCON (BT mode)

Disconnect currently connected mobile phone.

1. Rotate the **[CONTROL]** knob, mobile phone displays are currently connected.
2. Press and hold the **[CONTROL]** knob to disconnect.

### MIC SEL (BT mode)

Rotate the **[CONTROL]** knob to choose microphone EXTERNAL or INTERNAL.

### MIC GAIN (BT mode)

Rotate the **[CONTROL]** knob to choose Mic gain: -5, -4, -3, -2, -1, 0, 1, 2, 3, 4, 5. You can change the gain of MIC when a telephone partner cannot hear your voice.

### TONE SEL (BT mode)

You can get mobile phone ring tone from the speaker.

Rotate the **[CONTROL]** knob to choose AUTO or INTERNAL.

- **AUTO:** Mobile phone ring tone from the speaker.
- **INTERNAL:** The unit original ring tone from the speaker.

### AUTO ANS (BT mode)

To answer incoming calls automatically.

Rotate the **[CONTROL]** knob to choose AUTO ANS **ON** or **OFF**.

### AUTO CON (BT mode): ON/OFF

Rotate the **[CONTROL]** knob to choose AUTO CON **ON** or **OFF**.

### PIN CODE

This CODE is required to pairing for bluetooth.

Press the **[CONTROL]** knob, rotate the **[CONTROL]** knob to select a digit, press

## System Setup

the **[CONTROL]** knob (left / right) to move the cursor. Press the **[CONTROL]** knob to confirm. The PIN CODE default setting is "0000".

### PARENTAL PASSWORD (SiriusXM mode)

Change parental password. Original code is "0000".

### LOCK CH (SiriusXM mode)

Lock the current channel.

### UNLOCK CH (SiriusXM mode)

Unlock current locked channel.

### UNLOCK ALL CH (SiriusXM mode)

Unlock all parental locked channels.

### ALERT: ON/OFF (SiriusXM mode)

Activate interruption by Artist and Song alert.

### DELETE ALL ALERT (SiriusXM mode)

Delete saved alert items for artist and song.

### AUX SENS (AUX mode)

Rotate the **[CONTROL]** knob to choose AUX input sensitivity LOW, MID or HIGH at **AUX** mode.

### SCRN SVR: ON/OFF

Rotate the **[CONTROL]** knob to choose SCRAN SVR (screen saver) **ON** or **OFF**.

### SCROLL: ON/OFF

For track information that is longer than the display panel:

When **SCROLL** is **ON**, the LCD will display ID3 TAG information cyclicly, e.g.: TRACK->FOLDER->FILE->ALBUM->TITLE->ARTIST->TRACK->...

When **SCROLL** is **OFF**, the LCD will display one of the ID3 TAG information, the default is **TRACK**, but user can adjust it to other ID3 TAG information by pressing **[DISP]** button on the remote control.

### DIMMER: ON/OFF

Rotate the **[CONTROL]** knob to choose DIMMER **ON** or **OFF**.

- **ON:** LCD dimmer is active when small light of vehicle is turned ON.

- **OFF:** LCD always maximum brightness regardless of the vehicle small light.

### REAR/S-W

Rotate the **[CONTROL]** knob to choose REAR or S-WOOFER (SUB-WOOFER).

### SW PHASE

Rotate the **[CONTROL]** knob to choose REVERSE or NORMAL.

### BEEP: ON/OFF

Rotate the **[CONTROL]** knob to choose button beep sound **ON** or **OFF**.

### TEL-SW

Rotate the **[CONTROL]** knob to choose TEL SW sound **ON** or **OFF**.

- **MUTE:**

The sound from this unit is muted during telephone calls.

- **OFF:**

This unit continues normal operation even when the cellular phone is used.

- **ON:**

You can listen to your telephone calls from the speakers connected to this unit.

- \* When listening to your calls on your car speakers, you can adjust the volume by turning the **[CONTROL]** knob.

### BLINKING

Rotate the **[CONTROL]** knob to choose BLINKING light **ON** or **OFF**.

### CODE

Setting the anti-theft function (CATS).

"CATS" is the acronym of "Clarion Anti-Theft System". When you set a PIN code (called as "Personal Code"), a theft is prevented by disabling the operation of the unit at the theft.

Once you set this code, this function will not be deactivated unless you delete this code.

Press the **[CONTROL]** knob, rotate the **[CONTROL]** knob to select a digit, press the **[CONTROL]** knob (left / right) to move the cursor. Press and hold the **[CONTROL]** knob to confirm.

## System Setup

The procedure to delete this code is same as the way of setting the code.

### Note:

- Write down your Code in case you forget it.
- If you have lost your Personal Code, please contact Clarion customer service.
- The CODE screen will be displayed when turning the ACC power on after performing the following operations:
  - The car battery was replaced.
  - The backup power was cut off.
  - The RESET button was pressed.
- When you enter a wrong Personal Code, the message "LOCK - - -" is displayed and the Personal Code entry is prohibited for a while.

This prohibited time is changed according to the number of times of wrong code entry as follows:

- 1 to 6 times: 15 seconds
- 7 times or more: 15 minutes

## Audio Setup

### SOUND

Press the [CONTROL] knob to choose SOUND. First press shows current EQ. Rotate the [CONTROL] knob to choose BEAT EQ in this order:

OFF -> B-BOOST -> IMPACT -> EXCITE -> CUSTOM

To change CUSTOM setting, and press the [CONTROL] knob (center), then press [CONTROL] knob (right/left) to select EQ effects including: BASS-G -> BASS-F -> BASS-Q -> MID-G -> MID-F -> MID-Q -> TREBLE-G -> TREBLE-F, rotate the [CONTROL] knob to select a value.

BASS-G / MID-G / TREBLE-G: (-7) - (+7)

BASS-F: 50 / 100 / 200

BASS-Q: 0.7 / 1.0 / 1.4 / 2.0

MID-F: 500 / 1 K / 2 K

### PANDORA: ON/OFF

Select OFF if the Pandora application has not been installed on your iPod touch or iPhone.

### 12/24H

Rotate the [CONTROL] knob to choose time format: 12 or 24 hours.

### S-CTRL (iPod mode) : ON/OFF

Rotate the [CONTROL] knob to choose S-CTRL (Simple control) ON or OFF.

\* Refer to P11.

MID-Q: 0.7 / 1.0 / 1.4 / 2.0

TREBLE-F: 5 K / 10 K / 15 K

TREBLE-Q: 0.7 / 1.0 / 1.4 / 2.0

Then press the [CONTROL] knob (left / right) to select USER preset including: BALANCE -> FADER -> M-B EX -> HPF (high pass filter) -> LPF (low pass filter) -> S-W VOL (Subwoofer Volume), rotate the [CONTROL] knob to select a value.

BALANCE: LEFT 1-7 -> CENTER -> RIGHT 1-7

FADER: FRONT 1-7 -> CENTER -> REAR 1-7

M-B EX: ON/OFF

HPF: THROUGH/60/90/120

LPF: THROUGH/60/90/120

SUBW VOL: (-6) - (+6)

## Radio Operations

### Select tuner as playing source

Press the [CONTROL] knob or [SRC / ⏮] button on the remote control to switch to the RADIO source.

### Select one radio band

Press the [CONTROL] knob (up long press) on the panel or [BAND/TOP] button on the remote control to select one radio band among FM1, FM2, FM3 and AM.

### Manual tuning

During manual tuning, the frequency will be changed in steps.

Press [CONTROL] knob (left/right) on the panel or [◀ ▶] buttons on the remote control to tune in a higher / lower station.

### Auto tuning

Press and hold [CONTROL] knob (left/right) on the panel or [◀ ▶] buttons the remote control to seek a higher / lower station. To stop searching, repeat the operation above or press other buttons having radio functions.

### Note:

When a station is received, searching stops and the station is played.

### Preset scan

Preset scan receives the stations stored in preset memory in order. This function is useful when searching for a desired station in memory.

1. Press the [SCN/PS/AS] button on the remote control.
2. When a desired station is tuned in, press the [SCN/PS/AS] button on the remote control again to continue receiving that station.

### Note:

Be careful not to press and hold the [SCN/PS/AS] button, otherwise the auto store function is engaged and the unit starts storing stations.

### Auto store

Only stations with sufficient signal strength will be detected and stored in the memory. Press and hold the [SCN/PS/AS] button on the remote control to start automatic station search.

To stop auto store, press other buttons having radio functions.

### Notes:

1. After auto store, the previous stored stations will be overwritten.
2. The unit has 4 bands, such as FM1, FM2, FM3 and AM. FM3 and AM can store by AS function. Each band can store 6 stations, FZ502 can store 24 stations in total.

### Manual store

When one expected radio station has been detected, press and hold number button on the remote control 1-6 to store it in the memory.

### Recall the stored stations

Press one numeric button among 1 to 6 on the remote control or on the panel to select the corresponding stored station.

### Local seeking

When LOCAL seeking is on, only those radio stations with strong radio signal could be received. Refer to System Setup page 5.

### Note:

The number of radio stations that can be received will decrease after the local seeking mode is on.

## SiriusXM Satellite Radio Operations

### Displaying the Identification (ID) Code

Before you listen to satellite radio, you must subscribe to the service using the SiriusXM Radio ID number.

1. Press the **[CONTROL]** knob on the front panel or **[SRC / ⏮]** button on the remote control to activate SiriusXM-mode.
2. Press the **[CONTROL]** knob (left/right) to select channel "0".  
The unit displays Radio ID.

#### Notes:

1. The Radio ID is located on the bottom of the SiriusXM Connect Vehicle Tuner.
2. Please note that the SiriusXM Radio ID does not include the letters I, O, S or F.
3. Activate the SiriusXM Connect Vehicle Tuner using one of the two methods below:
  - Online: Go to "www.siriusxm.com/activatenow" and choose ACTIVATE RADIO.
  - Phone: Call 1-800-XM-RADIO (1-800-967-2346).

### Storing Channel Presets

1. Press **[BAND/TOP]** button on the remote control or long-press **[CONTROL]** knob (up) on the front panel to select the desired band you want to store the preset in.

There are 3 Satellite Radio Preset bands. Each press of **[BAND/TOP]** button on the remote control or long-press **[CONTROL]** (up) on the front panel changes the band: SXM1 -> SXM2 -> SXM3 -> SXM1

2. Tune to the desired channel and then press and hold one of the preset buttons (1 through 6) on the remote control to store the channel.
3. Repeat the procedure to store up to 5 other channels on the same band.

#### Notes:

- A total of 18 channels can be stored in the preset memory, 6 channels for each band (SXM1, SXM2 and SXM3).

### Tuning Channels using Presets

1. Press **[BAND/TOP]** on the remote control or long-press **[CONTROL]** knob (up) on the front panel to select the desired band of Presets you wish to access.
2. Press **[CONTROL]** knob (up/down) to the preset buttons (1 through 6) that has your desired Satellite Radio channel stored in memory.

### Category Browsing

1. Long-press and hold **[BAND/TOP]** on the remote control to activate the Category Browsing mode.
2. Rotate **[CONTROL]** knob to select desired category.
3. Press **[CONTROL]** knob (left/right) to select desired channel within the selected Category. You can see channel name, channel number, artist, title or content by pressing **[DISP]** on the remote control.
4. Press **[CONTROL]** knob to tune to selected channel.

#### Notes:

- If no operation is performed for 10 seconds or press **[CONTROL]** knob (up), the Category Browsing mode is canceled.

### Preset scan

Preset scan receives the stations stored in preset memory in order. This function is useful when searching for a desired station in memory.

1. Press and hold the **[PS/AS]** button on the remote control.
2. When a desired station is tuned in, press the **[PS/AS]** button on the remote control again to continue receiving that station.

### Channel scan (in current category)

Channel scan receives the channel (in current category) in order. This function is useful when searching for a desired channel in current category.

1. Press the **[PS/AS]** button on the remote control.
2. When a desired channel is tuned in, press the **[PS/AS]** button on the remote control again to continue receiving that channel.

## SiriusXM Satellite Radio Operations

### Note:

- Be careful not to press and hold the **[PS/AS]** button on the remote control for 1 second or longer, otherwise the preset scan function will begin and the unit starts scanning presets.

### Artist & Song Alerts

While listening to SiriusXM Satellite Radio, you can be alerted when your favorite songs or artists are playing on other channels. The radio will display an Alert message when a matching artist or song is found on another channel. Then you can choose if you want to tune to that favorite or you can ignore it and stay on your current channel. Information on setting up the Artist and Song alerts is described below.

1. While listening to favorite song, short-press **[RPT]** button on the remote control to add the artist or long-press **[RPT]** on the remote control button to add the song to the "Artist & Song Alerts" list.  
Press and hold **[CONTROL]** knob (center long press), and rotate the **[CONTROL]** knob to choose **ADJUST**, then to choose the **SEARCH**, and rotate **[CONTROL]** knob to select "ALERT LIST".  
Rotate and press **[CONTROL]** knob to select desired alert item. Then select "ON" to activate alert, "OFF" to deactivate or "DELETE" to delete this item. (press and hold **[CONTROL]** knob) You can also activate and deactivate Alert function in System Setup menu.

#### Notes:

- You can store up to 50 items for Artist & Song Alerts. "XU(sed)/YE(mpty)" is displayed when the new item is stored. X is the total number of song titles or artist names stored in memory, and Y is the total number memory locations still available for storage.
- If either the artists or song title is not available, "NO SONG" or "NO ARTIST" will be displayed.
- If you try to store item when memory is full, "MEMORY FULL" is displayed. If you want to store another, please delete existing alert item.

### Receiving and Tuning to an Alert

Whenever a stored artist or song is playing on another channel, alert message "ART ALERT" or "SNG ALERT" appears on the unit display. To tune to artist or song identified by the alert, press **[RDM]** button on the remote control.

#### Notes:

- If no operation is performed for 5 seconds, the unit returns to normal mode.
- Artist name and Song title which have stored and which are currently playing will be displayed in category called "MY MUSIC" in search mode.

### My Music search

You can access the channels which is broadcasting the contents in the activated Alert list.

1. Press and hold **[CONTROL]** knob (center long press), and rotate the **[CONTROL]** knob to choose **ADJUST**, then to choose the **SEARCH**, and rotate **[CONTROL]** knob to select "MY MUSIC LIST".
2. Press **[CONTROL]** knob to display matched songs which are currently broadcasted
3. Rotate **[CONTROL]** knob to select desired song, and press **[CONTROL]** to tune to that channel.

#### Notes:

- If there is no matched songs broadcasted, it displays "MEM EMPTY".

### Replay function

The Replay feature allows you to pause, rewind, and replay up to 30 minutes of live SiriusXM Satellite Radio.

1. While listening to a SiriusXM channel, press **[⏮]** on the remote control to enter Replay mode. The display will show "PAUSE" when entering this mode.
2. Press **[CONTROL]** knob (down) or press **[⏮]** button to resume playback of the stored audio from the point at which it was paused.  
During playback, the SiriusXM Tuner will continue to store the channel audio until you exit the Replay mode.



## SiriusXM Satellite Radio Operations

During REPLAY playback:

- Fast rewind: Press and hold [CONTROL] knob (left), or press and hold [◀◀] on the remote control.
  - Fast forward: Press and hold [CONTROL] knob (right), or press [▶▶] on the remote control.
  - Returning to the beginning of the current song: Press [CONTROL] knob (left), or press and hold [◀◀] on the remote control.
- (If you press [CONTROL] knob (left), or press [◀◀] on the remote control, in the first 2 seconds of a song, you return to the beginning of the previous song.)
- Advancing to the beginning of the next song: press [CONTROL] knob (right) or press and hold [▶▶] on the remote control.

3. Press [BAND/TOP] to finish Replay mode.

### Notes:

- If you continue to press [CONTROL] knob (right), or press and hold [▶▶] on the remote control, until the end, the Replay mode is canceled, and the unit will change to live SiriusXM radio mode.
- If you change channels while in Replay mode, the unit will exit Replay mode to live Satellite mode and clear the Replay memory.
- Replay mode is being kept when you change the source other than SiriusXM mode.

### iTunes song tagging

With iTunes song tagging, you can tag songs you hear while listening to SiriusXM Satellite Radio. The tagging information is saved in your radio until you connect your iPod or iPhone and then the tagging information is transferred to your iPod/iPhone. When your iPod/iPhone to iTunes, you will then be able to preview and purchase the song that you heard while listening to SiriusXM Satellite Radio.

Information on using the iTunes song tagging feature is described below.

1. A song may be tagged while listening to a SiriusXM channel if the display shows the "TAG" icon.

2. Press and hold [CONTROL] knob (down) or press [ISR] button on the remote control while the desired song is playing.
3. When completed, "STORED TAG X OF 64" is displayed.  
X means the number of tag stored.

### Notes:

- During tagging, the iPod/iPhone takes priority to save the tag information. If no iPod/iPhone is connected, the tag information is saved to this unit.
- This unit can store up to 64 pieces of tag information. When the memory of the unit is full, "MEMORY FULL" may be displayed.
- When iPod/iPhone that doesn't support the tagging function is connected, "TRANSFER FAIL" may be displayed.
- If there is stored tag information on the unit, when an iPod/iPhone supporting the tag function is connected, the stored tag information will be transferred to iPod/iPhone automatically.
- If tag information already exists, "ALREADY TAGGED" will be displayed when you try to tag information again.
- Tagging may be canceled by changing the frequency or station.
- If a song is tagged and the remaining storage volume of the connected iPod/iPhone is sufficient to hold the song's tag information, it will be saved on the iPod/iPhone.

### Changing the Display

Text information, such as the channel name, artist name/feature, song/program title and content is available with each SiriusXM channel. The unit can display this text information as explained below.

1. In SiriusXM mode, press [DISP] button on the remote control.  
Each time you press this button, the display changes as shown below.  
Band/Channel number/channel name => Artist Name => Song Title=> Content Info => Category Name => Clock => Band/Channel number/channel name
- If there is no text information, nothing will be displayed.

## SiriusXM Satellite Radio Operations

### Parental Lock / Unlock

The SiriusXM Parental Control feature allows you to control access to channels that you consider inappropriate for younger listener. When enabled, the Parental Control feature requires you to enter a password to tune to the locked channels. Information on setting up the password, setting up the channels to be locked, and the method to access the locked channels is described below.

1. Long-press [CONTROL] knob and select **ADJUST**, then press [CONTROL] knob to enter and press [CONTROL] knob (right) to select "PARENTAL PASSWORD". Press [CONTROL] knob to change password. Enter old password, new password. To enter code, rotate [CONTROL] knob to decide number and [CONTROL] knob (left/right) to select digit. Each time you need to press and hold [CONTROL] knob to confirm password. (Original password is "0000", after input four numbers, then long-press the [CONTROL] knob)

2. Long-press [CONTROL] knob and select **ADJUST**, then press [CONTROL] knob to enter and press [CONTROL] knob (right) to select "LOCK CH" and press [CONTROL] knob to start to lock channel. You will be asked to input password. Enter password and "LOCK" will be displayed if it is successful.
3. Long-press [CONTROL] knob and select **ADJUST**, then press [CONTROL] knob to enter and press [CONTROL] knob (right) to select "UNLOCKCH". Enter password and you can unlock the channel.
4. For accessing the locked channels, select channel by "DIRECT SELECT". Press and hold [CONTROL] knob (center long press), and rotate the [CONTROL] knob to choose **ADJUST**, then to choose the "SEARCH", and rotate [CONTROL] knob to select "DIRECT SELECT" and press [CONTROL] knob. Input desired locked channel (need to input 3 digit) and input password, then you can tune to that locked channel.

## HD Radio Operations

### About HD Radio™ Technology

HD Radio Technology allows CD-quality digital broadcasting of your local AM and FM radio stations. HD Radio broadcasts can include multiple channels on the same frequency, which is called multicasting. With multicasting, you can receive up to eight additional multicast channels: HD1-HD8.

With an HD Radio tuner connected, you will receive HD Radio digital broadcasts automatically when tuned to a station that offers HD Radio Technology.

**NOTE: Not all FM or AM stations offer HD Radio (digital) broadcasting. You can receive both analog and digital stations with the unit.**

### Accessing radio mode

Press the [CONTROL] knob or [SRC / ⏮] button on the remote control to switch to the HD RADIO source, and HD icon will illuminate.

### Select a band

Press and hold the [CONTROL] knob (up long press) on the panel or [BAND/TOP] button on the remote control to change between three FM and one AM bands. Each band stores up to six preset stations.

### Tuning

#### - Seek Tuning

Press and hold the [CONTROL] knob (left / right) on the panel or [◀◀, ▶▶] buttons on the remote control to seek the next/previous station automatically.

#### - Manual Tuning

Press the [CONTROL] knob (left / right) on the panel or [◀◀, ▶▶] buttons on the remote control to move the radio frequency number up or down one step.

## HD Radio Operations

### HD Radio multicast channels

To tune to an HD Radio multicast channel, tune to the main signal and then press the **[CONTROL]** knob on the panel. PTY and SUB CH are displayed. Select PTY or SUB CH by rotate **[CONTROL]** knob and push to confirm.

- Select PTY type from the category list by rotate **[CONTROL]** knob and push.
- Select SUB CH by rotate **[CONTROL]** knob and push.
- Multi channel is available when a digital signal is detected, the DIGITAL icon will illuminate. If the digital signal becomes unavailable, the unit will revert to Analog reception.

### Preset stations

Up to six stations on each band can be stored as presets, which can then be instantly recalled by pressing the associated preset button. To store a station, turn the radio on and select the desired band and station. Press and hold the desired preset button (numbered one through six on the remote control). When stored, the preset number will appear in the display. The station is now stored and can be recalled by pressing the corresponding preset button. Repeat for the remaining five presets on the current band and for presets on the other four bands.

### iTunes® Tagging

The unit offers iTunes® Tagging, which allows the user to "Tag" songs playing on HD Radio™ stations for purchase later through iTunes. When press **[ISR]** button on the remote control, the unit stores the title and artist song information that can then be transferred to your iPod when connected to the unit. A list titled "Tagged" will appear in iTunes, allowing you the option to purchase your tagged songs.

#### Note:

**Multicast stations can be stored as presets, but the unit must be in Digital or Auto reception mode to receive them.**

#### Preset scan

Press **[SCN/PS/AS]** button on the remote control to scan and play all preset stations for 10 seconds each. Press **[SCN/PS/AS]** button on the remote control again to stop scanning and play the current station.

#### Note:

Be careful not to press and hold the **[SCN/PS/AS]** button on the remote control, otherwise the auto store function is engaged and the unit starts storing stations.

### Automatic store (AS)

Press the **[SCN/PS/AS]** button on the remote control to select six strong stations and store them in the FM3 or AM band using the auto store function. After entering the stations into memory, the unit will automatically stop at each station for five seconds, allowing you to preview each selection. When using the auto store function, the new stations replace any stations already stored in preset memory.

#### Note:

You can stop the auto store function at any time by pressing the **[SCN/PS/AS]** button on the remote control again.

#### Note:

"iTunes® Tagging" function works by connecting THD301 (sold separately).

#### iPod compatibility

For detailed information on the playable iPod models, see our home page: [www.clarion.com](http://www.clarion.com)

## iTunes® Tagging

#### Note:

- iPhone can also be connected to this system and "iPod" appearing in this manual should be referred to as "iPod/iPhone".
- This system will not operate or may operate improperly with unsupported versions.

### Tagging music

To begin tagging music, tune to an HD Radio station. The DIGITAL icon at the display must be illuminated, indicating a digital station is being received. TAG icon lights up when Tagging function is ready. Press the **[ISR]** button on the remote control. The tagging function is highly depends on the receptions of the radio station. If the channel reception is insufficient, it will effect the operation of the tagging function.

"Stored Tag ## of 64" will appear in the display. The song information is saved to the unit memory until your iPod is connected. You can tag up to 64 songs before the tags must be transferred to your iPod or deleted. When the Tag memory reaches capacity (64 tags) the bottom of the screen displays "Memory Full".

Table 5: TAG Messages

Tag Message	Reason
STORED TAG ## OF 64	If the Tag data is ready, and <b>[ISR]</b> button on the remote control is pressed
SENDING HD TAG ##	Tag data is sending to iPod
MEMORY FULL	Tag storage is full
TAG DATA IS NOT AVAILABLE	Tag data is not available
IPOD FULL	iPod memory is full
TAG NOT SUPPORT	When connect and press <b>[ISR]</b> button on the remote control, the iPod without Tagging function

#### Note:

Tags saved to your iPod can be managed using the iTunes software, available at [www.apple.com/itunes](http://www.apple.com/itunes).

### Downloading tags to your iPod

To download tags to your iPod, plug your iPod into the unit. All existing tags are automatically transferred to the iPod and deleted from the head unit's memory. If your iPod is connected when a song is tagged, the Tag will be immediately transferred to the iPod.

#### Note:

When transferring Tags to your iPod, the unit must remain in **HD RADIO** mode. To purchase tagged songs, you must sync your iPod to iTunes and then click the "Tagged" list on the left side of the iTunes software screen. Click the "view" button for purchasing information.

#### Notes:


- How to enter the iTunes tagging function?  
"TAG" and "DIGITAL" light up when Tagging function is ready, press **[ISR]** button on the remote control to start iTunes Tagging.
- What is seen on the radio's display to let me know I have tagged the tune?  
Press **[ISR]** button on the remote control to show "STORED TAG## OF 64". After connect to your iPod, the display shows "SENDING HD TAG##".  
If no connection, the display will show "STORED TAG## OF 64". You could save 64 Tag into E2PROM in total. When you connect to your iPod, Tag information will be saved in the iPod, and the data in E2PROM will be cleared.
- Then how do I get the tagged tune from my iPod to the computer?  
If you have install iTunes, connect your iPod to your computer and buy songs online.

## USB Operations

1. Move the cover of the USB slot to the left. Insert a USB cable (CCA-755) into the USB slot. Insert a USB device into the USB cable.

When connecting a USB device, the unit will read the files automatically.

2. To remove the USB device, you should first select another source or turn off the power, in order to avoid damaging the USB device. Then take off the USB device. Move the cover to the right.

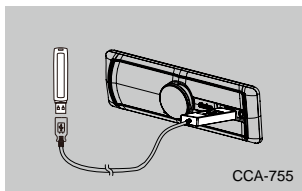

- \* For MP3/WMA USB device, it takes some time until the start of searching and between tracks. In addition, some errors may occur in the play time.

### Pausing play

1. Press the [▶/II] button on the remote control to pause play.  
"PAUSE" appears in the display.
2. To resume MP3/WMA play, press the [▶/II] button on the remote control again.

### Selecting a track

#### Track-up

1. Press the [CONTROL] knob (right) on the panel or [▶] button on the remote control to move to the beginning of the next track.
2. Each time you press the [CONTROL] knob (right) on the panel or [▶] button on the remote control, the track advances to the beginning of the next track.

#### Track-down

1. Press the [CONTROL] knob (left) on the panel or [◀] button on the remote control to move back to the beginning of the current track.
2. Press the [CONTROL] knob (left) on the panel or [◀] button on the remote control twice to move back to the beginning of the previous track.

### Fast-forward/Fast-reverse

#### Fast-forward

Press and hold the [CONTROL] knob (right) on the panel or [▶▶] button on the remote control.

#### Fast-reverse

Press and hold the [CONTROL] knob (left) on the panel or [◀◀] button on the remote control.

## USB Operations

### Top function

The top function resets the USB player to the first track of the USB device. Press and hold the [CONTROL] knob (down) to play the first track (track No. 1) on the USB device.

- \* In case of MP3/WMA, the first track of the current folder will be played.

### Other various play functions

#### Scan play

This function allows you to locate and play the first 10 seconds of all the tracks recorded on a USB.

Press the [SCN/PS/AS] button on the remote control to perform scan play.

#### Repeat play

This function allows you to play the current track repeatedly or play a track currently being played in the MP3/WMA folder repeatedly.

1. Press the [RPT] button on the remote control once or more until "TRK RPT" appears on the display to perform repeat play, and "RPT" segment lights on.

## iPod & iPhone Operations

### Connect

Connect your iPod or iPhone to the USB slot via CCA-748 cable.

When connecting a device, the unit will read the files automatically. The track information display on the screen once playback start.

### MENU

In the S-CTRL OFF mode, press the [CONTROL] knob (up), rotate the knob select "MUSIC" or "VIDEO".

Select "MUSIC", press the [CONTROL] knob, then rotate the [CONTROL] knob to show PLAY LISTS / ARTISTS / ALBUMS / GENRES / SONGS / COMPOSERS, then press the [CONTROL] knob to confirm.


Select "VIDEO", press the [CONTROL] knob, then rotate the [CONTROL] knob to show MOVIES / MUSIC VIDEO / TV SHOWS / VIDEO PODCASTS / RENTALS, then press the [CONTROL] knob to confirm.

2. For MP3/WMA files, press [RPT] button on the remote control repeatedly until "FOLD RPT" appears on the display for folder repeat play.
3. Press [RPT] button on the remote control repeatedly until "RPT OFF" appears on the display to cancel repeat playback, and "RPT" segment goes off.

### Random play

This function allows you to play all tracks recorded on a USB device in a random order.

Press the [RDM] button on the remote control to perform random play.

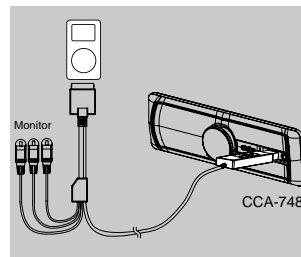

#### Note:

- \* In case of VIDEO Playback, CCA-748 cable and monitor (sold separately) are required.

## iPod & iPhone Operations

- VIDEO MENU item is different by the model of connected iPod and language setting.

### Repeat play

This function allows you to play the current track repeatedly or play all tracks in your iPod/iPhone repeatedly.

1. Press the **[RPT]** button on the remote control once or more until "**RPT ON**" appears on the LCD to perform repeat play.
2. Press **[RPT]** button on the remote control repeatedly until "**RPT OFF**" appears on the LCD to cancel repeat playback.

### Random play

This function allows you to play all tracks in a random order.

1. Press the **[RDM]** button on the remote control once or more until "**RDM ALBUM**" appears on the LCD for album random play.
2. Press the **[RDM]** button on the remote control once or more until "**RDM SONG**" appears on the LCD to perform random play.
3. Press the **[RDM]** button on the remote control once or more until "**RDM OFF**" appears on the LCD to cancel random playback.

### Setting iPod simple control mode

Use this function if you wish to operate through your iPod connected to this unit via the USB cable.

\* The factory default setting is "OFF".

1. Press and hold **[CONTROL]** knob (center), and rotate the **[CONTROL]** knob choose **ADJUST**, then press the **[CONTROL]** knob (center) to enter system setup.
2. Press the **[CONTROL]** knob (left / right) to select "**S-CTRL**".
3. Rotate the **[CONTROL]** knob to select "**ON**" or "**OFF**".
  - **ON**: Operations are made through your iPod.
  - **OFF**: Operations cannot be made through your iPod.

### Notes:

- When performing iPod operations using simple control mode, make the operations slowly. If repetitive operations are performed too quickly, unforeseen errors may occur.
- When performing iPod operations using simple control mode, please do not operate the iPod and the unit at the same time, otherwise there may be unexpected event happened.
- Some iPod models do not support this function. Consult your nearest **Clarion** dealer or website to confirm which models do not support this function.

### iPod menu alphabet search

This function searches the subfolders for desired alphabetical letters.

1. Press the **[CONTROL]** knob (up), and rotate **[CONTROL]** knob to select the iPod menu mode.
2. Rotate the **[CONTROL]** knob to switch between categories.  
MUSIC: PLAYLISTS, ARTISTS, ALBUMS, GENRES, SONGS, COMPOSERS  
VIDEO: MOVIES, MUSIC VIDEOS, TV SHOWS  
VIDEO PODCASTS, RENTALS
3. Press the **[CONTROL]** knob. (The contents of the category are displayed.)
4. Press and hold the **[CONTROL]** knob (down).
5. Rotate the **[CONTROL]** knob to select the desired letter to search.
6. Press the **[CONTROL]** knob (down) to perform search.
7. Rotate the **[CONTROL]** knob to select and press the **[CONTROL]** knob to confirm.

### Listening to PANDORA

You can listen to Pandora internet radio by connecting an iPod/iPhone that has Pandora Application already installed.

To start streaming, connect the iPod/iPhone with Pandora already launched.

When the unit displays "PLEASE LAUNCH PANDORA APPLICATION ON MOBILE DEVICE" in PANDORA mode, please launch the PANDORA Application by operating the iPod/iPhone connected.

## iPod & iPhone Operations

1. Press the **[CONTROL]** knob (push) to enter the Pandora mode.

### Selecting a station from list

Press the **[CONTROL]** knob (up) to enter the station list.

Rotate the **[CONTROL]** knob to select "**BY DATE**" or "**A-Z**" and press the **[CONTROL]** knob to confirm.

- **BY DATE**: List in an created date order
- **A-Z**: List in an alphabetical order

### Go to next station or previous station(an alphabetical order)

Press the **[CONTROL]** knob (right) on the panel or **[▶▶]** button on the remote control to go to next station.

Press the **[CONTROL]** knob (left) on the panel or **[◀◀]** button on the panel or remote control to go to previous station.

### Thumbs up/down

1. Press the **[RDM]** button on the remote control for the thumbs up.
2. Press the **[SCN]** button on the remote control for the thumbs down.

### Notes:

- You can personalize your stations by "thumbs up" or "thumbs down".
- Pandora limits the number of thumbs down allowed on their service.  
If you attempt to thumbs down songs beyond the limit, the current song continues to playback.

### BOOKMARK artist or song

Press the **[RPT]** button on the remote control to Bookmark artist.

Press and hold the **[RPT]** button on the remote control to Bookmark current artist of the song.

### Creating new stations

Press the **[1]** button on the remote control to create a new station from the current artist.

Press and hold the **[1]** button on the remote control to create a new track.

### Note:

If the name of the station you wish to create for a track title or an artist name is the same as the station name currently playing, "**NOW PLAY**" appears on the display and the station will not be created.

### Skip

Press the **[BAND/TOP]** button on the remote control for the next song in station.

### Note:

- Pandora limits the number of skips allowed on their service. If you attempt to skip songs beyond the limit, "**SKIP LIMIT**" is displayed.

### Play/Pause

Press the **[▶||]** button on the remote control for play/ pause.

## Bluetooth Operations

The Bluetooth allows you to utilize your car's built-in audio system for wireless mobile phone or music handsfree communication. Some Bluetooth mobile phones have the audio features, and some portable audio players support Bluetooth feature. This system can play audio data stored in a Bluetooth audio device. The car stereo with Bluetooth will be able to retrieve phonebook contacts, receive call, dialed call, missed call, incoming calls, outgoing call and listen to music.

### Notes:

- Leaving it exposed to high temperatures or direct sunlight can cause distortion or discoloration which may result in a malfunction.
- This system will not operate or may operate improperly with some Bluetooth audio players.
- **Clarion** cannot guarantee the compatibility of all mobile phones together with unit.
- Audio playback will be set to the same volume level as set during telephone call. This might cause problems, if extreme volume level is set during telephone call.

## Handsfree Operations Pairing

1. Turn on Bluetooth function of your mobile phone.
2. Enter mobile phone's Bluetooth setup menu.
3. Search for new Bluetooth devices.
4. Select **FZ502** from the pairing list on the mobile phone.
5. Enter "**0000**" as the password (The password default setting is "**0000**").
6. After pairing successfully, the unit will enter Bluetooth mode automatically, and "**BLUETOOTH CONNECTED**" will appear on the LCD.

## Making a call

### Operation from Bluetooth menu

Press the **[CONTROL]** knob to switch the source to "**BLUETOOTH**". Press and hold the **[CONTROL]** knob (center) choose "**ADJUST**", then rotate the **[CONTROL]** knob select "**CALL LST**".

1. Press the **[CONTROL]** knob.

2. Rotate the **[CONTROL]** knob on the front panel to switch:  
DIAL NUMBER / DIALLED CALL / MISSED CALL / RECEIVED CALL / USER PHONEBOOK

### • DIAL NUMBER

1. Rotate the **[CONTROL]** knob to choose "**DIAL NUMBER**" and press the **[CONTROL]** knob (push) to confirm.
2. Rotate the **[CONTROL]** knob to select a number, press the **[CONTROL]** knob (right) to confirm and ready to input the next digit. Repeat the above until all numbers inputted.
3. Press the **[CONTROL]** knob (push) to dial.
4. Press the **[CONTROL]** knob (right) to terminate call.

### • Dialed/Missed/Received

You can search any Dialed / Missed / Received.

1. Rotate the **[CONTROL]** knob to select "**DIALLED**", "**MISSED**", "**RECEIVED**".
  2. Press the **[CONTROL]** knob to enter the selected call history.
  3. Press the **[CONTROL]** knob to scroll the contacts.
  4. When the contact name or mobile phone No. is displayed, press the **[CONTROL]** knob (push) to call the mobile phone No. of that contact.
- \* Press the **[CONTROL]** knob (right) to end the call.

### • Call from Phonebook

User can search the contact name in the phonebook and make call.

1. Rotate the **[CONTROL]** knob to select "**USER PHONEBOOK**".
  2. Press the **[CONTROL]** knob to enter the selected.
  3. Rotate the **[CONTROL]** knob to scroll the contacts.
  4. The phone number and the name to scroll display. When the contact name is displayed, press the **[CONTROL]** knob (push) to call the mobile phone No. of that contact.
- \* Press the **[CONTROL]** knob (right) to end the call.

## Bluetooth Operations

### Notes:

- Some mobile phones may not be able to transfer data of Phonebook.
- After **RESET**, please wait few minutes until data transferred following to the Bluetooth mode selection. During that, "**PBK UPDATE**" is on the display.

### • Redial

You can call last dialed number.

- Press the **[CONTROL]** knob (up) to enter redial.  
Press the **[CONTROL]** knob (push) to dial when display "**REDIAL**".

### • Transfer Call

You can switch Handsfree call and mobile phone call.

- Press the **[CONTROL]** knob (left) button during call.

### • Answering a call

You can answer an incoming call by pressing the **[CONTROL]** knob (left).

- \* Press the **[CONTROL]** knob (right) to reject an incoming call.

### • Answering a call

You can answer an incoming call by pressing the **[CONTROL]** knob.

- \* Press the **[CONTROL]** knob (right) to reject an incoming call.

## Audio Streaming Operations What is audio streaming?

Audio streaming is a technique for transferring audio data such that it can be processed as a steady and continuous stream. Users can stream music from their external audio player to their car stereo wirelessly and listen to the tracks through the car's speakers. Please consult your nearest **Clarion** dealer for more information on the product of wireless audio streaming transmitter offered.

### ⚠ CAUTION

Please avoid operating your connected mobile phone while audio streaming as this may cause noise or sound choppy on the song playback.

Audio streaming may or may not resume after telephone interrupt as this is dependent on mobile phone.

System will always return to Radio mode if audio streaming is disconnected.

### Note:

Be sure to read the chapter "Pairing" before proceeding.

## Play / Pause a track

1. Press the **[CONTROL]** knob (down) or **[⏮]** button on the remote control to pause audio playback.
2. To resume audio playback, push the **[CONTROL]** knob (down) or **[⏮]** button on the remote control again.

## Selecting a track

### Track-up

1. Press the **[CONTROL]** knob (right) or **[⏭]** button on the remote control to move to the beginning of the next track.
2. Each time the **[CONTROL]** knob (right) or **[⏭]** button on the remote control is pressed, playback proceeds to another track in the advancing direction.

### Track-down

1. Press the **[CONTROL]** knob (left) or **[⏮]** button on the remote control to move to the beginning of the previous track.
2. Each time the **[CONTROL]** knob (left) or **[⏮]** button on the remote control is pressed, playback proceeds to previous track in the reverse direction.

### Note:

Playing order will depend on Bluetooth audio player. When press the **[CONTROL]** knob (left) or **[⏮]** button on the remote control is pressed, some A2DP devices will restart the current track depends on the duration of playback.

During music streaming playback, "**A2DP**" will be shown on the display. Information about tracks (e.g. the elapsed playtime, song

title, etc.) cannot be displayed on this unit. When A2DP device is disconnected, "**DISCONNECT**" will be shown on the display

and return to previously selected audio source. Some Bluetooth audio players may not have play / pause synchronized with

## Bluetooth Operations

this unit. Please make sure both device and main unit are in the same play / pause status in **BT MUSIC** mode.

### ID3 display

During music streaming playback, for music information that is longer than the display panel:

When **SCROLL** is ON, the LCD will display ID3 TAG information cyclicly, e.g:  
ALBUM->TITLE->ARTIST..

When **SCROLL** is OFF, the LCD will display one of the ID3 TAG information, the default is **TRACK**, but user can adjust it to other ID3 TAG information by press the **[DISP]** button on the remote control.

## AUX Operations

Press the **[CONTROL]** knob on the panel or **[SRC/⏮]** button on the remote control once or more to select "**AUX**".

AUX is just for audio content with 3.5mm Jack connector plugged into audio-in socket on the front panel on the right of USB slot.

### AUX Input sensitivity setting

1. Press and hold the **[CONTROL]** knob .
2. Turn the **[CONTROL]** knob to select "**AUX SENS**".
3. If the output level of connected external audio player is "**HIGH**", rotate the **[CONTROL]** knob and choose "**LOW**". And if the output level is "**LOW**", choose "**HIGH**".

## 5. TROUBLE SHOOTING

### GENERAL

Problem	Cause	Measure
Unit can not power on.	Unit fuse blown.	Replace with new fuse of correct rating.
	Car battery fuse blown.	Replace with new fuse of correct rating.
Unit can not power on. Nothing happens when buttons are pressed.	The microprocessor has malfunctioned due to noise, etc.	Turn off the power. Press the <b>[RESET]</b> button with a thin rod.  Note: When the <b>[RESET]</b> button is pressed, turn off the ACC power.*
Display is not accurate.		* When the <b>[RESET]</b> button is pressed, frequencies of radio stations, titles, etc. stored in memory are cleared.
No/low audio output.	Improper audio output connection.	Check wiring and correct.
	Volume set too low.	Increase volume level.
	Speakers damaged.	Replace speakers.
	Heavily biased volume balance.	Adjust the channel balance to center position.
Poor sound quality or distortion.	Speaker wiring is in contact with metal part of car.	Insulate all speaker wiring connections.
	Speaker power rating does not match unit.	Replace speakers.
	Wrong connections.	Check wiring and correct.
Unit resets itself when engine is off.	Speaker is shorted.	Check wiring and correct.
	Incorrect connection between ACC and Battery.	Check wiring and correct.

### USB Devices

Problem	Cause	Measure
USB device cannot be inserted.	The USB device has been inserted with wrong direction.	Reversing the connection direction of the USB device, try it again.
	The USB connector is broken.	Replace with a new USB device.
USB device is not recognized.	The USB device is damaged.	Disconnect the USB device and reconnect. If the device is still not recognized, try replacing with a different USB device.
	Connectors are loose.	
No sound heard with the display " <b>No File</b> " shown.	No MP3/WMA file is stored in the USB device.	Store these files properly in the USB device.
Sound skips or is noisy.	MP3/WMA files are not encoded properly.	Use MP3/WMA files encoded properly.

## Bluetooth

Problem	Cause	Measure
Cannot pair the Bluetooth enabled device with the car audio system.	The device does not support the profiles required for the system. The Bluetooth function of the device is not enabled.	Use another device to connect. Refer to the user manual of the device for how to enable the function.
The audio quality is poor after connection with a Bluetooth-enabled device.	The internal microphone gain is not set correctly. The external microphone is not set correctly nor properly positioned.	Adjust the gain of the internal microphone in System Setup. Adjust the gain and position of the external microphone. For example, stick the microphone onto the dashboard so it is close to the driver.

## SiriusXM Advisory Messages

Message	Description
CHEK TUNER	Check the SiriusXM tuner connection on the back of the unit to ensure that its correctly connected.
CHK ANTENNA	Ensure the SiriusXM antenna cable is connected to the SiriusXM tuner correctly. Check the SiriusXM antenna wire for breaks or sharp bends. Replace the antenna if necessary. Press RESET located..... If the message remains, the antenna may have been damaged.
NO SIGNAL	The vehicle must be outside, and the antenna must have a clear view of the southern sky. The magnetic antenna must be mounted on the outside of the vehicle for the best reception.
CHAN UNSUB	This channel is not included in your SiriusXM subscription plan. Call 1-800-XM-RADIO (1-800-967-2346) to subscribe.
CH UNAVAIL	This channel is not a valid SiriusXM channel. The channel number has been entered incorrectly, or the channel was removed from the SiriusXM channel lineup
CH LOCKED	The selected channel has been locked by the parental controls, or a mature channel has been selected. A prompt to enter the unlock code will appear. Enter the unlock code as described on page 8.
SUBSCRIPTN UPDATED	An update to your SiriusXM subscription has been received by the SiriusXM tuner. Press any button to continue.

## 6. ERROR DISPLAYS

If an error occurs, one of the following displays is displayed.  
Take the measures described below to solve the problem.

Display	Cause	Measure
ERROR 2	Do not support iPod & iPhone.	Change another device. * The head unit will return to RADIO mode.

If an error display other than the ones described above appears, press the [RESET] button. If the problem persists, turn off the power and consult your store of purchase.

- \* When the [RESET] button is pressed, frequencies of radio stations, titles, etc. stored in memory are cleared.

## 7. SPECIFICATIONS

### FM Tuner

Frequency range: 87.9-107.9MHz  
Usable sensitivity: 8dBμ  
Frequency response: 30Hz-15kHz  
Stereo separation: 30dB(1kHz)  
Signal/noise ratio: >55dB

### AM Tuner

Frequency range: 530-1710kHz  
Usable sensitivity (S/N=20dB): 30dBμ

### MP3/WMA mode

MP3 sampling rate: 8 kHz to 48 kHz  
MP3 bit rate: 8 kbps to 320 kbps / VBR  
WMA bit rate: 8 kbps to 320 kbps  
Logical format: ISO9660 level 1,2  
Joliet file system

### USB

Specification: USB 1.0/2.0  
Playable audio format:  
MP3(.mp3): MPEG 1/2/Audio Layer-3  
WMA(.wma): Ver 7/8/9.1/9.2

### Bluetooth

Specification: Bluetooth Ver. 2.0+EDR  
Profile: HFP (Hands-free Profile)  
PBAP (Phone Book Access Profile)  
A2DP (Advanced Audio Distribution Profile)  
AVRCP (AV Remote Control Profile)  
Send/Receive Sensitivity: Class 2

### Audio Amplifier


Maximum power output:  
180W (45W x 4)  
Speaker impedance: 4Ω (4 to 8Ω allowable)

### Input

Audio input sensitivity:  
High: 320mV (at 1V output)  
Mid: 650mV (at 1V output)  
Low: 1.3V (at 1V output)  
(input impedance 10 kΩ or greater)  
Aux-in level: ≤2V

### General

Power supply voltage:  
14.4VDC (10.8 to 15.6V allowable),  
negative ground  
Fuse: 15A  
Dimensions of the Main Unit:  
188mm Width x 58mm Height x 190mm Depth  
7-2/5"(width) x 2-7/25"(Height) x 7-12/25"(Depth)  
Weight of the Main Unit: 1.94lb. (0.88kg)  
Dimensions of the Remote Control unit:  
52mm Width x 7.5mm Height x 85.5mm Depth  
2-3/64"(Width) x 19/64"(Height) x 3-11/32"(Depth)  
Weight of the Remote Control Unit:  
0.77oz. (24g) (including battery)

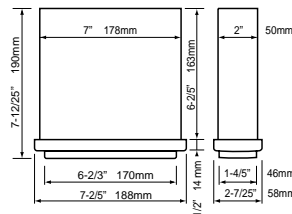

### Note:

- Specifications and design are subject to change without notice for further improvement.

**Power Output:**  
19W x 4 Channels RMS  
(4Ω @ 14.4V ≤ 1% THD+N)

**Signal to Noise Ratio:**  
83 dBa (reference: 1 W into 4 Ω)





## 8. INSTALLATION / WIRE CONNECTION GUIDE

### CONTENTS

1) Before Starting .....	15
2) Package Contents .....	15
3) General Cautions .....	15
4) Cautions on Installation .....	15
5) Installing the Source Unit .....	15
6) Removing the Source Unit .....	16
7) Wiring and Connections .....	17
8) Connecting the accessories .....	17

### 1) Before Starting

1. This set is exclusively for use in cars with a negative ground 12 V power supply.
2. Read these instructions carefully.
3. Be sure to disconnect the battery "terminal" before starting. This is to prevent short circuits during installation. (Figure 1)

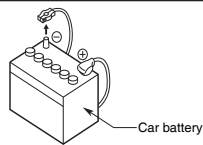


Figure 1

### 2) Package Contents

Source unit .....	1	Wire connector .....	1
Trim ring .....	1	Owner's manual .....	1
Mounting bracket .....	1	Warranty card .....	1
Screws M5x6 mm .....	4	Remote control (with battery) .....	1
L-key .....	2		

### 3) General Cautions

1. Do not open the case. There are no user serviceable parts inside. If you drop anything into the unit during installation, consult your dealer or an authorized **Clarion** service center.
2. Use a soft, dry cloth to clean the case. Never use a rough cloth, thinner, benzine, or alcohol etc. For tough dirt, apply a little cold or warm water to a soft cloth and wipe off the dirt gently.

### 4) Cautions on Installation

1. Prepare all articles necessary for installing the source unit before starting.
2. Install the unit within 30° of the horizontal plane. (Figure 2)
3. If you have to do any work on the car body, such as drilling holes, consult your car dealer beforehand.
4. Use the enclosed screws for installation. Using other screws can cause damage. (Figure 3)

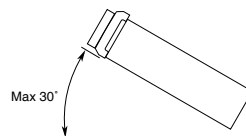


Figure 2

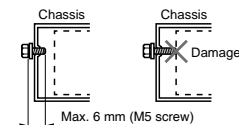


Figure 3


### 5) Installing the Source Unit

1. Place the mounting bracket into the instrument panel, use a screwdriver to bend each stopper of the mounting bracket inward, then secure the stopper.
2. Wire as shown in Section 7) .
3. Insert the source unit into the mounting bracket until it locks.
4. Take care of the top and bottom of the trim ring and mount it so that all the hooks are locked.

#### Notes:

1. Some car models require special mounting kits for proper installation. Consult your **Clarion** dealer for details.
2. Fasten the front stopper securely to prevent the source unit from coming loose.


#### • Console opening dimensions

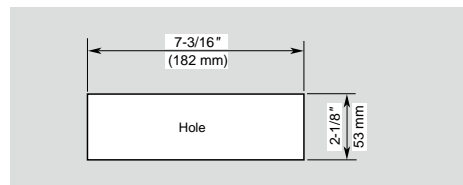



## Notes of installation

1. Before installation, please make sure proper connections are conducted and the unit operates normally. Improper connection may result in damage to the unit.
2. Use only accessories designed and manufactured for this unit and other unauthorized accessories may result in damage to the unit.
3. Before installation, please fasten all power cables.
4. DO NOT install the unit in the place where close to hot area to prevent damage to electrical components such as the laser head.
5. Install the unit horizontally. Installing the unit more than 30 degree vertically may result in worse performance.
6. To prevent electric spark, connect the positive pole first and then the negative pole.

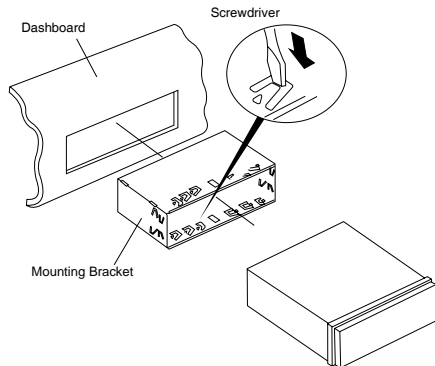


7. DO NOT block the cooling fan exit to ensure sufficient heating dissipation of this unit, or it may result in damage to this unit.

## Unit installation

### Method A

1. Insert mounting bracket into dash board, choose appropriate mounting tab according to the gap width, bending the mounting tab outwards with a screwdriver to fix the mounting bracket in place.
2. Slide the unit into the bracket until you hear a click sound.


### Method B

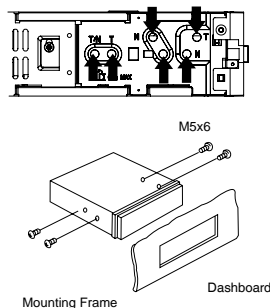

1. Insert this unit directly to the opening of the dashboard.
2. Place M5x6 cylindrical screw through the holes of the mounting frame located inside the opening to holes of the unit and fasten the screws to left & right.

## Trim ring installation

 
Attach the trim ring around the front panel.




## 6) Removing the Source Unit

### Disassemble trim ring

 1. Push the trim ring to right and pull out the right part.




 2. Push the trim ring to left and pull out the left part.





### Disassemble the unit

1. Switch off the power.
2. Remove the trim ring.
3. Insert the removal keys straight back until they lock, then pull the unit out.
4. Disconnect all the wires.

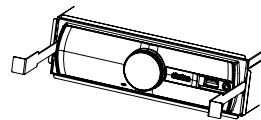

## 7) Wiring and Connections

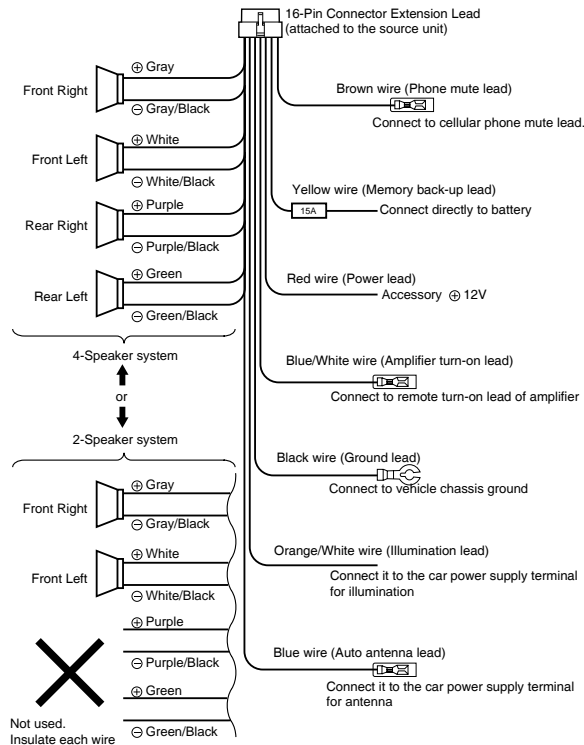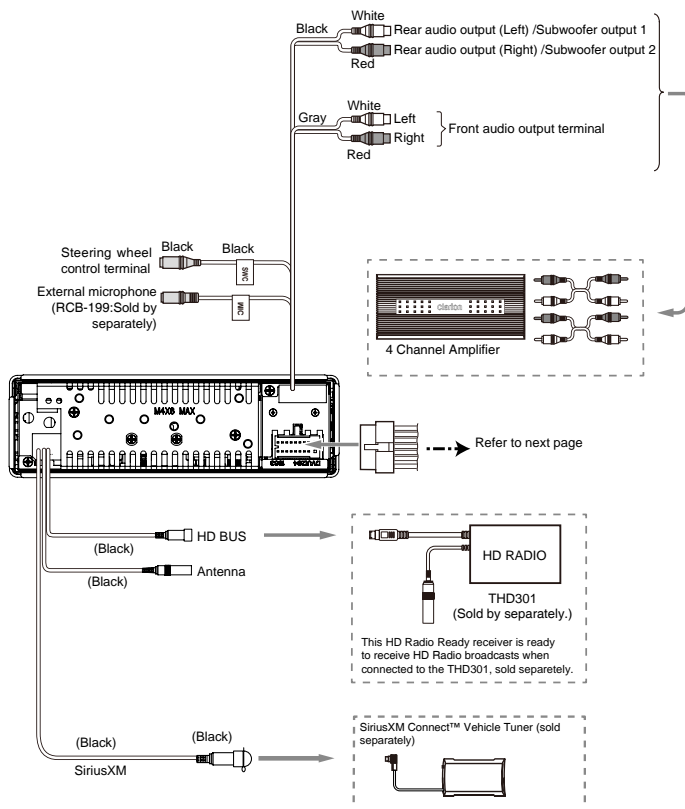

## 8) Connecting the accessories

### • Connecting to the external amplifier

External amplifiers can be connected to the 4 channel RCA output connections. Ensure that the connectors are not grounded or shorted to prevent damage to the unit.

# Clarion Co., Ltd.

---

All Rights Reserved. Copyright © 2012: Clarion Co., Ltd.

Printed in China / Imprimé en Chine / Impreso en China

PN: 127075003929