



Contents

1 Welcome

Before Starting	1
What is in the Box?	2
Important Phone Numbers	2

2 Getting Started

Plugging in and Putting in the Batteries	3
Installing the Paper Roll	5
Installing the Barcode Reader	6
PC-Based Software	7
Setting the Language	8
Setting the Date And Time	9
Programming the Sales Tax	10
Programming Department Keys	10

3 Getting To Know the Cash Register

About the Displays	12
Opening and Closing the Customer Display	12
About the Numeric Display	14
Using the Mode Key Area	14
Using the Keyboard	16
Using the Cash Drawer	17

Using the Accessory Drawer	18
Using the Counterfeit Detector Feature	18
About Paper Money	19
Detecting Suspicious Money	19
Programming the UV Light.....	21

4 Setting Up Your Cash Register - the Basics

Using the Displays	22
The Clerk Display	23
Setting Alphanumeric Descriptions	23
Alphanumeric Code Chart	24
Using Single Width Characters.....	26
Programming Blank Lines or Restoring Factory Default Messages	26
About Programming Numbers in Header Messages	27
Using Double Wide Characters	27
Programming a Header Message	28
Setting the Footer Message	30
Setting Clerk Numbers and Names	32
Using the Clerk System	34
Setting the Machine Number	34
Setting X and Manager Passwords	35
Printing the Quick Start Program Confirmation Report.....	36
Before Going to Register Mode.....	37
Error Codes	38
Clearing an Error.....	38

5 Setting Up Your Cash Register - Advanced

Programming Department Keys.....	41
Setting Standard and Gallonage Mode.....	43
Programming Multiple and Single Items	43
Programming High Digit Lock-out (HDLO).....	44
Programming Tax Status	44
Programming Department Preset Price	45
Assigning Department Number Keys	46
Programming Department Names	46

Scrolling Messages	50
Types of Scrolling Messages	50
Scrolling Message Length.....	50
Default Scrolling Messages	51
Programming Scrolling Messages	51
Sample Scrolling Messages	51
Programming Scrolling Message Display Times	52
Setting the Off Message Start Time.....	52
Setting the Mode Message Start Time	52
Setting the Sales Message Start and Stop Times.....	53
Setting the Idle Messages Start Time	53
Setting the Amount of Time Message Letters Appear in the Display.....	54
Programming the Credit Keys	55
Programming PLU Descriptions	56
Programming PLUs without a Barcode Reader	57
Programming PLUs with the Barcode Reader	58
Setting the Decimal Points.....	59
Setting the Rounding Rates	60
Programming Discounts	60
Programming Minus Percentage Discounts	60
Programming Coupon Discounts	61
Programming Plus Percentage Add-ons.....	64
Programming Flag Options.....	65
6 Ringing up Sales and Using Training Mode	
Ringing up Sales.....	71
Ringing up Sales with the Barcode Reader.....	73
Printing Receipts.....	73
Using Training Mode	75
7 Programming Complex Tax Rates	
Setting the Tax Rates	77
8 Running Reports	
Running the Program Confirmation Report	80
Running the Department Confirmation Report	82

Running the PLU Confirmation Report	82
Running the Department Sales Report	83
Running Management Reports.....	83
About X Readings.....	84
About Z Readings.....	84
About Management Reports	85
Running a Cash-In-Drawer Report	85
Running a Clerk Report	86
Running a Financial Report	86
Financial Report Example.....	87
Running an Hourly Report	89
Running PLU Reports.....	90
Running an Electronic Journal Reports	91

9 Maintenance and Options

Installing a New Paper Roll	94
Using the Battery System	95
About the Serial Port.....	97

10 Troubleshooting

Error Codes	98
I Hear an Error Beep.....	98
Sec code error appears in PRG, X OR Z modes	99
If Clerk E12 Displays In REG 1 or REG 2 Modes.....	99
PE Printer Error or Paper End	99
EJ -FULL Error	100
The Register Does Not Work at All.....	101
Opening the Drawer When There is no Power.....	101
Half System Clear	102
Partial Reset.....	102
Full System Clear	103
If Nothing Helps.....	103

11 Examples

Sample Receipt	106
Transaction Codes	106

Adding Tax to a Non-Taxable Department	108
Cash Sale With Tendering Change	108
Cash Sale Without Tendering Change	108
Charge Sale	109
Charge Return	109
Coupon Discount Sale.....	109
Credit Return	110
Credit Sale.....	110
Dept Shift Key.....	111
Exempting Tax On An Item	111
Exempting Tax on the Entire Sale	112
Gallonage Sales Transaction	112
Minus Percentage Discount Sale.....	112
Multiplication of a Department Unit Price.....	113
Multiplication Sale	113
Multiplying By A Fraction.....	114
No-Sale Function.....	114
Overriding a PLU Sale	114
Paid-Out Sale	115
PLU Sale.....	115
PLU Sale With PLU Description	115
Plus Percentage Sale.....	115
Received-On-Account Sale.....	116
Registering A Department Unit Price	116
Registering A Reference Number	117
Return Sale	117
Split Tendering Sale	118
Temporarily Overriding a PLU Price	118
Use the Error-Correct /Void Key.....	118
Voiding A Coupon Sale.....	119
Voiding a Department Preset Price	119
Voiding a Department Preset with a Coupon Discount	119
Voiding a Department Preset with a Minus Percentage Discount	120
Voiding A Minus Percentage Discount Sale	120

Voiding a Multiplication of a Department Preset Price	121
Voiding A Multiplication Sale	121
Voiding a PLU Multiplication Sale	122
Voiding a PLU Sale	122
Voiding a PLU Sale with a Coupon Discount	122
Voiding a Plu Sale with a Minus Percentage Discount	123
Voiding a PLU Sale with a Plus Percentage Rate.....	123
Voiding a Plus Percentage Sale	124
Voiding A Sale	124
A Calculating State Tax Table Codes	125
Calculating Your Tax	125
Example Tax Chart	129
The Worksheet	130
Programming the State Tax	131
B Programming Tax in Canada	132
Setting Flag Options	132
Setting Tax Percentage Rates	133
Linking Tax Rate(s) To Each Department.....	134
C Product Information	135
Specifications and Safety	135
Safety and Legal Notices	136
Limited Warranty.....	137
Software Licensing Agreement.....	138
D Settings Tables	139
Alphanumeric Code Chart	139
Flags.....	141
Language Table	146
Transaction Codes	151
US Tax Status Numbers.....	152
Ordering Supplies and Accessories.....	153
Index.....	155

Welcome

Congratulations on purchasing your new Royal cash register! This register is designed to be easy to use, helping you to focus on running your business.

Before Starting


Before you start using this manual to set up and customize your cash register, you should know the following.

When you need to press a key, you see a picture of the key you need to press and the name of the key is in another font. For example:



- 1 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.

If you need to type something in the round Number keys area, what you need to type is shown in a special font. For example:

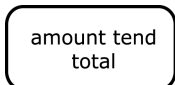

- 2 Using the round Number keys, press 444444 and then press the **Amount Tend Total** key.

What is in the Box?

Look for and unwrap the following:

- Cash Register
- 1 starter roll of standard thermal paper, Royal Reorder Number 013127 (57.5mm).
- Journal Spindle, installed in the printer compartment
- Barcode reader located in a small box
- RegisterLink™ software
- 1 set of keys, consisting of:
 - 2 Cash Drawer keys (515).
 - 2 PRG Program keys (427-023).
 - 2 REG Register keys (427-024).
 - 2 Z keys (427-012).

Important Phone Numbers

If you need help or want to order additional supplies, use the following contact information.

Customer Service:	1-800-272-6229 (USA)
	1-888-266-9380 (Canada)
Ordering Supplies:	1-888-261-4555
Website:	www.royal.com

To order items, see Ordering Supplies and Accessories on page 153.

Getting Started

Setting up your cash register consists of the following steps:

- Plugging in and Putting in the Batteries
- Installing the Paper Roll
- Setting the Language
- Setting the Date And Time
- Programming the Sales Tax
- Setting at least 2 Department Keys

Do all the steps to make sure you have your cash register set up correctly.

When you are done with this chapter, see the chapter called Getting To Know the Cash Register, starting on page 12 and the chapter called Setting Up Your Cash Register - the Basics, starting on page 22 for more information about your cash register.

Plugging in and Putting in the Batteries

Your cash register needs 3 AA 1.5 volt batteries for the memory backup system. These batteries did not come with your cash register and you must purchase them additionally. You should purchase these batteries before you start this section or as soon as possible after setting up the cash register.

Make sure that you plug the cash register into the electrical outlet before you put in the batteries.

Caution

If you put the batteries in first, they can damage the cash register. Do not use this cash register outdoors in the rain or near any source of liquid.

To get the cash register ready to use

- 1 Remove the cash register and the parts from the box. Store the box and packing material in a safe, dry place. If you need to move the register in the future, you can put it back in the box.
- 2 Remove the tape holding the parts of the cash register in place. For example, there may be tape on the Journal Compartment Cover. Make sure you remove the tape on the black Journal Tape spindle inside the printer compartment of the cash register.
- 3 Put the register on a hard, level surface, away from rain and spilled drinks. A hard level surface makes it easier for the cash drawer to go in and out smoothly.


Do not put the register on a porous surface. Depending on the surface or any cleaning solution used on the surface, the rubber feet may leave marks on the surface. Do not place the register on any valuable surface, such as antique or fine wood tables, desks, and so on.

- 4 Plug the cash register into a standard three-hole electrical wall outlet. (115-120 volt, 60 hertz). Make sure the electrical cord is not going to get tripped over or accidentally pulled from the electrical outlet.


Put the cash register on an electrical circuit with no other electrical device or appliance. Other appliances can overload the circuit or cause electrical interference with the cash register. It is best that you use a circuit without other appliances already on it.

- 5 Install the memory backup batteries.

- Open the Journal Compartment cover. Remove the cover and put it aside.
- Move the paper roller bar up and out of the way. Grab the small handle on the right of the print roller bar. Push the little handle towards the back of the cash register and raise the paper roller bar up. You see a slope down to the paper compartment. The battery cover is located under the print roller bar, on the slope.
- Remove the battery cover. Press the edge at the top of the cover and push to the back. The cover pops off.

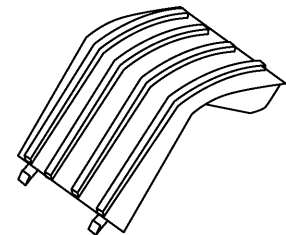

- Put the batteries in the slots. Make sure that the positive and negative ends are in the right place. The batteries have a little plus (positive) and minus (negative) sign on each end to help you.
- Replace the battery cover. Slide the bottom tabs into the long slit in the bottom position and it snap the cover into place. Do not put the tabs in the 2 holes in the bottom of the compartment. The cover will not close and you will break the tabs.

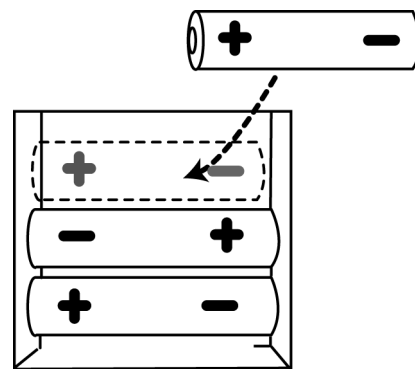



- 6 Now you are ready to put the paper in the cash register and set the time and the date. See the next section for more information.

Installing the Paper Roll


Your cash register has a thermal printer that prints receipts for the customer or a journal tape. Use 2¼ inch (57.5 mm) wide standard thermal register paper.

To install the paper roll

- 1 Insert the PRG key and turn it to either REG1 or REG2.
 - If you need a customer receipt, turn the Mode key to the REG1 position.
 - If you do not need a customer receipt, turn the mode key to the REG2 position.
- 2 Unlock and open the Journal Compartment Cover. Grip the left side of the cover and gently pull upward. Remove the Journal Compartment Cover and set aside.
- 3 Remove the Journal Takeup spindle. Place the paper roll in the little round area at the bottom of the compartment. Make sure the paper feeds out from the bottom of the roll, towards the front of the cash register.

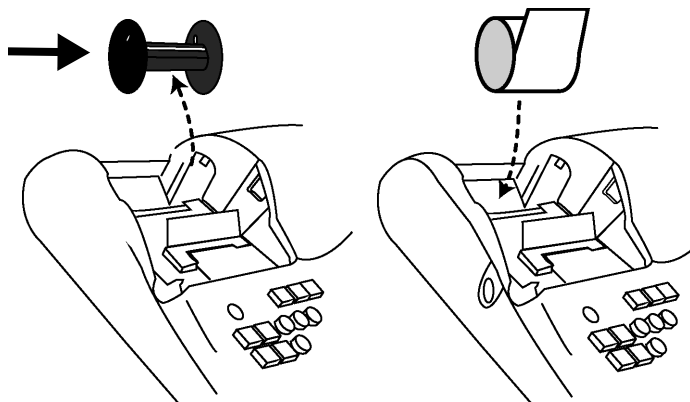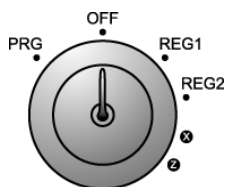

- 4 Grab the small handle on the right of the print roller. Push the little handle towards the back of the cash register and raise the roller bar up.
- 5 Lay the end of the paper across the printer as shown. Move the print roller down onto the paper and snap into place. Make sure both sides are snapped down.

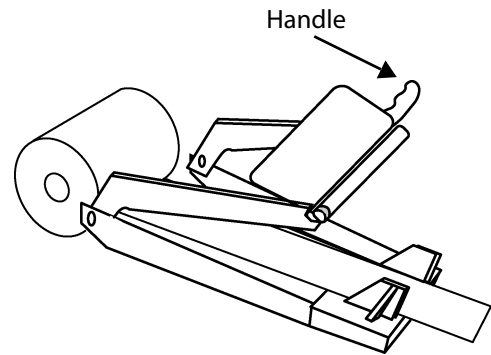


- Press the **Feed** key until the paper catches and moves through the printer.

- 6 Do one of the following:



- If you do not need to print receipts: Place the black plastic Journal Takeup spindle on its grooves above the Battery compartment. The spindle sits above the paper roll. Press the **Feed** key to move the paper through the printer about 10-12 inches. Push the paper through one of the narrow openings in the center of the Journal Takeup spindle. Press the **Feed** key until the paper catches and begins to wind securely around the Journal Takeup spindle. Replace the Journal Compartment Cover.
- If you want to print receipts: Lay the customer receipt paper over the receipt slot and close the Journal Compartment Cover.

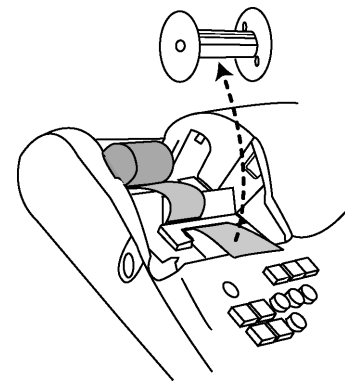


Installing the Barcode Reader

Your cash register comes with a barcode reader. It allows you to scan items with a UPC symbols, instead of using the keyboard to type the PLU number.


The barcode reader plugs into the port on the lower right side of the cash register. You don't need to do anything special to make it work after you plug it into the cash register. Use the directions below to install it.

To install and program the barcode reader

- 1 Unpack the reader from the box.
- 2 Turn the Mode key to OFF.

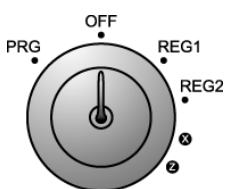

3 Locate the port for the scanner on the lower right side of the cash register. Plug the reader into the port.

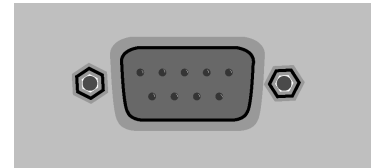

4 Now you can program the cash register so that you can scan UPC symbols to ring up items. For specifics, see Programming PLUs with the Barcode Reader on page 58.

PC-Based Software

Your cash register includes:

- RegisterLink PC-based software.
 - This software allows you to connect the cash register to your PC to download your sales information and transfer it to QuickBooks® Pro 2002 or later or Peachtree® 7.0 or later accounting software. For instructions about using the software, see the RegisterLink manual.
 - Back-Up and Restore - Whether you programmed your cash register data on the cash register or on your PC, you can back-up that programming and store the data on your PC. Should you lose the memory in your cash register, you can simply restore the data from your PC back to the cash register without having to reprogram all the PLU's, Departments and other data.
 - Additional Registers - When you buy additional cash registers, you can use the back-up-and-restore feature with multiple registers of the same model number. Just program one register, back-up the data to your PC, and then restore or download the data from your PC to the other registers, as long as they are all the same model number. This saves you the time of having to program each register individually.

Check the Royal web site for any new features and upgrades to RegisterLink.

Using the RegisterLink software requires connecting your computer to the cash register using the serial port. To connect your computer to the serial port, you need a null-modem serial cable that may or may not be included. If necessary, you can purchase this cable directly from Royal or at any computer supply store. For technical details about the serial connection, see About the Serial Port on page 97.

The RegisterLink software is on a CD. Please install the software from this CD. Then check for updates on the Royal web site (www.royal.com). If a later version of the RegisterLink software is available on the web site, download it from the web site and install it on your PC. It is important that

the CD version of the software is already installed on your PC before you download and install any upgrades.

RegisterLink software instructions are separate from this manual. The RegisterLink instruction manual is on the CD that contains the software. An updated and revised version of the instruction manual accompanies any newer version of the software that is downloaded from our web site. Please refer to the RegisterLink instruction manual for all software related operational instructions and assistance.

Setting the Language

Before you program the cash register, you need to specify a language if you do not want to use English. You can select English, Spanish, French, or German.

Changing the language changes the words you and the customer see on the display. For more information about the prompts that appear, see Language Table on page 146.

Note

If you start programming the cash register and then set the language, you will lose all your programming changes.

To set the language

- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 Using the round Number keys, press 19. Press the round Number key to select the language you want. The options are:



English	0
Spanish	1
French	2
German	3

- 3 Press the **Void** key. The language your cash register shows on the display is set.
- 4 If you want to the cash register to show a language other than English, see Programming Flag Options on page 65 to specify the language you want. If you set the language after you program more options, all the custom programming you add is erased.

You are ready to start programming the cash register.

Note

Before you continue, see page 65 for other settings you may want to use.

Setting the Date And Time

The date changes every day and prints in the month-day-year format. You can prevent the date from printing on the transaction receipts. The date format can also be changed to print day-month-year. For more information, see Programming Flag Options on page 65.

You can set the cash register so that it does not print the time on receipts. For more information, see Programming Flag Options on page 65.

The time can print in either the 12 or 24 hour (military time) format. The default setting is to print in the 12 hour format, which is normally used. To change to the 24 hour format, see Programming Flag Options on page 65.

Reminder

When you set the time, you need to type the time in a 24 hour format. To convert the current time to a 24 hour format, add the number 12 to every hour after 12 noon. For example: 1:15 P.M. programs as 1315. 8:20 A.M. programs as 0820.

To set the date

Example 1: To program June 30, 2004

- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 In the round Number keys area, press 063002 and then press the **#/ST/NS** key.

#/st/
ns

To set the time

Example 2: To program 9:45 P.M.

- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 In the round Number keys area, press 2145 and then press the **Qty/Date** key.

qty/
date

Programming the Sales Tax

Now you need to program the sales tax for your area. If you do not know your sales tax rate, contact your local government office.

Tip

You must press at least 4 digits in step 4.


Note

If you make a mistake or you hear an error beep, press **Clear** and start over with Step 3.



Example 3: To program a sales tax rate of 6%

 - 1 Find your sales tax rate. You may need to contact your local government office.
- 2 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 3 In the round Number keys area, press 1 **and** then press the **Tax 1** key.
- 4 Press 6000 and press the **Amount Tend Total** key. Your sales tax is programmed.



To program other tax rates, in Step 4, press the following:

Table 1 Additional tax rate programming

For this tax rate...	Press these keys...
7.75%	7750
5.5%	5500
10.5%	10500

For more advanced tax rate programming, see Programming Complex Tax Rates on page 76.

Programming Department Keys

You are done with the basic programming of your cash register. After you program at least 2 department keys, you are ready to use the cash register, if you do not want to use any of the other features.


For more information about the other features of your cash register, see Setting Up Your Cash Register - the Basics on page 22 and Setting Up Your Cash Register - Advanced on page 40.

To program Department 1 as taxable with no preset price and no description

1 Using the round Number keys, press 00001 and press the **Subtotal/w/Tax** key.

2 Using the round Number keys, press 0 and press the **Dept 1** key.

3 Press the **Amount Tend/Total** key. The department information is saved in the cash register.

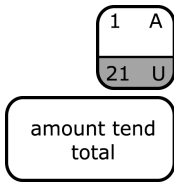


To program Department 2 as non-taxable with no preset price and no description

1 Using the round Number keys, press 00000 and press the **Subtotal/w/Tax** key.

2 Using the round Number keys, press 0 and press the **Dept 2** key.

3 Press the **Amount Tend/Total** key. The department information is saved in the cash register.

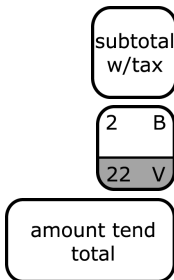

For more information about programming department keys, see Programming Department Keys on page 41.

Getting To Know the Cash Register

This chapter shows you the basics of using your cash register after you set it up. If you have not yet set up your cash register, see the Quick Start sheet that came in the box with your cash register or Getting Started on page 3.

About the Displays

Your cash register has 2 displays.

Customer Display

You can lift, tilt, and rotate customer display so customers can see what is happening. When you move the register or store it, close the display so it doesn't get damaged.

Your cash register has a 1 line customer display

- 1 line that shows letters and numbers (alphanumeric)
The alphanumeric display shows 10 digits for descriptions, scrolling text messages, and sales dollar amounts.

Opening and Closing the Customer Display

You can open and close the customer display so that customers can easily see what is happening.

To open and close the customer display

- 1 To open the rear customer display, pull up, tilt, and rotate to view from any direction.
- 2 To close, turn the display to face the rear of the machine and press down.

Operator Display

Your cash register also has a 2 line display for the operator. Both lines shows letters and numbers (alphanumeric). The following codes can appear in the display:

Table 2 Codes and words that can appear in the display

This code...	Appears when...
:	the -%/RA key registers a percent discount amount. Also appears in the Customer Display.
=	the Charge, Check, Amount Tend Total keys are pressed. Also appears in the Customer Display.
ADD ON	the +%/PO key registers a plus percentage amount. *
CASH	the Amount Tend Total key finalizes a cash sale. *
CHANGE or C	change is due. *
CHARGE	the Charge key finalizes a sale. *
CHECK	the Check key finalizes a sale. *
CLERK ERR or CLERK E12	clerk numbers have been programmed and the clerk system is active. When this appears, the clerk number must be entered.
COUPON	the -%/CPN key is pressed. *
DISCOUNT	the -%/RA key registers a percent discount amount. *
E . J FULL	the Electronic Journal memory is full. Run the electronic journal report to clear the memory. See EJ -FULL Error on page 100.
ERROR	an incorrect key is pressed. Press the Clear key to clear.
NO SALE	the #/ST/NS key is pressed. *
NON TAX	the Non Tax key is pressed.
P	you are in the middle of a programming step. Also appears in the Customer Display.
PE	if an error is detected in the printer.
PAPER END	there may be a printer error.
P-O	the +%/PO key is used for a paid out function. *
R-A	the -%/RA key is used for a received on account function. *
REFUND	the Return key is pressed. *
SEC CODE	a manager password is programmed. When this appears, you must enter the password.
SUBTTL	the Subtotal w/Tax or #/ST/NS key is pressed. *
TAX 1/TAX 2	the TAX 1 or TAX 2 key is pressed.
VOID/CORR	the Void key is operated. *
* also prints on the receipt or journal tape.	

When ringing up sales, the department number or PLU number can also appear. If a description or name has been programmed, this description also appears.


About the Numeric Display

The following codes can appear in the Numeric Display:

Table 3 Codes that can appear in the Numeric Display

This code...	Appears when...
PE	an error is detected in the printer.
P	you are in the middle of a programming step. Also appears in the Customer Display.
Cr	the Charge key is pressed. Also appears in the Customer Display.
CH	the Check key is pressed. Also appears in the Customer Display.
CA	the Amt Tend/Total key is pressed. Also appears in the Customer Display.
C	change is due. Also appears in the Customer Display.

Using the Mode Key Area

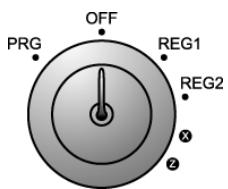

The Mode key area allows you to do the following.

Table 4 Mode key settings

This setting...	Does this...
• PRG	Programs the cash register and sets the cash register to Training mode. Use the key marked PRG.
• OFF	Turns the cash register off. It also electronically locks the cash drawer. All keys do this.
• REG1	Turns the cash register ON for all normal sales transactions. All features of the cash register are activated as programmed. A customer receipt is printed for every transaction.

Table 4 Mode key settings


This setting...	Does this...
• REG2	Turns ON the cash register and allows all normal sales transactions just like REG1 mode. However, the built-in printer is turned-off so that customer receipts are not automatically printed. This option allows you to control the amount of receipt paper used by not printing a receipt for every transaction and only printing a receipt for those transactions where one is required.
• X	Lets you read all transaction totals without clearing any totals. This is useful for mid day reports. Use the key marked Z.
• Z	Lets you read all transaction totals and clears all transaction totals to zero, except the end of day, or close of day, totals. Use the key marked Z.

If you need to keep the register plugged in when you are not using it, turn the Mode key to the OFF position. The keyboard will not work and the cash drawer is electronically locked. A small amount of power maintains the program and transaction data totals.


- For more information about programming the cash register, see Setting Up Your Cash Register - the Basics on page 22 and Setting Up Your Cash Register - Advanced on page 40.
- For more information about using the cash register to ring up sales, see Ringing up Sales and Using Training Mode on page 71.
- For more information about running reports, see Running Reports on page 80.

Using the Keyboard



The keyboard on your cash register looks like the following:

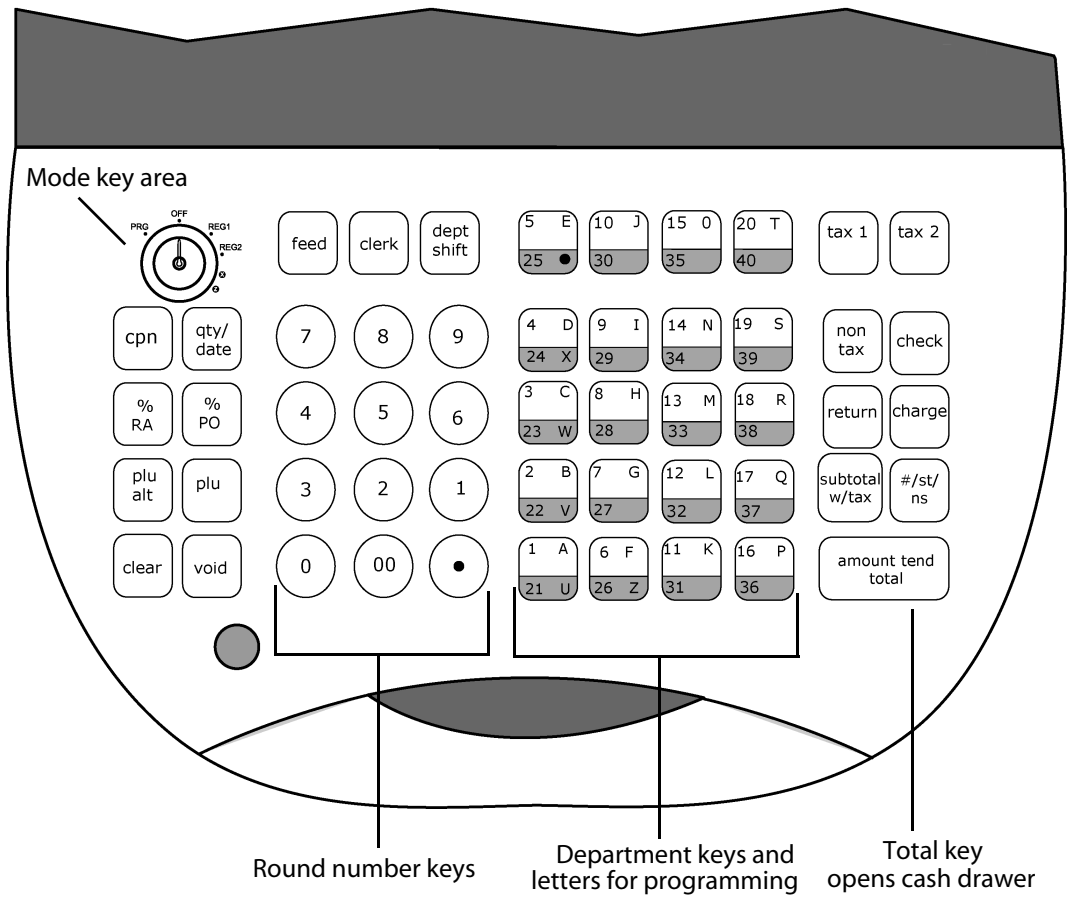

To use the keyboard, do the following:

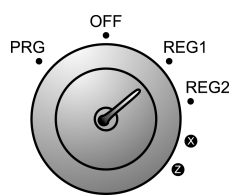

- To use the cash register, put the key marked REG in the Mode key hole and turn to Reg1 or Reg 2. Now you can press the round Number keys and Department keys to ring up a sale. For more information about ringing up sales, see Ringing up Sales and Using Training Mode on page 71.

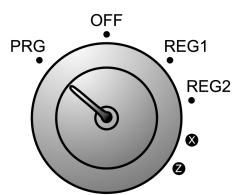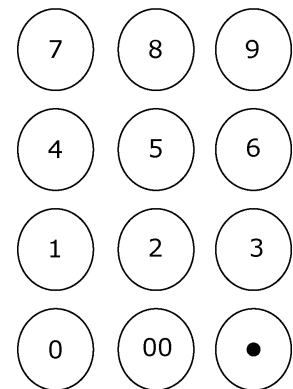


- To program the cash register, put the key marked PRG in the Mode key slot and turn to PRG. For more information about programming the cash register, see Setting Up Your Cash Register - the Basics on page 22 and Setting Up Your Cash Register - Advanced on page 40.

Using the Cash Drawer

The cash drawer is where you put the money after you ring up a sale. The cash drawer has slots for putting paper bills and a tray for coins. You can store paper items such as checks and charge slips under the removable coin tray.

When you ring up a sale, the cash drawer automatically opens so you can make change and put money away. You can also open the cash drawer without making a sale. This is handy if you need to make change for someone or forgot to put something away.

The cash drawer locks in 2 different ways. Locking the cash drawer is a good idea if you need to leave the cash register.

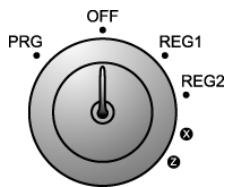


- The cash drawer automatically locks electronically when you move the register key to the Off position. Remember to take the register key out if you are leaving the register. The emergency open lever will still open the cash drawer when it is electronically locked.
- You can also use the 515 key to mechanically lock the cash drawer. If you lock the cash drawer this way, you must have the key to open it again. Even the emergency open lever will not open the cash drawer when it is locked with the key.

Important

If the cash drawer will not open, see if the lock on the cash drawer is turned to the right. If it is, the drawer is locked with the 515 key. You need the key to unlock the cash drawer. If the key is lost or locked in the cash drawer, contact Royal.

 To open the cash drawer after a sale



- 1 When you are done ringing up a sale, press the **Amount Tend Total** key at the bottom right of the keyboard. The cash drawer opens. You can make change and put the money in the drawer.
- 2 When you are done, push the cash drawer closed.

To open the cash drawer without making a sale



- 1 Press the **#/ST/NS** key at the bottom right of the keyboard. The cash drawer opens and a No Sale receipt prints.
- 2 When you are done, push the cash drawer closed.


To lock and unlock the cash drawer using the key

- 1 Using the small key labeled 515, put the key in the lock in the front of the cash drawer.

- 2 To lock the cash drawer, turn the key to the right and remove the key from the lock.
- 3 To unlock the cash drawer, turn the key to the left and remove the key from the lock.

To open the cash drawer using the emergency lever

- 1 With your hands on the cash drawer, carefully tip the front of the register up. Underneath the cash register, toward the back of the register, you see a small lever.

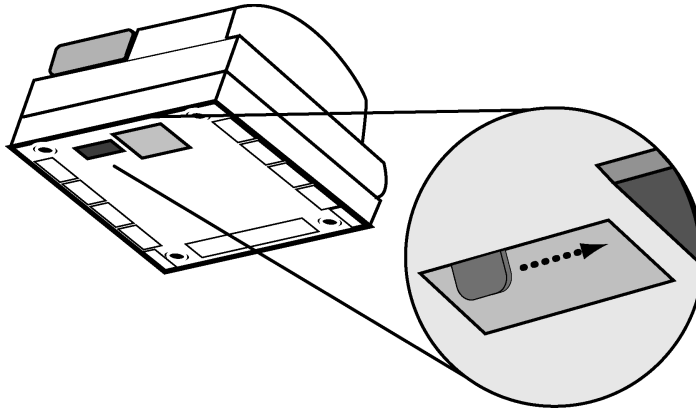

- 2 Push the lever in the only direction it will move. The cash drawer opens. If the cash drawer will not open, make sure it is not locked with the 515 Drawer key.

Using the Accessory Drawer

Your cash register has a small drawer above the cash drawer. The Accessory drawer can be opened at any time by anyone. It is a good place to put things like pens, pencils, and note pads.

Because anyone can open the drawer, it is not a good idea to put checks or charge slips in it. You should put those in the cash drawer, under the coin drawer.

Make sure that you never put anything valuable in the Accessory drawer.

Using the Counterfeit Detector Feature

Protected by U.S.
Patent D477,836.
Other U.S. and
Foreign Patents
Pending.

Your cash register comes with a handy Counterfeit detector feature that helps you decide if the money is possibly counterfeit or fraudulent.

All new style American paper money, except for the \$1 bill, have a strip that glows under ultra-violet (UV) light. The Counterfeit detector feature lets you see that strip before you accept the paper money.

About Paper Money

Just because the Counterfeit detector feature shows a glowing strip does not always mean the paper money is real. A clever forger may include this strip in a fake bill. Always use multiple methods to decide if you want to accept a bill as valid.

Each bill amount has a strip that glows a different color. The location of the UV markings in US and Canadian currency is shown below:

Table 5 US paper currency UV mark locations

US \$ bill...	Has this color...	Located here...
\$ 5	Blue	Left edge of bill
\$ 10	Orange	Right of Hamilton's head
\$ 20	Green	Left edge of bill
\$ 50	Yellow	Right of Grant's head
\$100	Red	Left of Franklin's head

Canadian Paper Currency: UV sensitive dots are placed in a random pattern throughout the bill. These dots glow blue. Newer Canadian bills may have different UV-sensitive markings. See your bank or local government office for help on what UV-sensitive markings to look for in a genuine bill.

Detecting Suspicious Money


Always use multiple counterfeit detection methods to guard against fraudulent paper currency. Some of the more common methods for detecting valid US currency are:

- Look for blue and red threads in the fabric.
- Hold the bill up to a light source and check for the watermark - which should be the face of the same President pictured on the front of that denomination bill.
- Hold the bill up to a normal light source (not a UV light) and look for the UV sensitive strip, the characters USA and the numeric denomination of the bill (either in numeric form or spelled out).
- Mark the bill using a Universal Counterfeit Detector Pen, which uses special ink that reacts to counterfeit paper currency.

For other currency, such as Canadian money, see your bank or local government office for help.

To use the counterfeit detector feature

- 1 Put the paper money in the slot in the front of the cash register.

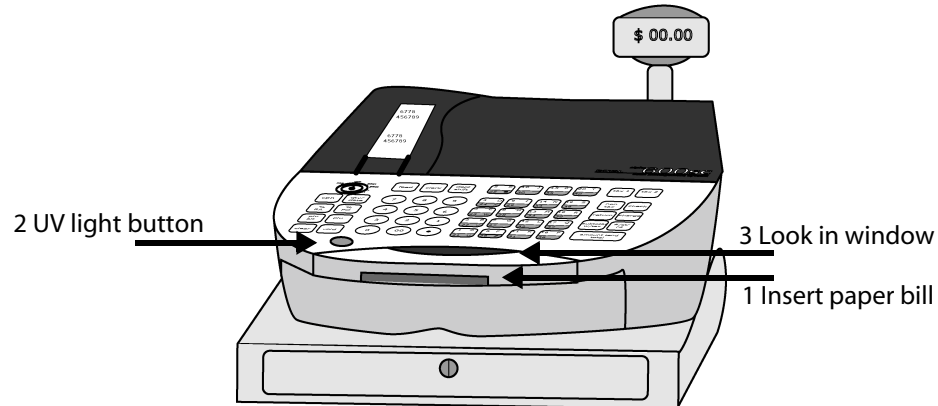

- 2 Press the UV light button. The UV light turns on.
- 3 Look thru the small window on the front of the cash register. If the bill has the strip, you see a strip that glows as a color. See the table above for the correct color. If the bill is Canadian, you see blue dots.
- 4 When you are done, remove the bill from the slot. Press the UV button again. The UV light turns off.

Things to Remember

The counterfeit detector feature in the cash register uses ultra-violet light (UV light) technology and only works on new style US paper currency. This currency has the large portrait of a US president, off-center on the front of the bill. Old style U.S. bills, printed before 1996 and all \$1 bills do not have any fluorescent markings. These bills do not react to UV light and the counterfeit detector in cash register does not show any fluorescent markings on these bills, even though they may be valid US bills and not counterfeit.

Keep in mind that any one method of counterfeit detection, including the UV light mechanism built-in to the cash register, is not fool-proof and only suggests suspicious paper currency.

Using this counterfeit detection feature is open to user interpretation of the reading of the currency under the UV-light. If no fluorescent markings are seen on a US bill, then consider the bill suspicious. This may not mean that the bill is definitely counterfeit. Use other counterfeit detection methods to further examine the suspicious bill. If the US dollar bill fails multiple counterfeit detection methods, then the bill may be counterfeit and you must decide whether to accept the bill or not. You should also contact local law enforcement authorities regarding suspicious or counterfeit bills.

The opposite may also apply, when a US dollar bill may show fluorescent markings under UV-light, but there is still a slight chance that the bill is a very sophisticated counterfeit bill. There are no absolute guarantees to the


authenticity of a US dollar bill without the use of very high-end, sophisticated testing methods and devices.

Programming the UV Light

You can program the UV light to stay on for a certain number of seconds while you view the currency.

You can use the default which is pre-programmed to “00” seconds and works according to the previous instructions.

You can also program a number from “01” to “99” that represents the number of seconds the light stays “on” after you press the UV light button. Then the light automatically turns itself off after the programmed amount of time.

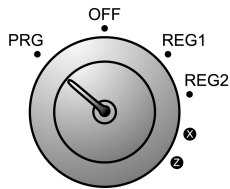

To program the UV light

- 1 Put the key marked PRG in the Mode key slot and turn to PRG. For more information about programming the cash register, see *Setting Up Your Cash Register - the Basics* on page 22 and *Setting Up Your Cash Register - Advanced* on page 40.
- 2 Using the round number keys, enter the **number** of seconds (from 01 to 99) you would like the light to stay on.
- 3 To save your setting, press the **#ST/NS** key.



The button now only works to turn the light on. It does not work to turn the light off.

If the button is pressed when the light is off, then the light turns-on for the number of seconds that you have set. If the button is pressed again while the light is on, the light timer resets, and the light stays on for the full number of programmed seconds.

Setting Up Your Cash Register - the Basics

This chapter includes explanations for setting:

- Messages on the display and on receipts
- Setting clerk numbers
- Setting machine numbers
- Setting clerk and manager passwords
- Clearing error codes

Using the Displays

Your cash register includes two displays: 1 for the clerk and 1 for the customer. The displays feature large, easy to read fluorescent digits for easy viewing.

The Clerk Display

 
When ringing up sales, you see the department number or PLU number on the clerk display. If a description or name is programmed, this description appears.

For information about all the messages that can appear on the display and how to open and close the display, see *Opening and Closing the Customer Display* on page 12.



Setting Alphanumeric Descriptions

You can program custom header and footer messages, clerk names, departments, and item descriptions. These text messages and descriptions appear on the receipt and on the display.



When you are programming the alpha descriptions for Departments, PLUs, Clerks, the Header and Footer messages, use the Alpha Keyboard.



  Note
Only capital letters of the alphabet are on the Alpha Keyboard. You can use lower case letters. See *Alphanumeric Code Chart* on page 24.



  The department keys are clearly labeled with all the letters needed to program these descriptions. When you are programming alpha descriptions, use the department keys to spell out the words you want.



To use the letters in the white part of the Department keys, simply press the Department key.



To use the letters in the lower green area of the keys, press the **Dept Shift** key and then press the key with the letter you want.

You might need certain symbols or lower case characters that are not found on the Alpha Keyboard. For example, if you require a space between words, or if you need the / symbol, or the - symbol, see the *Alphanumeric Code Chart* shown in the next section.



Important
If you enter the wrong character, press the **Void** key to backspace and delete that character. Now you can continue.

Alphanumeric Code Chart

Other characters are also available. Use the tables in this section to help you find the ones you need.

Use this table for lower case letters and numbers.

Table 6 Letters and numbers

Character	Code Number	Character	Code Number
Space	00	s	20
Wide Character	01	t	21
a	02	u	22
b	03	v	23
c	04	w	24
d	05	x	25
e	06	y	26
f	07	z	27
g	08		
h	09	Numbers	
i	10	0	30
j	11	1	31
k	12	2	32
l	13	3	33
m	14	4	34
n	15	5	35
o	16	6	36
p	17	7	37
q	18	8	38
r	19	9	39

Use this table for punctuation and foreign characters.

Table 7 Special Characters and Punctuation

Character	Code Number	Character	Code Number
ı	80	?	28
ç	81	!	29
á	82	@	40
é	83	/	67
í	84	:	68
ó	85	#	69
ú	86	&	70
Ä	93	%	71
Ü	94	\$	72
Ö	95	,	73
		(comma)	
ï	96	(74
ü	97)	75
Ñ	98	*	76
ñ	99	+	77
		-	78
		.	79
		(period)	
		;	87
		(semi colon)	
		>	88
		'	89
		(apostrophe)	
		"	90
		<	91
		=	92

Using Single Width Characters

The following describes the maximum number of characters that can be programmed for each item description in single width.

- Department 12 Characters
- PLU 12 Characters
- Clerk Name 24 Characters
- Header and Footer message 5 Lines (24 characters each)



To make a space to separate words, press the round Number 0 key twice or press the round Number 00 key one time.

- For double wide characters, see Using Double Wide Characters.
- For programming department keys, see Programming Department Keys on page 41.
- For programming PLUs, see Programming PLU Descriptions on page 56.
- For programming Clerk names and numbers, see Setting Clerk Numbers and Names on page 32.

Programming Blank Lines or Restoring Factory Default Messages

You can customize the header and footer message based on Flag settings for flag numbers: 33, 37, 38, and 39.

- Flag # 33 and 37: You can now individually select whether to turn on and print or turn off and skip the header or the footer messages entirely. This can save paper when you are printing. Or you can leave the factory default phrases and settings.
- Flag # 38: You can print a blank line or to just skip a blank line. For example, you can program 3 of the five footer lines as blank lines and then select not to print the blank lines to save paper. This prints only the 2 programmed lines for your footer message. Or you can select to leave the blank lines in for spacing so in the final result is 2 lines of print and 3 blank lines with no print, but all 5 lines print and are accounted for.
- Flag #39: You can program a blank line or program the factory default line by entering a 0 (zero) when you are programming an individual header or footer message line.

For more details about using flag settings, see Programming Flag Options on page 65.

For example, for a blank line to print for the 1st line of the header message:

check

void

return

check

- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.
- 3 To set Flag #39 to 0, enter 390 and press the **Void** key.
- 4 For the first line of the header message, press 31.
- 5 Press **Return**.
- 6 Press 0.
- 7 Press the **Check** key.

About Programming Numbers in Header Messages

If you need to print numbers, you must enter the numbers using the Alphanumeric Code Chart. For example, for the telephone number 999-555-1212, the number 9 is programmed using the character code 39, the number 5 is programmed using the code 35, and so on.

Using Double Wide Characters

For extra emphasis, you can program double wide characters for a specific character or a line of characters.

Normal Size

Double Wide

```

*****
* YOUR RECEIPT *
* THANK YOU *
* *
*****
11-10-01 MC #:0000
APPLE $1.00
BANANA $1.00
PEAR $1.00
-----
TOTAL $3.00
CASH $3.00
AM10-49 0013
    
```

```

*****
$ YOUR RECEIPT $
$ THANK YOU $
$ $
*****
11-10-01 MC #:0000
APPLE $1.00
BANANA $1.00
PEAR $1.00
-----
TOTAL $3.00
CASH $3.00
AM10-51 0015
    
```

If you use double wide characters, the maximum number of characters you can use is cut in half.

- Department 6 characters
- PLU 6 characters
- Clerk Name 12 characters
- Header Message 5 lines, 12 characters each
- Footer Message 5 lines, 12 characters each

To make a character print extra wide, you must use the double width code 01 before each character as you type in the description.

Programming a Header Message

You can specify a header message to print on customer receipts. The header message can be a maximum of 5 lines. Each line can have 24 characters in single width or 12 characters in double width.

```
YOUR RECEIPT
  THANK YOU
```

is the default printout for the header message.

You can set Flag #33 to print the Header message or skip the Header message completely (none of the 5-lines print).

Make a copy of the blank Worksheet below for future changes or revisions to your header message.

Header Message Worksheet

Use this worksheet to make your header message. Make a copy of the blank worksheet before you start, in case you make a mistake or change your mind.

Line 1																							
Line 2																							
Line 3																							
Line 4																							
Line 5																							



Note

If you enter the wrong character, press the **Void** key to backspace and delete that character and then continue.

Before programming your header message

- 1 Write out your store name and the header message you want to program.
- 2 After writing out your message, count the number of characters on each line. The following example shows a message and the letter count, including spaces.

```
INTERNATIONAL COFFEES      21
999-555-1212                12
```

```
INTERNATIONAL COFFEES      21
222 EAST MAIN STREET      20
OPEN 7AM TO 6PM          15
COFFEES OF THE WORLD      20
```

3 Complete the chart, filling in extra unused characters with blank spaces.

Line 1			I	N	T	E	R	N	A	T	I	O	N	A	L		C	O	F	F	E	E		
Line 2							9	9	9	-	5	5	5	-	1	2	1	2						
Line 3			2	2	2		E	A	S	T		M	A	I	N		S	T	R	E	E	T		
Line 4							O	P	E	N		7	A	M		T	O		6	P	M			
Line 5			C	O	F	F	E	E	S			O	F		T	H	E		W	O	R	L	D	

In the example, blank spaces are added at the beginning and end of each line so the message is centered.

Remember, you can make the characters double width but you can only use half the total number of characters if you do this. For example, if you want `Coffee` to be double wide, you need 12 spaces. For more information about double wide characters, see *Using Double Wide Characters* on page 27.

You can also use characters other than those on the Department keys, such as numbers, punctuation, and international letters. See the *Alphanumeric Code Chart* on page 24.

This is an example of a programmed header message:

```
INTERNATIONAL COFFEES
    999-555-1212
222 EAST MAIN STREET
    OPEN 7AM TO 6PM
COFFEES OF THE WORLD
```



To make a space to separate words, press the 0 key twice or press the 00 key one time.



Note

If you enter the wrong character, press the **Void** key to backspace and delete that character and then continue.

To program your header message

- Put the PRG key in the Mode key slot and turn it to the PRG position.



2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.



3 For the 1st line, do the following:

- Using the round Number keys area, press 31.
- Press the **Return** key. The header line 1 appears on the display.
- Enter the 1st line of the header, up to 24 characters and then press the **Check** key.



4 If you want a 2nd line, do the following:

- Using the round Number keys area, press 32.
- Press the **Return** key. Header line 2 appears on the display.
- Enter the 2nd line of the header, up to 24 characters and then press the **Check** key.



5 If you want a 3rd line, do the following:

- Using the round Number keys area, press 33.
- Press the **Return** key. Header line 3 appears on the display.
- Enter the 3rd line of the header, up to 24 characters and then press the **Check** key.



6 If you want a 4th line, do the following:

- Using the round Number keys area, press 34.
- Press the **Return** key. Header line 4 appears on the display.
- Enter the 4th line of the header, up to 24 characters and then press the **Check** key.



7 If you want a 5th line, do the following:

- Using the round Number keys area, press 35.
- Press the **Return** key. Header line 5 appears on the display.
- Enter the 5th line of the header, up to 24 characters and then press the **Check** key.



8 When you are done, turn the Mode key to Off.

Setting the Footer Message

You can also program a message that automatically prints at the bottom of the receipt. For example, you can list your hours of operation, return policy, or a special promotion at the bottom of every receipt. You can set Flag #37 to print the Footer message or skip the Footer message completely (none of the 5-lines print)

The Footer message can have up to 5 lines. Each line can have 24 characters in single width or 12 characters in double width. For more information about double-width messages, see Using Double Wide Characters on page 27.

For example, the message at the bottom of the receipt can say:

```
TUESDAY IS 10% OFF DAY!
    STOCK UP AND SAVE
```

Use the worksheet on page 28 to plan your message before you start.

Note

If you enter the wrong character, press the **Void** key to backspace and delete that character and then continue.



To program your footer message

1 Put the PRG key in the Mode key slot and turn it to the PRG position.



2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.

3 For the 1st line, do the following:



- Using the round Number keys area, press 71.

- Press the **Return** key. The Footer line 1 appears on the display.



- Enter the 1st line of the footer, up to 24 characters and then press the **Check** key.

4 If you want a 2nd line, do the following:



- Using the round Number keys area, press 72.

- Press the **Return** key. Footer line 2 appears on the display.



- Enter the 2nd line of the footer, up to 24 characters and then press the **Check** key.

5 If you want a 3rd line, do the following:



- Using the round Number keys area, press 73.

- Press the **Return** key. Footer line 3 appears on the display.



- Enter the 3rd line of the footer, up to 24 characters and then press the **Check** key.

6 If you want a 4th line, do the following:



- Using the round Number keys area, press 74.

- Press the **Return** key. Footer line 4 appears on the display.



- Enter the 4th line of the footer, up to 24 characters and then press the **Check** key.

7 If you want a 5th line, do the following:

- Using the round Number keys area, press 75.



- Press the **Return** key. Footer line 5 appears on the display.
- Enter the 5th line of the footer, up to 24 characters and then press the **Check** key.

8 When you are done, turn the Mode key to Off.

Setting Clerk Numbers and Names

You can program and assign up to 26 Clerk Numbers so you can monitor sales by individual employees. Each clerk number can also be assigned a 24 character name.

The Clerk Numbers are used in the register modes REG1 and REG2 only. To see the sales totals for each clerk, a Clerk Report is available in both the X and Z modes.

You can spell names by using department keys. For more information, see Setting Alphanumeric Descriptions on page 23.

Note

When entering the clerk passwords, they appear as asterisks **** on the displays for extra security.

After you specify Clerk Number and Names, you must set a flag option so that clerks must enter their clerk number before every transaction. For more information, see Programming Flag Options on page 65. If you do not set the flag option to turn on Clerk Numbers, all transactions listed on reports and receipts will appear under Clerk 1.

After you are done programming clerk numbers, you can check your results. See Printing the Quick Start Program Confirmation Report on page 36.



Note

If you make a mistake while you are programming the Clerk Numbers, press the **Clear** key and begin again with Step 3.

To set clerk numbers

Example 4: For Clerk #1, Security number is 234



- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.

amount tend
total

- 3 Using the round Number keys, press 444444 and then press the **Amount Tend Total** key. The letter C appears in the Customer Display and Clerk Pass appears in the clerk display until Step 6 is complete.



4 Using the round Number keys, press 1 for Clerk #1 and then press 234 for the Security number and press the **Clerk** key.



5 Repeat Step 4 for adding Clerks 2 through 26.

6 When you are done programming Clerk Numbers, press the **Clear** key.

7 Before you can use Clerk Numbers, you must activate the Clerk System by selecting Option #1 on Flag 12. Do the following:



Press 121 and then press the **Void** key.

To program a clerk name

Example 5: For Clerk #1, program name as Sally Smith

 
1 Put the PRG key in the Mode key slot and turn it to the PRG position.



2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.



3 Using the round Number keys, press 1 for Clerk #1 and then press the **Return** key.



4 To program a name, press the Department keys or the Alphanumeric Code Chart, as needed. For an explanation of how to use the Department keys to spell words, see Setting Alphanumeric Descriptions on page 23. Remember, the Department Shift key lets you use the letters in the lower green section on the Department keys. To make a space to separate words, press the 0 key twice or press the 00 key one time.




5 Press the **Check** key when you are done.

To use clerk numbers

Example 6: Clerk #1 has a passcode of 234

 1 Put the PRG key in the Mode key slot and turn it to either the REG1 or REG2 position.



2 Using the round Number keys, press 1, then press the **Clerk** key. Press 234 and then press the **Check** key.

 
3 The first 2 digits of the display show the Clerk Number when entered and the display shows the Clerk Name. The cash register is now ready for operation.

Using the Clerk System

If you see the message CLERK E12, RE-CLERK#, or CLERK ERR in the display and you hear the error beep, clerk numbers are programmed and the clerk system is active.

To use the Clerk System

- 1 Press the **Clear** key to clear the error condition and then enter a clerk number and press **Clerk**.
- 2 If you programmed a clerk security code, enter the clerk number and then press the **Clerk** key. Using the round Number keys, press the three digit security code and then press the **Check** key.



Setting the Machine Number

You can assign your cash register its own number. This is useful if you have several cash registers and want to track which one creates which receipts and transactions.

The machine number prints on all receipts/journal records, and management reports. The machine number can be up to 4 digits long.

After you are done programming the machine number, you can check your results. See Printing the Quick Start Program Confirmation Report on page 36.

To set the machine number

Example 7: Program the cash register number to 1234

- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.
- 3 Using the round Number keys, press 1234 and then press the **+%/PO** key.



Setting X and Manager Passwords

Two Manager Passwords are available for added security:

- one password to go to the PRG and Z modes
- one password to go to the X mode.

Important

The Manager Password cannot be 0000 (zeros). The cash register will not accept this password.

Caution

Write your passwords down in a safe place. If you forget the passwords, you must do a Full System Clear procedure. A Full System Clear erases all transaction information and programming. For details on the Full System Clear, see Full System Clear on page 103.

After you program a password, you must use it every time you go to the program mode or before every X or Z readings, depending on which you set the password for.

When you enter a password, it appears as asterisks **** on the displays for extra security.

To set manager passwords

Example 8: To set the X password as 1212

- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 Using the round Number keys, press 222222, and then press the **Amount Tend Total** key. The X PASS prompt and the letter P appears until you complete step 3.
- 3 Using the round Number keys, press 1212 and then press the **Non Tax** key.

amount tend
total

non
tax

Example 9: If the PRG/Z password is 1313

- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 Using the round Number keys, press 111111 and press the **Amount Tend Total** key. The PASS prompt and the letter P appears until you complete step 3.
- 3 Using the round Number keys, press 1313 and press the **Non Tax** key.

amount tend
total

non
tax

To use manager passwords

Example 10: Go to the X mode, using the Manager Password 1212

- 1 Put the PRG key in the Mode key slot and turn it to the X position.

check

- 2 Using the round Number keys, press 1212 and then press the **Check** key.
- 3 You are now ready to run an X Report.

Example 11: Go to the PRG or Z modes, using the Manager Password 1313

check

- 1 Put the PRG key in the Mode key slot and turn it to the PRG or Z position.
- 2 Using the round Number keys, press 1313 and then press the **Check** key.
- 3 You are now ready to program or take any reports based on your selection in the first step.

Printing the Quick Start Program Confirmation Report

Now that basic programming is complete, check your results with a Quick Start Program Confirmation Report.

If you made a mistake during programming, repeat only the step you made the mistake in. For example, if only the tax rate is incorrect, just re-program the tax—you do not need to re-set the time, date, and so on.

To print the Quick Start Program Confirmation Report

amount tend
total

feed

- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 Using the round Number keys, press 999999 and then press the **Amount Tend Total** key.
- 3 After the Program Confirmation Report prints, press the **Feed** key to advance the complete report out of the cash register.

See the next page for an example of this report.

Your tape looks similar to the example Program Confirmation Report shown below.

DATE	09-17-2004	MC #:1234	MACHINE NUMBER
	FOOD	0.00T1	PRE-SET PRICE of zero in Dept. 1; Taxable 1 Status
		00001	DEPARTMENT STATUS - shows Tax Rate 1 programmed for Dept. 1
	BEVERAGES	1.99T2	PRE-SET PRICE of \$1.99 in Dept. 2; Taxable 2 Status
		00002	DEPARTMENT STATUS
	COFFEE	0.00T1	PRE-SET PRICE of zero in Dept. 3 Taxable 1 Status
		10001	DEPARTMENT STATUS
	PAPER GOODS	0.00	
		00000	
	DEPT 5	0.00	
		00000	
	DEPT 6	0.00	
		00000	
			ALL 99 DEPARTMENTS ALWAYS PRINT
	DEPT 99	0.00	
		00000	
	COUPON	001-	COUPON STATUS (Tax Status set at "01")
		1.54T1	TAX 1 RATE (fixed rate programmed)
		50.00T1	
		1.04T2	TAX 2 RATE (fixed rate programmed)
		60.00T2	
		0.00T3	TAX 3 RATE (not programmed)
		0.00T4	TAX 4 RATE (not programmed)
	DISCOUNT	10.00%-	PERCENT DISCOUNT (set at 10%)
	ADD ON	0.00%+	PLUS PERCENTAGE (not programmed)
	CHARGE	50	ROUNDING STATUS (set at 50)
	CHARGE	1 05	} Scroll Message Details
	CHARGE	2 05	
	CHARGE	3 10	
	CHARGE	4 20	
	CHARGE	5 05	
	CHARGE	6 00	
	CHARGE	7 02	
	61 CLOSED, NEXT REGISTER PLEASE		} Scroll Messages
	62 PLEASE WAIT		
	63 PLEASE TAKE YOUR RECEIPT		
	64 GOOD MORNING		
	65 GOOD AFTERNOON		
FLAG OPTION STATUS (a total of 39 flag options will print at either "0" or "1", depending upon the program setting)	VOID/CORR	0000000000	FLAG NUMBERS read from left to right
		0000100100	
		0000001101	
	OFF TIME	00	UV Light Time Setting
TIME	PM 2-44	0003	TRANSACTION NUMBER

The Date, Time, Tax Rate and Department Status shows the information based upon your input.

For more details of the symbols printed in the Program Confirmation Report, see Running Reports on page 80.

Before Going to Register Mode

Your cash register offers many other features not covered in this chapter. Other options are covered in the chapter called Setting Up Your Cash Register - Advanced, starting on page 40.

We also provide examples to help you learn how to use your cash register. For information about the examples, see Examples on page 104.

Error Codes

Your cash register makes beeps as well as shows you messages in the display. Some beeps and messages let you know everything is working and others let you know you need to do something.

Table 8 Common errors

This error...	Means this...
Register Beep	The cash register makes a short beep each time a key is pressed. This is normal and not a cause for concern.
Entry Error Beep	<p>When using your cash register, you must perform all operations in the correct order. If you press the wrong key at the wrong time, an alarm beep sounds and you see a message on the display. The keyboard also locks. Press the Clear key to continue.</p> <p>When a transaction is started in the REG1 or REG2 position, you must complete the sale before moving the Mode key to another position. When an operation is started but not finished in the REG1 or REG2 positions, turning the Mode key to another position makes an alarm beep and you see an error message on the display. Press the Clear key to continue.</p>
Printer Error or Paper End	If a PE appears in the display, check if you are out of paper. Check for a paper jam. For more information about other solutions, see PE Printer Error or Paper End on page 99.

Clearing an Error



The **Clear** key stops an alarm beep that happened because a key was pressed that was not correct for that operation.

The **Clear** key does not erase a transaction that was registered by an operating key and printed on the register tape.



To erase an entry after you press a key that printed the entry on the tape, use the **Void** key to correct the error.

If the cash register makes a loud error beep, press the **Clear** key to stop it.

If your cash register will not stop making a beeping sound after you press the **Clear** key, you can do three more things.

Half System Clear

If you pressed the **Clear** key and the error beep does not stop, you can do a Half System Clear. For more information about a Half System Clear, see Half System Clear on page 102.

Partial Reset

A Partial Reset can help if the Half System clear did not help. For more information, see Partial Reset on page 102.

Full System Clear

If you did a Half System Clear and a Partial Clear and the error beep still does not stop, as a last resort, you can do a Full System Clear. For more information about the Full System Clear, see Full System Clear on page 103.

Setting Up Your Cash Register - Advanced

This chapter shows you more advanced programming for your cash register. This chapter covers:

- Programming Department Keys
- Programming PLU Descriptions
- Setting the Decimal Points
- Setting the Rounding Rates
- Programming Discounts
- Programming Flag Options

When you are done programming your cash register, you can run the Programming Report to see your results. See Running the Program Confirmation Report on page 80.

Note

While you are programming, the letter P often appears in the display.

Programming Department Keys

Departments are a category of merchandise. For example, Department 1 can be Housewares, Department 2 can be Food, Department 3 can be Womens Clothing, and so on. This helps you track what you are selling.

Each department can be programmed as taxable or non-taxable, so that if an item needs to be taxed, it is added automatically when you ring up an item in a taxable department.

You can have as many as 99 departments on your cash register. If you have many departments, you may want to make a list so other people who use the cash register can properly use the department keys.

Programming departments includes up to 6 steps. Not all steps listed below may apply to your specific needs, but you must specify a value for each, even if you do not plan to use that feature.

- 1 Setting Standard and Gallonage Mode
- 2 Programming Multiple and Single Items
- 3 Programming High Digit Lock-out (HDLO)
- 4 Programming Tax Status - If you are using the cash register in Canada, refer to Programming Tax in Canada on page 132 during this step.
- 5 Programming Department Preset Price
- 6 Programming Department Names

For specific information about each of the items above, see the next sections.


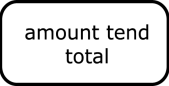

After you are done, you can check your results. See Running the Department Sales Report on page 83.

To program department keys

- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.
- 3 Press the following, in this order:

check


Press this...	To specify this...	See this page...
0 or 1	Standard or gallonage	43
0 or 1	Multiple or single items	43
0 to 6	HDLO	44

Press this...	To specify this...	See this page...
00 to 15 and then 	Tax status	44
0 or up to a 7 digit price	Department preset value	45
A department key	The department key for this department	
<p>Note If you do not want to program a department name, press the Amount Tend/Total key.  Skip the next steps. You are done with this department.</p>		
The alphanumeric keys to spell the department name.	The department name	46
 The information is saved in the cash register		

4 To add another department, do step 3 again.

To program Department 1 as taxable with no preset price and no description

 
- Put the PRG key in the Mode key slot and turn it to the PRG position.
- If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.
- Using the round Number keys, press 00001 and then press the **Subtotal/w/Tax** key.
- Using the round Number keys, press 0 and then press the **Dept 1** key.
- Press the **Amount Tend/Total** key. Skip this step if you are going to enter a description. The department information is saved in the cash register.



To program Department 2 as non-taxable with no preset price and no description

- Put the PRG key in the Mode key slot and turn it to the PRG position.
- If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.



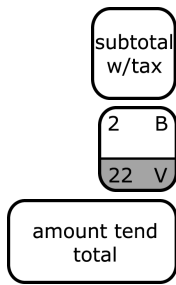

- 3 Using the round Number keys, press 00000 and then press the **Subtotal/w/Tax** key.
- 4 Using the round Number keys, press 0 and then press the **Dept 2** key.
- 5 Press the **Amount Tend/Total** key. Skip this step if you are going to enter a description. The department information is saved in the cash register.

Setting Standard and Gallonage Mode

A department can be set for either Standard Mode or Gallonage Mode.

Gallonage Mode allows entering a price with 3 decimal places, representing the cost per gallon, pound, kilogram, yard, meter, or other unit of measurement. For example, \$1.499 per gallon.

Standard Mode enters the price using the normal 2 decimal place setting.

Table 9 Standard/Gallonage Mode

This number...	Means this...
0	Standard Mode
1	Gallonage Mode

Programming Multiple and Single Items

Multiple Item Entry allows you to ring up two or more items into a department. For example, if you want to ring up 5 of the same items, you can tell the cash register to multiply the one price by the number of items.

Single Item Entry allows you to ring up only one item in a department. For example, if you want to ring up 5 of the same items, you must ring each one up individually.

Table 10 Multiple / single item

This number...	Means this...
0	Multiple Item Sale
1	Single Item Sale

Programming High Digit Lock-out (HDLO)

You can specify the most number of digits that can be rung up in an entry. This feature helps to prevent against large over-rings. If too many digits are entered, the error beep sounds and the keypad locks up. For example, to limit ring ups of more than \$99.99, set the HDLO to 4.

Table 11 High digit lock out (HDLO) values

This number...	From this...	to this...
0	\$.01	\$ 99,999.99 (Standard setting)
1	.01	.09
2	.01	.99
3	.01	9.99
4	.01	99.99
5	.01	999.99
6	.01	9,999.99

Programming Tax Status

Some items must have tax collected by law. You can program your cash register to automatically assign the right amount of tax, based on the department the item is assigned to.

Note

If you are using the cash register in Canada, your instructions are in Programming Tax in Canada on page 132.

You can link no tax, a single tax rate (Tax 1), or multiple tax rates (Tax 2, 3 or 4) to a department key.

Table 12 Tax status settings

This tax status number...	Means this...
00	Non-Taxable (use this if you do not want to charge tax)
01	Taxable by TAX 1 Rate
02	Taxable by TAX 2 Rate
03	Taxable by TAX 3 Rate
04	Taxable by TAX 4 Rate
05	Taxable by TAX 1 and TAX 2 Rates
06	Taxable by TAX 1 and TAX 3 Rates
07	Taxable by TAX 1 and TAX 4 Rates
08	Taxable by TAX 2 and TAX 3 Rates
09	Taxable by TAX 2 and TAX 4 Rates
10	Taxable by TAX 3 and TAX 4 Rates
11	Taxable by TAX 1, TAX 2 and TAX 3 Rates
12	Taxable by TAX 1, TAX 2 and TAX 4 Rates
13	Taxable by TAX 1, TAX 3 and TAX 4 Rates
14	Taxable by TAX 2, TAX 3 and TAX 4 Rates
15	Taxable by TAX 1, TAX 2, TAX 3 and TAX 4 Rates

Programming Department Preset Price

If you do not want to preset a price, a price of 0 must be assigned to that department key. Department Preset Price programs a price in a department to save time when ringing up an entry. Even if a price has been pre-programmed, you can override the price at the time of sale.

 
The price automatically rings up each time the department key is pressed.

Important

If you do not need a preset price, enter 0 as the price.

If you are using the cash register in Canada, refer to Programming Tax in Canada on page 132 during this step.

Assigning Department Number Keys



You must assign a department number. After you assign a department number, you can press the **Amount Tend/Total** key to finish programming if you do not want a department description.




The Department number keys from 1 to 20 are easy to use: You just press the Department number key you want. For example, to use Dept 2, press the Dept 2 key.



The Department keys from 21 to 40 are also easy to use. Just press the **Dept Shift** key and then press the Department number key you want. For example, to use Dept 23, press the **Dept 23** key.



To use the Department keys from 41 to 99, do the following:

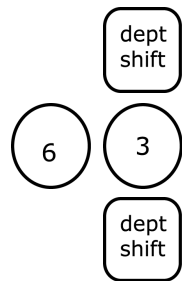

- Press the **Dept Shift** key.
- Using the round Number keys, type the Department number from 41 to 99 that you want to use. For example, for Department 63, press the 6 key and then press the 3 key.
- Press the **Dept Shift** key again.

Programming Department Names

A name or description can be assigned to each department key. This name appears on the clerk display and prints when ringing up sales.

For example, Clothing can print on the receipt in place of Dept 1, Shoes can print on the receipt in place of Dept 2, Sportswear can print on the receipt in place of Department 3, and so on.


When you are programming the descriptions for Departments, use the Alphanumeric Keyboard.



When you are done programming the department description, press the **Check** key to save your programming. The information is saved in the cash register and you can program the next item.

Note

Only capital letters of the alphabet are on the Alphanumeric Keyboard. You can also use lower case letters and numbers, certain symbols, and international characters. See Alphanumeric Code Chart on page 47.

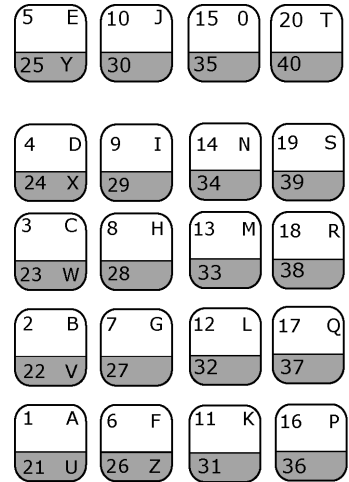

The department keys are clearly labeled with all the letters you need to program these descriptions. When you are programming alphanumeric descriptions, use the department keys to spell out the words you want.

dept shift

You can use the letters in the lower green area of the keys by pressing the **Dept Shift** key and then pressing the key with the letter you want.

You might need certain symbols, numbers, international characters or lower case characters that are not found on the Alphanumeric Keyboard. For example, if you require a space between words, or if you need the / symbol, or -, you use the round Number keys to type the correct alphanumeric code. See the Alphanumeric Code Chart shown in the next section.

void

Important

If you enter the wrong character, press the **Void** key to backspace and delete that character. Now you can continue.

Alphanumeric Code Chart

Many characters are also available. Use the tables in this section to help you find the ones you need.

Use the following table for lower case letters and numbers. If you want to use double width characters, press 01 before each character.

For example, to program Y E S, type 01 Department Shift key Y 01 E 01 S. For more information, see Using Double Wide Characters on page 27.

Table 13 Letters and numbers

Character	Code Number	Character	Code Number
Space	00	s	20
Wide Character	01	t	21
a	02	u	22

Table 13 Letters and numbers

Character	Code Number	Character	Code Number
b	03	v	23
c	04	w	24
d	05	x	25
e	06	y	26
f	07	z	27
g	08		
h	09	Numbers	
i	10	0	30
j	11	1	31
k	12	2	32
l	13	3	33
m	14	4	34
n	15	5	35
o	16	6	36
p	17	7	37
q	18	8	38
r	19	9	39

Use this table for punctuation and foreign characters.

Table 14 Special Characters and Punctuation

Character	Code Number	Character	Code Number
ı	80	?	28
ç	81	!	29
á	82	@	40
é	83	/	67
í	84	:	68
ó	85	#	69
ú	86	&	70
Ä	93	%	71
Ü	94	\$	72
Ö	95	,	73
		(comma)	
ï	96	(74
ü	97)	75
Ñ	98	*	76
ñ	99	+	77
		-	78
		.	79
		(period)	
		;	87
		(semi colon)	
		>	88
		'	89
		(apostrophe)	
		"	90
		<	91
		=	92

Scrolling Messages

Your cash register shows messages that move across the display when the register is not in use. You can use the pre-programmed default messages or you can program your own. You can change one or more messages at any time. For example, if you have a new promotion, you can change the Idle 1 message to say something about the promotion. You can also control the speed at which the scrolling messages display.

Types of Scrolling Messages

You can program the following types of scrolling messages

Table 15 Scrolling messages

Message Number	Message Type	This message shows:.
1	OFF message	When the register is in the OFF position
2	MODE message	During the idle state when the register is in PRG , X , or Z modes
3	SALES message	After the sales transaction
4	IDLE message 1	When the register is in the idle state while in REG modes during the morning hours *
5	IDLE message 2	When the register is in the idle state while in REG modes during the afternoon hours *
* IDLE messages 1 and 2 can be combined for 1 longer message that runs all day.		

Scrolling Message Length

You can program up to 42 characters in each scrolling message. Messages 4 and 5 (IDLE messages) can be combined to make a message with a maximum of 84 characters long.

Default Scrolling Messages

The following messages display automatically.



Off Message	CLOSED, NEXT REGISTER PLEASE
Mode Message	PLEASE WAIT
Sales Message	PLEASE TAKE YOUR RECEIPT
Idle Message 1	GOOD MORNING
Idle Message 2	GOOD AFTERNOON

You can change these default messages, using the following instructions.

Programming Scrolling Messages


Use the steps below to program your scrolling message.

To program a scrolling message

- Put the PRG key in the Mode key slot and turn it to the PRG position.
-  If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.
-  Using the round Number keys, press 6, press the number of the message you want to change, and press the **Return** key.
For example, to change the message that displays when you move the Mode key to the Off position, press number 6, 1, and **Return**.
- Type your message, using either the Alphanumeric keys or the special codes. For more information about using the Alphanumeric keys to type letters, see Setting Alphanumeric Descriptions on page 23.

Important

If you enter the wrong character, press the **Void** key to backspace and delete that character and then continue typing.

-  When you are done, press the **Check** key. You can program another message by starting with step 3.

Sample Scrolling Messages

Here are some samples of messages that you can program:

```

ASK ABOUT OUR DAILY SPECIALS
WE DELIVER
10% DISCOUNT ON THURSDAYS
FREE SODA WITH ANY SANDWICH ORDER
STORE HOURS 9AM TO 10 PM

```

Programming Scrolling Message Display Times

After you have programed your scrolling message, you can set the length of time you want the message to run.

After you are done, you can check your results. See Running the Program Confirmation Report on page 80.

Setting the Off Message Start Time

OFF message	Number of seconds after the register is turned off before the message starts.	Settings in seconds: 00–99 Default=05
	To stop the message after it starts, press the Feed key.	

To program the Off message time setting

- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.
- 3 Using the round Number keys, press 1, press the number of seconds you want to delay as 2 digits, and press the **Charge** key.



Setting the Mode Message Start Time

MODE message	Number of seconds before the register turns into idle mode in PRG, X, Z modes and the message starts.	Settings in seconds: 00–99 Default=05
--------------	---	--

This message does not display in REG modes.

To program the Mode message time setting

- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.
- 3 Using the round Number keys, press 2, press the number of seconds you want to delay as 2 digits, and press the **Charge** key.



Setting the Sales Message Start and Stop Times

SALES message start	Number of seconds after a sale is complete before the message starts.	Settings in seconds: 00 – 99 Default=10
---------------------	---	--

The register must be set in REG mode.

To program the Sales message start time setting



- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.



- 3 Using the round Number keys, press 3, press the number of seconds you want to delay as 2 digits, and press the **Charge** key.

SALES message stop	Number of seconds the Sales message runs before the Idle message starts.	Settings in seconds: 00 – 99 Default=20 00 = No Sales message appears
--------------------	--	---

The register must be set in REG mode.

To program the Sales message stop time setting



- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.



- 3 Using the round Number keys, press 4, press the number of seconds you want to delay as 2 digits, and press the **Charge** key.

Setting the Idle Messages Start Time

Idle message display after the time appears	Number of seconds for the Time to appear before the Idle message appears again.	Settings in seconds: 0 – 9 0 does not show the time at all. Default=5
---	---	---

When the Time changes while an Idle message is running, the time appears for a few seconds. After the specified time, the Idle message appears again.

To program the Idle message display after the time appears



- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.



- 3 Using the round Number keys, press 50, press the number of seconds you want to delay as 1 digit, and press the **Charge** key.

Idle message
pattern

Setting the Idle message to 0
runs Idle message 1 in the AM
and Idle message 2 in the PM.

Settings: 0 – 1
Default=0

Setting the Idle message to 1
combines both Idle messages
and runs them all day.

To program the Idle message display pattern



- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.



- 3 Using the round Number keys, press 60, press 0 or 1 for your message display choice, and press the **Charge** key.

Setting the Amount of Time Message Letters Appear in the Display

You can set the amount of time letters appear in the display. The shorter amount of time, the faster the message scrolls across the display.

To program the amount of time letters appears



- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.



- 3** Using the round Number keys, press 70. Press one digit number from the chart below, representing the number of seconds you want to delay, and press the **Charge** key.

Press this number...	To specify...	
0	0.2 seconds	Fast
1	0.3	
2	0.4 - Default	
3	0.5	
4	0.6	
5	0.7	
6	0.8	
7	0.9	
8	1.0	Slow

Programming the Credit Keys

You can use 2 department keys as credit card-only keys. You can use one or both keys if you want. For example, you can set Department 19 to be a Visa® card and Department 20 to be a MasterCard®. You can also program the cash register to print the name of the credit card on the receipt or journal tape.

When you ring up a sale, you can use Department 19 or Department 20 to finalize the credit card sale, open the cash drawer, and print the receipt or journal tape.

You must set Flag 16 Option Number 1, 2, or 3 to use this feature. For more information about setting Flags, see Programming Flag Options on page 65.

Note

If you want to use Departments 19 and 20 as credit card keys, they no longer work as department keys until you set Flag 16 back to 0.

To program a credit key





 
 
- Put the PRG key in the Mode key slot and turn it to the PRG position.
- If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.



3 To program a card name that prints on the receipt or journal tape, press 51 for Department key 20 or press 52 for Department key 19 and then press the **Return** key. If you do not program a card name, it prints as CREDIT 1 or CREDIT 2.

4 Type the name of the credit card just as you did when you programmed Department names. You can type up to 12 characters and spaces.

For example, to type VISA, press the following keys:

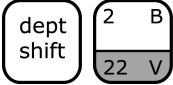Press this key...	To get this letter...
	V
	I
	S
	A

- For more information about using the Department keys to type letters, see Programming Department Keys on page 41.



Important
If you enter the wrong character, press the **Void** key to backspace and delete that character. Now you can continue.



5 When you are done, press the **Check** key.

Programming PLU Descriptions

The Price-Look Up system allows for fast, accurate entry of an item and automatically records the number of items sold. If you want to use the barcode reader, you can scan UPC codes to ring up items.

Each PLU must be programmed with up to a 12 character description that appears on the display and prints on the tape.

Programming PLUs consists of the following:

- 1 Assign a PLU number (from 1 to a maximum of 12 digits long) to each sales item or scan the UPC barcode.
- 2 Assign a price.

- 3 Link the PLU to a department key with the appropriate Tax Status for that PLU.
- 4 Enter a description for the PLU. You must enter a description, even if it is as simple as PLU4.

For example, if PLU #1 is a taxable item, you can link it to a Department key which is set up for tax. If PLU #2 is not a taxable item, you can link it to a Department key which is programmed for no tax.

Important

You do not need to press the decimal point key when entering a price.

After you are done, you can check your results. See Running the PLU Confirmation Report on page 82.


Programming PLUs without a Barcode Reader

You can program PLUS without using a barcode reader. Use the following instructions.

To program PLUs without a barcode reader

Example 12: Set PLU #1 with a \$2.99 price, linked to Department 1, description of APPLE

 - 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.
- 3 Press the **Qty/Date** key to begin programming the PLUs. The PLU prompt appears on the display.
- 4 Using the round Number keys, press 1 and press the **PLU** key.
- 5 Using the round Number keys, press 299 and then press the **Department 1** key. For more information about using the department keys, see Assigning Department Number Keys on page 46.
- 6 Press the keys to spell APPLE, using the Alphanumeric keys or the Alphanumeric Code Chart, if needed. For an explanation of how to use the Department keys to spell words, see Setting Alphanumeric Descriptions on page 23. The Department Shift key lets you use the letters in the lower green area on the Department keys.



To make a space to separate words, press the round Number 0 key twice or press the round Number 00 key one time.

You must enter a description, even if it is as simple as PLU4.

**Important**

If you enter the wrong character, press the **Void** key to backspace and delete that character and then continue.



7 Press the **Check** key. The PLU information is saved in the cash register.

If you want to program more PLUs, repeat steps 4 through 7.



8 When you are done programming PLUs, press the **Qty/Date** key.

Programming PLUs with the Barcode Reader

You can use the barcode reader to scan items and automatically ring them up. Using the barcode reader reduces errors caused by people ringing up items incorrectly. The barcode reader must be held about 1/2 inch or closer above the UPC symbol on the product to read the UPC symbol properly.

To program PLUs using the barcode reader

Example 13: Set a UPC symbol to a \$2.99 price, linked to Department 1, description of BOOK

1 Put the PRG key in the Mode key slot and turn it to the PRG position.



2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.



 
3 Press the **Qty/Date** key to begin programming the PLUs.

4 Using the barcode reader, scan the UPC you want for this PLU. Hold the barcode reader less than 1/2 inch from the UPC you want to scan. Press the button on the bottom of the reader to read the UPC. The barcode reader beeps.



5 Using the round Number keys, press 299 and then press the **Department 1** key. The PLU name appears on the display. For more information about using the department keys, see Assigning Department Number Keys on page 46.

6 Press the keys to spell BOOK, using the Department keys or the Alphanumeric Code Chart, if needed. For an explanation of how to use the Department keys to spell words, see Setting Alphanumeric Descriptions on page 23. The Department Shift key lets you use the letters in the lower green area on the Department keys.



To make a space to separate words, press the 0 key twice or press the 00 key one time.

You must enter a description, even if it is as simple as PLU4.

void

Important

If you enter the wrong character, press the **Void** key to backspace and delete that character and then continue.

check

7 Press the **Check** key. The PLU information is saved in the cash register.

8 Repeat steps 4 through 7 to program more PLUs.

qty/
date

9 When you are done programming PLUs, press the **Qty/Date** key.

Setting the Decimal Points

The decimal point is set by selecting from the following 4 options:

This decimal point...	Looks like...
zero decimal point	0 = \$ X
one decimal point	1 = \$ X.X
two decimal point	2 = \$ X.XX (U.S. Standard)
three decimal point	3 = \$ X.XXX

After you program the decimal point, you do not need to specify a decimal when you ring up sales. If you try to use a decimal point, you hear an error beep.

After you are done, you can check your results. See *Running the Program Confirmation Report* on page 80.

To program the decimal points

Example 14: Program the Decimal Point For Option \$X.XX, 2 decimal places, normally used in the United States

1 Put the PRG key in the Mode key slot and turn it to the PRG position.

check

2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.

- %
RA

3 Using the round Number keys, press 2 and then press the **-%/RA** key.

Setting the Rounding Rates

You may want to sell 2 items for an odd number price. If someone wants to purchase that item, they cannot pay you a half cent, so you need the cash register to round the half cent to the next nearest penny.

You can select from the following options to set the rounding.

Table 16 Rounding

This number...	Rounds to this...
00	Numbers from .1 - .9 to 0
50	Numbers from .5 - .9 to 1 (U.S. Standard)
99	Numbers from .1 - .9 to 1

After you are done, you can check your results. See *Running the Program Confirmation Report* on page 80.

To set the rounding

Example 15: Program rounding to 50, normally used in the United States

- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.
- 3 Using the round Number keys, press 50 and then press the **Charge** key.



Programming Discounts

Sometimes you want to have discounts assigned automatically. For example, when you have a sale, you may want to be able to apply a 10% discount to certain items.

Programming Minus Percentage Discounts

You may want to deduct a percentage rate from the usual rate of an item, such as an employee discount. The Minus Percentage Discount [-%/RA] subtracts a percentage rate from an individual item. You can program the rate or you can enter it by hand each time. Regardless of how you specify a discount, the discount you enter must always be 4 digits. For example, you enter a 25% discount as 2500.

You can also set it so that the Minus Percentage Discount amount is not subtracted from the department totals on the Management Reports. For more information, see Flag 23 on page 68.

After you are done, you can check your results. See *Running the Program Confirmation Report* on page 80.

To program a Minus Percentage Discount [-%/ra]

Example 16: Program the Percentage Discount rate of 10%



1 Put the PRG key in the Mode key slot and turn it to the PRG position.

2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.



3 Using the round Number keys, press 1000 0 and then press the **-%/RA** key.

You must always enter the percentage rate as a 4-digit number without the decimal point, representing 00.00 through 99.99.

Note

See *Minus Percentage Discount Sale* on page 112 to ring up a Minus Percentage Discount sale.

Programming Coupon Discounts



You can use the Coupon Discount (CPN) key to subtract a specific amount from an individual item. You can enter a coupon in the middle of a transaction or by itself in a transaction.

After you are done, you can check your results. See *Running the Program Confirmation Report* on page 80.

Programming the Coupon Discount key includes 2 steps:

1 Setting a High Digit Lock Out (HDLO) number
The High Digit Lock Out (HDLO) number limits the number of digits that can be rung up in a coupon discount. This prevents you from accidentally subtracting a large amount.

If large number of digits is entered, you hear an error beep and the keypad locks up. For example: To make sure no one can ring up more than \$99.99 on the Coupon Discount key, set the HDLO to 4.

Table 17 High digit lockout number (HDLO)

This number...	From this...	to this...
0	\$.01	\$ 99,999.99 (Standard setting)
1	.01	.09
2	.01	.99

Table 17 High digit lockout number (HDLO) (Continued)

This number...	From this...	to this...
3	.01	9.99
4	.01	99.99
5	.01	999.99
6	.01	9,999.99

2 Setting the Tax Status.

The tax status determines how you want the tax rate to be charged when using the Coupon Discount key. Contact your local tax authorities to learn your local tax requirements.

The options are:

- To charge tax on the original amount of an item (the amount before the coupon is deducted).
- To charge tax on the discounted amount of an item (the amount after the coupon discount is deducted).

Note

If you have no tax rate programmed in the cash register, use 00 from the Tax Status Numbers table.

The following Tax Status numbers are used to link the Tax Status to the Coupon Discount key.

Table 18 Tax Status Numbers

Number	Taxable by...	To charge the...
00	Non-Taxable	<ul style="list-style-type: none"> • If no tax is programmed in the cash register, or • If you want to charge tax on the original amount of an item (the amount before the coupon is deducted).
01	TAX 1	TAX 1 rate on the discounted amount of an item. *
02	TAX 2	TAX 2 rate on the discounted amount of an item. *
03	TAX 3	TAX 3 rate on the discounted amount of an item. *
04	TAX 4	TAX 4 rate on the discounted amount of an item. *
05	TAX 1 and TAX 2	TAX 1 and TAX 2 rates on the discounted amount of an item. *

Table 18 Tax Status Numbers (Continued)

Number	Taxable by...	To charge the...
06	TAX 1 and TAX 3	TAX 1 and TAX 3 rates on the discounted amount of an item. *
07	TAX 1 and TAX 4	TAX 1 and TAX 4 rates on the discounted amount of an item. *
08	TAX 2 and TAX 3	TAX 2 and TAX 3 rates on the discounted amount of an item. *
09	TAX 2 and TAX 4	TAX 2 and TAX 4 rates on the discounted amount of an item. *
10	TAX 3 and TAX 4	TAX 3 and TAX 4 rates on the discounted amount of an item. *
11	TAX 1, TAX 2 and TAX 3	TAX 1, TAX 2 and TAX 3 rates on the discounted amount of an item. *
12	TAX 1, TAX 2 and TAX 4	TAX 1, TAX 2 and TAX 4 rates on the discounted amount of an item. *
13	TAX 1, TAX 3 and TAX 4	TAX 1, TAX 3 and TAX 4 rates on the discounted amount of an item. *
14	TAX 2, TAX 3 and TAX 4	TAX 2, TAX 3 and TAX 4 rates on the discounted amount of an item. *
15	TAX 1, TAX 2, TAX 3, TAX 4	TAX 1, TAX 2, TAX 3 and TAX 4 rates on the discounted amount of an item. *

* the amount after the coupon is deducted

To program the Coupon key

The following examples show the most commonly used options in programming the Coupon Discount key.

Method 1

You can select if no tax is programmed in the cash register or if you want to charge the tax rate on the original amount of an item (the amount before the coupon is deducted).

Example 17: If HDLO is set to 0, and the Tax Status Number is set to 0 (non-taxable)

- 1** Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2** If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.
- 3** Using the round Number keys, press 000 and then press the **Cpn** key.

check

cpn

Note

See page 109 to ring up a coupon sale programmed with Method 1.

Method 2

You can select if you want the tax rate to be charged on the discounted amount of an item (the amount after the coupon is deducted).

Example 18: If HDLO is selected for 0, and the Tax Status is selected for 1 (taxable by TAX 1):

- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.
- 3 Using the round Number keys, press 001 and then press the **Cpn** key.

check

cpn

Note

See page 109 to ring up a coupon sale programmed with Method 2.

Programming Plus Percentage Add-ons

You may want to add an automatic amount to the total, such as a fixed tip or other service charge. Plus Percentage adds a fixed rate additional charge to an individual item. You can program the rate or you can enter it by hand each time. Regardless of how you specify the Plus Percentage, the amount you enter must always be 4 digits. For example, you enter a 25% Plus Percentage as 2500.

When you use the Plus Percentage/Add-On key, the words Add-on appear on the display and print on the receipt.

You can also set the cash register so that the Plus Percentage amount is not added to the department totals on the Management Reports. For more information, see Flag 23 on page 68.

After you are done, you can check your results. See Running the Program Confirmation Report on page 80.

To program the Plus Percentage [+%/PO] key

Example 19: Program a 10% add-on

- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.

check



- 3 Using the round Number keys, press 1000 0 and then press the **+%/PO** key.

You must always enter the percentage rate as a 4-digit number without the decimal point, representing 00.00 through 99.99.

Note

See Plus Percentage Sale on page 115 to ring up a Plus Percentage sale.

Programming Flag Options

Flag options are actions you can set for the cash register. These actions include how the date appears, if the tax rate prints on receipts, if clerk numbers are used, and so on.

34 Flags are available on your cash register. The Flags are preset by the factory to meet the most commonly used actions. Each Flag setting can be changed or updated at any time, if needed.

Note

All Flag action are factory preset at 0, except for Flags 15, 18, 21, 27, 28, 30, 32, 33, 34, 37, and 39 which have a default setting of 1. Flag actions only need to be changed if you want to change any action from the default setting.

If you change the language after programming is complete, descriptions like logo, department and PLU names revert to their default descriptions and you must reprogram them. The numeric amounts that you programmed do not change.

Note

If you program custom messages or department descriptions, changing languages does not translate those messages. Instead, they are deleted and reset to the factory default for the message or description. Before you program your messages, select the language you want the cash register to be in.

After a Full System Clear, all settings go back to the default settings.

To program flag options

Example 20: Select 1 for Flag 3 (Tendering of change is required)

- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.



- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.



- 3** Using the round Number keys, press 31 and then press the **Void** key. Flag #3 is now set with Action 1.

The following table shows all Flags and the actions. Bold numbers are the default.

Table 19 Flag options

This Flag number...	Sets these actions...	Set to...
1	The Grand Total does not reset after a Z reading.	0
	The Grand Total resets after a Z reading.	1
2	Subtotal prints on sales receipts when #/ST/NS key is pressed.	0
	Subtotal does not print on sales receipts when #/ST/NS key is pressed.	1
3	Tendering of change is not required.	0
	Tendering of change is required.	1
4	The Date prints as Month-Day-Year.	0
	The Date prints as Day-Month-Year.	1
5	Z1 and Z2 Counter Numbers do not reset after a Z1 or Z2 report.	0
	Z1 and Z2 Counter Numbers reset after a Z1 or Z2 report.	1
6	Tax Rate Amount prints on sales receipts.	0
	Tax Rate Amount does not print on sales receipts.	1
7	Skips amounts equaling zero on financial reports.	0
	Does not skip amounts equaling zero on financial reports.	1
8	The Date prints on sales receipts and management reports.	0
	The Date does not print on sales receipts and management reports.	1
9	The Time prints on sales receipts and management reports.	0
	The Time does not print on sales receipts and management reports.	1

Table 19 Flag options (Continued)

This Flag number...	Sets these actions...	Set to...
10	The Consecutive Number prints on the receipt.	0
	The Consecutive Number does not print on the receipt.	1
11	The Clerk Name prints on sales receipts.	0
	The Clerk Name does not print on sales receipts.	1
12	Clerk System inactive.	0
	Clerk System active.	1
13	USA Tax System.	0
	Canadian Tax System.	1
	VAT Tax System.	2
14	Z1/Z2 Counter prints.	0
	Z1/Z2 Counter does not print.	1
15	Tax amount prints after the sales total on the sales receipt.	0
	Tax amount prints before the total amount on the sales receipt.	1
16	Standard Department Keyboard layout.	0
	Department 20 is Credit 1.	1
	Department 19 is Credit 2.	2
	Department 20 is Credit 1 and Department 19 is Credit 2.	3
17	Sets the non-Taxable Limit without GST tax for Canadian tax mode.	0
	Sets the non-Taxable Limit with GST tax for Canadian tax mode.	1
18	Time appears on the display and prints in 24 hour mode.	0
	Time appears on the display and prints in 12 hour (am/pm) mode.	1

Table 19 Flag options (Continued)

This Flag number...	Sets these actions...	Set to...
19	Sets the language for the cash register. The options are:	
	English	0
	Spanish	1
	French	2
	German	3
20	A Clerk Number is not required before each transaction.	0
	A Clerk Number is required before each transaction.	1
Note Flag # 12 must be set to 1 so the clerk system is active before any setting for Flag # 20 can take effect.		
21	Receipt printer is turned ON in Reg2 mode.	0
	Receipt printer is turned OFF in Reg2 mode.	1
22	Do not select Canadian tax system of Tax on Tax	0
	Select Canadian Tax on Tax system.	1
	Select Canadian Tax on Tax on Tax system.	2
Note Flag # 13 must be set to 1 before setting this flag.		
23	-% is subtracted and +% is added to department totals on X/Z readings.	0
	-% is not subtracted and +% is not added to department totals on X/Z readings.	1
24	TAX amounts print separately on sales receipts.	0
	TAX amounts print as one figure on sales receipts. The letters "TX" print next to the total of tax.	1
25	Duplicate Z report can be printed.	0
	Duplicate Z report cannot be printed.	1
26	Consecutive receipt number resets after Z1 Report.	0
	Consecutive receipt number does not reset after Z1 Report.	1

Table 19 Flag options (Continued)

This Flag number...	Sets these actions...	Set to...
27	0 price registration is allowed.	0
	0 price registration is not allowed.	1
28 (Europe Only)	Euro convert function is allowed.	0
	Euro convert function is not allowed.	1
29	Tax rate does not print on financial report in VAT mode.	0
	Tax rate prints on financial report in VAT mode.	1
30 (Europe Only)	Print converted total at convert tender.	0
	Print converted total always tender.	1
31 (Europe Only)	Local base currency.	0
	Euro base currency.	1
32	Allow Clerk numbers without security code.	0
	Clerk must also enter the 3 digit security code.	1
33	The Header message does not print.	0
	The Header message prints.	1
34	Second receipt cannot be issued. Receipt reprint option disabled.	0
	Second receipt can be issued. Receipt reprint option enabled.	1
35	Only transaction totals for each receipt are stored in the Electronic Journal.	0
	Line-by-line transaction details for each receipt are stored in the Electronic Journal.	1
Note Flag # 36 must be set to 0 (active) before any setting for Flag # 35 can take effect.		
36	Activate Electronic Journal.	0
	De-activate Electronic Journal.	1

Table 19 Flag options (Continued)

This Flag number...	Sets these actions...	Set to...
37	Do not print Footer message at the bottom of the receipt.	0
	Print Footer message at the bottom of the receipt.	1
38	Print blank lines in the Header and Footer.	0
	Do not print blank lines in the Header and Footer.	1
39	Prints a blank line for that specific line of the Header message or Footer message.	0
	Prints the factory default text for that one specific line of the Header message or Footer message.	1

Note

Flags 28, 30 and 31 do not apply to the U.S. market.

Ringling up Sales and Using Training Mode

After you set up your cash register, ringing up sales is easy. For information about ringing up complicated sales, see Examples on page 104.

If you want to learn about using the cash register without affecting the daily total, you can use the Training mode. You or someone else can learn how to use the cash register without creating real sales that show up on reports. For example, you can train a new person about using the department keys and completing sales.

Training mode lets someone use the cash register without actually recording the sales in the sales history. When you stop Training mode, the training sales information is deleted.


Ringling up Sales

After you have the basics programmed in your cash register, you are ready to ring up sales. For more information about setting up the basics on your cash register, see Setting Up Your Cash Register - the Basics on page 22.



Reminder

Do not press the **Decimal Point** key when ringing up a price.

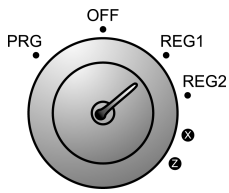


To ring up straight sales without a PLU number

- 1 Put the REG key in the Mode key slot and turn it to the REG1 or REG2 position. You are ready to ring up a sale.
- 2 Using the round Number keys area, type the price of the first item.
- 3 Press the **Department** key for that item.



To use the Department keys above 40, do the following:

- Press the **Dept Shift** key.
- Using the round Number keys, type the Department number from 41 to 99 that you want to use. For example, for Department 63, press the 6 key and then press the 3 key.
- Press the **Dept Shift** key again.

 - 4 Repeat for the rest of the items.
- 5 When you are done ringing up items, press the **Amount Tend Total** key. The cash drawer opens and the receipt or journal prints.
- 6 Make any change needed and place the money you are given in the cash drawer.
- 7 Close the cash drawer.
- 8 Give the customer the receipt, if the cash register is set to print receipts. You are ready to ring up another sale.



 To ring up straight sales with a PLU number and not using the barcode reader

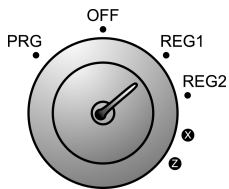


- 1 Put the REG key in the Mode key slot and turn it to the REG1 or REG2 position. You are ready to ring up a sale.
- 2 Using the round Number keys area, type the PLU number of the first item.

- 3 Press the **PLU** key.
- 4 Repeat for the rest of the items.
- 5 When you are done ringing up items, press the **Amount Tend Total** key. The cash drawer opens and the receipt or journal prints.
- 6 Make any change needed and place the money you are given in the cash drawer.
- 7 Close the cash drawer.
- 8 Give the customer the receipt, if the cash register is set to print receipts. You are ready to ring up another sale.


Ringing up Sales with the Barcode Reader

You can also ring up sales using the barcode reader. Before you can ring up sales with the barcode reader, the UPC symbol must be programmed into the cash register with the barcode reader. For more information, see Programming PLUs with the Barcode Reader on page 58.

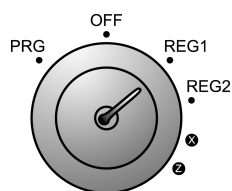

To ring up sales with the barcode reader

 - 1 Put the REG key in the Mode key slot and turn it to the REG1 or REG2 position. You are ready to ring up a sale.
- 2 Put the barcode reader light over the UPC symbol, about ½ inch or closer above the UPC symbol on the product to read the UPC symbol properly.
- 3 Press the button under the scanner. The barcode scanner makes a beep sound and the item appears on the display.
- 4 Continue using the barcode scanner to scan UPC symbols until you are done.
- 5 When you are done, press the **Amount Tend Total** key. The cash drawer opens and the receipt or journal prints.
- 6 Make any change needed and place the money you are given in the cash drawer.
- 7 Close the cash drawer.
- 8 Give the customer the receipt, if you set the cash register to print receipts. You are ready to ring up another sale.




Printing Receipts

REG1 turns the cash register on for all normal sales transactions. All features of the cash register are activated as programmed. A customer receipt is printed for every transaction.


REG2 also turns on the cash register and allows all normal sales transactions just like REG1 mode. However, the built-in printer is turned-off so that customer receipts are **not** automatically printed. If you are a smaller merchant or business, you may not need to print or issue customer receipts. This controls the amount of receipt paper you use. In this case, you do not print a receipt for every transaction and only print a receipt for those transactions where one is required. You must have paper installed in the cash register even if you are using REG2 mode and are not printing receipts.

Depending on how the cash register is programmed, you can print receipts 2 ways:

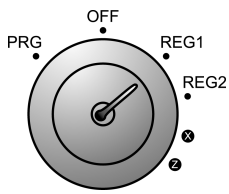

- Automatic Receipt Print - Using REG1 mode, the sales receipt will print automatically for every transaction. You can print a duplicate copy of the previously printed customer receipt if one is necessary.

Put the REG key in the Mode key slot, turn it to the REG1 position, and complete the sales transaction. Before you start the next transaction or any other function, press the **Amount Tend Total** key for a duplicate copy of the customer receipt.

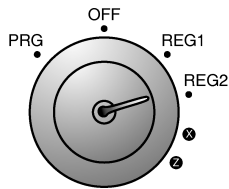

- Receipt on Demand - Using REG2 mode, a customer receipt is not printed automatically, but can be printed by manually requesting one. When REG2 mode is used with the printer turned off, this allows you to conserve receipt paper when the customer receipts are not required for every transaction.

Put the REG key in the Mode key slot, turn it to the REG2 position, and complete the sales transaction. Before you start the next transaction or any other function, press the **Amount Tend Total** key for a print-out of the customer receipt.

To use the Receipt on Demand feature, make sure the Flag options for Flag #21 and 34 are both set to the factory default setting of 1.

- Flag #21 0 = REG2 mode set to Print mode.
 1* = REG2 mode set to Non-print mode. Customer receipts are **not** printed automatically during a sales transaction.
- Flag #34 0 = Disable printing of duplicate receipts
 1* = Allow printing of a duplicate receipt for previous transaction

Using Training Mode

We provide examples to help learn how to use this cash register. For information about the examples, see Examples on page 104. Using the examples can help you learn to use the cash register and the available features.

You can start Training mode at any time because it does not record activity in the machine totals.


When you are using the cash register in Training mode, you cannot use any of the operations in the PRG, X, or Z modes. The transaction numbers and amounts do not count in the Register mode until you stop Training mode.

When the cash register is in Training mode, asterisks **** print instead of transaction numbers. When you stop Training mode, the transaction numbers continue from the last number printed before you entered Training mode.

When the cash register is in Training mode, a small light appears in the left digit of the Clerk display. Some transactions may also print DEMO on the receipt.


To start Training mode

- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.
- 3 Using the round Number keys, press 666666 and then press the **Amount Tend Total** key.
- 4 Now you can move the Mode key to the REG1 or REG2 position so training can start.

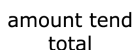To stop Training mode

- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.
- 3 Using the round Number keys, press 555555 and then press the **Amount Tend Total** key.
- 4 Now you can move the Mode key to the REG1 or REG2 position and use the cash register.

Programming Complex Tax Rates

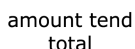Your cash register can manage complex tax rates and assignments. This chapter explains how to do this.

Many people do not need the information in this chapter. If this information does not relate to your business needs, you can skip it. If some information is related to your specific needs, then skip any sections which you do not need to set up your cash register.

If you do not know your sales tax rate and base amount, contact your local government office and ask for your local tax chart. The base tax amount is the maximum point where no tax is charged. Your cash registers defaults to a base tax amount of 10 cents. If your base tax amount is other than 10 cents, see Calculating State Tax Table Codes on page 125.

When you set up your cash register, you programmed the cash register to use a simple sales tax, appropriate for your area. Chapter 2 explains how to program a simple sales tax. Chapter 5 explains how to set up sales tax related to departments or PLUs.

**Note**

If you hear an error tone while you are programming, press the **Clear** key and continue by repeating the step.

You do not need to reprogram all options if you want to update or change one thing. Save this manual in a safe place so you have it for future programming. After you are done programming, you can print Confirmation Reports to check your results. For more information, see Running Reports on page 80.

Setting the Tax Rates

You can program 4 different tax rates on your cash register. Each tax rate can be linked directly to a department key (see Programming Tax Status on page 44), or by pressing the **Tax 1** or **Tax 2** keys before ringing up an entry.

You can set the cash register to not print the tax rate on receipts. For more information, see Programming Flag Options on page 65.

You can program each Tax Rate as follows:

- As an ADD-ON RATE (used in the USA) - means the tax amount is added onto the price of the item sold. Add-on Tax is most common in the United States. Add-on Tax can be programmed as either a fixed-rate which charges tax based on a percentage, or using the tax table codes, which is a calculation based on an approved tax chart issued by your local or state government.
- Canadian Tax System - allows you to program the Goods and Services tax (GST) and Provincial Sales Tax (PST) tax system required in Canada.
- VAT (Value Added Tax) - means that the tax amount is included in the price of the item.

After you have the tax table codes for your state, see Calculating State Tax Table Codes on page 125 for help or contact your local state government office for the current tax rates.

To program a basic tax rate, see Programming the Sales Tax on page 10.

To program a second fixed tax rate

Example 21: To set Tax 2 for 7%

- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.
- 3 Using the round Number keys area, press 2, then press the **Tax 1** key.
- 4 Using the round Number keys area, press 7000, then press the **Amount Tend Total** key.

check

tax 1

amount tend
total

To program add-on tax table rate

Example 22: The tax code for Arizona's tax rate of 4% is:

121-240096-13-19-23-27-27-1029-25-25-25-1025

- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.

check

2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.

tax 1

3 Using the round Number keys area, press 1 and press the **Tax 1** key.

tax 2

4 Using the round Number keys area, press 121 and press the **Tax 2** key.

5 Using the round Number keys area, press 240096 and press the **Tax 2** key.

6 Continue typing any State Tax Table Codes you need. Press the **Tax 2** key after each code until you are done.

clear

Note

If you make a mistake during programming the State Tax Table Codes, press the **Clear** key and begin again with Step 3.

To program a second add-on tax rate

Example 23: Tax code for Arizona's tax rate of 5% is:

101-190095-11-17-20-21-1021-20-20-20-20-1020

1 Put the PRG key in the Mode key slot and turn it to the PRG position.

check

2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.

tax 1

3 Using the round Number keys area, press 2 and press the **Tax 1** key.

tax 2

4 Using the round Number keys area, press 101 and press the **Tax 2** key.

5 Using the round Number keys area, press 190095 and press the **Tax 2** key.

6 Continue typing any State Tax Table Codes mentioned and **press** the **Tax 2** key after each code until finished.

Confirmation Report

To check your results, see Running the Program Confirmation Report on page 80.

To program a VAT tax rate (commonly used in Europe)

You must program Flag 13, as follows:

1 Put the PRG key in the Mode key slot and turn it to the PRG position.

check

2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.

void

3 Using the round Number keys area, press 132 and press the **Void** key.

To program a First VAT tax rate

Example 24: 10% Tax Programming

- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.
- 3 Using the round Number keys area, press 1, press the **Tax 1** key, press 10000, then press the **Tax 2** key.





To program a Second VAT tax rate

Example 25: 5%

- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.
- 3 Using the round Number keys area, press 2, press the **Tax 1** key, press 5000, and then press the **Tax 2** key.





Running Reports

Your cash register includes many reports. In this chapter, we explain:

- Programming confirmation
- The assigned Department keys
- The assigned PLUs
- The tax status of departments and PLUs
- Management reports, such as sales totals

Running the Program Confirmation Report

The Program Confirmation Report allows you to check your programming results. For more information about programming the cash register, see Chapter 5 Setting Up Your Cash Register - Advanced on page 40.

To run a program confirmation report

- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.
- 3 Using the round Number keys, press 999999 and then press the **Amount Tend Total** key.

check

amount tend
total

An example Program Confirmation Report is show below. The figures shown in this example are randomly selected. Your report shows you the specific information about the programming for your cash register.



Note

Flags 28, 30 and 31 do not apply to the U.S. market.

Table 20

This code...	Means this...
T1	Taxable status programmed with a single tax rate.
T2	Taxable status programmed with a second tax rate.
T3	Taxable status programmed with Tax 3 rate.
T4	Taxable status programmed with Tax 4 rate.
TX	Taxable status programmed with more than 1 tax rate.

Running the Department Confirmation Report

You can print a report that shows the programmed information for a range of departments. This is helpful if you want to see the programmed names of some of the departments, but do not need to see all other programming information.

You can also print a report that shows department information and sales. For more information, see Running the Department Sales Report on page 83.

To run a department confirmation report

check

- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.
- 3 Using the round Number keys, press 88.
- 4 Using the round Number keys, press the number of the first department you want to see. For example, 01.
- 5 Using the round Number keys, press the number of the last department you want to see. For example, 15.
- 6 Press the **Amount Tend Total** key.

amount tend
total

Running the PLU Confirmation Report

The PLU Confirmation Report allows you to check all PLUs programmed. For more information about programming PLUs, see Programming PLU Descriptions on page 56.

To run the PLU confirmation report


check

- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.

plu

- 3 Press the **PLU** key.

An example PLU Confirmation Report is show below. Your report shows you the specific information about your programming.

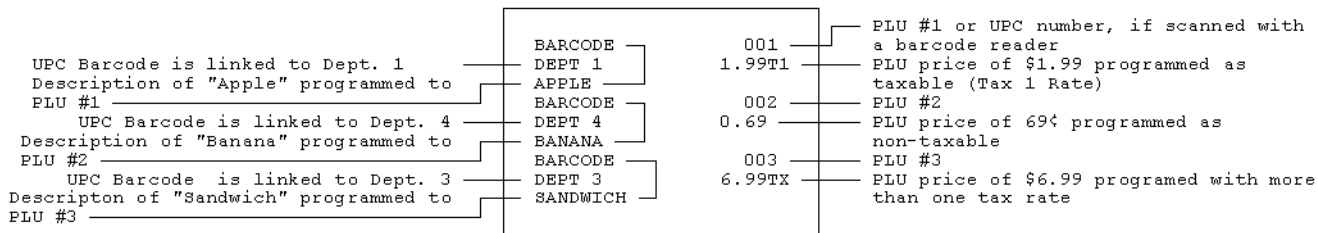

Running the Department Sales Report

The Department Sales Report allows you to check the current sales information for specified departments.

To run a Department sales report

check

- 1 Put the Z key in the Mode key slot and turn it to the X position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.
- 3 Using the round Number keys, press the number of the first department you want to see. For example, 01.
- 4 Using the round Number keys, press the number of the last department you want to see. For example, 15.
- 5 Press the **Amount Tend Total** key. The Department Sales report prints.

amount tend total

Running Management Reports

The cash register maintains totals of all transaction information. This information is saved in the memory of the cash register as long as the register is plugged in to an electrical outlet or, if the cash register is unplugged, the batteries are charged.

Management reports show you information about how sales are progressing. You can run most reports with the Mode key in either the X position or the Z position. See Running a Financial Report on page 86 for instructions to run X and Z reports.

- X reports are run during the day to check transactions. These reports do not clear the transaction memory in the cash register. You can run all reports in the X position.
- Z reports are run at end of day, end of the week, or end of the month. These reports do clear the transaction memory in the cash register.

When you are done printing these reports, the information only exists on the cash register tape. You can run almost all reports in the Z position.

To prevent someone from accidentally printing these reports, a manager password can be set. After the password is set, these reports do not print until the password is entered. For information about setting manager passwords, see Setting X and Manager Passwords on page 35.

Besides passwords, the keys that came with your cash register are also a form of security. We recommend giving clerks the REG keys and giving managers the Z and PRG keys.

For additional security, only the Z and PRG keys can run Z reports. The REG key cannot run Z reports. This means that people with REG keys cannot run or clear the transaction history.

About X Readings

There are two kinds of readings that can be taken in the X position: an X1 reading and an X2 reading.

- X1 Reading - Commonly known as a *mid-day* reading. Use this position to print periodic readings of transaction totals during the course of the day. This reading position does not reset to zero.
- X2 Reading - Commonly known as a *mid-week* or *mid-month* reading. Use this position to print periodic readings of transaction totals during the course of several days. This reading position does not reset to zero.

About Z Readings

There are two types of readings that can be taken in the Z position: a Z1 reading and a Z2 reading.

- Z1 reading – Commonly known as a *end-of-day/daily-closeout* reading. This reading prints all transaction data and sets all totals to zero, except the Running Grand Total.

You can also print a duplicate Z1 Report. This is useful if the register runs out of paper or if there is a power outage while the Z1 Report is printing. This feature can also be turned off by Flag setting 25. For more information about Flags, see Programming Flag Options on page 65.

- Z2 reading – Commonly known as a *weekly* or *monthly* reading. This reading prints transaction totals either on a weekly or monthly basis (not both) and resets all transaction totals to zero except the Running Grand Total.

About Management Reports

The following management reports are available:

- Cash-in-Drawer Report - Only available in the X position. Tells you how much cash is in the drawer at the time of the report.
- Clerk Report - Prints total sales amounts of each Clerk Number.
- Financial Report - Includes totals of departments, tax, net sales, voids, returns, coupons, refunds, minus percentage, plus percentage, receipts-on-account, paid out, cash, check, charge. The running grand total appears only on Z Reports.
- Hourly Report - Provides total sales amounts rung up each hour.
- All PLU Report - Lists quantity and cost of each PLU number rung up.
- Department Range Report - Shows the sales information for the specified departments.
- Electronic Journal Report - Prints the information in the Electronic Journal. Can be run in the X or Z modes.

The different management reports available in the X and Z positions:

This key position...	Prints this report symbol...	This report is available...	This report is also known as...
X	X1	Financial, PLU, Department Range, Clerk, Hourly, Cash-In-Drawer, Electronic Journal	Mid-Day
X	X2	Financial	Mid-Week or Mid-Month
Z	Z1	Financial, PLU, Clerk, Hourly, Electronic Journal	End-Of-Day or Daily-Close-out
Z	Z2	Financial	Weekly or Monthly

Running a Cash-In-Drawer Report

This report shows how much cash is in the cash drawer.

To run a Cash-In-Drawer report

- 1 Put the Z key or the PRG key in the Mode key slot and turn it to the X position.



2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.



3 Press the **Qty/Date** key. The Cash in Drawer report prints.

Running a Clerk Report

The Clerk report shows sales by clerk number. For more information about setting clerk numbers, see Setting Clerk Numbers and Names on page 32.

- A Clerk report in the X position shows sales up to the current hour.
- A Clerk report in the Z position shows sales for the entire day. A Clerk report must be closed out in the Z position.

Note

If you are not using clerk numbers, then you cannot run a Clerk report. You hear an error beep when you press the **Clerk** key.

To run a Clerk report

1 Put the Z key or the PRG key in the Mode key slot and turn it to the X or Z position.



2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.



3 Press the **Clerk** key. The Clerk report prints.

Running a Financial Report

The Financial report shows totals of departments, tax, net sales, voids, returns, coupons, refunds, minus percentage, plus percentage, receipts-on-account, paid out, cash, check, and charge. The running grand total appears only on Z reports.

You can run a copy of the Financial report in the Z position. If other keys are pressed after the first Z reading, the duplicate Z Report will not print. To turn off the duplicate Z Report printing feature, you must change Flag 25. For more information about Flags, see Programming Flag Options on page 65.

Important

A Financial Reading must be closed out in the Z position.

For an example Financial report, see Financial Report Example on page 87.

To print a Financial report

- 1 Put the Z key or the PRG key in the Mode key slot and turn it to the X or Z position.

Note

If you use the Z position, the history is reset in the cash register after the report is printed.

check

- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.

amount tend
total

- 3 Press the **Amount Tend Total** key.

To run a duplicate Z report

Note

Flag # 25 must be set to the factory default setting of "0" for this feature to work.

You can only print one additional copy of the Z report after printing the original.

- 1 Put the Z key or the PRG key in the Mode key slot and turn it to the Z position.

check

- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.

#/st/
ns

- 3 Press the **#/ST/NS** key and the **Amount Tend Total** key. The duplicate Z report prints.

amount tend
total

To take a weekly or monthly financial report (Z2 or X2)

- 1 Put the Z key or the PRG key in the Mode key slot and turn it to the X or Z position.

check

- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.

amount tend
total

- 3 In the round Number keys area, press 99 and the **Amount Tend Total** key. The report prints.

Financial Report Example

Totals are calculated for the Management Reports in the following way.

- NET SALES TOTAL (NET) - Shows the true sales for the day. The Net sales total includes department total (DEPTTL), tax total (T1, T2, T3, T4), and less the coupon discount (COUPON) and less the percentage discount.

Note

Minus percentage discount (DISCOUNT), voids (VOID/CORR) and returns/refunds (REFUND) are all deducted from the department totals and the plus percentage (ADD ON) is added to the department totals. If you do not want the percentage discount and plus percentage reflected in the department totals, see Flag 23 on page 68.

- **GROSS SALES TOTAL (GROSS)** - Shows the total of all sales registered. The Gross Sales Total includes net sales total (NET), coupon discount (COUPON), minus percentage discount (DISCOUNT), return/refund (REFUND), and void (VOID/CORR).

Note

The Percentage Discount [-%] must be done after each item, not on the subtotal amount, for the formula given above to balance as shown.

The Financial report looks like the following. Your specific report looks different, because of your unique cash register activity.

***** * YOUR RECEIPT * * THANK YOU * *****			
DATE	01-24-2001	MC #:1234	MACHINE NUMBER
ACTIVITY COUNTER	Z 1	0001	Z1 COUNTER
	DEPT 1	*20.00T1	DEPARTMENT 1 SALES TOTAL (Tax 1)
	DEPT 2	*28.00T2	DEPARTMENT 2 SALES TOTAL (Tax 2)
	DEPT 3	*33.00TX	DEPART 3 SALES TOTAL (Tax 1 & Tax 2)
	DEPT 4	*40.00	DEPARTMENT 4 SALES TOTAL (Non-Taxable)
	DEPTTL	*121.00	ALL DEPARTMENT TOTALS
	T 1	*2.50	
	T 2	*2.44	TAX AMOUNT TOTAL
	COUPON	*-0.80	COUNT (-) TOTAL
	DISCOUNT	*-1.98%	-% TOTAL
	ADD ON	*2.22%	+% TOTAL
	NET	*125.38	NET SALES TOTAL
REFUND COUNTER	REFUND	*-5.00	REFUND TOTAL
VOID COUNTER	VOID/CORR	*-5.00	VOID TOTAL
CASH SALES COUNTER	GROSS	*133.16	GROSS SALES TOTAL
CHECK COUNTER	CASH	*108.91	CASH SALES TOTAL
CHARGE COUNTER	CHECK	*0.27	CHECK SALES TOTAL
CREDIT COUNTER	CHARGE	*16.00	CHARGE SALES TOTAL
RECEIVED-ON-ACCOUNT COUNTER	CREDIT-1	*1.00	CREDIT 1 SALES TOTAL
PAID OUT COUNTER	RECD ACCT	*10.00	RECEIVED-ON-ACCOUNT TOTAL
NO SALE COUNTER	PAID OUT	*-5.00	PAID OUT TOTAL
	NO SALE		
	C-I-D	*113.91	CASH-IN-DRAWER TOTAL
	G T	*10296.42*	GRAND TOTAL
TIME REPORT WAS TAKEN	PM 5-42	0049	CONSECUTIVE NUMBER

To reset the Z1 counter

check

- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.

return

- 3 In the round Number keys area, press 1 and then press the Z1 Counter starting number as 4 digits (for example 0001) and then press the **Return** key.

To reset the Z2 counter

check

- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.

return

- 3 In the round Number keys area, press 2, then press the Z2 Counter starting number as 4 digits (for example 0001) and press the **Return** key.

To reset the grand total

check

- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.

amount tend total

non tax

- 3 In the round Number keys area, press 777777 and press the **Amount Tend Total** key. Enter the new amount (up to 12 digits) and press the **Non Tax** key.

To print a Department Range report

check

- 1 Put the PRG key in the Mode key slot and turn it to the X position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.

amount tend total

- 3 In the round Number keys area, press the Starting Department number as 2 digits (for example 01). Press the Ending Department number as 2 digits and then press the **Amount Tend Total** key.

Running an Hourly Report

The report shows the number of sales and the total sales amount for each hour. All hours print, even if no sales were made in an hour. Times print using a 24 hour format.

Important

An hourly reading must be closed out in the Z position.

To take an hourly report

- 1 Put the Z key or the PRG key in the Mode key slot and turn it to the X or Z position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.
- 3 In the round Number keys area, press **11** and the **Amount Tend Total** key. The Hourly report prints.



Running PLU Reports

 
The PLU report shows the quantity and cost of each PLU Number rung up. Only PLUs that had sales will print.

Important

A PLU Reading must be closed out in the Z position.

To print a PLU report

- 1 Put the Z or PRG key in the Mode key slot and turn it to the X or Z position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.
- 3 Press the **PLU** key.



To print a PLU sales report, according to an assigned Department number range

- 1 Put the Z key or the PRG key in the Mode key slot and turn it to the X position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.
- 3 In the round Number keys area, specify the Starting Dept Number. It must be 2 digits; for example 01.
- 4 Enter the Ending Dept Number as 2 digits.
- 5 Press the **PLU** key. The sales history for the PLUs assigned to the departments in the specified range prints.



Running an Electronic Journal Reports

The Electronic Journal can hold 5,460-lines of transactions in memory. When the cash register memory is full, no more transactions or information can be stored in memory. Transactions already in memory are kept in memory until the Electronic Journal record is printed in Z-mode or the memory is manually reset.

The Electronic Journal records in the internal memory the line-by-line details of all the transactions and items completed on the cash register and printed on the built-in printer. This includes all sales transactions, any reports run during the day and even using the **#/ST/NS** key for no-sale rings to open the cash drawer.

The cash register warns you when the Electronic Journal memory is nearly full to let you finish the current transaction. Then you can print the Electronic Journal record to prevent any loss of information. When the memory is completely full, the cash register warns you and no additional transaction information can be saved.

You can print the entire Electronic Journal record on the printer in the cash register in either the X Mode or the Z Mode.

- X-Mode: You can print the Electronic Journal record anytime during the day. This prints what is currently in the Electronic Journal memory and **does not** reset the memory.
- Z-Mode: You can print the entire Electronic Journal record and reset the journal memory so everything in memory is erased after printing. Only run this report at the end of the day, after running the standard Z Report for the end-of-the-day sales totals.

Make sure there is a lot of paper on the receipt paper roll so the Electronic Journal reports can print completely.

You cannot download the Electronic Journal record to the PC using the serial connection.

Print a Mid-Day Electronic Journal Report

You can print the Electronic Journal record at anytime during the day without resetting the memory.

To print in the X Mode

- 1 Turn the Mode key to the X position.
- 2 Using the round Number keys area, press 96.
- 3 Press the **Amount Tend Total** key.

amount tend
total

The Electronic Journal record prints and the Electronic Journal memory is not reset.

Print an End-of-Day Electronic Journal Report

You can print the Electronic Journal Z report at the end of the day. This report prints all transactions and clears the memory.

To print in the Z Mode

- 1 Turn the Mode key to the Z position.
- 2 Run the normal end-of-day reports, including a standard Z Report by pressing the **Amount Tend Total** key while in Z Mode.
- 3 Using the round Number keys area, press 96 to print the Electronic Journal record.

amount tend
total

- 4 Press the **Amount Tend Total** key.

The Electronic Journal record prints and the Electronic Journal memory is cleared.

amount tend
total

Note

If you see a EJ - FULL ERROR message on the cash register, go to EJ -FULL Error on page 100 for help on what to do.

Check the Electronic Journal Memory

To check the current status of the Electronic Journal memory for the number of lines used in memory and how many lines remain free:

- 1 Put the PRG key in the Mode key slot and turn it to either the REG1 or REG2 position.
- 2 Press the **QTY/DATE** key twice. The first press displays the date only.
- 3 The memory status with the number of lines that the memory can still accept appear on the operator display.

qty/
date

Maintenance and Options

Follow these steps to make sure your cash register works well.

- Your register must remain uncovered when turned on. This allows the electronic components to properly cool.
- Use a dust cover when the register is not in operation and the control lock key is turned to the OFF position to protect mechanical components from dust.
- Keep beverages and other liquids away from the machine to avoid spills which can damage electronic components. Use the optional protective keytop cover to prevent damage to the cash register.
- Keep the cash register away from dust, dampness, or extreme hot or cold temperatures.
- To clean your cash register, use a soft dry cloth. Do not use harsh solutions containing alcohol or ammonia.
- After storing your cash register in extreme temperatures (below 32 degrees Fahrenheit or above 104 degrees Fahrenheit), allow the temperature inside the machine enough time to reach room temperature before turning it on.
- If you need electronic service, take the cash register to a Royal authorized service center. For more information, see Limited Warranty on page 137.


Installing a New Paper Roll

As you use the cash register, you will need to replace the paper roll. Your cash register has a thermal printer that prints receipts for the customer or a journal tape. Use 2¼ inch (57.5 mm) wide standard thermal register paper.

To install the paper roll


1 Insert the PRG key and turn it to either REG1 or REG2.

- If you need a customer receipt, turn the Mode key to the REG1 position.
- If you do not need a customer receipt, turn the mode key to the REG2 position.

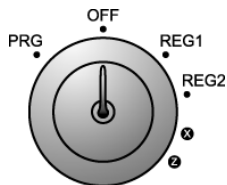


2 Unlock and open the Journal Compartment Cover. Grip the left side of the cover and gently pull upward. Remove the Journal Compartment Cover and set aside.

3 Remove the Journal Takeup spindle. Place the paper roll in the little round area at the bottom of the compartment. Make sure the paper feeds out from the bottom of the roll, towards the front of the cash register.

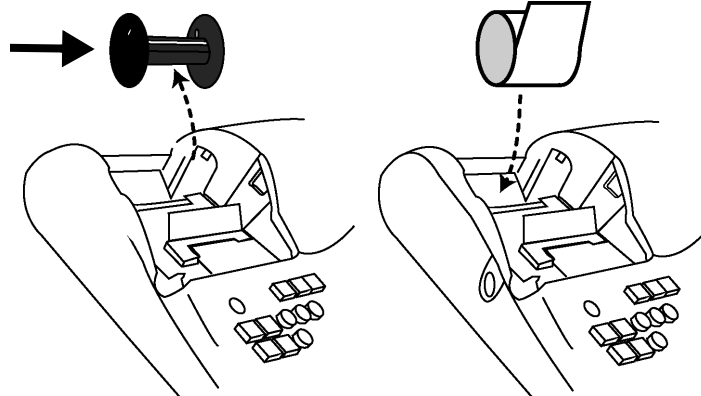

4 Grab the small handle on the right of the print roller. Push the little handle towards the back of the cash register and raise the roller bar up.

5 Lay the end of the paper across the printer as shown. Move the print roller down onto the paper and snap into place. Make sure both sides are snapped down.

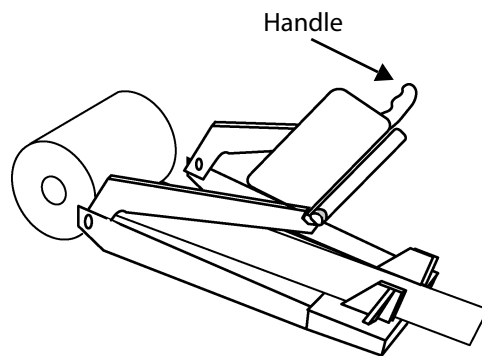


- Press the **Feed** key until the paper catches and moves through the printer.

6 Do one of the following:



- If you do not need to print receipts:
Place the black plastic Journal Takeup spindle on its grooves above the Battery compartment. The spindle sits above the paper roll. Press the **Feed** key to move the paper through the printer about 10-12 inches. Push the paper through one of the narrow openings in the center of the Journal Takeup spindle. Press the **Feed** key until the paper catches and begins to wind securely around the Journal Takeup spindle. Replace the Journal Compartment Cover.
- If you want to print receipts:
Lay the customer receipt paper over the receipt slot and close the Journal Compartment Cover.

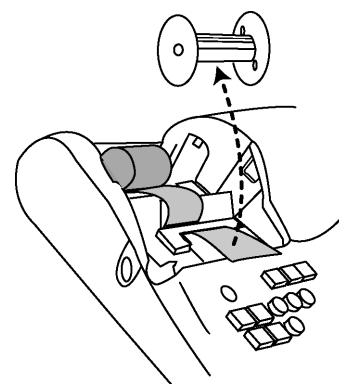

Using the Battery System

Your cash register has a memory where information about your programming and transactions are stored. This memory stores the information that lets you print reports, such as the total sales for the day, week, or month. The cash register memory also stores information about any special programming you have done.

If your cash register is unplugged or if there is a power outage, the batteries keep the information in the memory until you plug the cash register into a power source or the power is restored.

To make sure the battery back-up protection is working, replace the batteries at least once a year. To help you remember, consider replacing the batteries on New Years Day. The cash register can be off or unplugged for as long as 700 hours (about 28 days) and the information in the memory is still there when you are ready to use the register again.

If there was a power outage, replace the batteries as soon as there is power again. **DO NOT** remove or replace the batteries until you plug the cash register into a power source and you see messages on the display.


If you will not use the cash register for an extended period of time, you can remove the batteries to prolong their life. However, all information in the cash register will be erased if you do this.

Caution

You must plug the cash register in before installing or replacing the back-up batteries. All data is erased when you remove the batteries if the cash register is not plugged in before you remove the batteries.


To install or replace the batteries

- 1** Before you start, make sure you have 3 new AA batteries.
- 2** Open the Journal Compartment cover. Remove the cover and put it aside.
- 3** Move the paper roller up and out of the way. Grab the small handle on the right of the print roller. Push the little handle towards the back of the cash register and raise the roller bar up. You see a slope down to the paper compartment. The battery cover is located under the print roller bar, on the slope.
- 4** Remove the battery cover. Press the edge at the top of the cover and push to the back. The cover pops off.
- 5** Put the batteries in the slots. Make sure that the positive and negative ends are in the right place. The batteries have a little plus (positive) and minus (negative) sign on each end to help you.
- 6** Replace the battery cover. Slide the bottom tabs into the long slit in the bottom position and it snap the cover into place. Do not put the tabs in the 2 holes in the bottom of the compartment. The cover will not close and you will break the tabs.

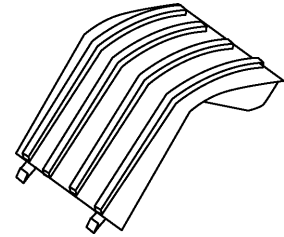

About the Serial Port


Your cash register includes a serial port on the right side of the cash register. You can connect items to the cash register using this serial port. You can only connect one device to the serial port at a time.

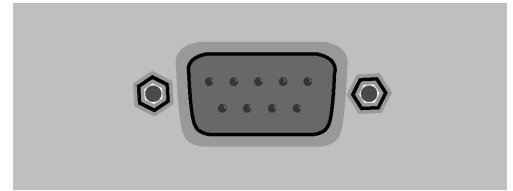

To use the barcode reader, you must connect it to the serial port. You can also connect a computer to the serial port to use the RegisterLink software.

To connect your computer to the serial port, you need a null-modem serial cable. If you purchased the Alpha 601, a serial cable was included in the box. If you purchased the Alpha 600 or if you lost your cable, you can purchase this cable directly from Royal or at any computer supply store.

The pin description for the serial port on the cash register is shown below.

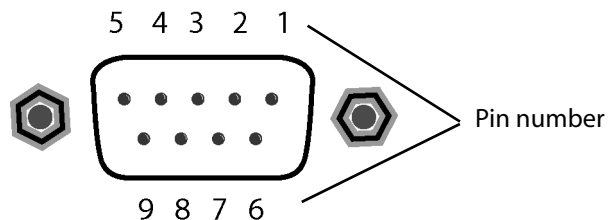

Pin No.	I/O	Signal Name	Abbreviation
1	NC		
2	IN	Receive Data	RXD
3	OUT	Transmit Data	TXD
4	NC		
5	N/A	Signal Grand	SG
6	NC		
7	OUT	(Request to send)	RTS
8	IN	(Clear to send)	CTS
9	OUT(+5V)	Power supply for BCR	+5V

Troubleshooting

Select and follow the procedure which best describes what is happening.

Error Codes

You may see these errors on the display. This table explains what they are and how to fix them.

Table 21

The error message...	Do this...
P R I N T E R	Paper jam or printer failure
E R R O R	Misoperation
C L E R K #	Enter clerk number
E J F U L L	Electronic Journal Full
E R R O R	Communication error

I Hear an Error Beep

 
Some error beeps are normal. See Error Codes on page 38 for more information about error codes.



- 1** Press the **Clear** key.
- 2** Turn the Mode key to the PRG, REG, X or Z position you were in before you got the error.



For example, if the last position you were in was REG, turn the key to the REG position and press the **Clear** key and then press the **Amount Tend Total, Check, or Charge** key to complete a sale. If your last position was PRG, turn the key to the PRG position and press the **Clear** key.



If the last thing you were doing was programming PLUs in the PRG mode, return the PRG key to the PRG position. Press **Clear** and then press **Qty/Date** to leave PLU programming mode.

3 Repeat the procedure you are trying to perform.

- If error still persists, perform a Half System Clear procedure. See Half System Clear on page 102.
- As a last resort, perform a Full System Clear procedure. See Full System Clear on page 103.

Sec code error appears in PRG, X OR Z modes

 
This prompt means a Manager Password is programmed.



▼ Enter the password number and press **Check**.

If Clerk E12 Displays In REG 1 or REG 2 Modes

This prompt means clerk numbers are programmed.



- 1** Enter the clerk number and press **Clerk**.
- 2** Enter the password and press **Check**.

PE Printer Error or Paper End

Both prompts means there is a paper problem.

- 1** Check if you are out of paper.
- 2** Check for a paper jam. If so, carefully remove any paper obstructing the printer.
- 3** Check and make sure the paper was aligned properly in the printer and that the printer bar is snapped into place.



Caution

Do not manually pull the paper. Always use the **Feed** key to remove or advance the paper. Do not use sharp or pointed instruments in the printer area. This can seriously damage the printer.



- 4** After the paper jam is successfully removed, press the **Clear** key. If PE still appears, turn the Mode key to the OFF position. Unplug the cash register, wait 10 seconds, and plug it back in.



5 If there is a FUNCTION error and an E appears on the display, press the **Clear** key.

6 If an FUNCTION error continues to appear, turn the Mode key to the last position (PRG, REG, X or Z) you were in before the error appeared. If the last position you were in was REG, turn the Mode key to the REG position and press the **Clear** key, then press the **Amount Tend Total**, **Check**, or **Charge** key to complete a pending sale.



If your last position was PRG, turn the Mode key to the PRG position and press the **Clear** key.

7 As a last resort, follow the directions for a Full System Clear. See Full System Clear on page 103.

EJ -FULL Error

This prompt means the Electronic Journal is full. The Electronic Journal can hold up to 5,460 lines of transactions. When the memory gets close to full, you see a bar in the lower left of the display and you hear a long beep.



When the memory is completely full, no more transactions can be saved and you see a message in the display that says E.J. -Full. If you are in the middle of a transaction, press the **Clear** key to clear the error message, and continue with the transaction. No additional transaction details or information can be stored in the Electronic Journal memory after you clear this error message.

 
 
To fix this, you need to print the Z report to clear the memory. It is very strongly recommended that immediately after the current transaction is finished, that you either print the Electronic Journal record in Z-Mode or manually reset the Electronic Journal record memory.

Before you start, make sure there is a lot of paper on the receipt paper roll so the Z Electronic Journal reports can print completely.

Note

You cannot download the Electronic Journal record to the PC using the serial connection.

- 1 At the end of the day, turn the Mode key to the Z position.
- 2 Run the normal end-of-day reports, including a standard Z Report by pressing the **Amount Tend Total** key while in Z Mode.
- 3 Using the round Number keys area, press 96 to print the Electronic Journal record.
- 4 Press the **Amount Tend Total** key.




The Electronic Journal record prints and the Electronic Journal memory is cleared.

To manually Rest the Electronic Journal memory

Caution

This step cannot be undone. All information stored in the electronic journal memory is permanently deleted and cannot be recovered.

 - 1 Turn the Mode key to the Z position.
- 2 Using the round Number keys area, press 280602.
- 3 Press the **Amount Tend Total** key.



The Electronic Journal memory is reset and all information stored in the memory is erased. A verification prints that the Electronic Journal reset and the memory is cleared.


The Register Does Not Work at All

- 1 Be sure the cash register is plugged into a working electrical outlet and no other electrical device is using the same power source. Another electrical motor on the same circuit can keep the cash register from working properly.
 - If error still persists, perform a Half System Clear procedure. See Half System Clear on page 102.
 - If the Half System Clear did not work, perform a Partial Reset. See Partial Reset on page 102.
 - As a last resort, perform a Full System Clear procedure. See Full System Clear on page 103.
- 2 If needed, contact the Royal Customer Support hotline at 1-800-272-6229 for additional assistance.

Opening the Drawer When There is no Power

If there is no power and you need to open the drawer, make sure the drawer is unlocked by using the 515 Drawer key.

- 1 With your hands on the cash drawer, carefully tip the front of the register up. Underneath the cash register, toward the back of the register, you see a small lever.
- 2 Push the lever in the only direction it will move. The cash drawer opens.

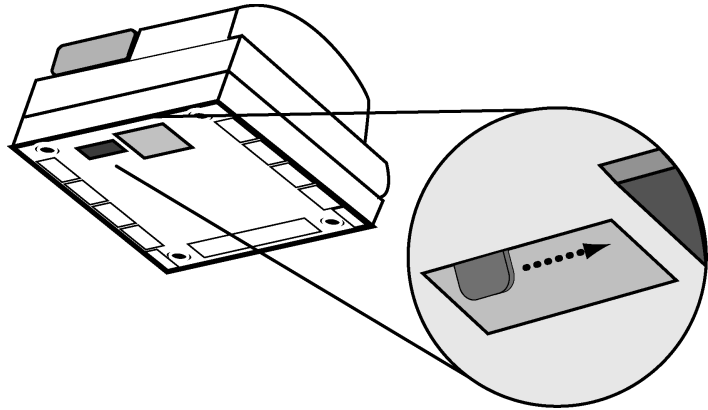

Half System Clear

If you cannot get the cash register to respond, try a half system clear.

To do a half system clear

- 1 Turn the Mode key to the OFF position.
- 2 Unplug the cash register from the power source.
- 3 Wait 30 seconds.
- 4 Plug the cash register in again.
- 5 Continue with normal operations.

Partial Reset

If the cash register did not respond to the Half System Clear, try a Partial Reset. This procedure requires both your hands or a friend to help.

To do a partial reset

- 1 Turn the Mode key to the OFF position.
- 2 Unplug the cash register from the power source.
- 3 Using the round Number keys, press and hold the 3 key and the 7 key at the same time. Continue to hold these keys down.
- 4 While you still hold down the 3 and 7 keys, plug the cash register back into the power source.
- 5 Release the 3 and 7 keys.
- 6 Continue with normal operations.

Full System Clear


If nothing else works, perform the following procedure.

Caution

This procedure resets the cash register to the factory settings. You lose all your transaction information and programming information.

To do a full system clear

- 1 Turn the Mode key to the OFF position.
- 2 Remove one back-up battery.
- 3 Unplug the cash register from the power source and wait 5 minutes.
- 4 Plug in the cash register.
- 5 Replace the battery.
- 6 Reprogram the cash register.
- 7 Continue with normal operations.

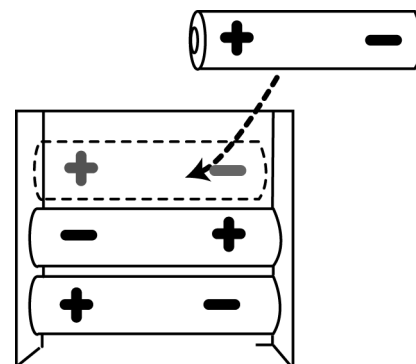

If Nothing Helps

If a problem still persists, call our Customer Service Support Line toll-free at 1-800-272-6229.

Examples

The examples in this section show how to ring up different types of transactions. A maximum of 7 digits may be used to enter a price.

Reminder

If Clerk Numbers are programmed, be sure to type the **CLERK #**, then press the **CLERK** key, the password and the **CHECK** key, if programmed, before ringing up a sale.

To ring up a sale

- ▼ Put the REG key in the Mode key slot and turn it to the REG1 position. You are ready to ring up sales.

Important

You do not need to press the Decimal Point when ringing up a price.

The following examples are in this chapter.

- Adding Tax to a Non-Taxable Department
- Cash Sale With Tendering Change
- Cash Sale Without Tendering Change
- Charge Sale
- Charge Return
- Coupon Discount Sale
- Credit Return
- Credit Sale

-
- Dept Shift Key
 - Exempting Tax On An Item
 - Exempting Tax on the Entire Sale
 - Gallonage Sales Transaction
 - Minus Percentage Discount Sale
 - Multiplication of a Department Unit Price
 - Multiplication Sale
 - Multiplying By A Fraction
 - No-Sale Function
 - Overriding a PLU Sale
 - Paid-Out Sale
 - PLU Sale
 - PLU Sale With PLU Description
 - Plus Percentage Sale
 - Received-On-Account Sale
 - Registering A Department Unit Price
 - Registering A Reference Number
 - Return Sale
 - Split Tendering Sale
 - Temporarily Overriding a PLU Price
 - Use the Error-Correct /Void Key
 - Voiding A Coupon Sale
 - Voiding a Department Preset Price
 - Voiding a Department Preset with a Coupon Discount
 - Voiding a Department Preset with a Minus Percentage Discount
 - Voiding A Minus Percentage Discount Sale
 - Voiding a Multiplication of a Department Preset Price
 - Voiding A Multiplication Sale
 - Voiding a PLU Multiplication Sale
 - Voiding a PLU Sale
 - Voiding a PLU Sale with a Coupon Discount
 - Voiding a Plu Sale with a Minus Percentage Discount
 - Voiding a PLU Sale with a Plus Percentage Rate
 - Voiding a Plus Percentage Sale
 - Voiding A Sale

Sample Receipt

The example below shows the general transaction information you see printed on a receipt.

	* YOUR RECEIPT *			
	* THANK YOU *		STORE LOGO OR MESSAGE	

DATE	01-24-2001	MC #:1234		MACHINE NUMBER
	DEPT 1	*1.00T1		TAX 1 RATE applied to sale
	DEPT 2	*2.00T2		TAX 2 RATE applied to sale
	DEPT 3	*3.00T3		TAX 3 RATE applied to sale
	DEPT 4	*4.00T4		TAX 4 RATE applied to sale
		*0.05T1		TAX 1 AMOUNT
		*0.12T2		TAX 2 AMOUNT
		*0.24T3		TAX 3 AMOUNT
		*0.63T4		TAX 4 AMOUNT

	TOTAL	*11.04		
CASH AMOUNT TENDERED	AMOUNT	*25.00		
	CHANGE	*13.96		
TIME	PM 4-29	0043		TRANSACTION NUMBER

Transaction Codes

The following codes appear on transaction receipts:


Table 22 Transaction Codes

The code...	Means this...
#	Reference Number
@	Amount Being Multiplied
AMOUNT	Amount of Cash Tendered
ADD ON	Plus Percent
CASH	Cash Transaction Total
CHANGE	Change
CHARGE	Charge Transaction Total
CHECK	Check Transaction Total
Clerk #1 to Clerk #n	Clerk number 1 to number n where n= the maximum number of clerks
COUPON	Coupon
CREDIT	Credit card transaction

Table 22 Transaction Codes (Continued)

The code...	Means this...
DISCOUNT	Minus Percent Discount
DUPLICATE RECEIPT	After a transaction, you can print a duplicate receipt by pressing the Subtotal w/Tax key immediately after the original receipt has finished printing and before another transaction is started
NO SALE	No-Sale Function or Open Cash Drawer
PAID OUT	Paid Out
PRICE	Overriding of a PLU Price
RECD ACCT	Received on Account
REFUND	Return (Refund)
SUBTTL	Subtotal (Excludes Tax)
T1	Tax 1 Rate Applied to a Sale
T2	Tax 2 Rate Applied to a Sale
T3	Tax 3 Rate Applied to a Sale
T4	Tax 4 Rate Applied to a Sale
TOTAL	Total of Sale
TX	Represents Tax Total if Option 1 is selected on Flag 24. For more information, see Programming Flag Options on page 65
VOID/CORR	Void
X	Number of Items Being Multiplied

The rest of this chapter shows you example transactions.

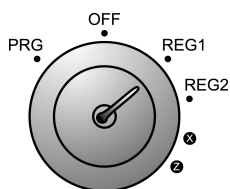


 
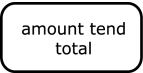
Reminder

Put the REG key in the Mode key slot and turn it to the REG1 position. You are ready to ring up sales.

Adding Tax to a Non-Taxable Department

Example 26: Assume the Department 2 key is programmed for no tax and the TAX 1 rate is programmed for 6%. Ring up a \$1.00 item in Department 2, charging the 6% tax rate.



To add tax to a non-taxable department

- 1 Press the  key.
- 2 In the Number keys area, press 100, and then press the  key.
- 3 Press the  key.


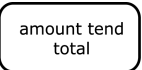
Cash Sale With Tendering Change

Example 27: Ring up a \$1.00 item in Department 1 and compute change from \$5.00 cash tendered.

To ring up a sale with tendering change

- 1 In the Number keys area, press 100, and then press the  key.
- 2 Press the  key.

 

You do not need to press the **Subtotal** key if you do not want the subtotal of a sale to print.

- 3 Press the  key.
- 4 In the Number keys area, press 500, and then press the  key.


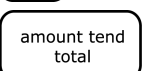
Cash Sale Without Tendering Change

Example 28: Ring up a \$1.00 item in Department 1.

To ring up a sale without tendering change

- 1 In the Number keys area, press 100, and then press the  key.
- 2 Press the  key.



You do not need to press the Subtotal key if you do not want the subtotal of a sale to print.


- 3 Press the  key.
- 4 Press the  key.

Charge Sale

Example 29: Ring up a \$1.00 item in Department 1 and finalize the sale with the charge key.

 To ring a charge sale


 

- 1 In the Number keys area, press 100, and then press the  key.
- 2 Press the  key.

You do not have to enter any amounts before pressing the  key.

Charge Return

Example 30: Refund \$1.00 in Department 1 and credit the return to charge.

To ring a charge return

- 1 Press the  key.
- 2 In the Number keys area, press 100, and then press the .
- 3 Press the  key.

 

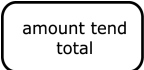
Coupon Discount Sale

Example 31: There are various versions of ringing up a Coupon Discount sale. Based on the option selected for the Tax Status Number, select the example below that best serves your needs.

Version 1a

In the following example, the tax status number for the Coupon key is programmed for the option 00. If no tax is programmed in your cash register, ring up \$1.00 item in Department 2 and then deduct the 20¢ coupon.


To ring a coupon discount sale


- 1 In the Number keys area, press 100 and then press the  key.
- 2 In the Number keys area, press 20 and then press the  key.
- 3 Press the  key.

Version 1b

If you want to charge the tax rate on the original amount of an item, before the coupon is deducted, ring up a \$1.00 item in Department 1 and then deduct the 20¢ coupon.

To ring a coupon discount sale

1 In the Number keys area, press 100 and then press the  key.


2 In the Number keys area, press 20 and then press the  key.


3 Press the  key.

Version 2

In the following example, the TAX STATUS NUMBER for the Coupon key is programmed for the option 01.

To ring a coupon discount sale

1 In the Number keys area, press 100 and then press the  key.

2 In the Number keys area, press 20 and then press the  key.

3 Press the  key.


Credit Return


Example 32: Refund \$1.00 in Department 1 and credit to a credit key.

Note

Dept. 19 and/or Dept.20 keys must be programmed as Credit keys and Flag # 16 correctly set for this example to work. See Programming the Credit Keys on page 55.

To ring a credit return

1 Press the  key.

2 In the Number keys area, press 100 and then press the  key.

3 Press the  or the  key.

It is not necessary to enter any amount before pressing either of the credit keys.


Credit Sale

Example 33: Ring up a \$1.00 item in Department 1 and \$2.00 in Department 2 and finalize the sale with the CREDIT key.

Note

Dept. 19 and/or Dept.20 keys must be programmed as Credit keys and Flag # 16 correctly set for this example to work. See Programming the Credit Keys on page 55.

 To ring a credit sale

1 In the Number keys area, press 100, and then press the  key.

 

 
 

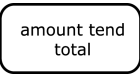
- 2 In the Number keys area, press 200, and then press the  key.
- 3 Press the  or the  key.

It is not necessary to enter any amount before pressing either of the credit keys.

Dept Shift Key

Example 34: Ring up a \$1.00 item in Department 1 (taxable), \$2.00 in Department 21 (non-taxable) and \$3.00 in Department 1 and compute change from \$10.00 cash tendered.

To ring a sale using the Dept Shift key

- 1 In the Number keys area, press 100, and then press the  key.
- 2 In the Number keys area, press 200, then press the  key, and then press the  key.
- 3 In the Number keys area, press 300, and then press the  key.
- 4 Press the  key.
- 5 In the Number keys area, press 1000, and then press the  key.


 
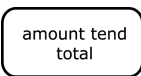
Note

The register returns to the Non-Shift Mode after each department entry.

Exempting Tax On An Item

Example 35: Assume the Department 1 key is programmed as a taxable department. Ring up a \$1.00 item in Department 1 without charging tax.


To ring an item without charging tax


- 1 Press the  key.
- 2 In the Number keys area, press 100, and then press the  key.
- 3 Press the  key.


Exempting Tax on the Entire Sale


Example 36: Assume the Department 1 key is programmed as a taxable department. Ring up a \$1.00 item and a \$1.50 item in Department 1 without charging tax.

 To ring an entire sale without charging tax

 1 In the Number keys area, press 100, and then press the  key.

2 In the Number keys area press 150, and then press the  key.


3 Press the  key.

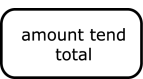
4 Press the  key.


Gallonage Sales Transaction

Example 37: In this example, Department 4 is programmed for Gallonage Mode and is non-taxable. Ring 10.759 gallons at \$1.149 per gallon.

To ring a gallonage sales transaction

 1 In the Number keys area, press 10.579, and then press the  key.

2 In the Number keys area, press 1149, then press the  key.

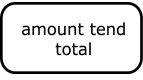3 Press the  key.

Minus Percentage Discount Sale


Example 38: The following are two versions of Minus Percentage Discount Sales.


Version 1

Note


If no tax is programmed in your cash register, ring up a \$1.00 item in Department 2 and apply a pre-programmed discount rate of 10%.

 
To ring a minus percentage discount sale

1 In the Number keys area, press 100, and then press the  key.

2 Press the  key.

Note

If the Minus Percentage Discount Rate is NOT programmed, type in the discount rate before pressing the  key.


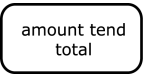
3 Press the  key.

Version 2


Note

When ringing a taxable item with a percentage discount, tax will automatically be charged on the discounted amount, the amount after the percentage discount is deducted.

  To ring a minus percentage discount sale

- 1 In the Number keys area, press 100, and then press the  key.
- 2 Press the  key.

 Note




If the Minus Percentage Discount Rate is NOT programmed, type in the discount rate before pressing the  key.

- 3 Press the  key.

Multiplication of a Department Unit Price

Example 39: Assume the Department 1 key is pre-programmed for \$1.00. Ring up this price three times.

To multiply a department unit price

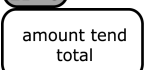- 1 In the Number keys area, press 3, and then press the  key.
- 2 Press the  key.
- 3 Press the  key.


 

Note

You can up to 32 prices by using the 32 Department keys for quick ring-ups.

Multiplication Sale

Example 40: Ring up three \$1.00 items in Department 1.

To ring a multiplication sale

- 1 In the Number keys area, press 3, and then press the  key.
- 2 In the Number keys area, press 100, and then press the  key.
- 3 Press the  key.

Note

You can use from .001 to 999.999 when ringing up the quantity of an item.


 
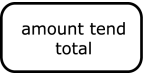
Multiplying By A Fraction

Example 41: Multiply the quantity of 1.25, as in $1\frac{1}{4}$ yards of fabric at \$1.00 per yard in Department 1.

Caution

When multiplying by a fraction, you must use the decimal point in the fraction but not in the dollar amount.

To multiply an item by a fraction

- 1 In the Number keys area, press 1 . 25, and then press the  key.
- 2 In the Number keys area, press 1 0 0, and then press the  key.
- 3 Press the  key.


Note

You can use from .001 to 999.999 when ringing up the quantity of an item.

No-Sale Function

Example 42: Used to open the drawer without ringing up a sale. For example, to give change.

To use the No Sale function

- ▼ Press the  key. The cash register drawer opens.




Note

The number of times the No-Sale key is used appears on the Management Reports. For more information about these reports, see Running Management Reports on page 83.

Overriding a PLU Sale

Example 43: If you need to enter a different price than what is programmed into a PLU #: Enter the price 1 0 0, press the **PLU ALT** key, enter the PLU #, then press the **PLU** key. The word *PRICE* appears above the PLU description or PLU number.

To override a PLU sale

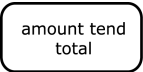- 1 In the Number keys area, press 1 0 0, press the  key.
- 2 In the Number keys area, enter the PLU number, and then press the  key.
- 3 Press the  key.
The word *PRICE* appears above the description or PLU #.

Paid-Out Sale

Example 44: Indicates money taken out of the cash drawer. Ring up \$10.00 to show money paid out of the cash drawer.


To record monies paid out


▼ In the Number keys area, press 1000, then press the  key.

PLU Sale

Example 45: Assume the PLU # is preset for the price of \$1.99 in Department 1. Ring up the PLU #1.

To ring a PLU sale

1 In the Number keys area, press 1, and then press the  key.

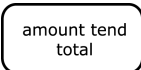2 Press the  key.


Note


PLUs follow the same procedure for ringing up Coupons, Refunds, Minus Percentage Discounts, Plus Percentages, and so on.

PLU Sale With PLU Description

Example 46: PLU #1 has been programmed with the description "APPLE".

To ring a PLU sale with a PLU description

1 In the Number keys area, press 1, and then press the  key.

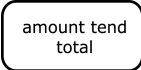2 Press the  key.

Plus Percentage Sale


Example 47: The following are two versions of the Plus Percentage Sale.


Version 1

Note


If no tax is programmed in your cash register, ring up a \$1.00 item in Department 2 and apply a pre-programmed Plus Percentage Rate of 10%.

 To ring a PLU percentage sale

1 In the Number keys area, press 100, and then press the  key.

2 Press the  key.

Note


If the Plus Percentage Rate is NOT pre-programmed, type in the PLUs percentage rate before pressing the  key.

3 Press the  key.

Version 2**Note**

 
When ringing a taxable item with a Plus Percentage the tax will automatically be charged on the amount after the PLUs percentage is added.

To ring a PLUs percentage sale

1 In the Number keys area, press 100, and then press the  key.

2 Press the  key.

Note

If the Plus Percentage Rate is not pre-programmed, type in the Plus Percentage Rate before pressing the  key.

3 Press the  key.

Received-On-Account Sale

Example 48: Indicates money put in the cash drawer. Ring up \$50.00 to show the beginning cash-in-drawer amount for the day.

To receive monies on account


▼ In the Number keys area, press 5000, and then press the  key.

Registering A Department Unit Price

Example 49: Assume Department 1 is pre-programmed for \$1.00. Ring up this price.

To register a department unit price

1 Press the  key.

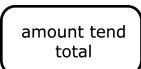2 Press the  key.

Note

You can up to 32 prices by using the total of the 32 Department keys for quick ring-ups.


 
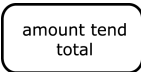
Registering A Reference Number

Example 50: Used to print a number, up to 10 digits, to identify an invoice number, credit card number or any other number on receipts. Ring up the number 1234567 in a standard sale.

Note

Using the reference number is not recorded in any activity counter or sales totals on the Management Reports.


 




To register a reference number

- 1 In the Number keys area, enter the Reference Number up to 10 digits, and then press the  key.
- 2 In the Number keys area, press 100, and then press the  key.
- 3 Press the  key.

Return Sale

Example 51: Refund a \$1.00 item in Department 1 and refund a \$1.50 item three times in Department 1.

 To ring a return sale

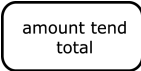- 1 Press the  key.
- 2 In the Number keys area, press 100, and then press the  key.
- 3 Press the  key.
- 4 In the Number keys area, press 3, and then press the  key.
- 5 In the Number keys area, press 150, and then press the  key.
- 6 Press the  key.





Note

The Return function can be performed in the middle of any sales transactions or by itself in a separate transaction


Split Tendering Sale

Example 52: Ring up a \$15.00 item in Department 1, split the total of the sale between \$5.00 in cash payment and \$10.90 in charge payment.

To ring up a Split Tendering sale

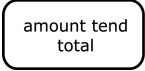- 1 In the Number keys area, press 1500, and then press the  key.
- 2 Press the  key.
- 3 In the Number keys area, press 500, and then press the  key.
- 4 Press the  key.



Note

When using the Split Tendering function, the amount in cash must always be entered first. The sale can also be finalized with the Check key. Substitute the  key in Step 4 of the example above.

Temporarily Overriding a PLU Price

Example 53: If you want to enter a different price than what is programmed into a PLU number.

To override a PLU price


 
 
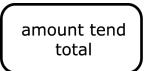
- 1 In the Number keys area, type the price you want, press the  key.
- 2 In the Number keys area, type the PLU number and then press the  key.

The word *PRICE* appears above the PLU description to indicate the overriding of a PLU price.

Use the Error-Correct /Void Key

Example 54: Corrects the last entry run up during a sale. Ring up a \$1.00 item in Department 1, then use the [VOID] key to cancel this entry and ring up a \$10.00 in Department 1 to register a new entry.

 

 

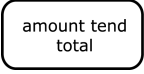
To use the error-correct/void key

- 1 In the Number keys area, press 100, and then press the  key.
- 2 Press the  key.
- 1 In the Number keys area, press 1000, and then press the  key.
- 2 Press the  key.

Voiding A Coupon Sale

Example 55: Void a \$1.00 item in Department 1, void a 20¢ coupon.







To void a coupon sale

- 1 In the Number keys area, press 100, press the  key, and then press the  key.
- 1 In the Number keys area, press 20, press the  key, and then press the  key.
- 2 Press the  key.

Voiding a Department Preset Price

   Example 56: Assume Department 1 is programmed for the price of \$1.00 and Department 2 is programmed for the price of \$2.00. Ring up Department 1 and Department 2 prices, then void the Department 1 entry.

 

 
To void a department preset price

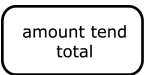

 
 
 

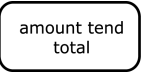
- 1 Press the  key.
- 2 Press the  key.
- 3 Press the  key.
- 4 Press the  key and then press the  key.
- 5 Press the  key.

Voiding a Department Preset with a Coupon Discount

Example 57: Assume Department 1 is programmed for \$1.00 and Department 2 is programmed for \$2.00. Ring up Department 1 and deduct 20¢, ring up Department 2 and deduct 20¢, then void the Department 1 entry with the 20¢ coupon discount.

To void a department preset with a coupon discount









- 1 Press the  key.
- 2 In the Number keys area, press 20, and then press the  key.
- 3 Press the  key.

- 4 In the Number keys area, press 20, and then press the  key.
- 5 Press the  key.
- 6 Press the  key and then press the  key.
- 7 In the Number keys area, press 20, press the  key, and then press the  key.
- 8 Press the  key.

Voiding a Department Preset with a Minus Percentage Discount

    Example 58: Assume Department 1 is programmed for \$1.00, Department 2 is programmed for \$2.00, and the [-%/RA] key is pre-programmed for 10%. Ring up Department 1 and deduct 10%, ring up Department 2 and deduct 10%, then void the Department 1 entry with the 10% discount.

  To void a department preset with a minus percentage discount

- 1 Press the  key and then press the  key.
- 2 Press the  key and then press the  key.
- 3 Press the  key.
- 4 Press the  key, press the  key, and then press the  key.

Note



If the Minus Percentage Discount Rate is not pre-programmed, type in the discount rate before pressing the




Voiding A Minus Percentage Discount Sale

Example 59: Void a \$1.00 item in Department 1 and void a pre-programmed Minus Percentage Discount Rate of 10%.

  
To void a minus percentage discount sale

 - 1 In the Number keys area, press 100, press the  key, and then press the  key.

2 Press the  key.

Note


If the Minus Percentage Discount Rate is NOT pre-programmed, type in the discount rate before pressing the [-%/RA] key.

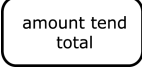3 Press the  key.

Voiding a Multiplication of a Department Preset Price

Example 60: Assume Department 1 is programmed for the price of \$1.00 and Department 2 is programmed for the price of \$2.00. Ring up Department 1 three times and Department 2 two times, then void the Department 1 entry rung up three times.


To void a multiplication of a department preset price

 
1 In the Number keys area, press 3, and then press the  key.


2 Press the  key.

3 In the Number keys area, press 2, and then press the  key.


4 Press the  key.

5 Press the  key.

6 Press the  key.

7 In the Number keys area, press 3, and then press the  key.


8 Press the  key.


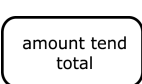
9 Press the  key.

Voiding A Multiplication Sale

Example 61: Void a \$1.00 item in Department 1 three times.

  To void a multiplication sale


 

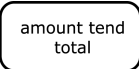
1 In the Number keys area, press 3 and then press the  key.

2 In the Number keys area, press 100, press the  key, and then press the  key.

Voiding a PLU Multiplication Sale

Example 62: Assume PLU #1 is preset for the price of \$1.00 in Department 1. Void PLU #1 three times.

 

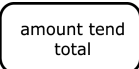
To void a PLU multiplication sale

- 1 In the Number keys area, press 3, press the  key.
- 2 In the Number keys area, press 1, press the  key, and then press the  key.
- 3 Press the  key.

Voiding a PLU Sale

Example 63: Assume PLU #1 is preset for the price of \$1.00 in Department 1. Void PLU #1.






To void a PLU sale

- 1 In the Number keys area, press 1, press the  key, and then press the  key.
- 2 Press the  key.


Voiding a PLU Sale with a Coupon Discount

Example 64: Assume PLU #1 is preset for the price of \$1.00 in Department 1 and deduct a 20¢ coupon. Void this entry.

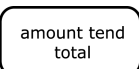




To void a PLU sale with a coupon discount

- 1 In the Number keys area, press 1, press the  key, and then press the  key.
- 2 In the Number keys area, press 20, press the  key, and then press the  key.
- 3 Press the  key.

Voiding a Plu Sale with a Minus Percentage Discount

  Example 65: Assume PLU #1 is preset for the price of \$1.00 in Department 1 and the  key is pre-programmed for 10%. Ring up PLU #1, deduct 10%, then void this entry.

 

 
 
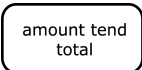
To void a PLU sale with a minus percentage discount

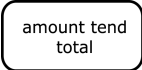- 1 In the Number keys area, press 1, press the  key, and then press the  key.
- 2 Press the  key.
If the Minus Percentage Discount is not pre-programmed, type the discount rate before pressing the  key.
- 3 Press the  key.

Voiding a PLU Sale with a Plus Percentage Rate

Example 66: Assume PLU #1 is preset for the price of \$1.00 in Department 1 and the [+%/PO] key is pre-programmed for 10%. Ring up PLU #1, add 10%, then void this entry.




To void a PLU sale with a PLUs percentage rate

- 1 In the Number keys area, press 1, press the  key, and then press the  key.
- 2 Press the  key.
If the Plus Percentage Rate is not pre-programmed, type in the discount rate before pressing the  key.
- 3 Press the  key.

Voiding a Plus Percentage Sale


Example 67: Void a \$1.00 item in Department 1 and void a pre-programmed Plus Percentage Rate of 10%.

  To void a PLUs percentage sale

- 1 In the Number keys area, press 100, press the  key, and then press the  key.
- 2 Press the  key.

Note


 
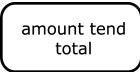
If the Plus Percentage rate is NOT pre-programmed, type in the Plus Percentage Rate before pressing the **+%/PO** key.

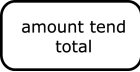- 3 Press the  key.

Voiding A Sale

Example 68: Void a \$1.00 item in Department 1.

To void a sale

- 1 In the Number keys area, press 100, press the  key and then press the  key.
- 2 Press the  key.

Calculating State Tax Table Codes

This appendix shows you how to program your cash register for state tax.

The State Tax Code represents a series of codes which are derived from your State's Retail Tax Chart to give you the highest level of accuracy in charging sales and other taxes.

Calculating Your Tax

This section gives you instructions for figuring your own tax code if your specific state's tax code is not listed in the appendix. Take the time to follow the Example Tax Chart on page 129. Familiarize yourself with the method of determining the tax code.

Then, using The Worksheet on page 130, duplicate the method of calculating your state tax code by the steps described in this section. To do this you need to get a copy of your state's Retail Tax Chart from your local Tax Office. After you are done, write down the tax code and save the information for future reference.

Every tax table consists of tax brackets. Each consecutive tax bracket is assigned a tax which is exactly one cent higher than that assigned to the previous tax bracket. For examples, see Example Tax Chart on page 129.

In our Example Tax Chart, a sale from .00 to .12 is not taxed. The next tax bracket a sale from .13 to .31 is taxed one cent. The next tax bracket a sale from .32 to .54 is taxed two cents. The tax table progresses in a similar pattern.

To calculate your tax rate

- 1 Using The Worksheet on page 130, complete Step A with the appropriate amounts from your state's Retail Tax Chart.
- 2 For the following, see the Example Tax Chart, Step B:

The difference between the starting amounts of each consecutive tax bracket is called a breakpoint. Every tax table consists of a particular sequence of breakpoints.

In our Example Tax Chart, the difference between .00 and .13 is .13 cents. This 13 is the first breakpoint. The difference between .13 and .32 is .19 cents, which means 19 is the second breakpoint.

The breakpoints continue in a particular sequence through the entire tax table. It is this particular sequence of breakpoints that is used to determine the programming code.

- Using The Worksheet, complete Step B by calculating the breakpoints based on your state's Retail Tax Chart.
- The sequence of breakpoints is divided into *Regular* and *Irregular* patterns. All tax tables repeat a pattern of irregular breakpoints that lead into a pattern of regular breakpoints.

To determine the breakpoint pattern, continue calculating the breakpoints in Part B until you have found the Regular repeat breakpoint pattern.

From our example:

Breakpoints 13, 19, 23, 27, 27, 29 are the Irregular breakpoint pattern. Breakpoints 25, 25, 25, 25 are the Regular repeat breakpoint pattern.

The Regular repeat breakpoint pattern is a point where you first see a repetition of one or more numbers, which must then add up evenly to 100, 200, 300, and so on. In our programming example, the Regular breakpoint pattern (25, 25, 25, and 25) adds up to 100.

Using The Worksheet, determine the Regular breakpoint pattern based on your state's Retail Tax Chart.

- 3 For the following, see the Example Tax Chart, Step C:

tax 2

The first number to be programmed consists of the Base Tax followed by the number 1. In PRG position, type your Base Tax number, followed by the number 1, then press the **Tax 2** key.

- The Base Tax - A base tax is defined by local or state government and refers to the minimum point where no tax is charged. If no tax is charged from .0 cents to .12 cents, then .12 cents is your base tax.
- The Number 1 - The programming mode for a tax table is 1. When programming any tax table code this number does not change.

For example: If the base tax is .12 cents: Type 121, then press **Tax 2**. The display shows 1.21.

Using The Worksheet, complete Step A.

4 For the following, see the Example Tax Chart, Step D:

The second number to be programmed is a six digit number. Follow the instructions and examples below to determine your six digit number. In PRG position, type the six digit number and then press the **Tax 2** key.

Example: 4% State Tax Table:

(2)	100	(1)	4	4% Tax Table Rate
	x 24		x 24	Multiplier
	2400		96	Result: The six digit number to be programmed is 240096

- (1) First determine the multiplier¹. The multiplier is the number which when multiplied by the percentage rate equals a whole number as close as possible to the number 100 and still remaining a 2 digit number. In the example above, the multiplier is 24. The number 4 (the percentage rate) is multiplied by 24 to determine the number 96 which is the last two digits of the 6 digit number to be programmed: (24 x 4 = 96).
- (2) The first four digits of the 6 digit number (2400) are determined by multiplying the number 24 by 100 (24 x 100 = 2400). The final resulting 6 digit number to be programmed is 240096.

Using The Worksheet, complete Step D.

5 For the following, see the Example Tax Chart, Step E:

- In PRG position, type the individual breakpoints of the Irregular breakpoint pattern and press the **Tax 2** key after each breakpoint. Place the number 10 before the last breakpoint entry.

Table 23 Example: Irregular breakpoint sequence: 13, 19, 23, 27, 27, 1029

Type...	Press...	Appears as...
13	Tax 2	0.13
19	Tax 2	0.19
23	Tax 2	0.23
27	Tax 2	0.27
27	Tax 2	0.27
1029	Tax 2	10.29

Using The Worksheet, complete Step E.

6 For the following, see the Example Tax Chart, Step F:

1. The easiest way to determine the multiplier is to divide the number 100 by the percentage rate until the result is a whole number as close to 100 as possible and still remaining a 2 digit number.

In PRG position, type the individual breakpoints of the Regular breakpoint pattern and press the **Tax 2** key after each breakpoint. Place the number 10 before the last breakpoint entry.

Table 24 Example: Regular breakpoint sequence 25, 25, 25, 1025

Type...	Press...	Appears as...
25	Tax 2	0.25
25	Tax 2	0.25
25	Tax 2	0.25
1025	Tax 2	10.25

Using The Worksheet, complete Step F.

7 For the following, see the Example Tax Chart, Step G:

To summarize the steps taken in calculating and programming the State Tax Table Code, combine Steps A through F and maintain for future reference.

Note

Programming the State Tax Table Code is done with the Mode key in the PRG position.

121, **Tax 2**, 240096, **Tax 2**, 13, **Tax 2**, 19, **Tax 2**, 23, **Tax 2**, 23, **Tax 2**, 27, **Tax 2**, 27, **Tax 2**, 1029, **Tax 2**, 25, **Tax 2**, 25, **Tax 2**, 25, **Tax 2**, 1025, **Tax 2**.

Using The Worksheet, complete Step G by using the method described.

Example Tax Chart

The following is an example of how a tax chart can look.

Note

A total of 63 breakpoints can be programmed on this cash register.

STEP C: Enter the base tax amount (the minimum point where no tax is charged) followed by the Number "1". Then press the **TAX 2** key.

STEP D: Enter the 6 digit number (i.e. 4% = 240096).

STEP E: Enter the individual Irregular breakpoint pattern. Press the **TAX 2** key after each breakpoint. Place the number 10 before the last Irregular breakpoint. (13, 19, 23, 27, 27, 1029)

STEP F: Enter the individual breakpoints of the "Regular" breakpoint pattern. Press the **TAX 2** key after each breakpoint. Place the number "10" before the last Regular breakpoint. (25, 25, 25, 1025)

STEP G: To summarize, combine the Steps A through F and keep the information for future use.

```
121 TAX 2
240096 TAX 2
13 TAX 2
19 TAX 2
23 TAX 2
27 TAX 2
27 TAX 2
1029 TAX 2
25 TAX 2
25 TAX 2
25 TAX 2
1025 TAX 2
```

		SALE AMOUNT		TAX	AMOUNT
		from	to		
STEP B					
Breakpoints		0	12		0
13	▲	13	31		1
19	▲	32	54		2
23	▲	55	81		3
27	▲	82	108		4
27	▲	109	137		5
29	▲	138	162		6
25	▲	163	187		7
25	▲	188	212		8
25	▲	213	237		9
25	▲	238			10
	▲				
	▲				
	▲				
	▲				

The Worksheet

Write down your results as you go.

STEP A

STEP B

Breakpoints

	SALE AMOUNT		TAX AMOUNT
	from	to	
STEP C:			
STEP D:			
STEP E:			
STEP F:			
STEP G:			

Programming the State Tax

You need to get a copy of your state's Retail Tax Chart so you can know the base tax amount. The base tax amount is the maximum price where no tax is charged. For example, if no tax is charged from 0 cents to 10 cents, then 10 cents is the base tax amount.

After you find out your state's tax rate, you can program it into your cash register.



Note

If you make a mistake or you hear an error beep while you are programming the sales tax, press **Clear** and start over with Step 3.

To program a single fixed tax rate using a base tax amount

Example 69: If the Base Tax Amount is 10 cents and the Tax Rate is 6%:

- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 If you are prompted for a Manager Password, type the password number and then press the **Check** key. If you did not program a Manager Password, go to the next step.
- 3 In the round Number keys area, press 1 and then press the **Tax 1** key.
- 4 Press 104 and then press the **Tax 2** key.
- 5 Press 6000 and press the **Tax 2** key.



Programming Tax in Canada

Follow the instructions in this chapter for programming the Canadian tax system for your cash register.

Setting Flag Options

Set the following three flags to the appropriate settings for your business' needs:

- | | |
|-----------|--|
| Flag # 13 | 0* = USA Tax System (add-on tax system)
1 = Canadian Tax System
2 = VAT Tax System |
| Flag # 17 | 0* = Sets the Non-Taxable Limit without GST tax for Canadian tax mode.
1 = Sets the Non-Taxable Limit with GST tax for Canadian tax mode. |
| Flag # 22 | 0* = Do NOT select Canadian Tax System of "Tax on Tax" piggyback
1 = Select Canadian Tax System of "Tax on Tax" piggyback
2 = Select Canadian Tax System of "Tax on Tax on Tax" piggyback
* = The Factory Default Setting |

To set Flag # 13 to option 1 for the Canadian Tax System:

- 1 Put the PRG key in the Mode key slot and turn it to the PRG position.
- 2 Using the round Number keys, enter the one or two-digit Flag Number. In this example, enter 13.
- 3 Enter the one-digit option number for the proper setting. In this example, enter 1.
- 4 Press the **Void** key.
- 5 Set Flag # 17 and # 22 using the same procedure.
- 6 Go to the next section for the next set of steps.

void

Setting Tax Percentage Rates

Note the following associations in the cash register:

- GST = Tax 1
- PST1 = Tax 2
- PST2 = Tax 3
- PST3 = Tax 4

To program GST as 7%:

- 1 Enter the Tax Number from the list above. Since GST is Tax Rate # 1, press 1.
- 2 Press the **TAX1** key.
- 3 Enter the Non-Taxable Limit. For example, if the Non-Taxable Limit is \$1.00, then enter 100. Do **not** enter any decimal places.

tax 1

Note

Skip step 3 and step 4 if there is no Non-Taxable Limit in your area.

non
tax

- 4 Press the **Non Tax** key.
- 5 Enter the Tax Percentage Rate as a 4-digit number. For example, if the percentage rate is 7%, enter 7000.

tax 2

- 6 Press the **TAX2** key.

To program PST1 as 8%:

- 1 Enter the Tax Number from the chart above. Because PST1 is Tax Rate # 2, enter 2.

tax 1

- 2 Press the **TAX1** key.

- 3 Enter the Non-Taxable Limit. For example, if the Non-Taxable Limit is \$0.50, enter 50. Do **not** enter any decimal places.

Note

Skip step 3 and step 4 if there is no Non-Taxable Limit in your area.



- 4 Press the **Non Tax** key.

- 5 Enter the Tax Percentage Rate as a 4-digit number. For example, if the percentage rate is 8%, enter 8000.



- 6 Press the **TAX2** key.

- 7 Program PST2 and PST3, if needed, following the above steps, but using the correct Tax Rate Number for Step number 1.

- 8 When you are done, go to the next section for the next set of steps.

Linking Tax Rate(s) To Each Department

The list below shows the Canadian tax chart.

00	Non-Taxable
01	GST only
05	GST and PST1
06	GST and PST2
07	GST and PST3
11	GST and PST1 and PST2
12	GST and PST1 and PST3
13	GST and PST2 and PST3

To link tax rates to departments, follow the general steps below. For more detailed information about linking tax rates to departments, see *Setting Up Your Cash Register - Advanced* on page 40. Remember to use the tax chart in this section.

To program a department:

- 1 Enter 000.

- 2 Enter the 2-digit number from the Canadian Tax Chart above. For example, for GST tax only, enter 01.



- 3 Press the **Sub-Total w/Tax** key.

- 4 Enter the price, or enter 0 if you do not want to program a default price.

- 5 Press the Department Key for the department number you are programming.



- 6 Enter an alphanumeric description.

- 7 Press the **Check** key.

Product Information

Specifications and Safety

Table 25 Specifications And Safety

Feature	Description
Type	Electronic cash register
Displays	Two line alphanumeric operator display One line alphanumeric customer display
Capacity	7 digit input and 10 digit readout
Printer	ECR exclusive alpha numeric printer.
Ink Source	Thermal alphanumeric printer - no ribbon needed
Paper Supply	Standard thermal paper Royal Reorder # 013127
Memory Battery Protection	Roughly 28 days after power interruption
Technology	CMOS RAM
Power Consumption	Standby - 28W, Operating - 47W
Operating Temperature	0-40 Degrees Centigrade (32-104 Degrees Fahrenheit)
Dimensions	10¼" x 16½" x 13¾"
Weight	20.0 lbs.

Safety and Legal Notices

- The power outlet for this cash register must be located near the unit and be easily accessible.
- Do not use this cash register outdoors in the rain or near any source of liquid, such as a pool.

FCC Warning

This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to correct the interference.

- The back-up power system: When you are not using your cash register, keep it plugged in with the control lock key in the OFF position. Back-up power is provided through the batteries, but this should not be used for long periods of time.

Proposition 65 Notice

The following is given in accordance with California Proposition 65.

WARNING: This product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.
Wash hands after handling.

Trademark Notice

All trademarks, registered trademarks and service marks mentioned in this manual and with this product are for identification purposes only and are the property of their respective holders.

Copyright

© 2004 by Royal Consumer Information Products, Inc.

Limited Warranty

ROYAL ELECTRONIC CASH REGISTER AND TIME CLOCK LIMITED WARRANTY

Royal Consumer Information Products, Inc. (“Royal”) at 379 Campus Drive, 2nd Floor, in Somerset, NJ 08875 USA warrants that your NEW Royal Electronic Cash Register or Time Clock (“Product”) is free of defects of workmanship and materials. If there is a defect or malfunction of this Product, Royal will repair the Product free of charge as follows:

PARTS: New or comparable rebuilt parts in exchange for defective parts for ONE YEAR from the date of purchase.

LABOR: All labor charges incurred from a Royal Authorized Service Center or the Royal Corporate Service Center are covered for 90 DAYS from the date of purchase. After 90 days there will be a labor charge for repair of the Product and/or assemblies such as the keyboard, display(s), logic board, power supply and printer(s) at the Royal Corporate Service Center's or the Royal Authorized Service Center's then prevailing rates. The Product must be brought to a Royal Authorized Service Center nearest to your location; or the Product must be shipped postage prepaid, insured and via a traceable shipping method to a Royal Authorized Service Center or to the Royal Corporate Service Center. Royal will pay return postage from the Royal Corporate Service Center during the labor warranty period only.

This warranty does not apply to persons who purchased this Product second hand or used.

This warranty does not include the replacement of ink rolls, ribbons, time cards, paper rolls or any other consumable or supplies used in the cash register or time clock and consumed through the normal use of the Product.

This warranty does not include cleaning, adjustments, parts, or repairs required by circumstances beyond the control of Royal, including, but not limited to, fire or other casualty, accident, neglect, abuse, abnormal use, misuse or battery leakage damages. **THERE ARE NO OTHER EXPRESSED WARRANTIES EXCEPT AS STATED HEREIN. AFTER THE PERIOD OF EXPRESSED WARRANTY SET FORTH HEREIN, THERE ARE NO EXPRESSED OR IMPLIED WARRANTIES AND THOSE EXCLUDED INCLUDE THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.** Royal shall NOT be liable for **CONSEQUENTIAL DAMAGES** resulting from any failure, defect, or malfunction of this Product. Some states do not allow limitations on how long an implied warranty lasts and some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

TO OBTAIN SERVICE UNDER THE TERMS OF THIS WARRANTY:

- Pack your Product in the original carton or equivalent.
- Enclose a copy of the bill of sale or other documentation showing original purchase date.
- Enclose a card or note describing the difficulty you have had with the Product.
- Be sure to include your complete name, address and day-time telephone number.
- Bring or ship, prepaid and insured, via a traceable shipping method the above Product to the nearest Royal Authorized Service Center location or to the Royal Corporate

Service Center. The Royal and/or the Service Center cannot be held responsible for any loss or damage that occurs while in transit.

For Authorized Service Centers within your local area, please call 1-888-261-3888 or +1-732-563-9944. In Canada call 1-888-266-9380. Or you may call the Royal Corporate Service Center directly at 1-708-615-8124 for shipping instructions and additional information.

Please retain the original proof of purchase for your records to establish date of original purchase. Your warranty starts with the date of original purchase. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

This warranty is valid only on cash registers and time clocks purchased, delivered and used in the United States and/or Canada.

Software Licensing Agreement

TERMS. The product which you have purchased from Royal contains software (“the Software”) which is owned by Royal and/or third parties which have provided the same to Royal and which is protected by the United States copyright laws and treaty provisions. By purchasing this product containing the Software, you are agreeing to be bound by the terms of this license. If you do not agree to this license, you must not use the product but rather immediately return it to your point of purchase for a full refund. Any such return must be made within any applicable time period established for returns at the point of purchase, but in no event later than 30 days after purchase. Your use of the product shall be deemed acceptance of this license.

GRANT OF LICENSE. With the purchase of your product from Royal, Royal grants you the right to use the Software, which is contained in the product. This grant is only for the specific person, which has purchased the product. In other words, the license, which accompanies each product, is only for one person.

RESTRICTIONS. You may not copy the Software, decompile it, duplicate it, modify it or reverse engineer it in any fashion.

RIGHTS. The Software is provided to you in an “as is” condition by Royal. **ROYAL MAKES NO WARRANTY WHATSOEVER WITH RESPECT TO THE SOFTWARE AND ALL EXPRESS OR IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE SPECIFICALLY DISCLAIMED.** All other rights with respect to the Software, except as set forth in this license, are specifically retained by Royal or the owner of the Software. Nothing in this license constitutes a waiver of any rights Royal or the owners of the Software may have under any applicable copyright law or any other United States federal or state law.

GOVERNING LAW. This license is governed by the laws of the State of New Jersey.

Settings Tables

This section shows you all the tables of codes and other settings you need in one convenient place. These tables are also listed throughout this manual.

Alphanumeric Code Chart

Use the tables in this section to help you set up alphanumeric descriptions such as department names, clerk names and other text that appears on displays and receipts.

Use this table for lower case letters and numbers.

Table 26 Letters and numbers

Character	Code Number	Character	Code Number
Space	00	s	20
Wide Character	01	t	21
a	02	u	22
b	03	v	23
c	04	w	24
d	05	x	25
e	06	y	26
f	07	z	27

Table 26 Letters and numbers

Character	Code Number	Character	Code Number
g	08		
h	09	Numbers	
i	10	0	30
j	11	1	31
k	12	2	32
l	13	3	33
m	14	4	34
n	15	5	35
o	16	6	36
p	17	7	37
q	18	8	38
r	19	9	39

Use this table for punctuation and foreign characters.

Table 27 Special Characters and Punctuation

Character	Code Number	Character	Code Number
i	80	?	28
¿	81	!	29
á	82	@	40
é	83	/	67
í	84	:	68
ó	85	#	69
ú	86	&	70
Ä	93	%	71
Ü	94	\$	72
Ö	95	, (comma)	73
İ	96	(74

Table 27 Special Characters (Continued) and Punctuation

Character	Code Number	Character	Code Number
ü	97)	75
Ñ	98	*	76
ñ	99	+	77
		-	78
		.	79
		(period)	
		;	87
		(semi colon)	
		>	88
		'	89
		(apostrophe)	
		"	90
		<	91
		=	92

Flags

The following table shows all Flags settings and their actions. Bold numbers are the default.

Table 28 Flag options

This Flag number...	Sets these actions...	Set to...
1	The Grand Total does not reset after a Z reading.	0
	The Grand Total resets after a Z reading.	1
2	Subtotal prints on sales receipts when #/ST/NS key is pressed.	0
	Subtotal does not print on sales receipts when #/ST/NS key is pressed.	1
3	Tendering of change is not required.	0
	Tendering of change is required.	1

Table 28 Flag options (Continued)

This Flag number...	Sets these actions...	Set to...
4	The Date prints as Month-Day-Year.	0
	The Date prints as Day-Month-Year.	1
5	Z1 and Z2 Counter Numbers do not reset after a Z1 or Z2 report.	0
	Z1 and Z2 Counter Numbers reset after a Z1 or Z2 report.	1
6	Tax Rate Amount prints on sales receipts.	0
	Tax Rate Amount does not print on sales receipts.	1
7	Skips amounts equaling zero on financial reports.	0
	Does not skip amounts equaling zero on financial reports.	1
8	The Date prints on sales receipts and management reports.	0
	The Date does not print on sales receipts and management reports.	1
9	The Time prints on sales receipts and management reports.	0
	The Time does not print on sales receipts and management reports.	1
10	The Consecutive Number prints on the receipt.	0
	The Consecutive Number does not print on the receipt.	1
11	The Clerk Name prints on sales receipts.	0
	The Clerk Name does not print on sales receipts.	1
12	Clerk System inactive.	0
	Clerk System active.	1
13	USA Tax System.	0
	Canadian Tax System.	1
	VAT Tax System.	2
14	Z1/Z2 Counter prints.	0
	Z1/Z2 Counter does not print.	1

Table 28 Flag options (Continued)

This Flag number...	Sets these actions...	Set to...
15	Tax amount prints after the sales total on the sales receipt.	0
	Tax amount prints before the total amount on the sales receipt.	1
16	Standard Department Keyboard layout.	0
	Department 20 is Credit 1.	1
	Department 19 is Credit 2.	2
	Department 20 is Credit 1 and Department 19 is Credit 2.	3
17	Sets the non-Taxable Limit without GST tax for Canadian tax mode.	0
	Sets the non-Taxable Limit with GST tax for Canadian tax mode.	1
18	Time appears on the display and prints in 24 hour mode.	0
	Time appears on the display and prints in 12 hour (am/pm) mode.	1
19	Sets the language for the cash register. The options are:	
	English	0
	Spanish	1
	French	2
	German	3
20	A Clerk Number is not required before each transaction.	0
	A Clerk Number is required before each transaction.	1
Note Flag # 12 must be set to 1 so the clerk system is active before any setting for Flag # 20 can take effect.		
21	Receipt printer is turned ON in Reg2 mode.	0
	Receipt printer is turned OFF in Reg2 mode.	1

Table 28 Flag options (Continued)

This Flag number...	Sets these actions...	Set to...
22	Do not select Canadian tax system of Tax on Tax	0
	Select Canadian Tax on Tax system.	1
	Select Canadian Tax on Tax on Tax system.	2
Note Flag # 13 must be set to 1 before setting this flag.		
23	-% is subtracted and +% is added to department totals on X/Z readings.	0
	-% is not subtracted and +% is not added to department totals on X/Z readings.	1
24	TAX amounts print separately on sales receipts.	0
	TAX amounts print as one figure on sales receipts. The letters "TX" print next to the total of tax.	1
25	Duplicate Z report can be printed.	0
	Duplicate Z report cannot be printed.	1
26	Consecutive receipt number resets after Z1 Report.	0
	Consecutive receipt number does not reset after Z1 Report.	1
27	0 price registration is allowed.	0
	0 price registration is not allowed.	1
28 (Europe Only)	Euro convert function is allowed.	0
	Euro convert function is not allowed.	1
29	Tax rate does not print on financial report in VAT mode.	0
	Tax rate prints on financial report in VAT mode.	1
30 (Europe Only)	Print converted total at convert tender.	0
	Print converted total always tender.	1
31 (Europe Only)	Local base currency.	0
	Euro base currency.	1

Table 28 Flag options (Continued)

This Flag number...	Sets these actions...	Set to...
32	Allow Clerk numbers without security code.	0
	Clerk must also enter the 3 digit security code.	1
33	The Header message does not print.	0
	The Header message prints.	1
34	Second receipt cannot be issued. Receipt reprint option disabled.	0
	Second receipt can be issued. Receipt reprint option enabled.	1
35	Only transaction totals for each receipt are stored in the Electronic Journal.	0
	Line-by-line transaction details for each receipt are stored in the Electronic Journal.	1
<p>Note Flag # 36 must be set to 0 (active) before any setting for Flag # 35 can take effect.</p>		
36	Activate Electronic Journal.	0
	De-activate Electronic Journal.	1
37	Do not print Footer message at the bottom of the receipt.	0
	Print Footer message at the bottom of the receipt.	1
38	Print blank lines in the Header and Footer.	0
	Do not print blank lines in the Header and Footer.	1
39	Prints a blank line for that specific line of the Header message or Footer message.	0
	Prints the factory default text for that one specific line of the Header message or Footer message.	1

Language Table

The following table shows the text your cash register prints in the languages programmed in your cash register.

Table 29 Language Descriptions

ENGLISH	SPANISH	FRENCH	GERMAN	PRINT LOCATION
COUPON	CUPON	COUPON	MINUS	SALES RECEIPT
DISCOUNT	DESCUENTO	REMISE	RABATT	SALES RECEIPT
ADD ON	INCREMENTO	MAJORATION	AUFSCHLAG	SALES RECEIPT
CHARGE	CARGO	C-CREDIT	KREDIT	SALES RECEIPT
VOID/CORR	ANUL/CORRC	CORRECTION	STORNO	SALES RECEIPT
SUBTTL	SUBTOTAL	SOUS-TOTAL	ZWSUMME	SALES RECEIPT
CHANGE	CAMBIO	RENDU	RUCKGELD	SALES RECEIPT
CASH	EFFECTIVO	ESPECES	BAR	SALES RECEIPT
PRICE	PRECIO	PRIX	PREIS	SALES RECEIPT
AMOUNT	CANTIDAD	MONTANT	BETRAG	SALES RECEIPT
CHECK	CHEQUE	CHEQUE	SCHECK	SALES RECEIPT
T1	T1	T1	S1	SALES RECEIPT
T2	T2	T2	S2	SALES RECEIPT
T3	T3	T3	S3	SALES RECEIPT
T4	T4	T4	S4	SALES RECEIPT
REFUND-	REEMBOLSO	RETOUR	RUCKZAHLUNG	SALES RECEIPT
TOTAL	TOTAL	TOTAL	GESAMT	SALES RECEIPT
PAID OUT	SALIDAS	SORTIE	AUSZAHLUNG	SALES RECEIPT
RECD ACCT	A CUENTA	ENTREE	EINZAHLUNG	SALES RECEIPT
NO SALE	NO VENTA	NON-VENTE	NULL BON	SALES RECEIPT
COUPON	CUPON	COUPON	MINUS	PROGRAM PRINT
DISCOUNT	DESCUENTO	REMISE	RABATT	PROGRAM PRINT
ADD ON	INCREMENTO	MAJORATION	AUFSCHLAG	PROGRAM PRINT
CHARGE	CARGO	C-CREDIT	KREDIT	PROGRAM PRINT
R-A-	A CUENTA	ENTREE	EINZAHLUNG	PROGRAM PRINT
P-O-	SALIDAS	SORTIE	AUSZAHLUNG	PROGRAM PRINT
VOID/CORR	ANUL/CORRC	CORRECTION	STORNO	PROGRAM PRINT
SUBTTL	SUBTOTAL	SOUS-TOTAL	ZWSUMME	PROGRAM PRINT
PLU NO.	PLU NO	PLU-NO	PLU-NR	PROGRAM PRINT
T1	T1	T1	S1	PROGRAM PRINT

Table 29 Language Descriptions (Continued)

ENGLISH	SPANISH	FRENCH	GERMAN	PRINT LOCATION
T2	T2	T2	S2	PROGRAM PRINT
T3	T3	T3	S3	PROGRAM PRINT
T4	T4	T4	S4	PROGRAM PRINT
COUPON	TL-CUPON	TL-COUPON	MINUS	MANAGEMENT REPORT
DISCOUNT	DESCUENTO	TL-REMISE	RABATT	MANAGEMENT REPORT
ADD ON	TL-INCREM	TL-MAJOR	AUFSCHLAG	MANAGEMENT REPORT
CHARGE	CARGO	TL-C-DRED	KREDIT	MANAGEMENT REPORT
VOID/CORR	ANUL/CORRC	TL-CORREC	STORNO	MANAGEMENT REPORT
RECD ACCT	A CUENTA	TL-ENTREE	EINZAHLUNG	MANAGEMENT REPORT
PAID OUT	SALIDAS	TL-SORTIE	AUSZAHLUNG	MANAGEMENT REPORT
NO SALE	NO VENTA	TL-NON-VTE	NULL BON	MANAGEMENT REPORT
CHECK	CHEQUE	TL-CHEQUE	SCHECK	MANAGEMENT REPORT
DEPTTL	TOTAL DPTO	TL-DEPART	WG TOTAL	MANAGEMENT REPORT
REFUND	REEMBOLSO	TL-RETOUR	RUCKZAHLNG	MANAGEMENT REPORT
TAX 1	T1	TL-TVA1	T1	MANAGEMENT REPORT
TAX 2	T2	TL-TVA2	T2	MANAGEMENT REPORT
TAX 3	T3	TL-TVA3	T3	MANAGEMENT REPORT
TAX 4	T4	TL-TVA4	T4	MANAGEMENT REPORT
NET	NETO	TL-NET	NETTO	MANAGEMENT REPORT
GROSS	BRUTO	TL-BRUT	BRUTTO	MANAGEMENT REPORT
GT	GRAN TOTAL	GT	GT	MANAGEMENT REPORT
C-I-D	EFFECTIVO CAJA	NET-TIROIR	G-I-S	MANAGEMENT REPORT
CASH	EFFECTIVO	TOT-ESPECE	BARGELD	MANAGEMENT REPORT

Appendix D: Settings Tables

Table 29 Language Descriptions (Continued)

ENGLISH	SPANISH	FRENCH	GERMAN	PRINT LOCATION
T1	T1	T1	S1	MANAGEMENT REPORT
T2	T2	T2	S2	MANAGEMENT REPORT
T3	T3	T3	S3	MANAGEMENT REPORT
T4	T4	T4	S4	MANAGEMENT REPORT
TX	TX	TX	TX	MANAGEMENT REPORT
TOTAL	TOTAL	TL-PLU	GESAMT	PLU REPORT
PLU	PLU	PLU	PLU	PLU REPORT
TOTAL	TOTAL	TL-VENDEUR	GESAMT	CLERK REPORT
CLERK	CAJERO	VENDEUR	KASSIERER	CLERK REPORT
C-I-D	EFFECT CAJA	NET-TIROIR	G-I-S	CASH-IN-DRAWER
NET	NETO	TL-NET	NETTO	MONTHLY REPORT
GROSS	BRUTO	TL-BRUT	BRUTTO	MONTHLY REPORT
T1	T1	TL-TVA1	T1	MONTHLY REPORT
T2	T2	TL-TVA2	T2	MONTHLY REPORT
T3	T3	TL-TVA3	T3	MONTHLY REPORT
T4	T4	TL-TVA4	T4	MONTHLY REPORT
MC #:	MC#	CR-NO	MC#	MACHINE NUMBER
YOUR RECEIPT	SU RECIBO	VOUS REMERCIE	IHRE RECHNUNG	SALES RECEIPT
THANK YOU	GRACIAS	DE VOTRE CONFIANCE	VIELEN DANK	SALES RECEIPT
DEPT	DPTO	DEPT	WARENGRP	DEPT RECEIPT
CLERK	CAJERO	VENDEUR	KASSIERER	CLERK NAME
TIME	HORA	HEURE	ZEIT	TIME REPORT
CREDIT-1	CRED-1	CART CRED 1	KRED-1	CREDIT-1
CREDIT-2	CRED-2	CART CRED 2	KRED-2	CREDIT-2 t
PLU No	PLU No	ARTICLE	ARTIKEL	PLU NAME
HAVE A NICE DAY	QUE TENGA UN BUEN DIA	BONNE JOURNEE	AUF WIEDERSEHEN	SALES RECEIPT
PLEASE COME AGAIN	VUELVA A VISITARNOS	REVENEZ NOUS VOIR	KOMMEN SIE BALD WIEDER	SALES RECEIPT
TAX n RATE	TARIFAnIVA	TAUXn TVA	MWSTn	DISPLAY DURING PROGRAMMING

Table 29 Language Descriptions (Continued)

ENGLISH	SPANISH	FRENCH	GERMAN	PRINT LOCATION
CLERK PASS	COD CAJERO	CODE VEND	VERK CODE	DISPLAY DURING PROGRAMMING
CLERK NAME	NOMBRE CAJ	NOM VEND	VERK NAME	DISPLAY DURING PROGRAMMING
DEPT PRICE	PRECIO DEP	PRIX DEPT	WG PREIS	DISPLAY DURING PROGRAMMING
DEP _{nn} NAME	NOMBRE D _{nn}	NOM DEPT _{nn}	WG _{nn} NAME	DISPLAY DURING PROGRAMMING
LOGO LINE _n	LOGO LIN _n	L _n LOGO H	LOGO _n KOPF	DISPLAY DURING PROGRAMMING
FOOT LINE _n	PIE PAG L _n	L _n LOGO B	LOGO _n FUSS	DISPLAY DURING PROGRAMMING
CRED1 NAME	NOMBRE CR1	NOM CRED 1	KARTE1NAME	DISPLAY DURING PROGRAMMING
CRED2 NAME	NOMBRE CR2	NOM CRED 2	KARTE2NAME	DISPLAY DURING PROGRAMMING
PRG/Z PASS	COD PGR/Z	CODE PRG/Z	PRG/Z CODE	DISPLAY DURING PROGRAMMING
X PASS	CODIGO X	CODE X	X CODE	DISPLAY DURING PROGRAMMING
GT PRESET	PRE GT	PROG GT	GT PROG	DISPLAY
IDLE-1 MES	MENS 1	M 1 REPOS	LEERLF-1	DISPLAY DURING PROGRAMMING
IDLE-2 MES	MENS 2	M 2 REPOS	LEERLF-2	DISPLAY DURING PROGRAMMING
SALES MES.	MENS FINAL	M VENTE	VERK MES.	DISPLAY DURING PROGRAMMING
MODE MES.	MEN M PROG	MODE	MODE MES.	DISPLAY DURING PROGRAMMING
OFF MES.	MEN M APAG	ARRET	AUS MES.	DISPLAY DURING PROGRAMMING
SEC CODE	COD SEGURI	COD SECRET	GEHEIMCODE	DISPLAY
NON TAX	SIN IVA	SANS TVA	OHNE MWST	DISPLAY
DATE	FECHA	DATE	DATUM	DISPLAY
ERROR	ERROR	ERREUR	FEHLER	DISPLAY
ENTER PLU#	INTRO PLU#	ENTR PLU#	EING.PLU#	DISPLAY
RE-CLERK#	RE CAJERO#	VENDEUR #	VERKAEUFR#	DISPLAY
P.RESET	P RESET	R A O PROG	PROG NEU	DISPLAY
LOCAL	LOCAL	DEVISES	FREMDWAEG	DISPLAY
EURO	EURO	EURO	EURO	DISPLAY
CONV.NET	CONV NET	NET. CONV	NETTO UMRG	DISPLAY

Table 29 Language Descriptions (Continued)

ENGLISH	SPANISH	FRENCH	GERMAN	PRINT LOCATION
FREE nnnnL	LIBREnnnnL	nnnnL ELJ	nnnnL E.J.	DISPLAY
ELECTRIC JOURNAL	DIARIO ELECTRONI	JOURNAL ELECTRO	ELECTRON JOURNAL	ELECTRONIC JOURNAL REPORT
E.JOURNAL CLEAR	BORRAR REP ELEC	REMISE O ELJ	E. JOURN LOESCHEN	ELECTRONIC JOURNAL REPORT
E.JOURNAL USED	DIA ELEC USADO	ELJ UTILISE	E. JOURN EIN	ELECTRONIC JOURNAL REPORT
E.JOURNAL FREE	DIA ELEC LIBRE	ELJ DISPONIBLE	E. JOURN FREI	ELECTRONIC JOURNAL REPORT
BAR CODE	BAR CODE	CODE BARRE	BAR CODE	MANAGEMENT REPORT
OFF TIME	FUERA TIEM	TEMPS DEP	AUS ZEIT	MANAGEMENT REPORT
LOCAL	LOCAL	DEVISES	FREMDWAEG	MANAGEMENT REPORT
EURO	EURO	EURO	EURO	MANAGEMENT REPORT
PLU NUMBER	PLU NO.	NUMERO PLU	PLU-NR.	DISPLAY DURING PROGRAMMING
PLU PRICE	PLU PRECIO	PRIX PLU	PLU-PREIS	DISPLAY DURING PROGRAMMING
PLU NAME	PLU NOMBRE	NOM PLU	PLU-NAME	DISPLAY DURING PROGRAMMING
E.J.-FULL	D.E. SAT	J.E.-PLEIN	EJ VOLL	DISPLAY
CLOSED, NEXT REGISTER PLEASE	CERRADA; ACUDA A OTRA CAJA	FERMEE. CAISSE SUIVANTE SVP	GESCHLOSSEN, NACHSTE KASSE BITTE	DISPLAY - SCROLLING MESSAGE
PLEASE WAIT	ESPERE, POR FAVOR	VEUILLEZ PATIENTER	BITTE WARTEN	DISPLAY - SCROLLING MESSAGE
PLEASE TAKE YOUR RECEIPT	TOME SU RECIBO, POR FAVOR	SVP, PRENEZ VOTRE RECU	NEHMEN SIE BITTE IHREN KASSENZETTEL	DISPLAY - SCROLLING MESSAGE
GOOD MORNING	BUENOS DIAS	BONJOUR	GUTEN MORGEN	DISPLAY - SCROLLING MESSAGE
GOOD AFTERNOON	BUENAS TARDES	BONJOUR	GUTEN TAG	DISPLAY - SCROLLING MESSAGE

Transaction Codes

The following codes appear on transaction receipts:

Table 30 Transaction Codes

The code...	Means this...
#	Reference Number
@	Amount Being Multiplied
AMOUNT	Amount of Cash Tendered
ADD ON	Plus Percent
CASH	Cash Transaction Total
CHANGE	Change
CHARGE	Charge Transaction Total
CHECK	Check Transaction Total
Clerk #1 to Clerk #n	Clerk number 1 to number n where n= the maximum number of clerks
COUPON	Coupon
CREDIT	Credit card transaction
DISCOUNT	Minus Percent Discount
DUPLICATE RECEIPT	After a transaction, you can print a duplicate receipt by pressing the Subtotal w/Tax key immediately after the original receipt has finished printing and before another transaction is started
NO SALE	No-Sale Function or Open Cash Drawer
PAID OUT	Paid Out
PRICE	Overriding of a PLU Price
RECD ACCT	Received on Account
REFUND	Return (Refund)
SUBTTL	Subtotal (Excludes Tax)
T1	Tax 1 Rate Applied to a Sale
T2	Tax 2 Rate Applied to a Sale
T3	Tax 3 Rate Applied to a Sale
T4	Tax 4 Rate Applied to a Sale

Table 30 Transaction Codes (Continued)

The code...	Means this...
TOTAL	Total of Sale
TX	Represents Tax Total if Option 1 is selected on Flag 24. For more information, see Programming Flag Options on page 65
VOID/CORR	Void
X	Number of Items Being Multiplied

US Tax Status Numbers

When you program US tax codes, use the following table.

Table 31 Tax status settings

This tax status number...	Means this...
00	Non-Taxable (use this if you do not want to charge tax)
01	Taxable by TAX 1 Rate
02	Taxable by TAX 2 Rate
03	Taxable by TAX 3 Rate
04	Taxable by TAX 4 Rate
05	Taxable by TAX 1 and TAX 2 Rates
06	Taxable by TAX 1 and TAX 3 Rates
07	Taxable by TAX 1 and TAX 4 Rates
08	Taxable by TAX 2 and TAX 3 Rates
09	Taxable by TAX 2 and TAX 4 Rates
10	Taxable by TAX 3 and TAX 4 Rates
11	Taxable by TAX 1, TAX 2 and TAX 3 Rates
12	Taxable by TAX 1, TAX 2 and TAX 4 Rates
13	Taxable by TAX 1, TAX 3 and TAX 4 Rates
14	Taxable by TAX 2, TAX 3 and TAX 4 Rates
15	Taxable by TAX 1, TAX 2, TAX 3 and TAX 4 Rates



Ordering Supplies and Accessories

Table 32 Accessories

Item	Part Number
Thermal Register Tape (3-roll package) 2¼" (57mm) wide, 2" (50mm) diameter, 85' (26m) long	013127
Protective Keytop Cover	013218
Replacement 4 Slot Bill Tray & Drawer (Coin Tray not included)	CD510002
Replacement 5 Coin Tray	CD500002
Duplicate Cash Drawer 1 set of 2 keys	47300511
Duplicate Control Lock Key Set 6 keys: PRG-427-023, REG-427-024 & Z-427-012, 2 each	47100324
Replacement Journal Paper Roll Spindle	TBD
Replacement UV light bulb for Counterfeit detector	00-02701200
Owner's Manual	A600/601IM1002A
Replacement Model PS700 Barcode Reader	16881W

Table 32 Accessories (Continued)

Item	Part Number
RegisterLink PC-based software, replacement	RLNC
RegisterLink serial cable, replacement. Included with the Alpha 601. Purchase separately for the Alpha 600.	RLCC
RegisterLink software and serial cable, replacement	RLKIT

For Prices and Availability

Call 1-888-261-4555 Monday - Friday 8:30 - 5:00 p.m. (E.S.T.) or visit our web site at www.royal.com.

Prices and Availability Subject to Change Without Notice



Index

A

about

- management reports 85
- numeric display 14
- serial port 97
- X readings 84
- Z readings 84

accessories, ordering 153

alphanumeric code chart 24, 47, 139

amount of time messages appear 54

automatic receipt printing 74

B

barcode reader

- installing 6
- programming 6
- programming PLUs 58
- ringing up sales 73
- setting up PLUs 58

batteries

- locating 3
- putting in 3
- replacing 95

before going to register mode 37

C

Canadian tax system 77

Canadian tax.tax, programming for Canada 132

cash drawer

- closing 17
- opening 17

changing tax rates 77

character chart, programming 24, 139

chart, alphanumeric codes 47

check the Electronic Journal memory 92

clearing errors 38

clerk

- names, setting 32
- system 32

clerk numbers

- setting 32
- using 33

clerk system, using 33

closing, cash drawer 17

code chart, alphanumeric 24, 47, 139

codes, transaction 106, 151

complex tax rates 77

confirming your settings 36

contacting Royal 2

counterfeit detector feature 18

coupon discounts, programming 61

credit, keys, programming 55

customer display

- closing 12
- opening 12

customer service, contacting 2

D

department

- keys, programming 41
- names, programming 46
- number keys, using 46
- preset price, programming 45

description tables 146

- languages 146

discounts, programming 60

- display messages
 - changing languages 8
 - programming display time 52
- display, operator 13
- double wide characters
 - programming 27
 - receipts 27

E

- Electronic Journal memory, checking 92
- Electronic Journal, reports 91
- error
 - codes 38
 - EJ FULL 100
 - fixing 38
 - PE Printer 99
 - Sec code 99
 - sounds 38
- error codes, troubleshooting 98
- errors, clearing 38
- example
 - adding tax to a non taxable department 108
 - cash sale with tendering change 108
 - cash sale without tendering change 108
 - charge sale 109
 - coupon discount sale 109
 - credit return 110
 - credit sale 110
 - debit purchase 111
 - dept shift key 111
 - exempting tax on an item 111
 - exempting tax on the entire sale 112
 - gallonage sales transaction 112
 - minus percentage discount sale 112
 - modify tip 113
 - multiplication of a department unit price 113
 - multiplication sale 113
 - multiplying by a fraction 114

- no-sale function 114
- overriding a PLU sale 114
- paid-out sale 115
- PLU sale 115
- PLU sale with PLU
 - description 115
- PLUs percentage sale 115
- received-on-account sale 116
- registering a department unit price 116
- registering a reference number 117
- return sale 117
- split tendering sale 118
- tax chart 129
- using error-correct (void) key 118
- voiding a coupon sale 119
- voiding a department preset price 119
- voiding a department preset with a coupon discount 119
- voiding a department preset with a minus percentage discount 120
- voiding a minus percentage discount sale 120
- voiding a multiplication of a department preset price 121
- voiding a multiplication sale 121
- voiding a PLU multiplication sale 122
- voiding a PLU sale 122
- voiding a PLU sale with a coupon discount 122
- voiding a PLU sale with a minus percentage discount 123
- voiding a PLU sale with a PLUs percentage rate 123
- voiding a PLUs percentage sale 124
- voiding a sale 124

F

- FCC warning 136

- financial reports 86
- flag options, programming 65
- footer message
 - double wide 27
 - programming 28
 - setting 30
 - worksheet 28
- full
 - report example 87
 - system clear, about 39

G

- getting help 2

H

- half system clear, about 39
- HDLO, programming 44
- header message
 - double wide characters 27
 - programming 28
 - single wide characters 26
 - worksheet 28

I

- installing
 - paper roll 5
 - register tape 5
- installing, barcode reader 6

K

- keyboard, using 16

L

- languages 8
 - description tables 146
 - selecting 68, 143
 - setting 8
- location of keys 16

M

- making messages scroll fast or slow 54

- manager
 - passwords 35
 - passwords, setting 35
- memory backup batteries 3
- messages, setting footer 30
- minus percentage discounts, programming 60
- Mode key area, using 14
- O**
- opening, cash drawer 17
- operator display 13
- ordering
 - accessories 153
 - supplies 2
- ordering more register tape 153
- P**
- paper money, verifying 18
- paper roll, installing 5
- Partial 39
- partial, system clear, about 39
- parts, ordering 153
- passwords
 - clerk, setting 32
 - manager 35
 - setting manager 35
 - setting X 35
- PE Printer error 99
- PLU description, programming 56
- PLUs, programming the barcode scanner 58
- programming
 - barcode reader 6
 - clerk numbers 32
 - coupon discounts 61
 - credit keys 55
 - department keys 41
 - department names 46
 - department preset price 45
 - discounts 60
 - double wide characters 27
 - flag options 65
 - footer messages 28
 - header messages 27, 28
 - High Digit Lock-out (HDLO) 44
 - manager password 35
 - message in the display 52
 - minus percentage discounts 60
 - multiple and single items 43
 - numbers in header messages 27
 - PLU description 56
 - plus percentage add ons 64
 - PLUs with the barcode scanner 58
 - scrolling messages 52
 - single wide characters 26
 - tax rates 77
 - tax status 44
- programming tax in Canada 132
- programming the UV light 21
- Proposition 65 warning 136
- Q**
- quick start program confirmation report, printing 36
- R**
- receipt messages, setting 30
- receipt on demand 74
- register mode, before going to 37
- register tape
 - installing 5
 - ordering 153
 - replacement 153
- RegisterLink software 7
- replacement register tape 153
- replacing batteries 95
- reports
 - about 85
 - cash-in-drawer 85
 - clerk reports 86
 - confirmation 82
- department confirmation 83
- Electronic Journal 91
- example 87
- financial 86
- full 86
- hourly 89
- management 83
- program confirmation 80
- quick start program confirmation 36
- X 83
- Z 83
- ringing up sales 71
 - barcode reader 73
- Royal, contacting 2
- running
 - cash-in-drawer reports 85
 - clerk reports 86
 - department confirmation reports 83
 - financial reports 86
 - full reports 86
 - hourly reports 89
 - management reports 83
 - PLU confirmation reports 82
 - PLU reports 90
 - program confirmation reports 80
- running an Electronic Journal reports 91
- S**
- safety notice 136
- scanning items 73
- scrolling message, setting display time 52
- scrolling messages
 - amount of time messages appear 54
 - faster or slower 54
 - programming 52
- serial port
 - about 97
 - connectors 97

setting

- alphanumeric descriptions 23
 - amount of time messages
 - appear on the display 54
 - clerk names 32
 - clerk numbers 32
 - decimal points 59
 - footer messages 30
 - languages 8, 68, 143
 - machine numbers 34
 - manager passwords 35
 - rounding rates 60
 - scrolling messages 52
 - standard or gallonage mode 43
 - tax rates 77
 - X passwords 35
- setting up 8
- barcode scanner 58
- settings, confirming 36
- single wide characters
- programming 26
 - receipts 26
- software for PCs 7
- software licensing agreement 138
- software, RegisterLink 7
- specifying tax rates 77
- supplies, ordering 2

T

- tables, description 146
- tax
 - chart, example 129
 - status, programming 44
 - worksheet 130
- tax rates
 - Canadian 77
 - setting 77
 - VAT 77
- technical information, serial port 97
- Training mode, using 75
- transaction codes 106, 151
- troubleshooting 98
 - Clerk E12 99
 - EJ Full error 100
 - error beeps 98
 - error codes 98
 - full system clear 103
 - half system clear 102
 - partial reset 102
 - register does not work 101
 - Sec error 99

U

- using
- cash drawer 17
 - clerk system 33, 34
 - department number keys 46

- displays 22
 - double wide characters 27
 - keyboard 16
 - Mode key area 14
 - single wide characters 26
 - Training mode 75
- UV light, programming 21

V

- VAT tax system 77
- VAT tax, programming 132
- verifying paper money 18

W

- warning, FCC 136
- warning, Proposition 65 136
- warranty 137
- worksheet
 - footer message 28
 - header message 28
 - tax 130

X

- X
- passwords, setting 35
 - reports, about 83

Z

- Z reports, about 83