 


# 60cm Built-in Electrical Cooktop

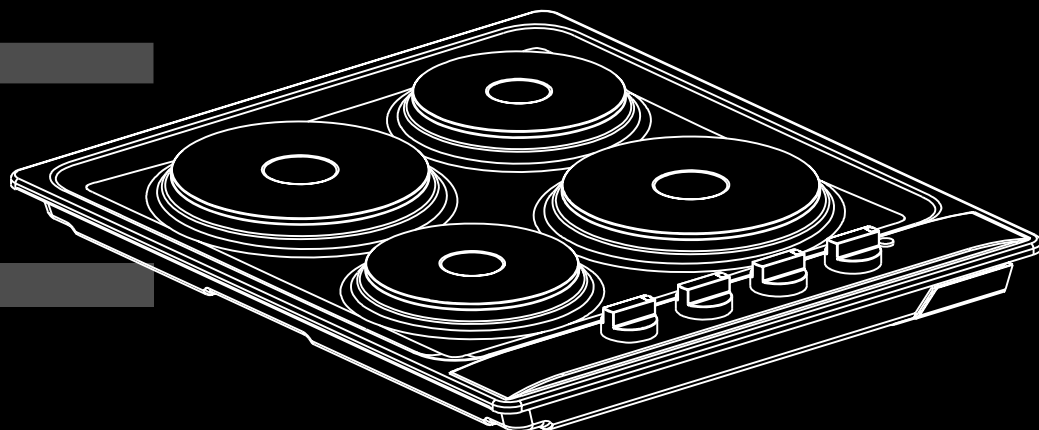

## Installation and User manual

### Content

Safety instructions-----	2
Features of your product-----	4
Installing the appliance-----	5
Start using your appliance-----	7
Maintenance -----	9
Warranty-----	10

For warranty service call 1300 373 199(Australia)  
or 0508 123108(New Zealand) to connect you to  
the nearest authorised service centre

**BCS604X-1**  
**BCS604X-1F**

## Safety instructions

This manual explains the proper installation and use of your appliance, please read it carefully before using even if you are familiar with the product. The manual should be kept in a safe place for future reference. In case of failure, only the Authorized Technical Service may repair this hob. Otherwise the guarantee will be null and void.

### Warning

#### General safety

- The appliance may only be installed and connected by trained, registered service engineers.
- Built-in appliances may only be used after they have built in to suitable built-in units and work surfaces that meet standards.
- In the event of faults with the appliance or damage, the appliance must be switched off and disconnected from the electrical supply, to prevent the possibility of an electric shock.
- Repairs to the appliance must only be carried out by trained registered service engineers.
- The technical and identification data for the hob figure on the reference plate fixed to the appliance.
- This reference plate must be consulted before making the electrical connections.
- The electrical connections must be made by specialist aware to the legal and regulatory, requirements in each country.
- If the cable is damaged in any way it must be replaced by the manufacturer or after sale service or by authorized technical staff, to avoid hazard.

#### Correct use

- People (including children) who, because of their physical, sensory or mental capabilities or their inexperience or ignorance are not able to use the device safely, should not use this device without supervision or instruction by a responsible person.
- This appliance should be used only for normal domestic cooking and frying of food.
- The appliance must not be used as a work surface or as a storage surface.
- Additions or modifications to the appliance are not permitted.
- Do not place or store flammable liquids, highly inflammable materials or fusible objects (e.g. plastic film, plastic, aluminum) on or near the appliance.

- Do not heat an empty pan on the appliance.

#### Children's safety

- The cooking zones will become hot when you cook. Therefore, always keep small children away from the appliance.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- To avoid small children and pets unintentionally switching the appliance on, we recommend activation of the child safety device.

#### Safety during use

- There is the risk of burns from the appliance if used carelessly.
- Cables from electrical appliances must not touch the hot surface of the appliance or hot cookware.
- Overheated fats and oils can ignite very quickly. Warning! Fire hazard!
- Switch the cooking zones off after each use.
- Users with implanted pacemakers should keep their upper body at least 30 cm from heating cooking zones that are switched on.
- Risk of burns! Do not place objects made of metal, such as knives, forks, spoons and saucepan lids on the cooking surface, as they can get hot.



## Safety instructions

 
### Safety when cleaning

- For cleaning, the appliance must be switched off and cooled down.
- For safety reasons, the cleaning of the appliance with steam jet or high pressure cleaning equipment is not permitted.

### How to avoid damage to the appliance

- Objects that melt and things that boil over should be removed straightaway.

- Do not use the cooking zones with empty cookware or without cookware.
- To avoid damaging cookware, do not allow saucepans or frying pans to boil dry.
- The ventilation gap of 5mm between the worktop and front of the unit underneath it must not be covered.

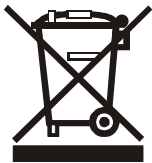


### Disposing of the device

When disposing of the device, do not bring it to regular municipal waste containers. Instead, bring it to electrical and electronic waste recycling and reuse center. A relevant label has been put on the device, its instructions manual, or the package. The device has been manufactured of recyclable material. By bringing old device to recycling collection center, you show that you care about nature.


Ask your local environmental care authority for information on location of such facilities.

 Features Of Your Product

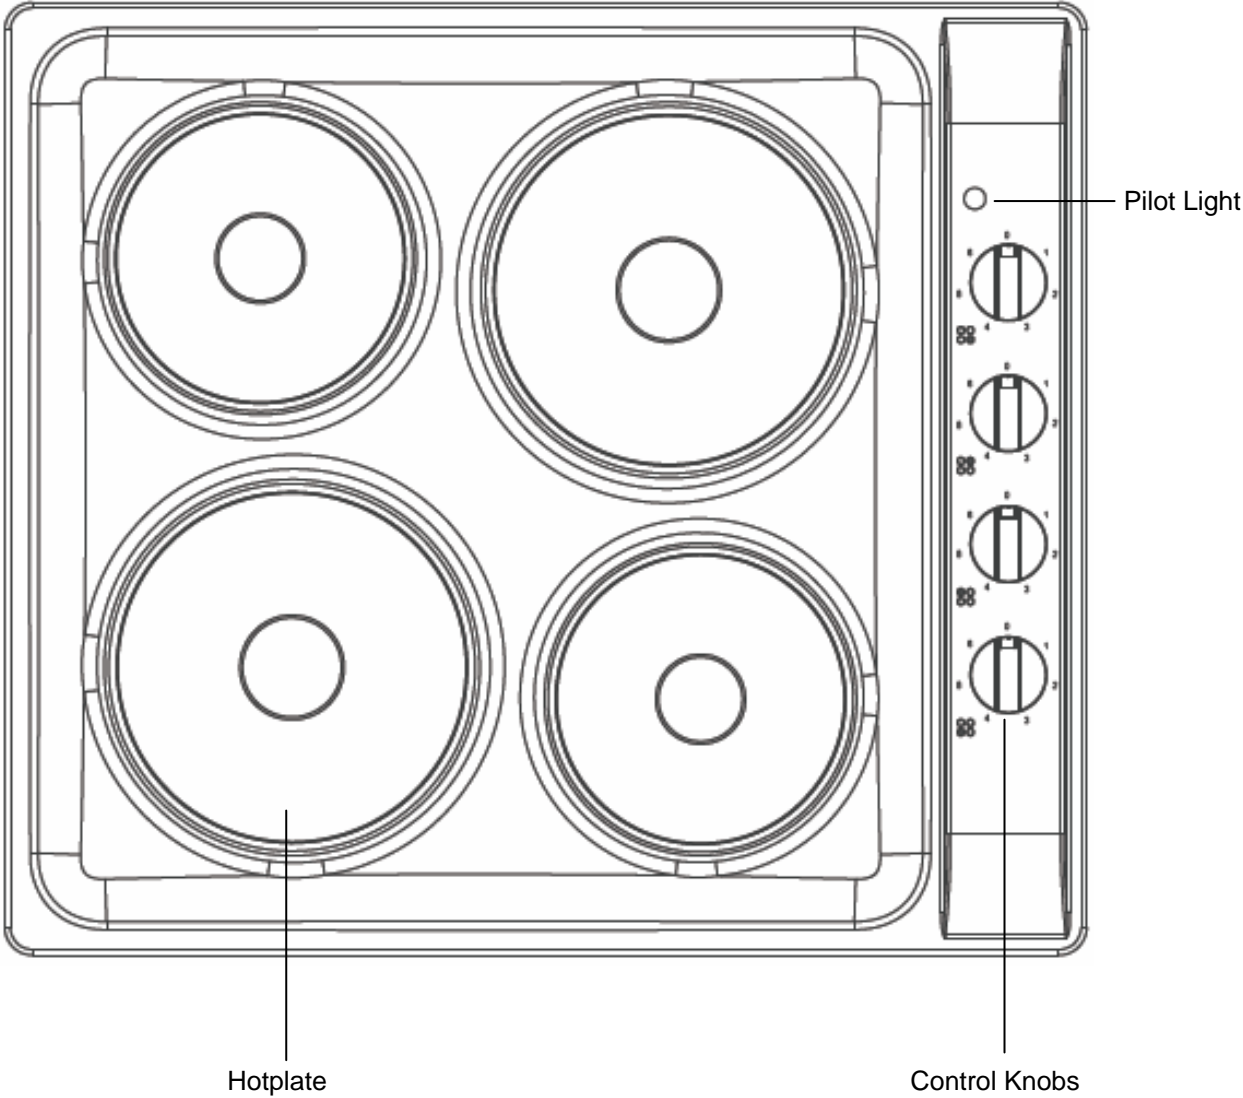

Technical Data				Accessories	
Model	Product Dimensions (h x w x d) mm	Electrical Connection	Max. Power Rating	Description	QTY
BCS604X-1 BCS604X-1F	45x580x510	220-240V/50Hz	5500 W	User Manual	1
Heating Elements	Left-upper	1000 W	Ø 155mm	 ST4.2x22	4
	Right-lower	1000 W	Ø 155mm		4
	Right-upper	1500 W	Ø 188mm		
	Left-lower	2000 W	Ø 188mm	Installation bracket	

## Installing The Appliance

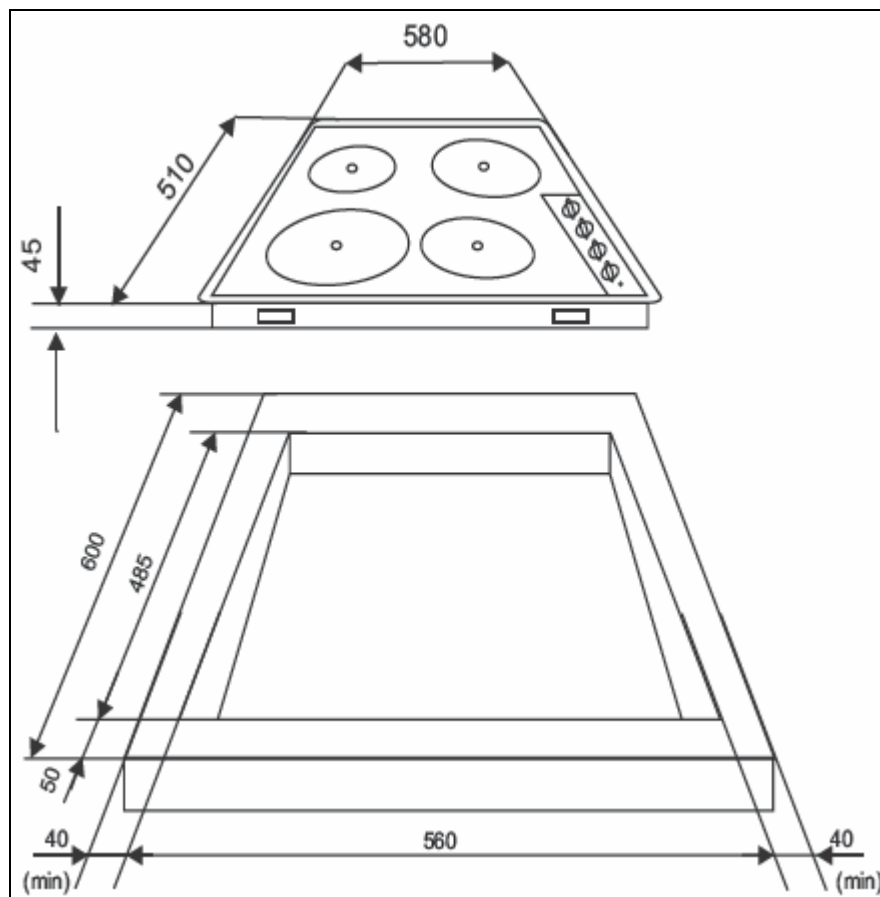 

**IMPORTANT:** The benchtop and surrounding cabinet(s) must be able to withstand a minimum temperature rise of 100°C above the ambient temperature of the room it is located in, during period of use.

This appliance is to be built into a kitchen unit (depending on size) or 600mm worktop, providing the following minimum distances are allowed:

 
- 600mm (minimum) between the hob surface and the underside of any horizontal surface above it.
- 50mm clearance around the appliance and between the appliance surface and any combustible materials.

**CAUTION:** The surface temperature of the top and bottom of the appliance exceeds 95°C. To avoid a hazard, access to the bottom of the appliance from underneath the benchtop must be restricted

**IMPORTANT:** There must be a gap of at least 35mm between the bottom of the appliance in situ and any surface directly below it.

Cut a hole in the benchtop that corresponds with the dimension shown on above drawings and carefully turn the cooktop upside down and place it on a cushioned mat and apply the sealing strip provided around the edge of the appliance. The protective covering must be removed from both sides. Do not leave a gap in the sealing agent or overlap the thickness.

**IMPORTANT:** Do not use a silicon sealant to seal the appliance against the benchtop. This will make it difficult to remove the cooktop from the benchtop in future, particularly if it needs to be serviced.

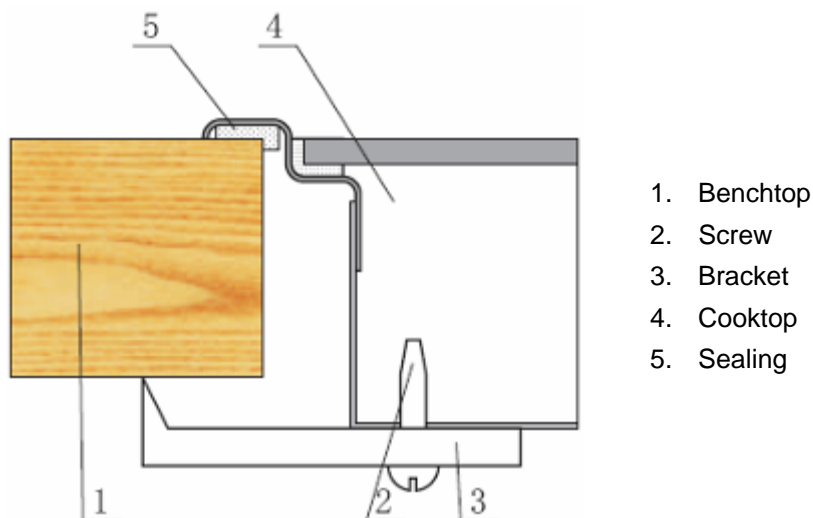


**IMPORTANT:**

- Using a standard screwdriver, tighten the tension clamps evenly starting at the centre and moving diagonally, until the cooktop rim is tight on the worktop.
- Do not over fasten screws to avoid thread stripped.
- Do not use an electric or pneumatic screw driver without an adjustable safety clutch.

**Electrical Connection**

- This appliance must be installed by a qualified electrician or service agent.
- There is no cord & plug supplied with this appliance as it is to be hardwired in.
- It is not connected via a mains socket, it is hardwired in.
- If the mains supply where the appliance is to be installed is different from 220...240V~ make the connection as shown in the enclosed diagrams. (The cable must be able to withstand temperatures of 120°C). Before doing this disconnect the mains supply. A good earth connection necessary and a switch for disconnecting all the phases must be placed accessibly, with a minimum distance of 3 mm between contacts.

 Open terminal board cover at rear panel of appliance and connect as per below diagram for 220V – 240V earthed single phase. Close the cover after complete electrical connection.

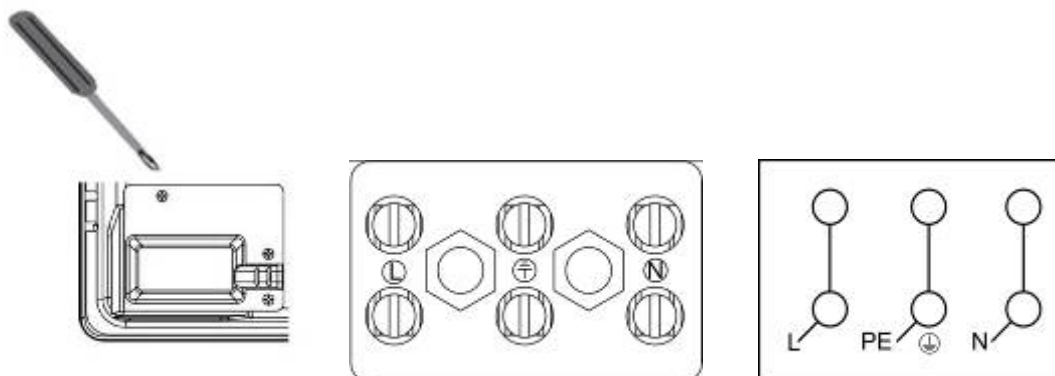

## Start Using Your Appliance

### BCS604X-1, BCS604X-1F

 
Before first use, switch on one hotplate at a time for 5 minutes at the maximum setting. This will help to eliminate any new smell that exists and evaporate any humidity that has formed on the heating elements during transit.

#### Control Knobs

All operations are performed by means of the 4 control knobs that are located on the right hand side of the cooktop.

The control knobs can be turned either clockwise or anti-clockwise to select a heating level. The numbers around the outside of each control knob indicates the power level that you have set the hotplate to.

A marking to the bottom of each control knob, indicates which hotplate it controls.

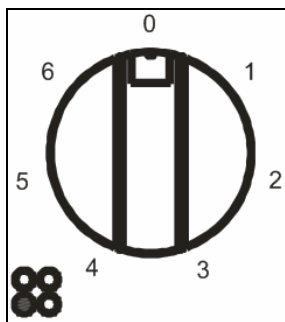

Turn the control knob of the hotplate that you wish to cook on, clockwise or anti-clockwise until it reaches the power level that you desire.

Each hotplate can be adjusted between 1 and 6. 1 being the lowest temperature setting and 6 being the highest temperature setting.

When you have finished cooking, make sure that you turn the control knob anti-clockwise to the 0 position.

#### Cooktop Guidelines

The first few times the cooktop is used, it may give off an acrid, burning smell. This smell will disappear completely with repeated use.

The hotplates are fitted with cooking areas of different diameter and power. The positions where the heat will radiate from are clearly marked on the cooktop. The saucepans must be positioned exactly on these hotplates for efficient heating to occur. Pans should have the same diameter as the hotplate that they are being used on.



You should not use saucepans with rough bottoms, as this can scratch the solid plates.

Before use, make sure that the bottoms of the saucepans are clean and dry.

 
Cover pans with a lid to permit cooking at a lower heat.

Food or liquid that has a high sugar content may damage the cooktop if it comes into contact with the hotplates. Any spillages should be wiped up immediately, however, this may not prevent the hotplates from becoming damaged.

Large pots **MUST NOT** be placed over two or more hotplates as damage will more than likely occur.

Do not leave pans unattended on a hotplate.

Never heat an empty pan.

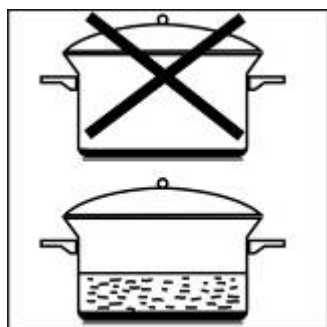

Switch off the heating element before removing the pan. Once switched off, the hotplates will remain warm for a while.

Avoid using oversized pans that may radiate excessive heat and cause damage to surrounding surfaces.

**WARNING: Do not use the hotplate if the surface becomes broken or cracked.**



## Maintenance

### Caution:

Before maintenance or cleaning is carried out, the range hood should be disconnected from the main power supply. Ensure that the range hood is switched off at the wall socket and the plug removed.

### Cleaning Your Cooktop

- Allow the cooktop to cool before cleaning.
- The hotplates should be cleaned after every use to avoid build up of food.
- If a major spillage occurs, wipe clean as soon as possible with a damp cloth.
- Do not immerse in water.
- DO NOT use spray on or other cleaners as they may cause electrical damage. DO NOT use sharp utensils to clean.
- Abrasive cleaners or sharp objects will damage the cooktop surface. You should clean it using water and a little washing up liquid.
- Although it is easier to clean some deposits whilst the hotplates are still warm, you should take care not to burn yourself.

### After Each Use

- Wipe the appliance over with a damp cloth and a little washing up liquid.
- Dry the appliance by rubbing the surface with a clean cloth.

### Stainless Steel Surface

The stainless steel surface should be cleaned with only a damp cloth or with a purpose made product such as Steel Power from Hillmark or a few drops of olive oil on a damp cloth.

### Hotplates

- Weekly cleaning of frequently used hotplates is recommended to maintain their surface finish.
- Use a small amount of concentrated household detergent and a nylon scourer to remove all baked on grime. Wipe off with a damp cloth and dry with about 10 seconds of high temperature heat.
- Apply a hotplate protector to the cleaned hotplates such as Solid Hotplate Protector from Hillmark or lightly oil with olive oil while plate is still warm.
- The chrome element rings around the hotplates will change colour over time due to the effect of the heat on the metal. The colour changes are dependent on the temperature levels and is common to all electric cooktops.

## WARRANTY

- 1.1 In this warranty:
- 1.1.1 Australian Consumer Law means the law as set out in Schedule 2 of the Competition and Consumer Act 2010;
  - 1.1.2 **Company** means GSM Sales Pty Ltd ACN 007 682 475 of 101 Port Wakefield Road Cavan SA 5094. Telephone 08 8139 7399. Email [admin@gsm-sales.com.au](mailto:admin@gsm-sales.com.au);
  - 1.1.3 **Consumer** means a “consumer” as that term is defined in Section 3 of the Australian Consumer Law as the original purchaser of a Bellini product;
  - 1.1.4 **Consumer Guarantees** means the guarantees under the Australian Consumer Law;
  - 1.1.5 **You** means the Consumer.
- 1.2 Nothing in this warranty affects any person’s rights under the Australian Consumer Law. The benefits to any Consumer under this warranty are in addition to the rights and remedies available under any Consumer Guarantees.
- 1.3 Subject to the other clauses of this warranty, the Company warrants to the Consumer that the Bellini product will be free of manufacturing defects and will perform to the Company’s specifications.
- 1.4 The benefit of this warranty extends only to the Consumer as original purchaser of a Bellini product which is installed in a residential property.
- 1.5 This warranty commences on the date of purchase of the Bellini product by the Consumer and continues for the benefit only of the Consumer until the expiry of two (2) years (**Warranty Period**).
- 1.6 If within the Warranty Period a manufacturing defect is discovered in the Bellini product or it fails to perform to the Company’s specifications as a result of some defect in materials, components or workmanship (Defect) then the Company will, at its option, repair the Bellini product or supply a replacement Bellini product free of charge. A replacement Bellini product may differ from the original product purchased by the Consumer.
- 1.7 This warranty will not apply to any Bellini product:
- 1.7.1 Installed by any person other than a qualified tradesperson; or
  - 1.7.2 Subjected to misuse, neglect, negligence or accidental damage; or
  - 1.7.3 Operated in any way contrary to any operating or maintenance instructions; or
  - 1.7.4 Improperly handled, installed or maintained; or
  - 1.7.5 Altered or modified prior to or after installation; or
  - 1.7.6 Damaged directly or indirectly by power surges, electrical storm damage or connection to incorrect power supply

The Australian Consumer Law requires the inclusion of the following statement  
with this warranty:

***Our goods come with guaranteed that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.***

**IN ORDER TO MAKE A CLAIM UNDER THIS WARRANTY THE  
CONSUMER MUST CALL 1300 373 199 (AUSTRALIA) OR 0508 123 108  
(NEW ZEALAND) TO CONNECT TO THE NEAREST AUTHORISED CENTRE**

- 1.8 You must provide proof of your purchase of the Bellini product and the date of purchase in order to obtain the benefit of this warranty.
- 1.9 If you live outside the service area of the Company or one of its service agents, this warranty does not cover the cost of transport of the Bellini product for service nor the service agent's traveling costs to and from your home.
- 1.10 If you are required to transport the Bellini product to the Company or its service agent, you must ensure it is safely disconnected by a qualified tradesman and securely packed and insured. The Company does not accept any responsibility for loss or damage of the Bellini product prior to it being received by the Company or its service agent.
- 1.11 You will be responsible for all costs of returning a Bellini product to the Company and for redelivery of the Bellini product by the Company (whether it is the original or a repaired and/or a replacement Bellini product) and for any other expenses you incur in claiming under this warranty.
- 1.12 The Company or its service agent will examine any Bellini product and if the Company determines that it is defective through no fault of the Owner and is otherwise undamaged, the Company will repair or replace the Bellini product in accordance with this warranty.

#### **DO NOT SEND IN THIS WARRANTY**

Fill out the following details and file with your purchase invoice.

#### **RETAIN & FILE WITH YOUR RECEIPT**

Your Purchase Receipt/Invoice is proof of date of purchase. If you are unable to establish the date of purchase, or if the fault is not covered by this warranty, or if the product is found to be in working order, you will be required to bear all service call charges.

GSM Sales Pty Ltd reserves the right to discontinue items, modify designs and change specifications without incurring obligation.

Whilst every effort is made to ensure that descriptions, specifications and other information in this publication is correct, no warranty is given in respect thereof and the company shall not be liable for any errors therein.

Purchased from:

Co. Name:

Address:

Date of Purchase:

Serial number:

NOTE: Consistent with our continuing product development policy, improvements may have been made which render the contents of this packaging slightly different to that shown.

**FOR WARRANTY SERVICE CALL 1300 373 199 (AUSTRALIA)  
OR 0508 123 108 (NEW ZEALAND) TO CONNECT YOU TO THE NEAREST  
AUTHORISED SERVICE CENTRE**

